


Parts

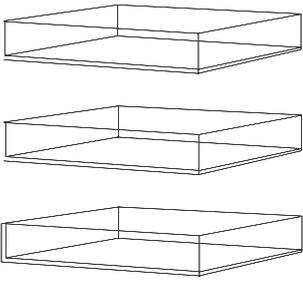


3 Acrylic layers
(top, middle, bottom)



2 Support columns



4 Casters

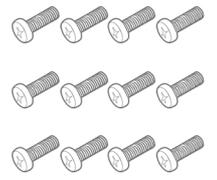

Screws



Step1, Protective Film

Unpeel the protective film from the acrylic panels.




Step2, Casters

Screw a caster onto each bottom corner of the bottom layer.



Step3, Bottom Layer & Columns

Place the bottom acrylic layer down. Attach the 2 support columns to opposite

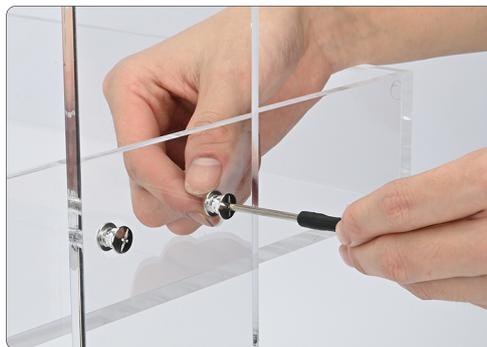

Step4, Middle Layer

lift the middle acrylic layer and slide it onto the support columns. Secure it with screws at the connection points.



Step5, Top Layer

Put the top acrylic layer on the columns in the same way and fasten it with screws.