





L Shaped Desk

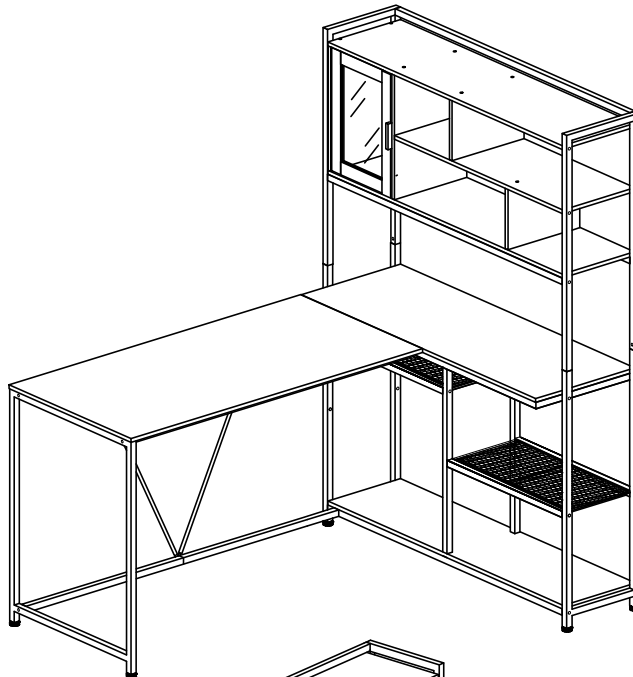


Step 1-23


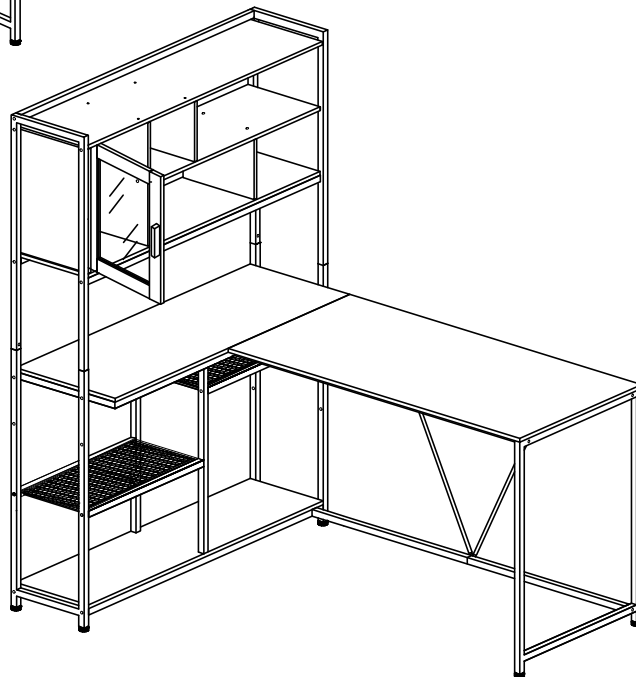

















Step 2-23















GAUTION : When tightening the screws , tighten sequentially .
Do not tighten any screws fully and then towards the next one .
When every part is OK , then tighten al the screws

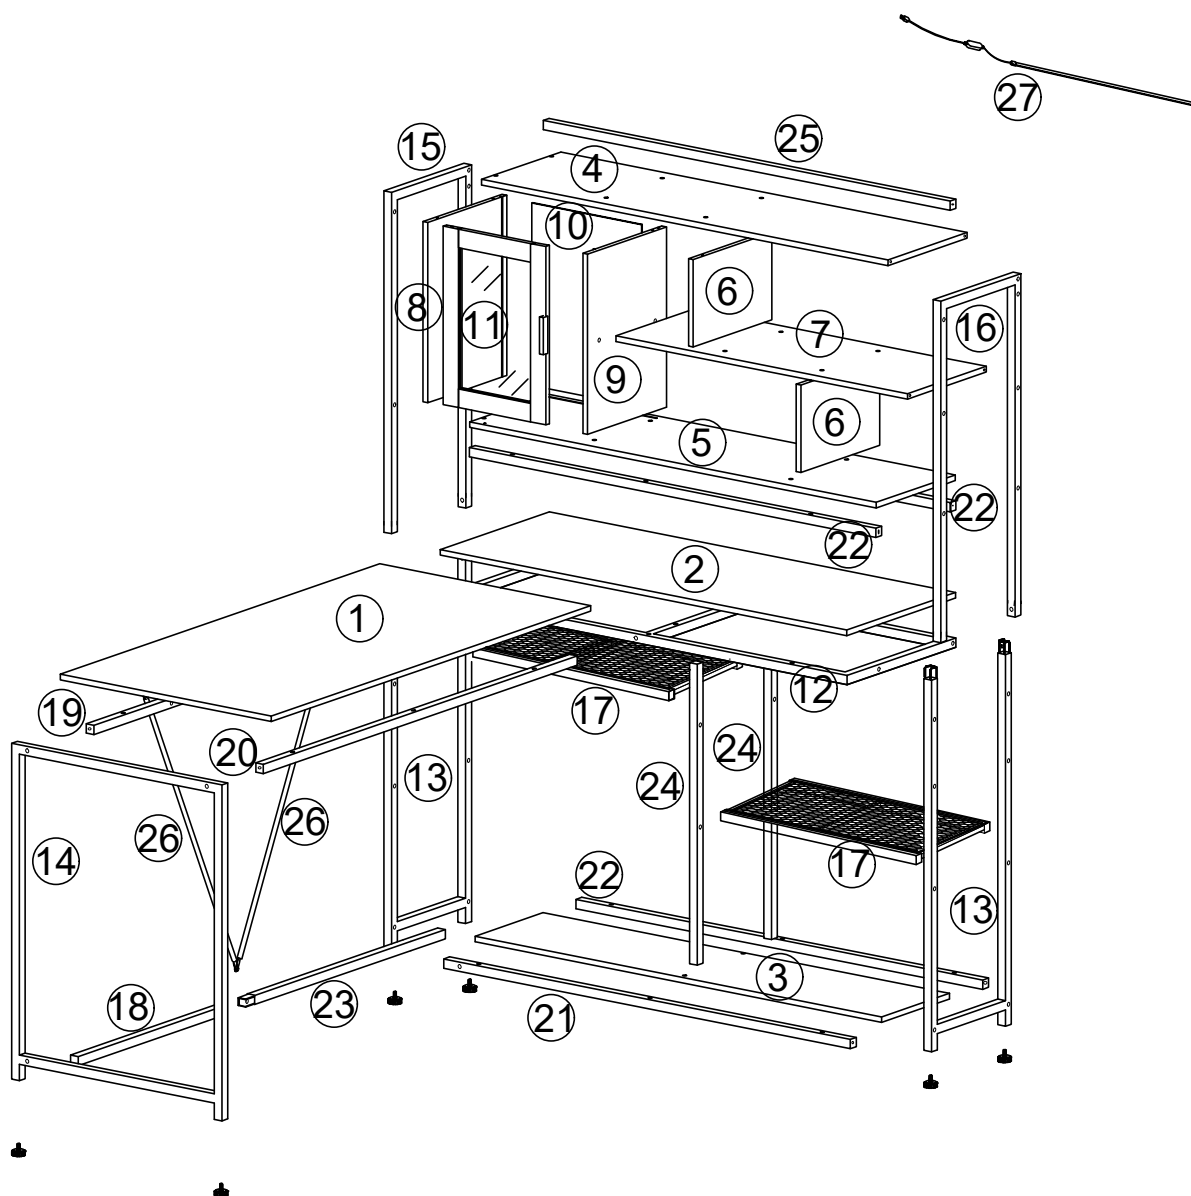


A	x4	B	(28+1)	C	(24+1)	D	x2	E	x5	F	(24+1)
											
M6x50		M6x40		M6x28		M3x14		M6x12		Ø5x40	
G	x2	H	x2	I	x4	J	x1	K1	x1	K2	x1
											
M4x15		M3.5x12		M6		220-96					
M	x6	N	x2	#3 #4  + 10# 12#							
M6 		N 									

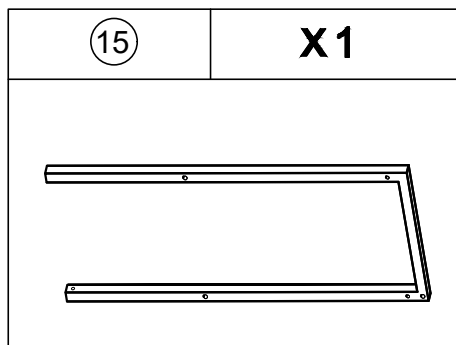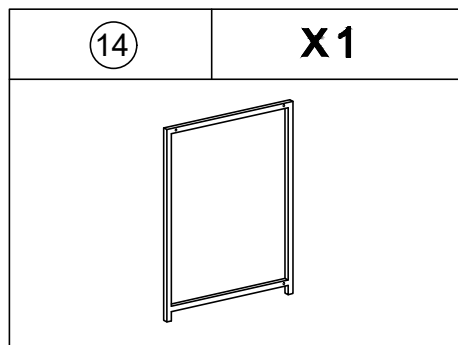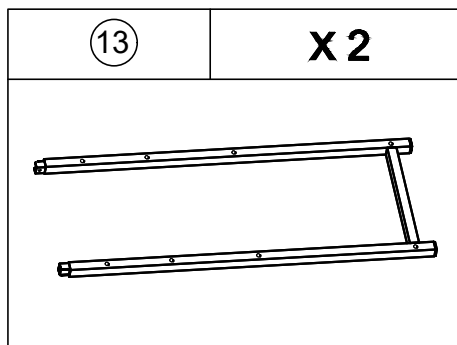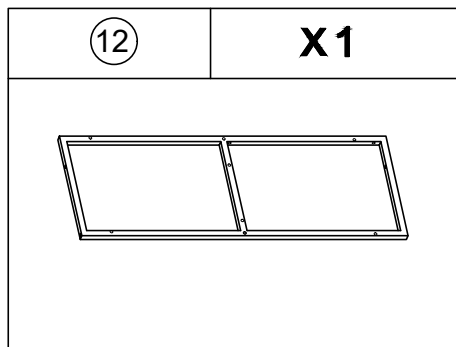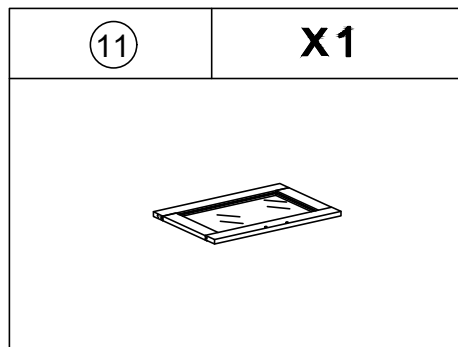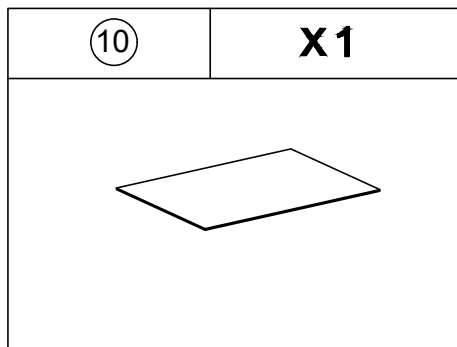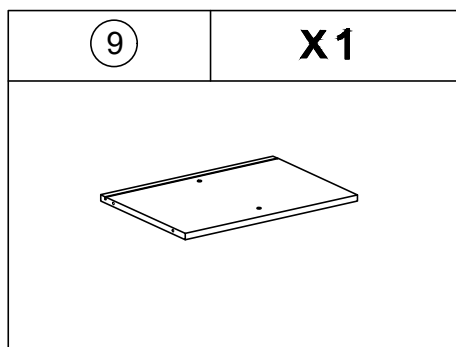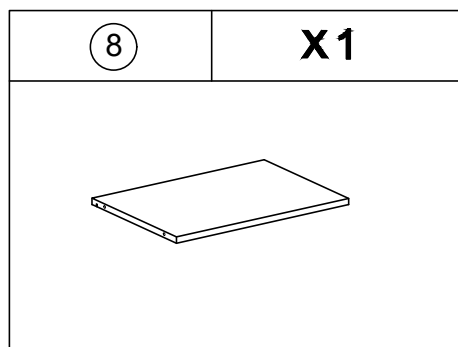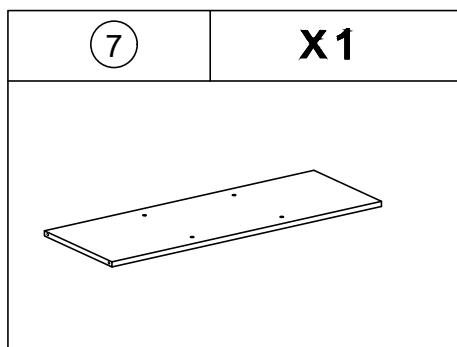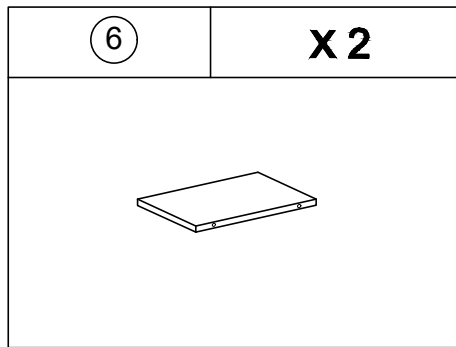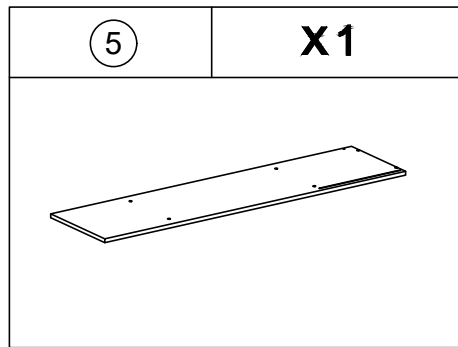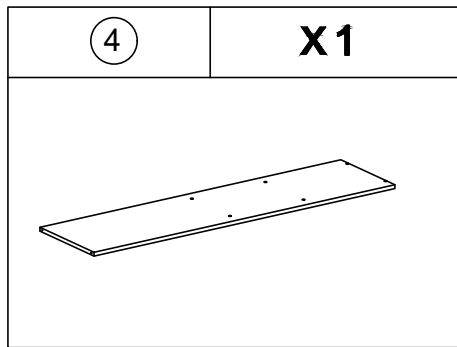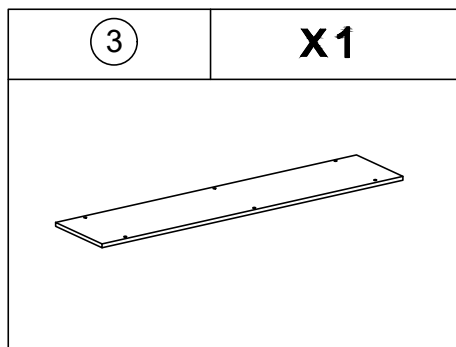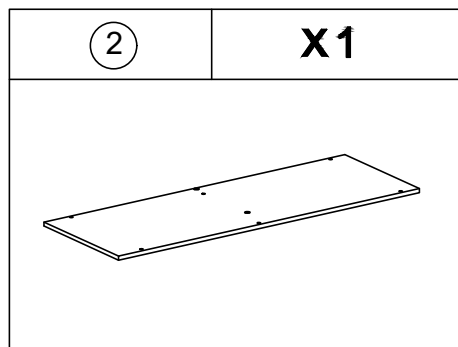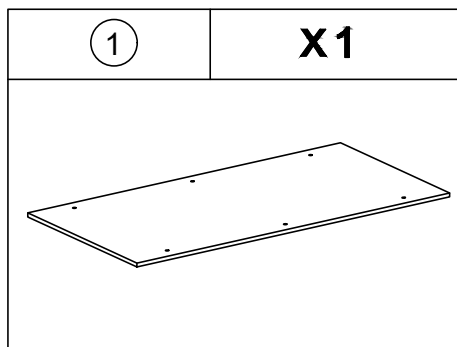

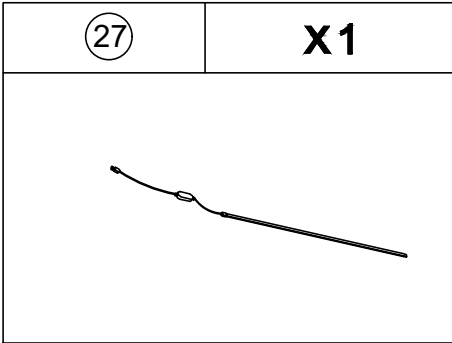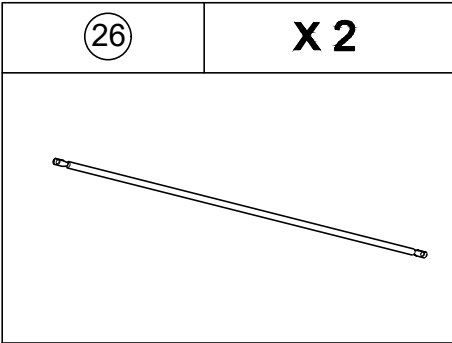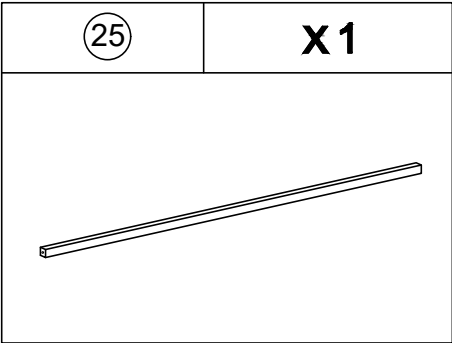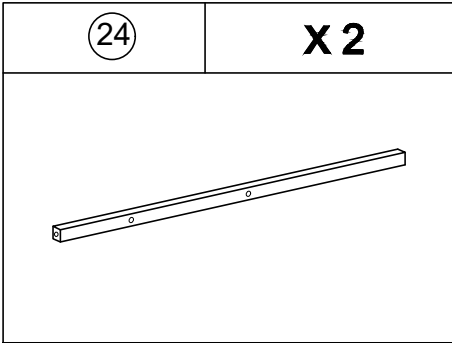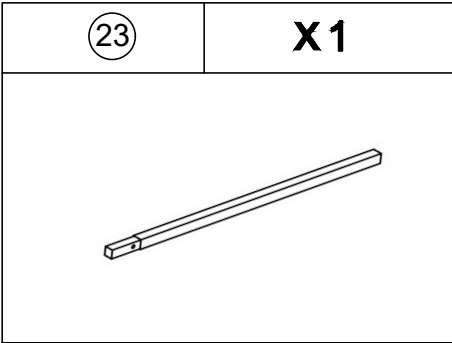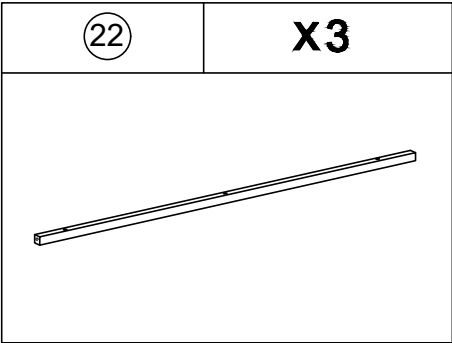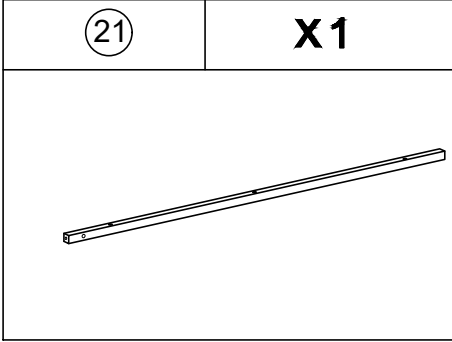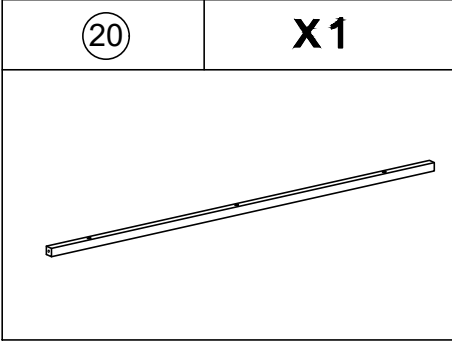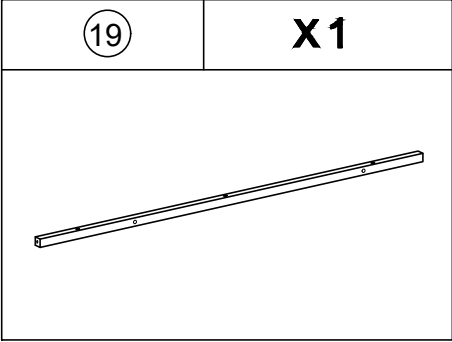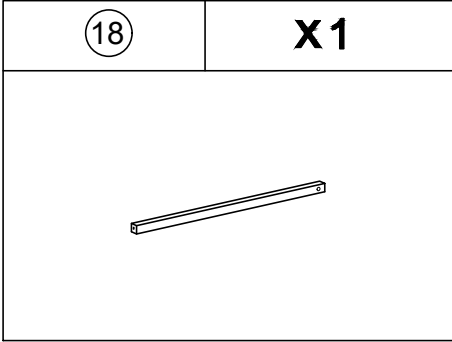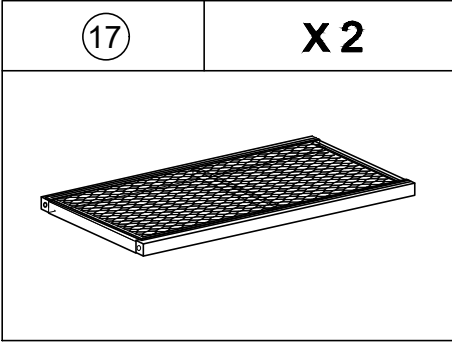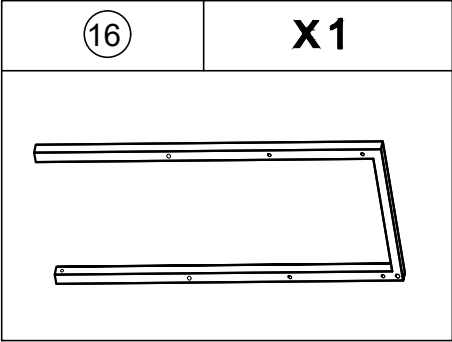


Step 1-1

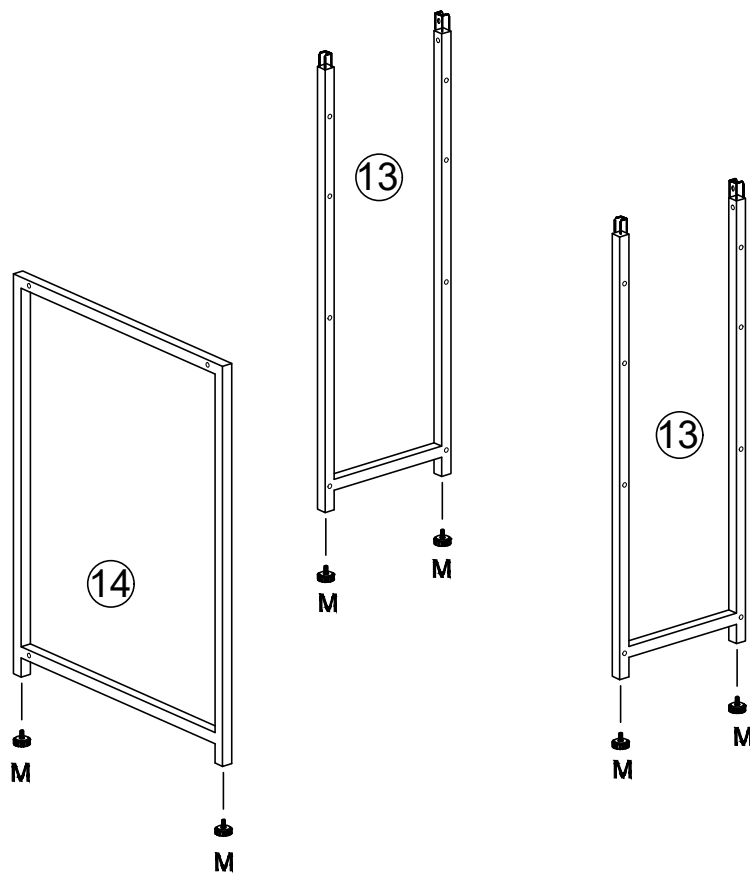

M	x6
	
M6	



Step 1-2

Note:
Hole direction

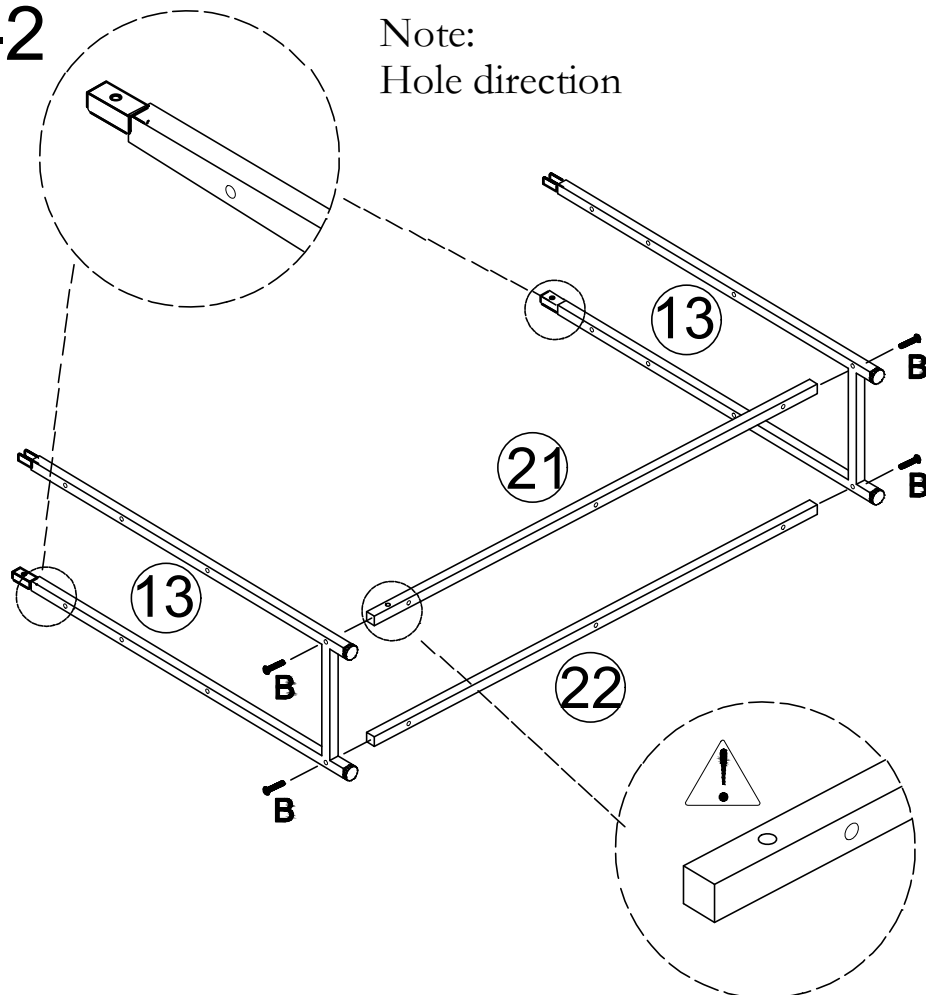


B	x4
	
M6x40	

Step 1-3

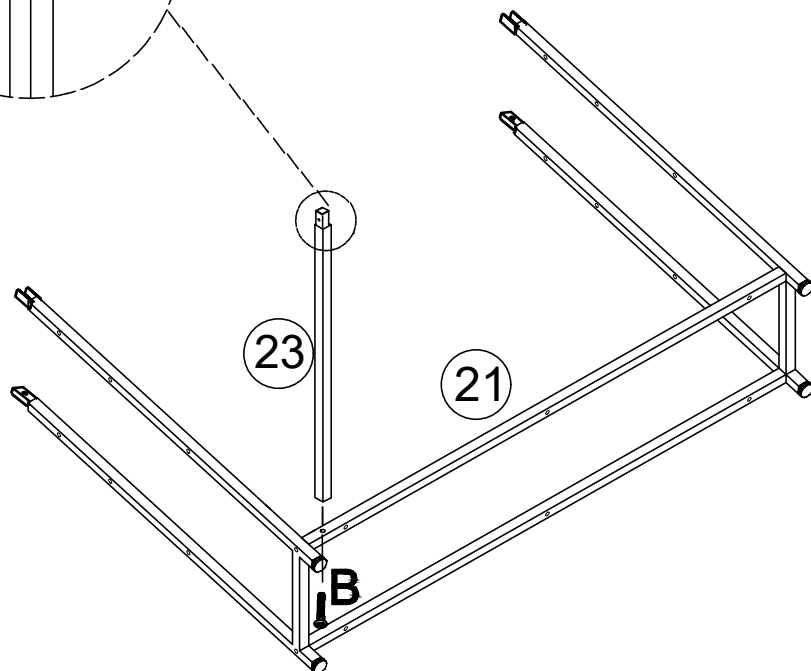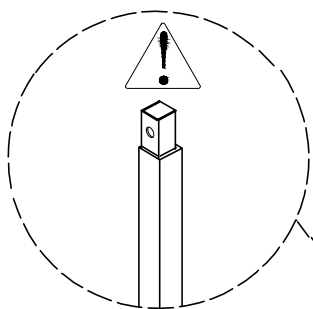


B	x1
	
M6x40	

Step 1-4

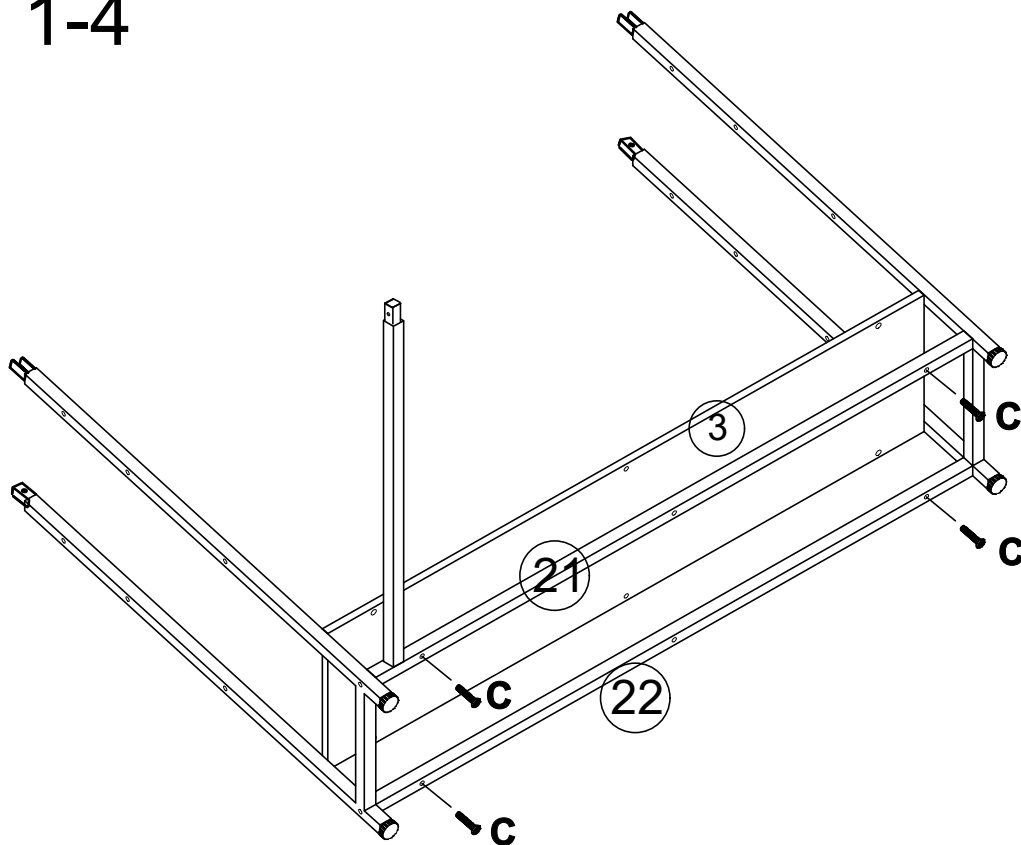

C	x4
	
M6x28	


Step 1-5

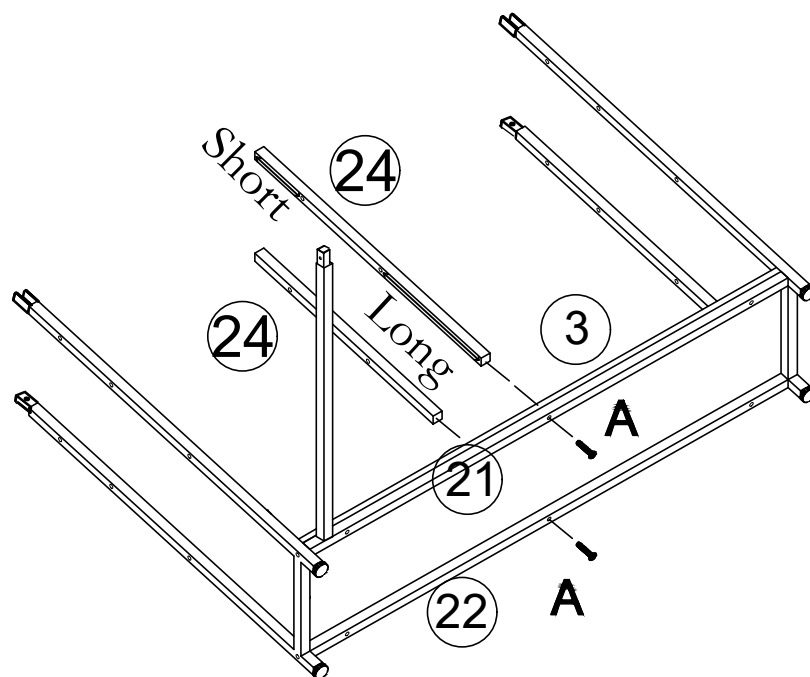

A	x2
	
M6x50	


Step 1-6

The iron mesh can be installed left and right

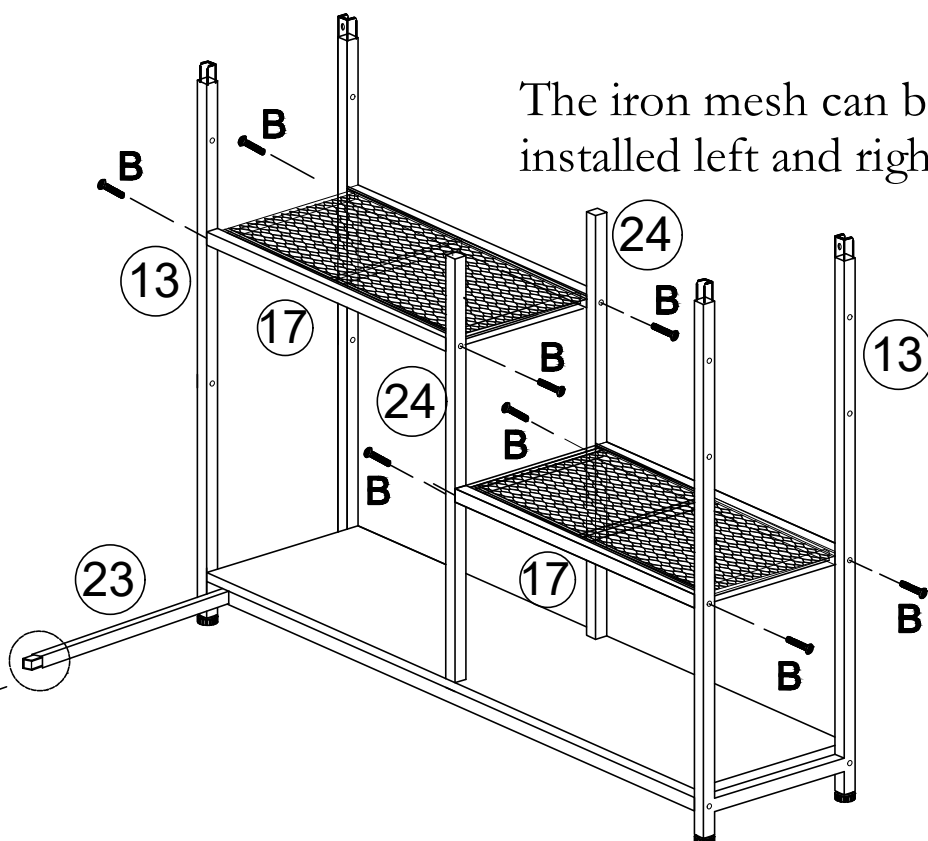


B	x8
	
M6x40	

Step 1-7

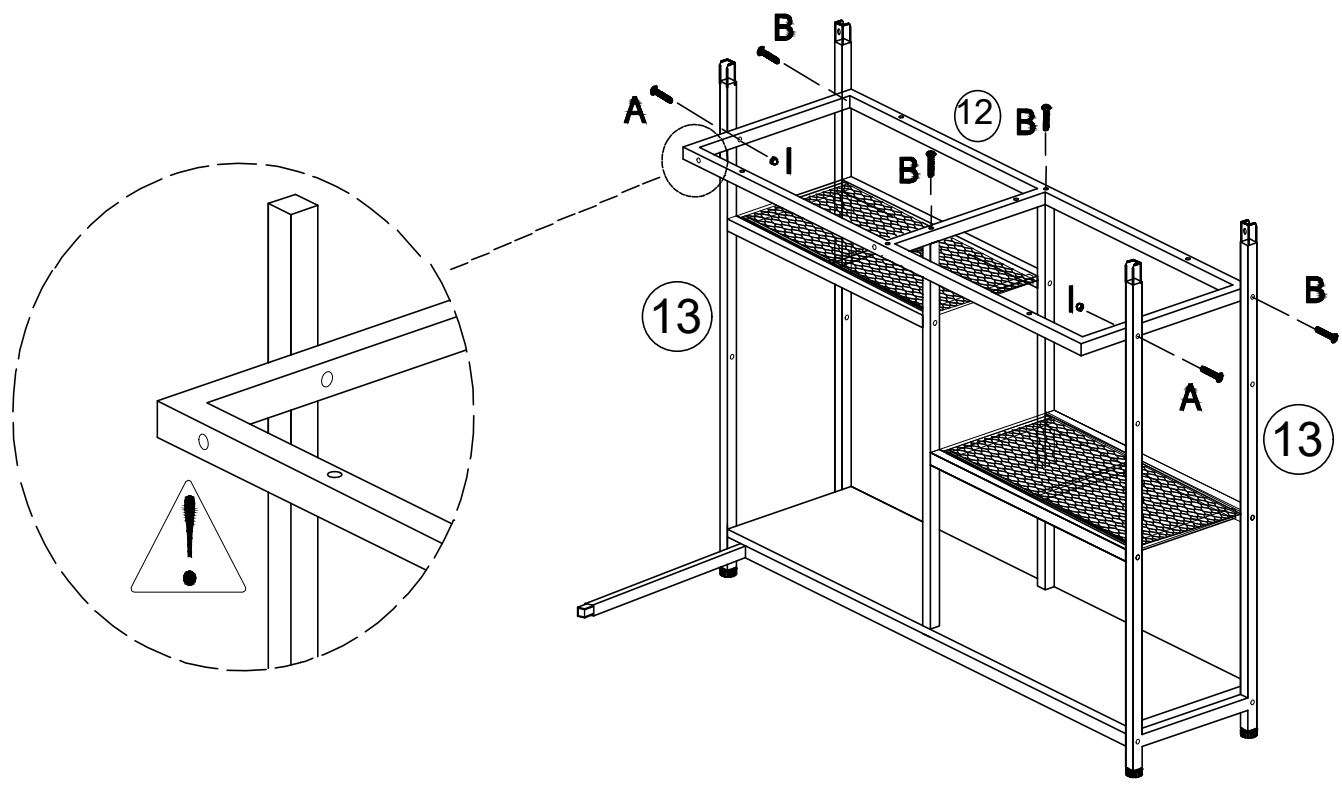


I	x2	B	x4	A	x2
					
M6		M6x40		M6x50	

Step 1-8

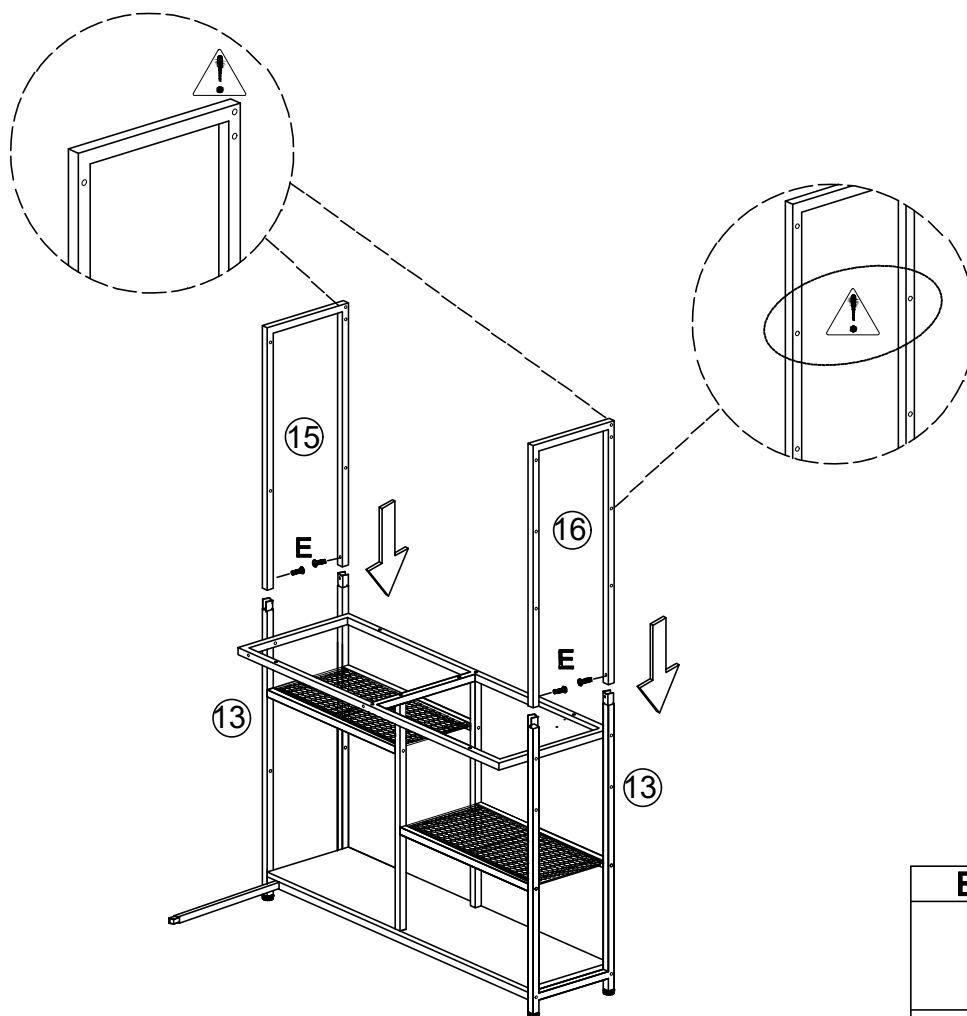


Step 1-9

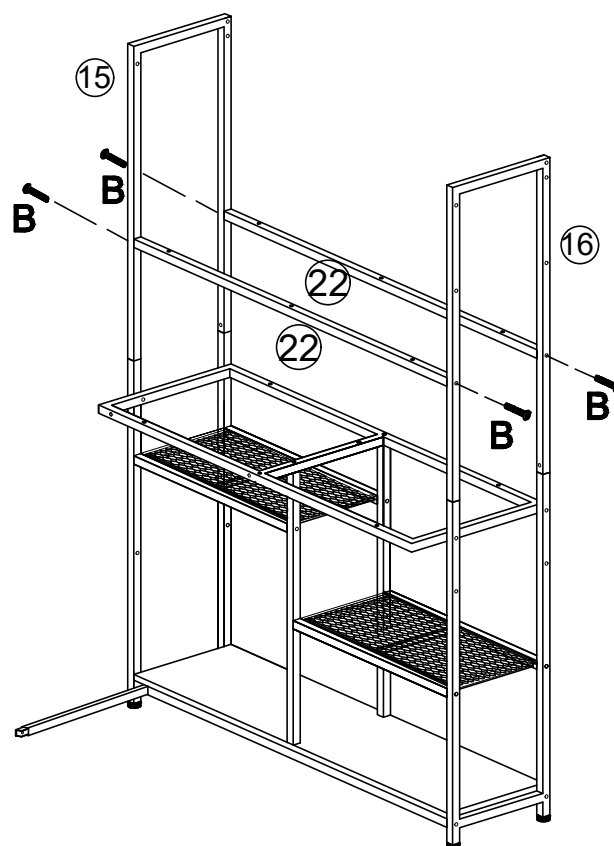


B	x4
	
M6x40	

Step 1-10

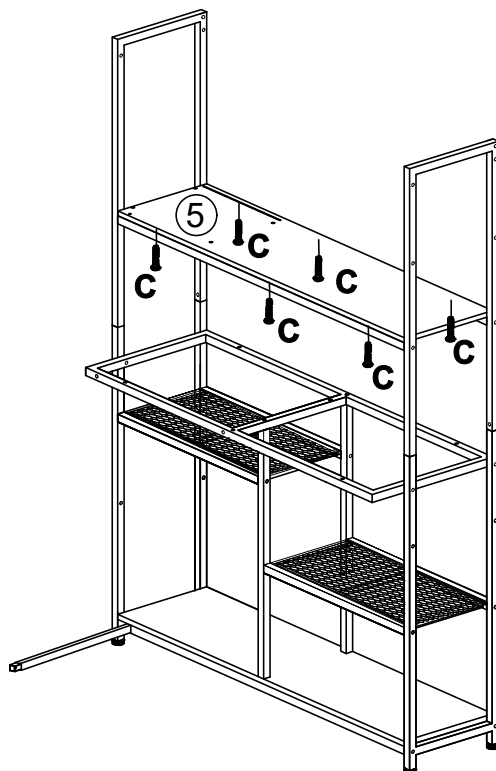


C	x6
	
M6x28	

Step 1-11

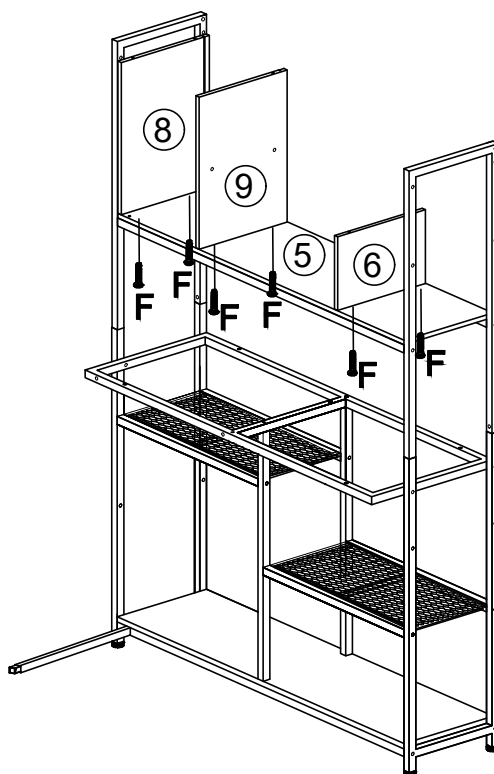


F	x6
	
Ø5x40	

Step 1-12

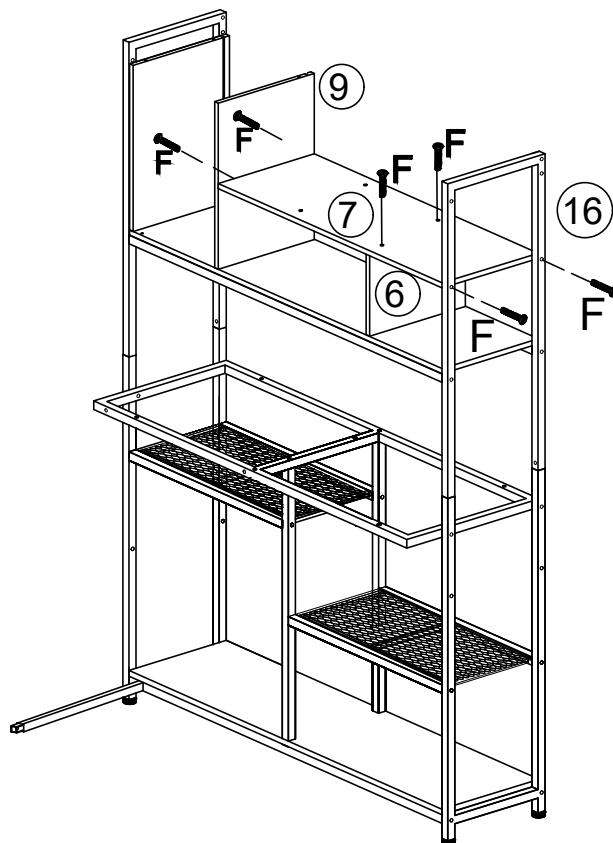


F	x 6
	
Ø5x40	

Step 1-13

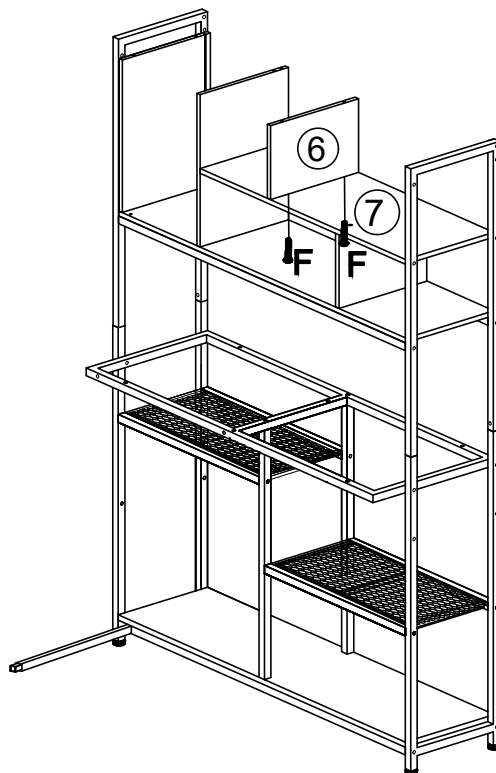


F	x 2
	
Ø5x40	

Step 1-14

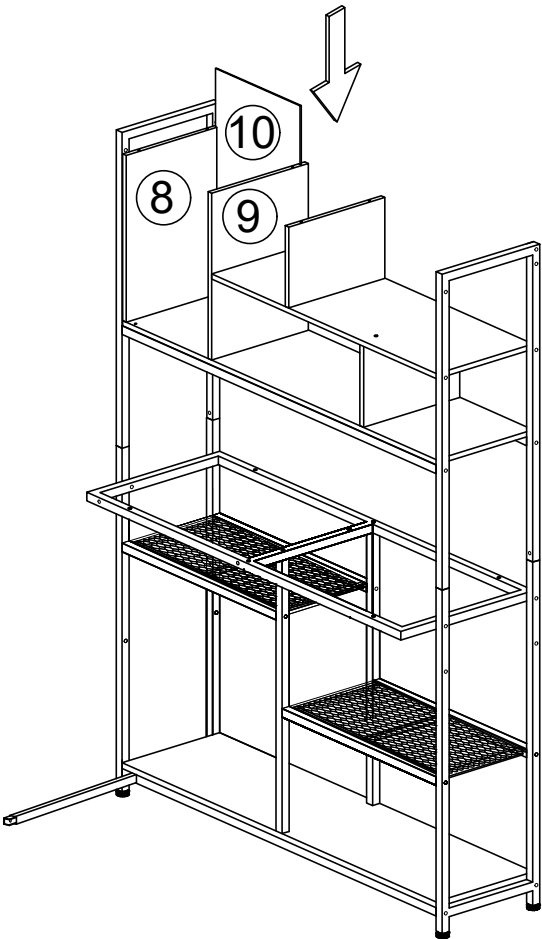


Step 1-15

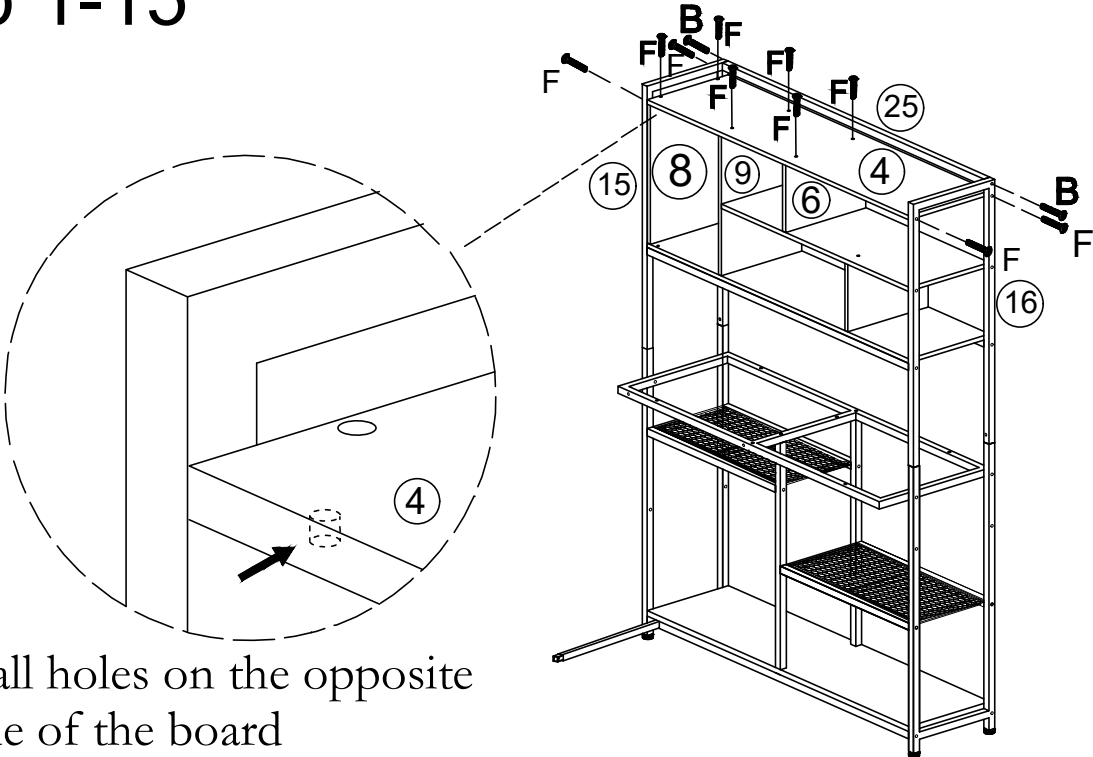

small holes on the opposite side of the board


B	x2	F	x 10
			
M6x40		Ø5x40	

Step 1-16



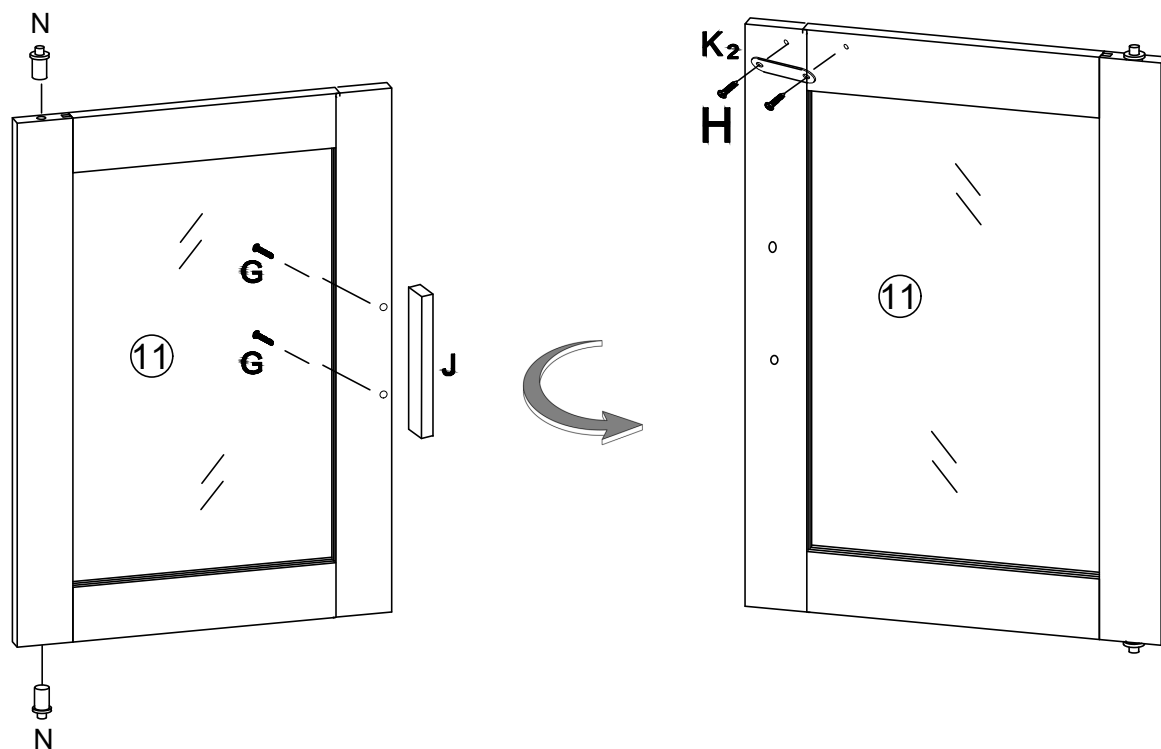


H	x2	K2	x1	N	x2	G	x2	J	x1
									
M3.5X12						M4x15		220-96	

Step 1-17

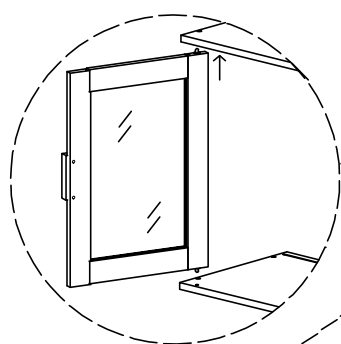


Press and hold the black small accessory at the bottom of the door panel and push it inward to align with the hole

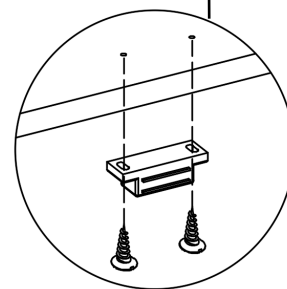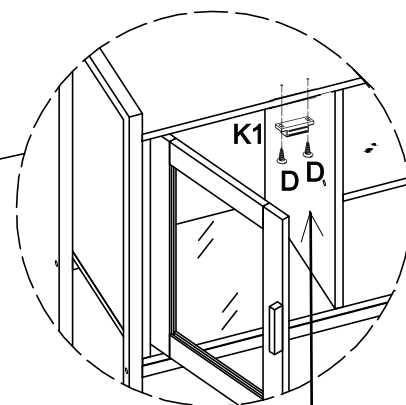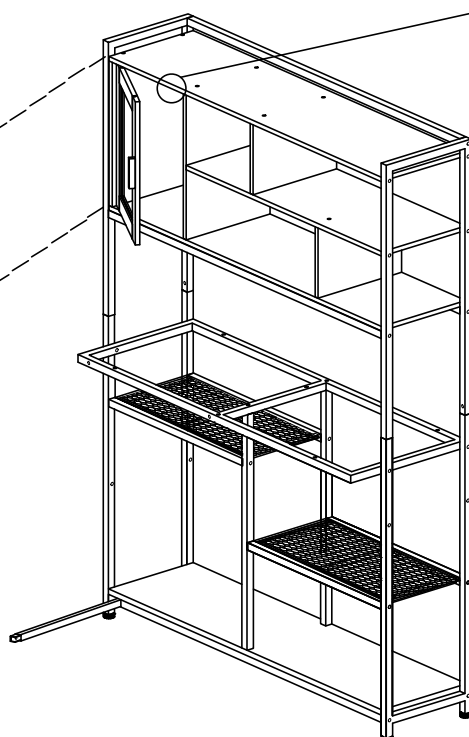


K1	x1	D	x2
			
		M3x14	

Step 1-18

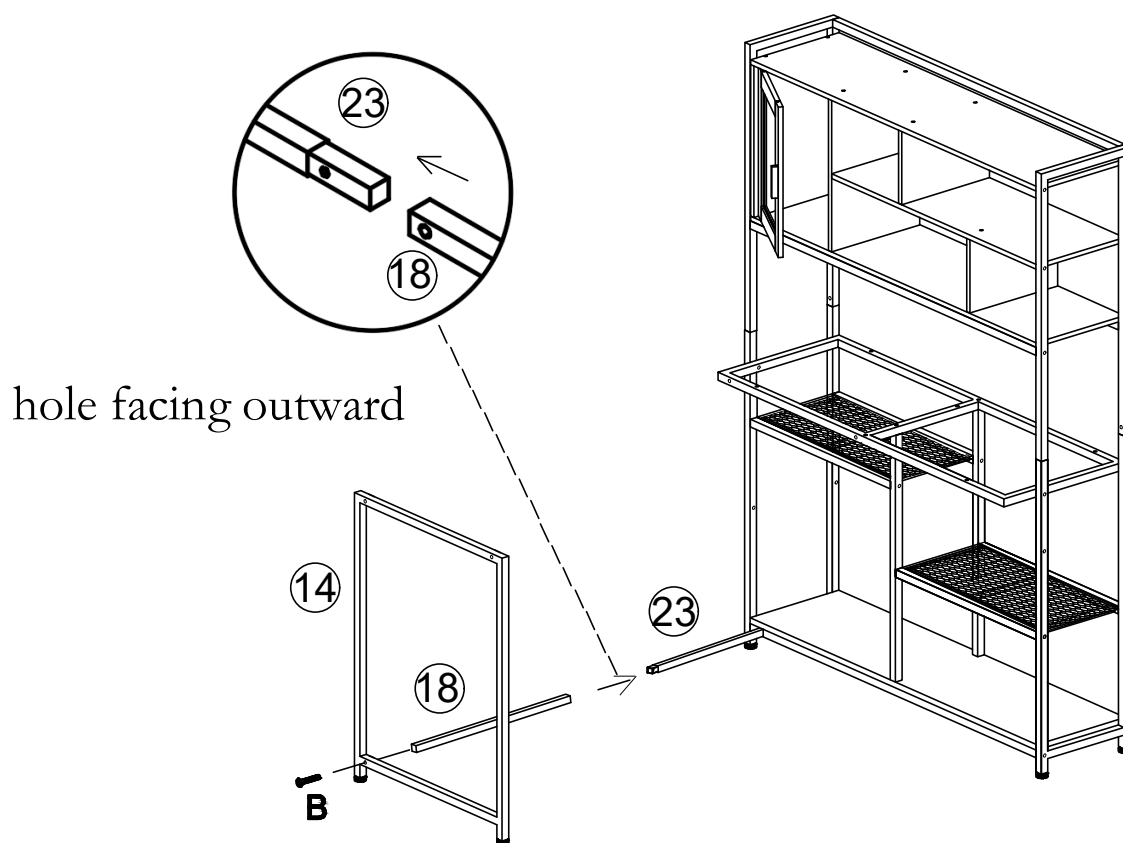


B	x1
	
M6x40	

Step 1-19

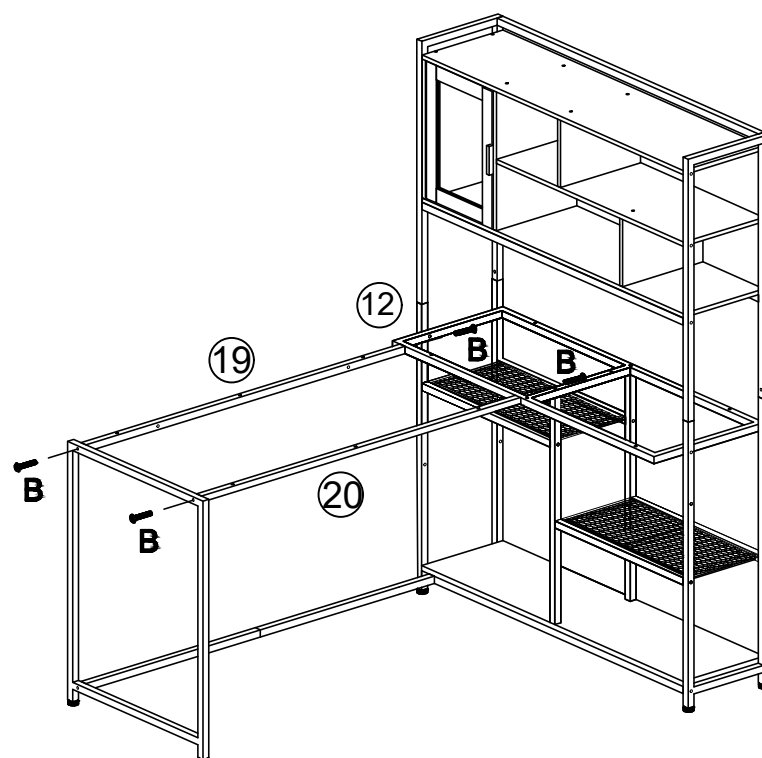


B	x4
	
M6x40	

Step 1-20

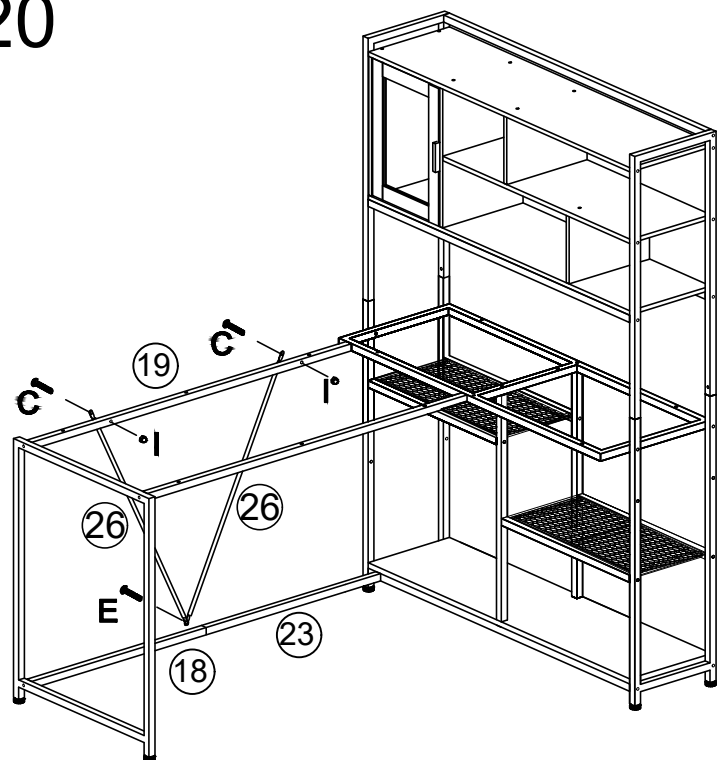

E	x1	I	x2	C	x 2
					
M6x12		M6		M6x28	


Step 1-21

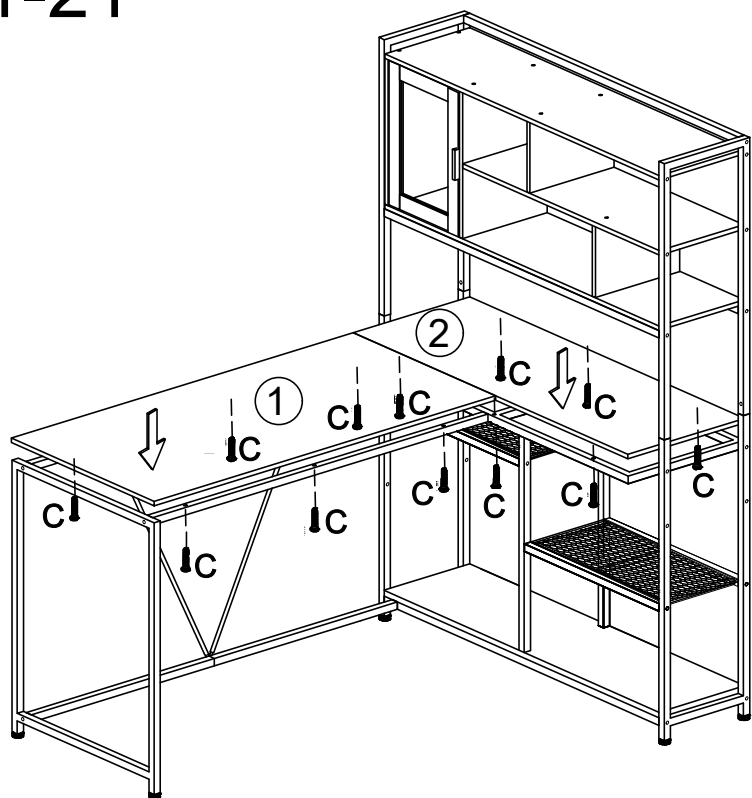


C	x12
	
M6x28	

Step 1-22


Be careful to tear off
the red paper on the
back of the light strip

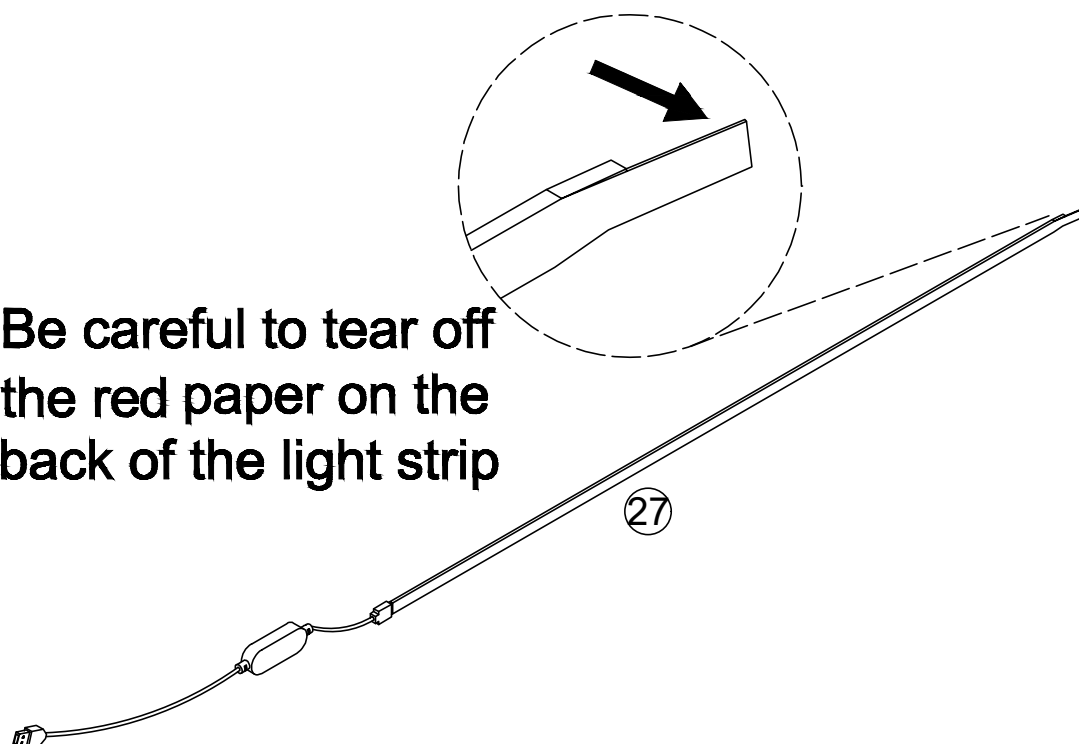

Step 1-23

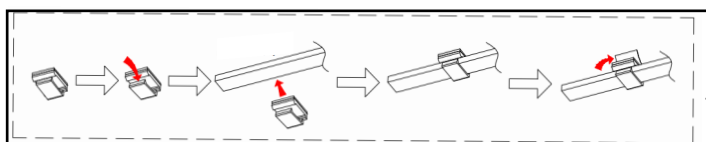


Note that L can be installed or not according to
personal needs. L is used for the stick-off
configuration of the light strip.

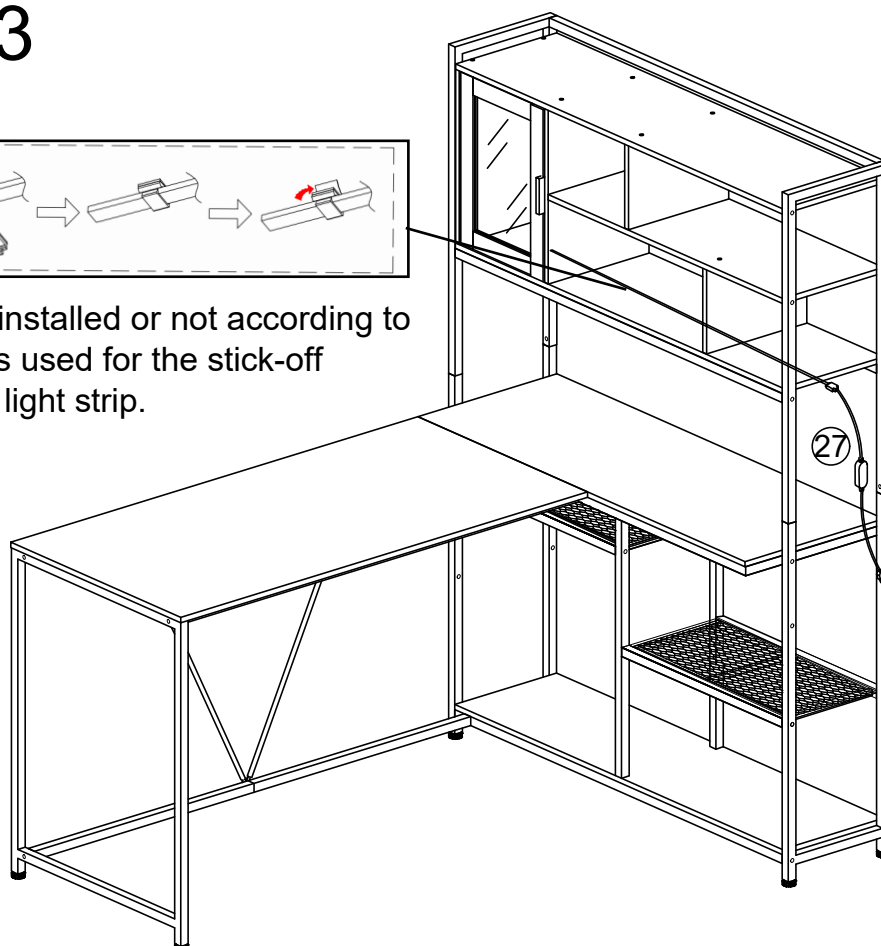


L	x 6
	

Step 2-1

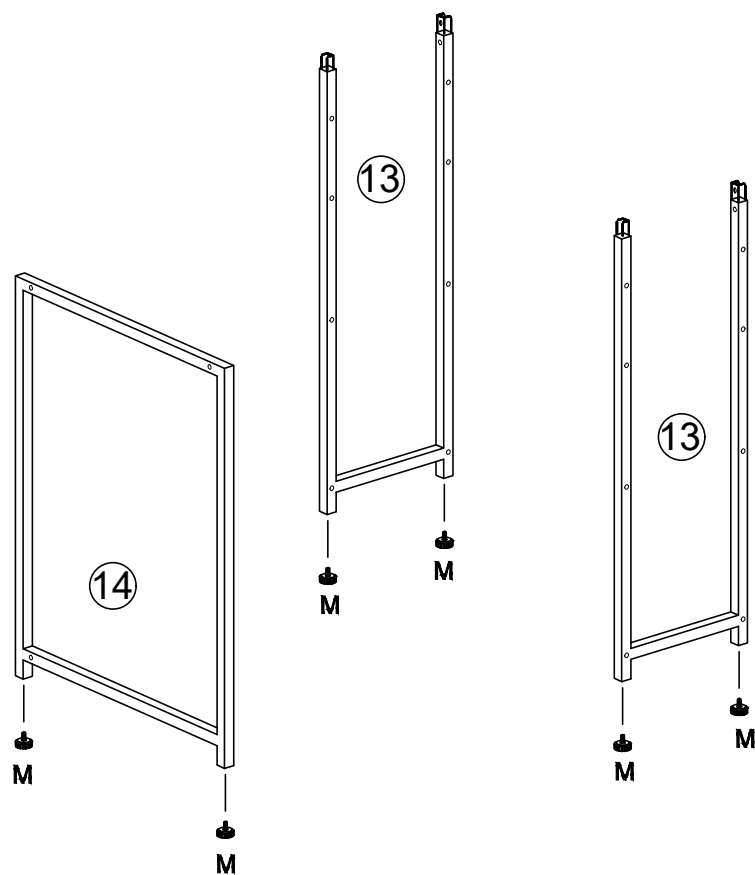

M	x6
M6	


Step 2-2

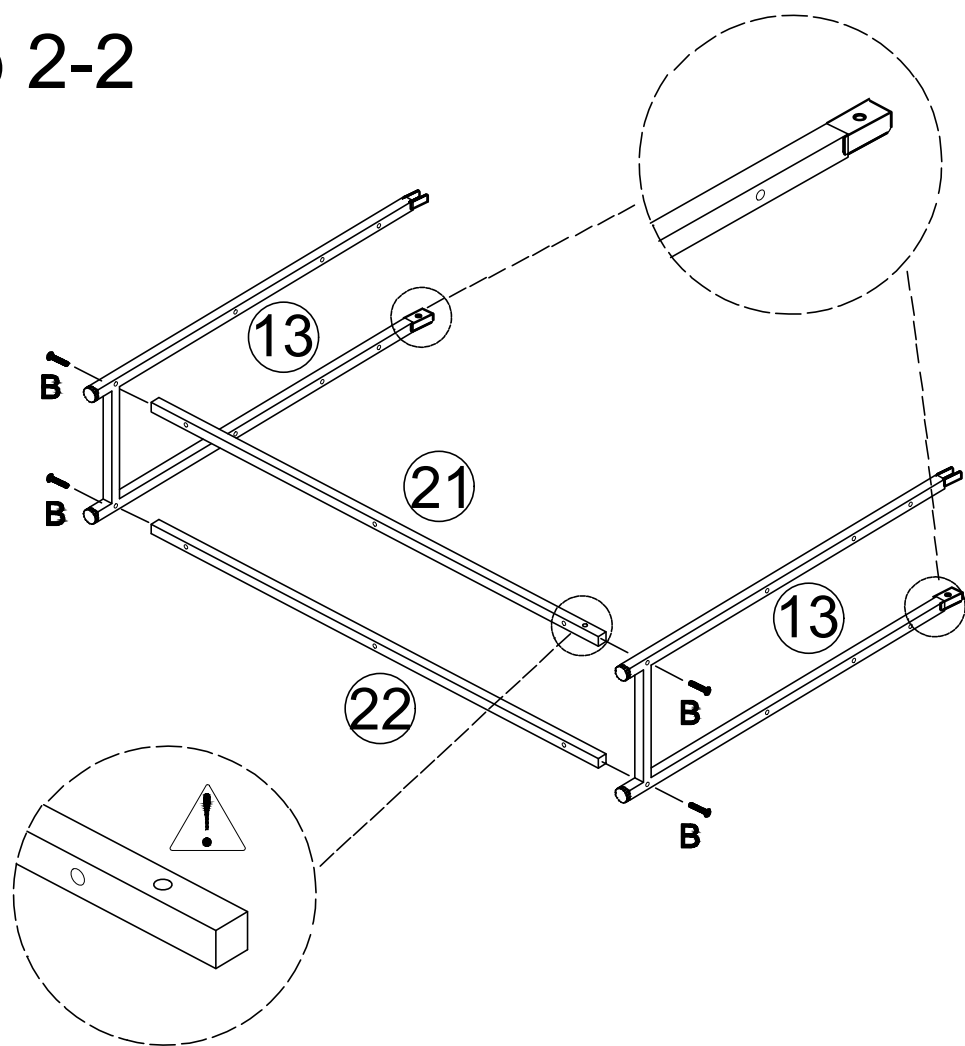

Note:
Hole direction


B	x4
M6x40	

Step 2-3

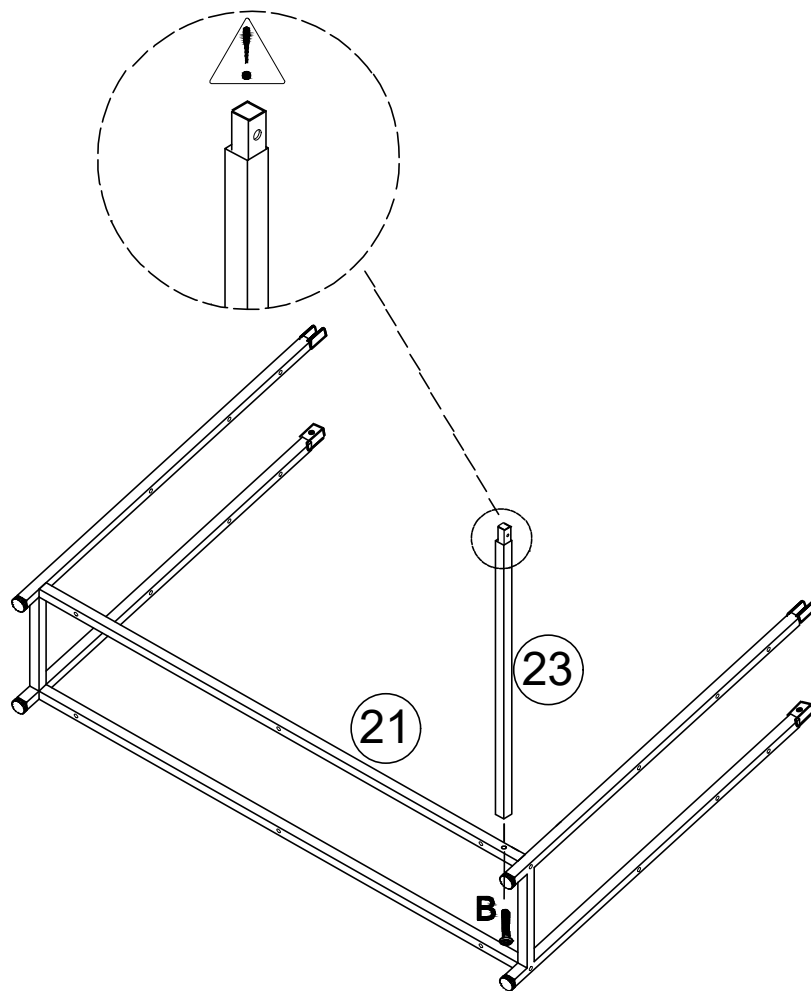


B	x1
	
M6x40	

Step 2-4

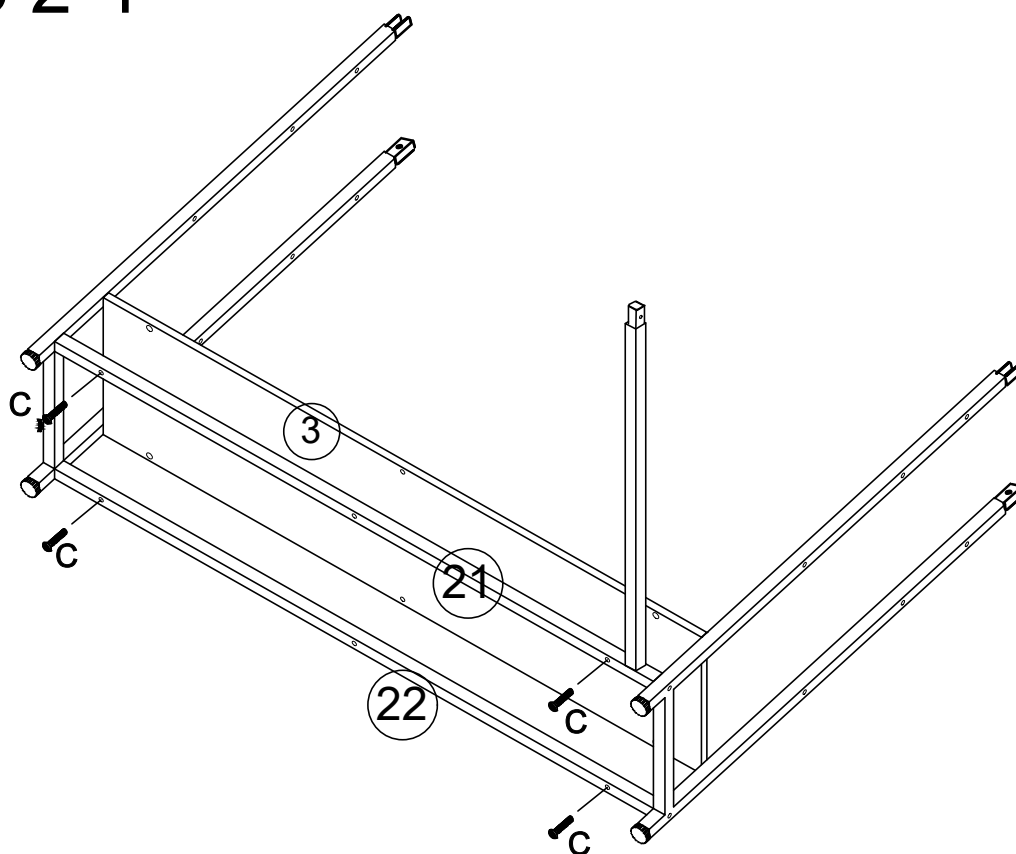


C	x4
	
M6x28	

Step 2-5

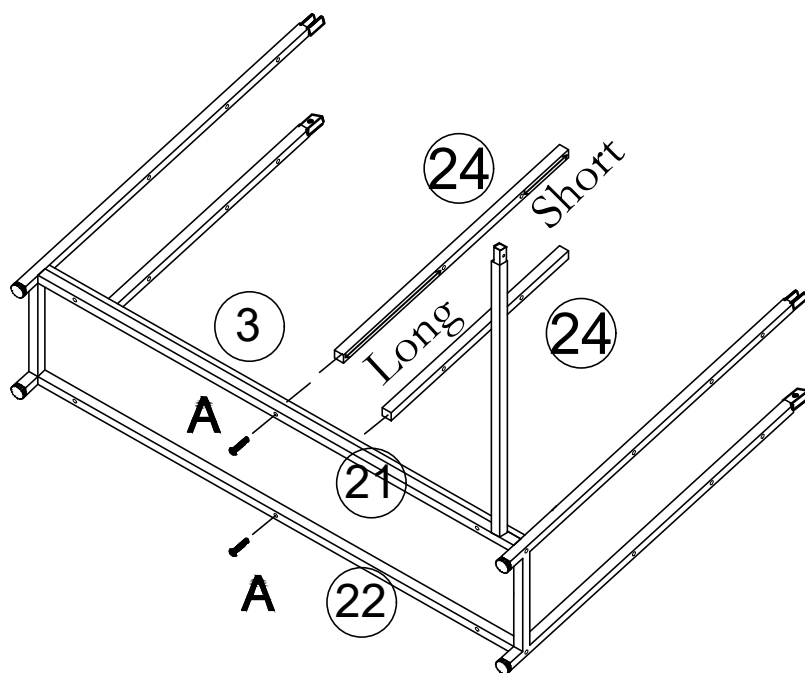


A	x2
	
M6x50	

Step 2-6

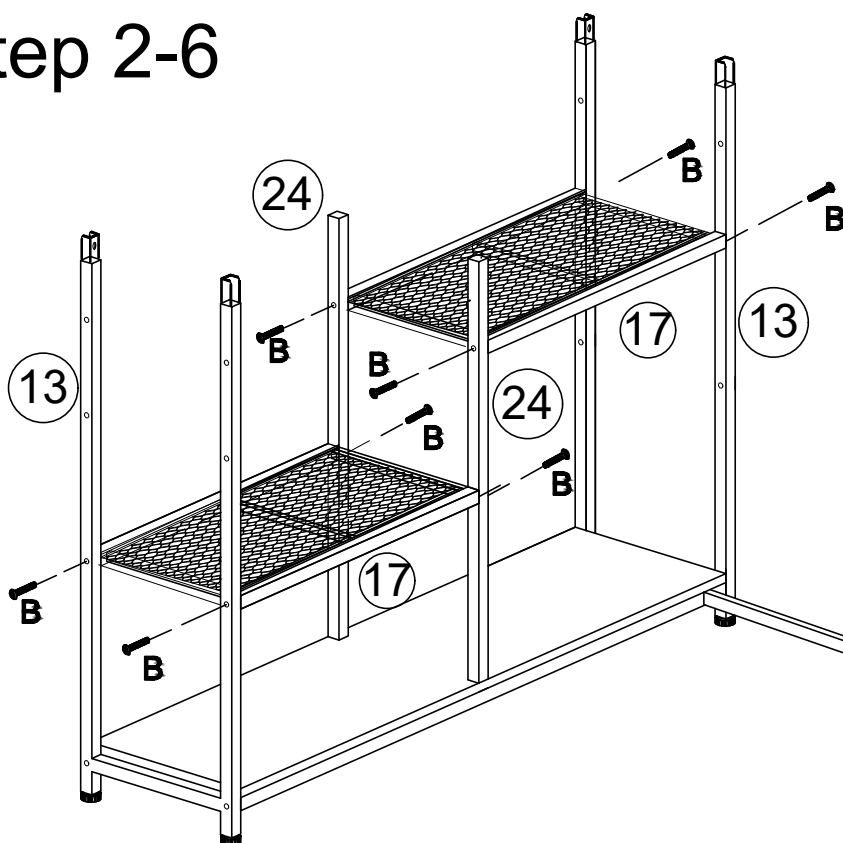


The iron mesh can be installed left and right

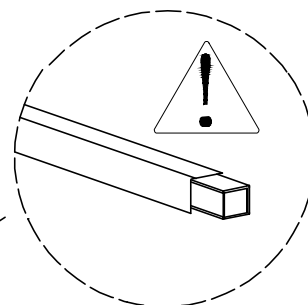


B	x8
	
M6x40	

Step 2-7

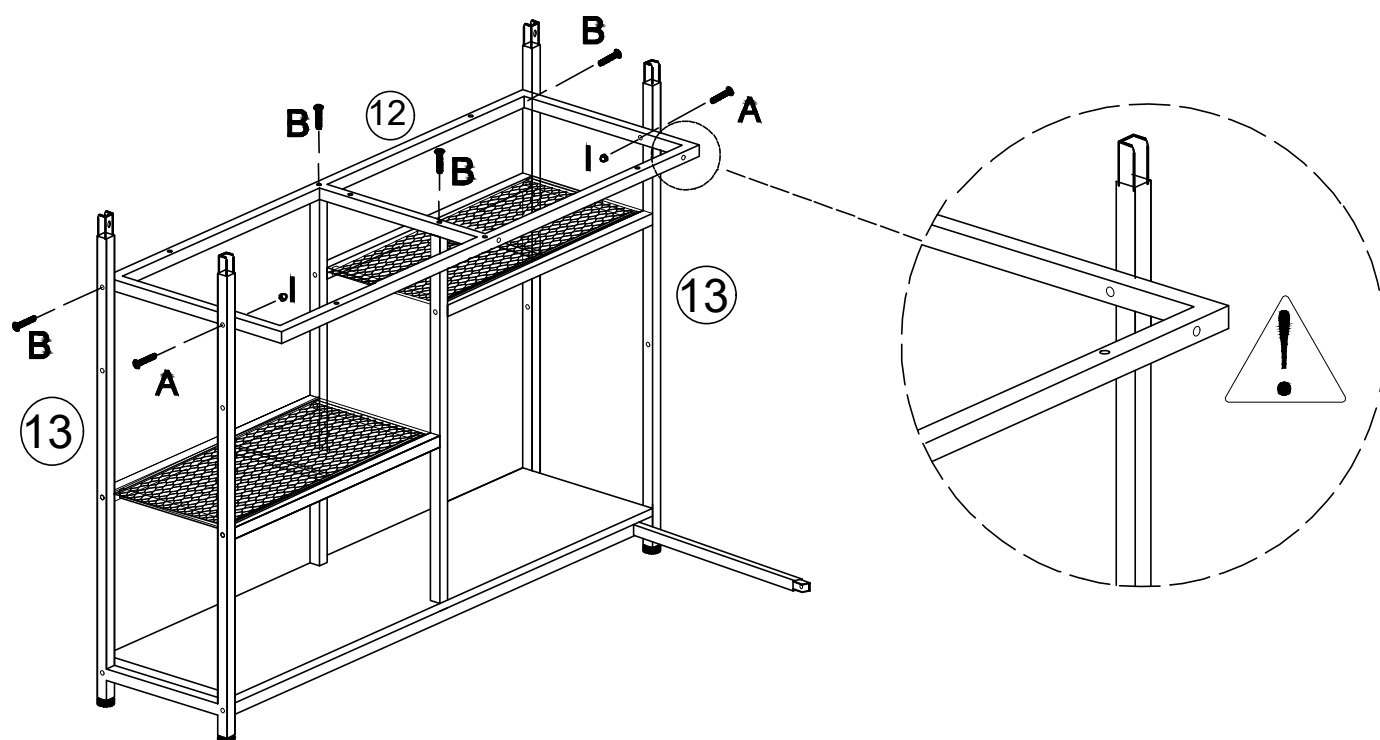


I	x2	B	x4	A	x2
					
		M6x40		M6x50	

Step 2-8

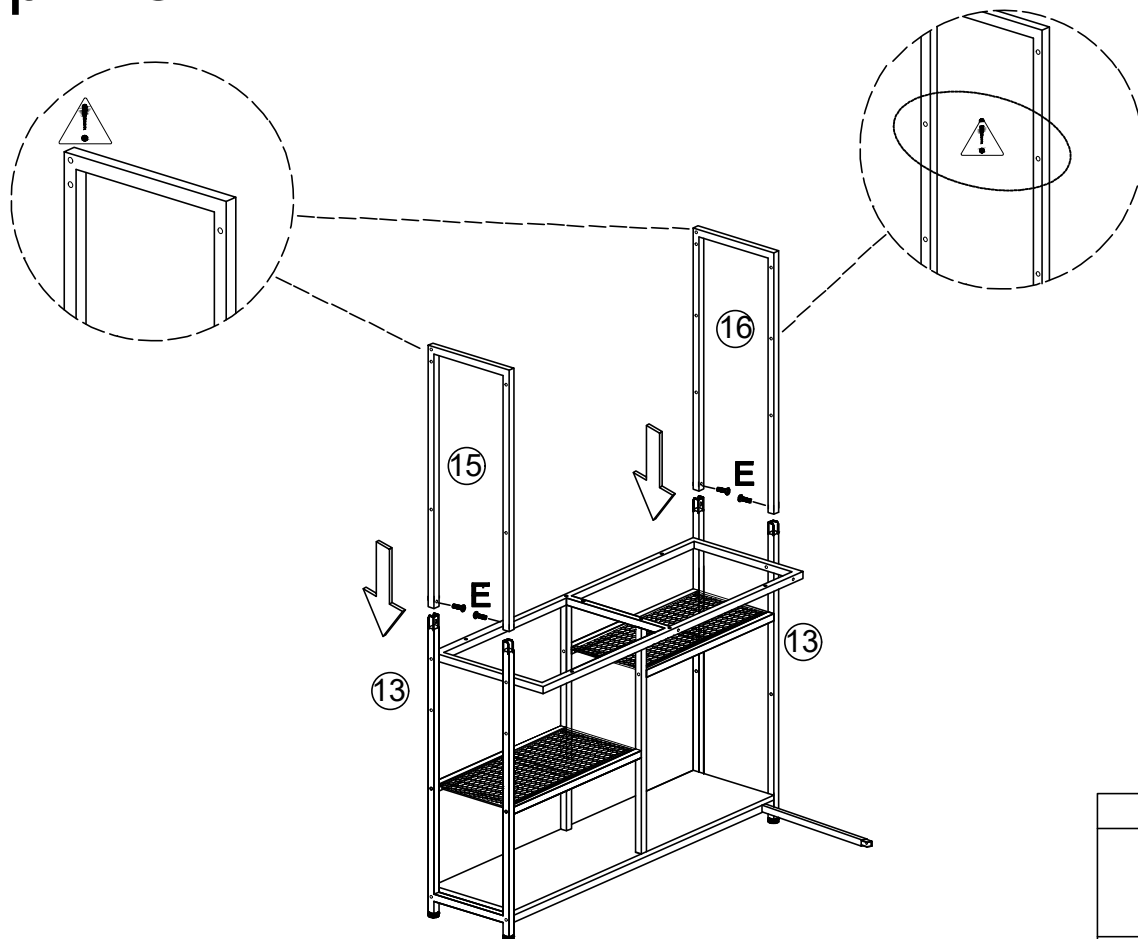


E	x 4
	
M6x12	

Step 2-9

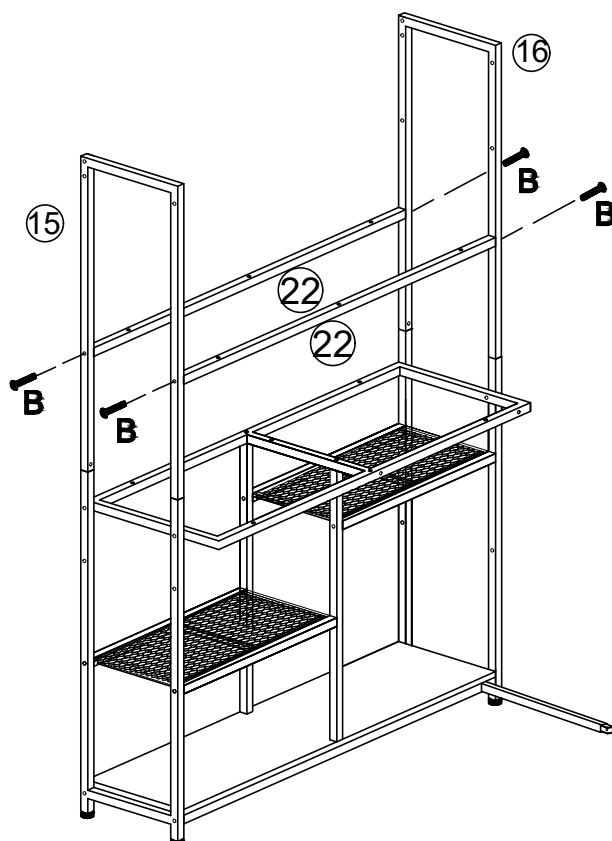


B	x4
	
M6x40	

Step 2-10

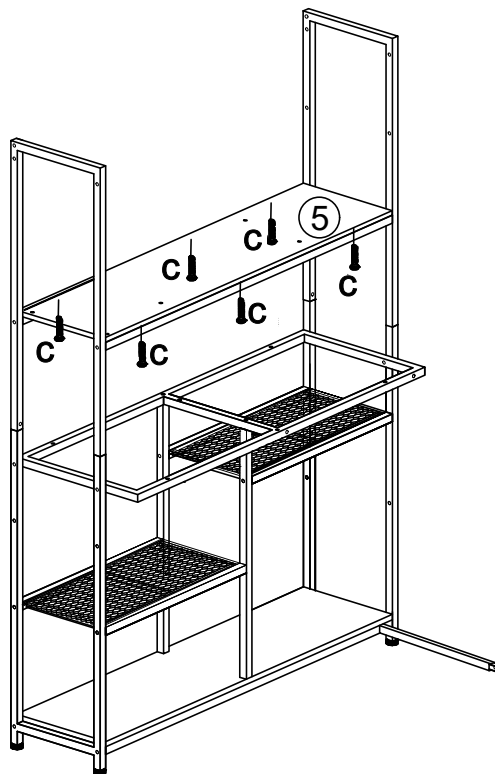


C	x6
	
M6x28	

Step 2-11

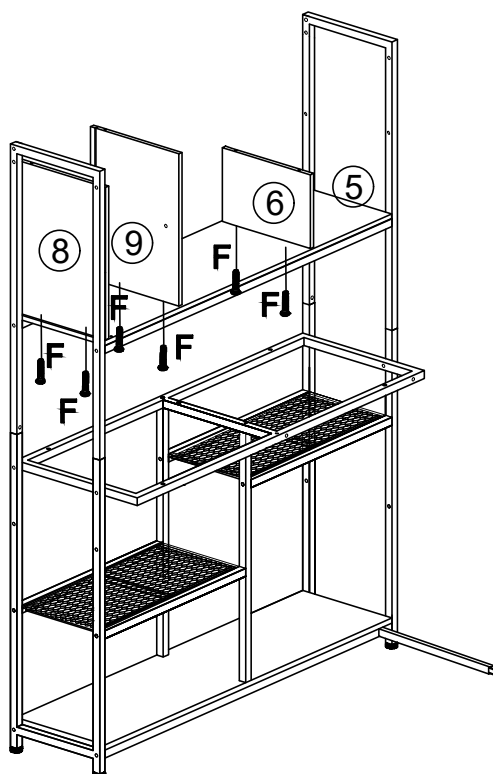


F	x6
	
Ø5x40	

Step 2-12

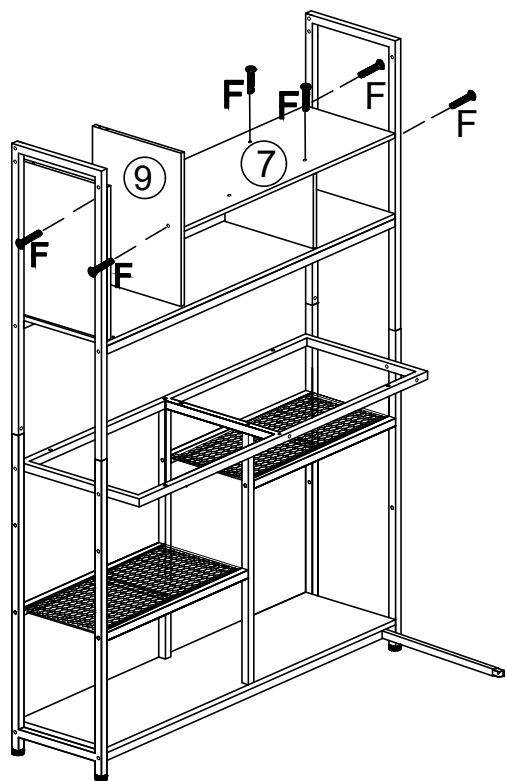


F	x 6
	
Ø5x40	

Step 2-13

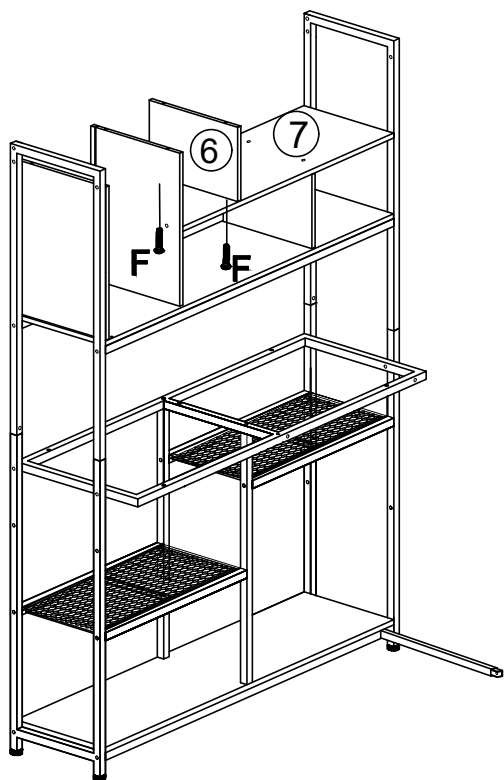


F	x 2
	
Ø5x40	


Step 2-14

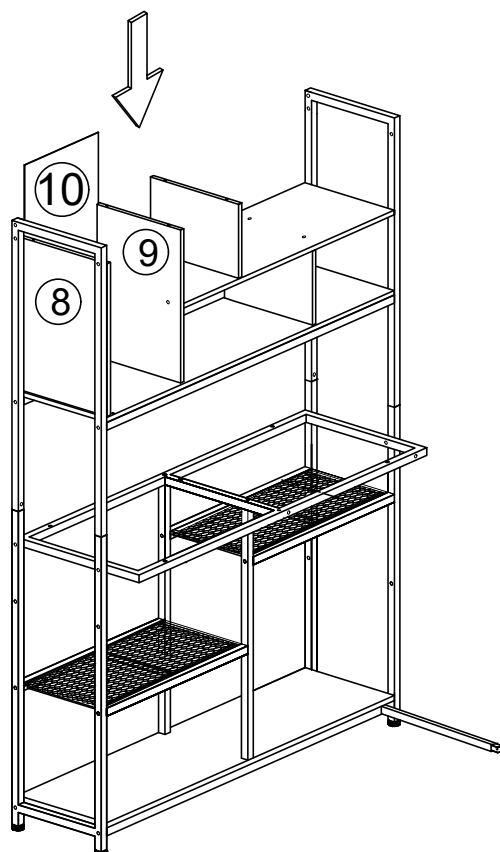

Step 2-15

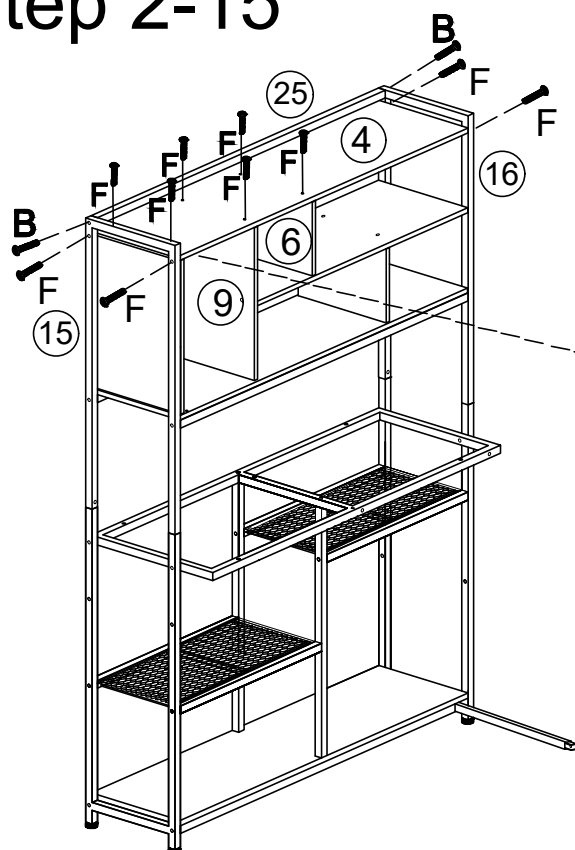


small holes on the opposite
side of the board

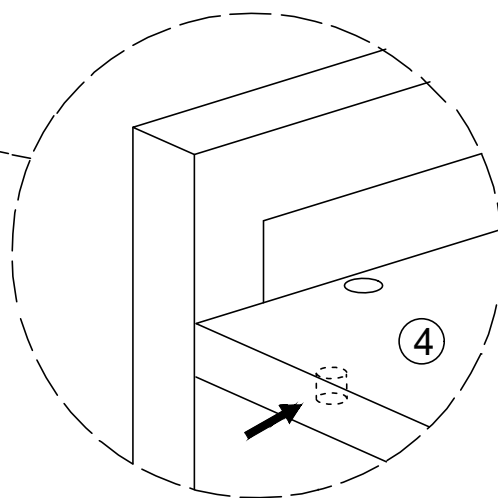


B	x2	F	x 10
			
M6x40		Ø5x40	

Step 2-16

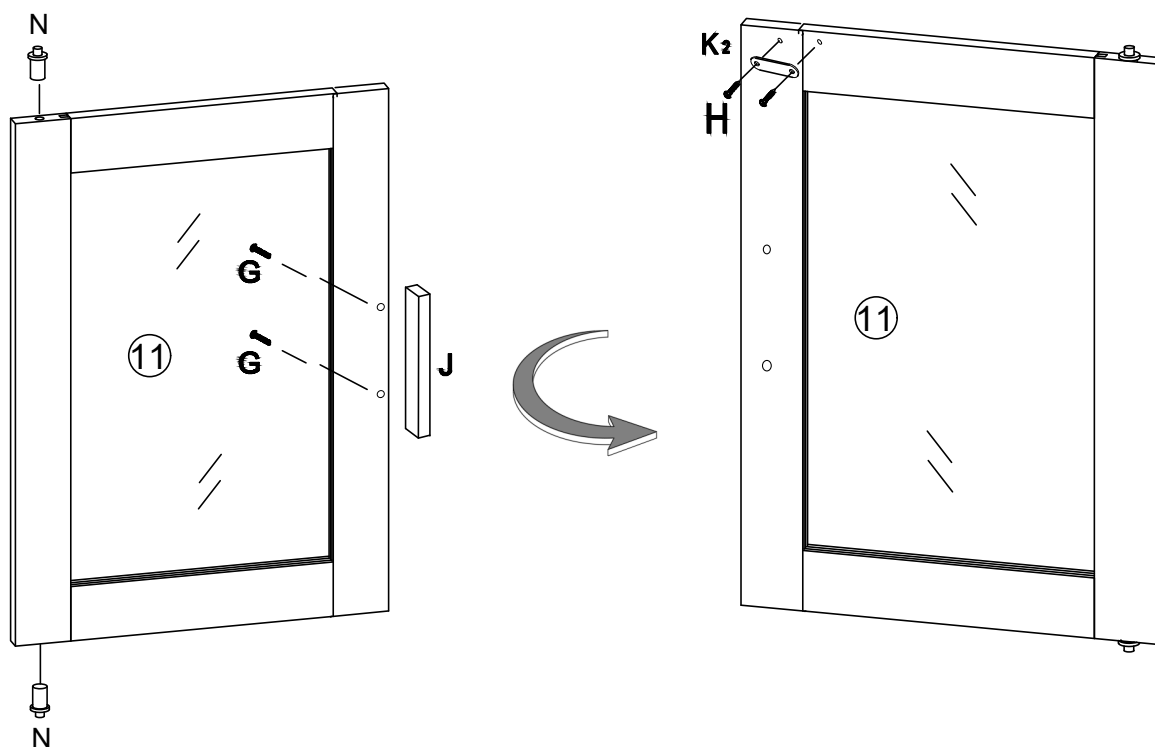

H	x2	K2	x1	N	x2	G	x2	J	x1
									
M3.5x12						M4x15		220-96	


Step 2-17

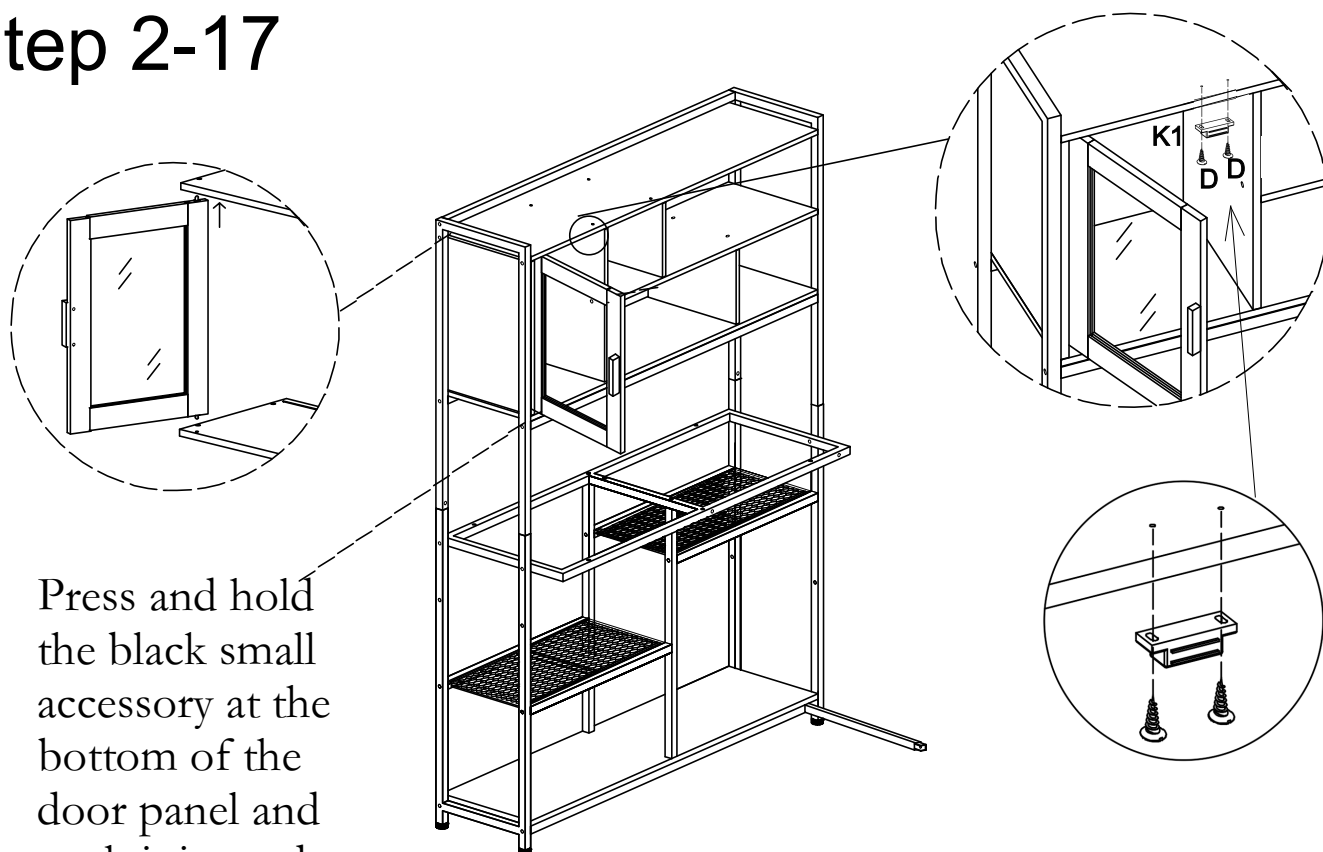

Press and hold the black small accessory at the bottom of the door panel and push it inward to align with the hole


K1	x1	D	x2
			
		M3x14	

Step 2-18

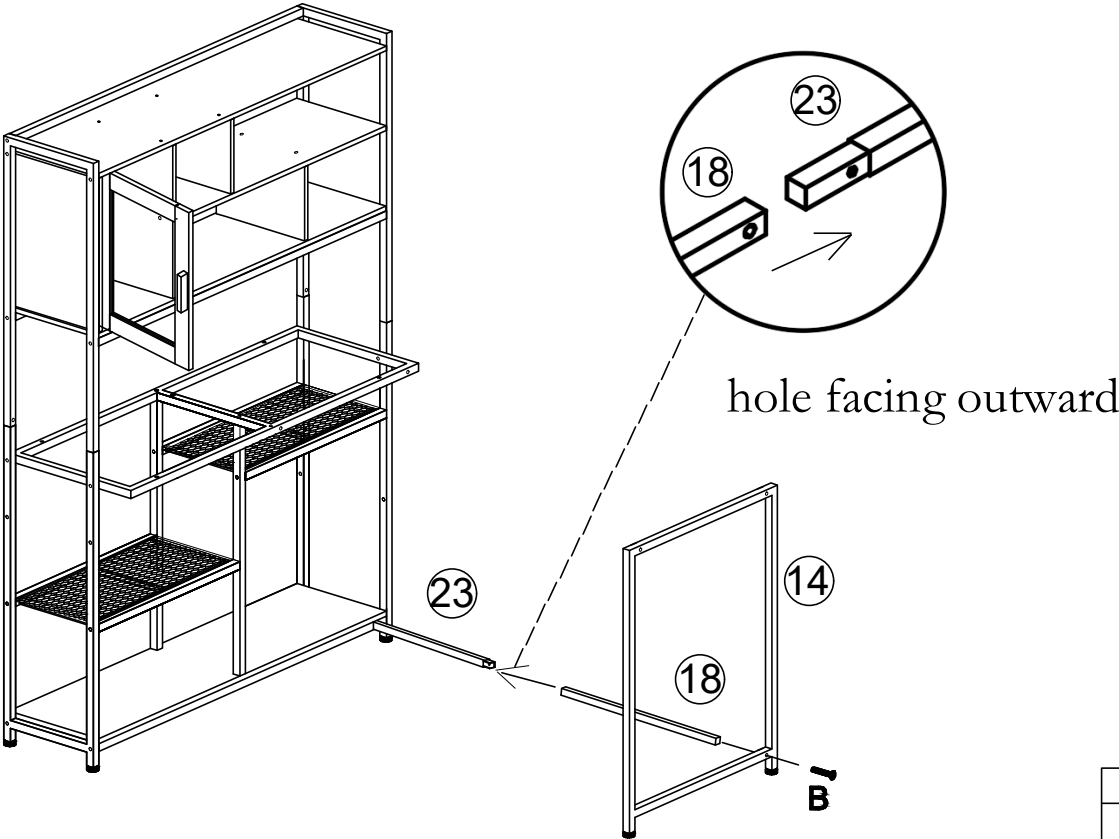


B	x1
	
M6x40	

Step 2-19

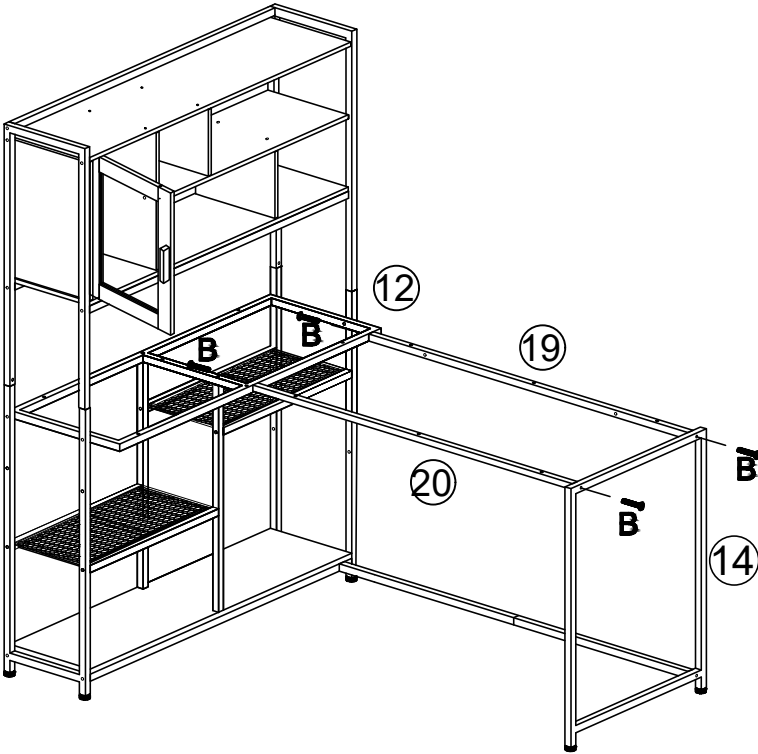


B	x4
	
M6x40	

Step 2-20

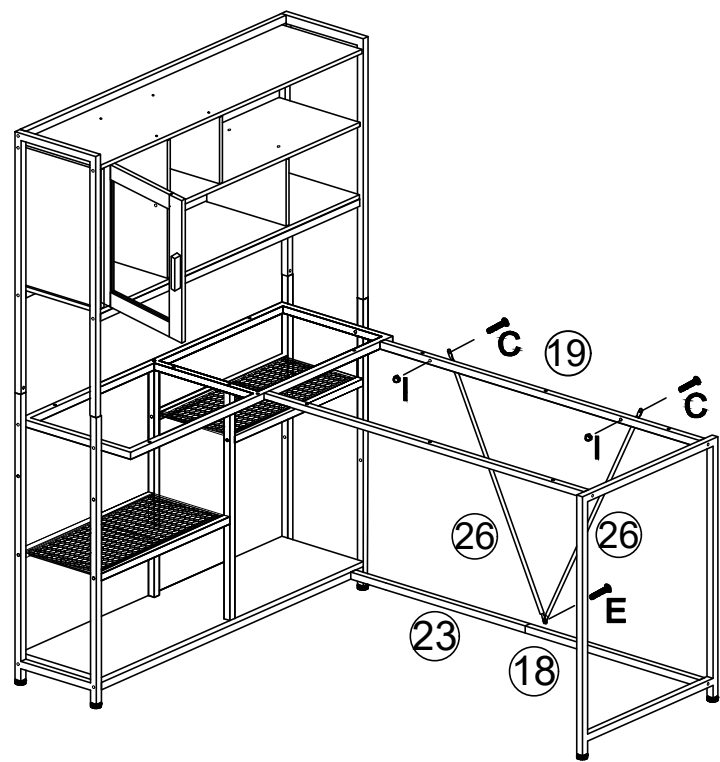

E	x1	I	x2	C	x 2
					
M6x12				M6x28	


Step 2-21

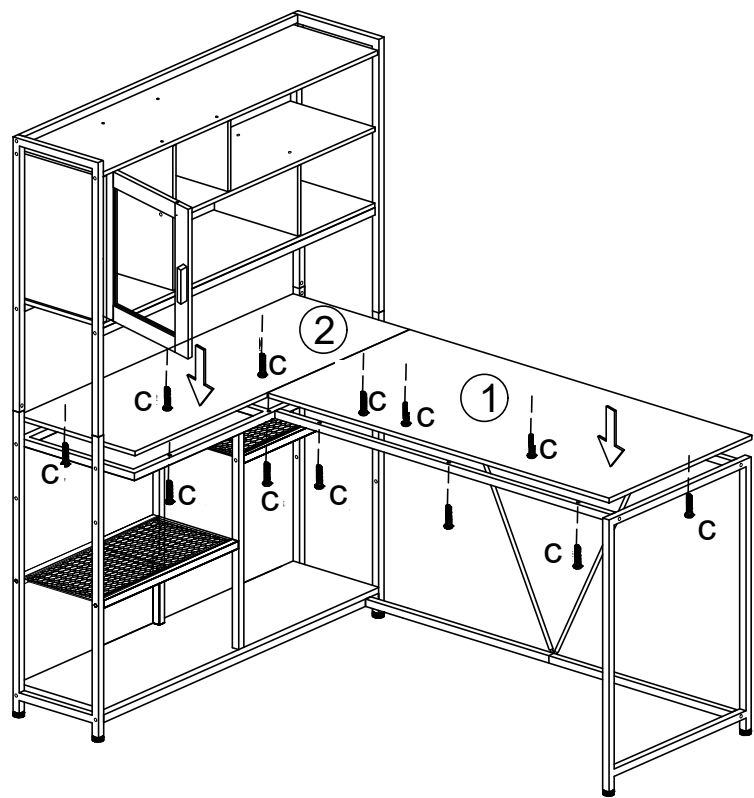



C	x12
	
M6x28	

Step 2-22

Be careful to tear off
the red paper on the
back of the light strip

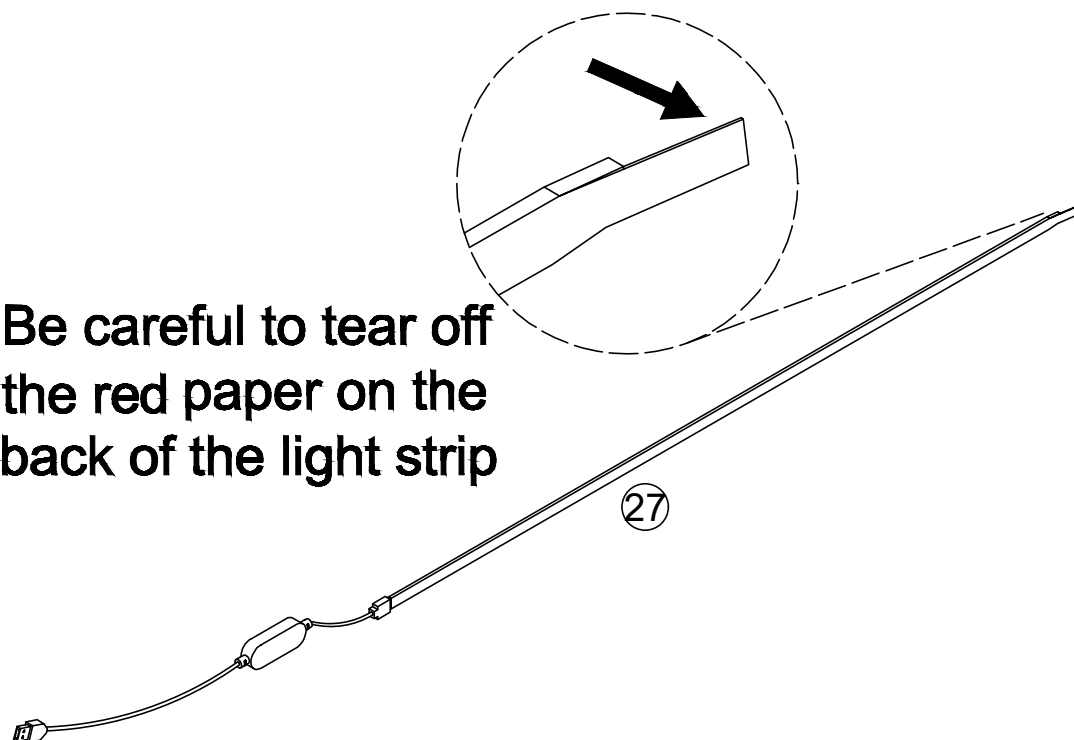

Step 2-23

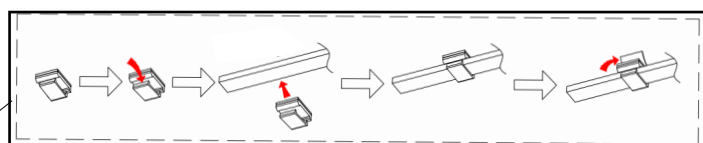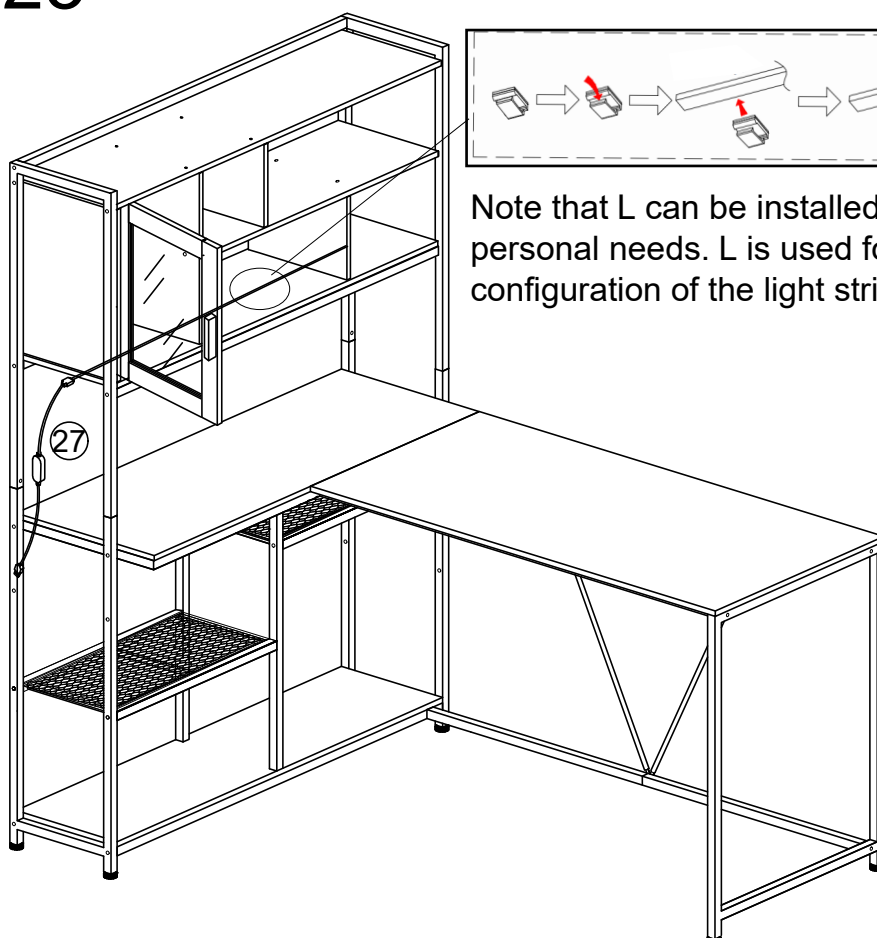

Note that L can be installed or not according to
personal needs. L is used for the stick-off
configuration of the light strip.

L	x 6
	