


Assembly Instructions

V01.240728.01

SKU List:

0115014WN1-006-0

0115014NW1-006-0

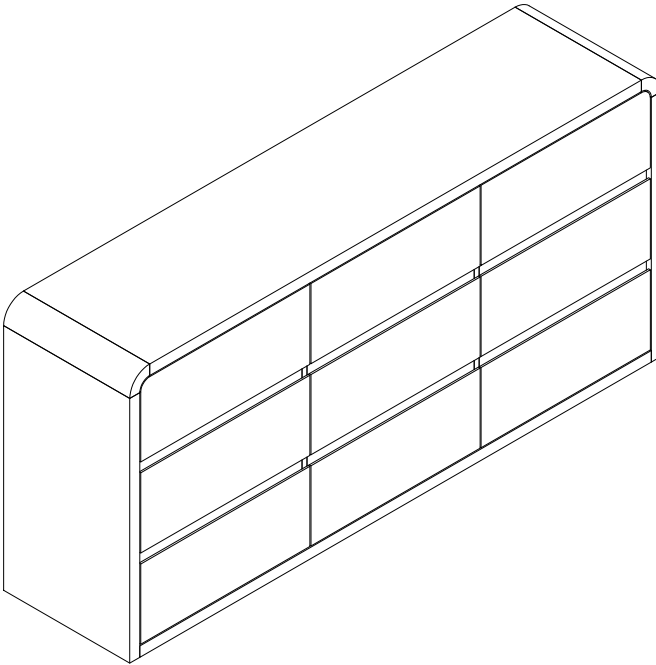

Grantee:



usadomesticservice@outlook.com



DO NOT RETURN: Keep the regular item and get a Replacement and new products instead of Return.



REFUND: Any problems caused by us can be compensated by a refund.

We are very sorry if we have caused you any trouble.
Try to contact our service team at first time to solve your problem.
Thank you for giving our service team another chance.
Thank you for your patience and cooperation.

Before Start:



Check part List: Check the part list to make sure you have all parts before starting assembly



Cursory glance: A cursory glance through the manual can help speed up the installation process and reduce mistakes before starting



Follow Instructions: Follow instructions step by step to avoid Unnecessary mistakes, destruction and failure.

Recommended:



Two Person may help assemble work easier.



Phillips and hexagonal screwdriver.




Power tools can reduce installation time.

Hardware Part List


A		M6x35mm	x89+3	☐
B		M15x10mm	x89+3	☐
C		M6x30mm	x13+1	☐
D		L 310mm	x18	☐
E		M4x12mm	x42+2	☐
F		M4x35mm	x6+1	☐
G		M4x30mm	x45+2	☐
H			x12+1	☐
I		M3x16mm	x12+1	☐
J		M4x10mm	x18+1	☐
K		M6x50mm	x6+1	☐
L		M8x50mm	x8+1	☐
M		M4x12mm	x2	☐
N			x2	☐
O			x2	☐
			x1	☐

Components Part List


1 x9 ☐




2 x9 ☐

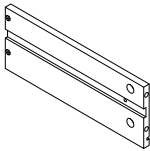


3 x9 ☐

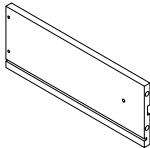


4 x9 ☐

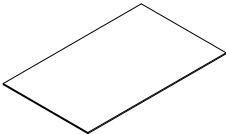


5 x9 ☐

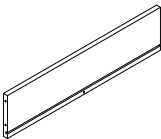


6 x2 ☐

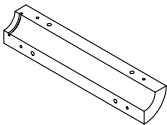


7 x1 ☐

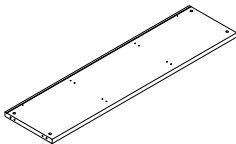


8 x1 ☐

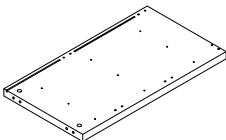


9 x1 ☐

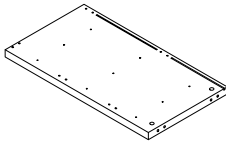


10 x2 ☐

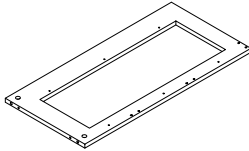


11 x6 ☐

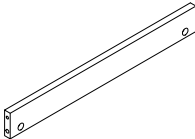


12 x3 ☐

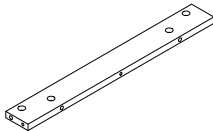


13 x1 ☐

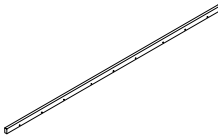


14 x1 ☐

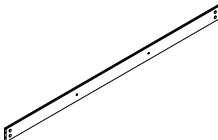

15 x1 ☐

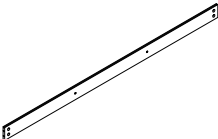


16 x1 ☐

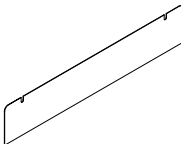


Components Part List

17

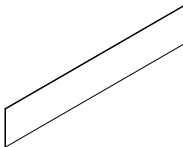


x1 ☐

18

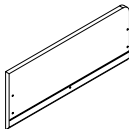


x1 ☐

19

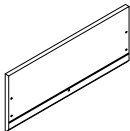


x1 ☐

20

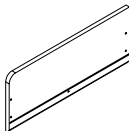


x1 ☐

21

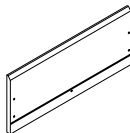


x2 ☐

22

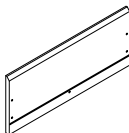


x2 ☐

23



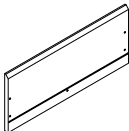


x2 ☐

Disassemble diagram:

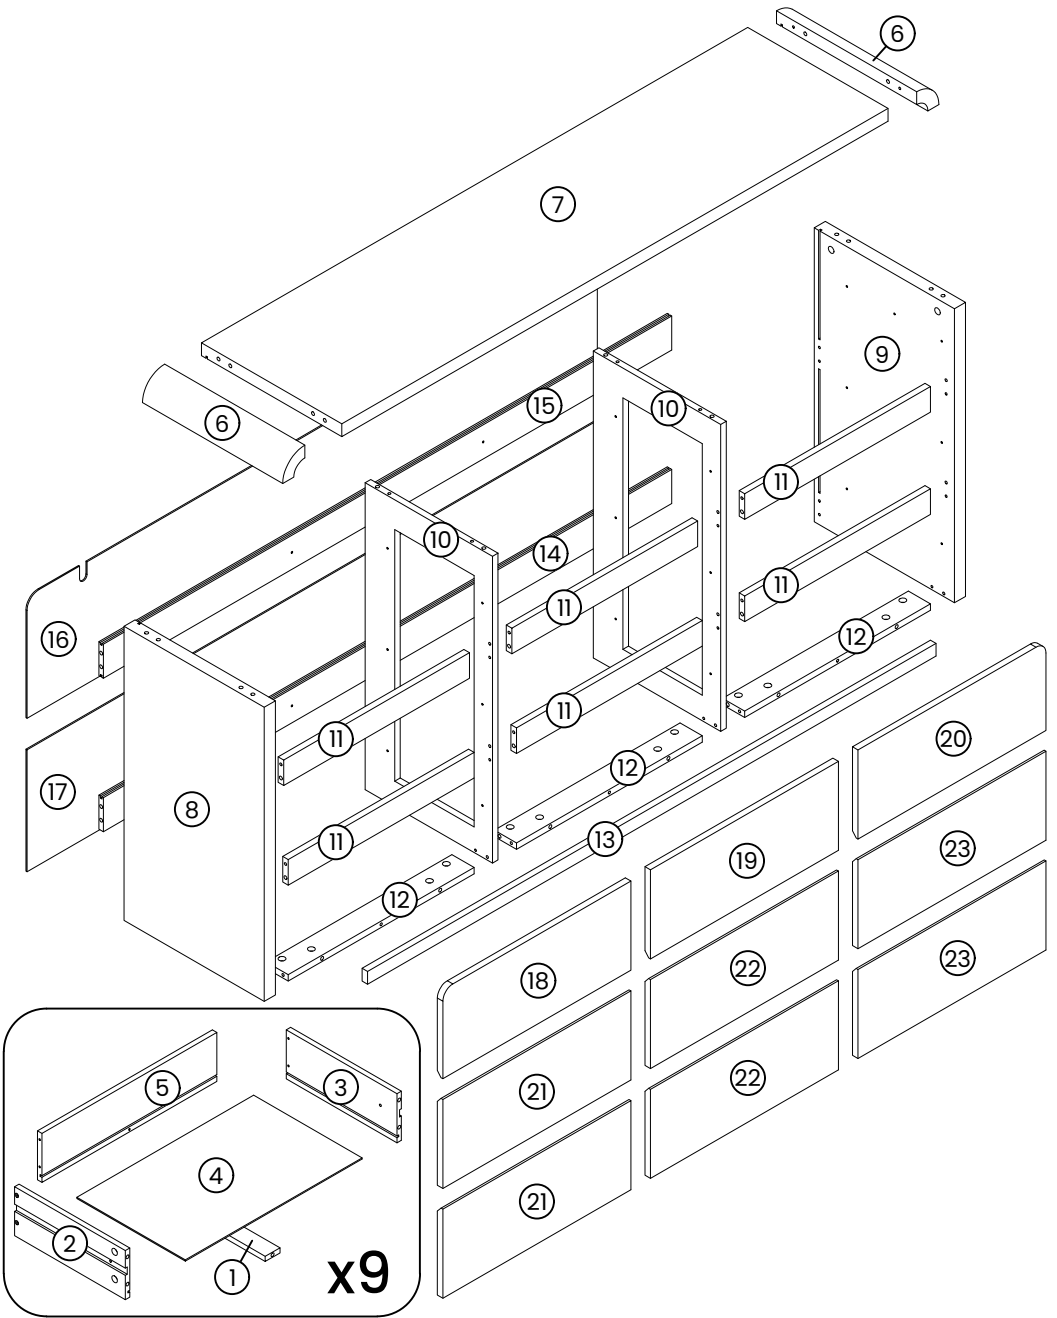



Step 1 / 30

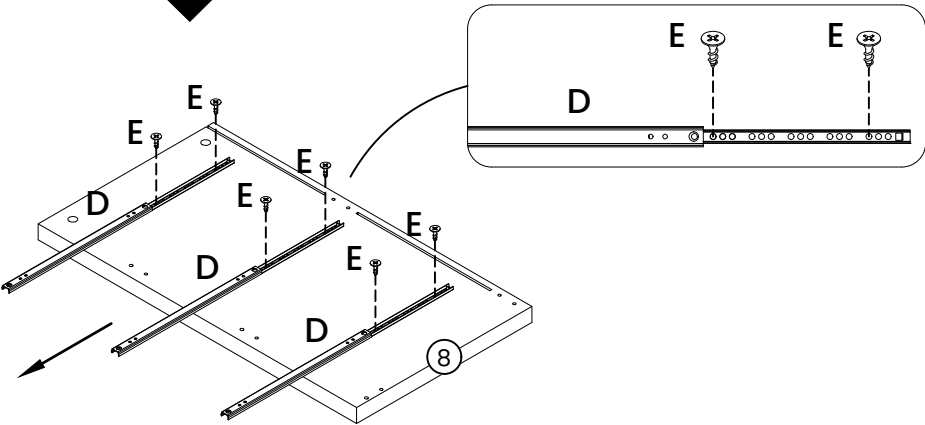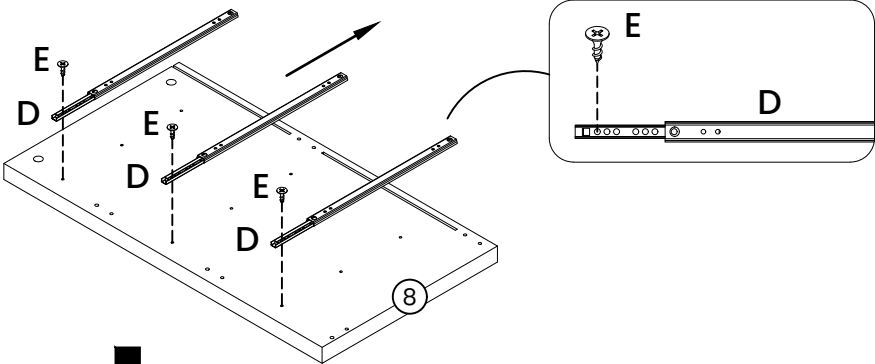


Note: To locate correct holes, slide(D) needed to be moved in 2 directions.

Step 2 / 30



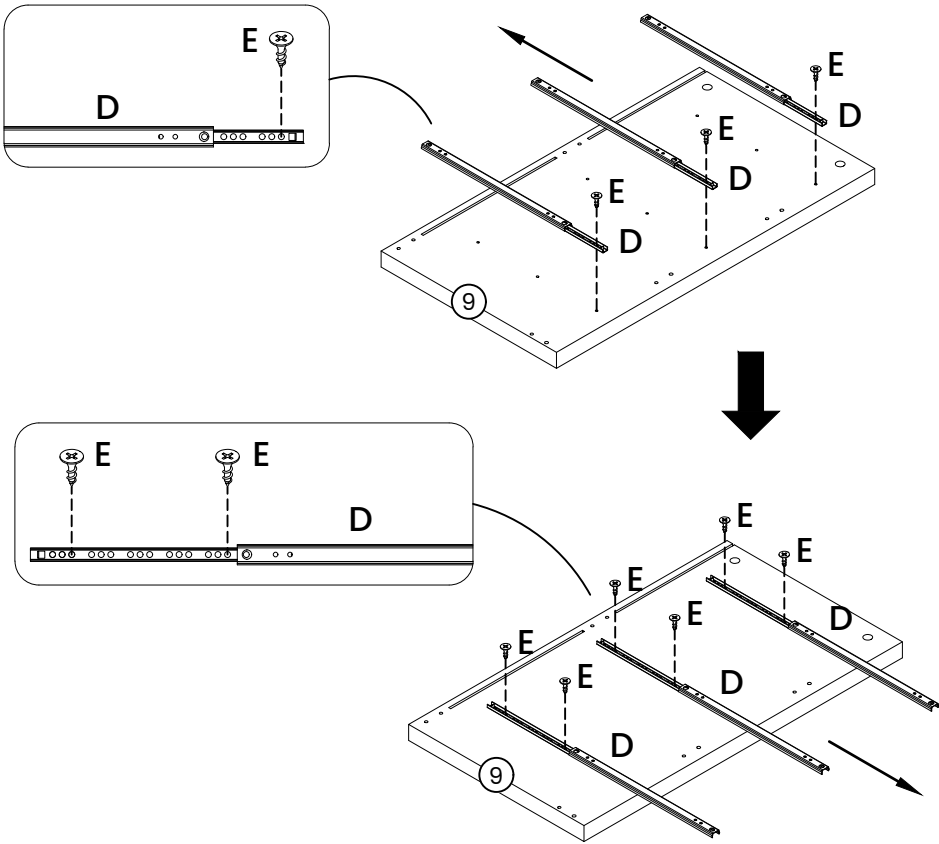


9  x1

D  x3 E  x9

Note: To locate correct holes, slide(D) needed to be moved in 2 directions.





Step 3 / 30

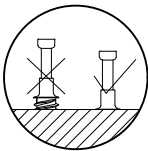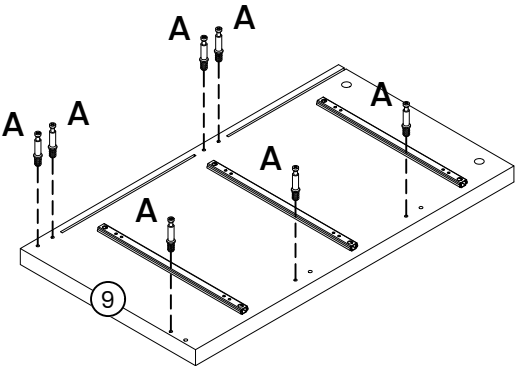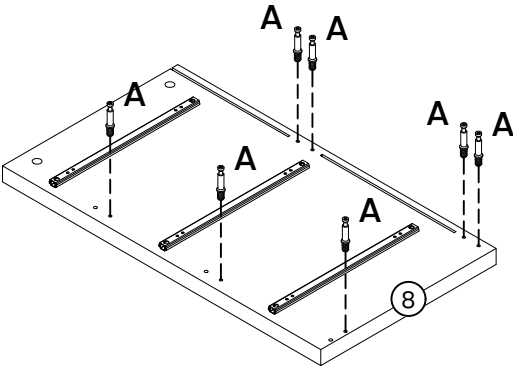


A  x14

Note:

Step 4 / 30

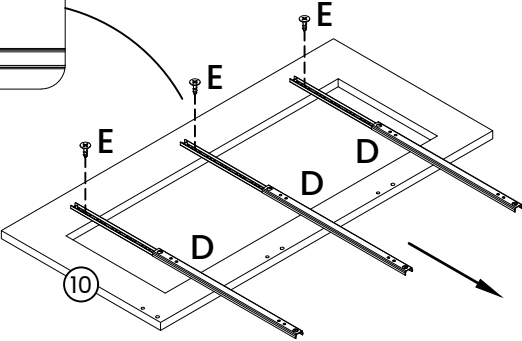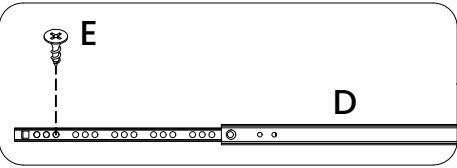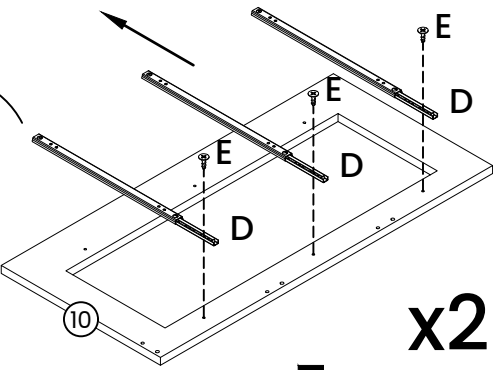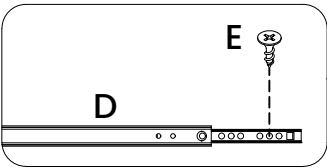


10

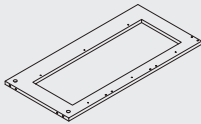

x2

D



x6



E



x12

Note: To locate correct holes, slide(D) needed to be moved in 2 directions.


Step 5 / 30

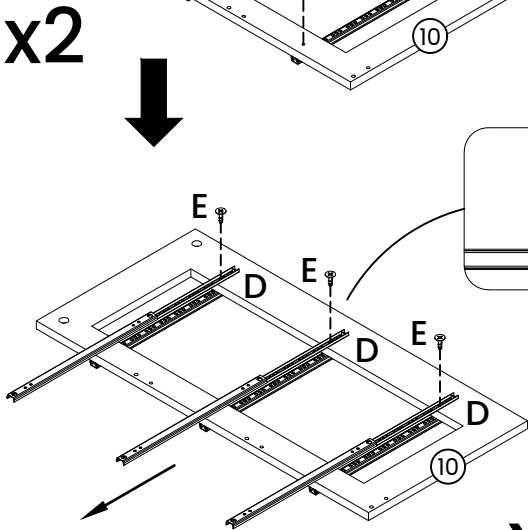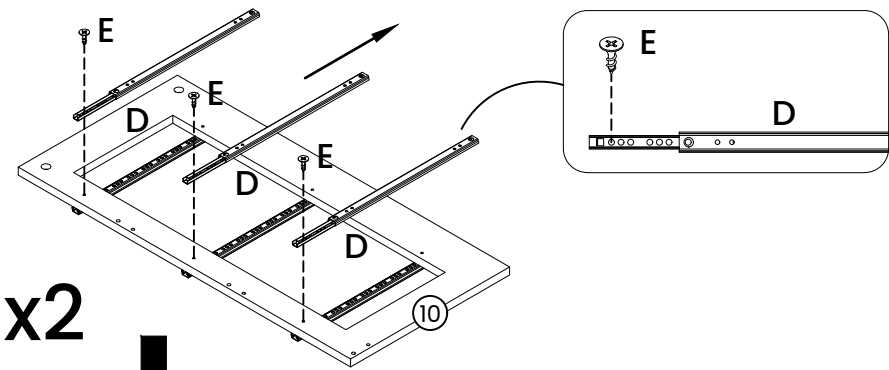

D x6 E x12

Note: To locate correct holes, slide(D) needed to be moved in 2 directions.


Step 6 / 30

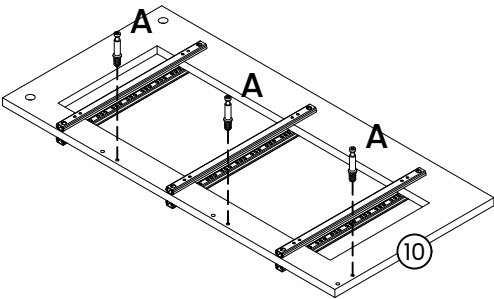


x2



180°

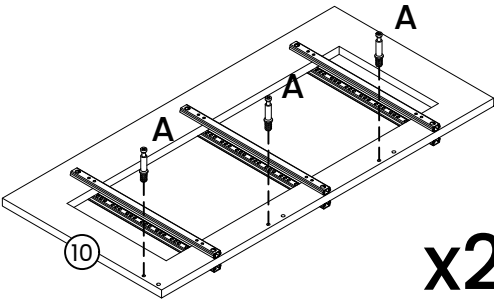

x2

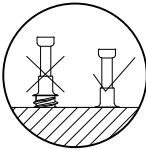



A



x12



Note:

Step 7 / 30

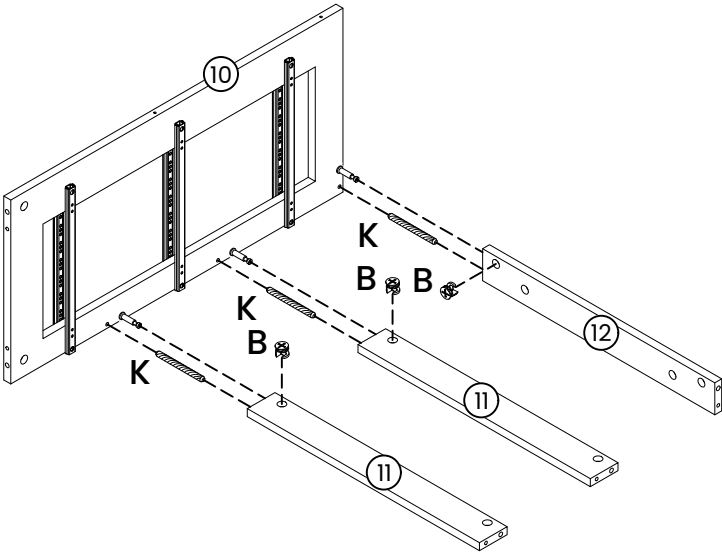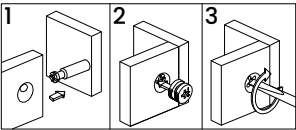

Note:


Step 8 / 30

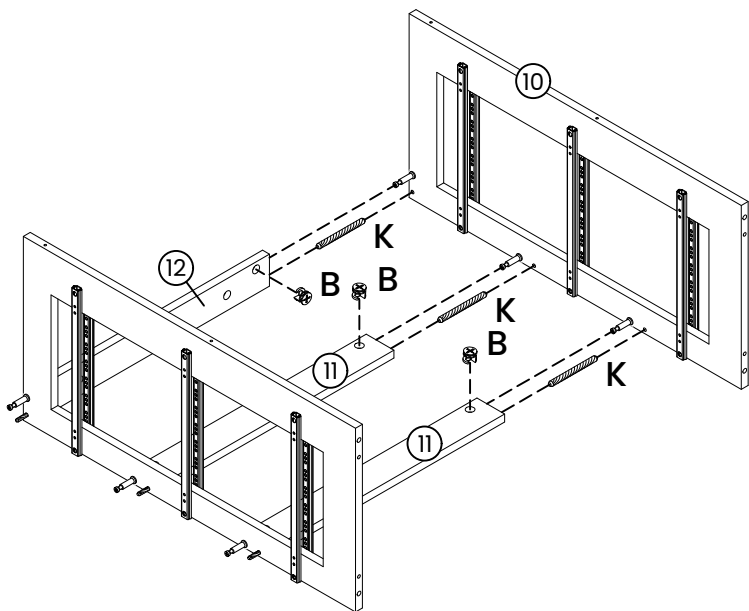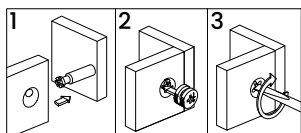


B  x3 K  x3

Note:

Step 9 / 30

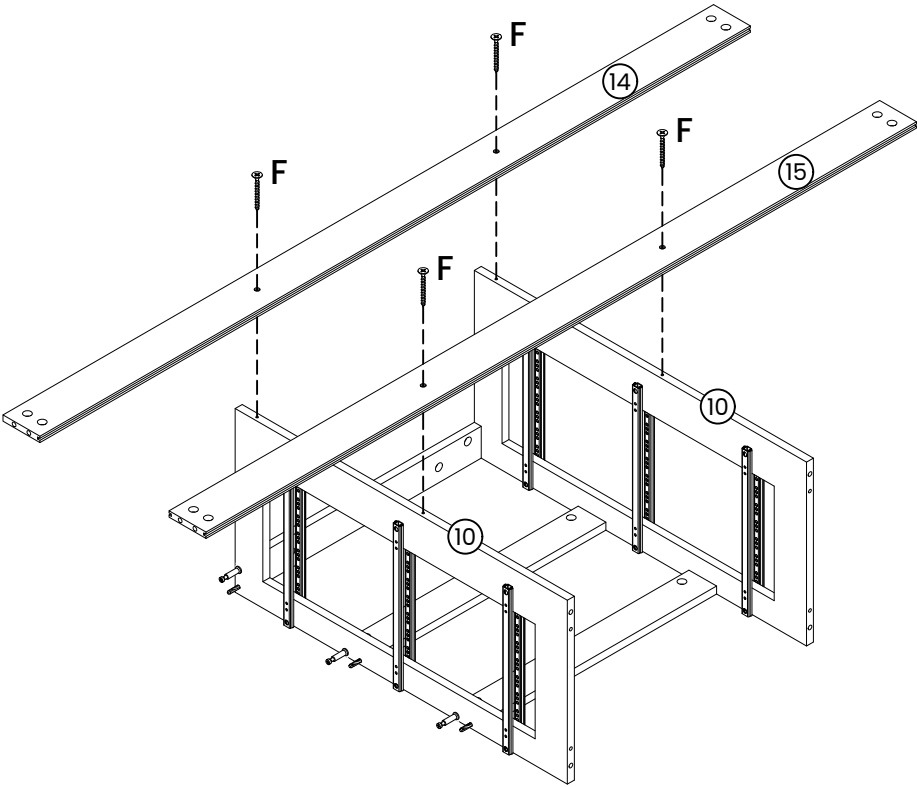


14



x1

15



x1


F




x4

Note:


Step 10 / 30

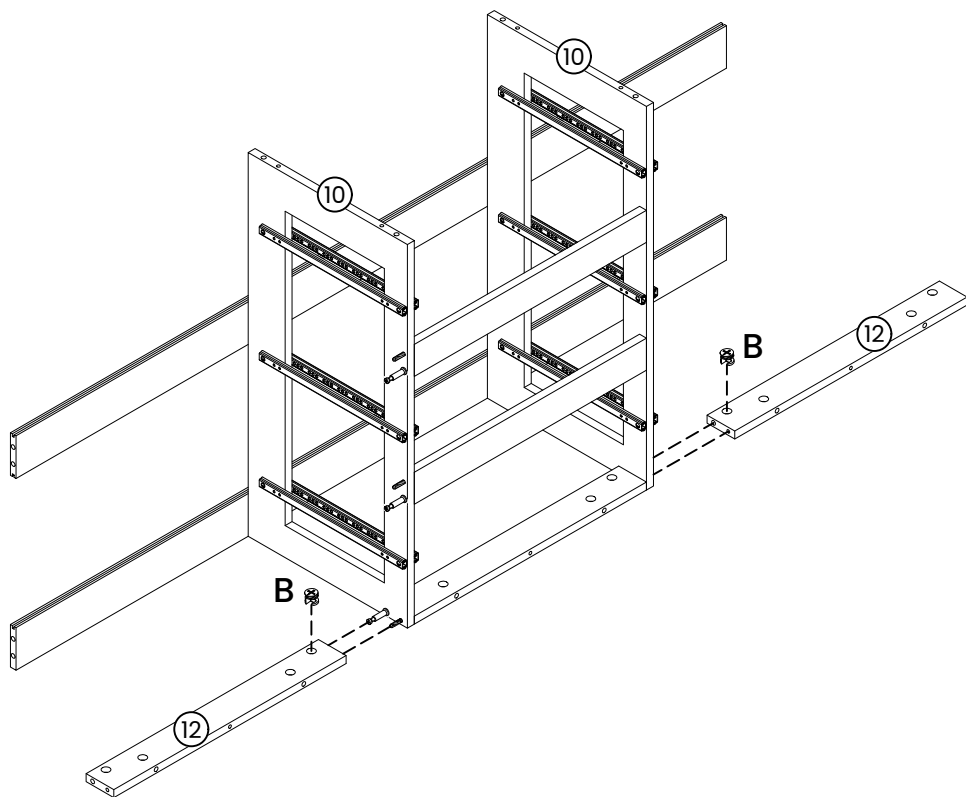


12  x2

B  x2

Note:


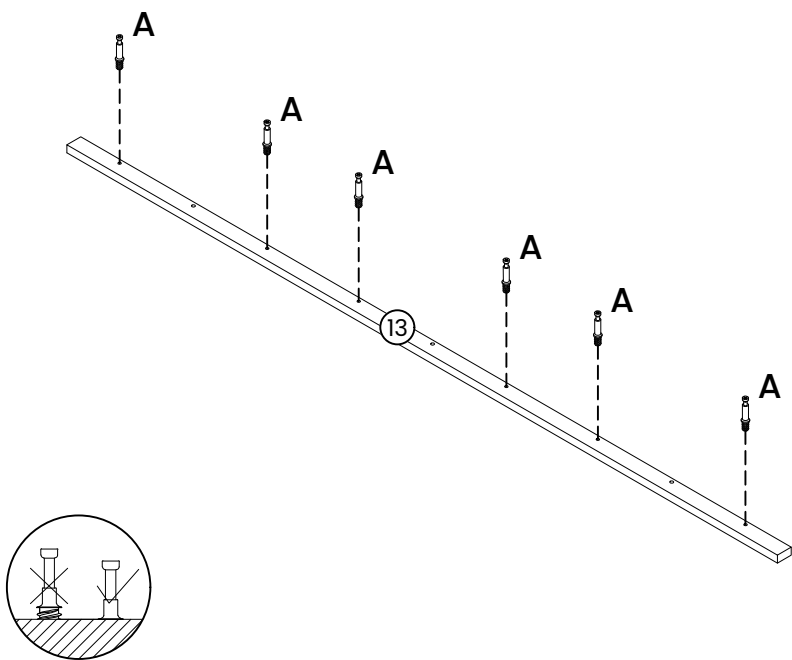


13  x1

A  x6

Note:


Step 12 / 30

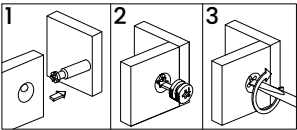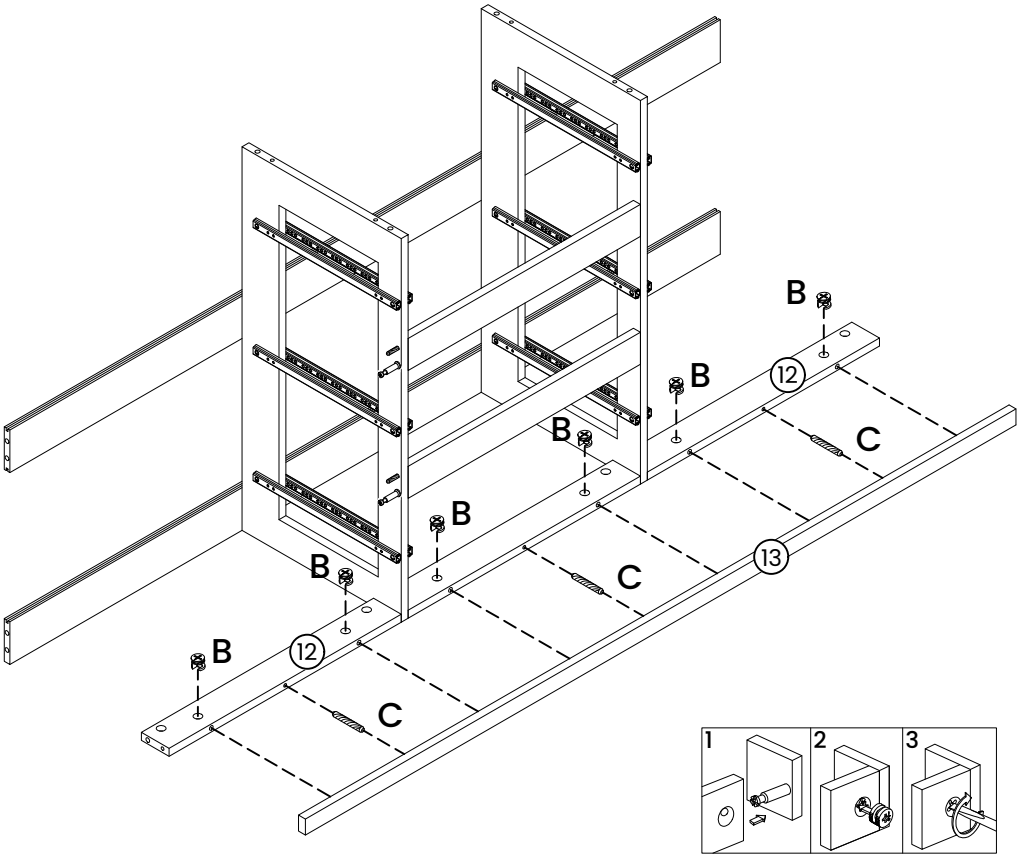

B  x6 C  x3

Note:

Step 13 / 30


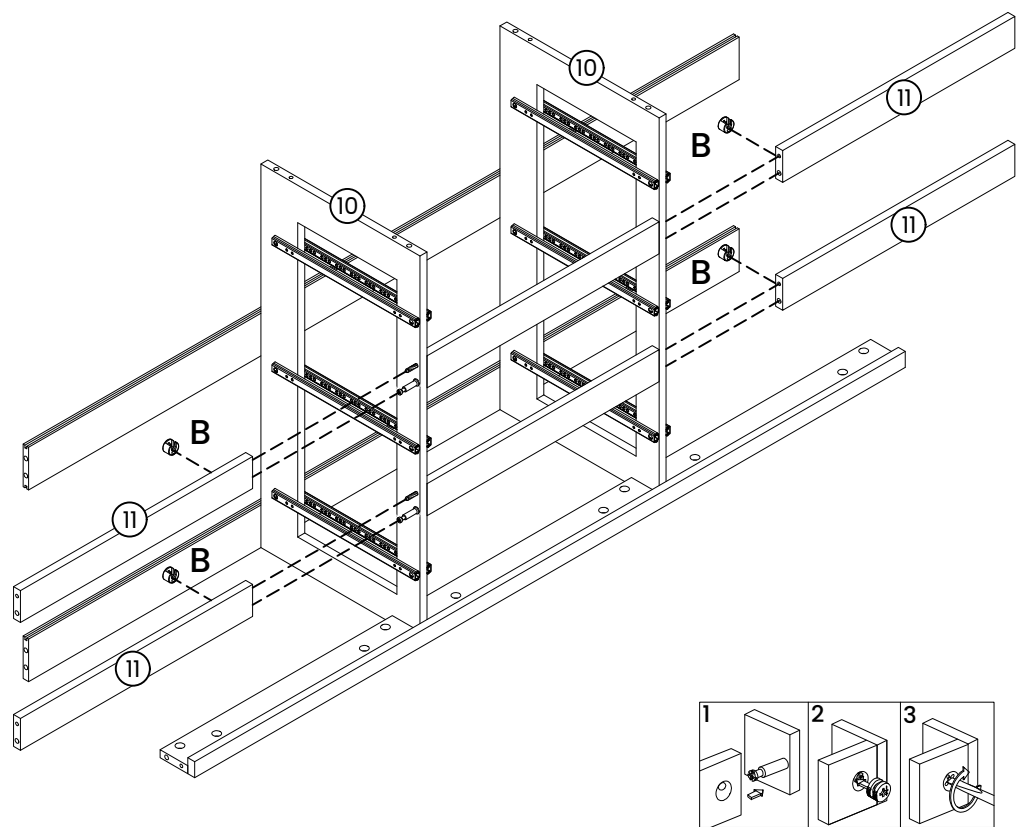


11  x4

B  x4

Note:


Step 14 / 30

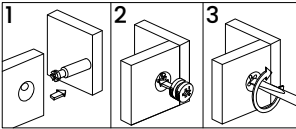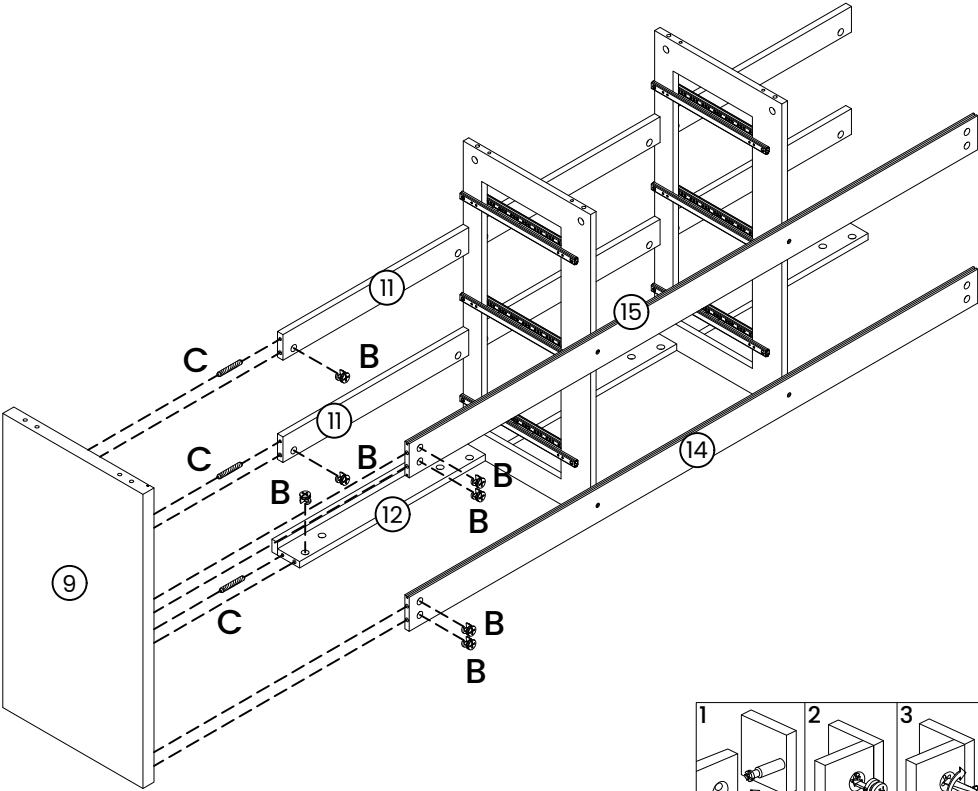

B  x7 C  x3

Note:

Step 15 / 30

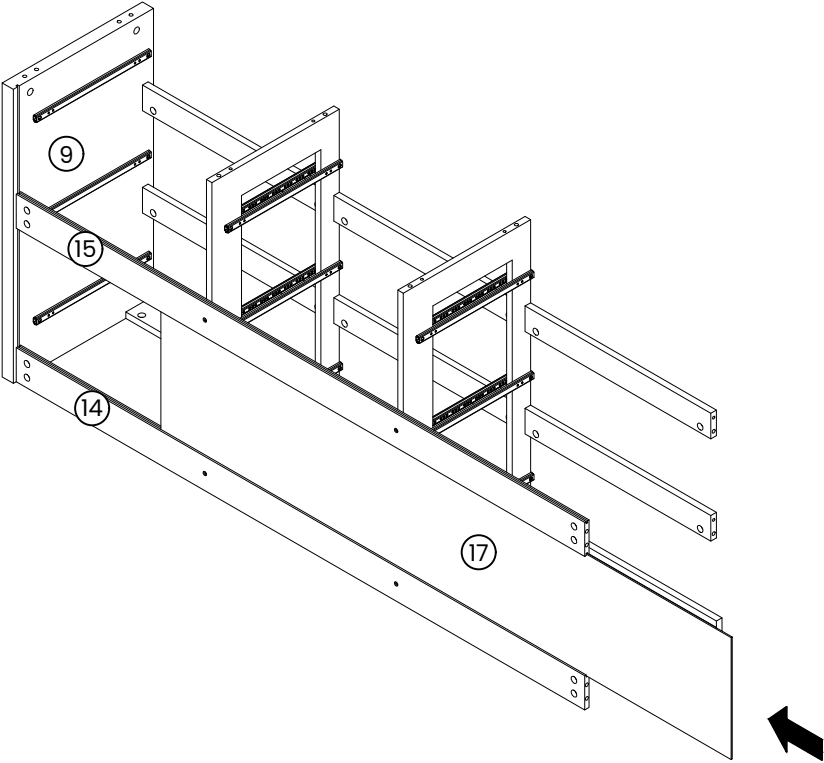


17



x1

Note:


Step 16 / 30

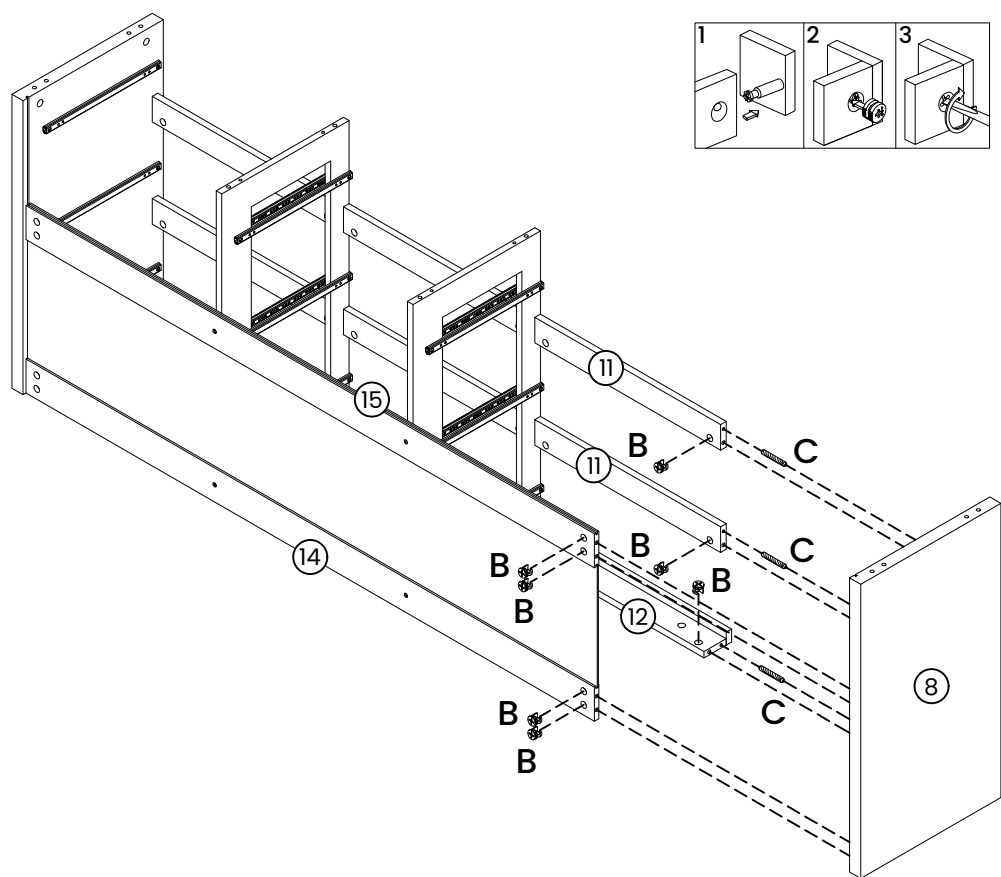


B  x7 C  x3

Note:

Step 17 / 30

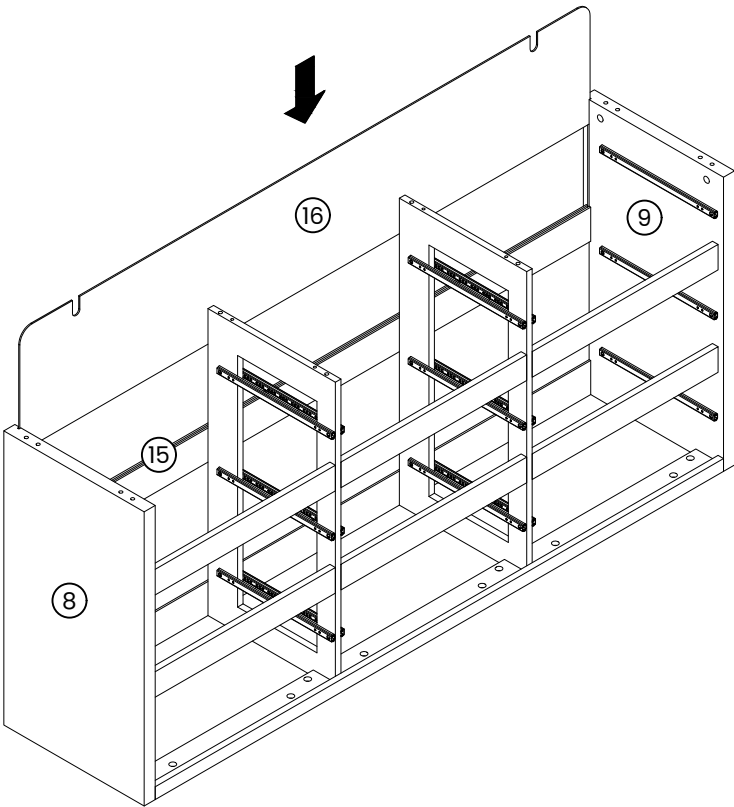


16



x1



Note:

Step 18 / 30

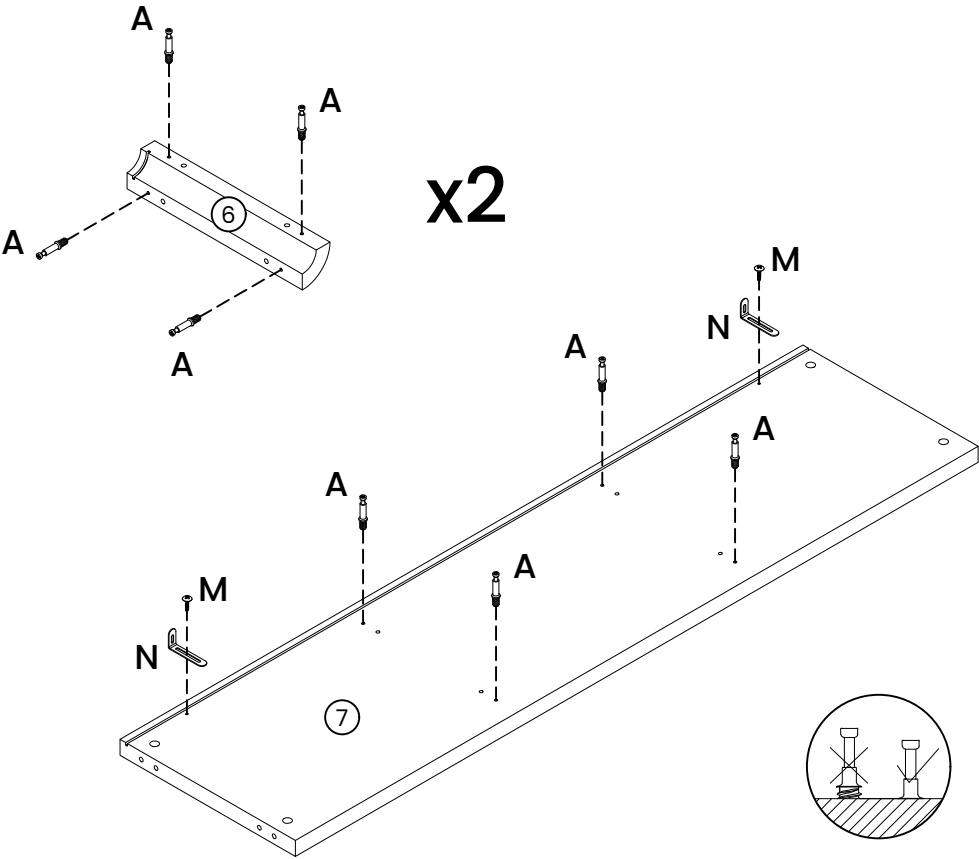

Note:



Step 19 / 30

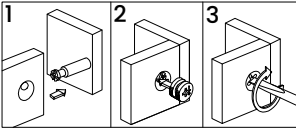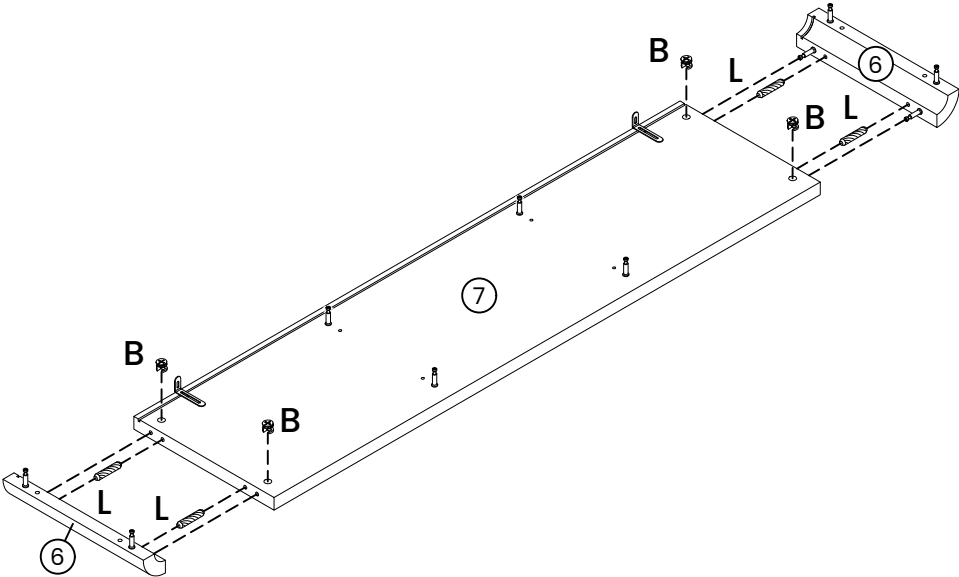

B  x4 L  x4


Note:

Step 20 / 30

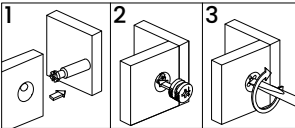
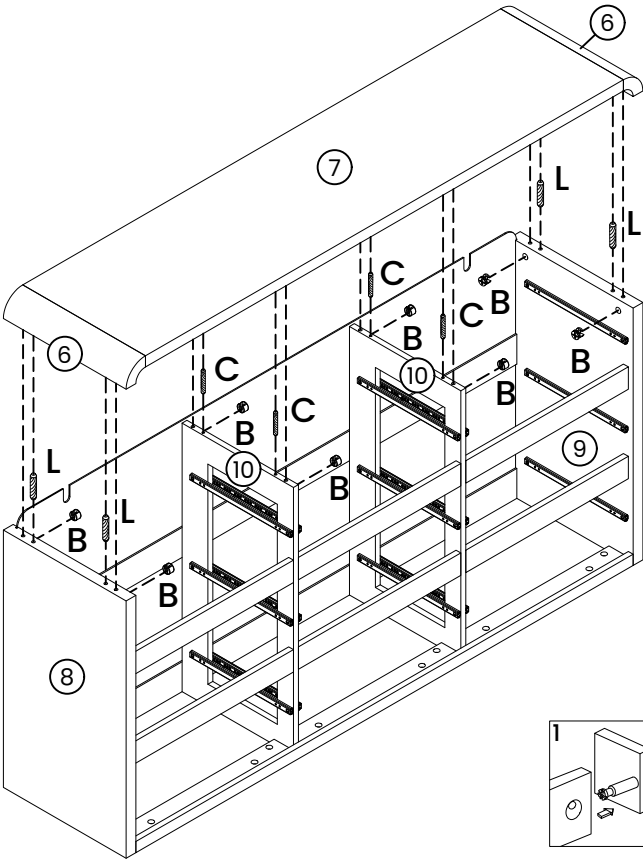


B  x8 C  x4 L  x4

Note: This step requires two people to work together.

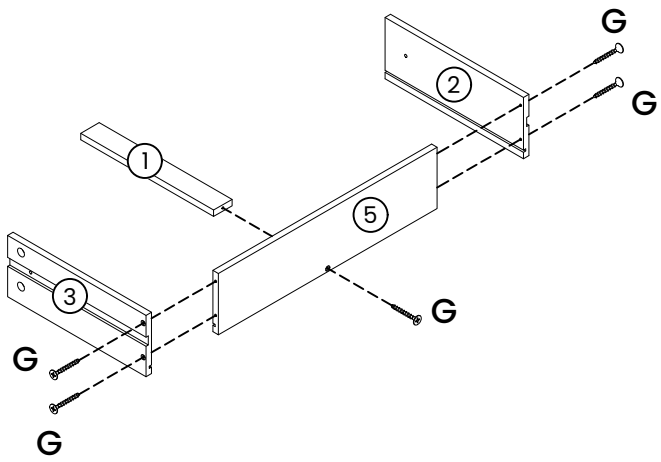


x9

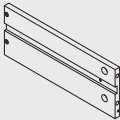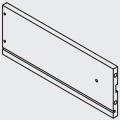- 1  x9
- 2  x9
- 3  x9
- 5  x9


G  x45

Note:

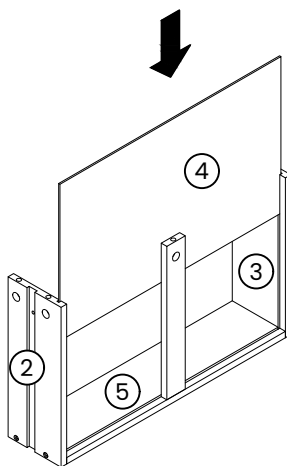

x9








4



x9





Note:

Step 23 / 30

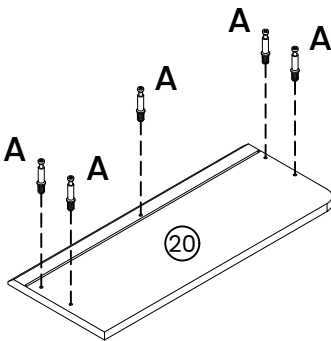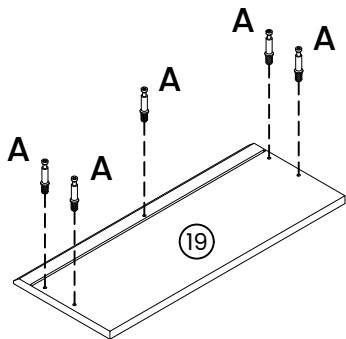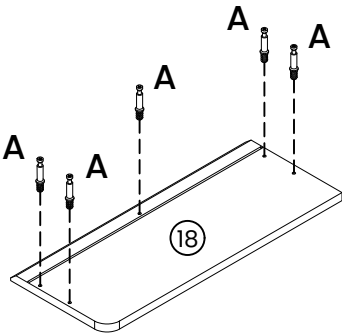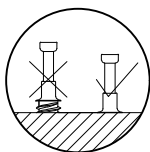

Note:





Step 24 / 30

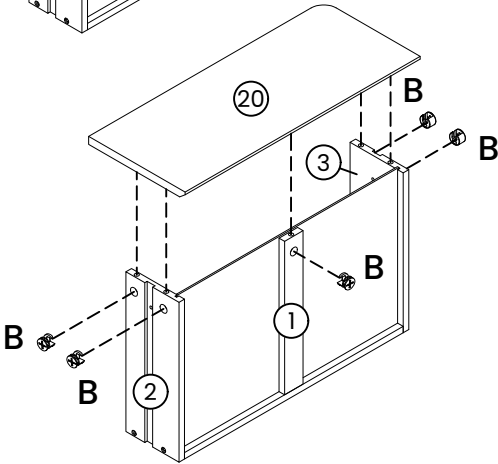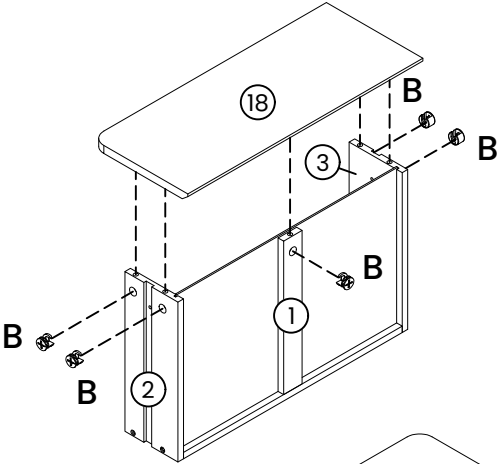
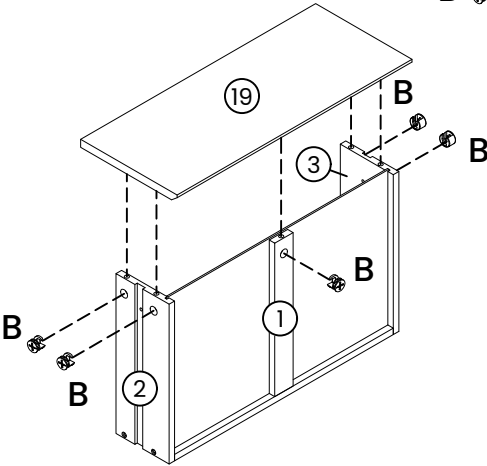
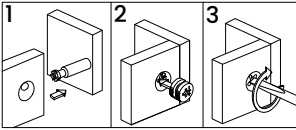


B  x15

Note:

Step 25 / 30

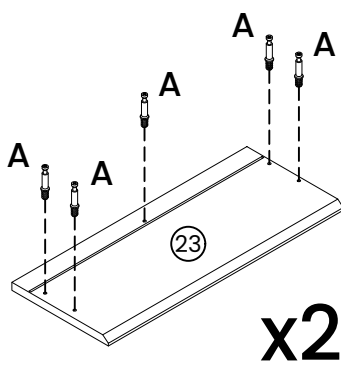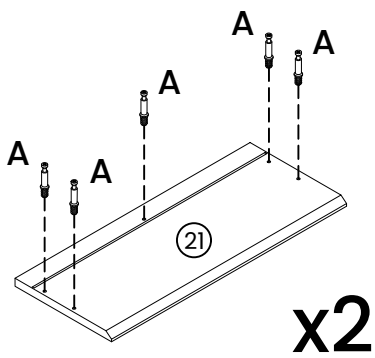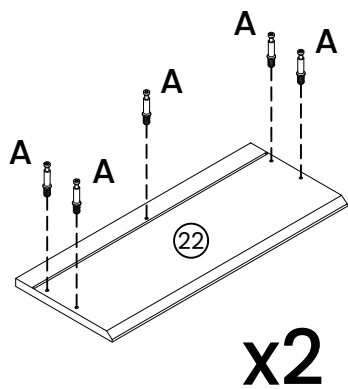
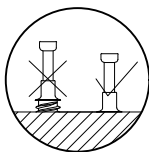


- 21  x2 22  x2 23  x2

- A  x30

Note:


Step 26 / 30

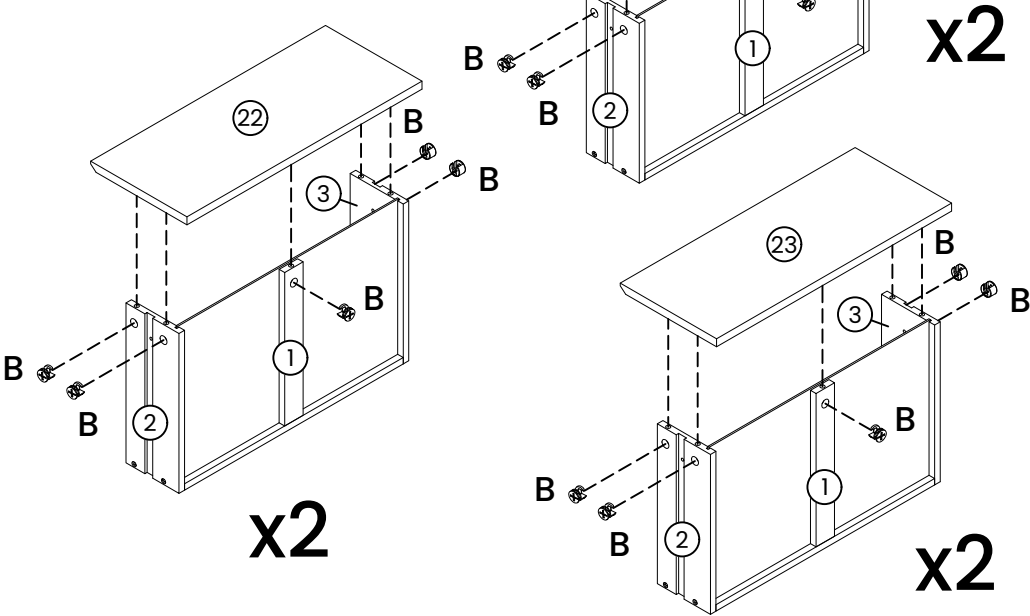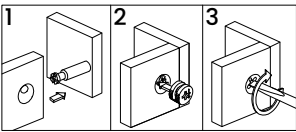

B  x30

Note:

Step 27 / 30

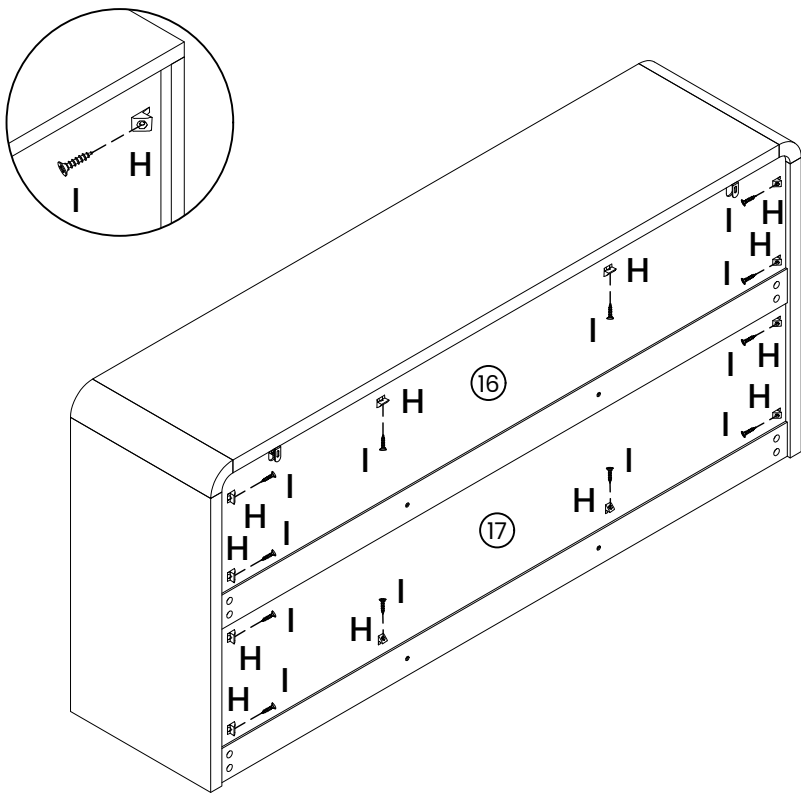


H  x12 I  x12

Note:

Step 28 / 30

Finally, pass the matching screws through the anti-tipping iron sheet, tighten them and fix them on the wall.

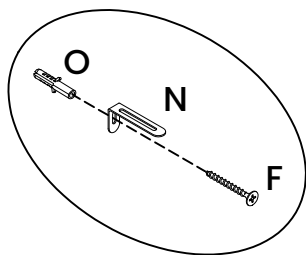

Step I: Mark the drilling positions on the wall with a pen.

WALL

I x2

Step II: Drill holes using an electric drill for 6x30mm.

WALL


drilling hole
c 6x30mm

II x2

Step III: Use a hammer to drive screw into the wall.

WALL


III x2

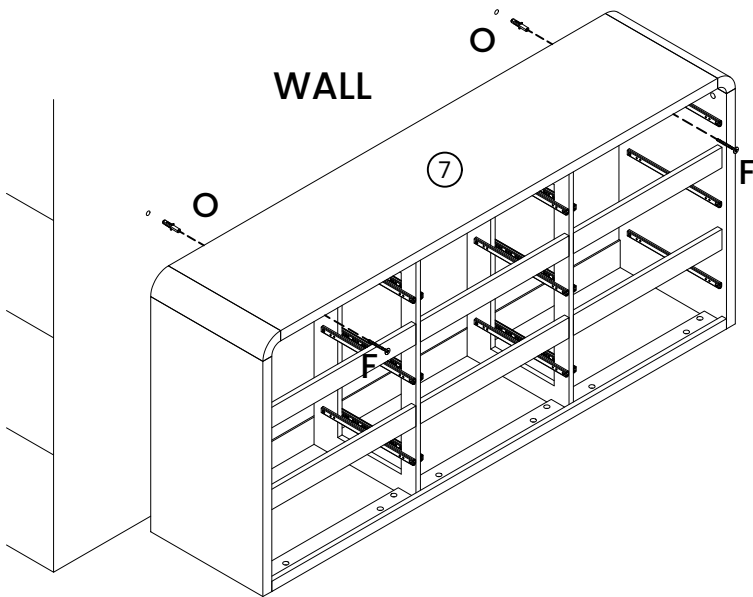

F x2 O x2


Note:

Step 29 / 30

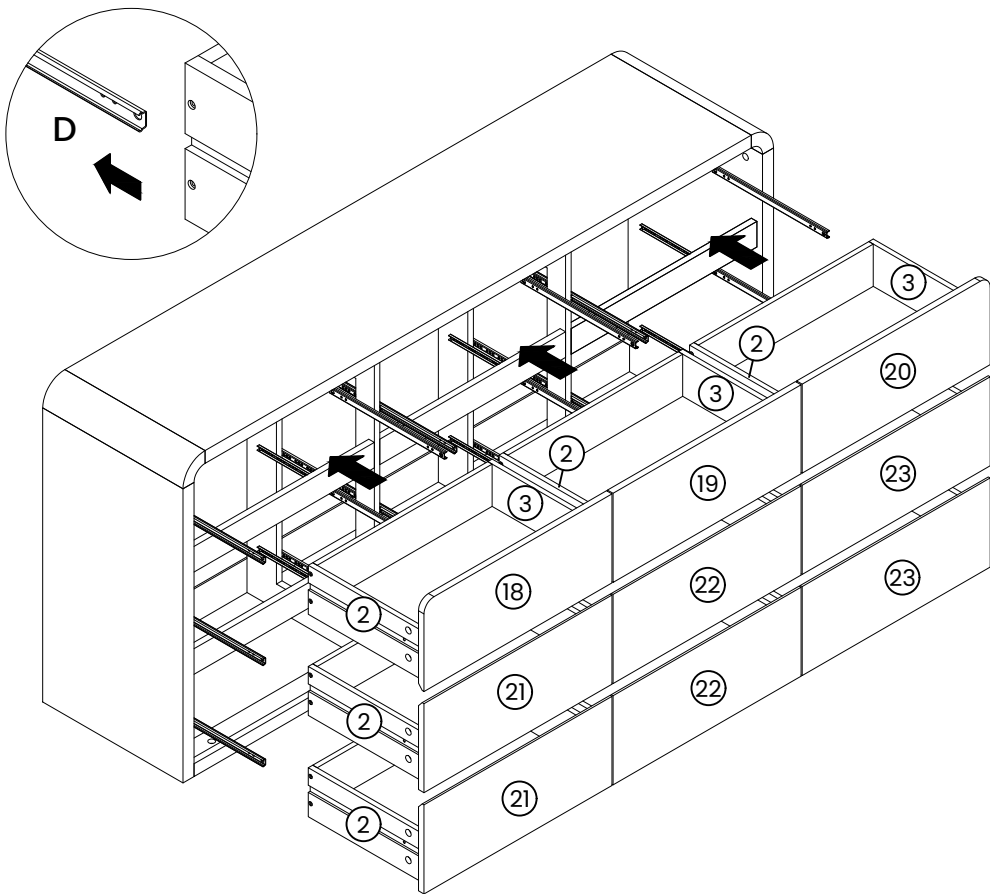


Note:


You may need patience to get a perfect smooth slide of drawer experience, and we appreciate your patience.
Asking for a second person to assist you will simplify the process.

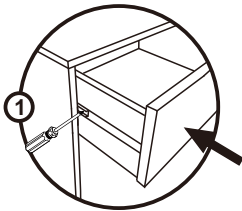


1.Align Components: Position the groove on the drawer side to match the rail profile. Insert a precision tool (e.g., screwdriver tip) into the outermost hole of the slide rail. Ensure both sides are aligned symmetrically.

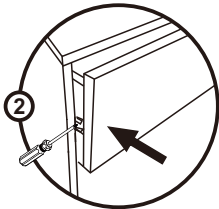

2.Slide Drawer Inward: Gently push the drawer into the cabinet until slide come up against drawer front. This step needs to be done simultaneously for both sides.

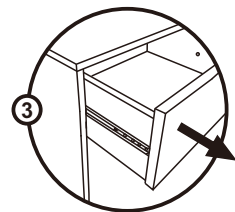


3.Secure & Adjust: While maintaining pressure on the tool, slowly pull the drawer outward until slide can not be moved.

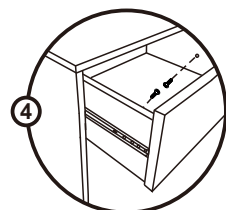

4.Finalize Installation: Locate the pre-drilled mounting holes where the rails meet the drawer sides. Securely tighten all screws on both sides.

Step 30 / 30

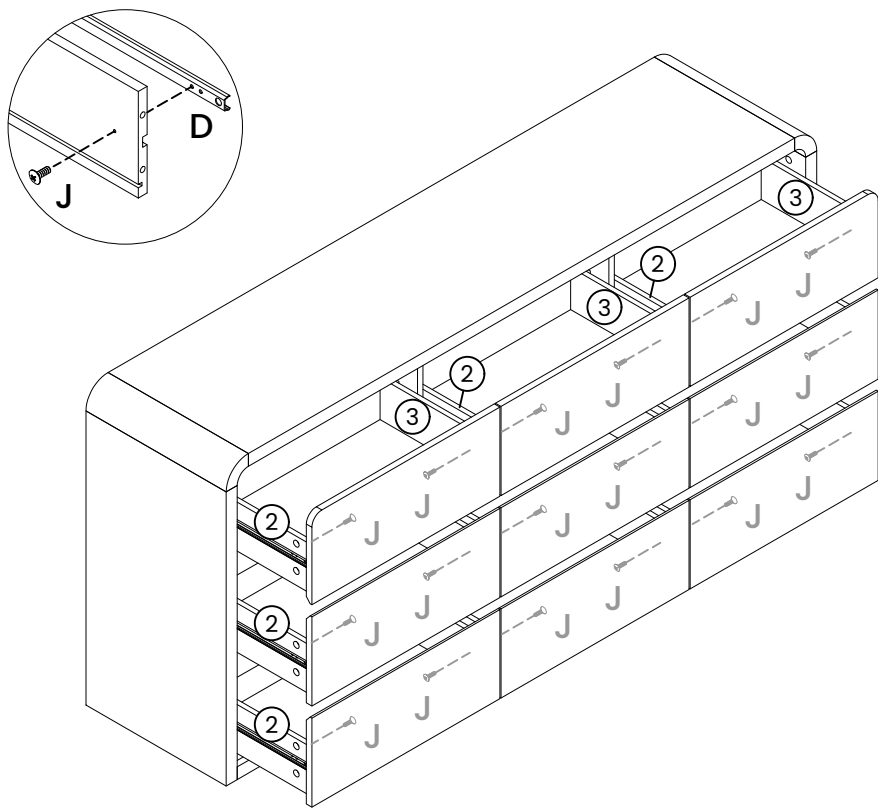

J  x18

Note:

Thank you for choosing us.
We appreciate your business
and hope you enjoy your new product.

