


Installation Step

clips*4

foam strip*2

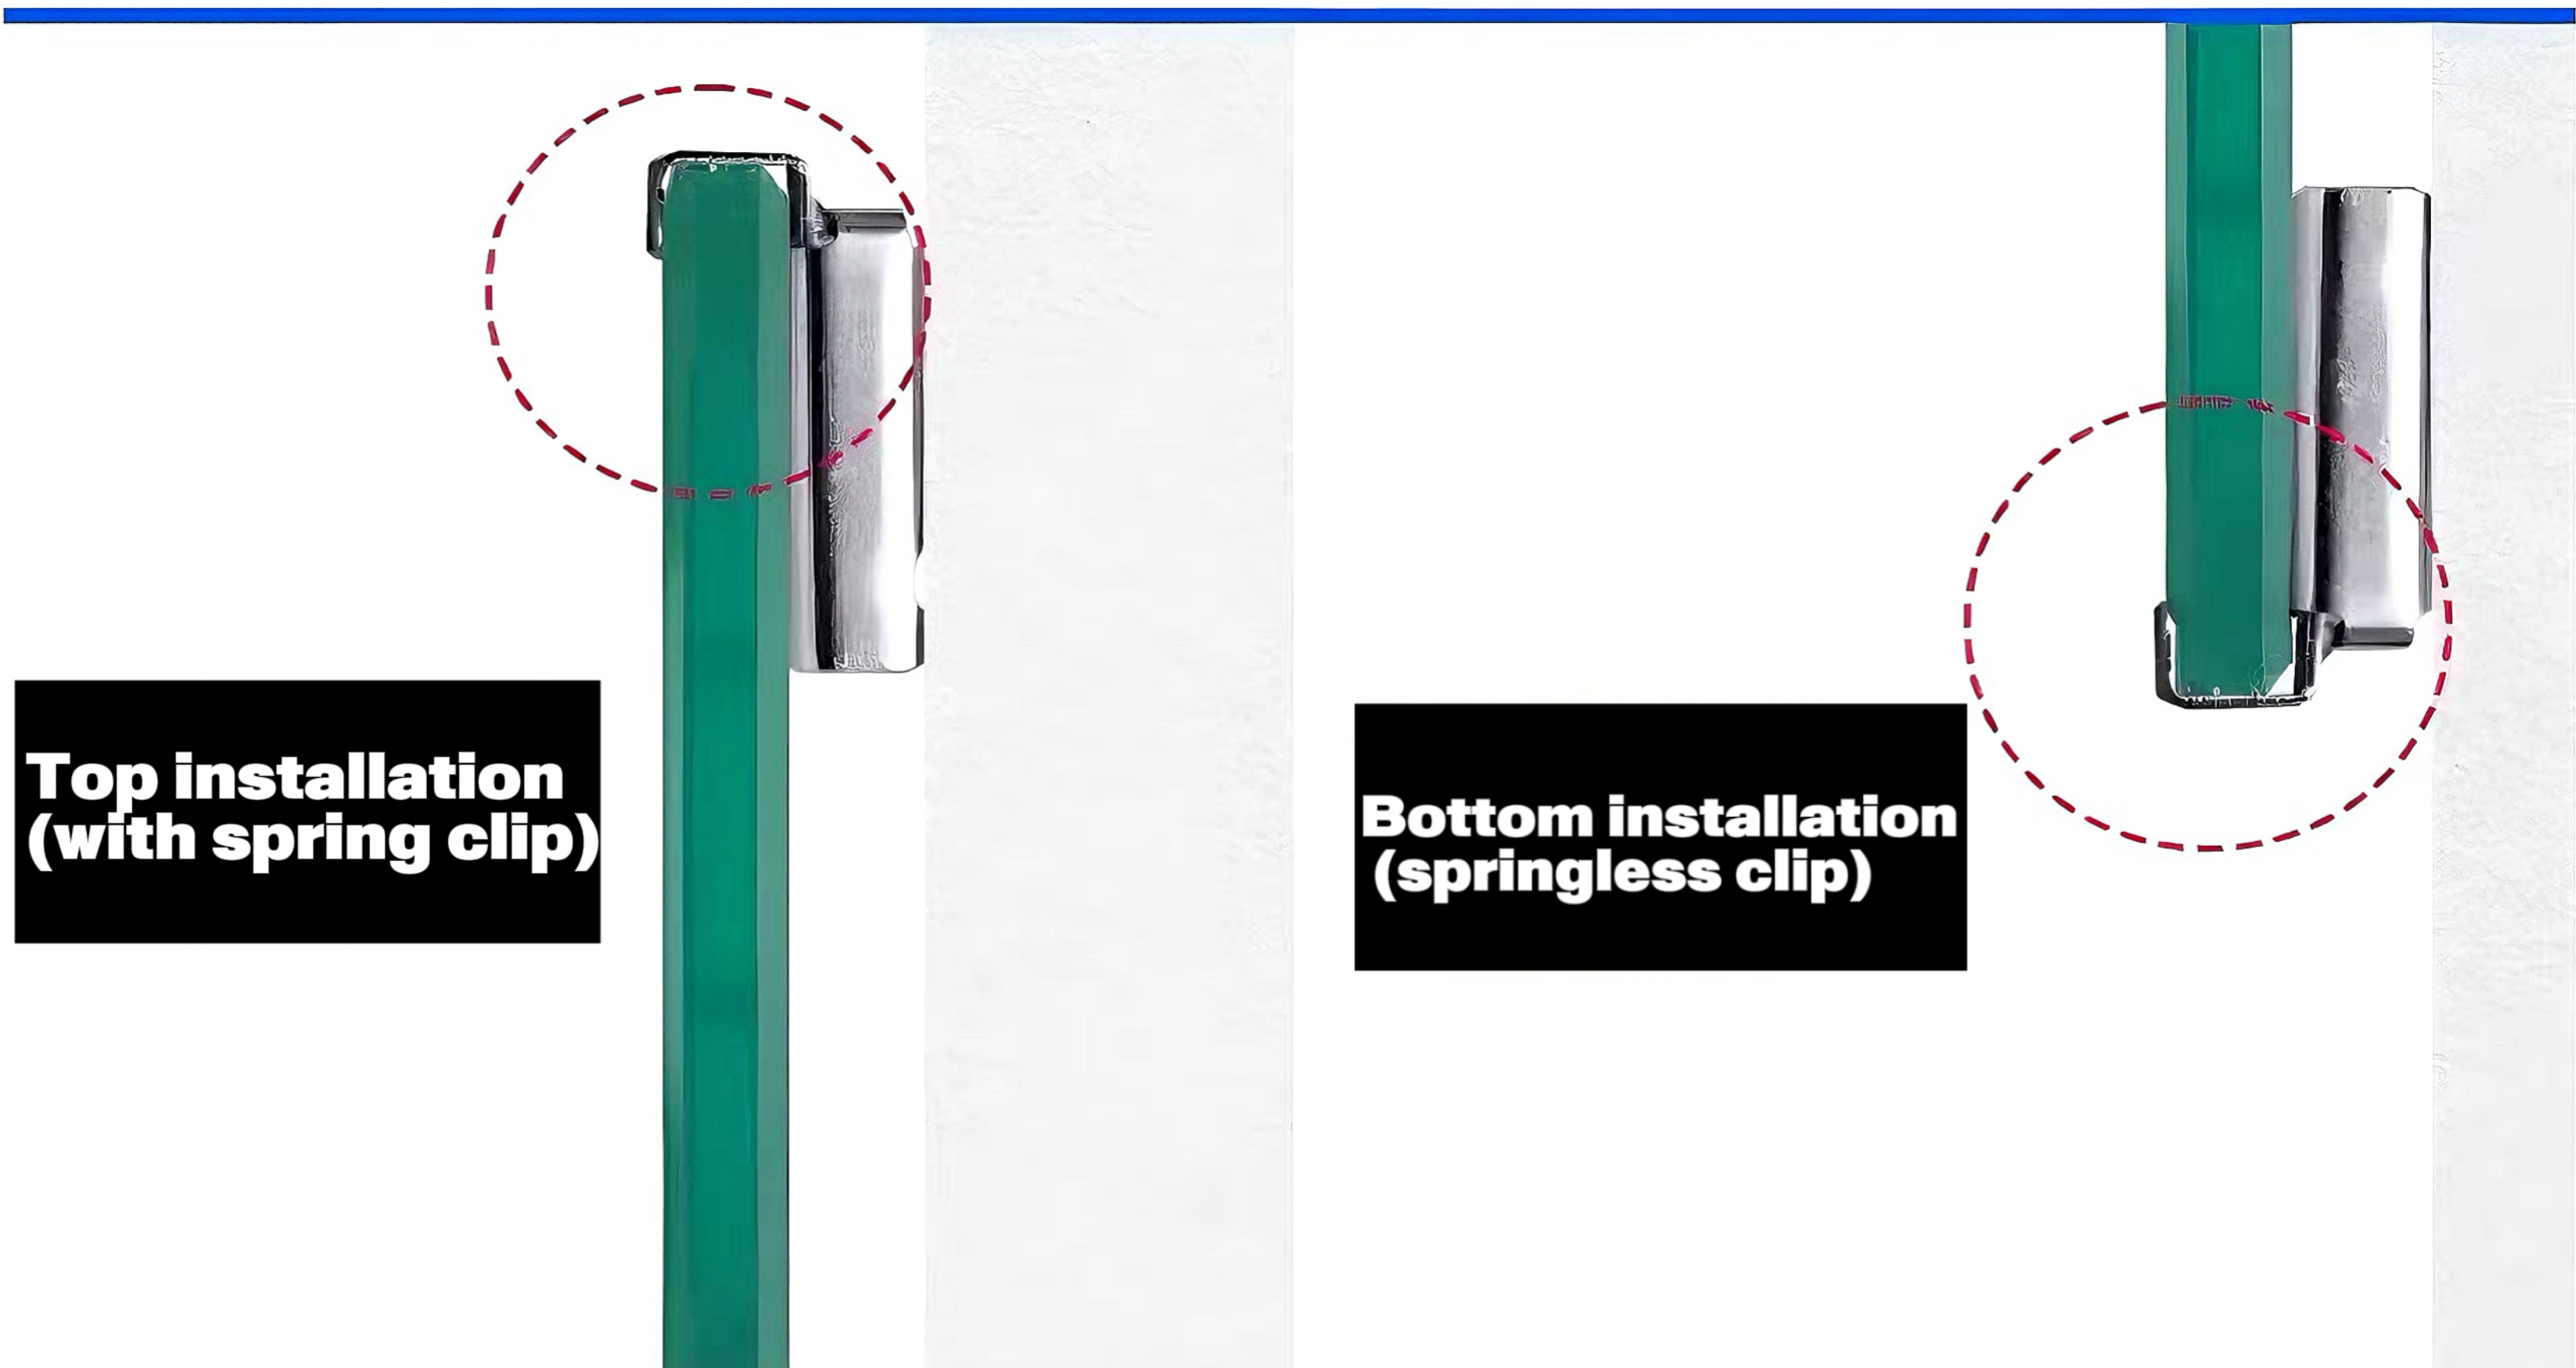


1. Mark the wall at the drilling positions indicated in the instruction manual.
2. Drill holes at the marked positions with an electric drill, then insert expansion anchors.
3. Secure the four clips onto the wall. (Note: The upper clips are with springs; the lower clips are without springs).
4. Attach the foam strip to the designated position (5cm from the edge) and remove the adhesive backing.
5. Slot the bottom edge of the mirror into the lower clips. Push up the upper clips, press the mirror against the wall, then release the upper clips to lock onto the top edge of the mirror.

SUITABLE
WALL



Smooth ceramic tile

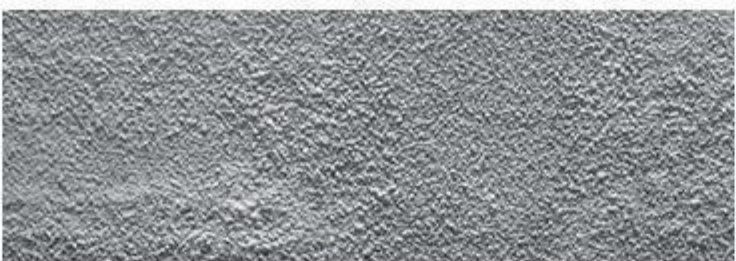

Concave and convex ceramic tile



Smooth marble




Concave and convex marble



Hard glass




Smooth metal

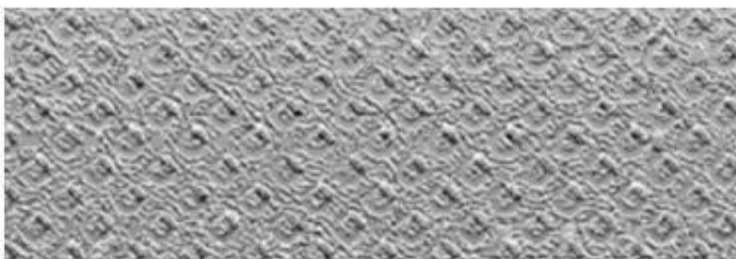

Concave and convex metal



Hard wood wall

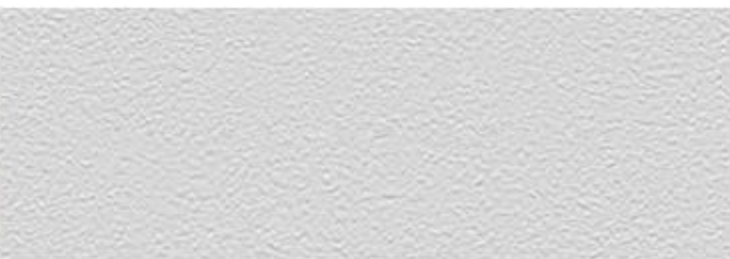


Latex paint wall



Concrete wall surface

Reference Drawing for Mirror Bracket Mounting Drilling

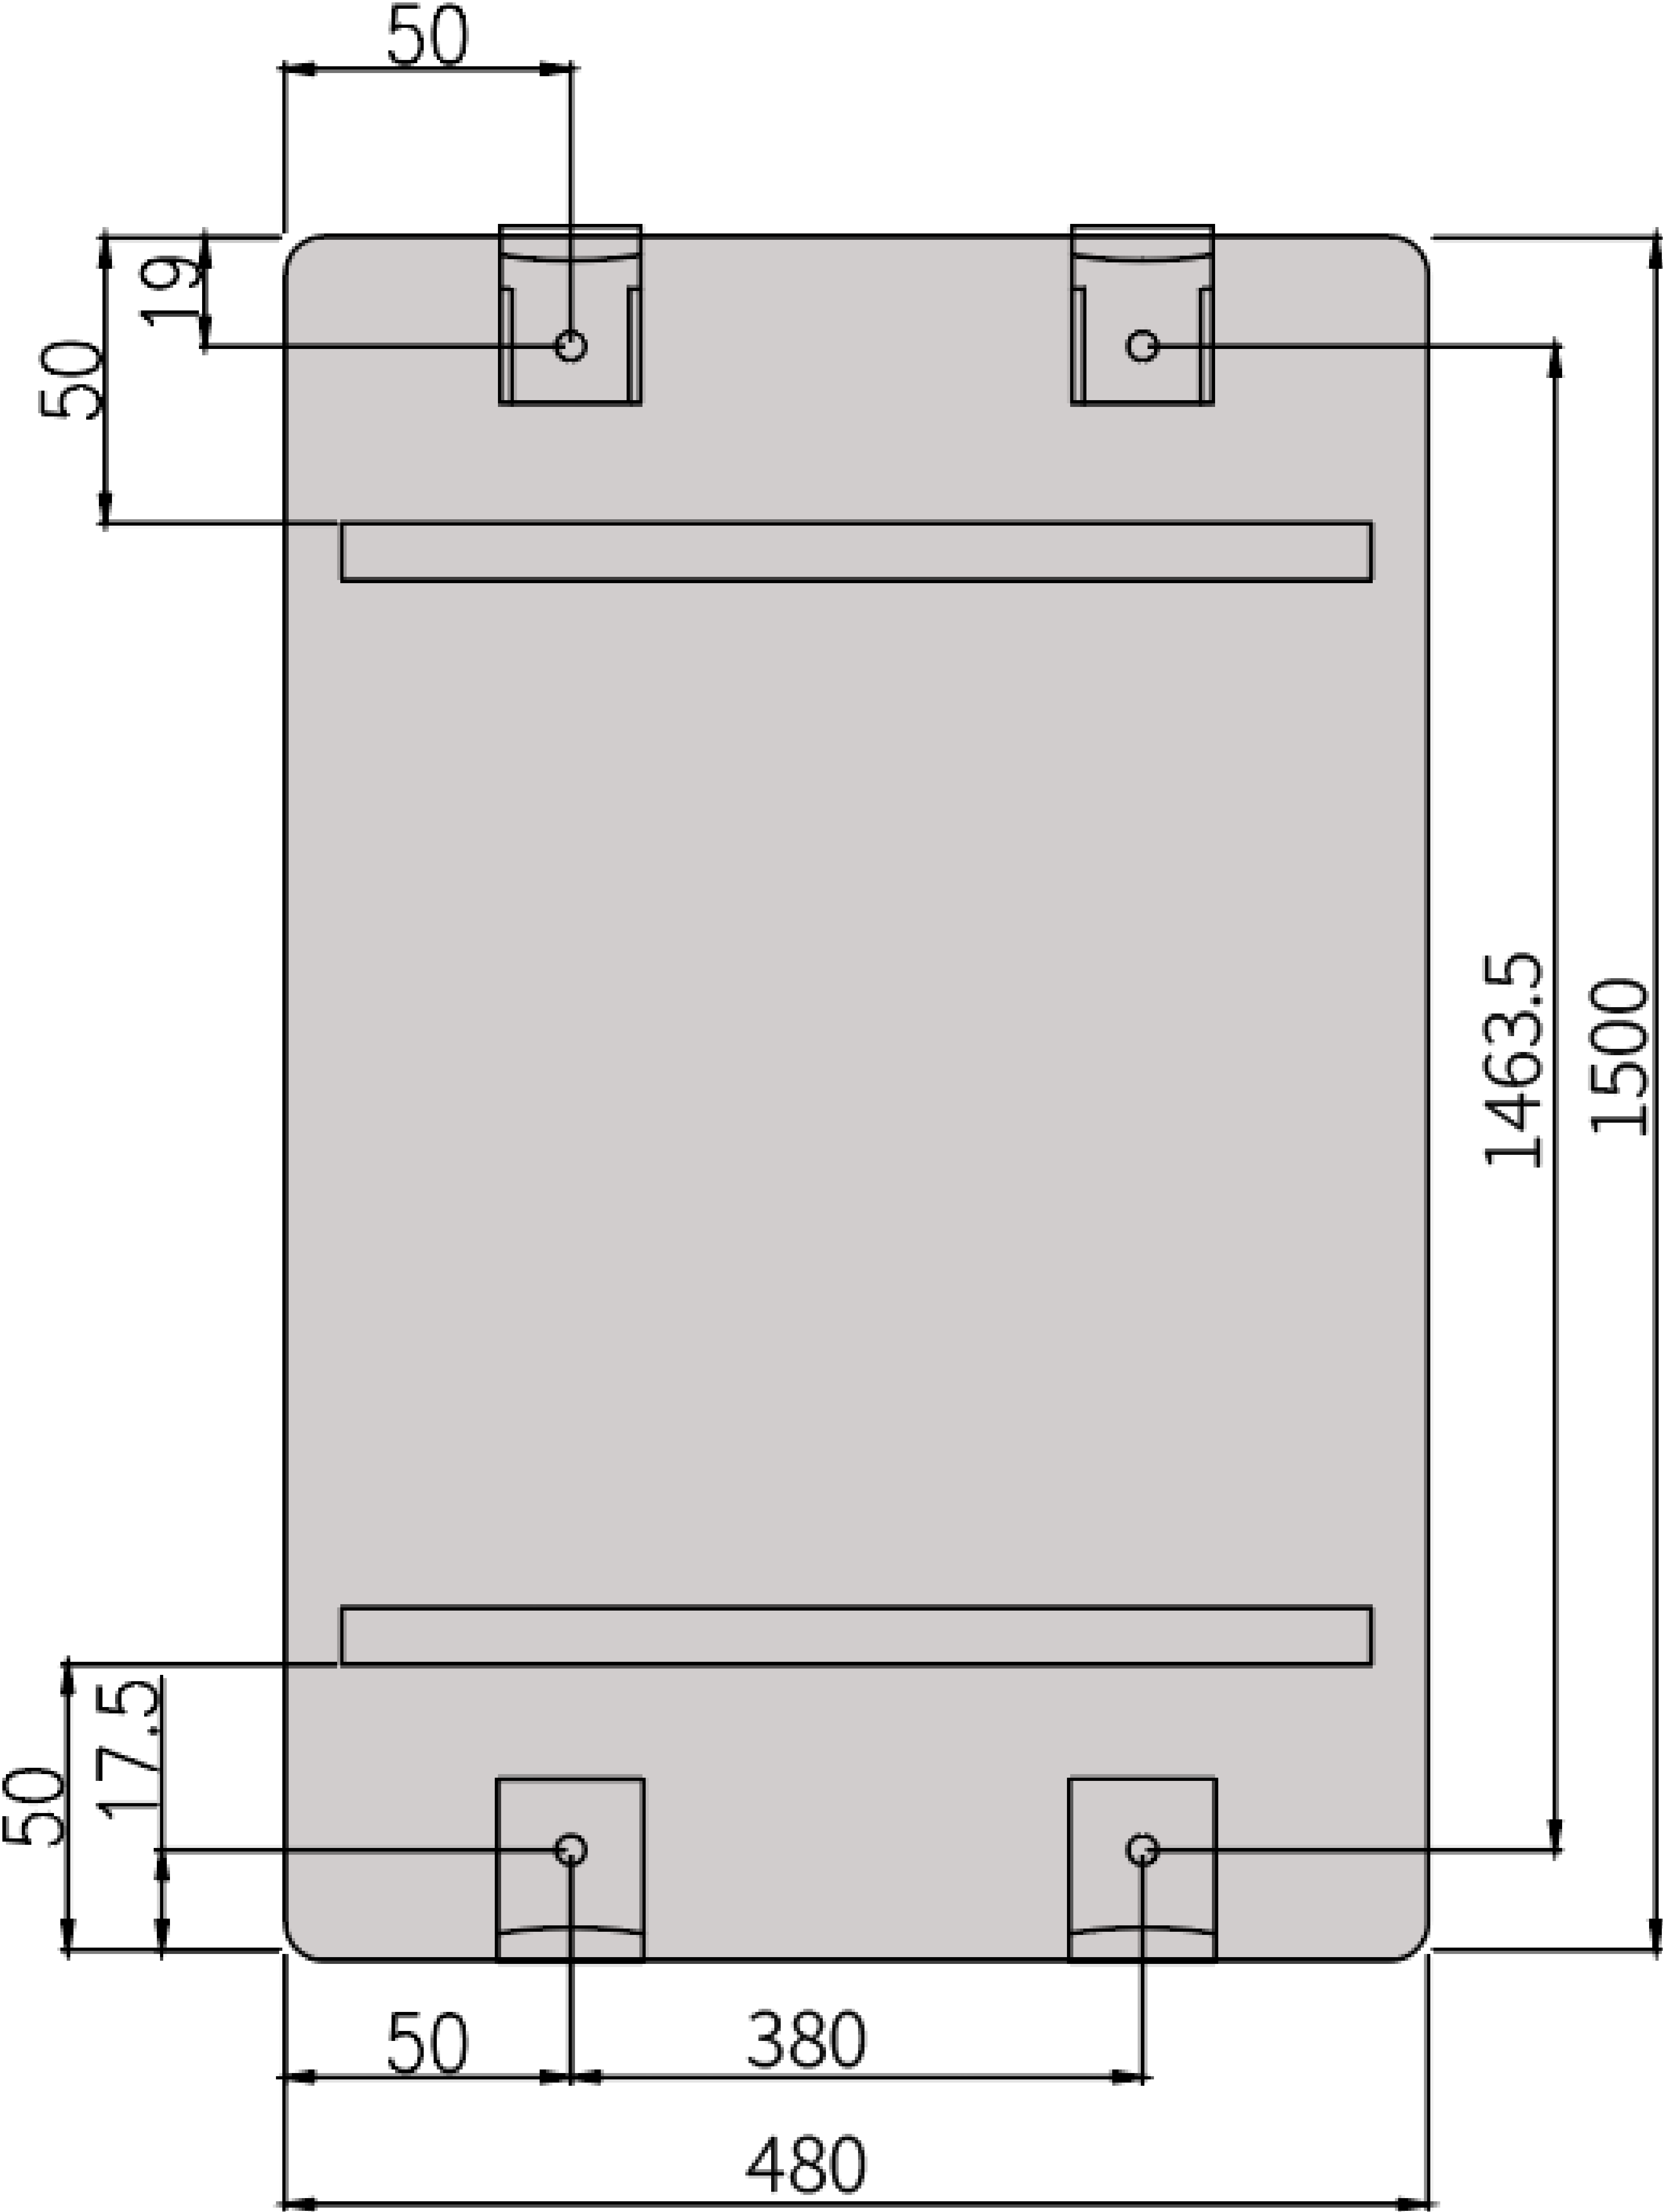


Unit:mm


INSTALLATION INSTRUCTIONS

WALL HANGING (DRILLING REQUIRED) INSTALLATION PROCEDURE


Tools Needed: Hanging Piece A*2 Glass Glue*1
Screw Mounting Kit Balance Pad*2

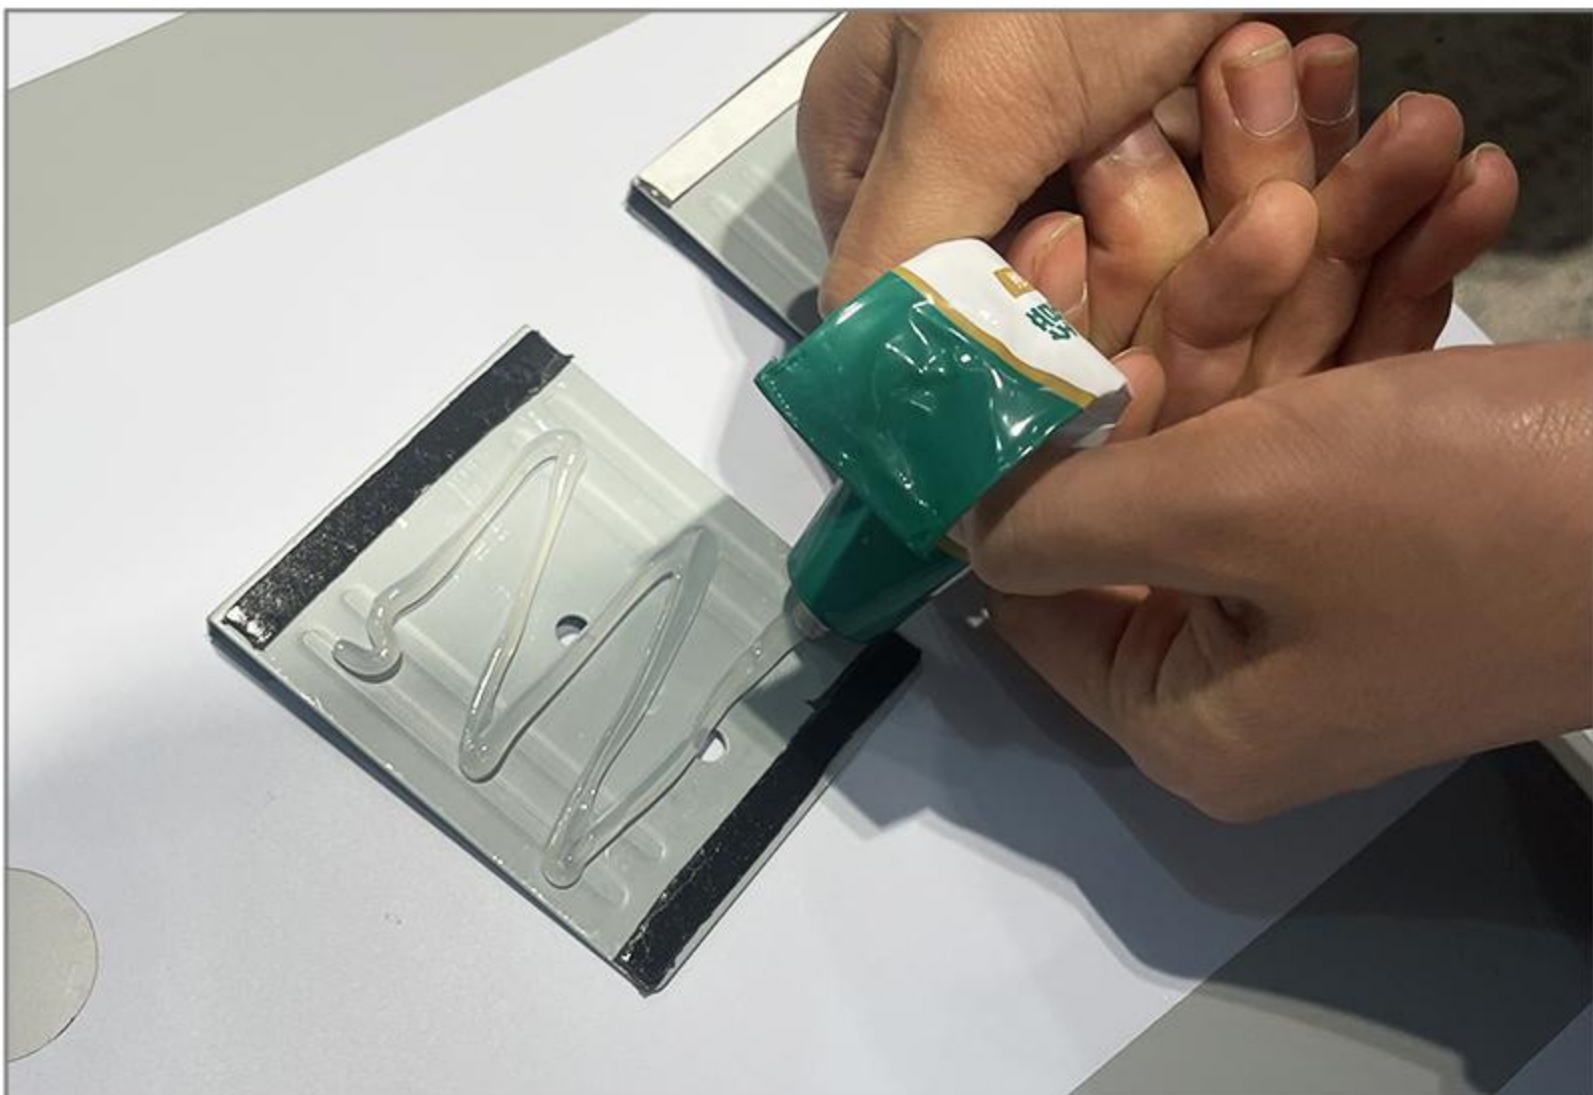


1.Squeeze an appropriate amount of glass glue on the back of 2 pieces of hanging piece A and fix them in 2 boxes above the back of the mirror.

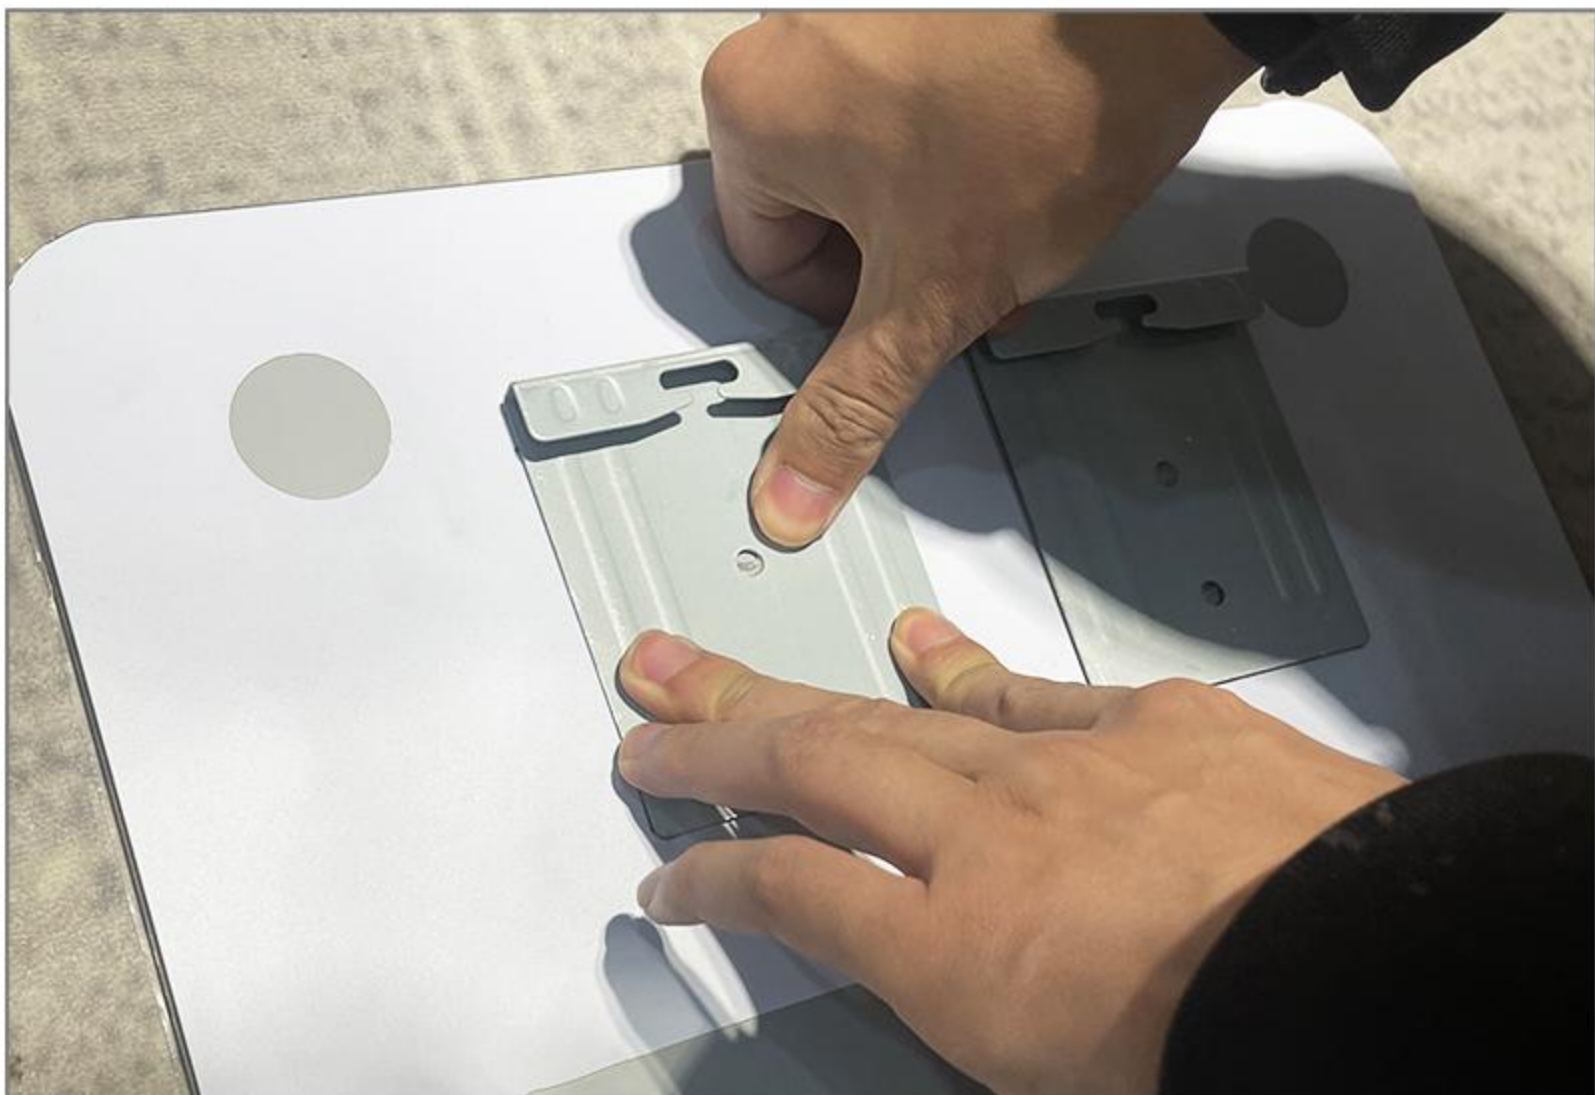

2.Fix the hanging piece A on the position just covered with glue.
Note: Wait 3-5 days before proceeding to the next step. (Glue needs to set)

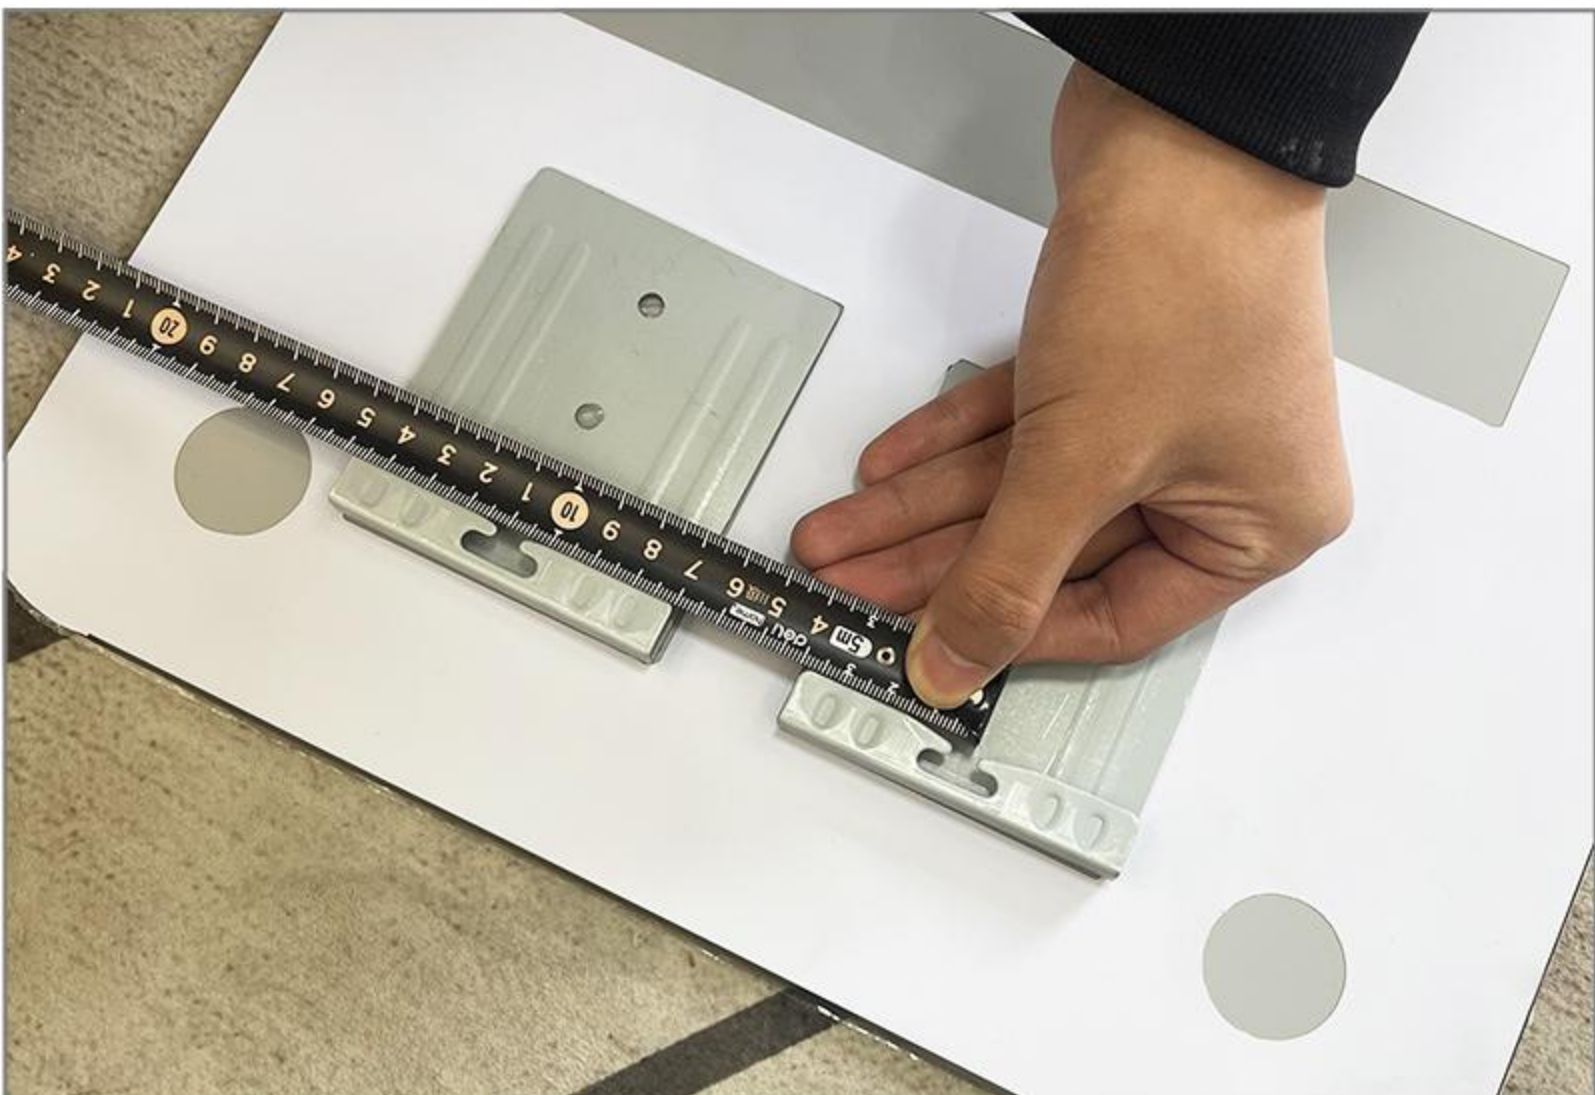

3.Measure the hole distance between the hanging plate A.

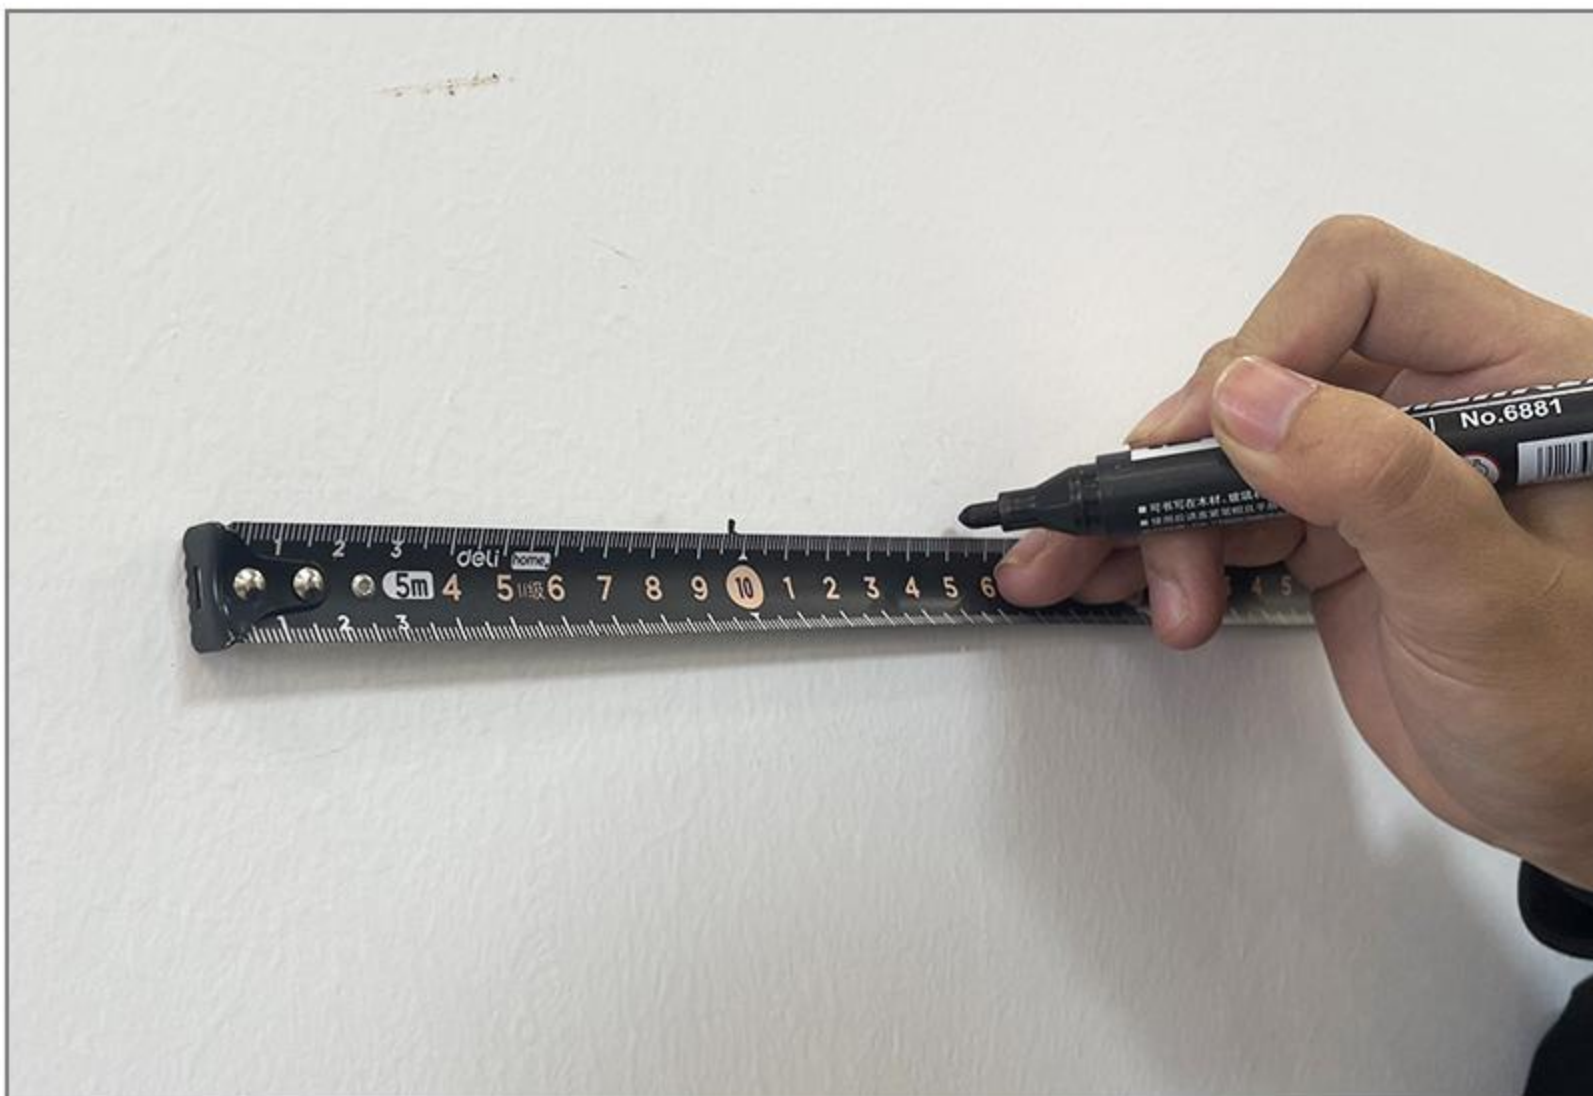

4.Mark the hole spacing on the wall.



5.Drill holes with electric drill, install expansion screw tube and screw in.



6.Put the balance pad on each side below the back of the mirror, hang up the mirror.

SUITABLE
WALL



Smooth ceramic tile



Concave and convex ceramic tile



Hard wood wall



Latex paint wall



Concrete wall surface

INSTALLATION INSTRUCTIONS

**⚠ GLASS GLUE MUST BE USED,
OTHERWISE THE MIRROR WILL FALL OFF**

PASTE INSTALLATION PROCEDURE

Tools Needed: Glass Glue*1 Double-sided Adhesive* 6



1.Attach 6 pieces of double-sided tape to the positioning frame of the strip on the back of the mirror.



2.Open glass glue.



3.Squeeze appropriate amount of glass glue on the round anchor point, **glass tape full of dots higher than double-sided tape.**



4.As shown in the figure



5.Tear off the top layer of double-sided tape.




6.Stick the mirror on the wall.

**SUITABLE
WALL**



Smooth ceramic tile

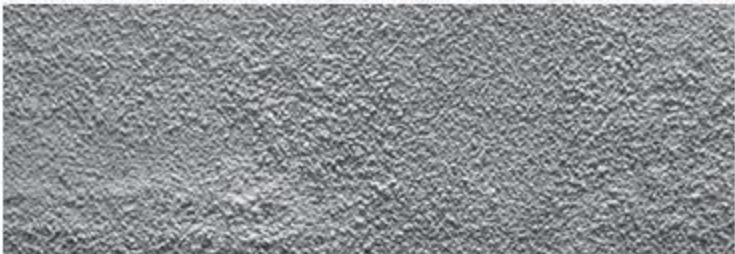


Concave and convex ceramic tile



Smooth marble




Concave and convex marble

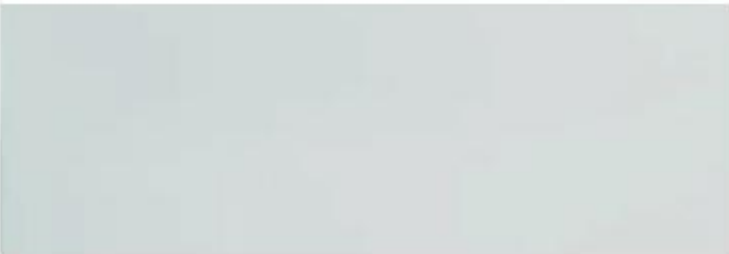

Hard glass




Smooth metal

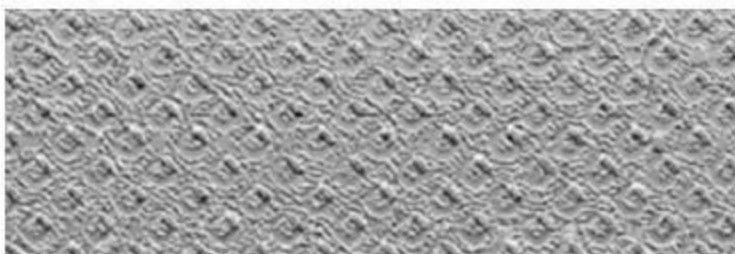

Concave and convex metal



Hard wood wall

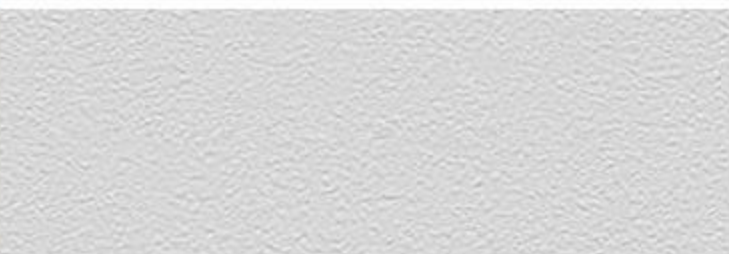

Latex paint wall



Concrete wall surface