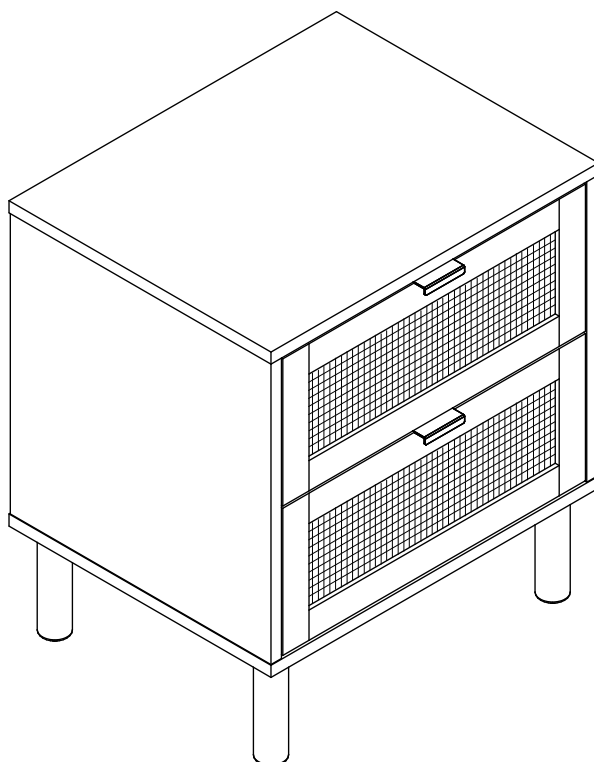



ASSEMBLY INSTRUCTIONS

Sango®











PRODUCT NAME : ORRE 2 DRAWER NIGHTSTAND - BLACK
DIMENSIONS : 19.69"W x 15.75"D x 22.6"H
ITEM NO. : 7238BB004ACL09







**Note:**

- Please make sure all parts and proper quantities are included.
- Do not use power tools. We recommend you hand-tighten screws.
- Use care not to overtighten.

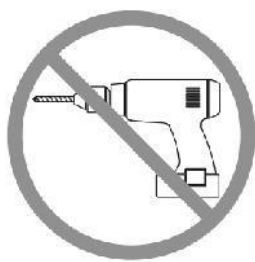

1. Check for damaged or missing parts . Call 1-800-696-8446 to order missing supplies.
2. Use a soft surface or the carton as a working surface to prevent damage during assembly.
3. It is recommended to have 2 adults on hand for assembly.
4. Gather all tools prior to assembly.
5. **WARNING!** When included, anti-tipping hardware **MUST** be installed for your safety.

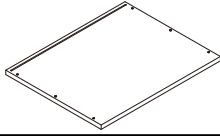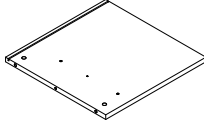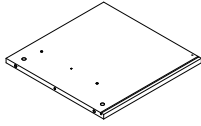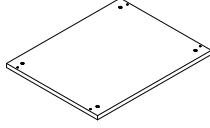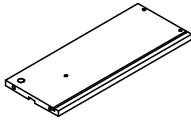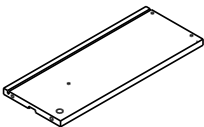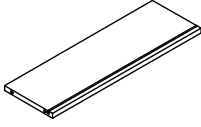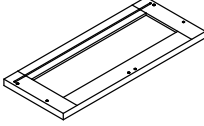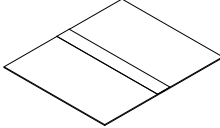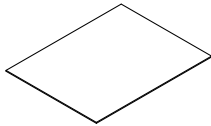
PARTS LIST :			QTY
A	Top panel		1pc
B	Left side panel		1pc
C	Right side panel		1pc
D	Bottom panel		1pc
E	Drawer left side		2pcs
F	Drawer right side		2pcs
G	Drawer back side		2pcs
H	Drawer front		2pcs
I	Back panel		1pc
J	Drawer bottom		2pcs

HARDWARE :			QTY
1	Cam Bolt		8pcs
2	Cam Lock		8pcs
3	Wooden Dowel Ø8x25mm		10pcs
4	Leg Ø38x140mm		4pcs
5	Leveler		4pcs
6	Slider		4pcs
7	Screw for Slider(outside)		4pcs
8	Screw for Slider(inside)		4pcs
9	Handle		2pcs
10	Screw for Handle		4pcs
11	Screw for Bottom		4pcs
12	Screw for Drawer Back		8pcs
13	Plastic Wedge Bracket		4pcs
14	Screw for Plastic Wedge Fixture		4pcs
15	Glue		1pc
16	Cover Sticker		4pcs


how to use cam lock system

.....


1.

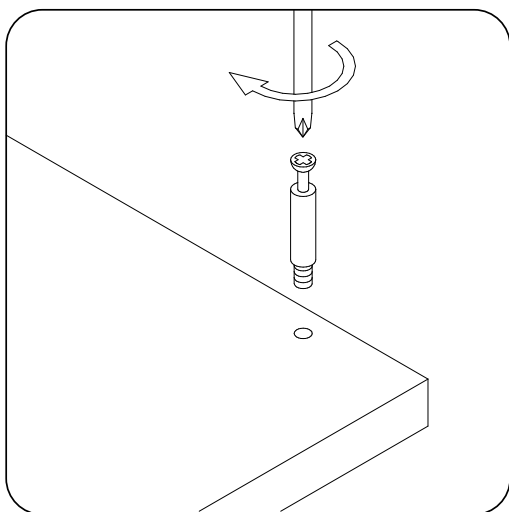


2.

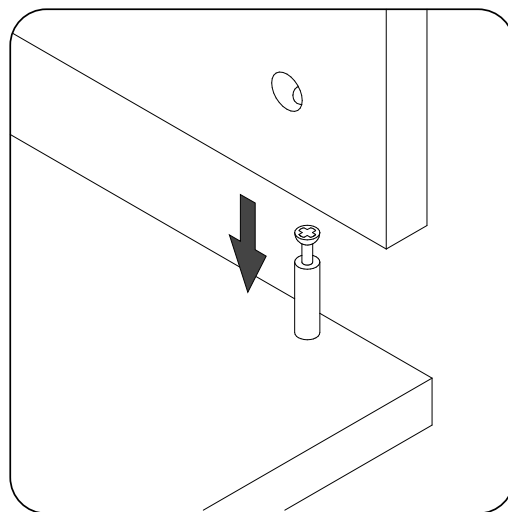


3.

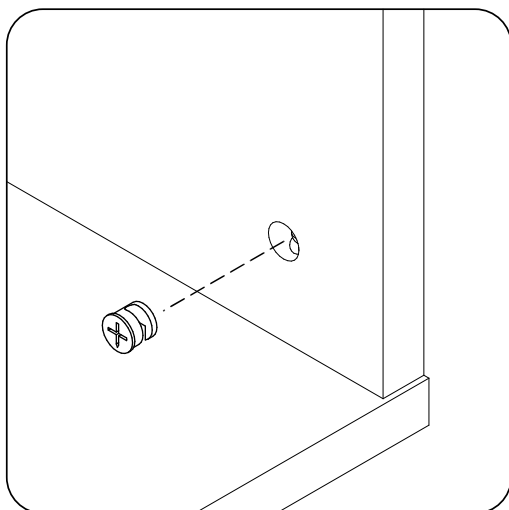

4.

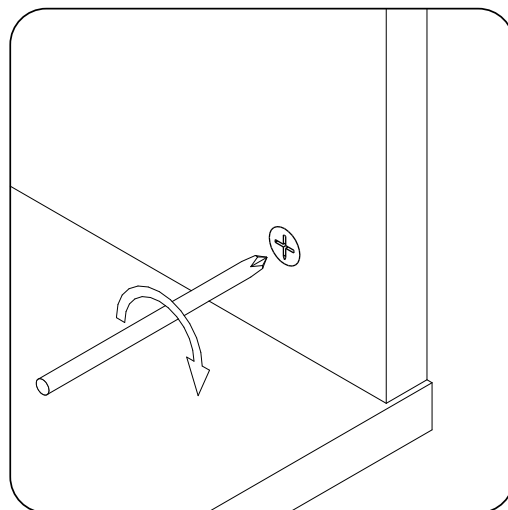


5.

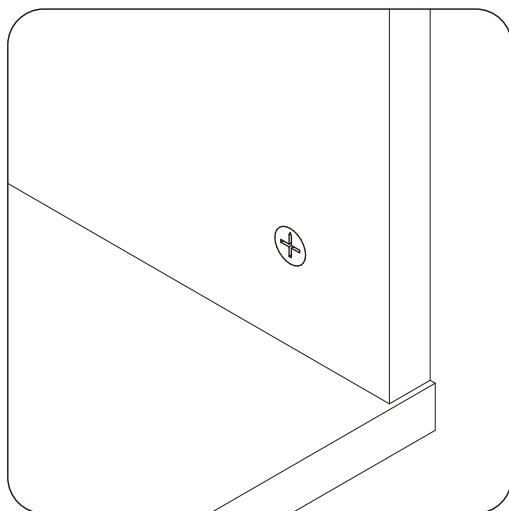

STEP-1

1 x4





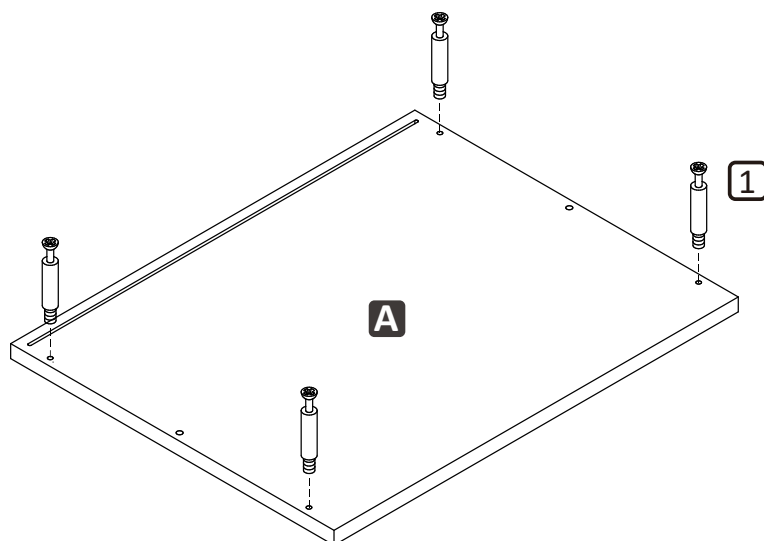


STEP-2

3 x6

6 x4





7 x4

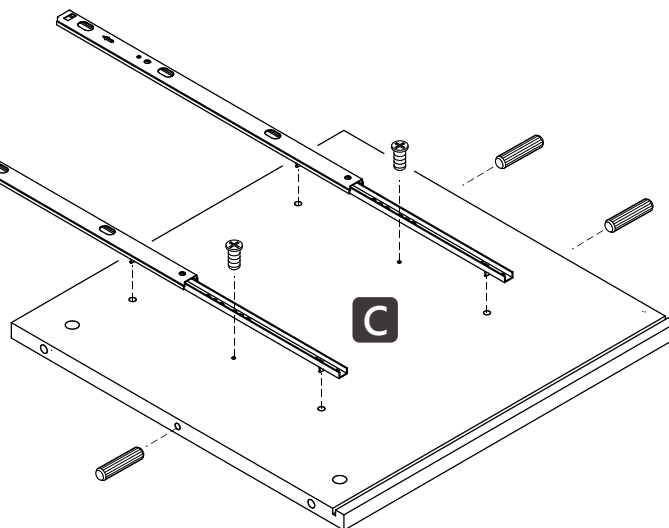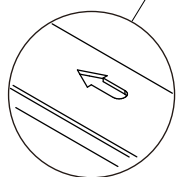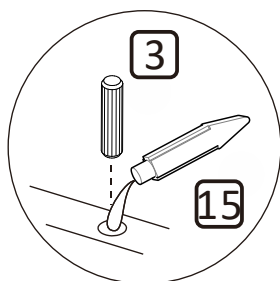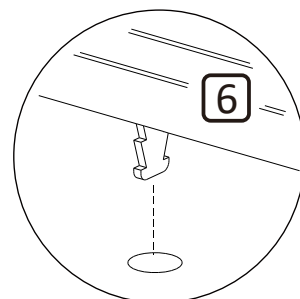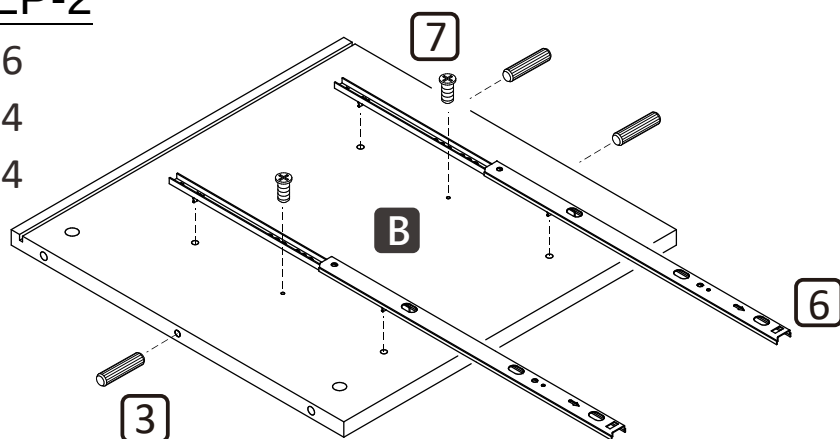

STEP-3

1 x4

3 x4

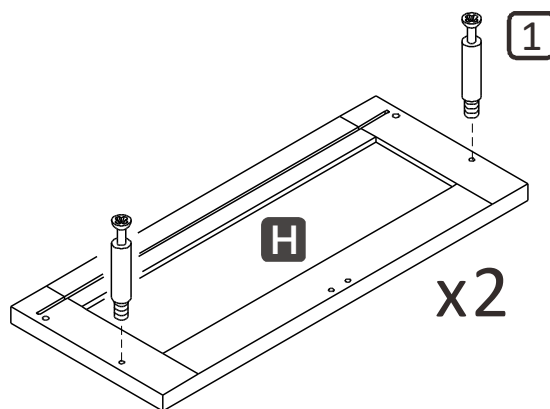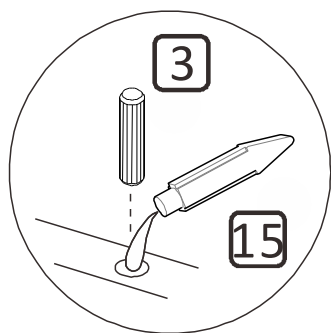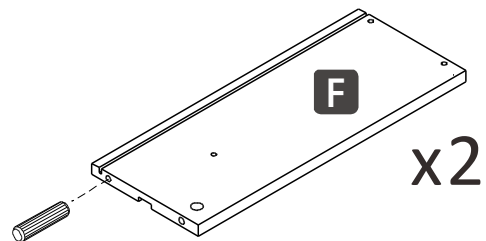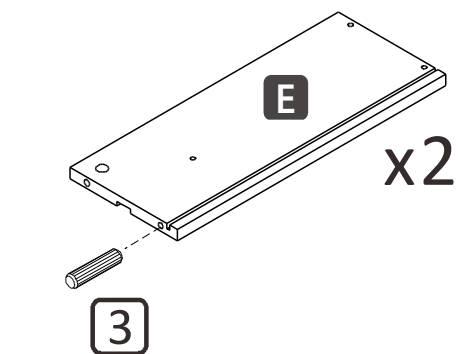




STEP-4




2 x4

12 x8

9 x2

10 x4

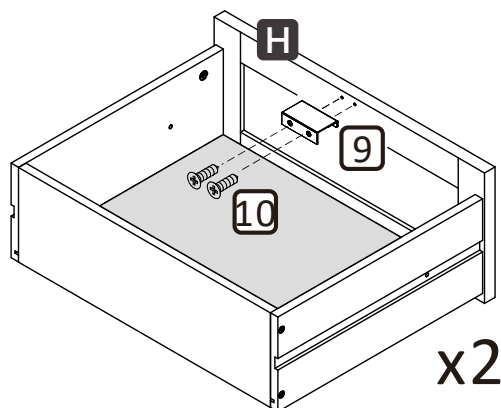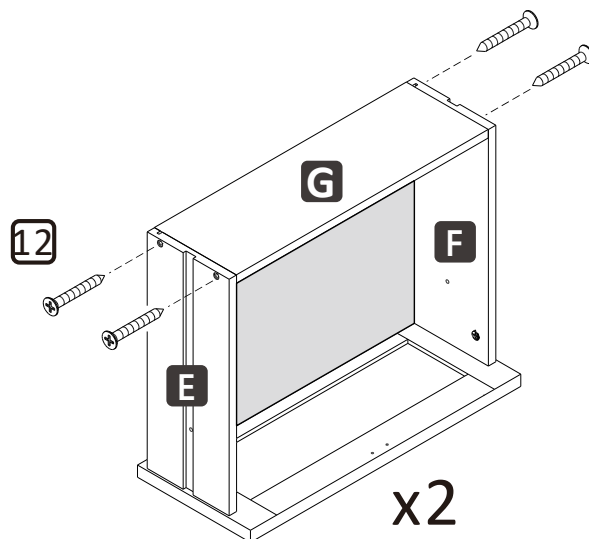
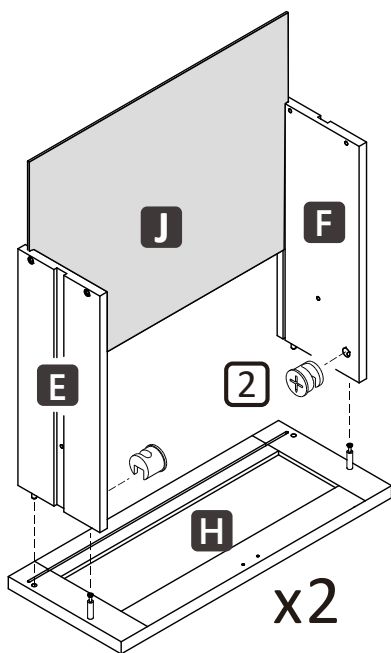


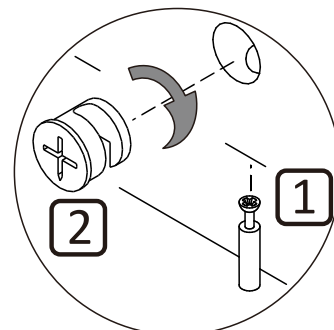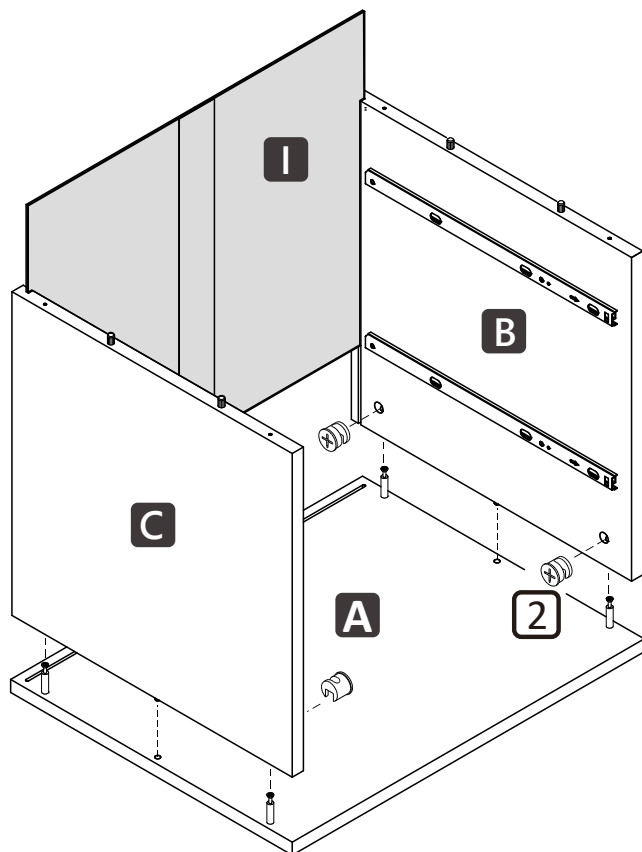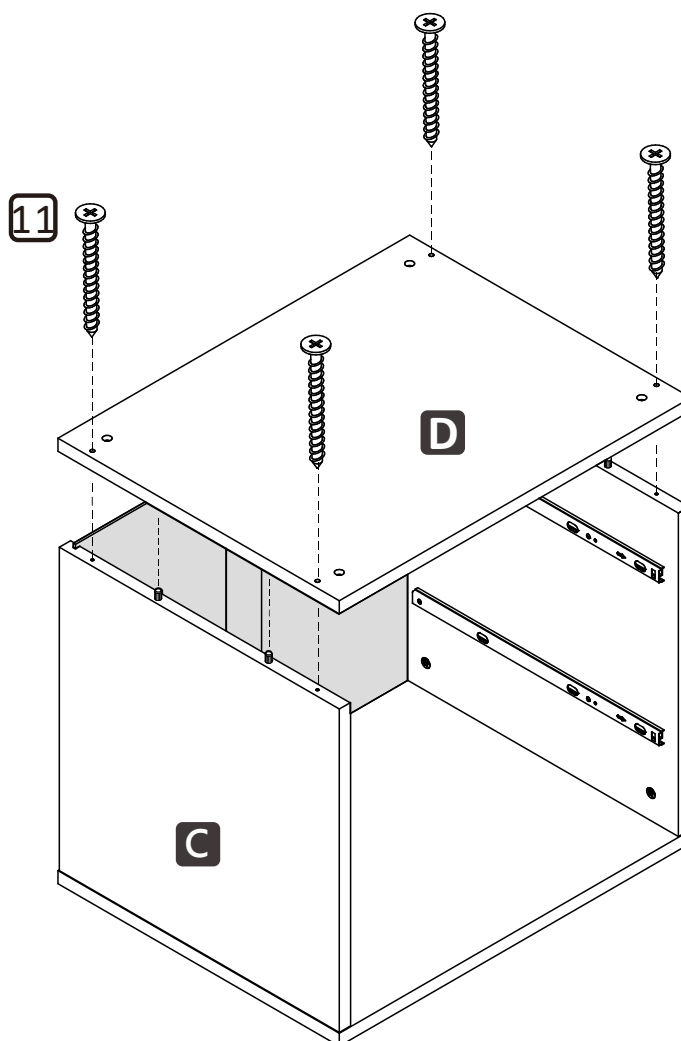STEP-5**2** x4**STEP-6****11** x4

STEP-7


4 x4



5 x4

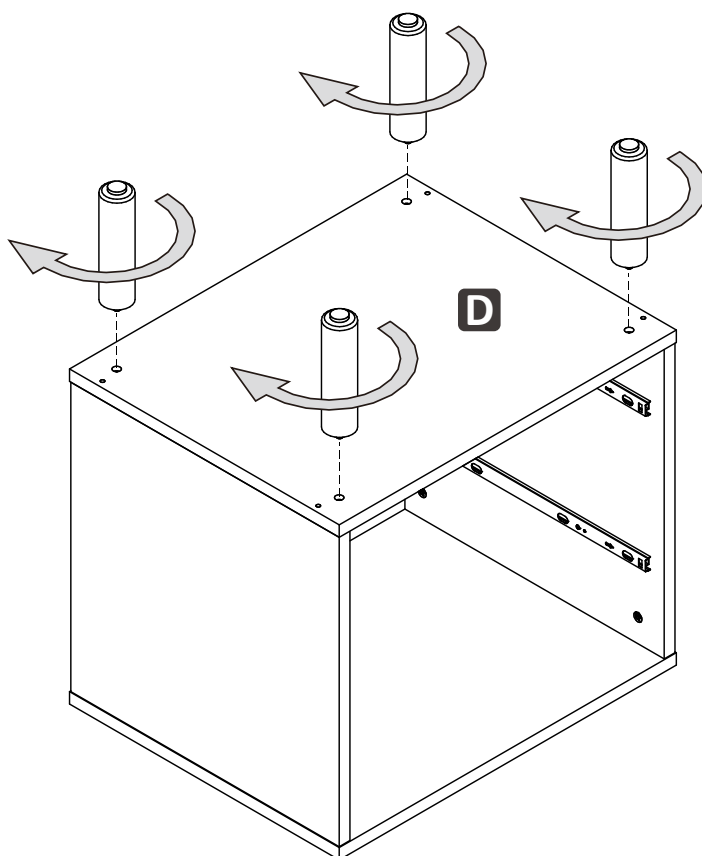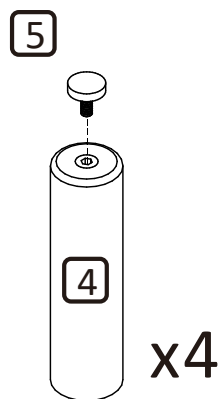



STEP-8

16 x4

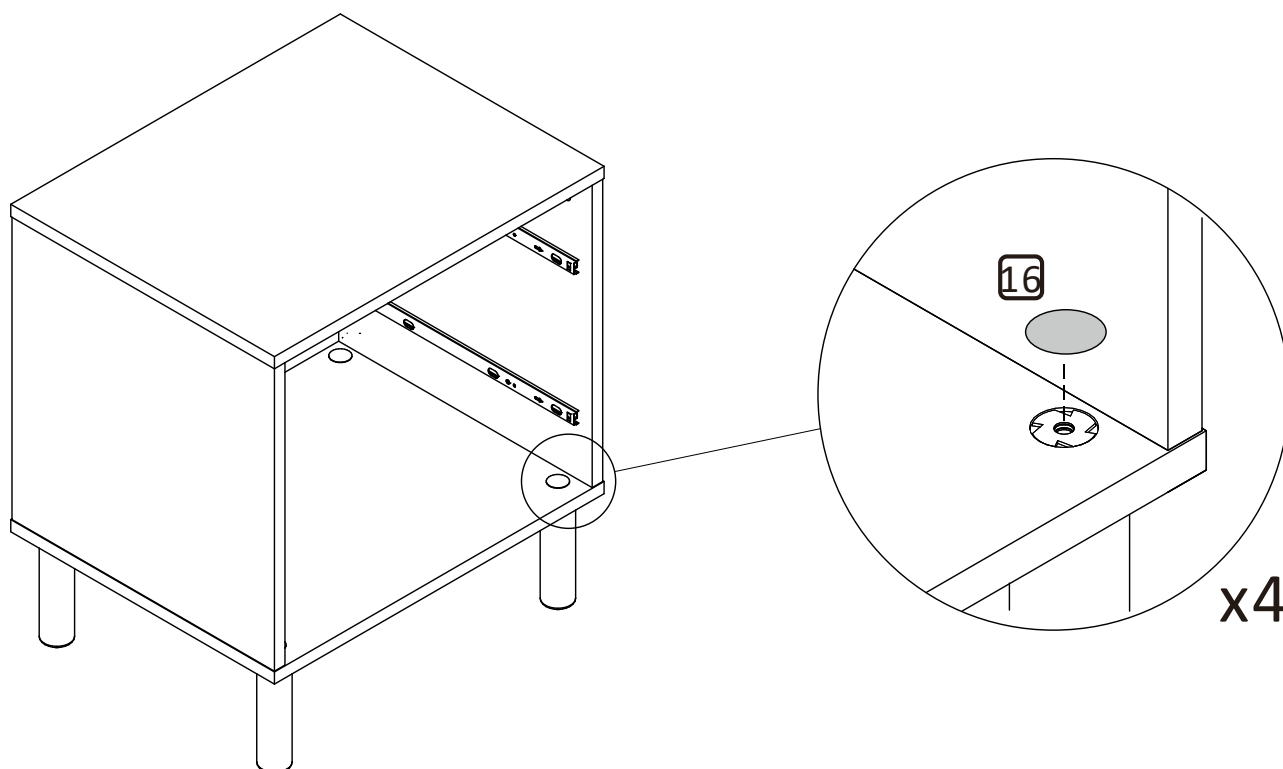

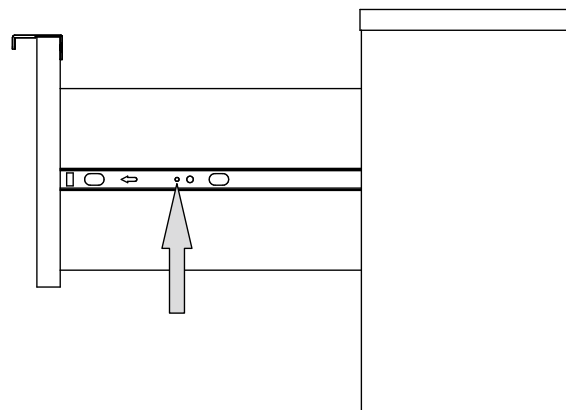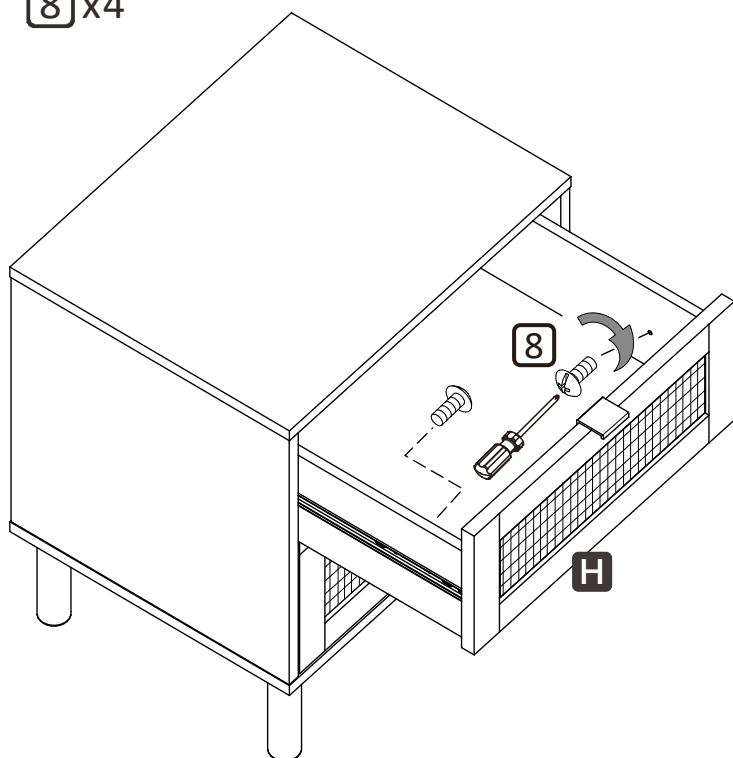STEP-9**8** x4

Fully extend drawer rails then align the rail's smallest hole to the drawer slide panel's holes. Secure with bolts.

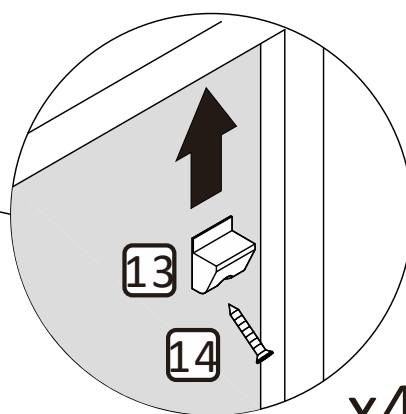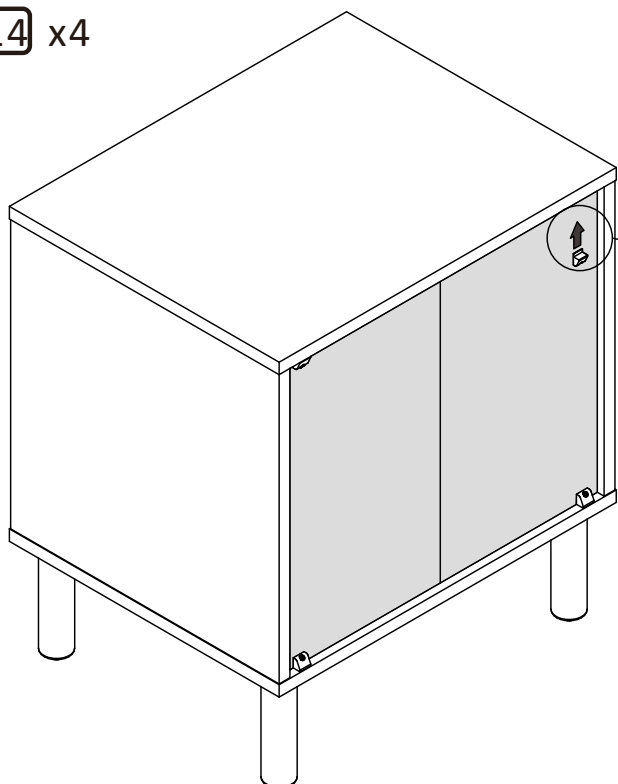STEP-10**13** x4**14** x4**x4**

Lock plastic wedge bracket on 4 corners of the back panel.