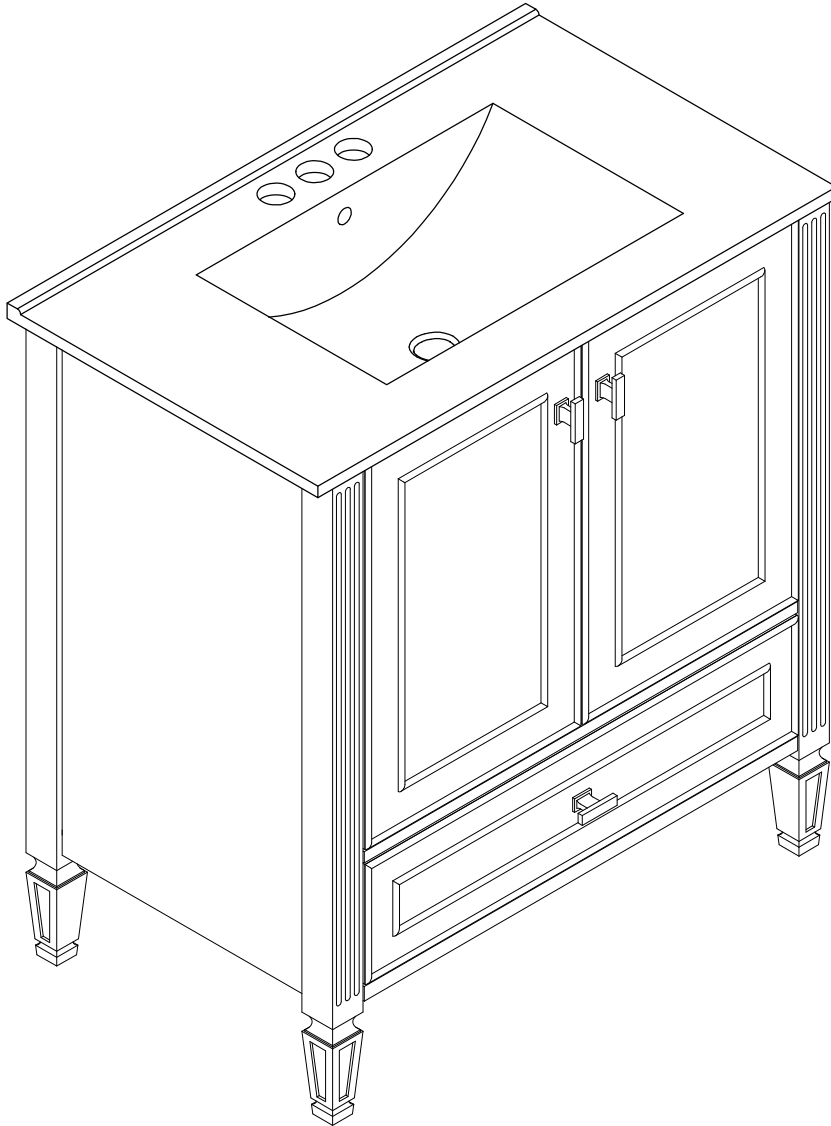


ASSEMBLY INSTRUCTIONS

30INCH BATH VANITY (COMBO)

SKU: N759P448335

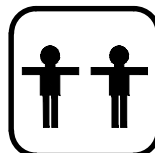
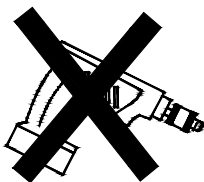


Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts which may have come loose inside the carton during shipment. Separate, identify and count all parts and hardware.


Compare with the parts list to be sure all parts are present.

"DO NOT TIGHTEN SCREWS UNTIL COMPLETELY ASSEMBLED"



* Use of power tool to assemble this product will invalidate any claim and damage this product making unsafe!!!
* Please assemble on a clean soft surface to avoid damage.




+

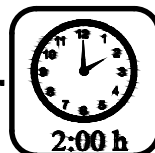

Tools Required



(Not Included)



(Not Included)

IMPORTANT:
PLEASE READ INSTRUCTION BEFORE STARTING THE ASSEMBLY

Before Installation







Important - Please read these instructions fully before starting assembly

Thank you for purchasing this quality product. Be sure to check all packing materials carefully for small parts, which may have come loose inside the carton during shipment. Identify and count all items according to the PARTS LIST and/or HARDWARE LIST shown below. Check you have all the components and tools listed on the following pages.


- We recommend that you assemble this product with the assistance of another person; this will make the assembly easier, and will help eliminate damage to the product or injury to persons during assembly.
- Please do not over tighten screws or bolts until the assembly is completed.
- Keep children and animal away from the work area, small parts could choke if swallowed.
- Please put all parts on a non-abrasive floor before assembly, and follow the assembly steps to assemble your newly purchased product correctly and efficiently.

If you find that you have any trouble with assembly or missing or damaged parts please contact the seller.

Cam Lock Assembly Instructions





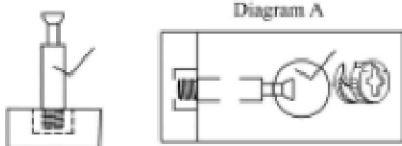
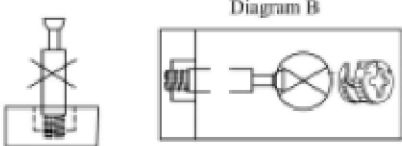
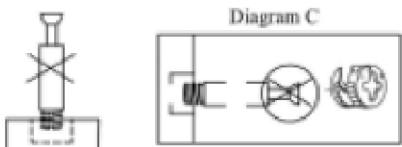

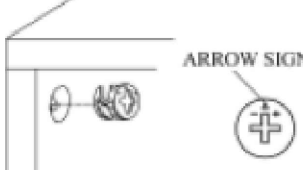
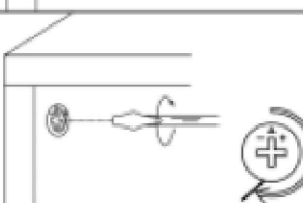
	Diagram A Insert Cam Bolt into hole as shown in diagram A.
	Diagram B Make sure not to insert the Cam Bolt: Too deep as shown in figure B as this will cause the Cam Lock to be misaligned and unable to interlock properly.
	Diagram C Also avoid inserting the Cam Bolt too close to the surface of the hole as shown in figure C, as this will cause the Cam Lock to be too loose, and not interlock properly.
	Connect the panels together.
	Insert the Cam Lock so the side opening fits over the head of the Cam Bolt.
	To tighten the Cam Lock, turn it clockwise on half a turn with a flat screwdriver. <i>*Do not use an automatic screwdriver as it may bend or break if too much power is imposed.</i>

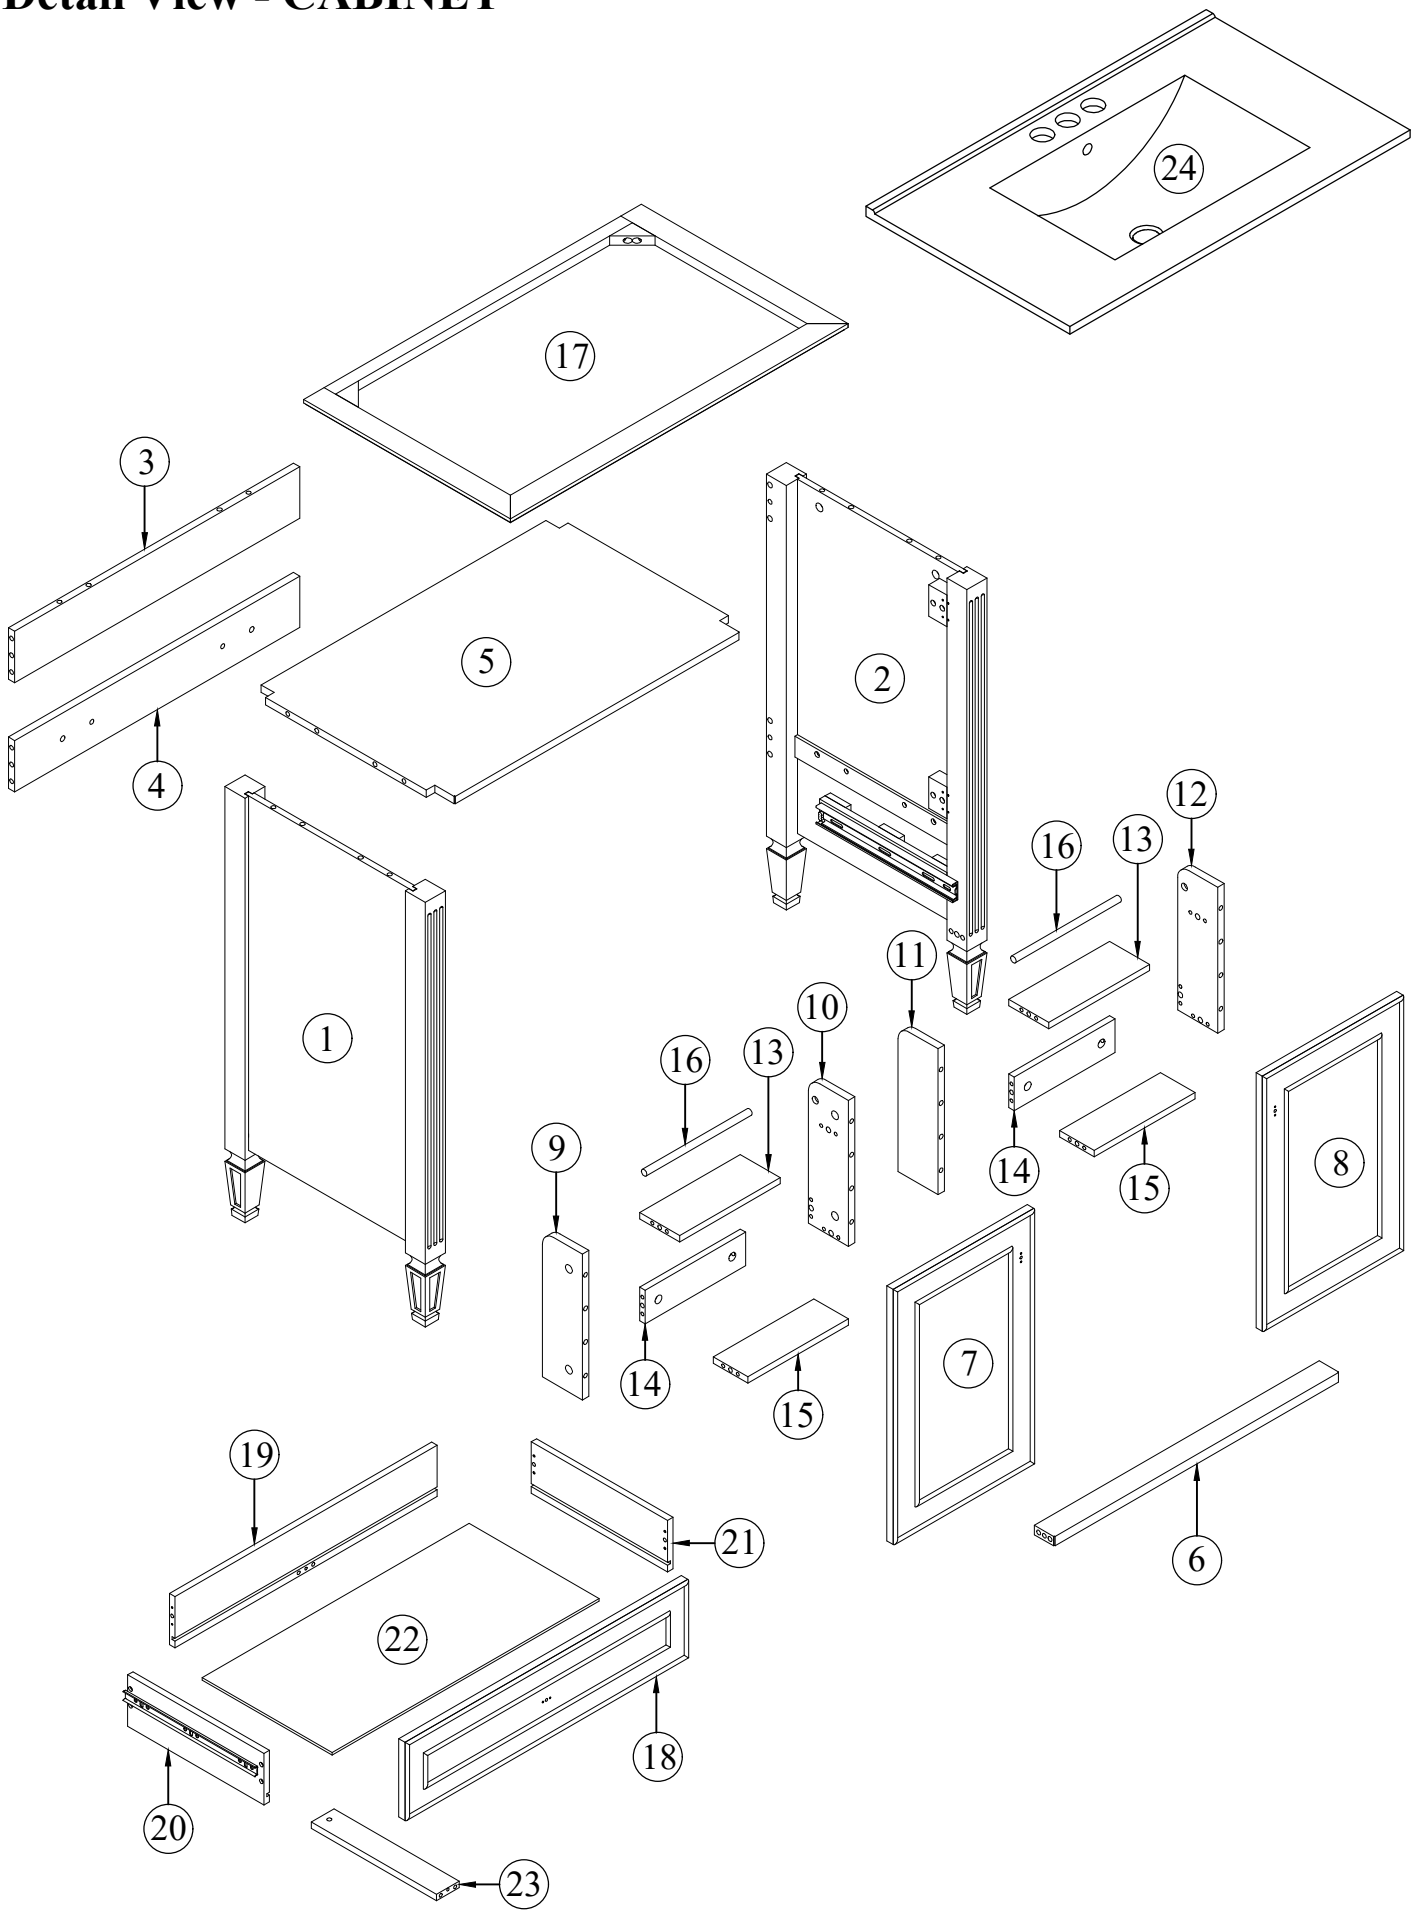Detail View - CABINET















Identifying the Hardware-Identify the hardware using the illustrations below.


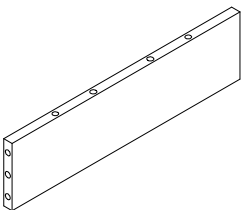
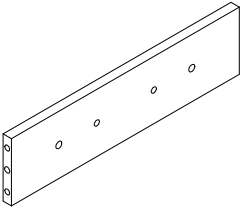
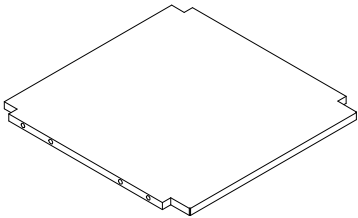
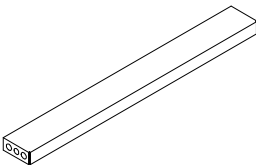




Part List

1		2	
	Side Panel (L) - 1pc		Side Panel (R) - 1pc
3		4	
	Top Panel Rear - 1pc		Bottom Panel Rear - 1pc
5		6	
	Middle partition panel - 1pc		Bottom rail - 1pc
7		8	
	Door (L) - 1pc		Door (R) - 1pc
9		10	
	Panel Left Side Door (L) - 1pc		Panel Right Side Door (L) - 1pc
11		12	
	Panel Left Side Door (R) - 1pc		Panel Right Side Door (R) - 1pc

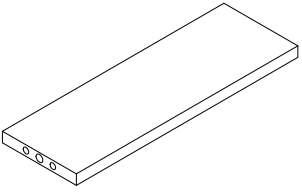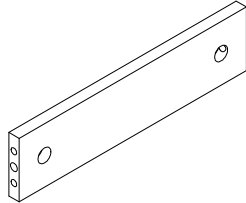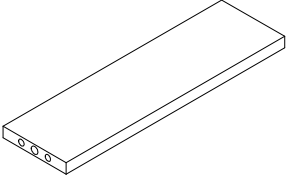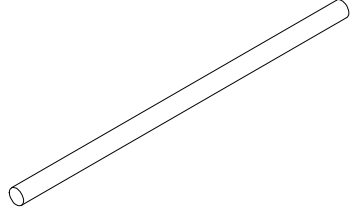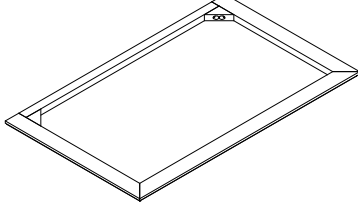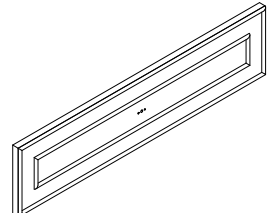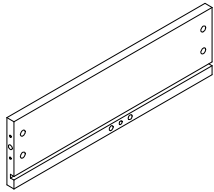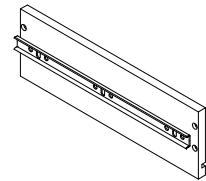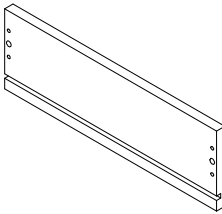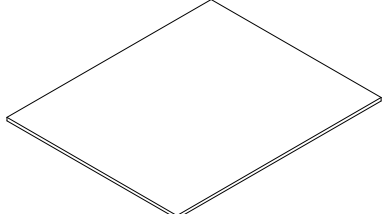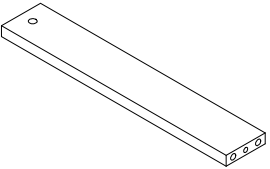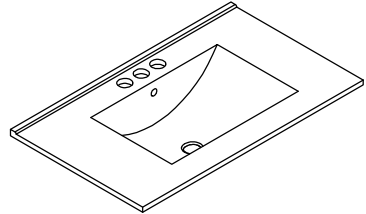Part List


13	 Door Mid Panel - 2pcs	14	 Door Back Panel - 2pcs
15	 Door Bottom Panel - 2pcs	16	 Round Bar - 2pcs
17	 Top Frame - 1pc	18	 Drawer Front - 1pc
19	 Drawer Back Panel - 1pc	20	 Drawer Side Panel (L) - 1pc
21	 Drawer Side Panel (R) - 1pc	22	 Bottom Drawer Panel - 1pc
23	 Support Bar (Bottom Drawer) - 1pc	24	 Sink - 1pc

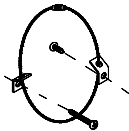Hardware List


A  ø6x35mm	B  ø14.5x9mm	C  ø8x30mm
Three in one bolts(42+1pcs)	Three in one lock(42+1pcs)	Wood dowel(52+1pcs)
D  Damping hinge (4pcs)	E  ø7xø3.5x15mm	F  Handle(3pcs)
Damping hinge (4pcs)	Flat head screw(24+1pcs)	Handle(3pcs)
G  ø5/32"x20mm	H  ø5/32"x32mm	I  ø8xø4x32mm
Handle screw(2+1pcs)	Handle screw(1+1pc)	Round head screw (10+1pcs)
J  ø6x30mm	K  Anti fall hardware (2sets)	
Wood dowel(8+1pcs)	Anti fall hardware (2sets)	


STEP: 1

A










22PCS

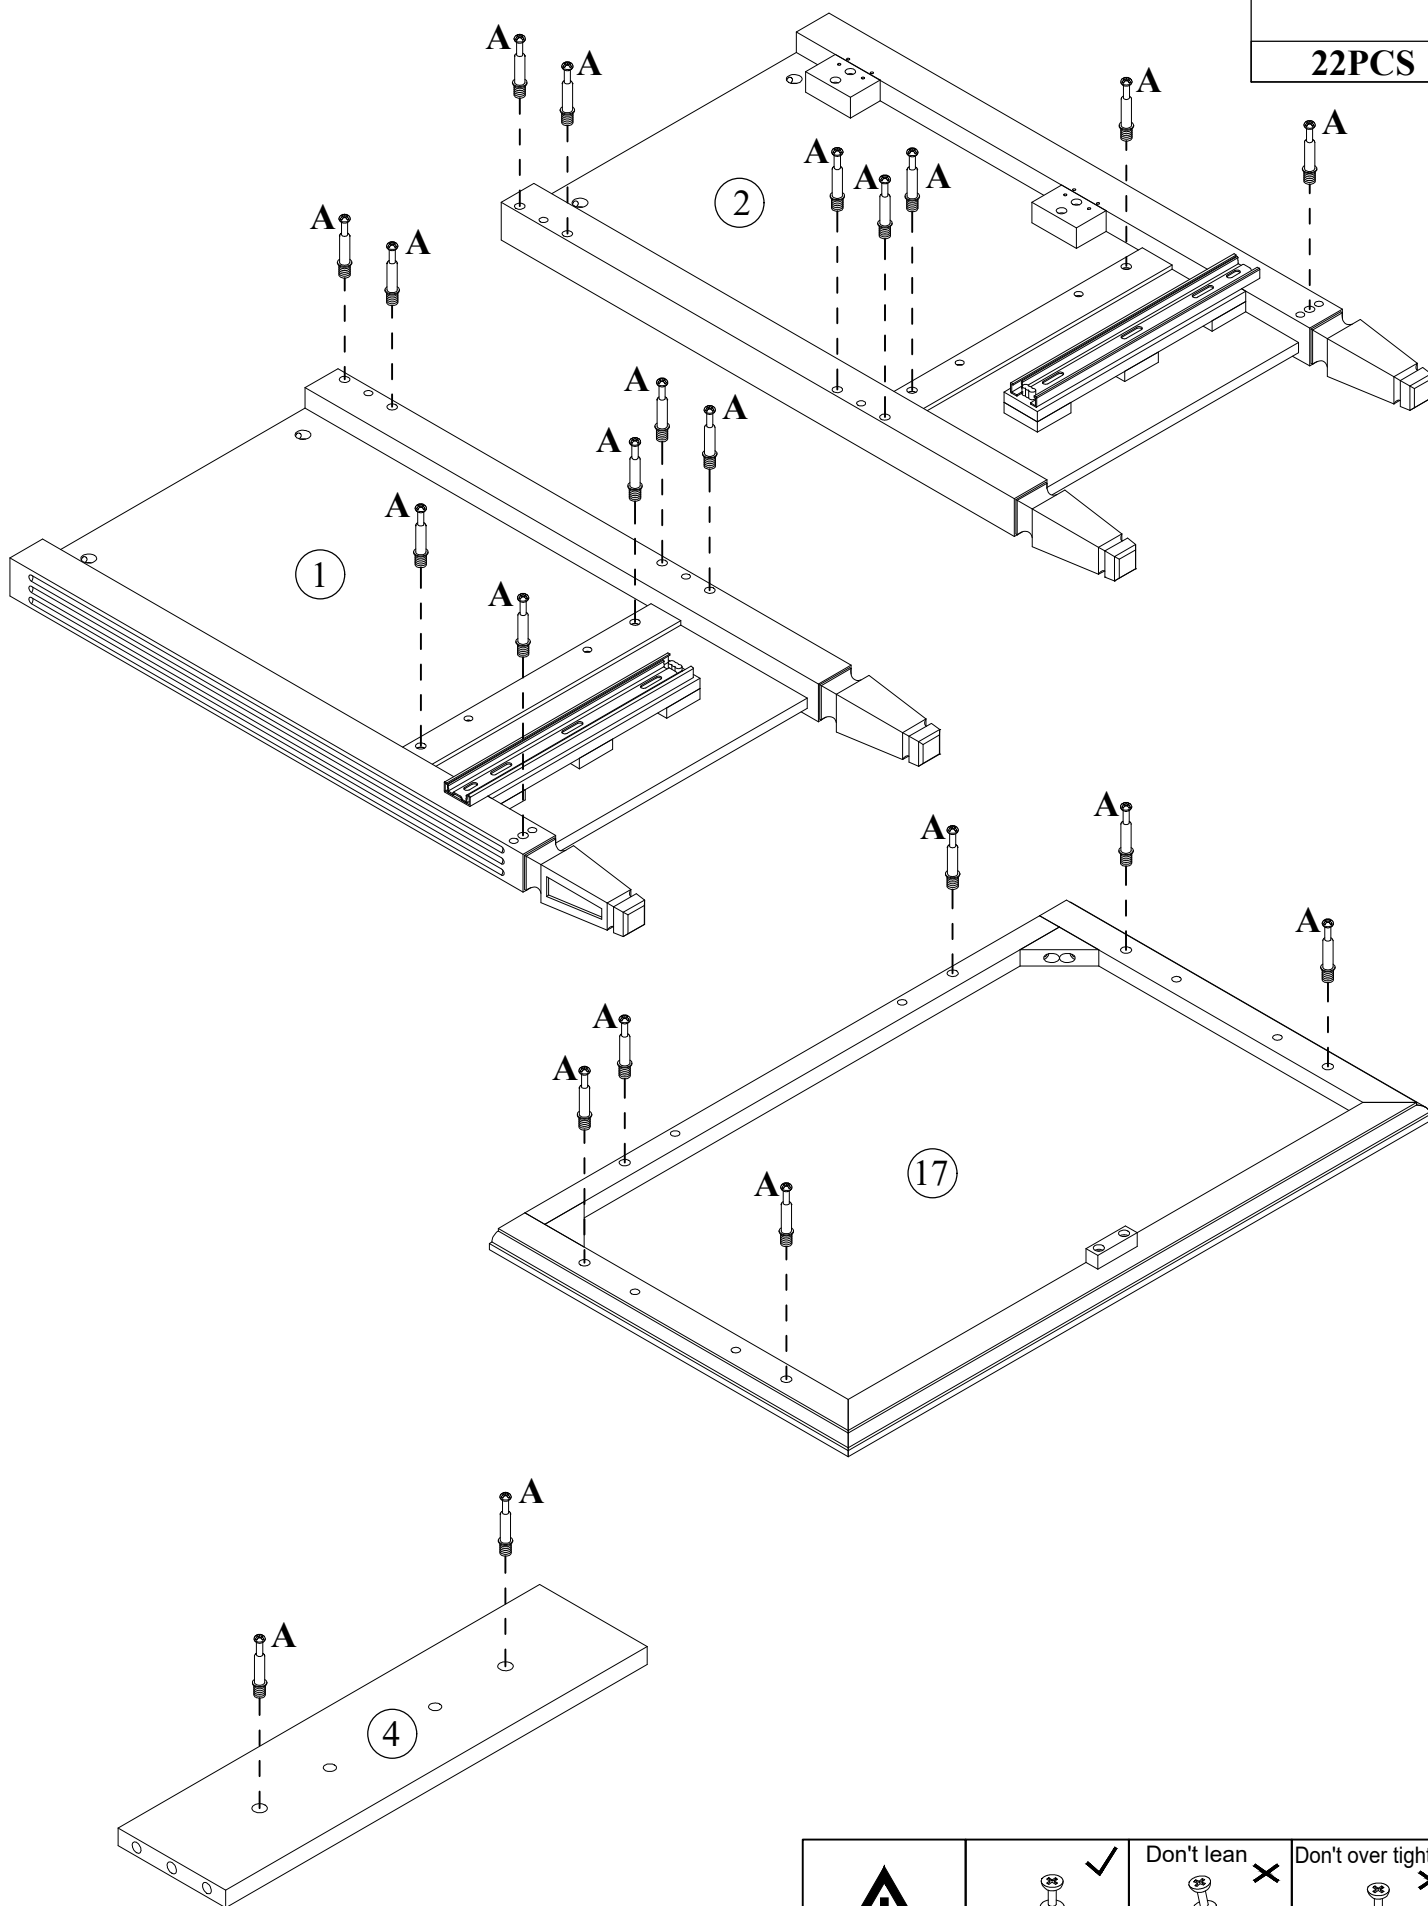




	 ✓	Don't lean ✗ 	Don't over tighten ✗ 
--	---	---	---

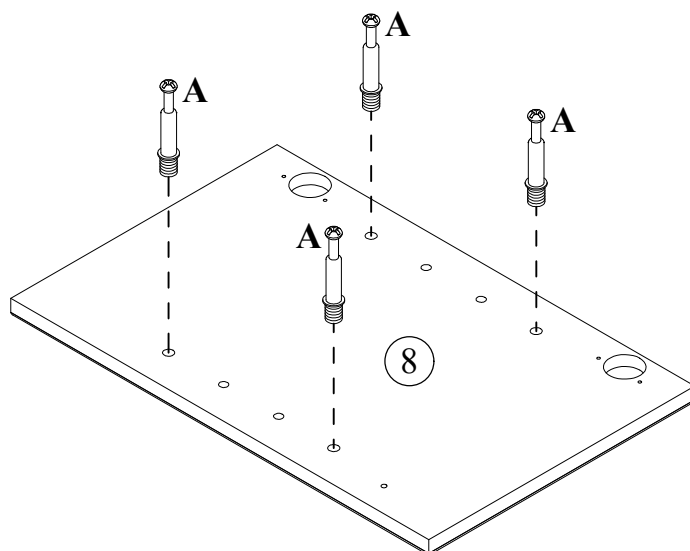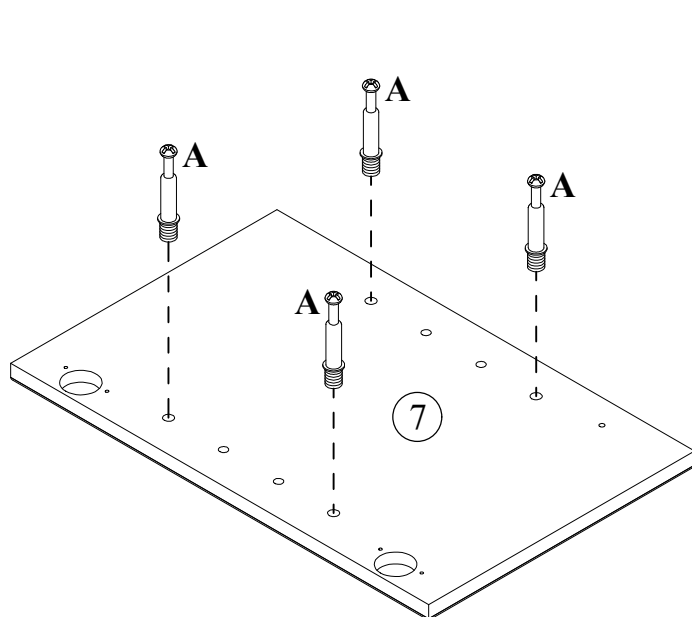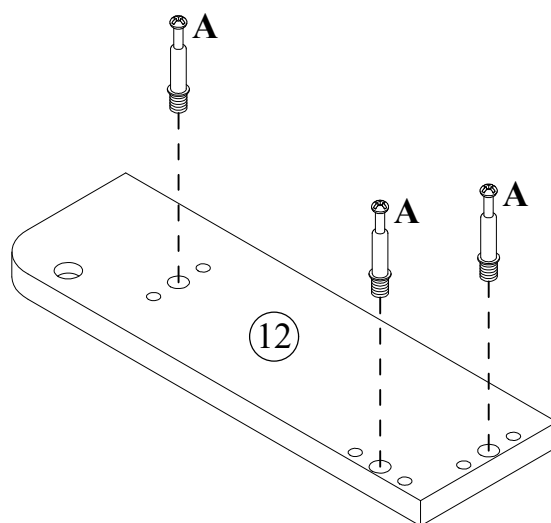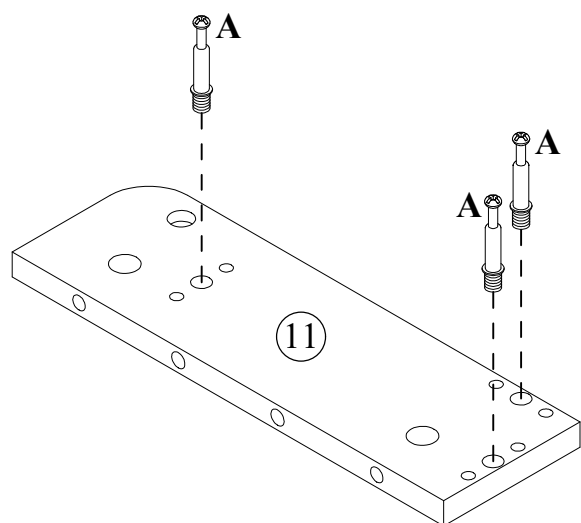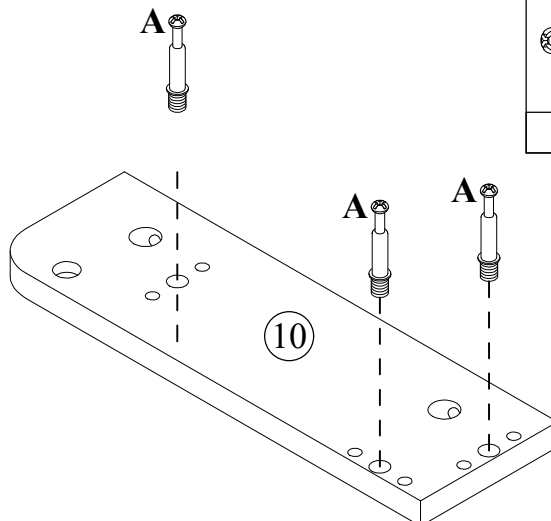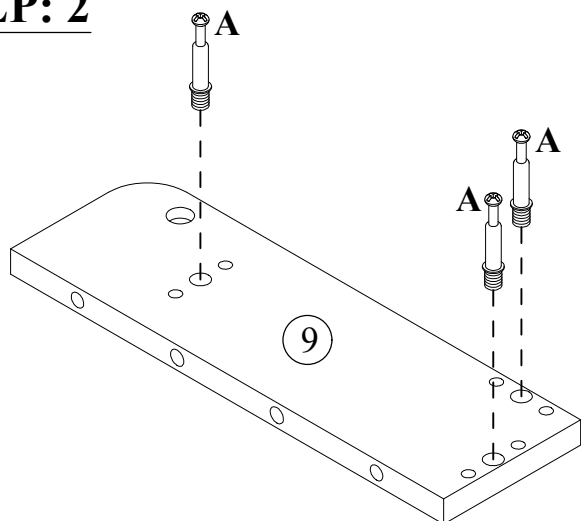STEP: 2


A**20PCS**


STEP: 3

B	C
	
2PCS	2PCS

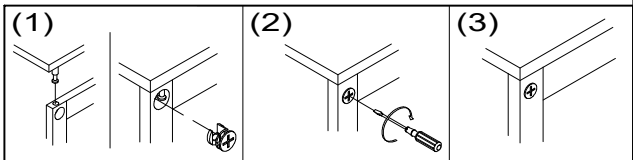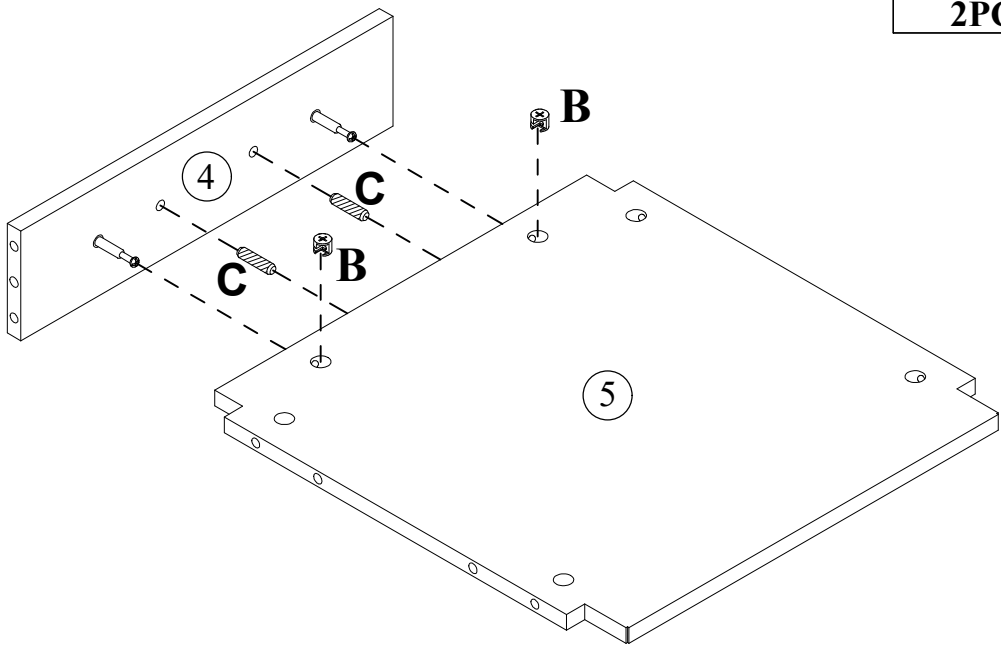


STEP: 4

B	C
	
7PCS	6PCS


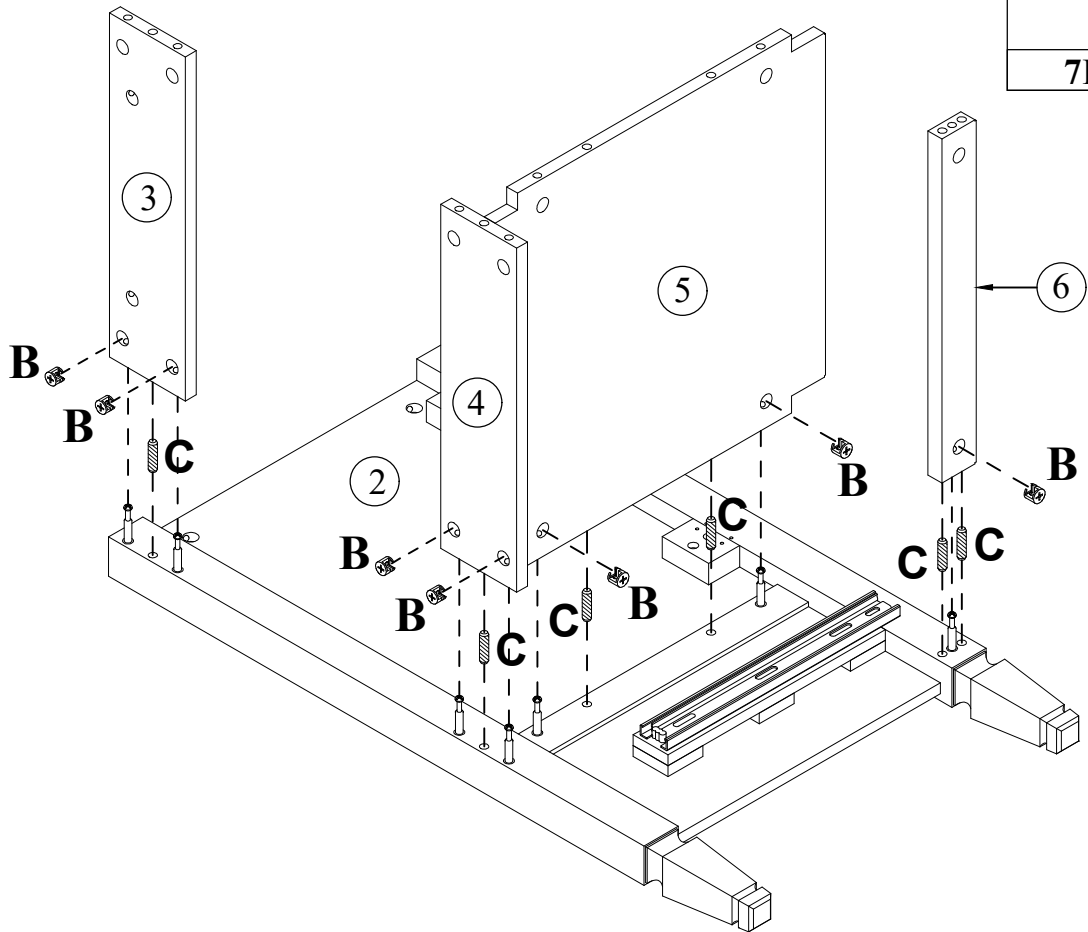



STEP: 5

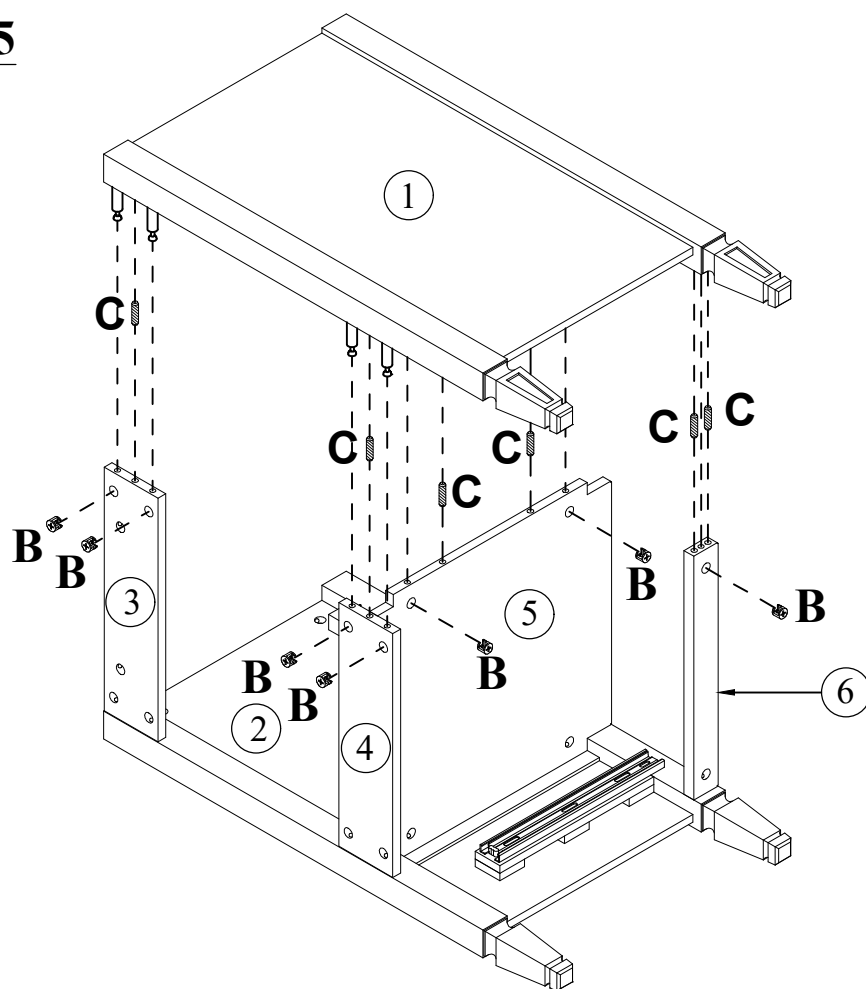


B	C
	
7PCS	6PCS

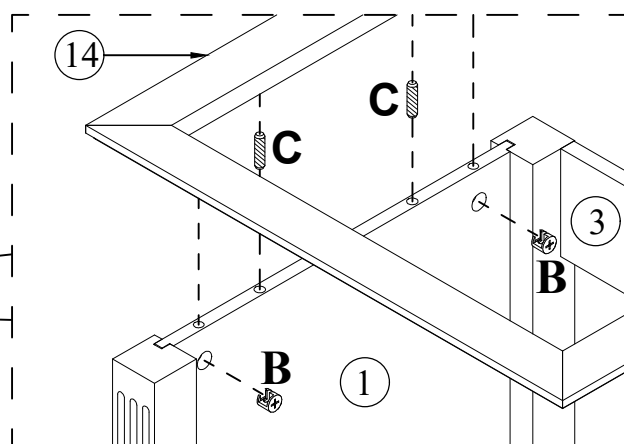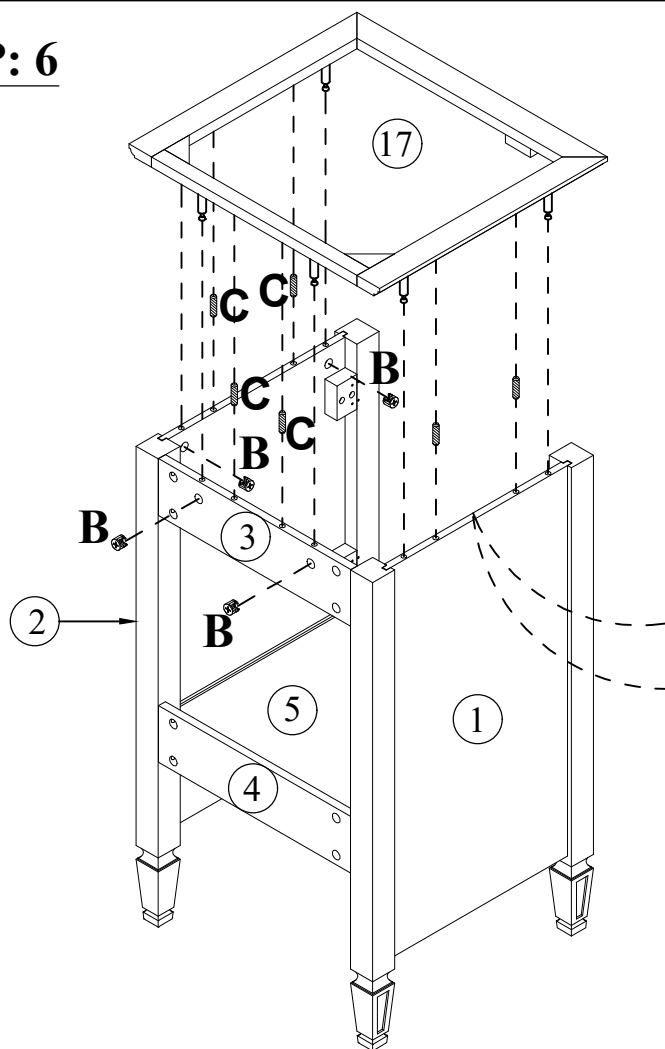
STEP: 6




B	C
	
6PCS	6PCS

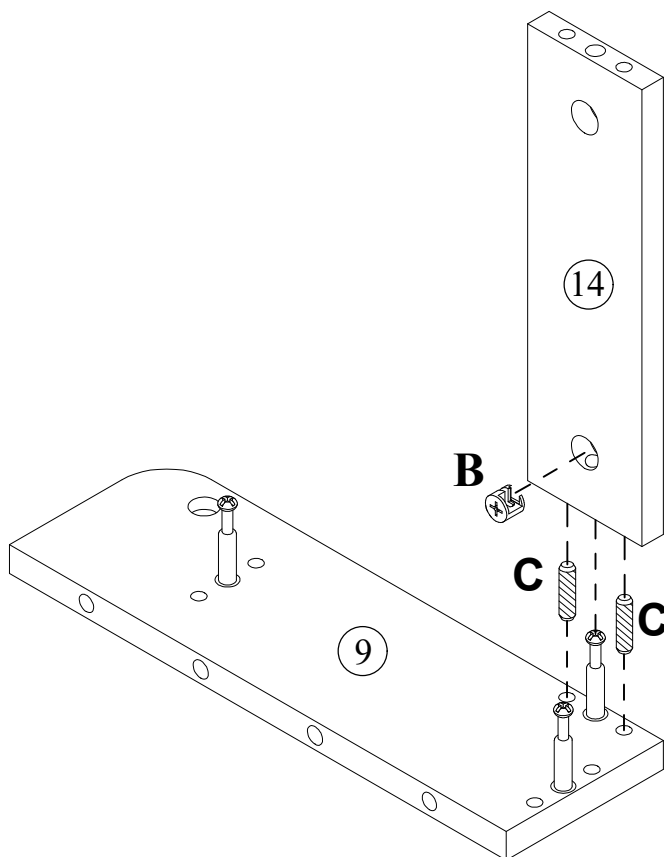
STEP: 7




B		C	
	1PC		2PCS

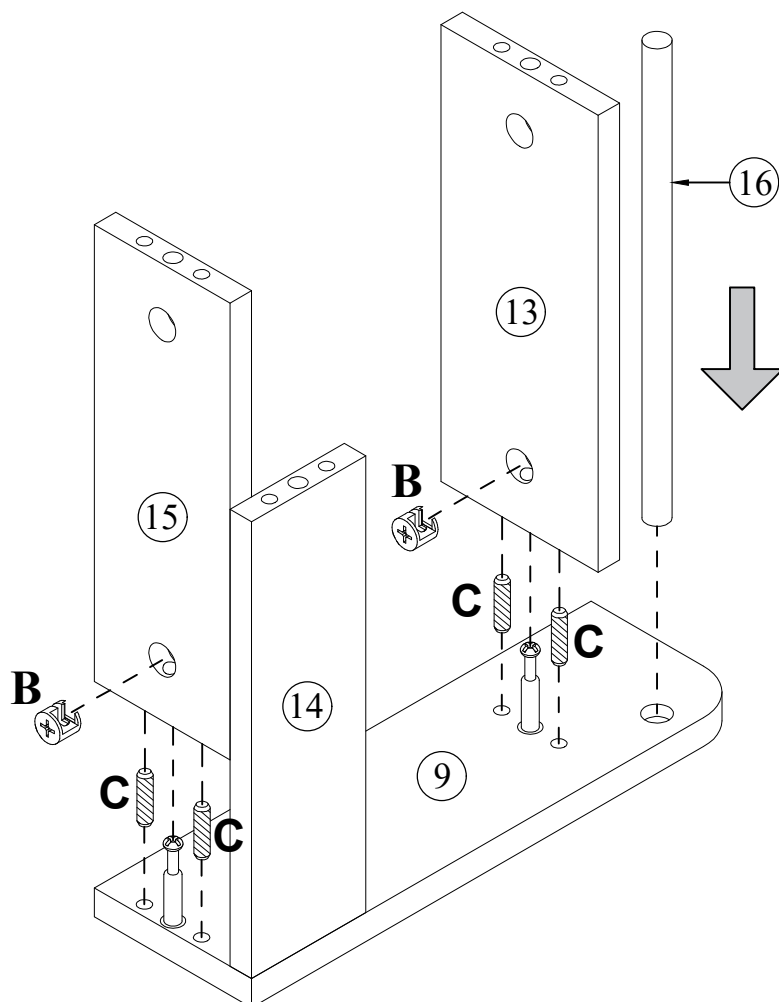STEP: 8




B		C	
	2PCS		4PCS

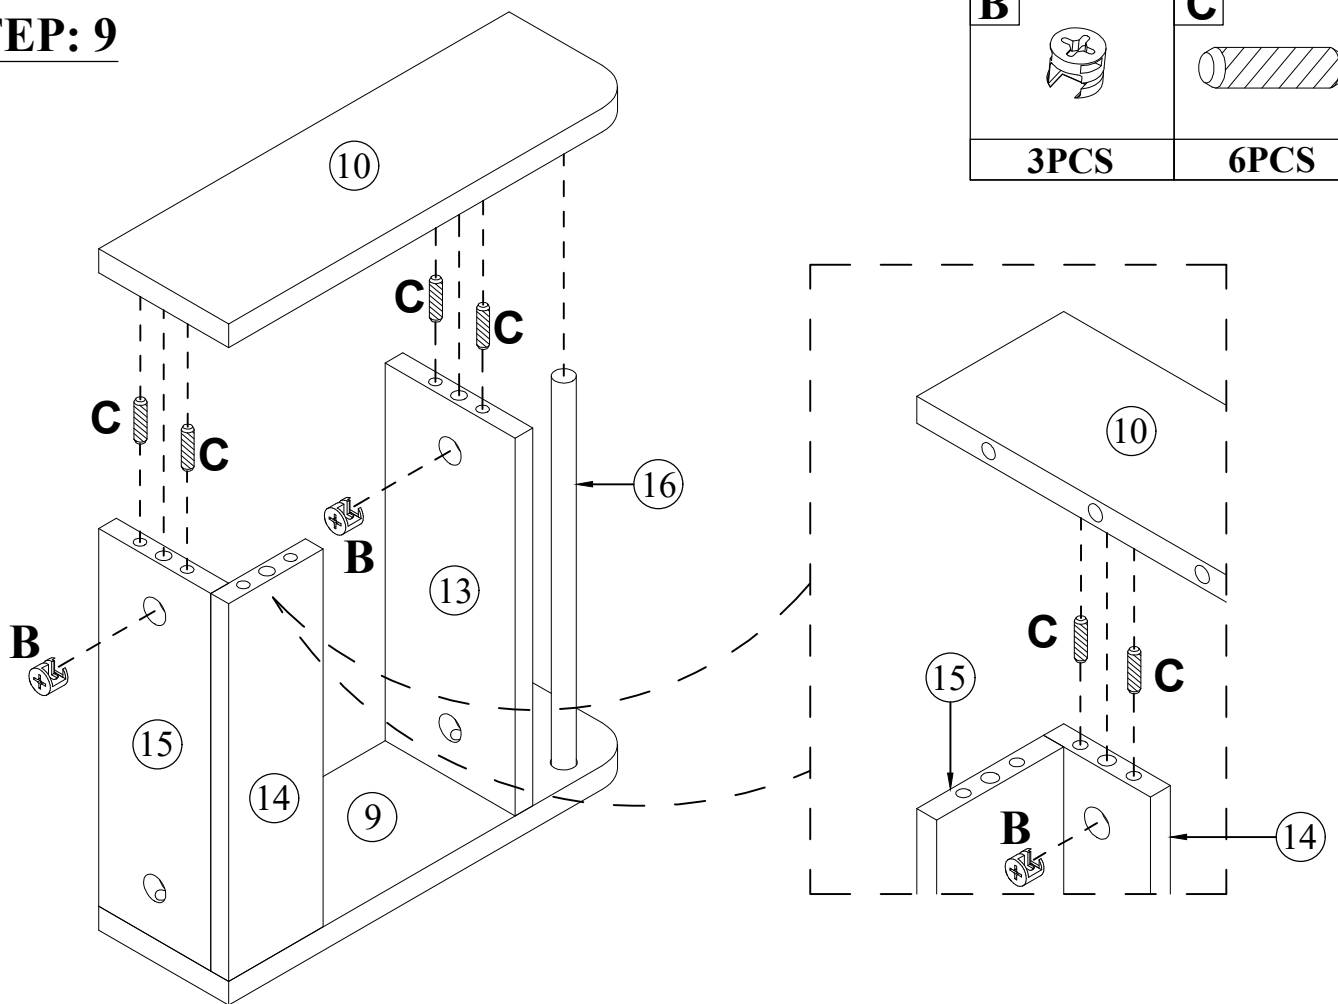
STEP: 9




STEP: 10

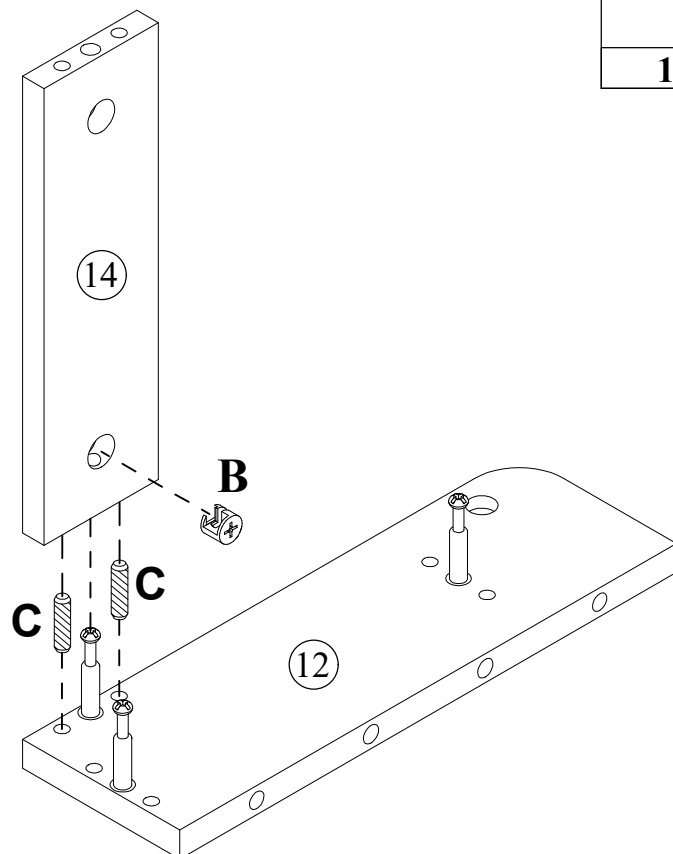



STEP: 11

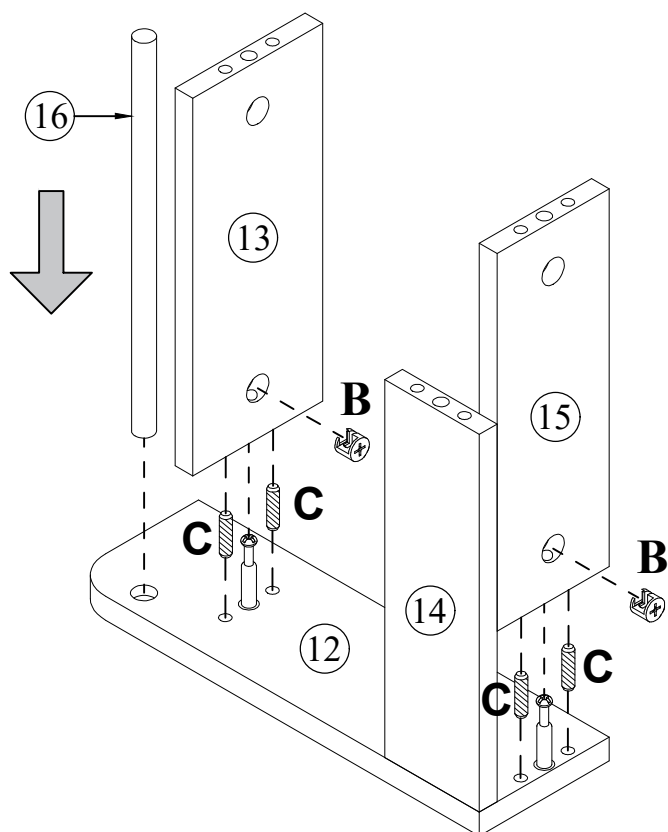


B	C
	
2PCS	4PCS

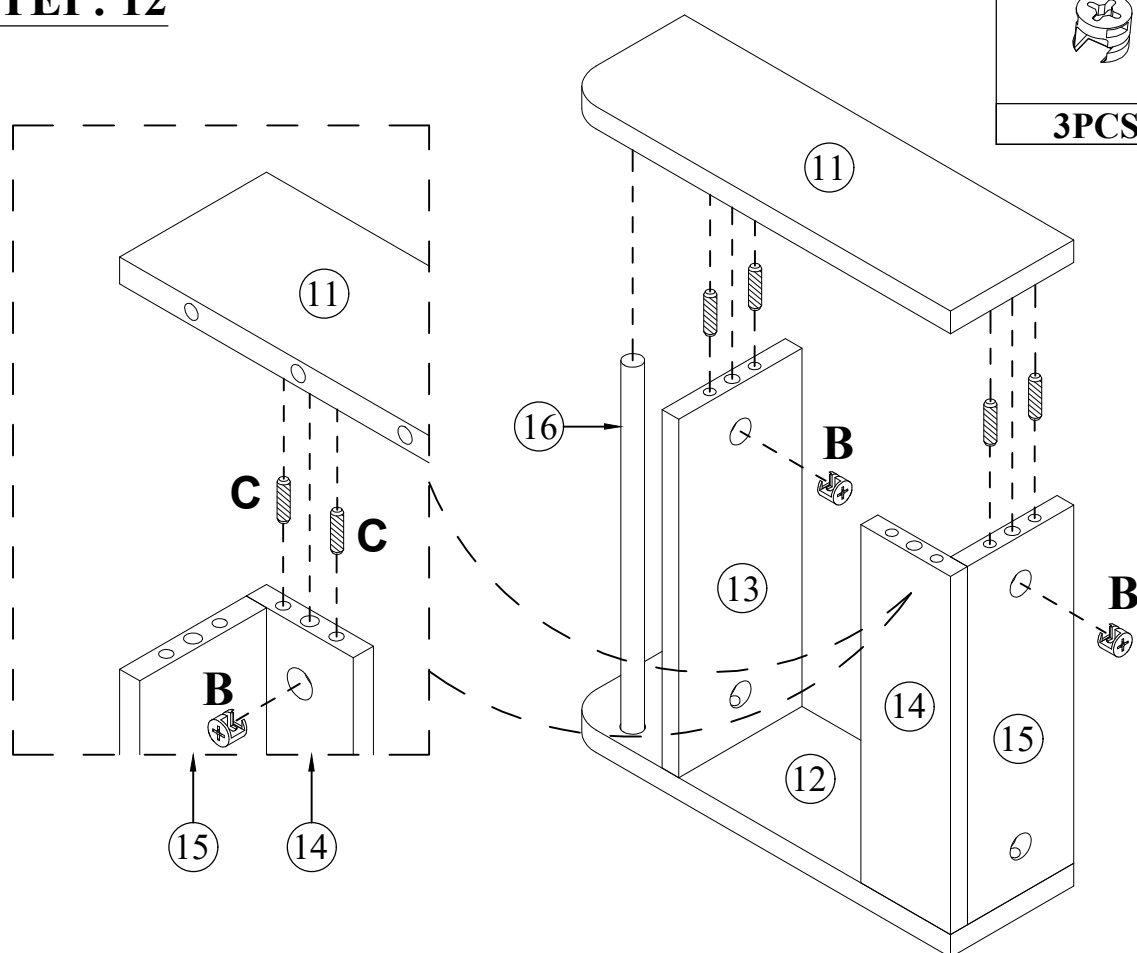
STEP: 12




B	C
	
3PCS	6PCS

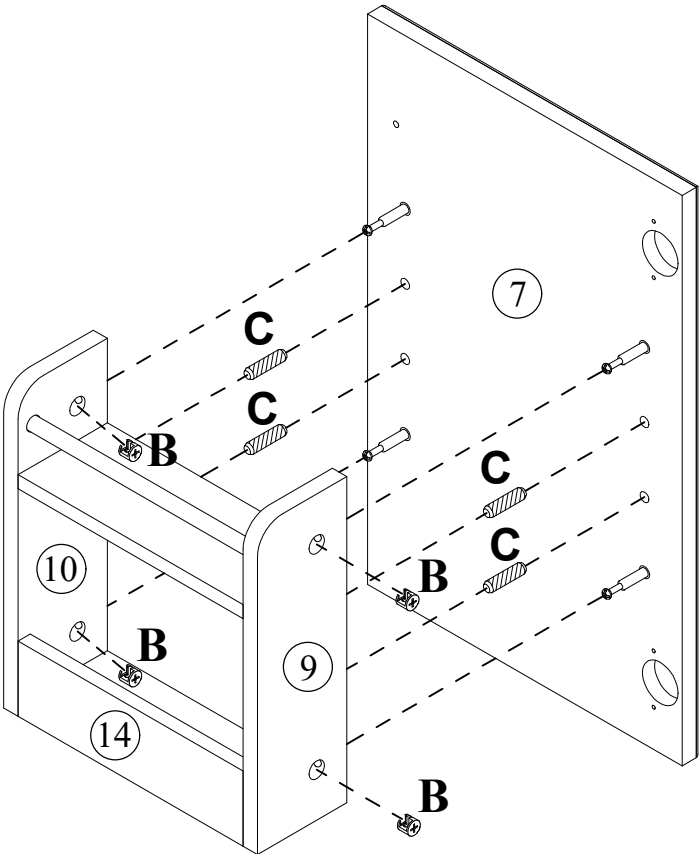
STEP: 13




B	C
	
4PCS	4PCS

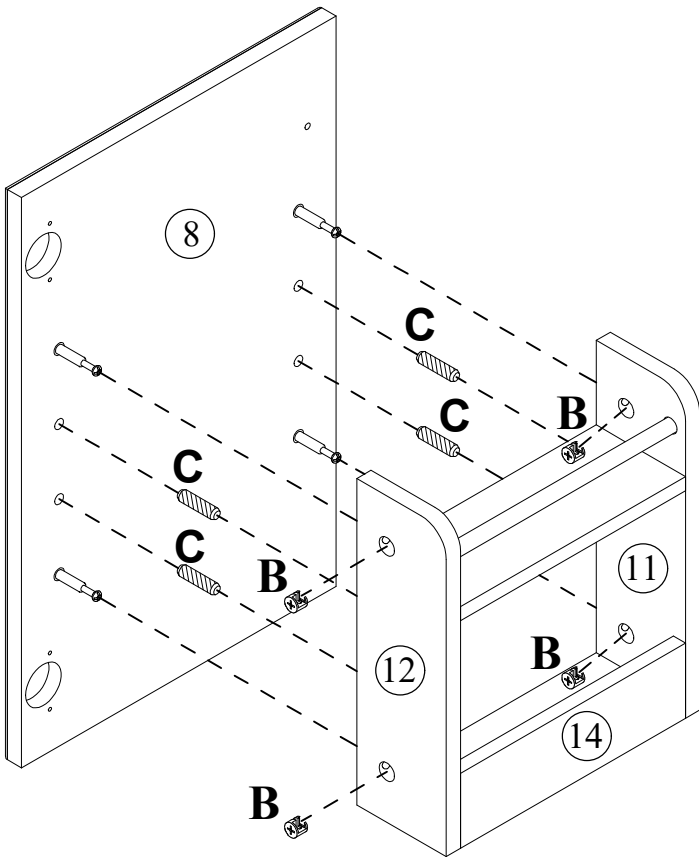STEP: 14






B	C
	
4PCS	4PCS

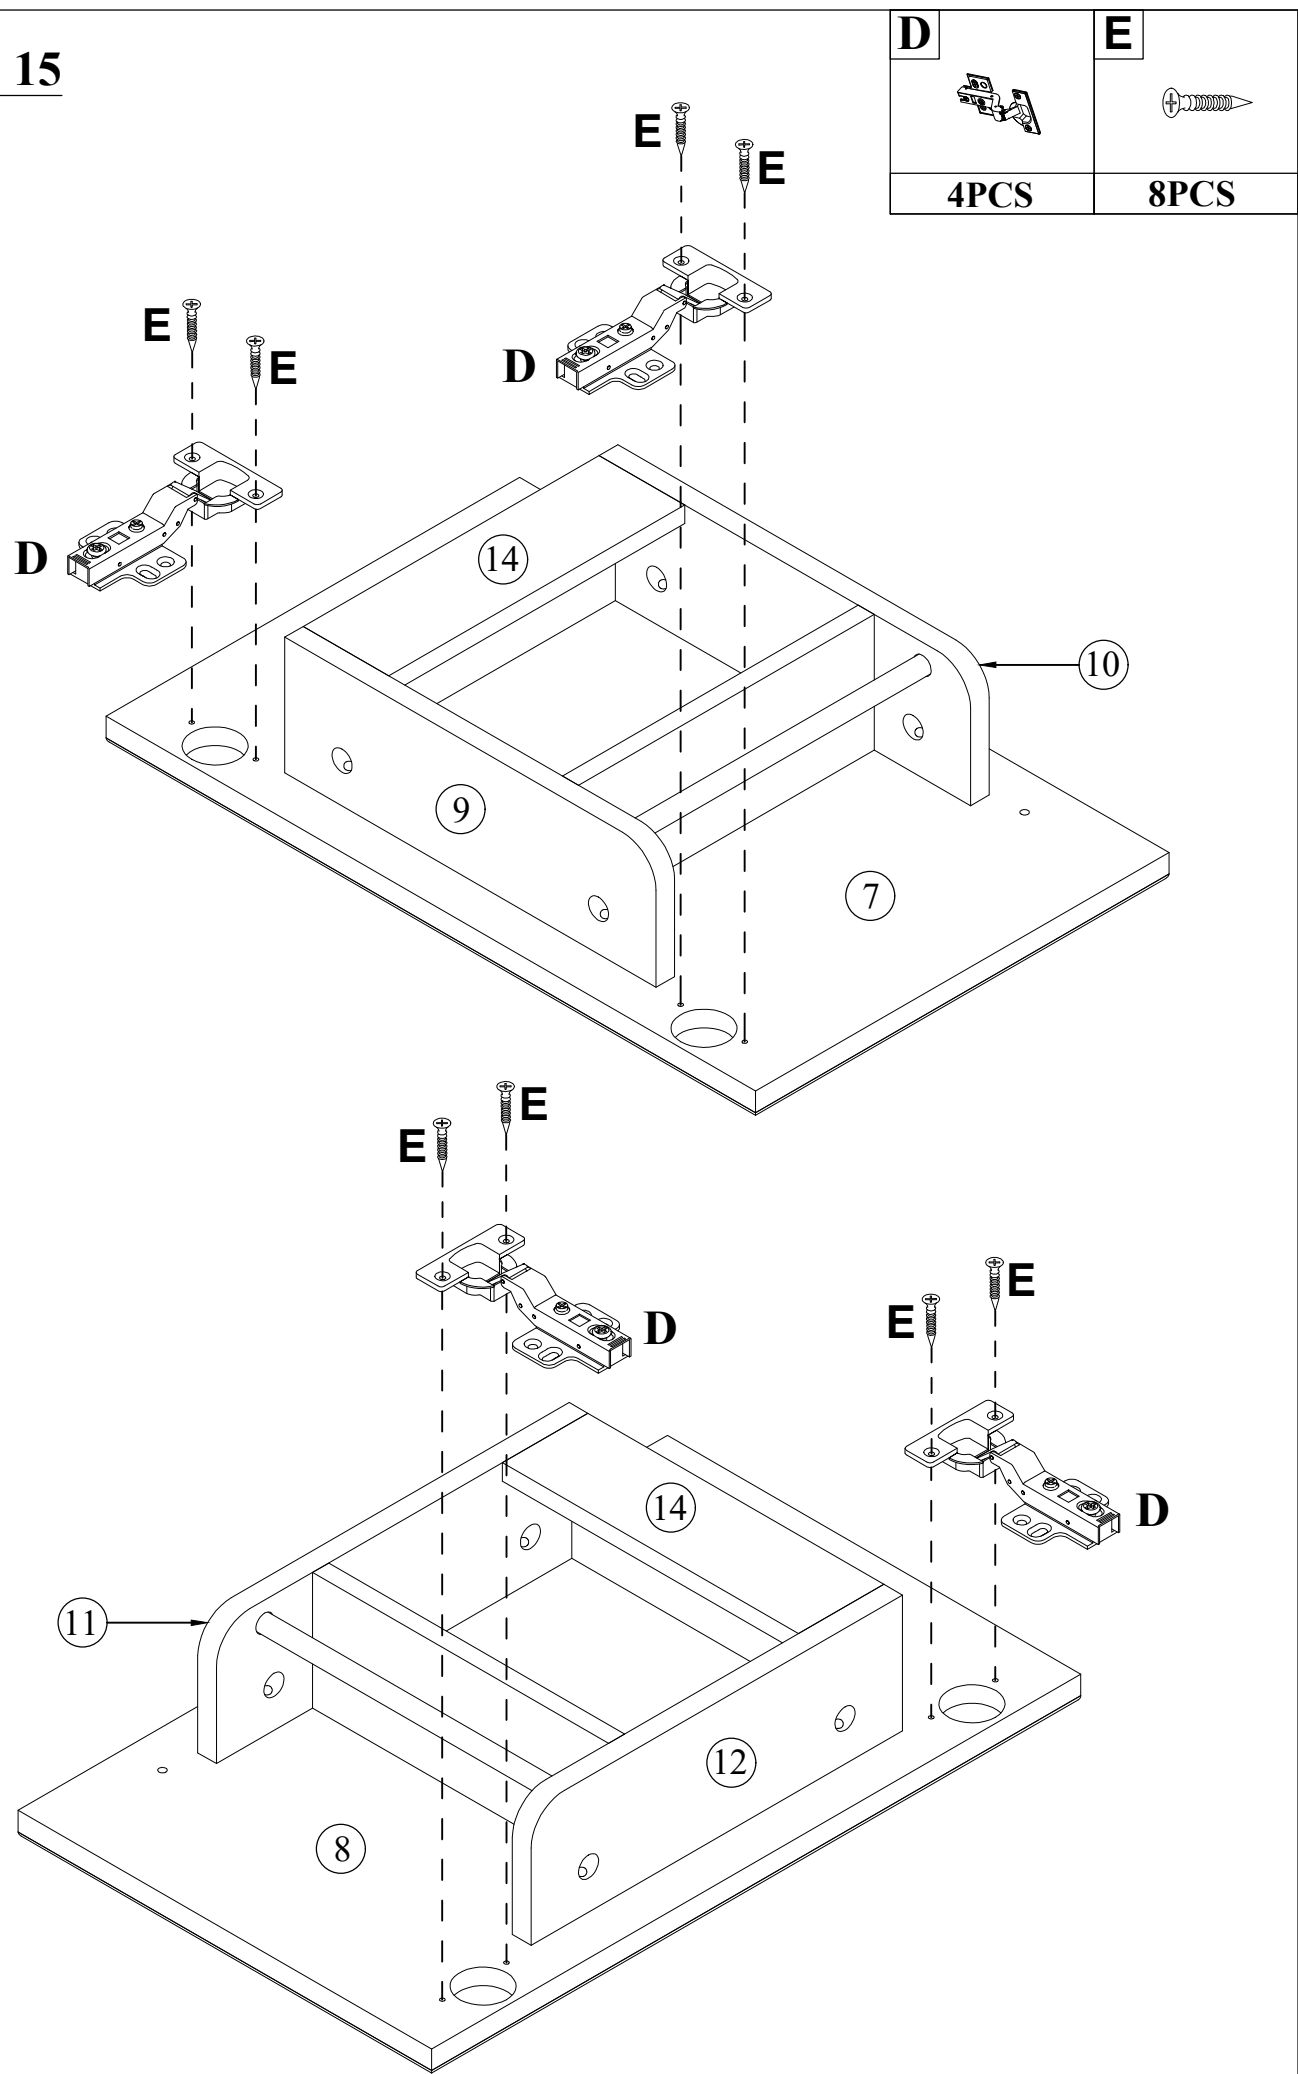STEP: 15




STEP: 16


F		G		E	
2PCS		2PCS		16PCS	

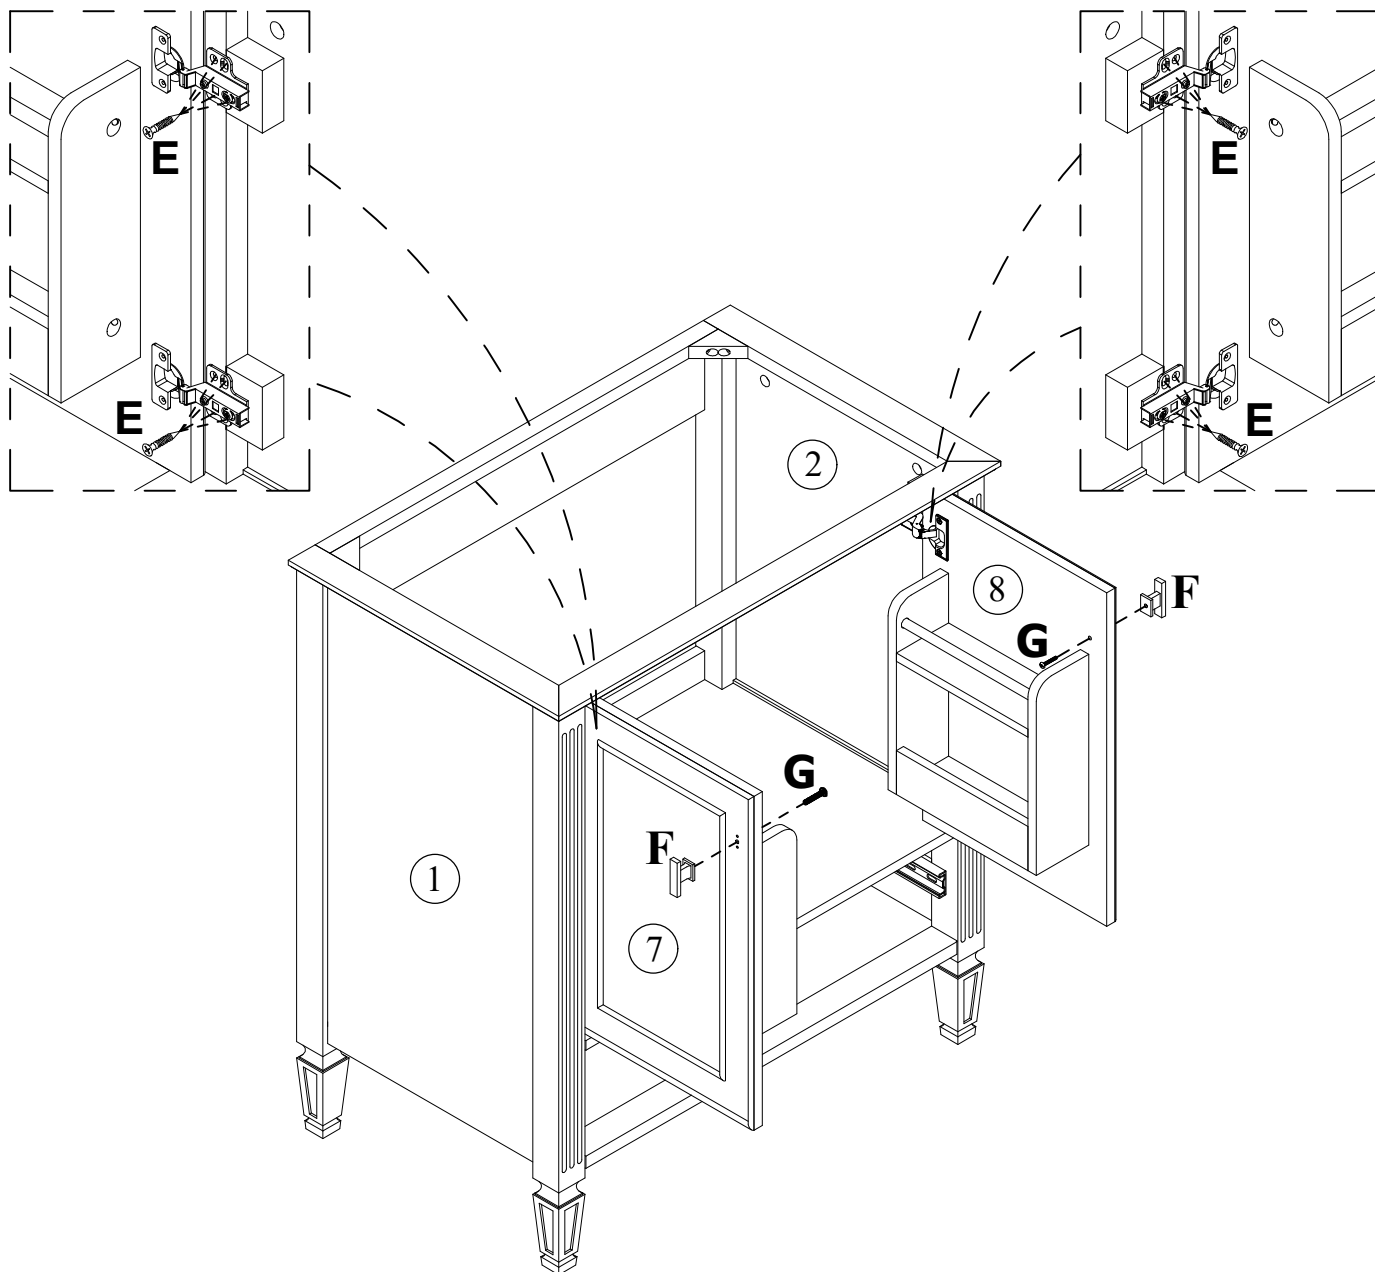


Use the screws to adjust up or down

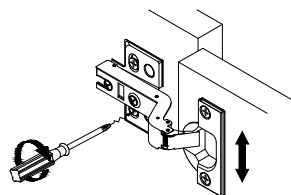


Use the screws to permanent

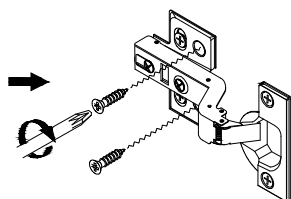




Use the screws to adjust left or right

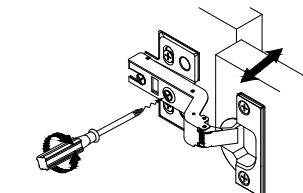


Use the screws to adjust in or out

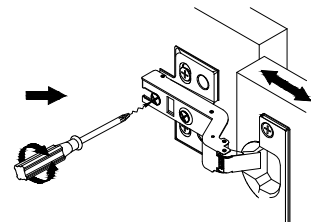


STEP: 17



F		H		I		J	
1PC		1PC		10PCS		8PCS	

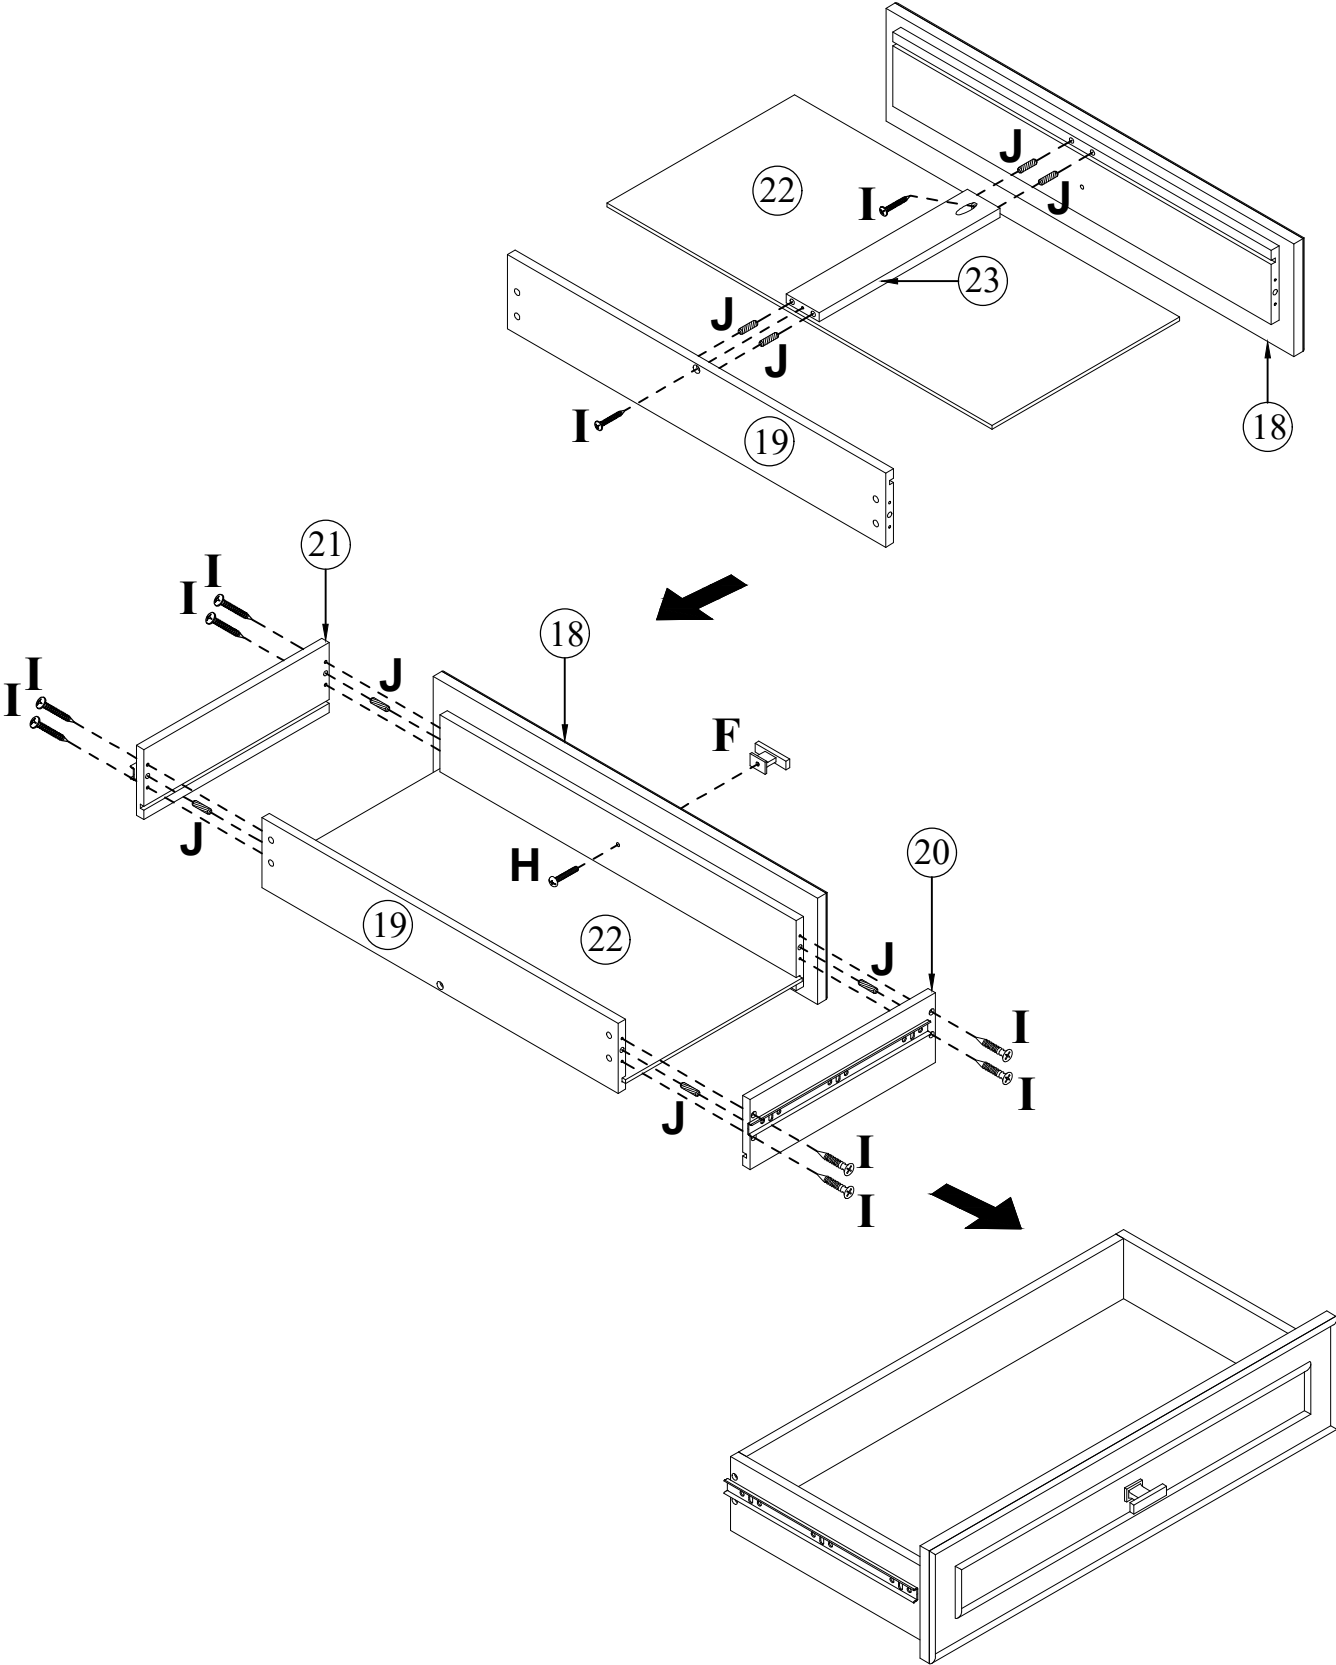

STEP: 18

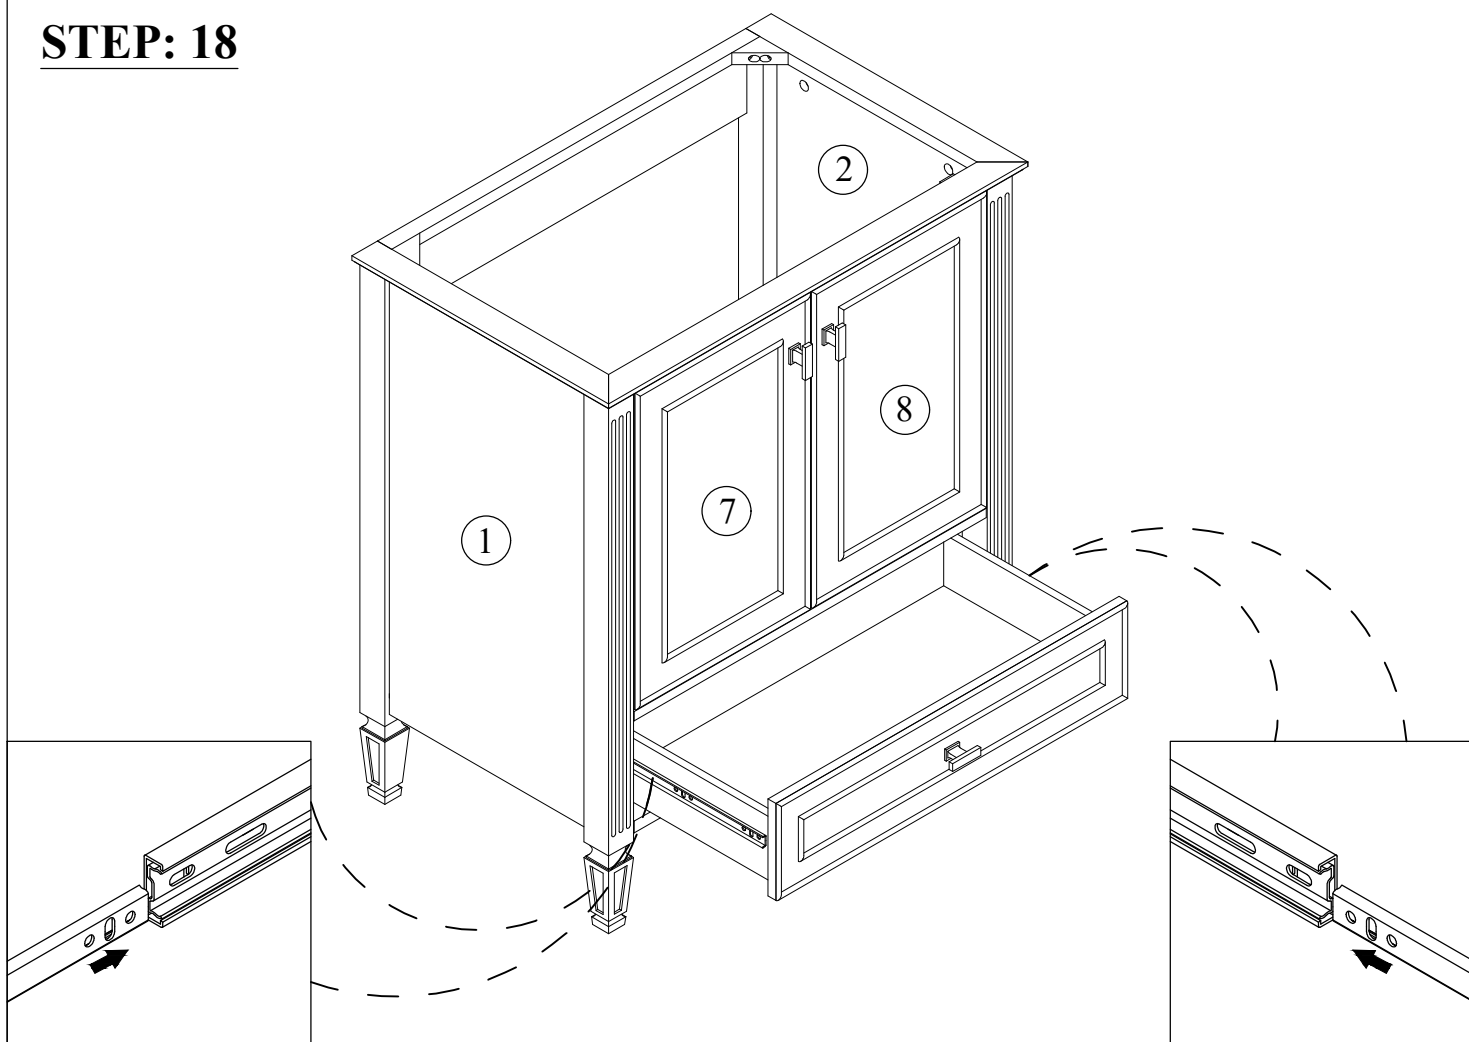


STEP: 19

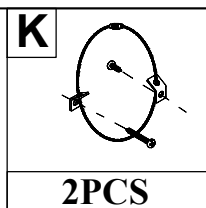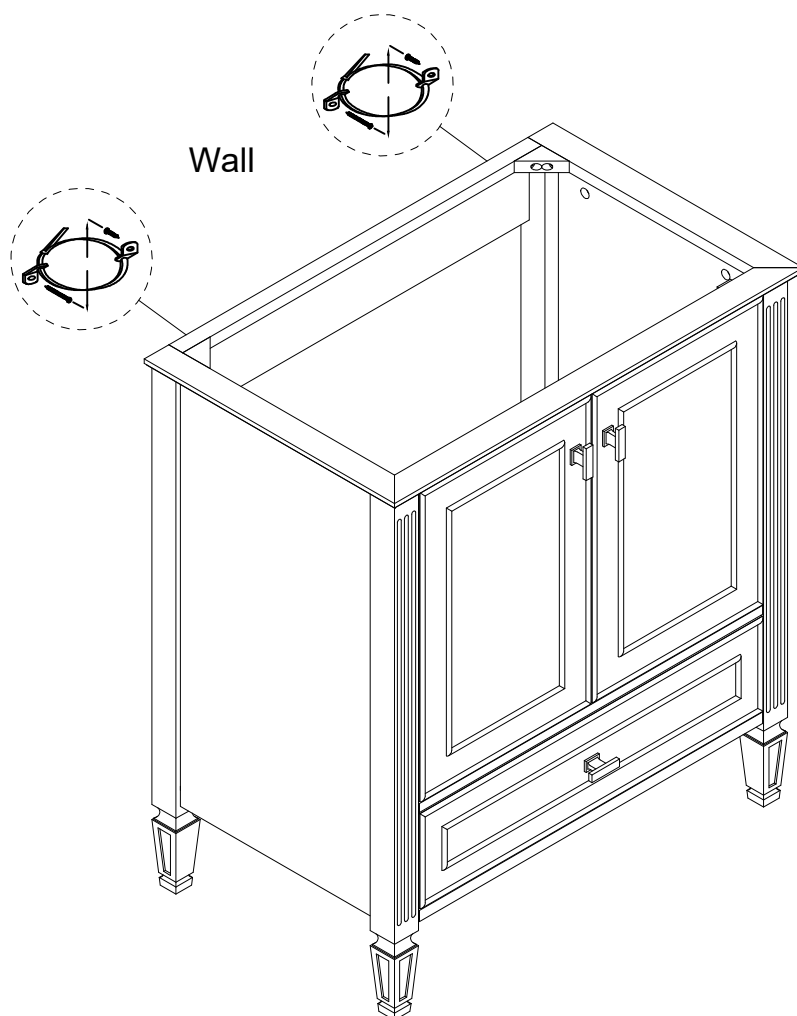

STEP: 20

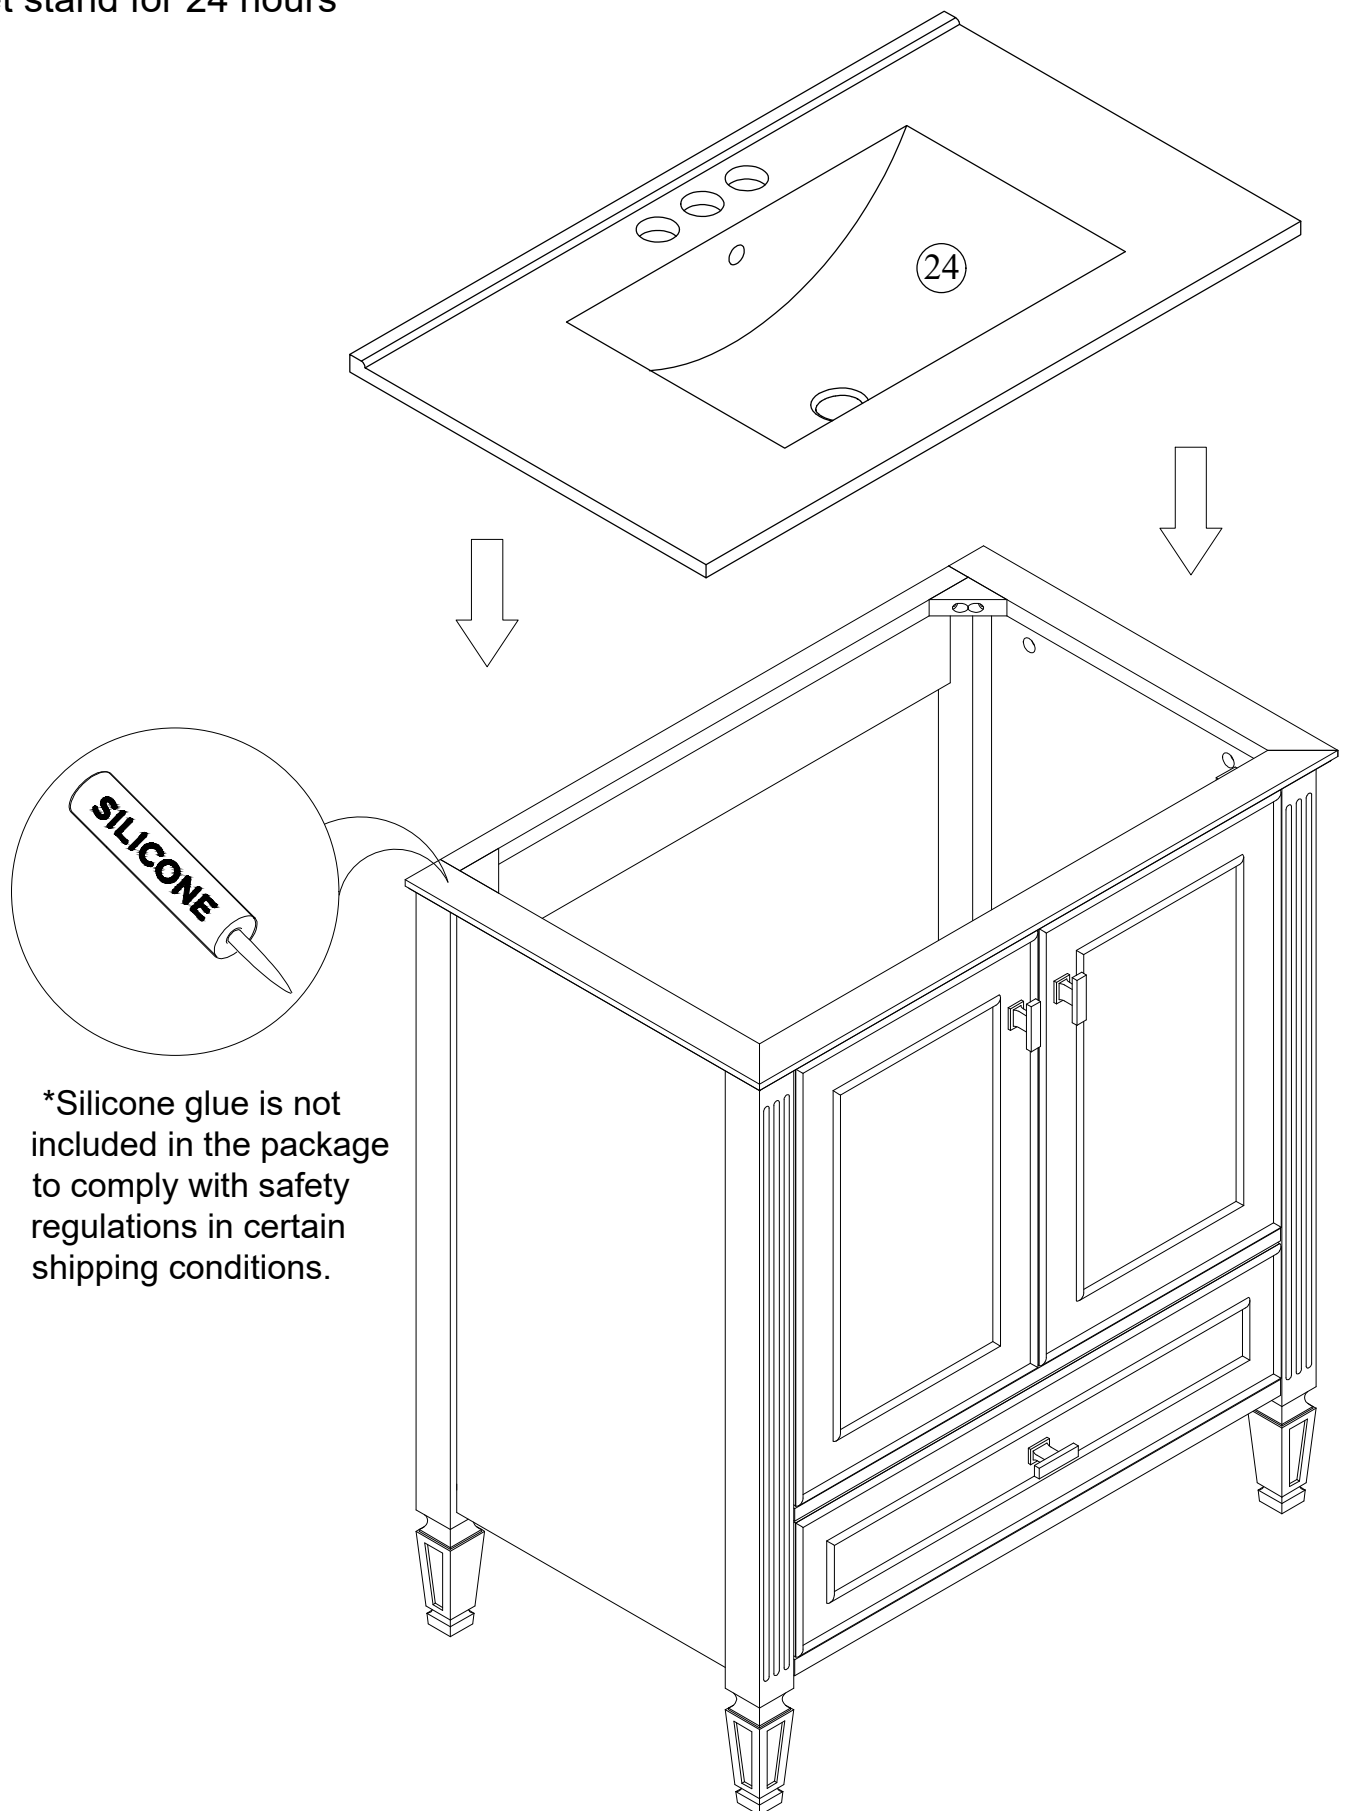Install the sink on the cabinet with glue.
Let stand for 24 hours



STEP: 21

