


1. Should be assembled on flat ground to keep balance

2.Before completing the installation, do not tinghten the screws.





You must be need two people to install!



Before starting the assenbly, you must read the whole manual and follow the instructions



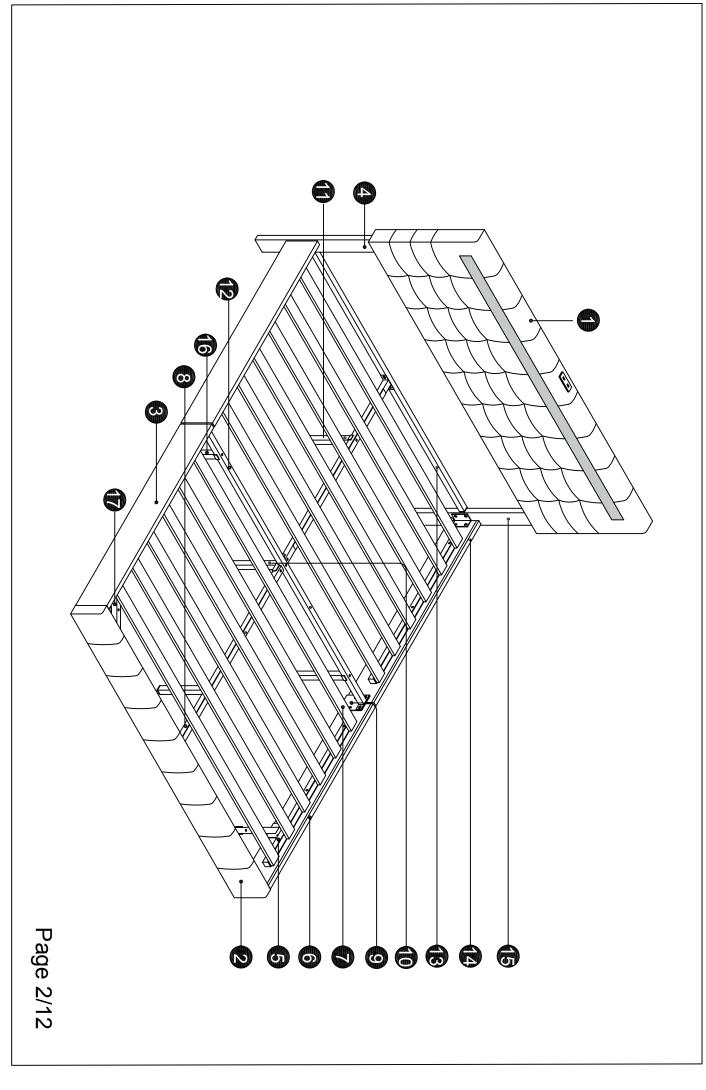

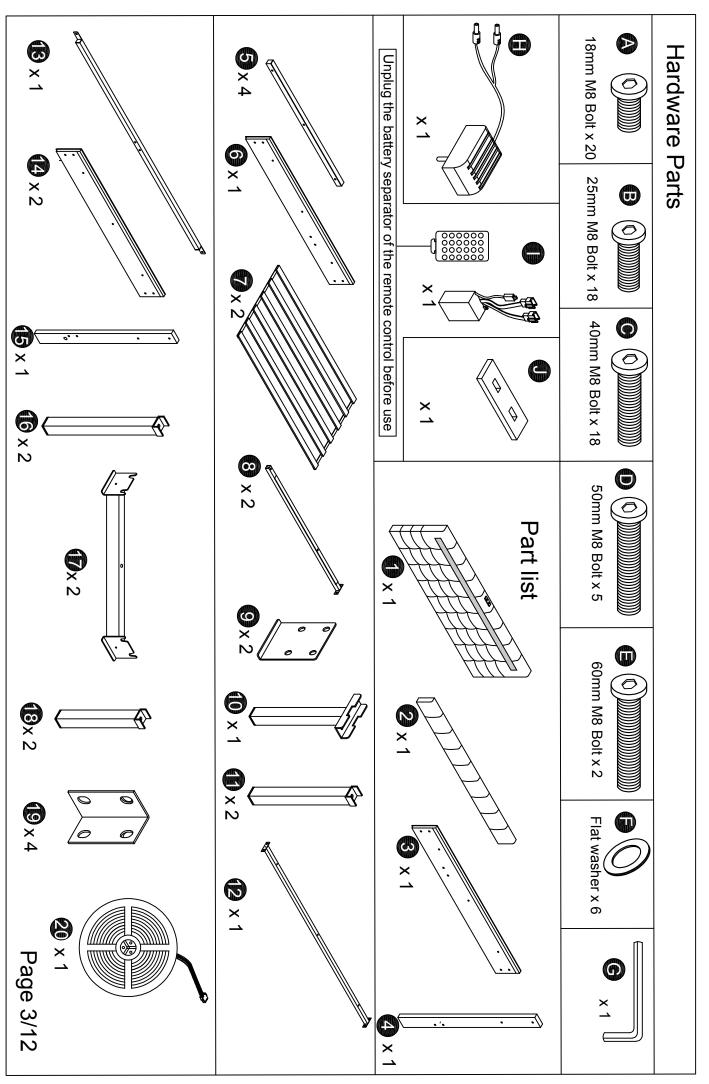

#### SHORT 0 • Flat washer x 4 50mm M8 Bolt x 4 HIGH Page 4/12 25mm M8 Bolt x 2


#### 18mm M8 Bolt x 12 0 6 8 **0** 6 Page 5/12 • 40mm M8 Bolt x 6 0 6

#### 25mm M8 Bolt x 4 18mm M8 Bolt x 4 25mm M8 Bolt x 4 Page 6/12

#### 6 Flat washer x 2 60mm M8 Bolt x 2 **3** 25mm M8 Bolt x 4 Page 7/12

#### 25mm M8 Bolt x 4 18mm M8 Bolt x 4 50mm M8 Bolt x 1 Page 8/12

### 40mm M8 Bolt x 12 Page 9/12

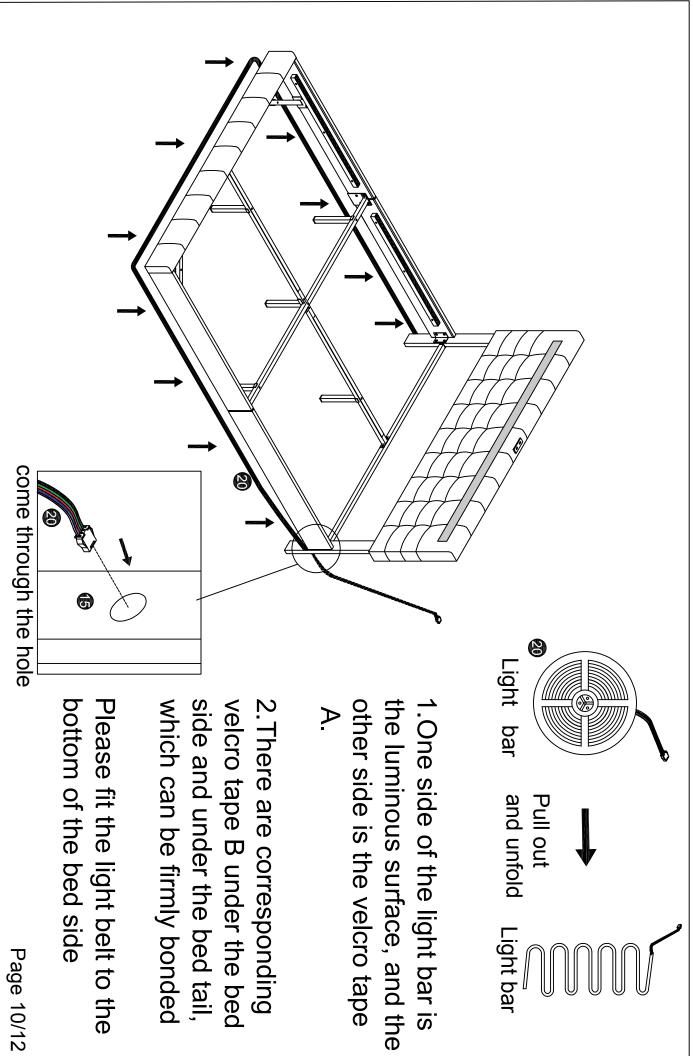

### Please string the thread to the elastic band 6 Please attach the infrared receiver to the elastic bag Page 11/12

Page 12/12