

ASSEMBLY INSTRUCTIONS


Ax4

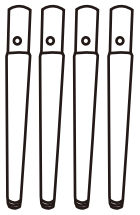


Bx2

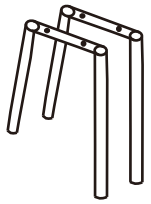


Cx1

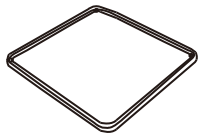

Dx1

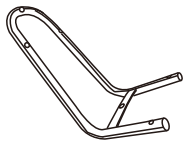


Ex1

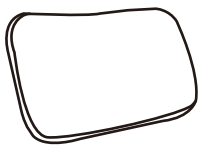

Fx1



Gx1

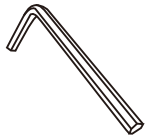

Hx2



M6*25mm

Ix6



M6*18mm

Jx4




M6*25mm

Kx3



M6*30mm

1

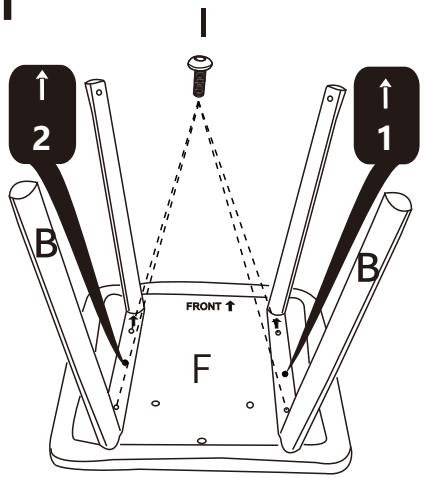


Ix4



M6*18mm


Twist Screw (I) to connect (B) and (F).

2

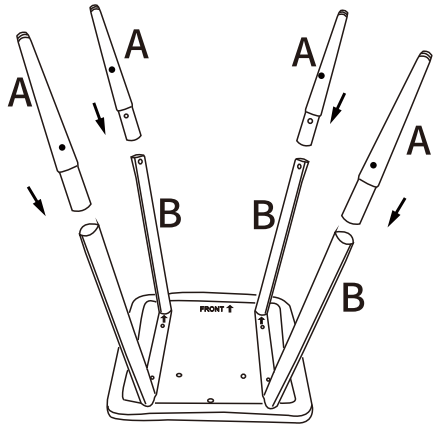

Insert (A) into the hole in (B).

3

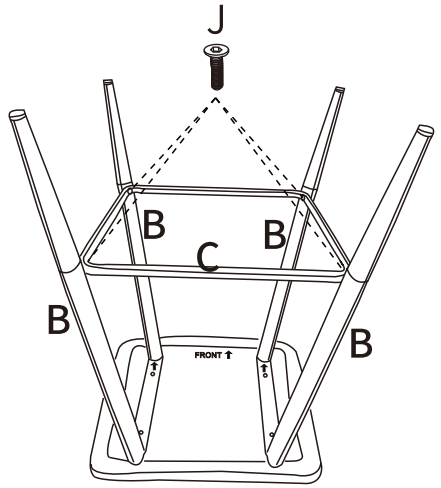


Jx4



M6*25mm

Twist Screw (J) to connect (B) and (C).

4

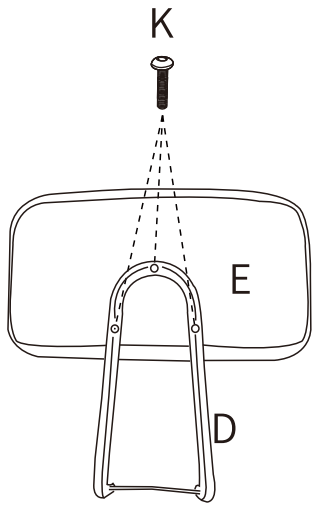


Kx3



M6*30mm

Twist Screw (K) to connect (D) and (E).

5

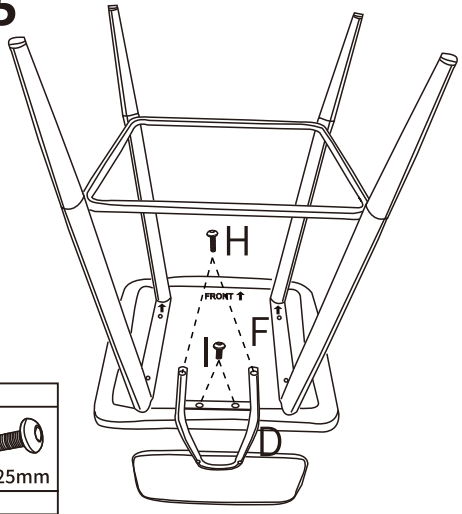

Hx2

M6*25mm


Ix2



M6*18mm

Twist Screw (I) and (H) to connect (D) and (F).

Done!

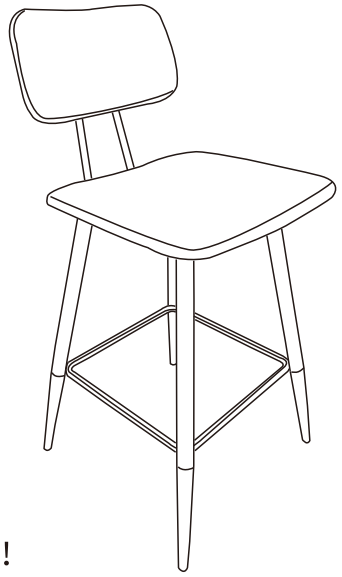

If there are any questions during the assembly process, please contact us at **AssemblyMaster@hotmail.com.**
An video and description about the step you were stucked will help us to understand the problem quickly.