



INSTALLATION GUIDE

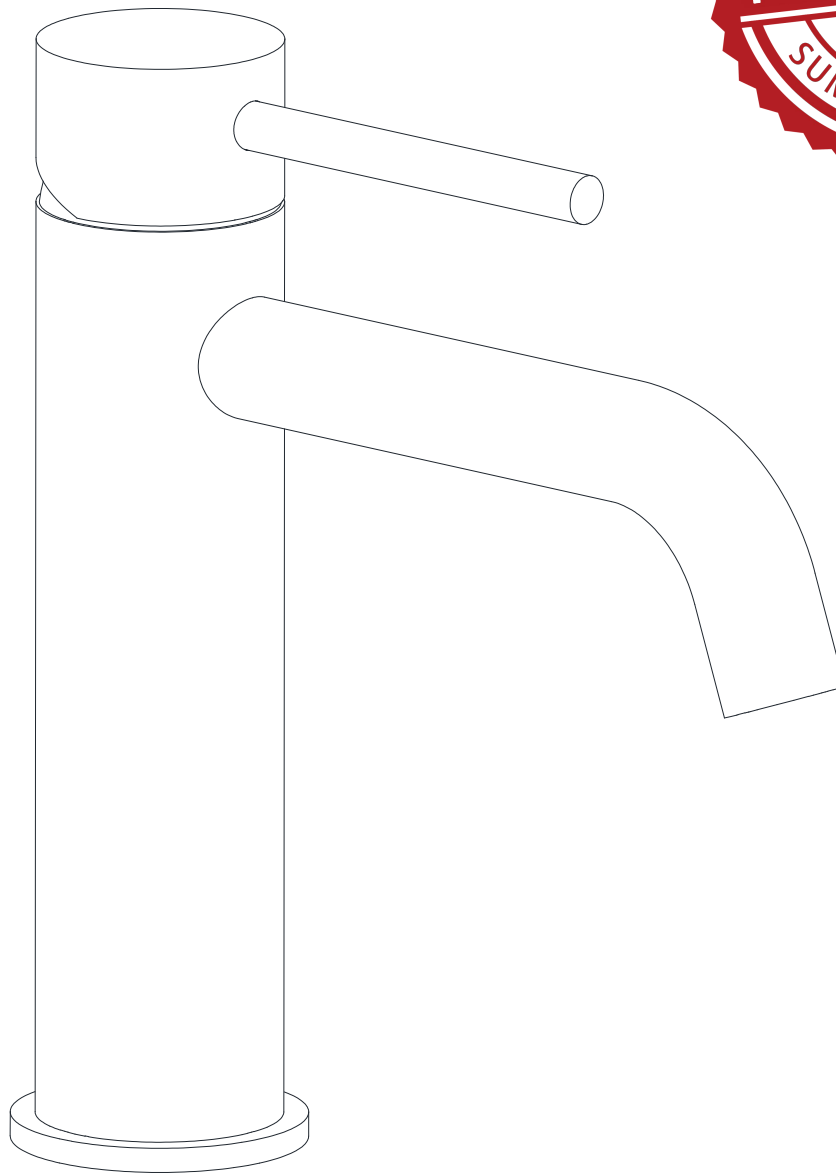


SINGLE-HANDLE BATHROOM SINK FAUCET

CUSTOMER CARE LINE: +1-866-203-0866


TOOLS RECOMMENDED

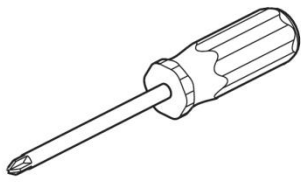

Philips Screwdriver

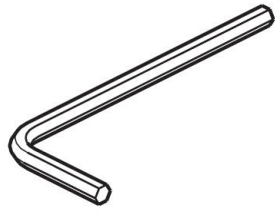


Allen Wrench

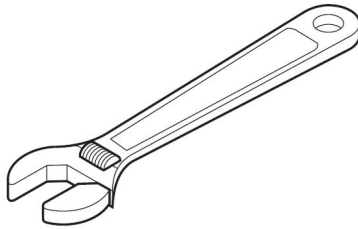

Adjustable Wrench



Channel Locks

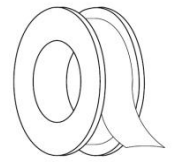

Teflon Tape

1. BEFORE PROCEEDING



WARNING: Before beginning any installation or operation, read all instructions carefully. If you are unsure about installing this product, consult a licensed professional. This product must be installed in compliance with all applicable local and state plumbing and building codes. Professional assistance is strongly recommended.

2. SHUT OFF WATER SUPPLY


Locate the water supply inlets and turn off the corresponding water supply valves, typically located under the sink or near the water meter. If replacing an existing unit, remove the old unit and thoroughly clean the mounting surface to ensure proper installation.

3. CHECK THE COMPONENTS OF THE BOX

Upon opening the box, verify that all of the following items are included.

4. INSTALLATION HOLES INSPECTION

Ensure the installation hole size is accurate, with a recommended diameter of “B”

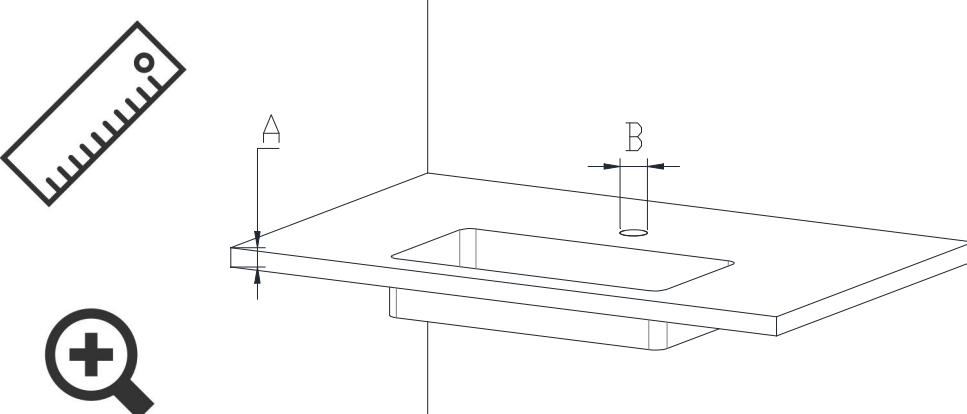

Code	Dimensions - Inch	Dimensions - mm
A	Max:1-3/8"	Max:35
B	Ø1-1/4" ~1-3/8"	Ø32~35

5. INSTALLATION


5.1 Before starting the faucet installation, open the shut-off valves to flush the hot and cold water supply lines. Allow water to run for 3 to 5 minutes to remove any dirt or debris from the pipes. After flushing is complete, close the shut-off valves again.




3~5 Min




Hot **Cold**

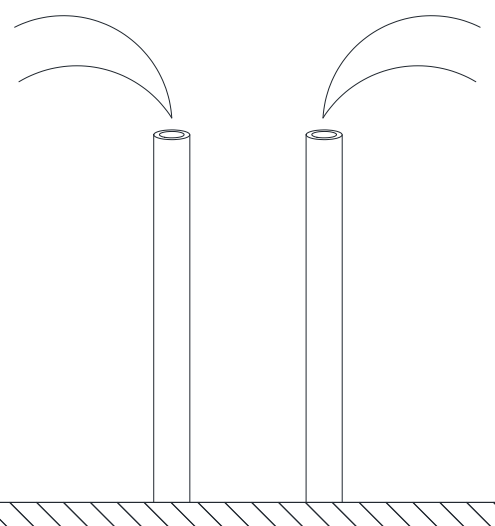

5.2 Remove the mounting hardware from the mounting shank.

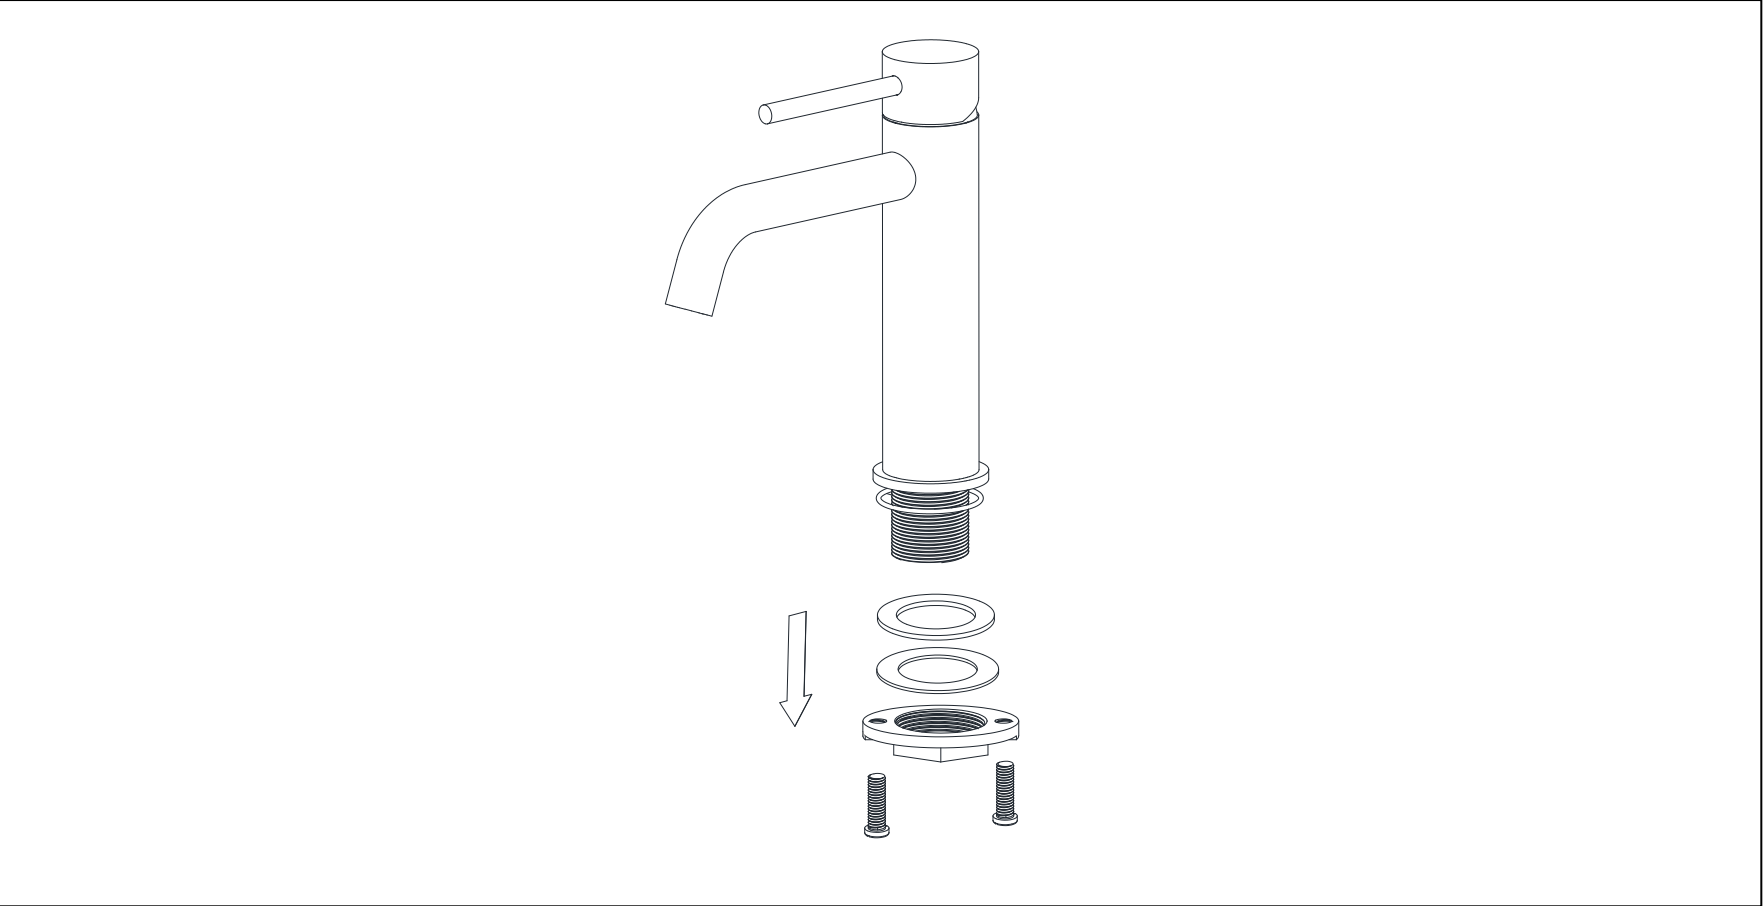

5.3 Connect the provided hot and cold steel braided water supply lines to their corresponding threaded connectors at the bottom of the faucet (hot on the left, cold on the right). Hand-tighten both connections, then use a wrench or pliers to secure them. Do not overtighten to avoid damaging the threaded connectors.

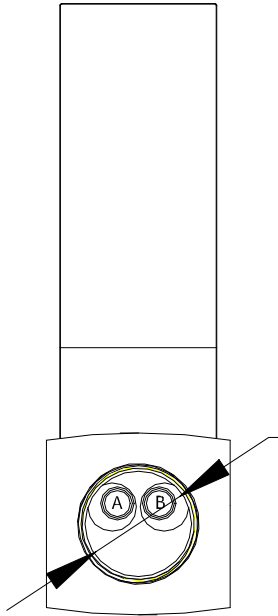

C



"A": Hole For Hot Water Inlet

"B": Hole For Cold Water Inlet


Code	Dimensions - Inch	Dimensions - mm
C	Ø1-1/4"	Ø32



5.4 Insert the faucet body through the mounting hole on the countertop. From underneath the countertop, slide the rubber washer, metal washer, and provided locknut onto the shank in the specified order. Tighten the locknut securely using a wrench while holding the faucet in place, and finish tightening with a Phillips screwdriver. Avoid overtightening to prevent damage.

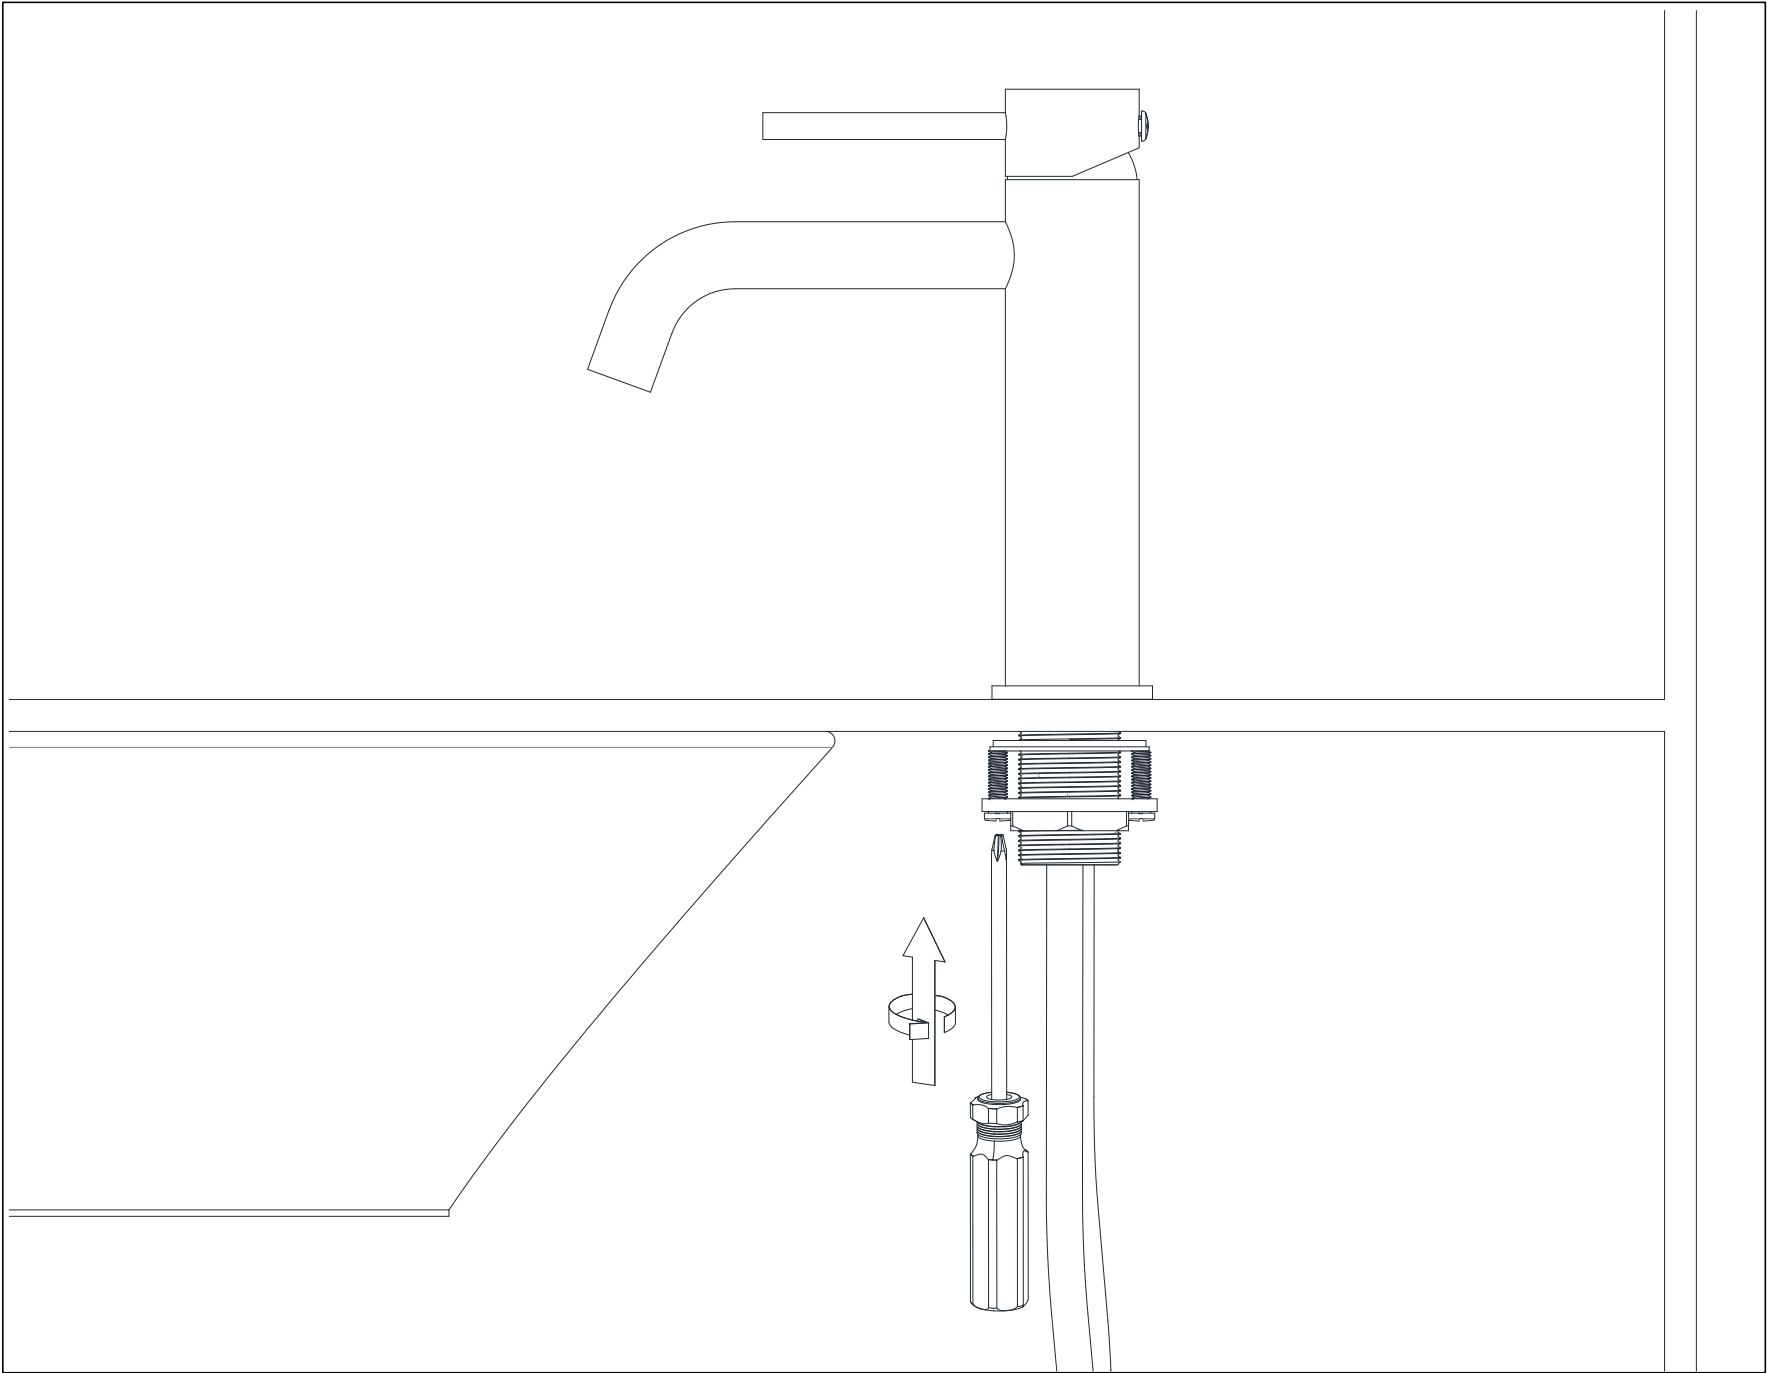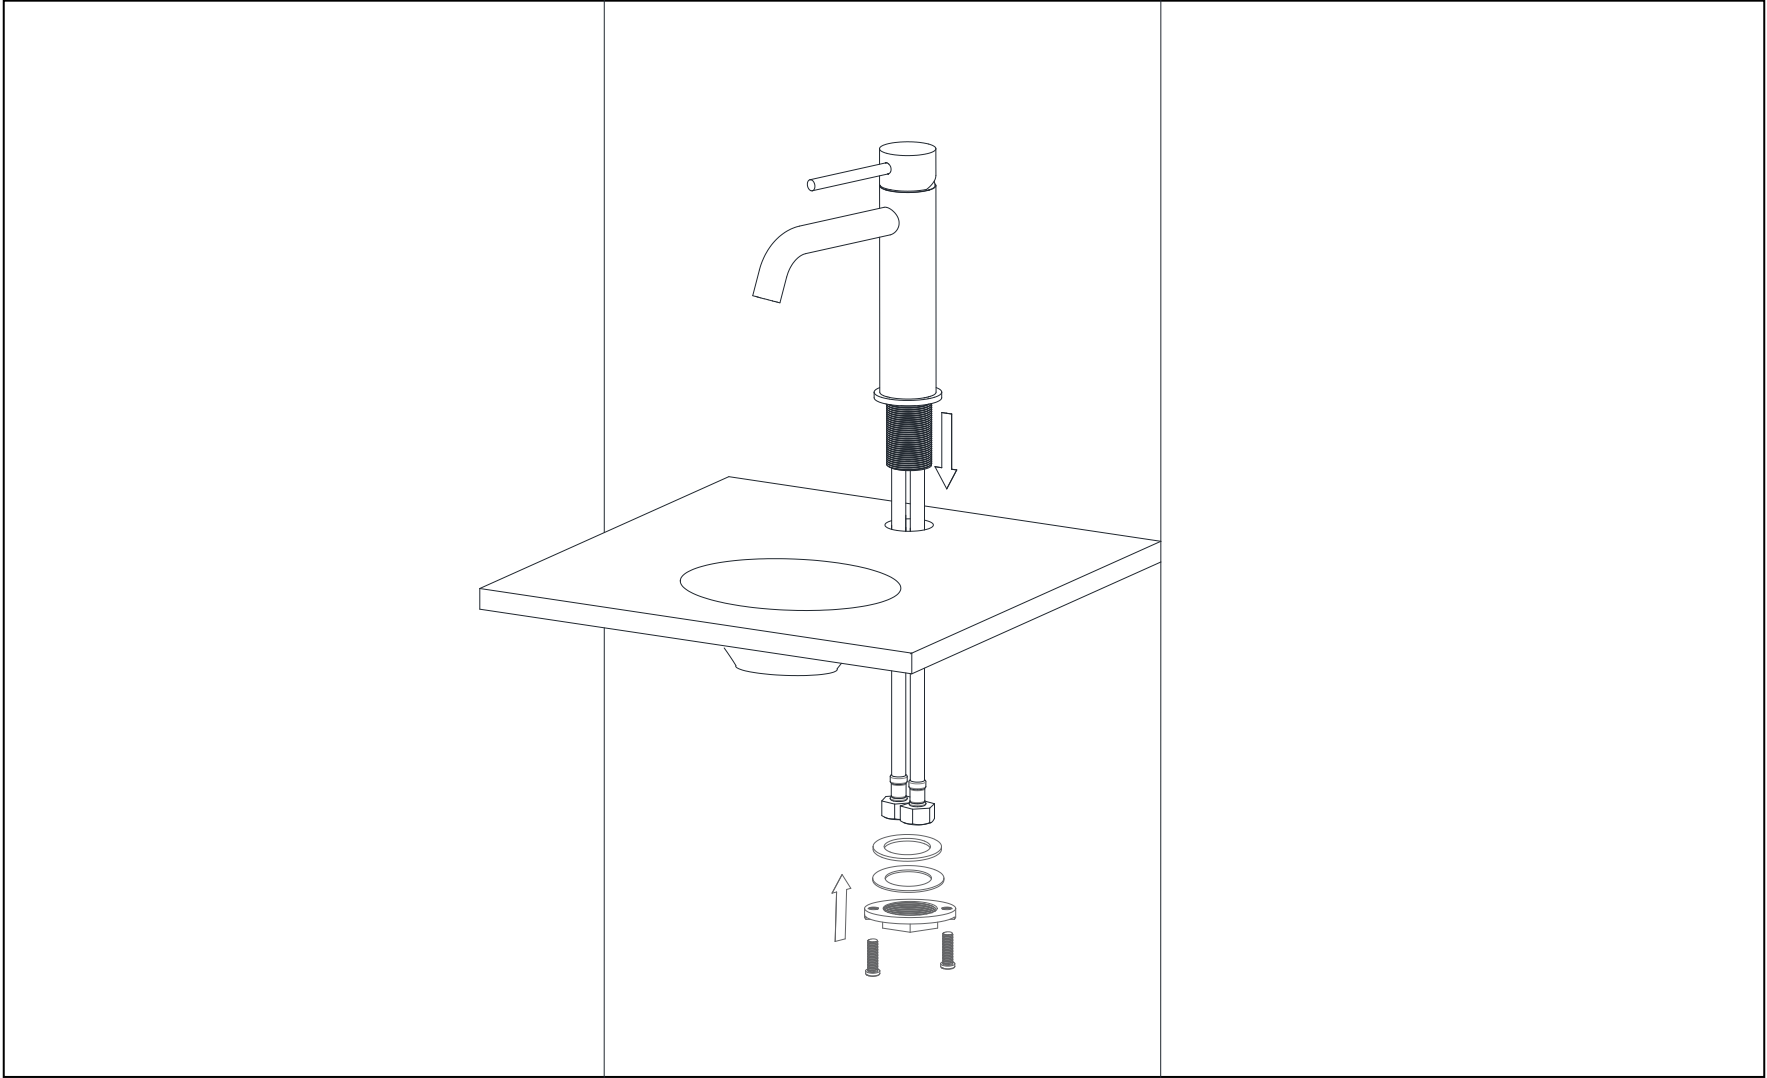

5.5 Connect the hot and cold water hoses from the faucet to the corresponding hot and cold supply valves. Ensure the connections are secure, then use a wrench to tighten the mounting nut. Avoid overtightening to prevent damage to the fittings.

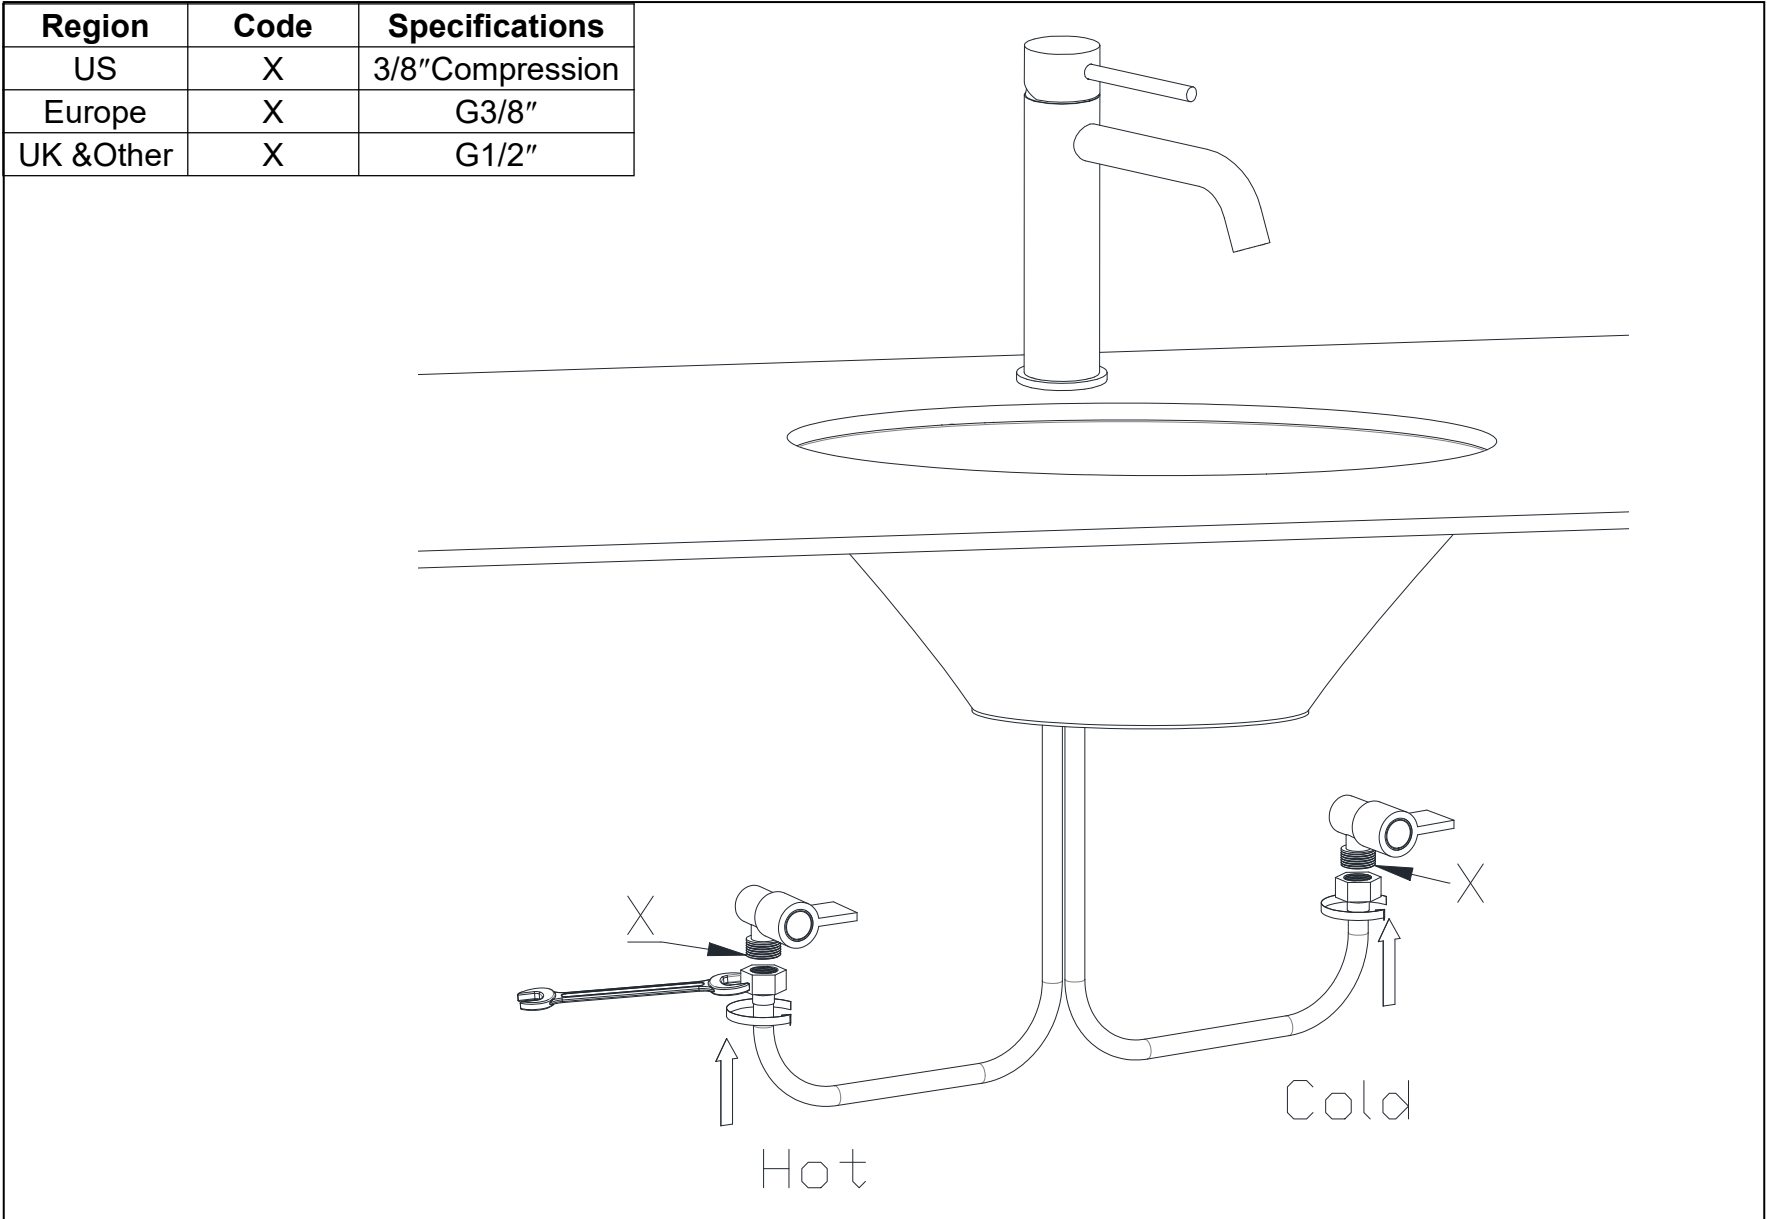

6. INSPECTION

Turn on the hot and cold water supplies and check all connections to ensure there are no leaks.

INSTALLATION COMPLETED



North America	Asia	Europe
SUMERAIN INTERNATIONAL GROUP INC	HONGKONG SUMERAIN SANITARY INDUSTRY CO., LIMITED	SUMERAIN EUROPE SUPPORT TEAM
Add: 1226 NORTH KING ST NUM 522 WILMINGTON, DE 19801 United States	Add: FLAT/RM 3B 3/F BANK TOWER NOS.351&353 KING'S ROAD NORTH POINT,HONGKONG	Add: Flottwellstr.15 10785 Berlin, Deutschland
Tel: +1(866)203-0866	Tel: +86-750-2731579	Tel: +49 (0)30/23975898
E-mail: supports@sumerain.us	E-mail: supports@sumerain.com	E-mail: de@sumerain.com