


# INSTALLATION MANUAL

## SHOE(STORAGE)CABINET

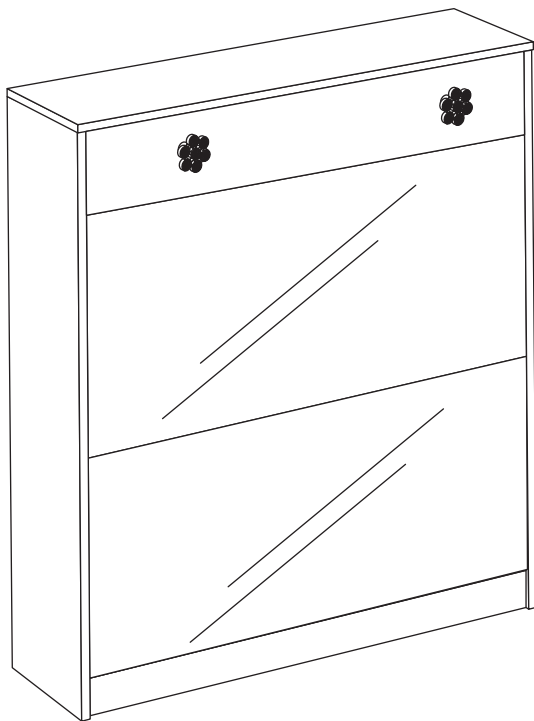

### **WARNING**

**INSTALLATION REQUIRES TWO ADULTS,  
KEEP AWAY FROM CHILDREN TO  
PREVENT ANY INJURY.**

Tools Required




















# INSTALLATION MANUAL

## SHOE(STORAGE)CABINET
























Please read the instructions carefully before assembling the cabinet.

Two adults are required for assembly of this product on a clean, flat surface without a rough surface that could scratch the panels.

### MDF Panel parts

 <p>806*238*15mm</p> <p><b>1</b> Left side panel    1PC</p>	 <p>806*238*15mm</p> <p><b>2</b> Right side panel    1PC</p>	 <p>831*238*15mm</p> <p><b>3</b> Top panel    1PC</p>
 <p>800*60*12mm</p> <p><b>4</b> Bottom slot slat    1PC</p>	 <p>800*300*5mm</p> <p><b>5</b> Back panel    1PC</p>	 <p>800*116*12mm</p> <p><b>6</b> Back slot slat    1PC</p>
 <p>800*116*12mm</p> <p><b>7</b> Back slot slat    1PC</p>	 <p>806*300*5mm</p> <p><b>8</b> Back panel    1PC</p>	 <p>784*135*12mm</p> <p><b>9</b> Mirror drawer slat    4PCS</p>
 <p>784*97*12mm</p> <p><b>10</b> Mirror drawer slat    2PCS</p>	 <p>795*320*12mm</p> <p><b>11</b> Mirror panel    2PCS</p>	 <p>794*92*15mm</p> <p><b>12</b> Drawer panels    1PC</p>
 <p>795*86*12mm</p> <p><b>13</b> Drawer backs    1PC</p>	 <p>188*76*12mm</p> <p><b>14</b> Drawer side panels    1PC</p>	 <p>188*76*12mm</p> <p><b>15</b> Drawer side panels    1PC</p>
 <p>761*198*5mm</p> <p><b>16</b> Drawer pallets    1PC</p>	 <p>188*76*12mm</p> <p><b>17</b> Side panel    1PC</p>	


## Hardware fitting

 Left	 Right	 3.5*10mm	 4*16mm	 3.5*16mm
<b>A</b> 2PCS	<b>B</b> 2PCS	<b>C</b> 20PCS	<b>D</b> 4PCS	<b>E</b> 8PCS
 3.5*25mm				
<b>F</b> 8PCS	<b>G</b> 4PCS	<b>H</b> 4PCS	<b>I</b> 4PCS	<b>J</b> 2PCS
				
<b>K</b> 2PCS	<b>L</b> 19PCS	<b>M</b> 19PCS	<b>N</b> 4PCS	<b>O</b> 2PCS
 3.5*14mm	 3.5*25mm			
<b>P</b> 6PCS	<b>Q</b> 2PCS	<b>R</b> 2PCS	<b>S</b> 2PCS	<b>T</b> 2PCS
 3.5*12mm		 3.5*30mm		
<b>U</b> 8PCS	<b>V</b> 2PCS	<b>X</b> 6PCS		

Please read the instructions carefully before assembling the cabinet.  
Two adults are required for assembly of this product on a clean, flat surface without a rough surface that could scratch the panels.

# Board Identification

Not Actual Size

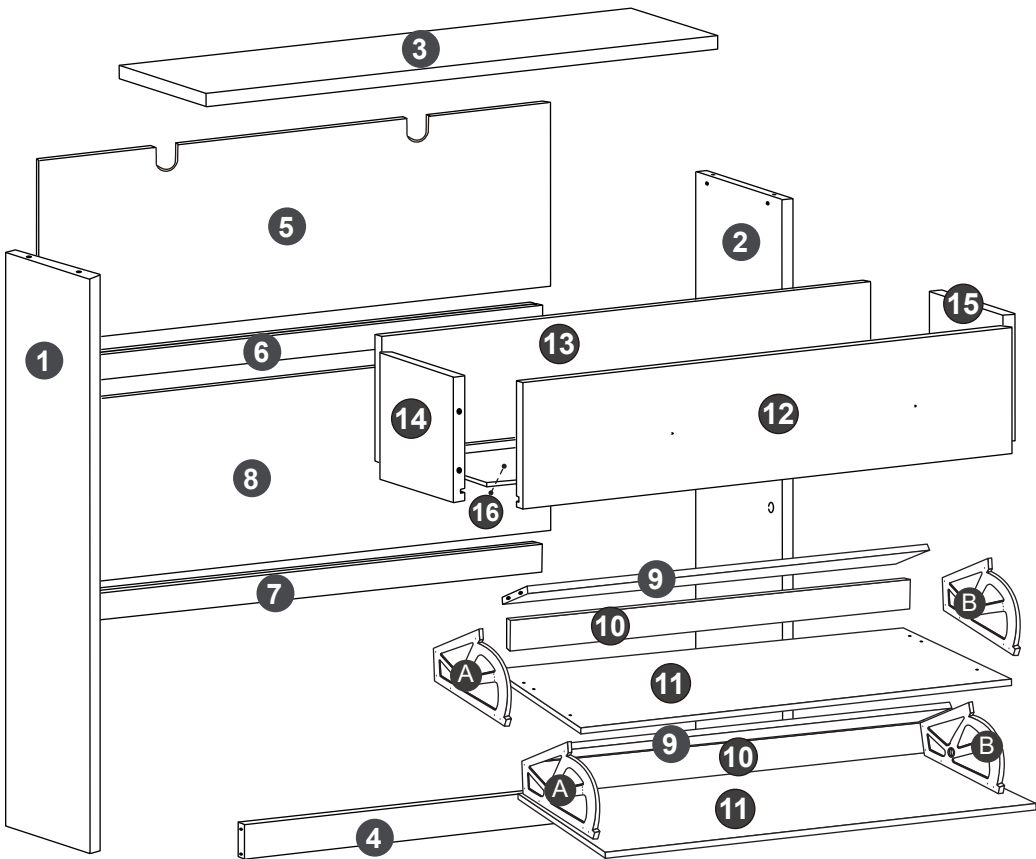


## Assistance must be required for assembly of this product

Please read the instructions carefully before assembling the cabinet.

Two adults are required for assembly of this product on a clean, flat surface without a rough surface that could scratch the panels.

### ASSEMBLY INSTRUCTION

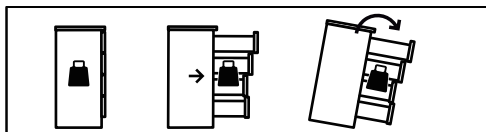

English

## WARNING

Serious or fatal crushing injuries can occur from furniture tip-over.


**ALWAYS** secure this furniture to the wall using tip-over restraints.

To further reduce the risk of serious injury and death from tip-overs:


- Place heaviest items in the lower drawer.
- Do not set TVs or other heavy objects on top of this product.
- Never let children climb or hang on drawers, doors, or shelves.




## STEP 1

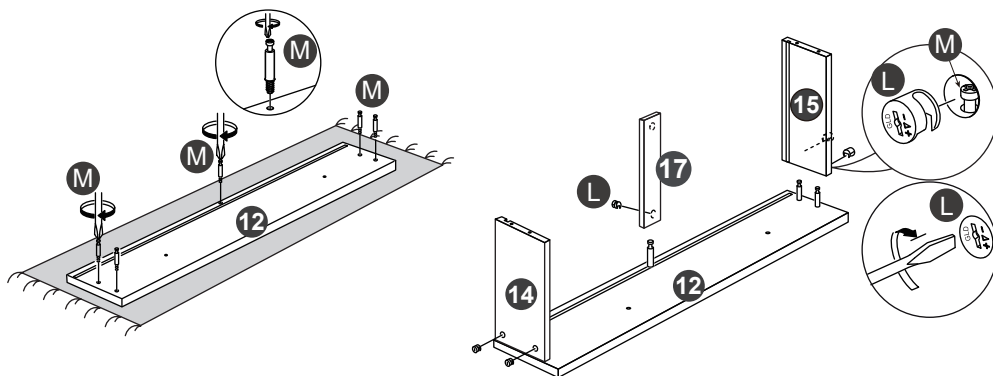


STEP 2

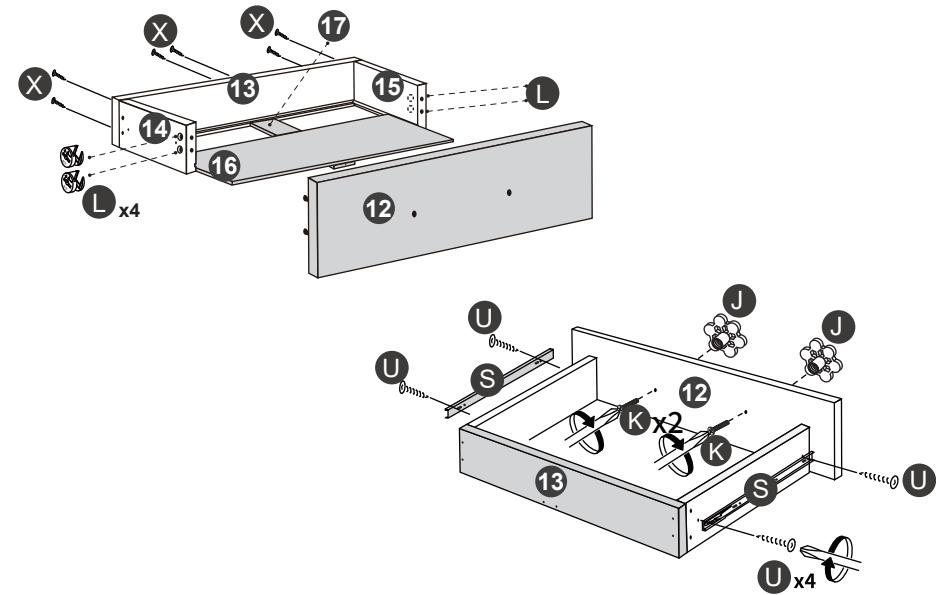


STEP 3

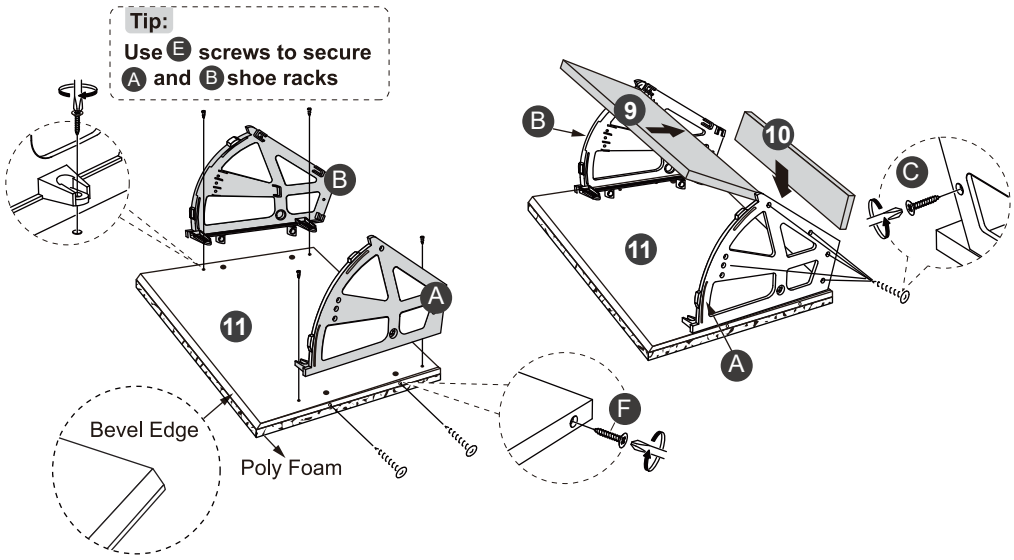

STEP 4

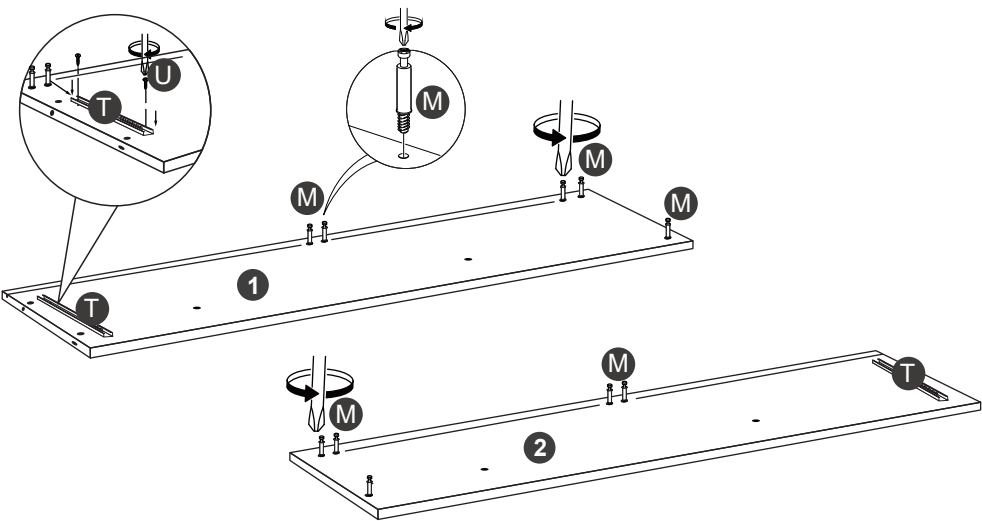


STEP 5

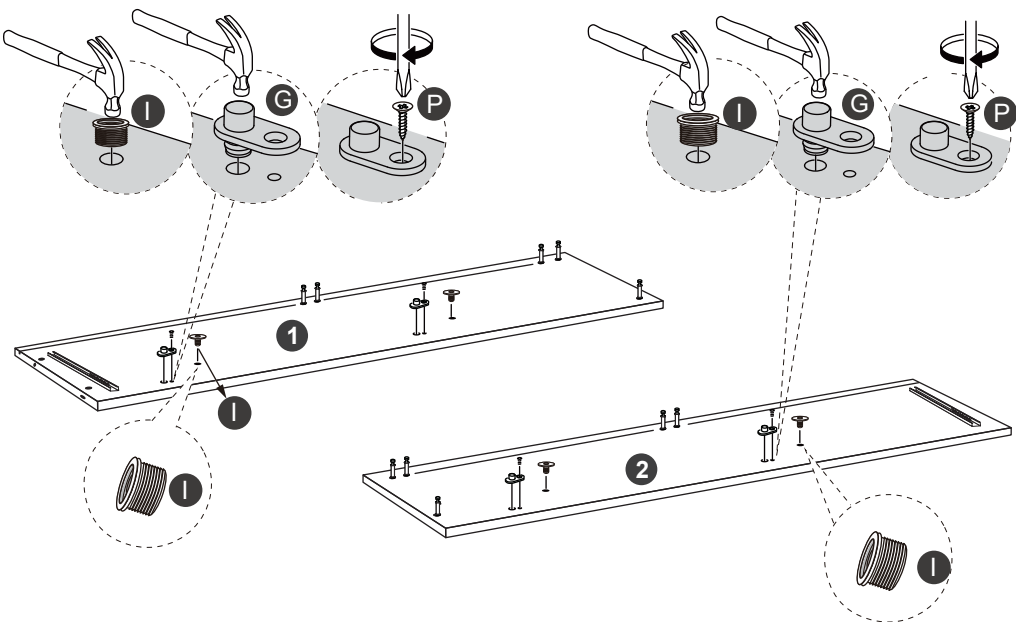


## STEP 6

### Attention:

When installing ④, ensure that the holes on the board face inward and the bevel side faces upward

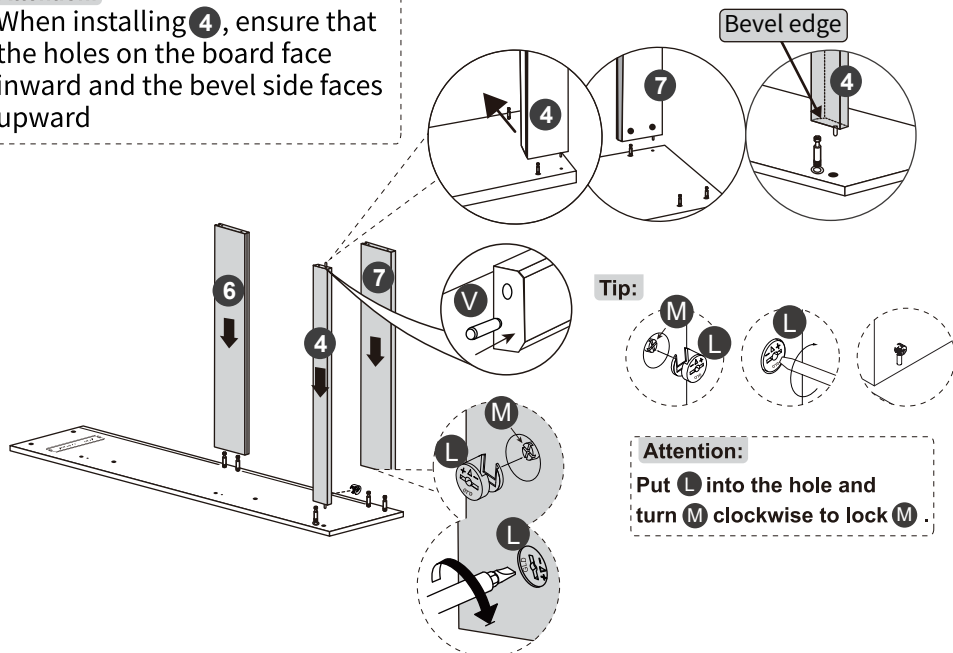

## STEP 7

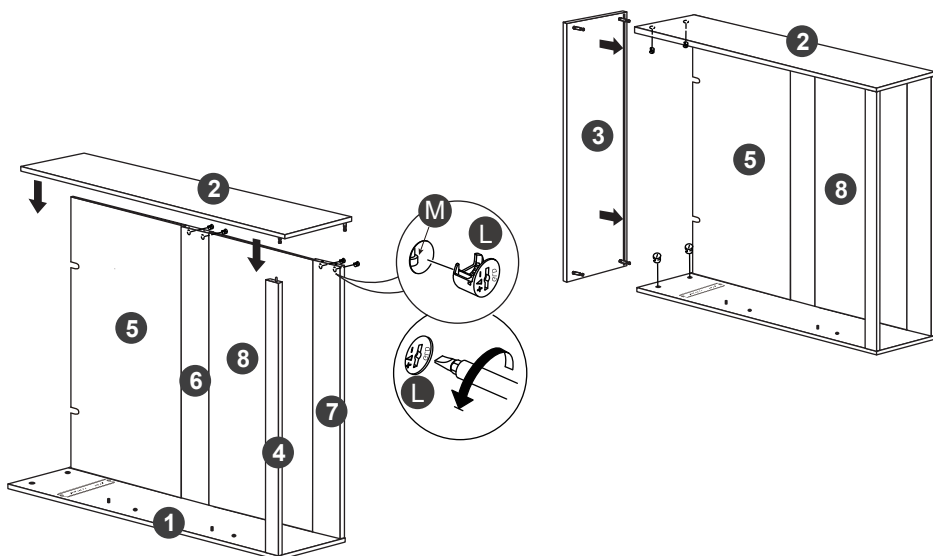




## STEP 8



### ⚠ WARNING

To reduce the risk of furniture Tip over"  
ALWAYS install anti-tip device provided  
-NEVER allow children to stand,  
climb or hang on drawers.

wall

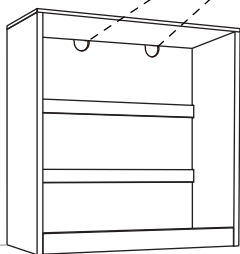

### STEP 1

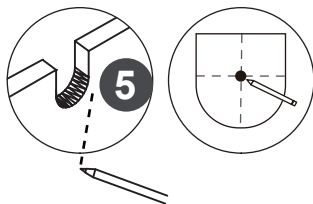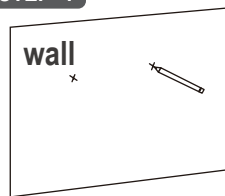



Put the cabinet in an appropriate position, and mark the center of the hole on the cabinet, a total of 2 places.

### STEP 2



According to the 2 holes drawn, Put the rubber plug **R** into the wall.

### STEP 3


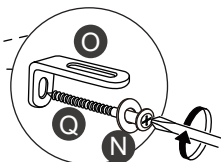
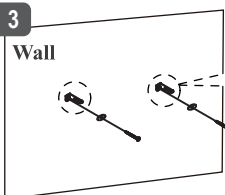


Screw **Q** into the top two holes in the wall.





### STEP 4

Move the cabinet back to the position of the drawing points, and align to holes.

wall

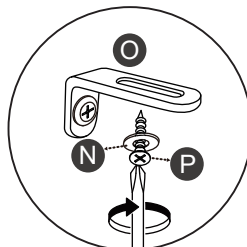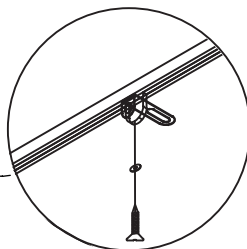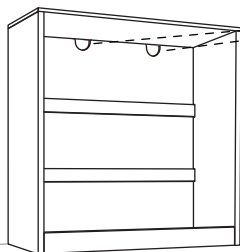

STEP 9

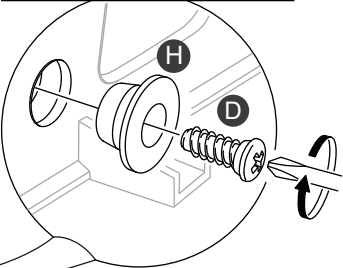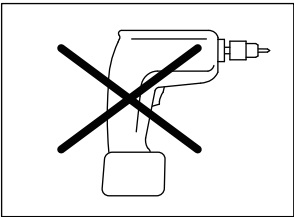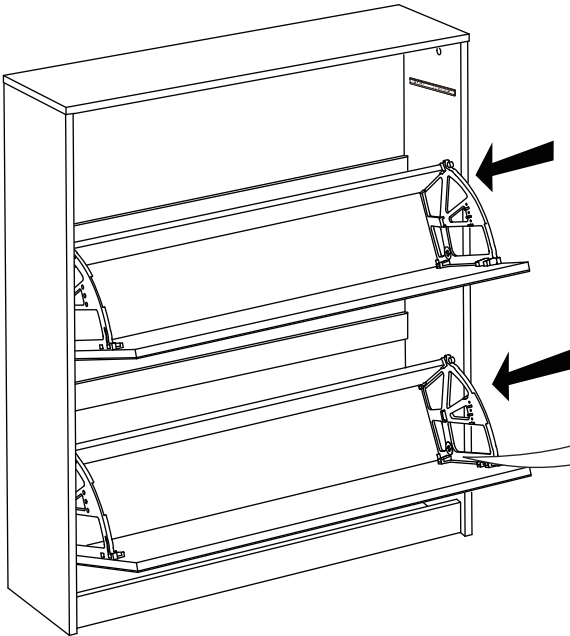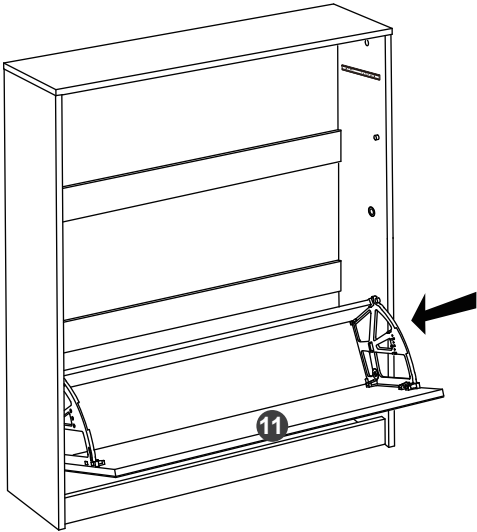

**STEP 10**

