
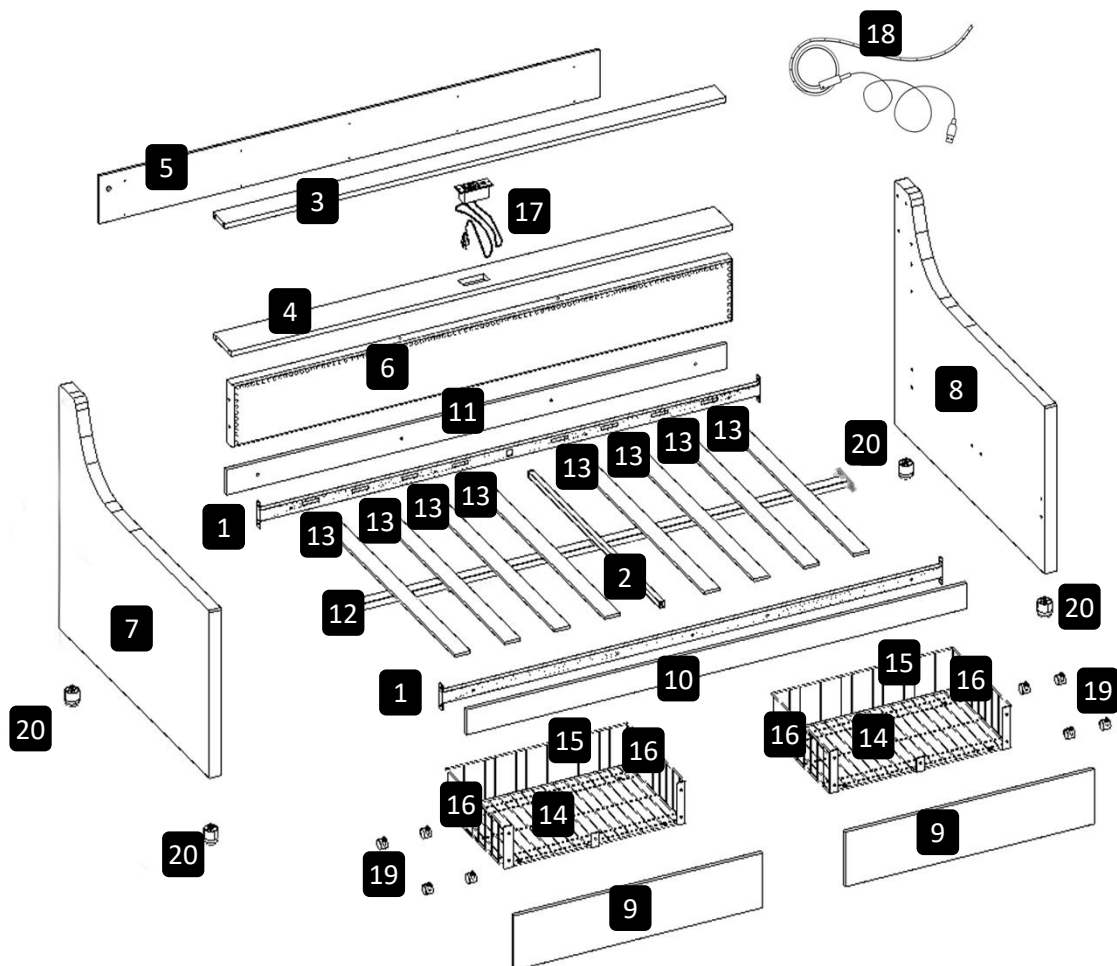
















ASSEMBLY INSTRUCTION

TIPS


1. This bed fit standard twin mattress 75" L x 39" W.
2. Always use the recommended size mattresses or mattress supports, or both, to help prevent the likelihood of entrapment or falls.
3. Do not allow horseplay on or under the bed and prohibit jumping on the bed.
4. Do not use substitute part. Contact the manufacture or dealer for replacement part.

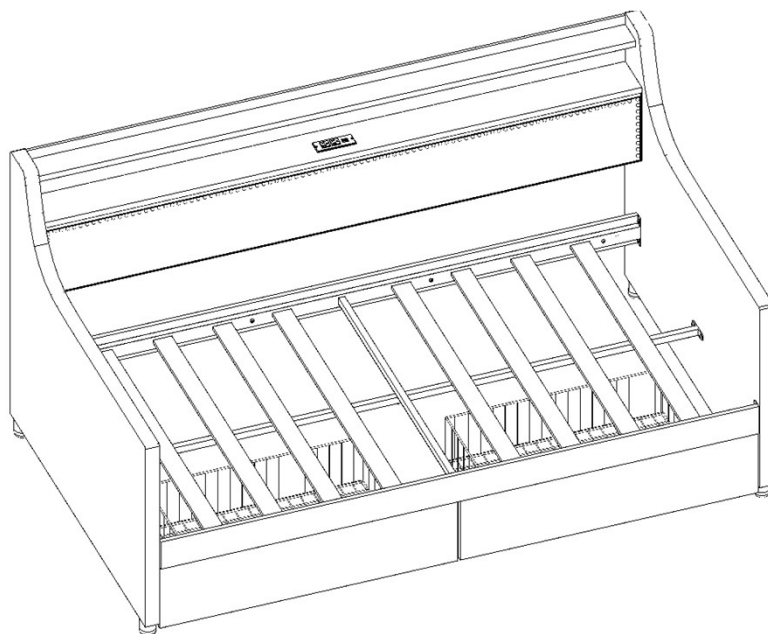




Part List

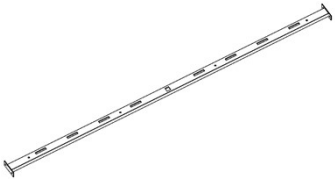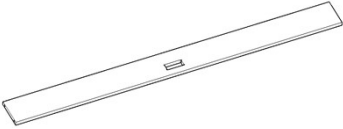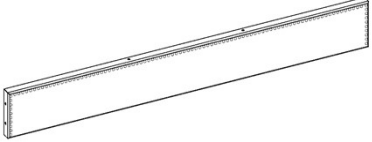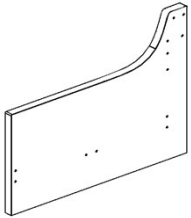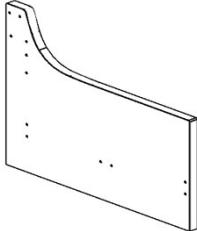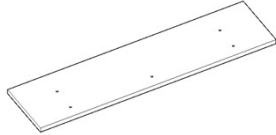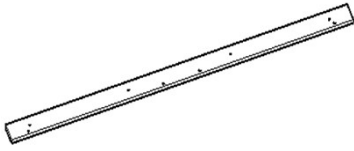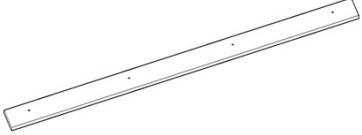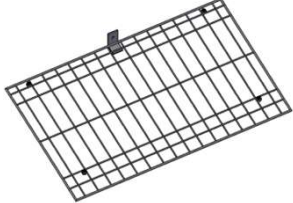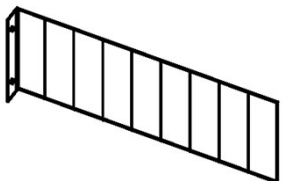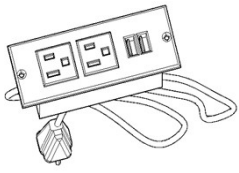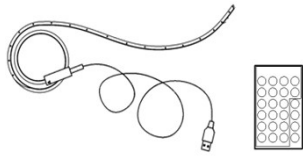1		2		3	
	Metal Slat Frame x2		Rail x1		Panel x1
4		5		6	
	Panel x1		Backboard x1		Headboard x1
7		8		9	
	Left Handrail x1		Right Handrail x1		Panels x2
10		11		12	
	Front Panel x1		Back Panel x1		Rail x1
13		14		15	
	Slats x8		Drawers Bottom Net x2		Side Net x2
16		17		18	
	Drawers Side Net x4		Socket X1		Lamp Strip Kit x1

Part List

19	 Caster x8	20	 Plastic Feet x4
----	--	----	--




Hardware List

A	 Bolts(M6X10mm) X14	B	 Bolts(M6X16mm) X14	C	 Bolts(M6X30mm) X8
D	 Bolts(M6X35mm) X3	E	 Bolts(M6X50mm) X4	F	 Spanner(M6) X1
G	 Allen Key X1	H	 Flat Gasket X6	I	 Screws (M3X12mm) X5
J	 Screws (M4X25mm) X10	K	 P-Shaped Iron Sheet x3	L	 Iron Sheet x4
M	 Clasp X22	N	 Eccenter X8	O	 Connecting screw rod X8
P	 Foam Pad X8				


Step1

Attention: Do not tighten the screws before completing the entire installation. If you have any difficulty with the installation process, please feel free to contact us.

Tear the tape from the back of the LED light

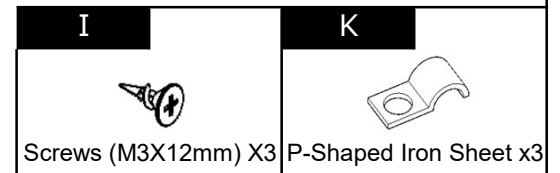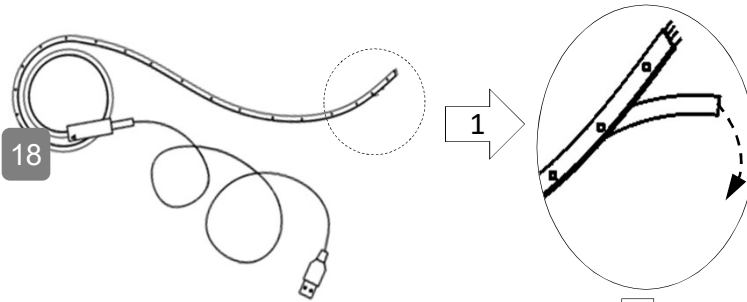


Assembly Tools Required(Not Included)

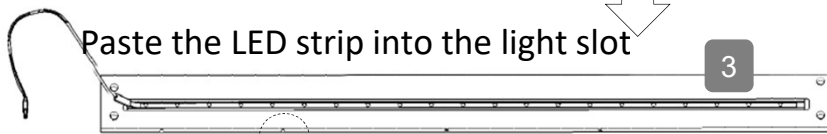

Paste the LED strip into the light slot

Watch the direction. There are screw holes on the edge of the board

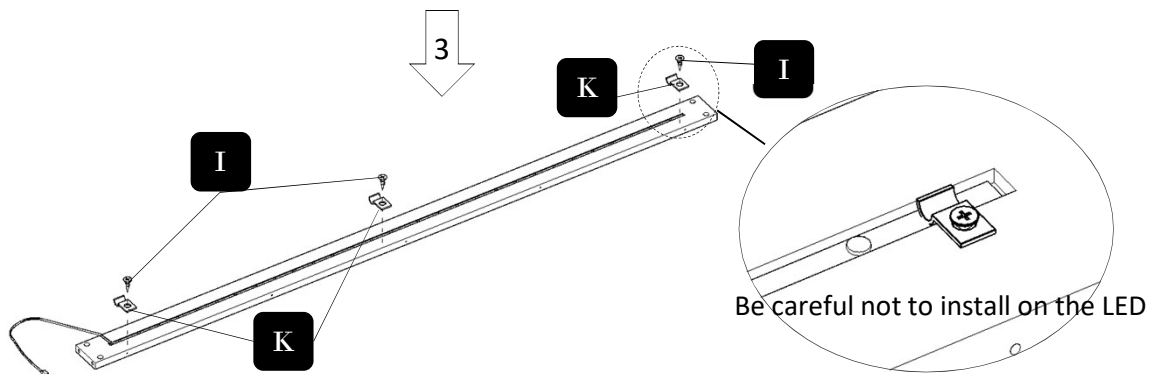


Step2

N





Eccenter X4




RIGHT

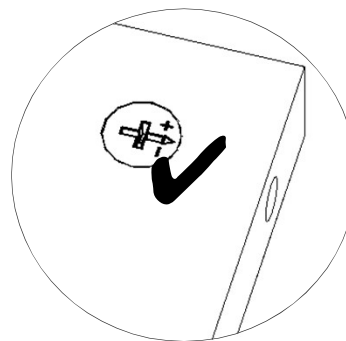


WRONG

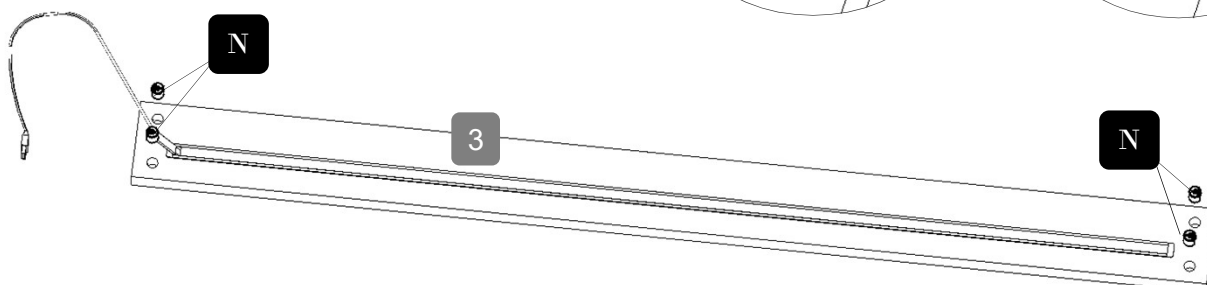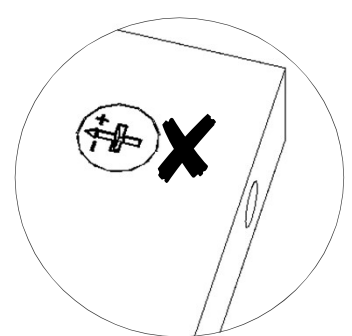


Step3

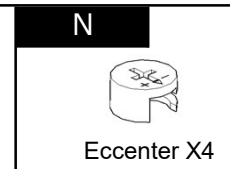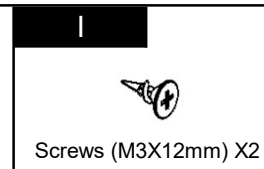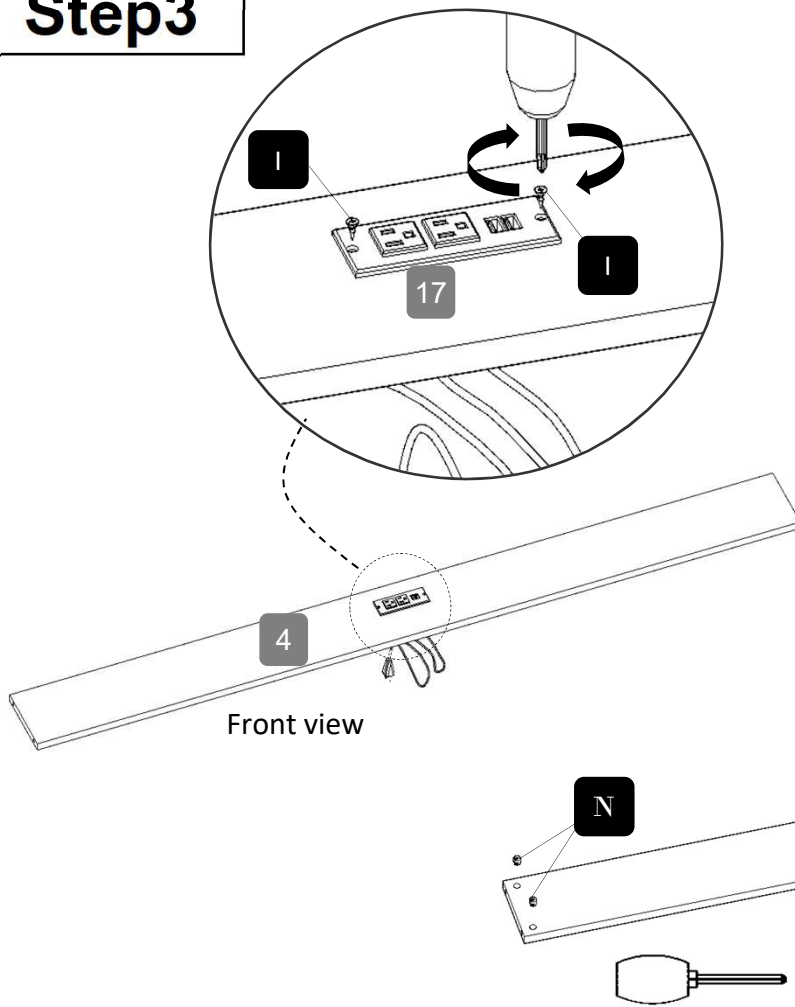

RIGHT

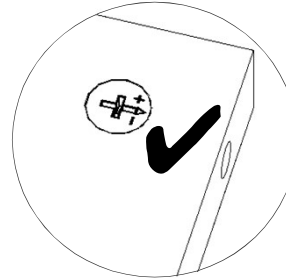


WRONG

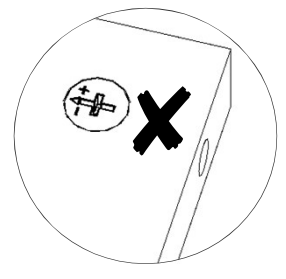


Assembly Tools Required(Not Included)

Step4

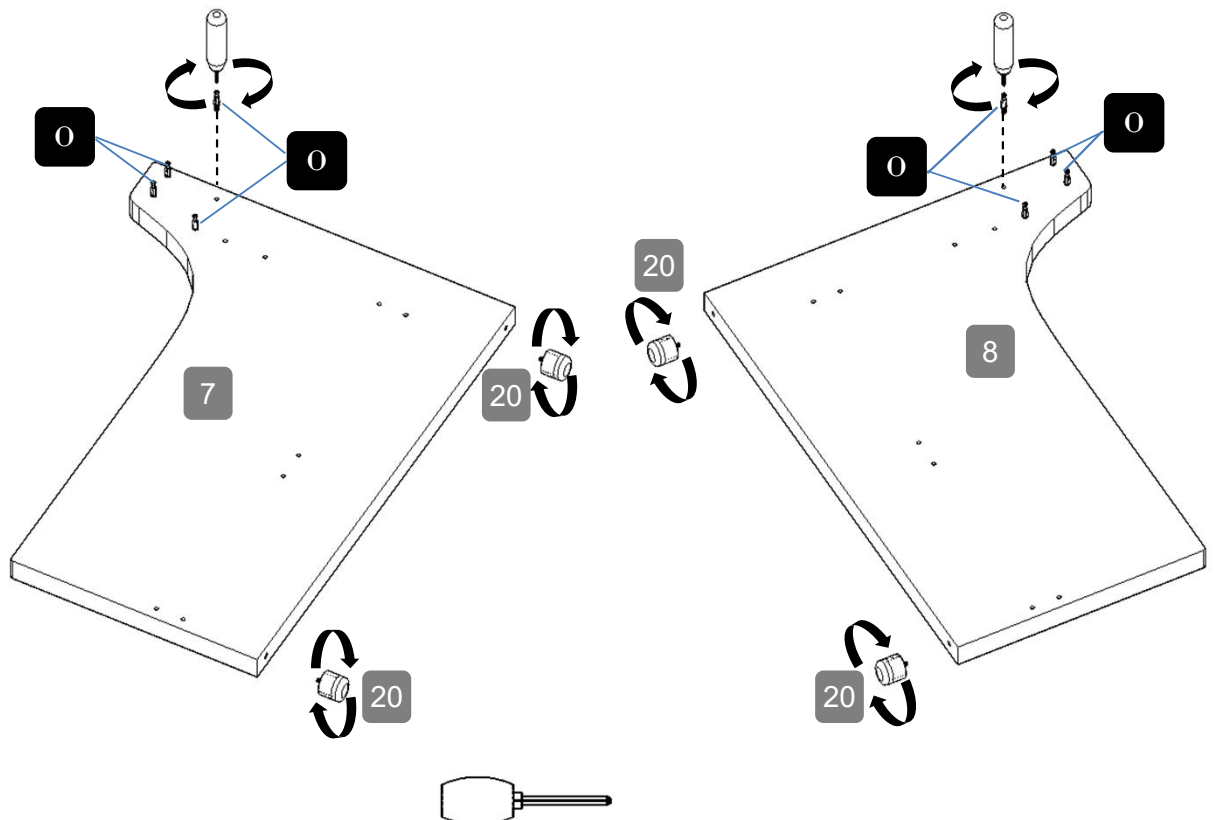


Assembly Tools Required(Not Included)

Step5

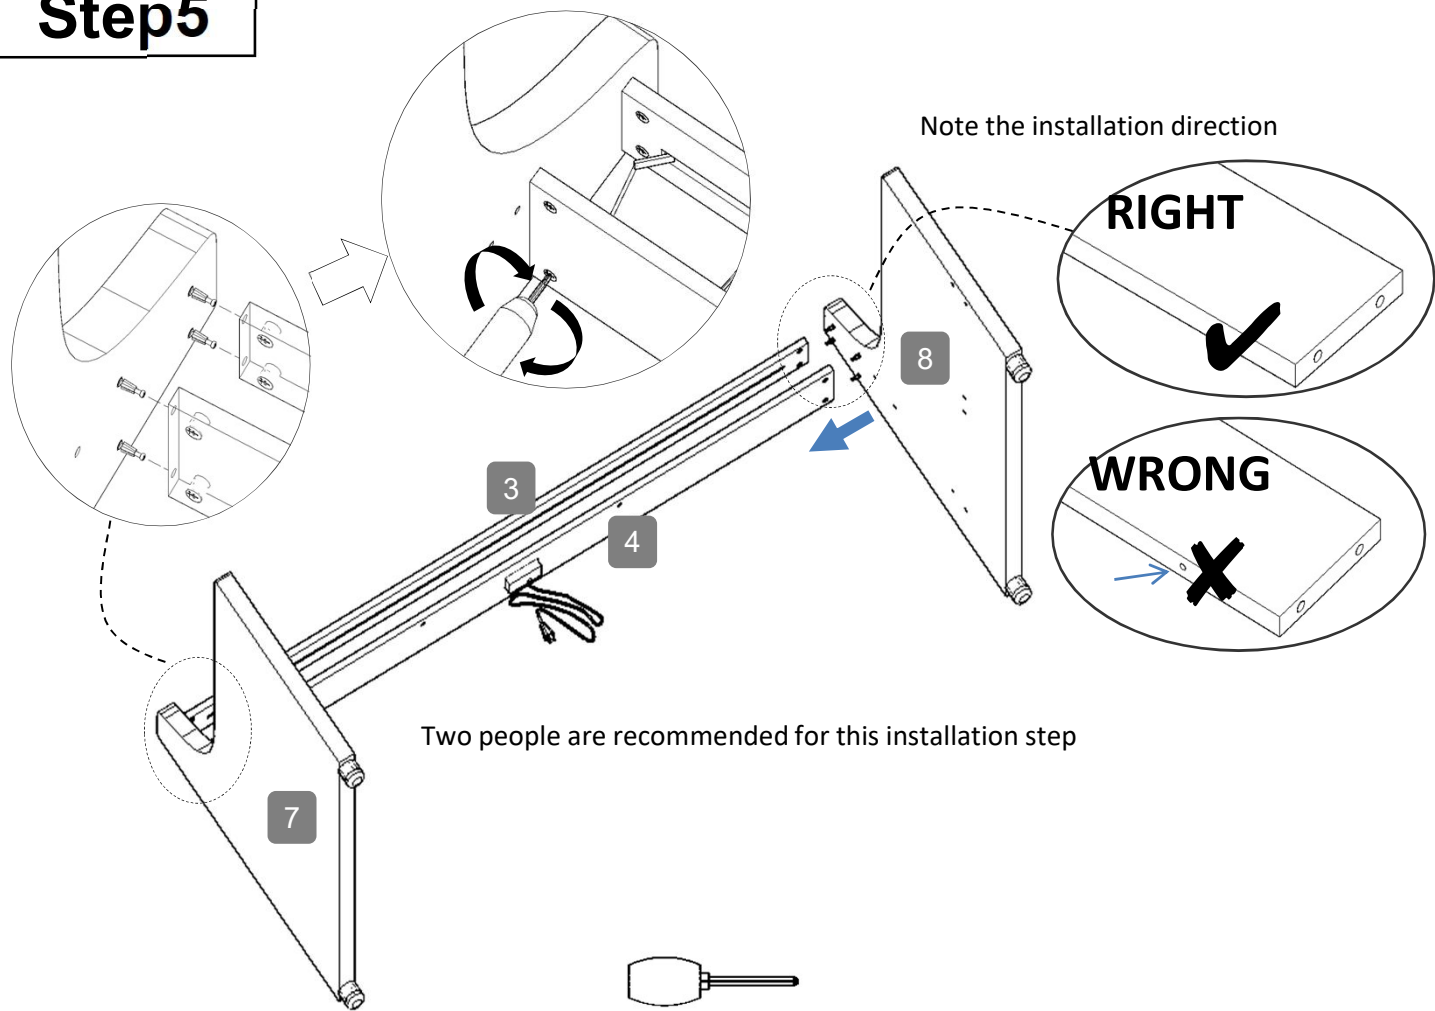

Step6

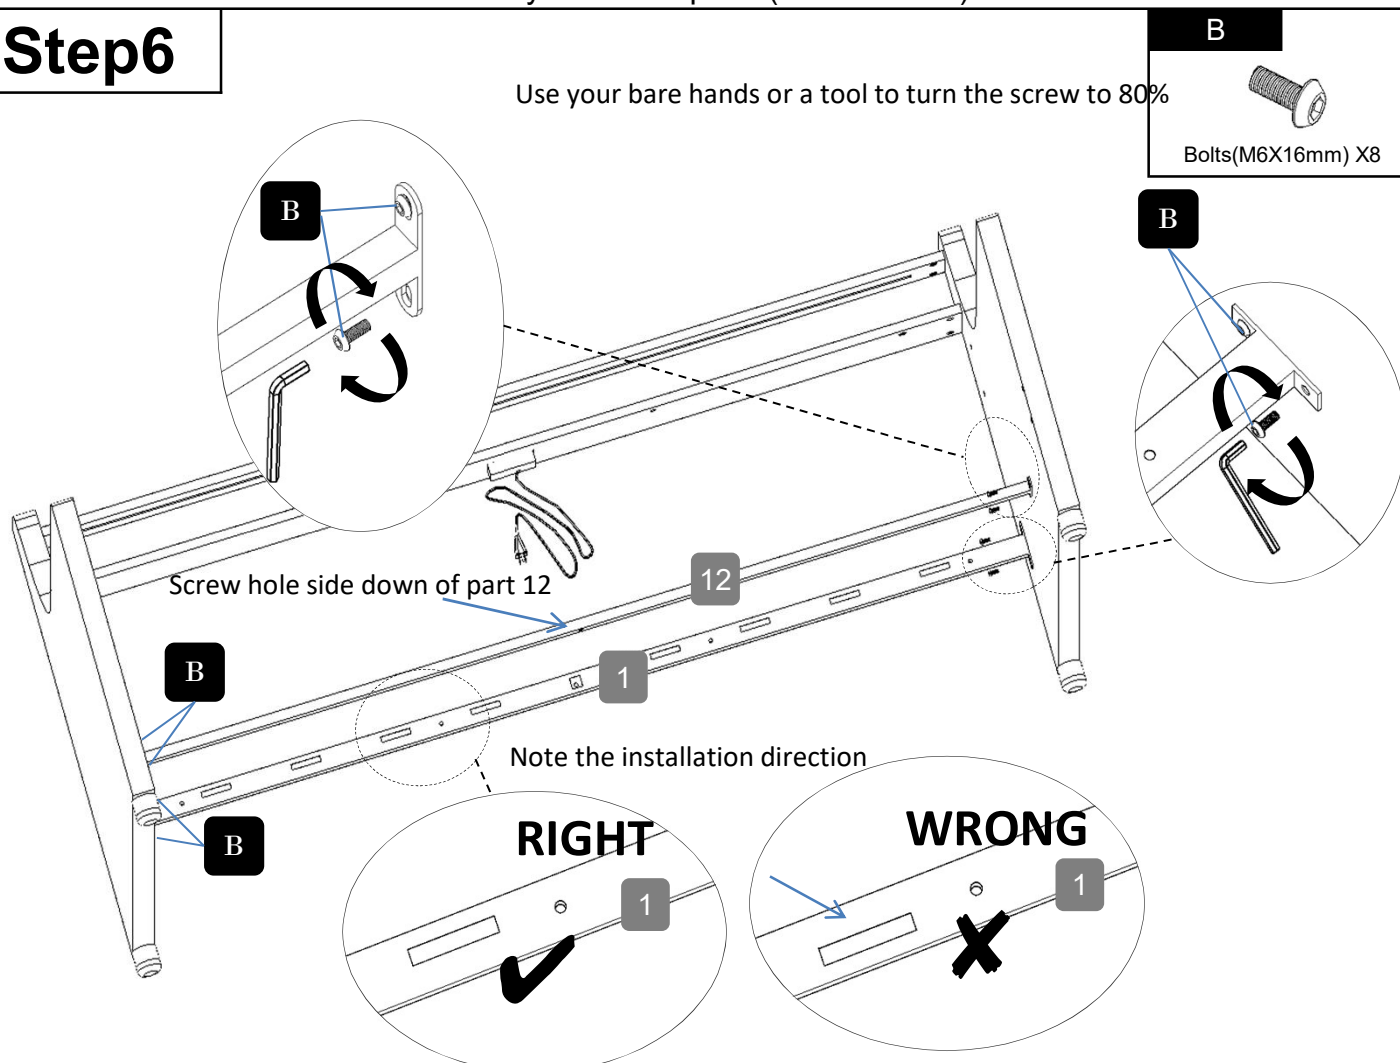


Step7

J



Screws (M4X25mm) X10

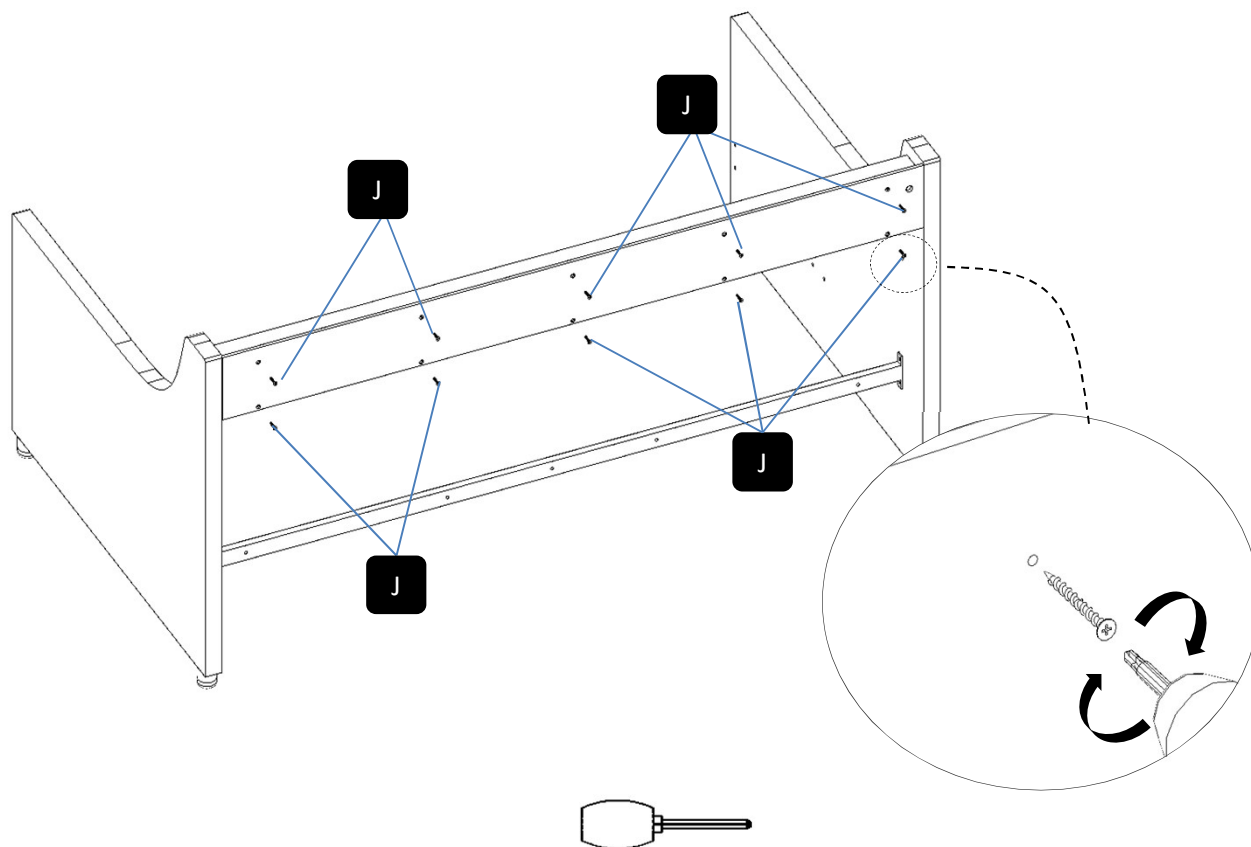

Assembly Tools Required(Not Included)

Step8

D



Bolts(M6X35mm) X2

E




Bolts(M6X50mm) X4

H



Flat Gasket X6

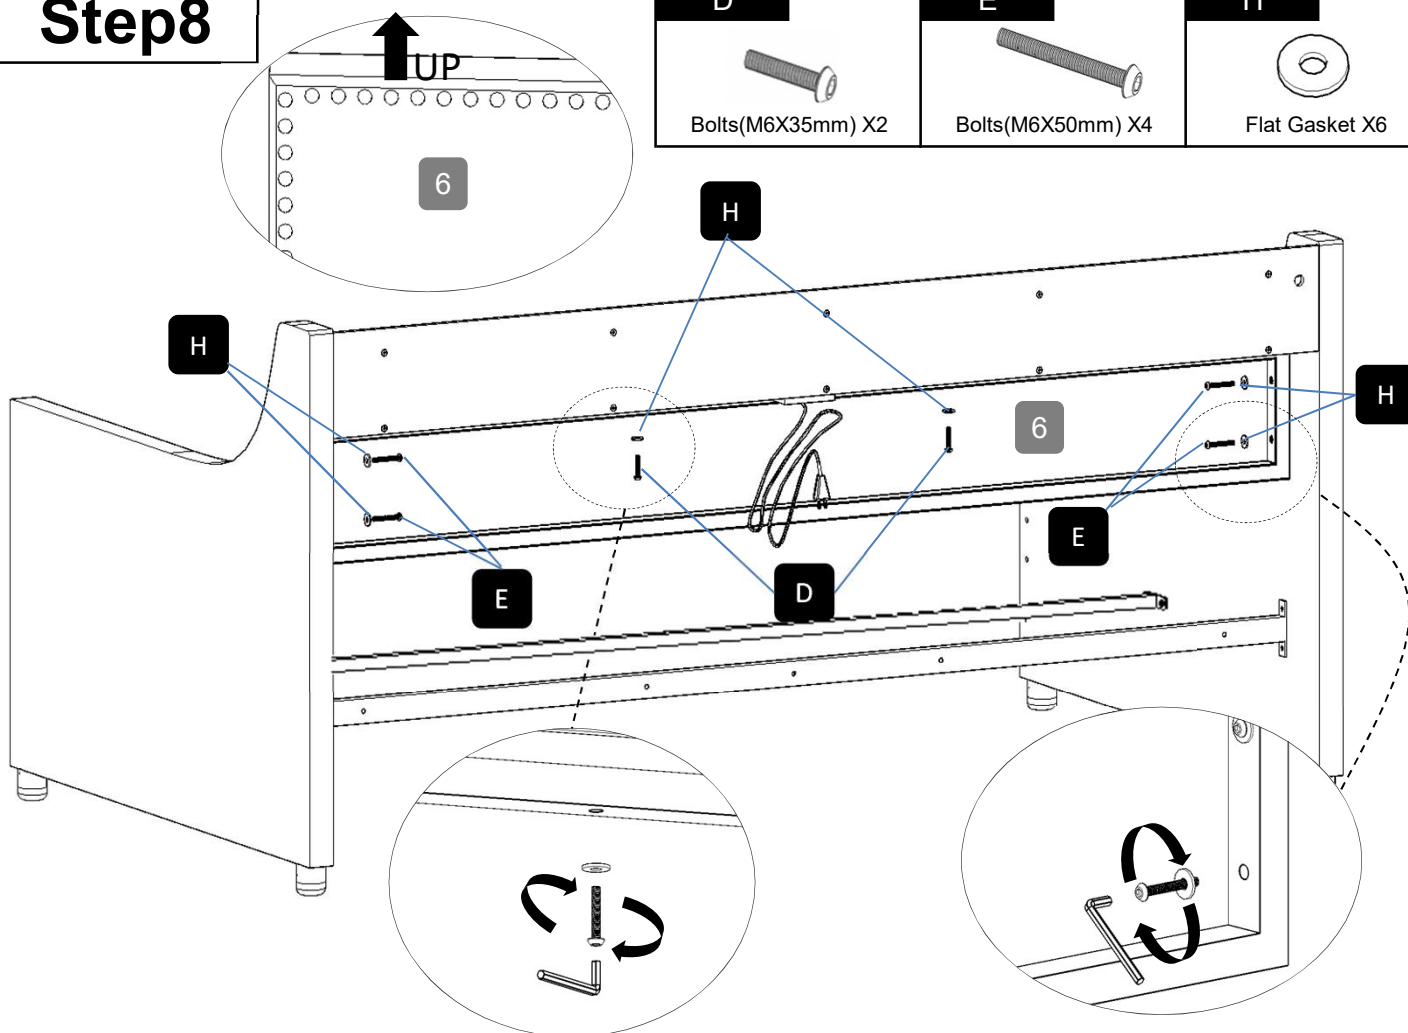

Step10

B




Bolts(M6X16mm) X1

D



Bolts(M6X35mm) X1

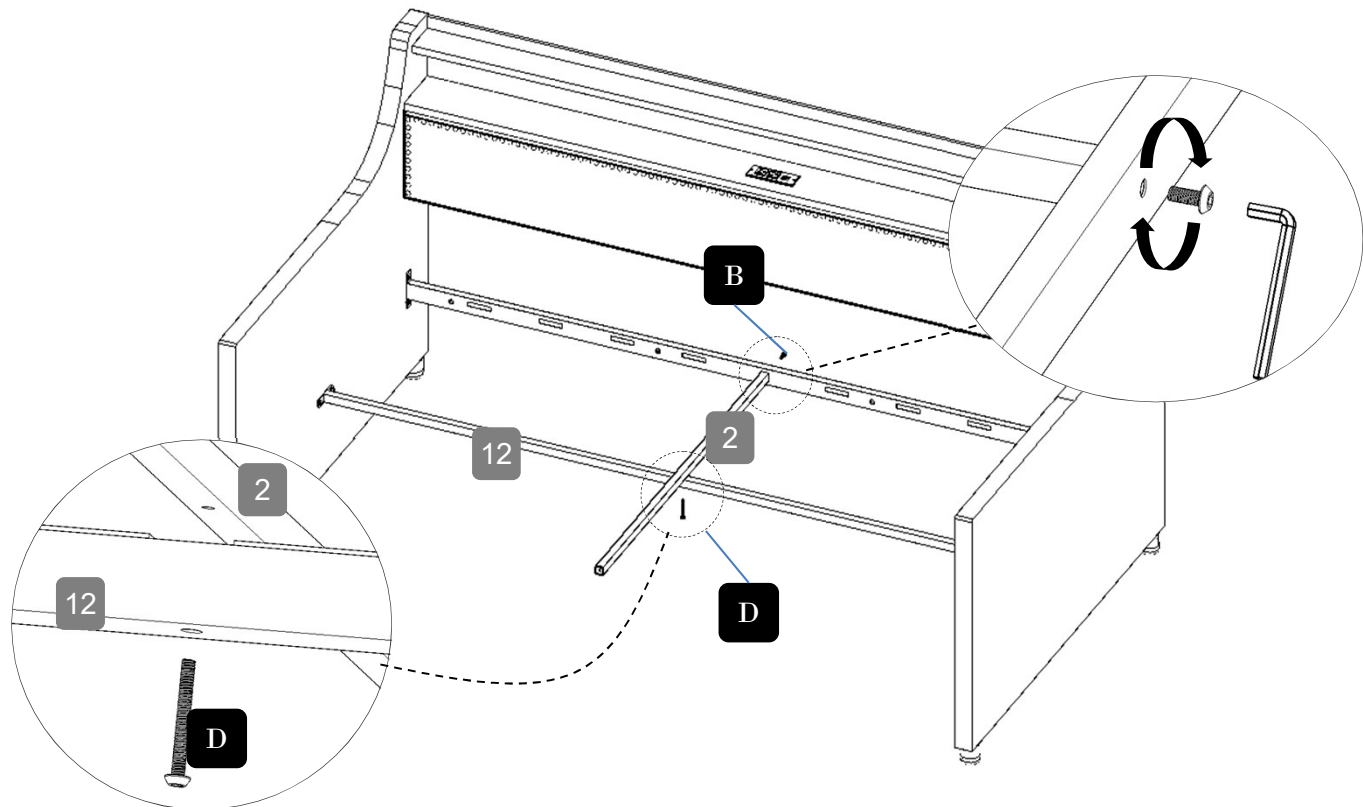


Bottom view

Pay attention to the mounting direction of the screw holes


Step11

P



Foam Pad X8

Paste foam pad where the bed slats touch the rail



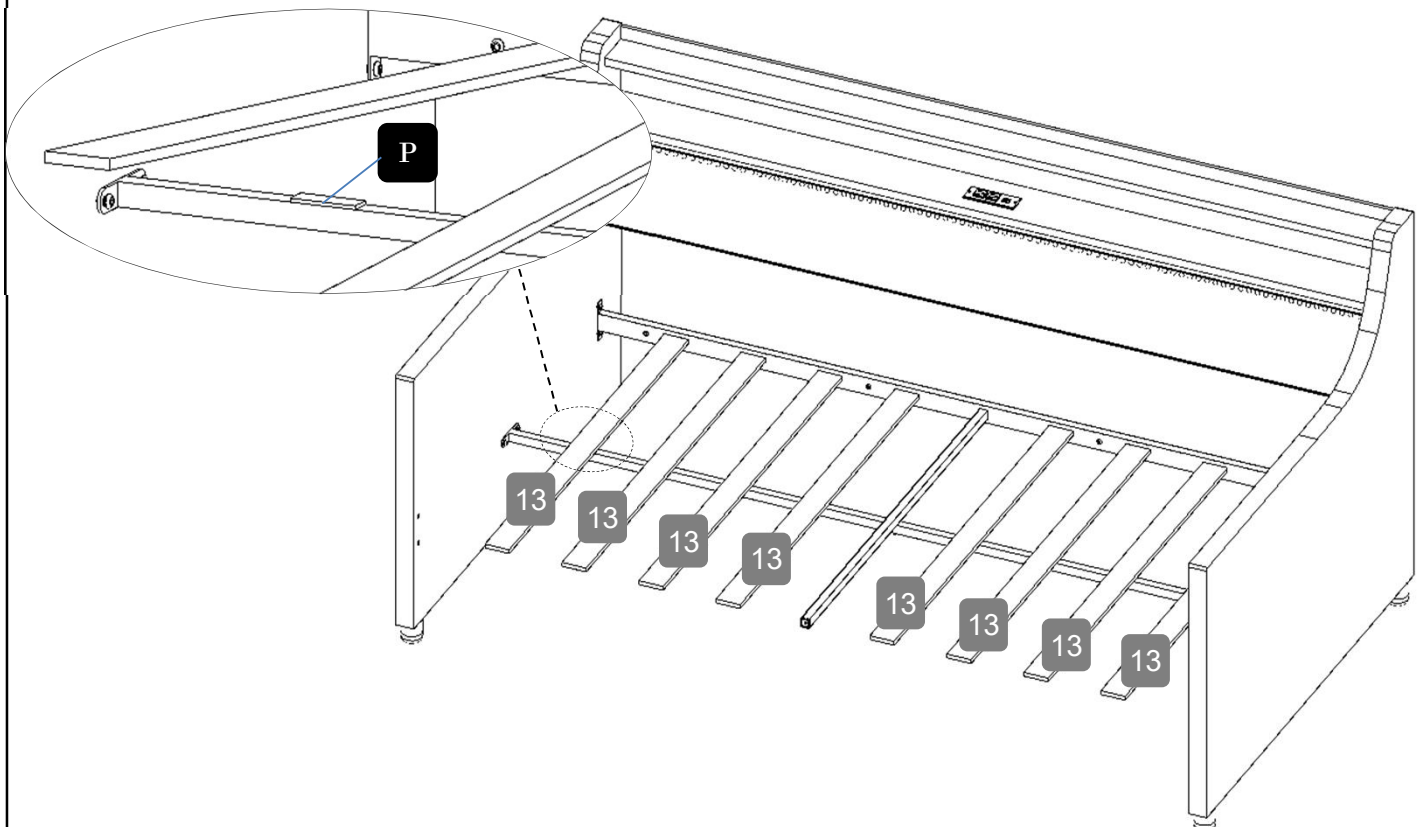


Step12



B



Bolts(M6X16mm) X5

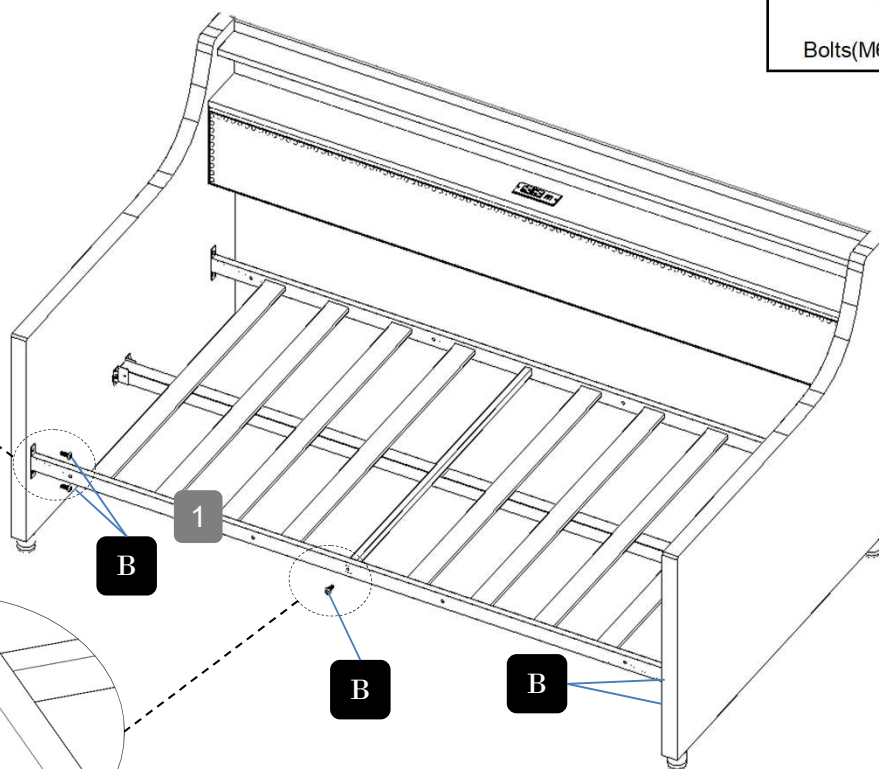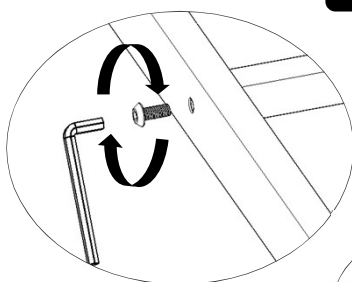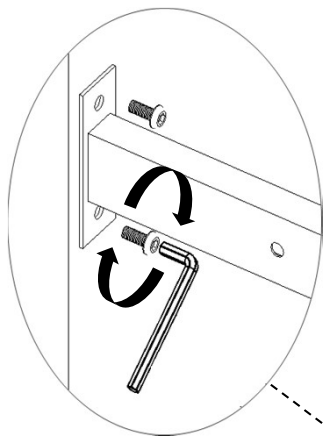

Note the installation direction of metal slat frame NO.1

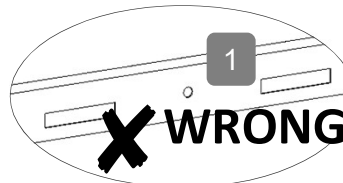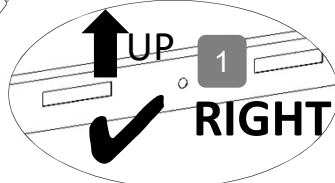


Step13


C




Bolts(M6X30mm) X8

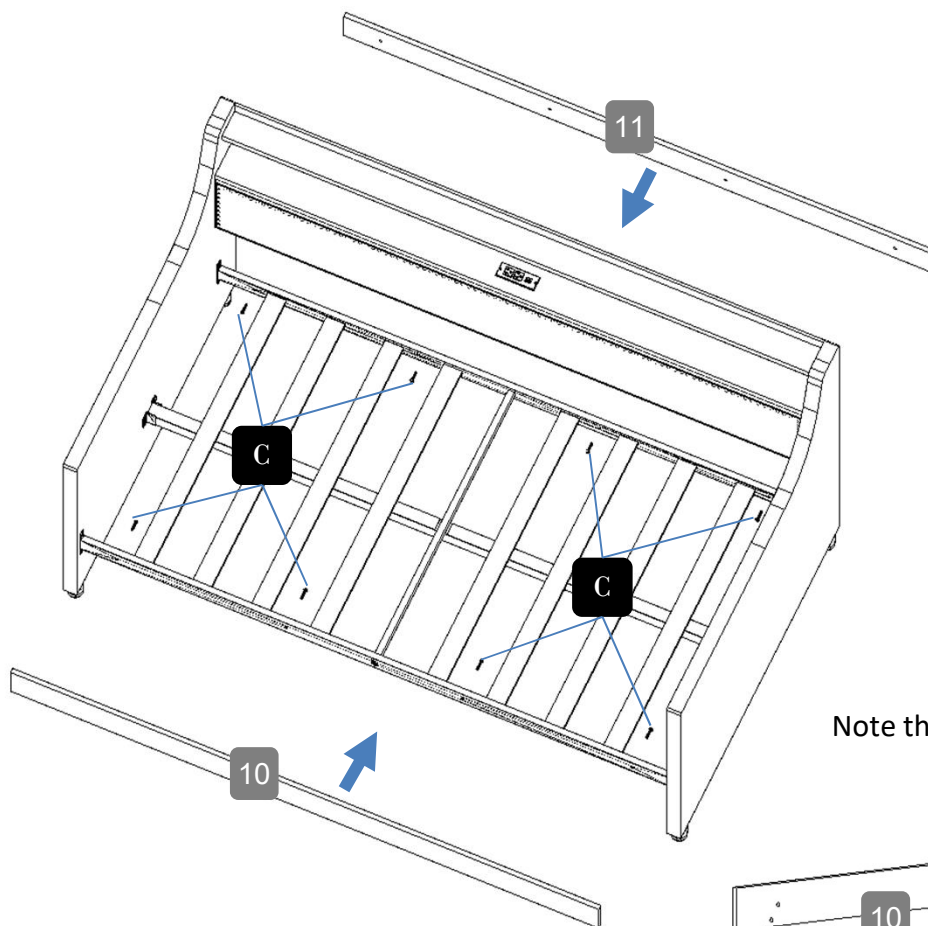

Note the installation direction of panel NO.10

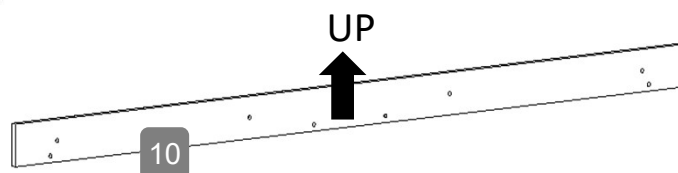

Step14

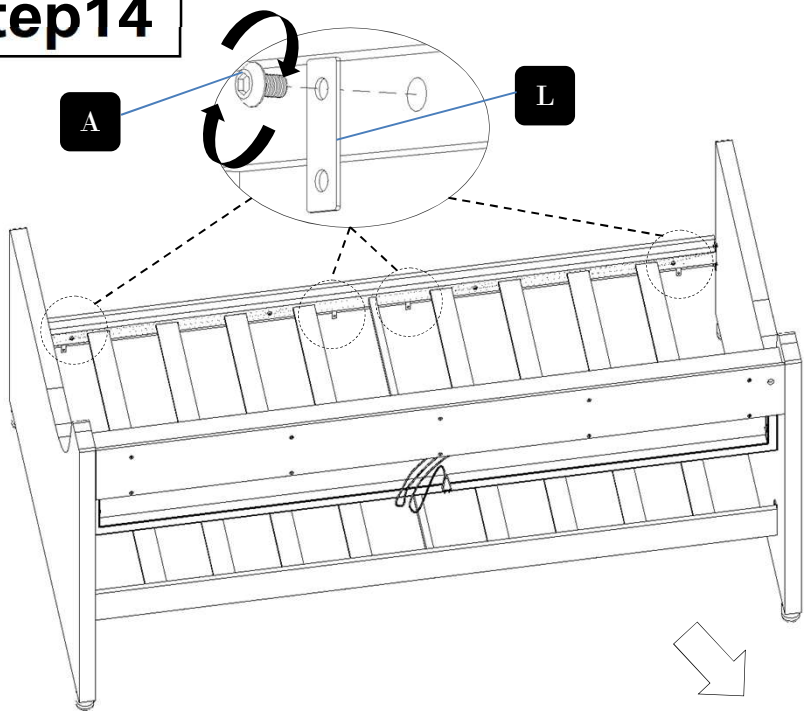


A




Bolts(M6X10mm) X4

L




Iron Sheet x4

After this step, you can lock the other bolts tightly

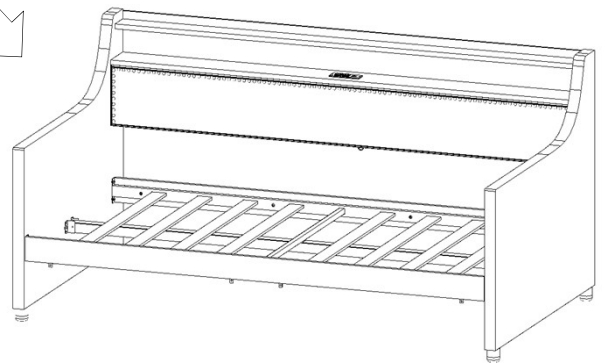

Step15

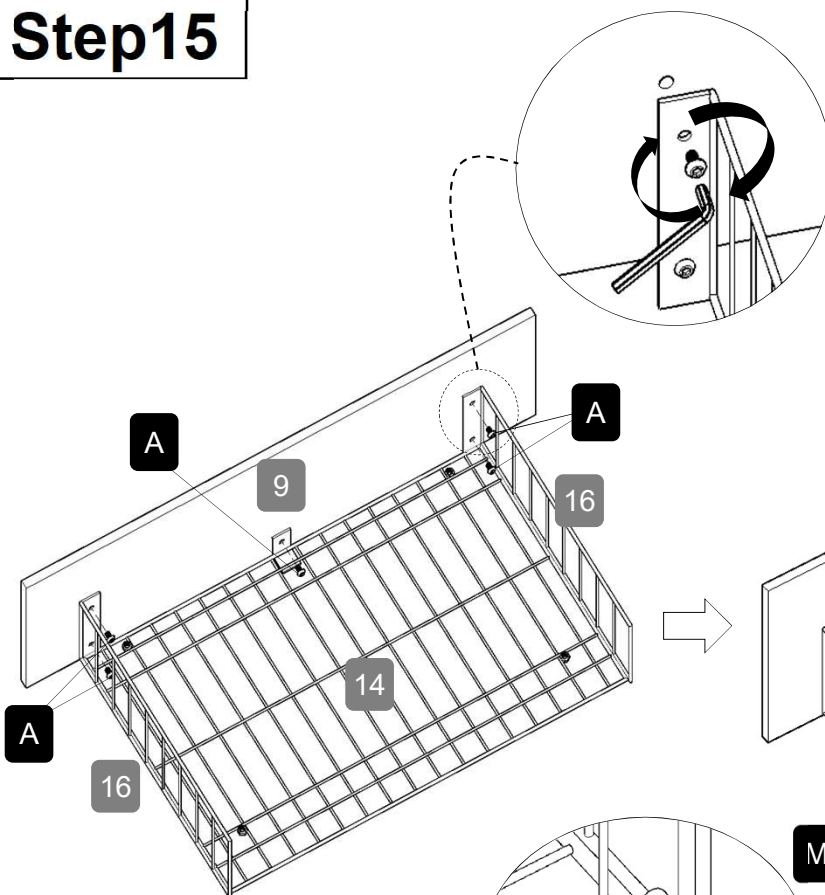

A




Bolts(M6X10mm) X5


M




Clasp X11

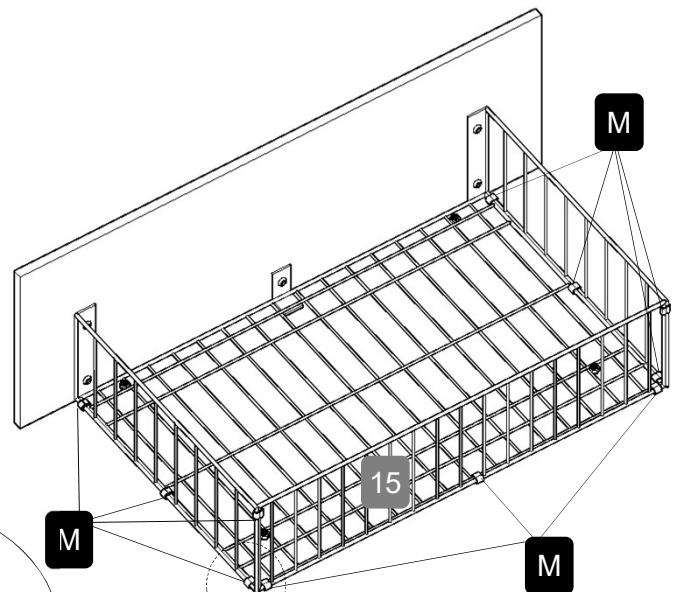

Step16

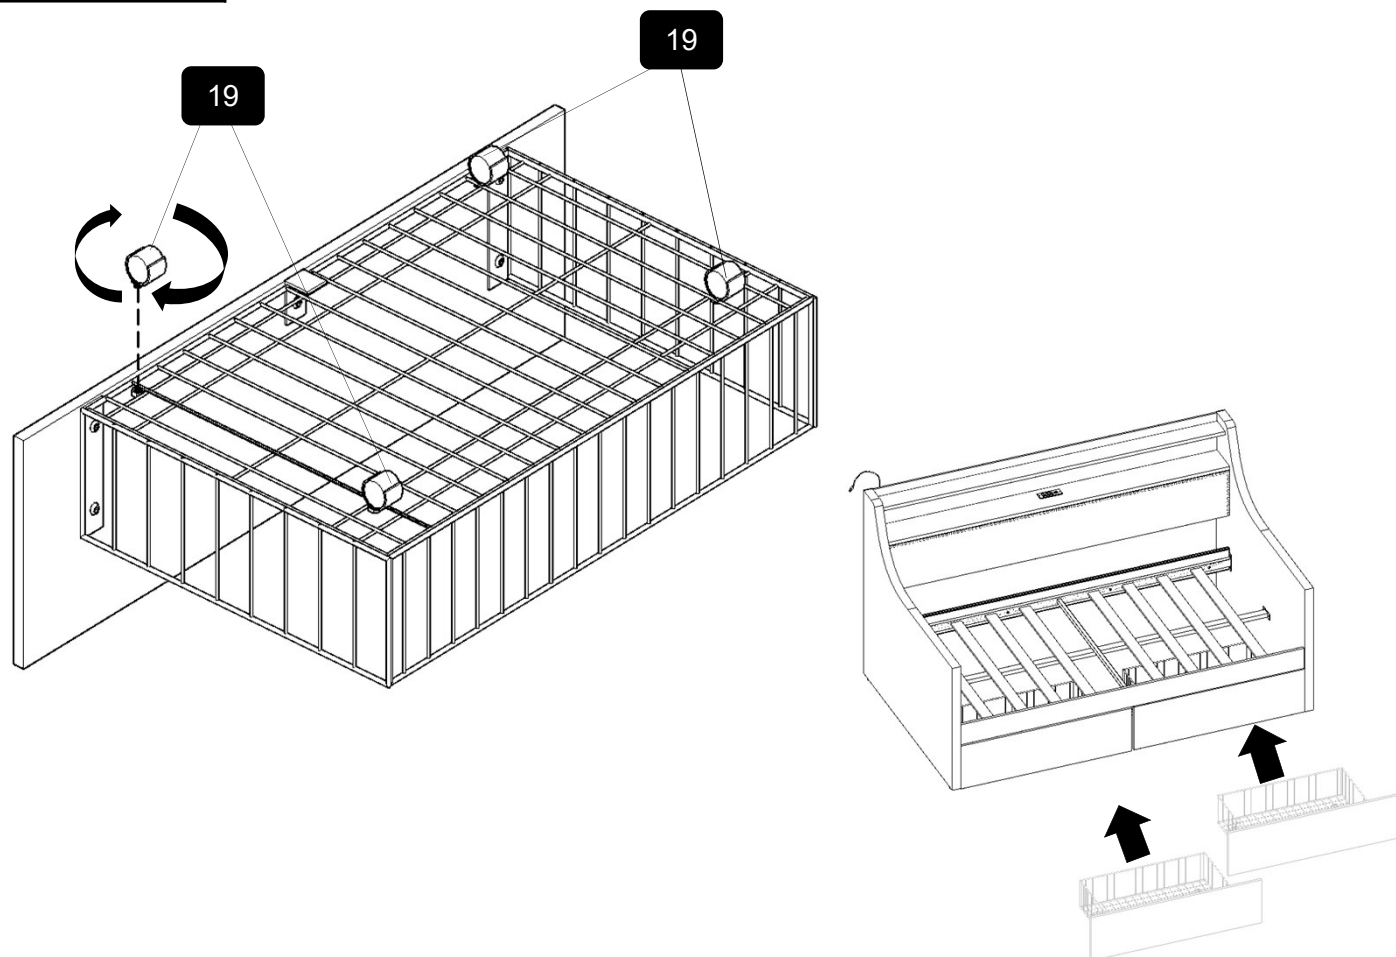

Step17

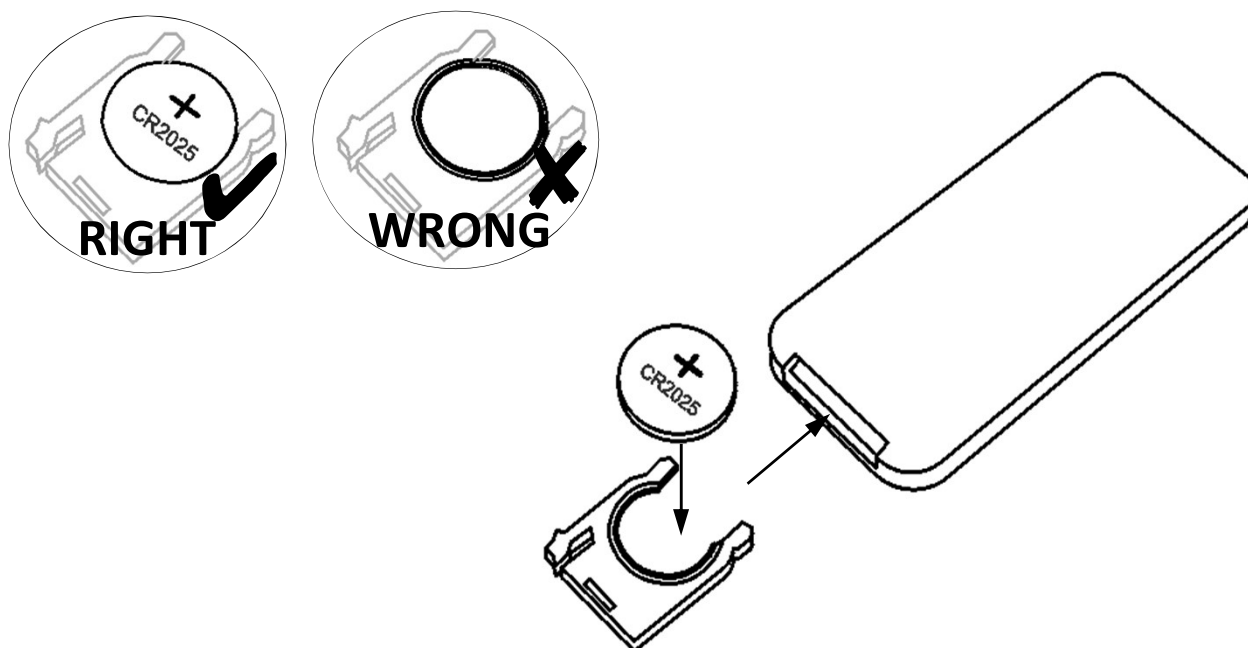

Remote control does not contain batteries, please buy your own a CR2025 button battery installed into the remote control