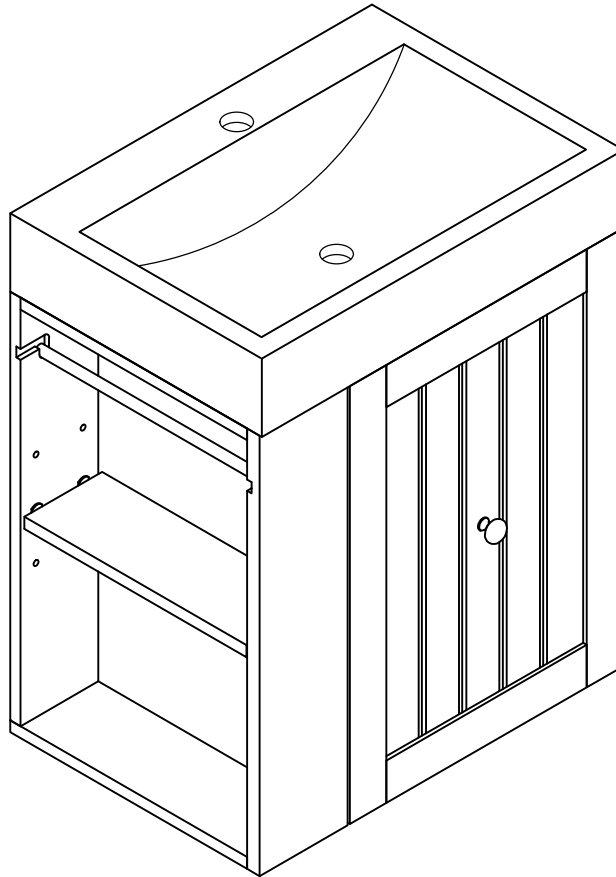


ASSEMBLY INSTRUCTIONS

20INCH BATH VANITY(COMBO)



Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts which may have come loose inside the carton during shipment. Separate, identify and count all parts and hardware.

Compare with the parts list to be sure all parts are present.

"DO NOT TIGHTEN SCREWS UNTIL COMPLETELY ASSEMBLED"


* Use of power tool to assemble this product will invalidate any claim and damage this product making unsafe!!!
* Please assemble on a clean soft surface to avoid damage.



Tools Required



(Not included)



(Not included)

IMPORTANT:
PLEASE READ INSTRUCTION BEFORE STARTING THE ASSEMBLY

Thank you for buying our products.

Please read the installation manual carefully before installation,

we need you to follow the instructions on the accessories and hardware

step by step assembly complete, our instructions are very detailed.

Products are environmentally friendly products,

Please rest assured that you do not soak in water, do not place very heavy items,

do not malicious push and pull,

if you have any problems in the process of assembly and use, please contact us.

Thank you again for your purchase of our products,

I wish you a happy life.

Before Installation

Important – Please read these instructions fully before starting assembly

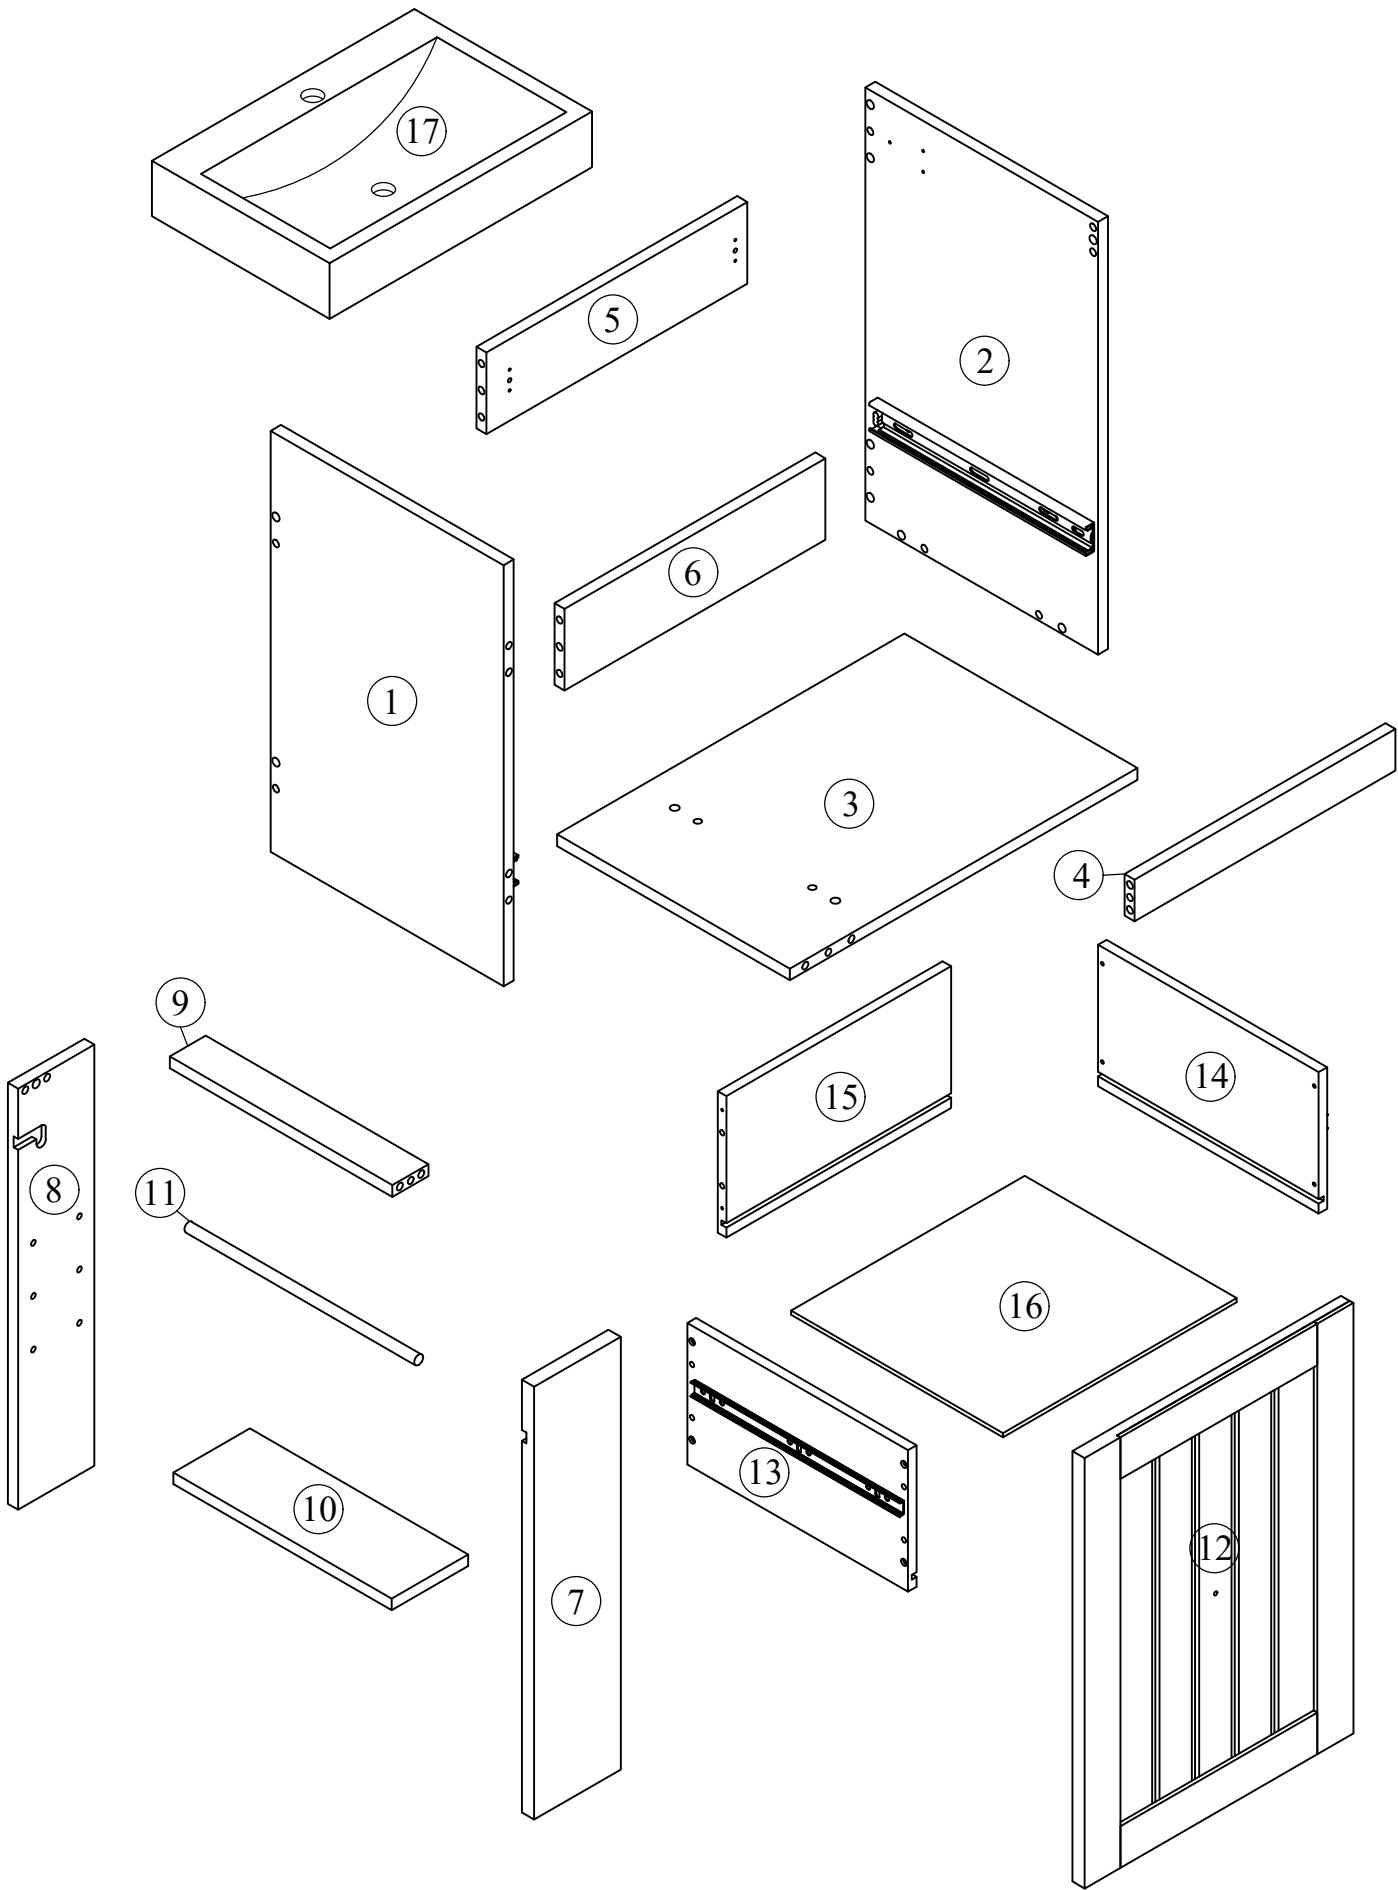
Thank you for purchasing this quality product. Be sure to check all packing materials carefully for small parts, which may have come loose inside the carton during shipment. Identify and count all items according to the PARTS LIST and/or HARDWARE LIST shown below. Check you have all the components and tools listed on the following pages.

- We recommend that you assemble this product with the assistance of another person; this will make the assembly easier, and will help eliminate damage to the product or injury to persons during assembly.
- Please do not over tighten screws or bolts until the assembly is completed.
- Keep children and animal away from the work area, small parts could choke if swallowed.
- Please put all parts on a non-abrasive floor before assembly, and follow the assembly steps to assemble your newly purchased product correctly and efficiently.

Cam Lock Assembly Instructions



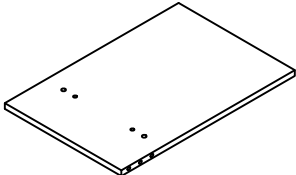
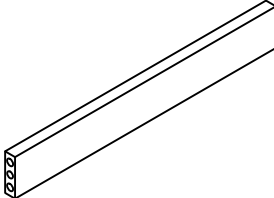
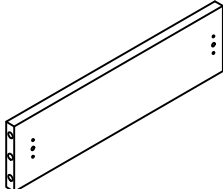
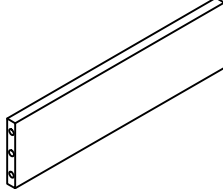


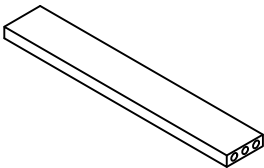
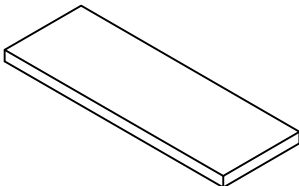
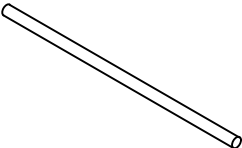

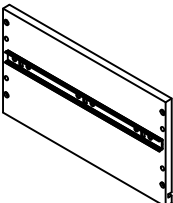
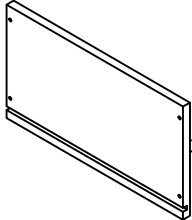
	Diagram A	Insert Cam Bolt into hole as shown in diagram A.
	Diagram B	Make sure not to insert the Cam Bolt: Too deep as shown in figure B as this will cause the Cam Lock to be misaligned and unable to interlock properly.
	Diagram C	Also avoid inserting the Cam Bolt too close to the surface of the hole as shown in figure C, as this will cause the Cam Lock to be too loose, and not interlock properly.
Connect the panels together.		
ARROW SIGN Insert the Cam Lock so the side opening fits over the head of the Cam Bolt.		
To tighten the Cam Lock, turn it clockwise on half a turn with a flat screwdriver. <i>*Do not use an automatic screwdriver as it may bend or break if too much power is imposed.</i>		

Detail View - CABINET

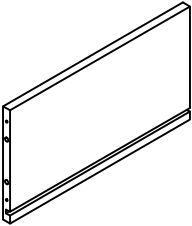
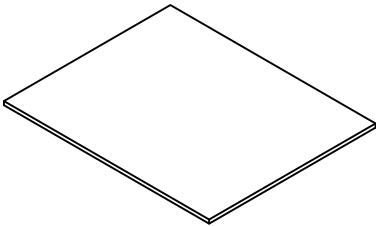
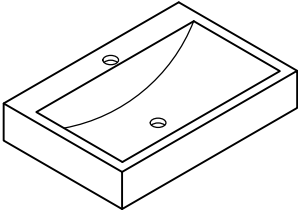


Identifying the Hardware-Identify the hardware using the illustrations below.









Part List

1		2	
3		4	
5		6	
7		8	
9		10	
11		12	
13		14	


Part List

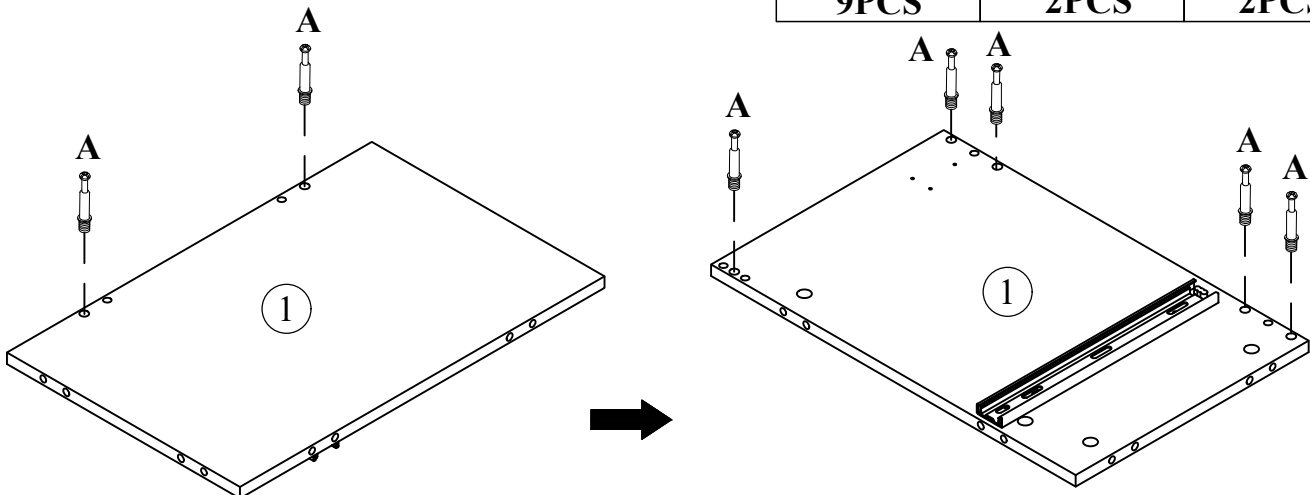
15  Drawer Back Panel - 1pc	16  Bottom Drawer Panel - 1pc
17  Sink - 1pc	

Hardware List

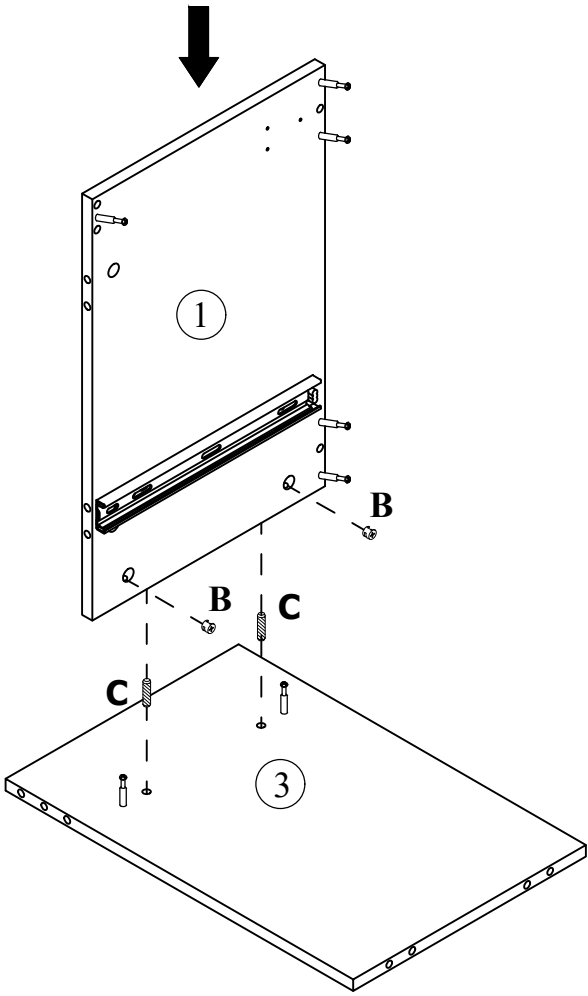
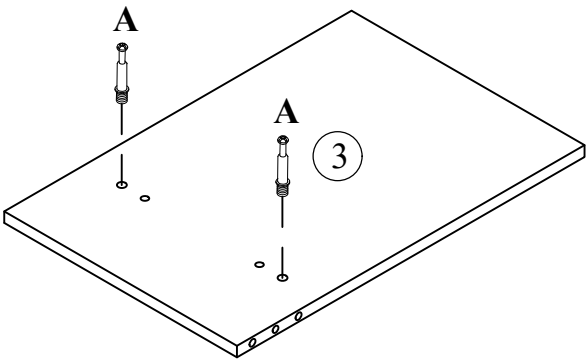
A  ø6x35mm	B  ø14.5x12mm	C  ø8x30mm
Three in one bolts (21pcs)	Three in one lock (21pcs)	Wood dowel(22pcs)
D  ø8xø4x32mm	E  ø6.2x31x19x16mm	F  ø6x30mm
Round head screw(8pcs)	Laminate pad (4pcs)	Wood dowel(8pcs)
G  ø10xø5x60mm	H  ø12x55mm	I  ø1/4"x19x1mm
Flat head screw (2pcs)	Plastic stopper - 2pcs	Washer (2pcs)
J  82x60x45x3mm	K  ø7xø3.5x12mm	L  ø23x20mm
L wall hanging iron(2pcs)	Flat head screw (10pcs)	Handle (1pc)
M  ø5/32"x22mm Handle screw (1pcs)		

STEP: 1


A	B	C
		
9PCS	2PCS	2PCS

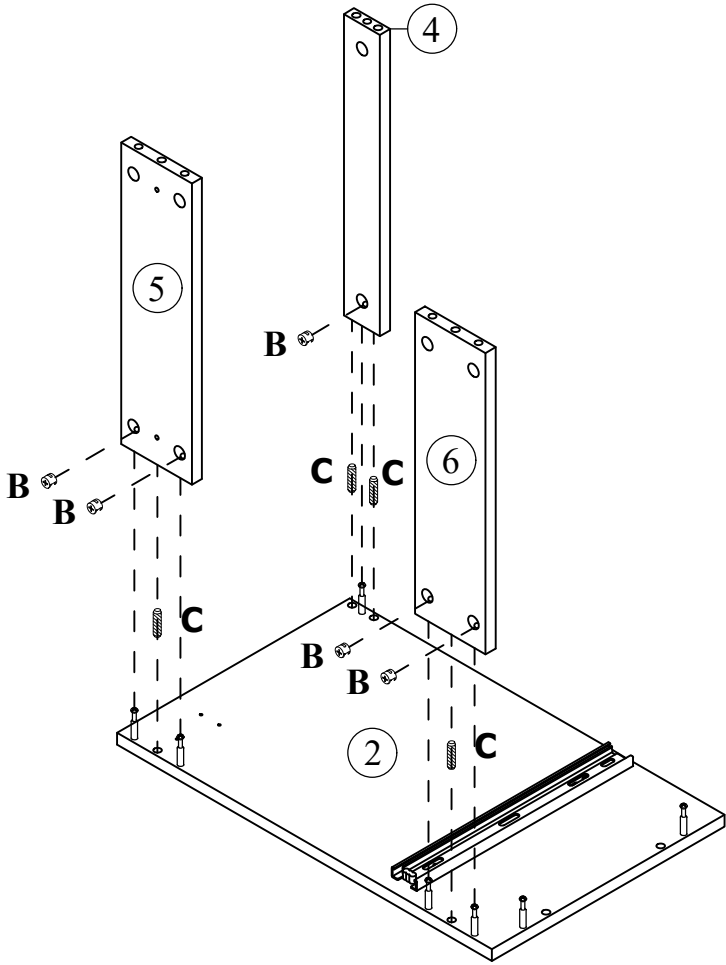
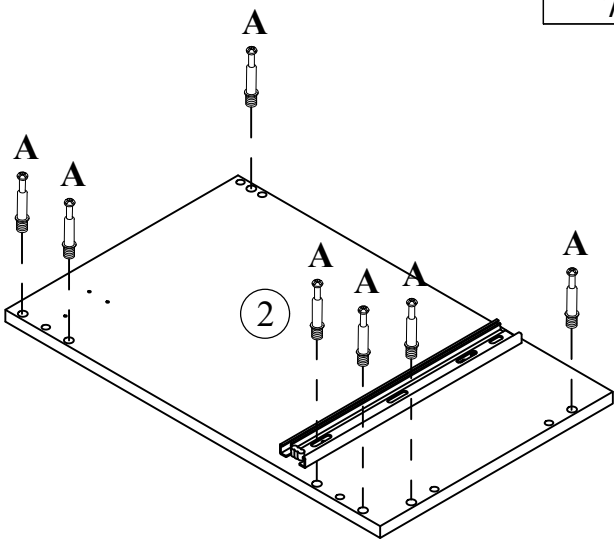


Turn over and install screw(A)




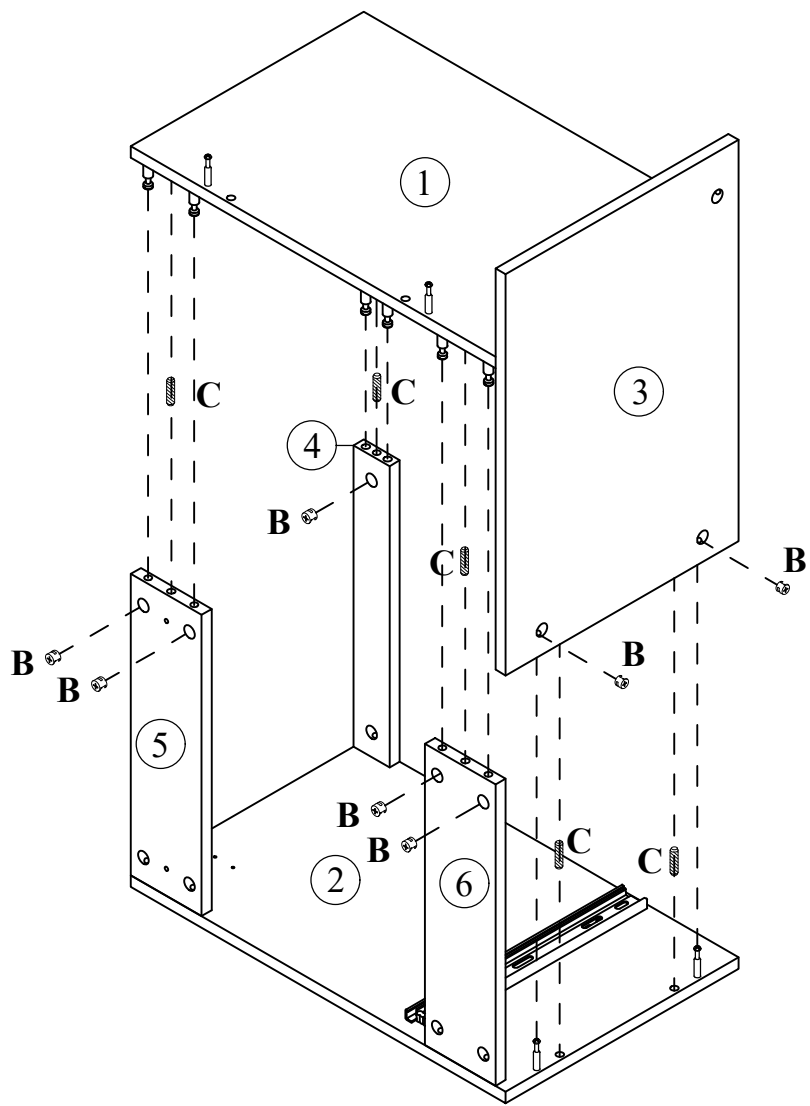
STEP: 2

A	B	C
		
7PCS	5PCS	4PCS

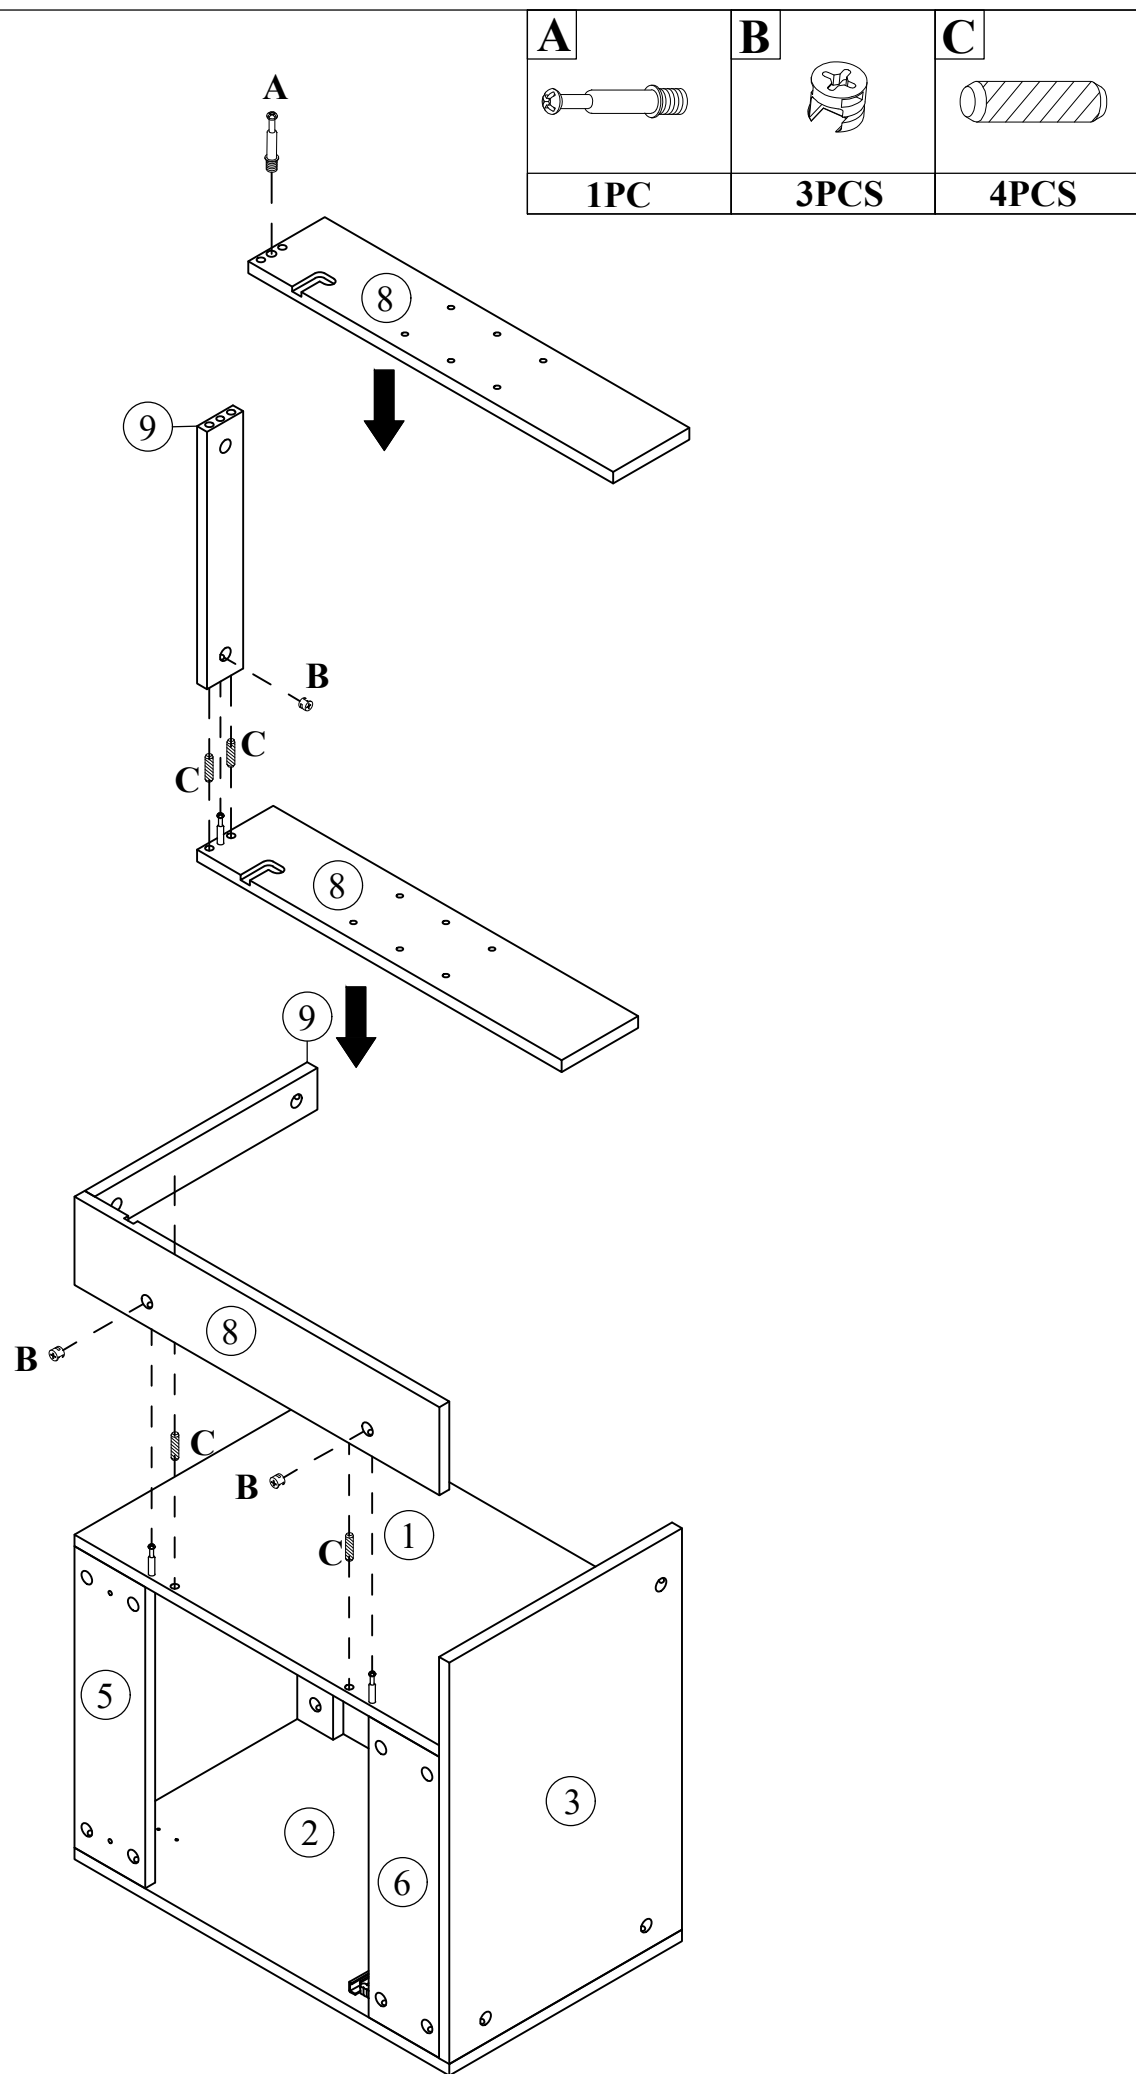


STEP: 3


B	C
	
7PCS	5PCS

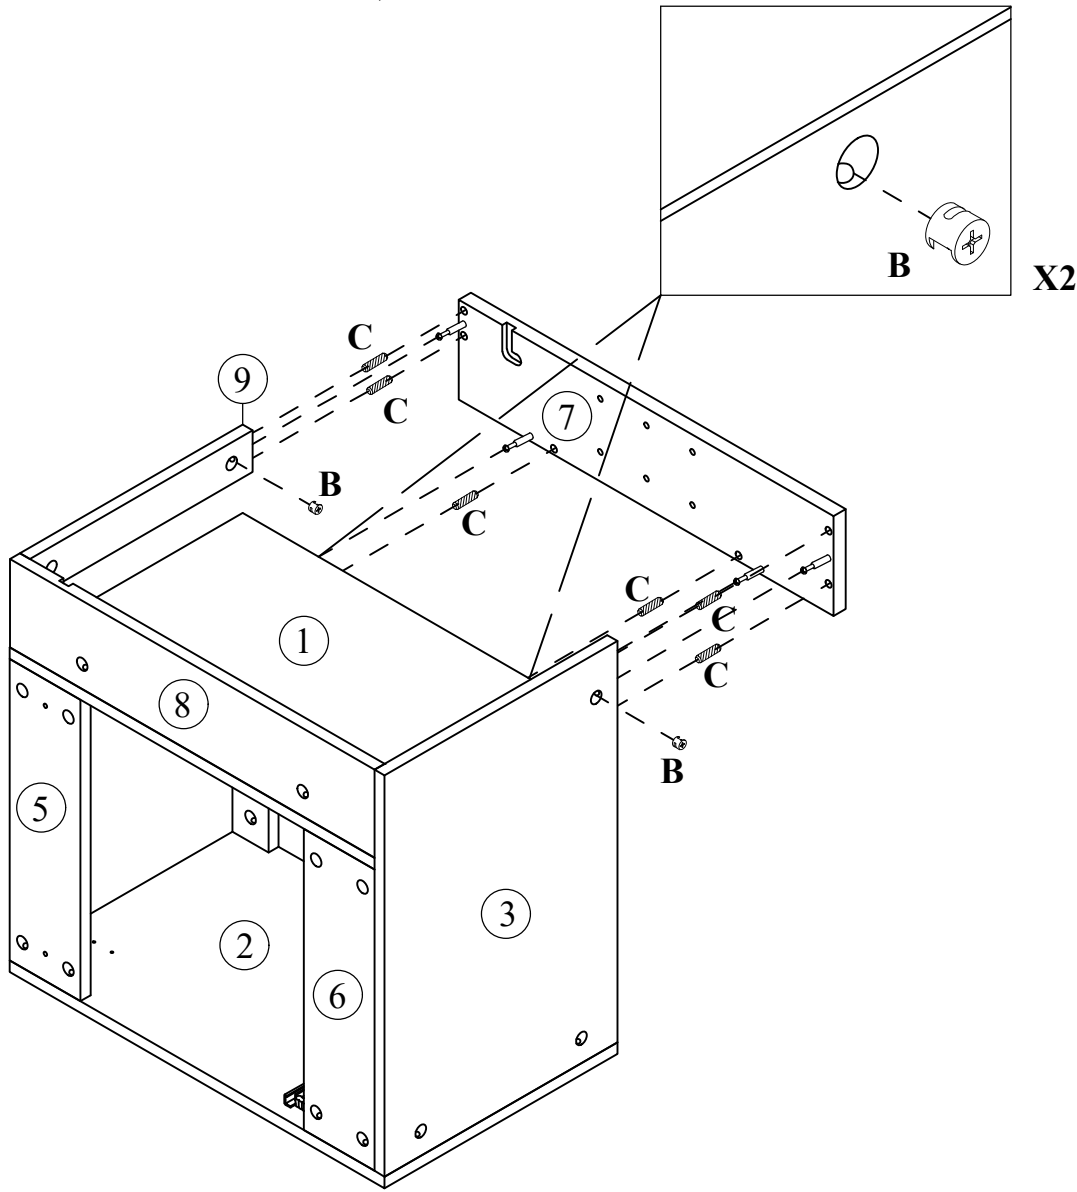
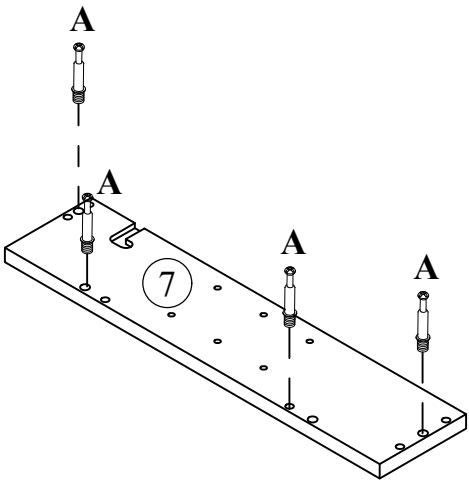


STEP:4

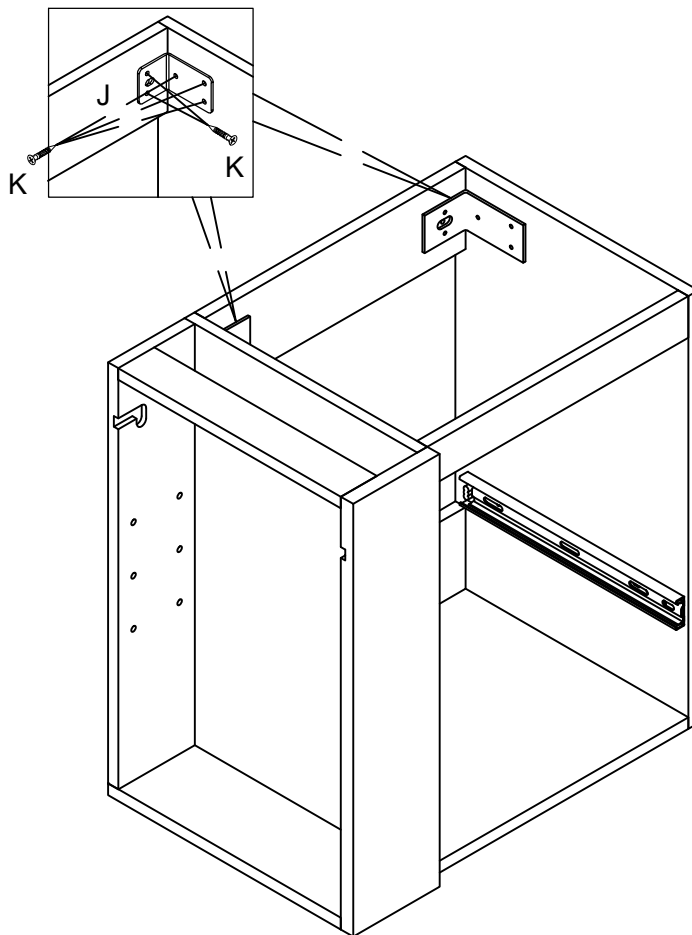



STEP:5

A	B	C
		
4PCS	4PCS	6PCS

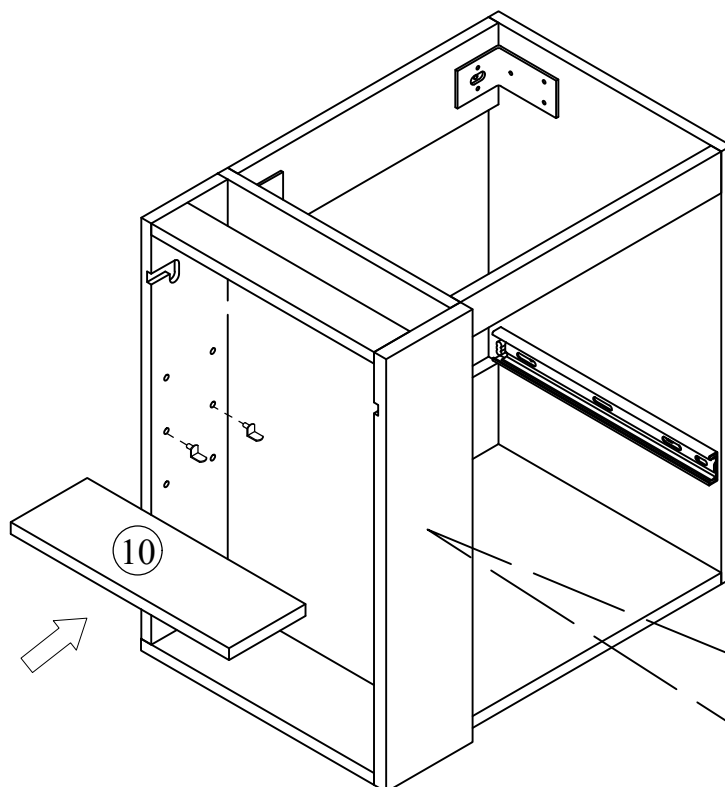



STEP:6

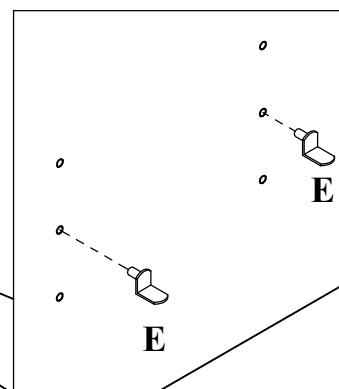


J	K
	
2PCS	10PCS

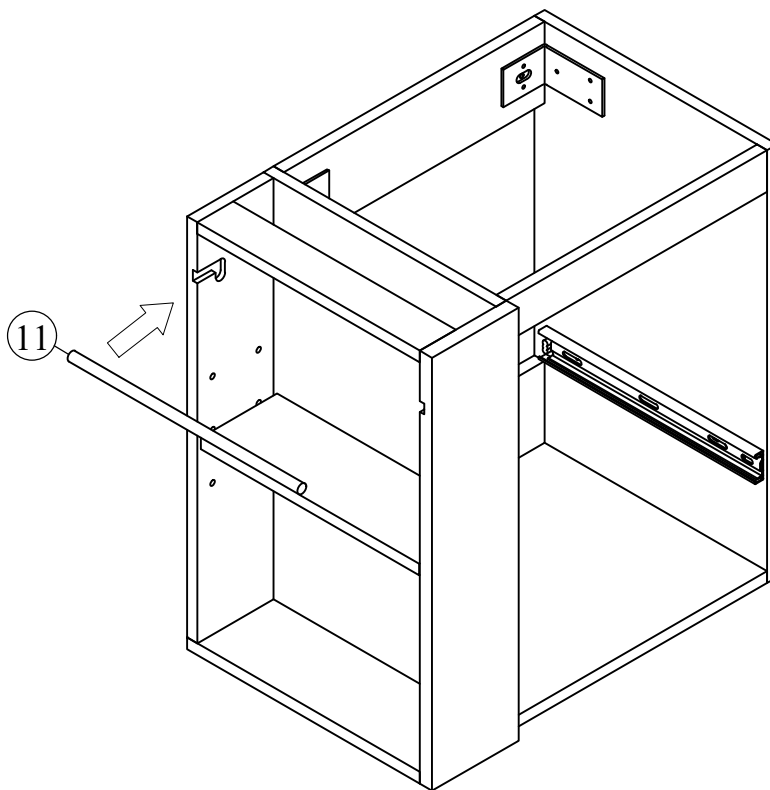
STEP:7



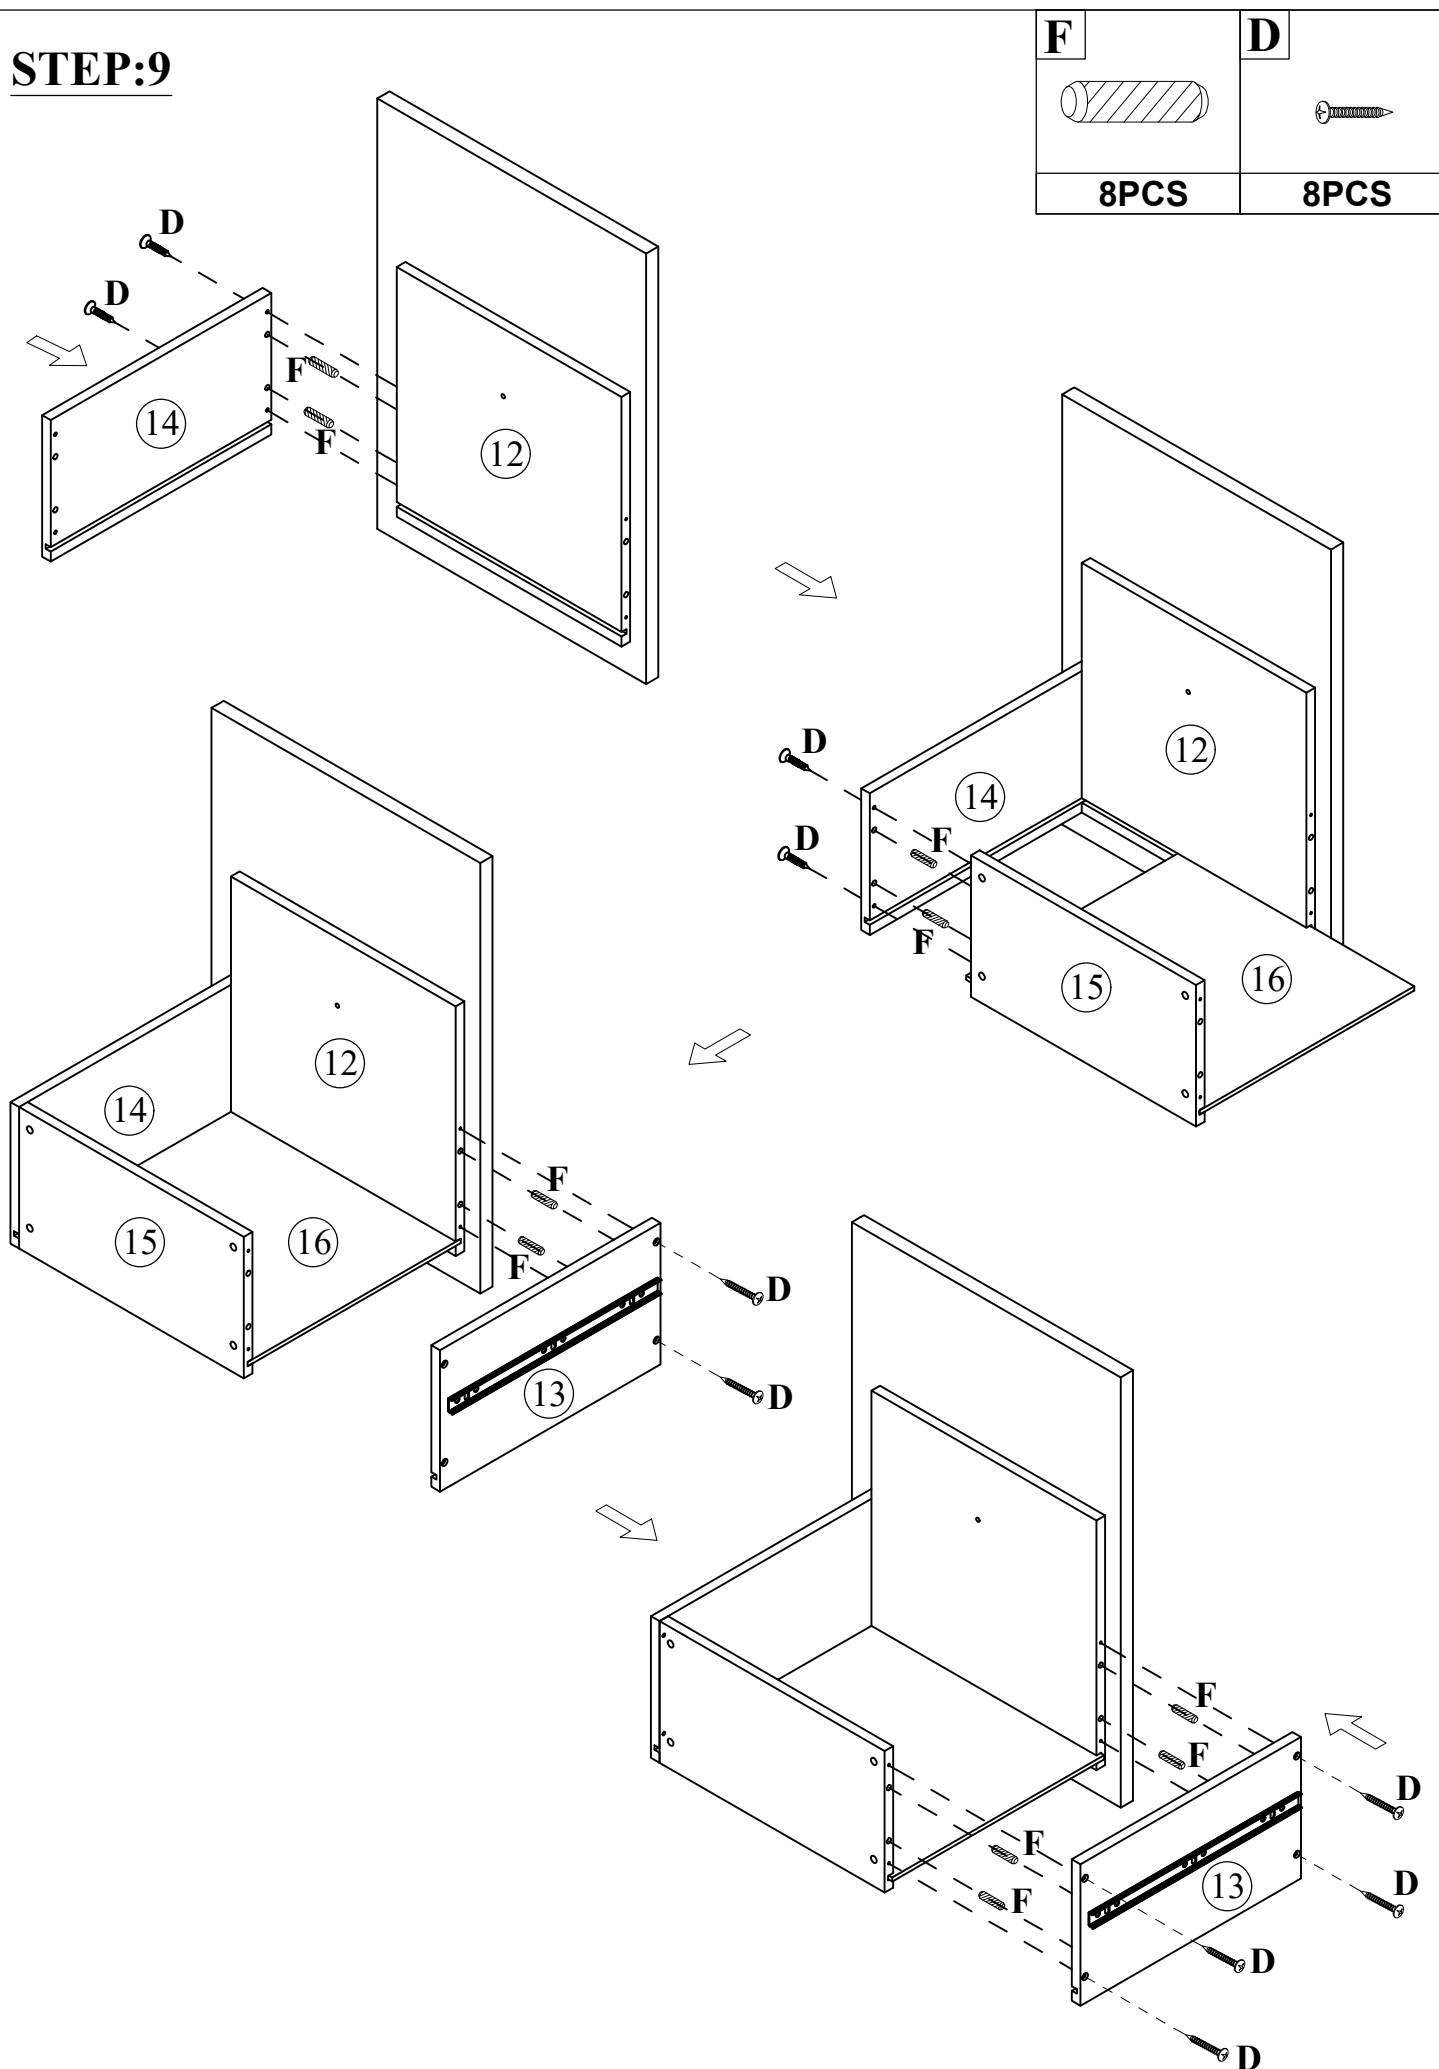
E

4PCS




STEP:8

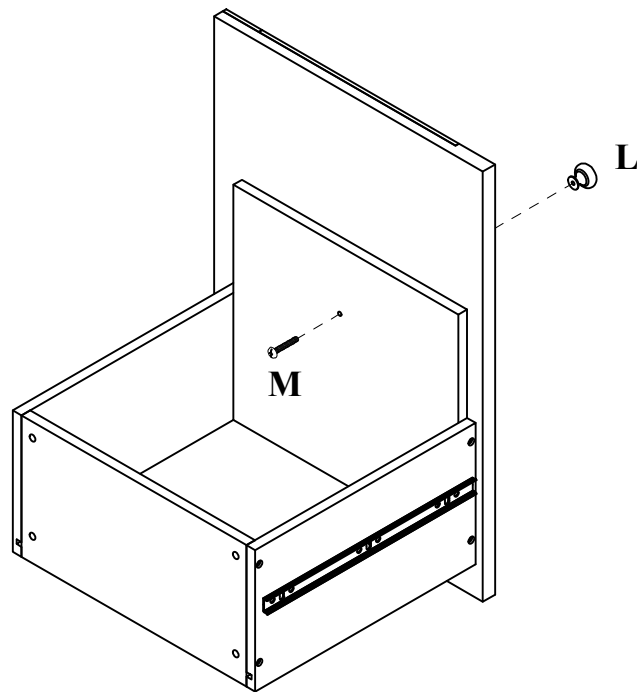


STEP:9

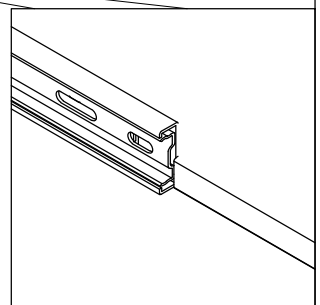
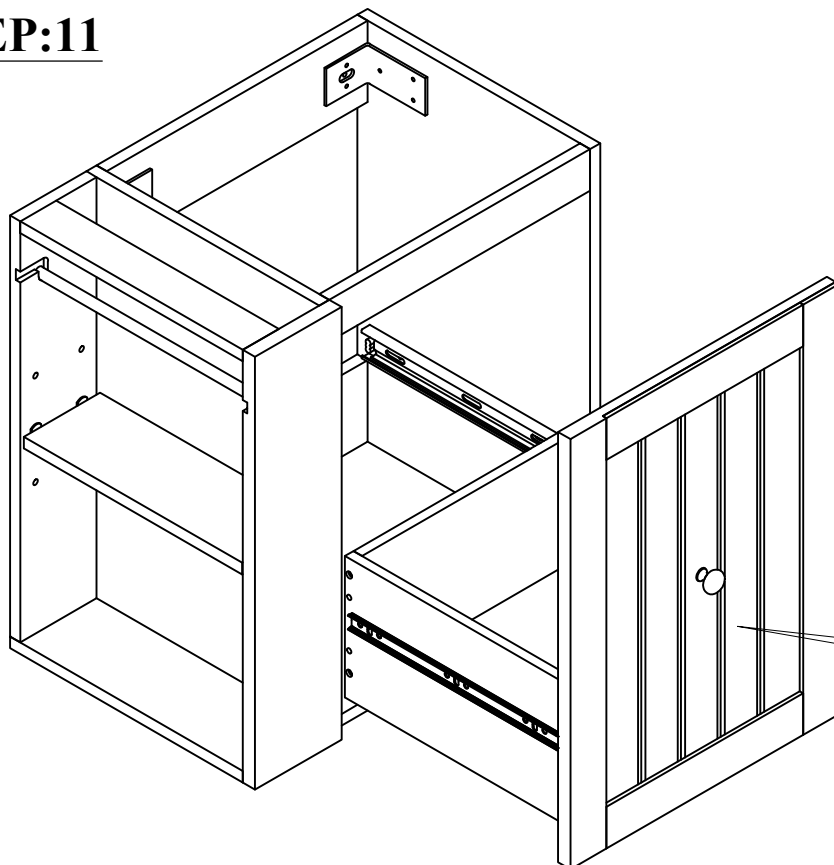


STEP:10


L	M
	
1PC	1PC

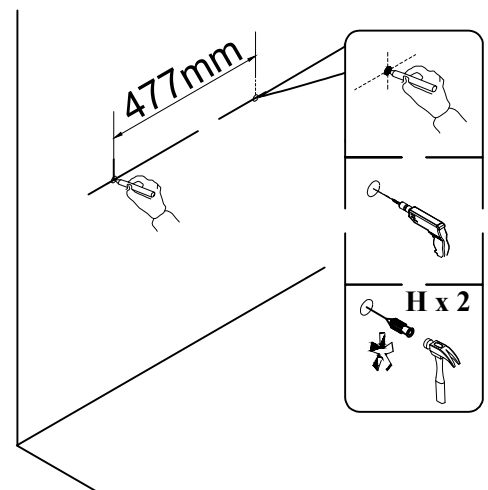
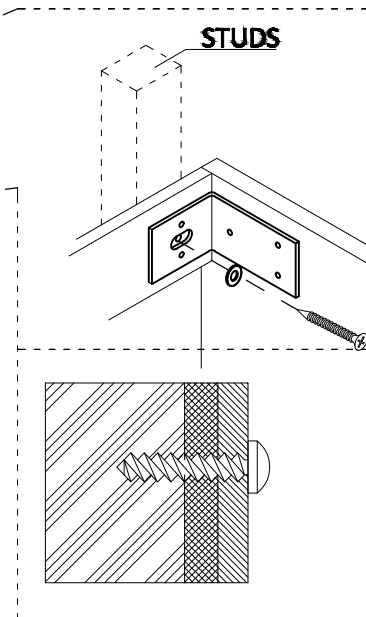
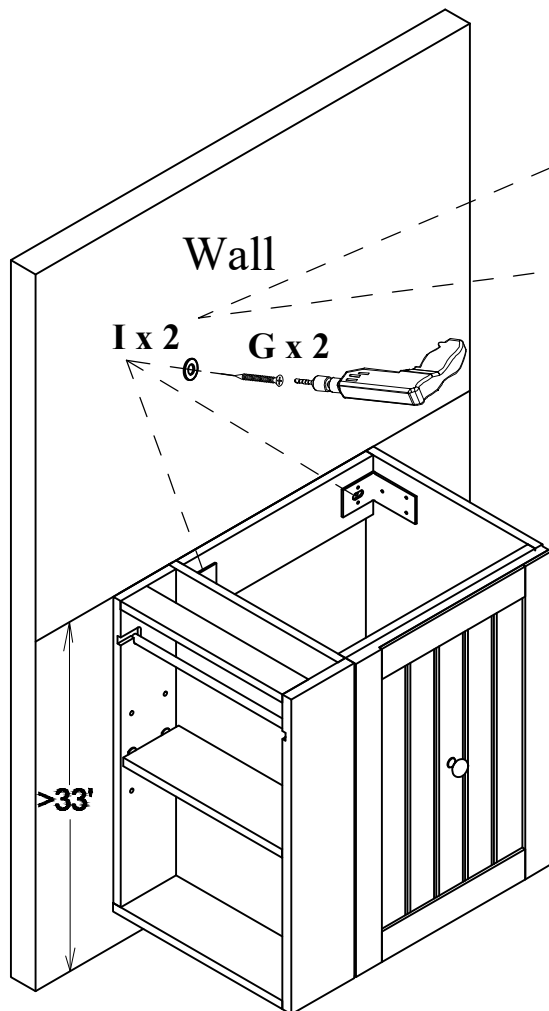


STEP:11



STEP:12

G	H	I
		
2PCS	2PCS	2PCS

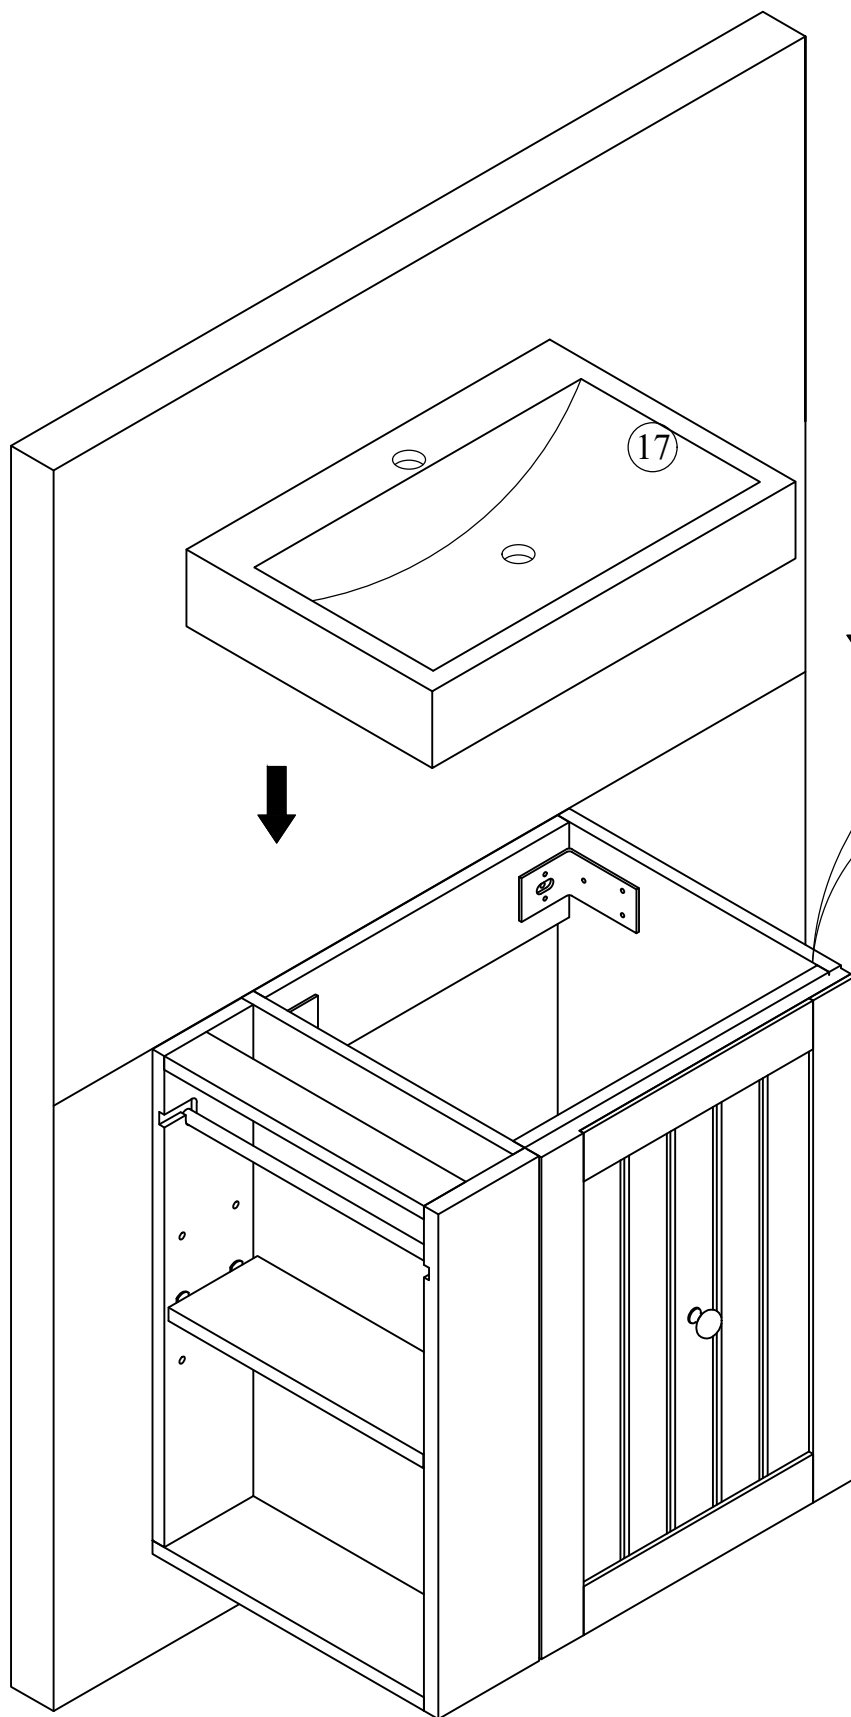


WARNING:
THE INSTALLATION METHOD OF A FLOATING VANITY HAS
A BIG RELATIONSHIP WITH THE WALL STRUCTURE.

To get the best installing effect, please follow as below:
Please screw through the "L"-shaped hanger if there is
exactly a wall stub behind the hanger.

STEP: 13

Install the sink on the cabinet with glue.
Let stand for 24 hours



*Silicone glue is not included in the package to comply with safety regulations in certain shipping conditions.

STEP: 14

