


# ASSEMBLY INSTRUCTION


## 7006




A\*1



B\*1




C\*1 LEFT



C\*1 RIGHT



D\*2



E\*2



F\*2




J\*1




I\*5


### STEP1

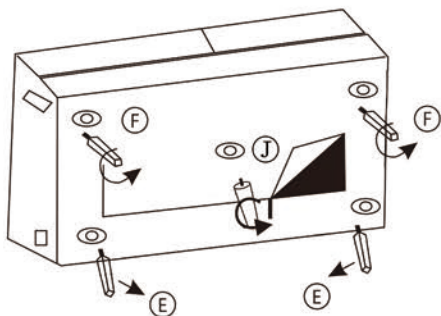


### STEP2

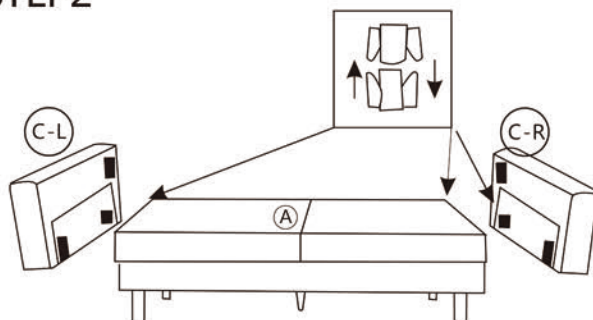

### STEP3

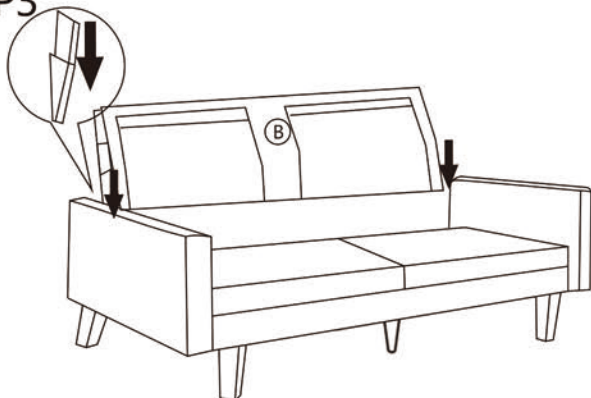


### STEP4

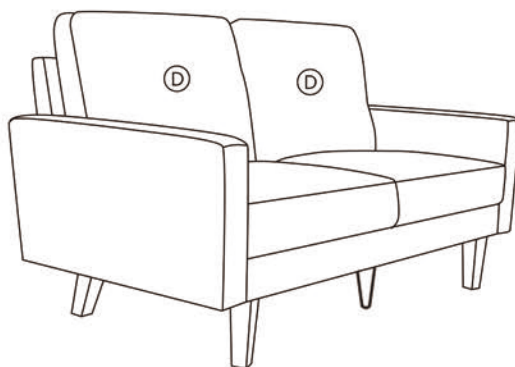

### KINDLY REMINDER

D\*2, E\*2, F\*2, I\*4, J\*1  
PACKED IN SOFA

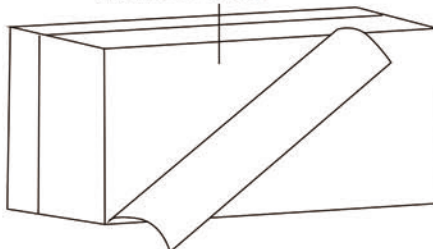

CAREFULLY UNPACK AND PLACE THE SOFA BOOYIAJ ON A CLEAN FLAT SURFACE TO SHOW THE BASE AS SHOWN  
UNPACK PARTS FROM THE STORAGE COMPARTMENT