
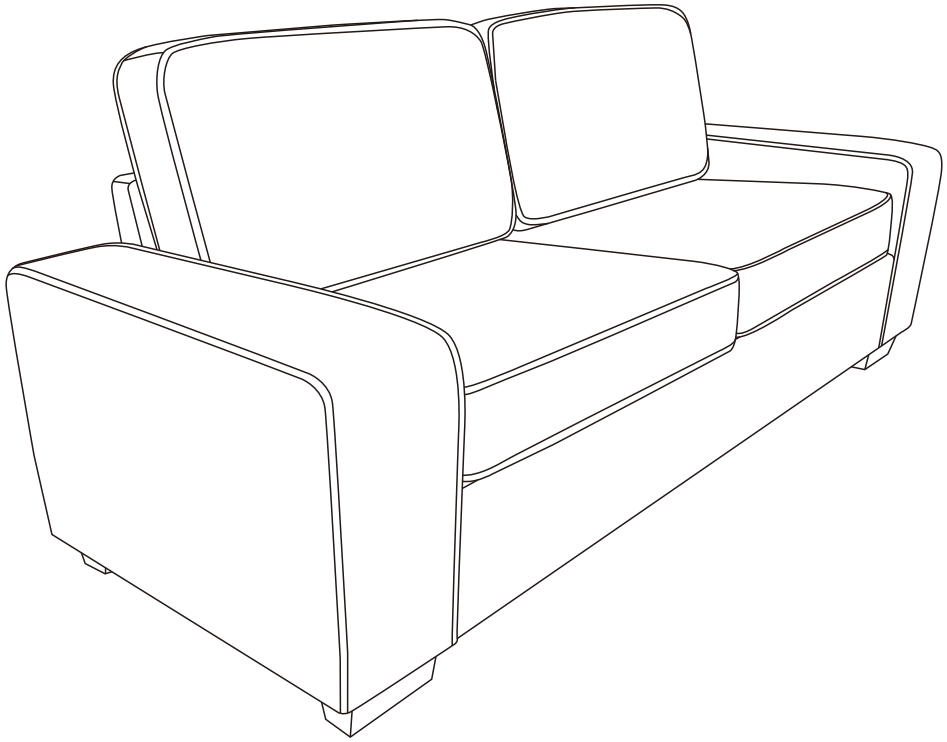


STEP 10: Assembly completed.

ASSEMBLY INSTRUCTIONS

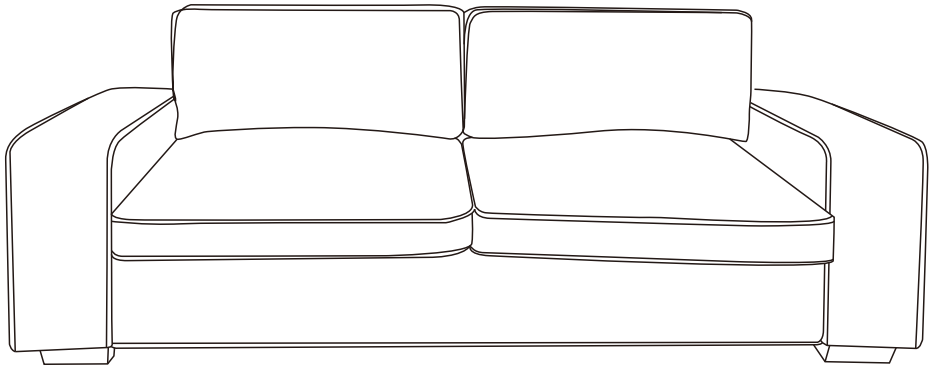


ITEM NO. :ZH1788-1789

NOTE:

This brochure contains IMPORTANT safty info. Please and keep for future reference.

PARTS
LIST

Ax1

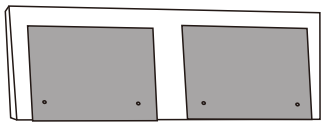


Back frame

Bx1




Seat frame

Cx1

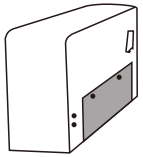


Left armrest

Dx1

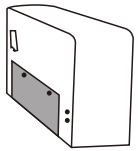

Right armrest

Ex1

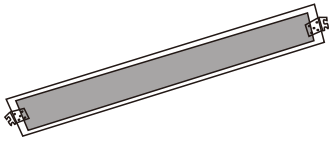


Front rail

Fx4




back and front rail bar

Gx2




Side rail bar

Hx2




Seat Cushion

Ix2



Back Cushion


Jx4



legs

HARDWARE&TOOL
LIST

①x12




M6*45mm Bolt

②x4



M8*20mm Bolt

③x8



M8*60mm Bolt

④x20



Washer


⑤x1



Allen Key

SPARE

①x1




M6*45mm Bolt

②x1



M8*20mm Bolt

③x1



M8*60mm Bolt

④x1




Washer


Be sure to check all packing material fit the packing list.Carefullyfor small parts, which may have some loose inside the carton during shipment.

ASSEMBLY INSTRUCTIONS


Remove the Velcro at the bottom of the armrest and remove the seat cushion from inside

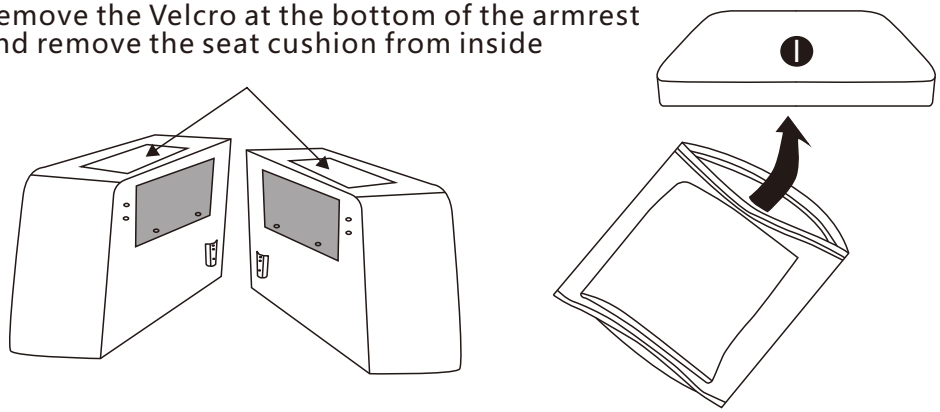


STEP 1: Take the back cushions and seat cushions from the vacuum bags, let them expand for a while.
(Back cushions are packedin armrests. Take them out from bottom of armrests.)

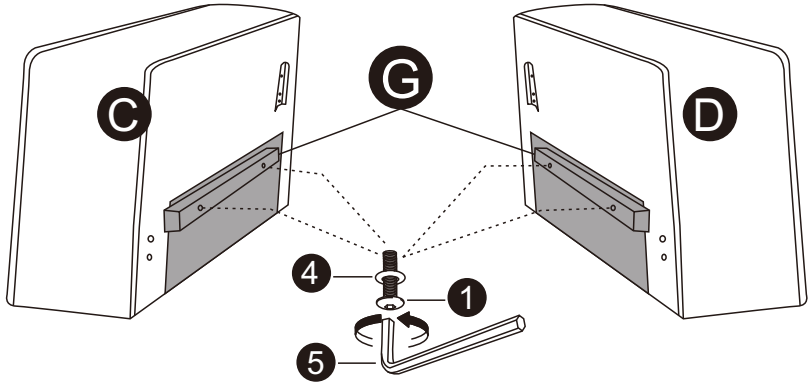


STEP 2: Attach the side rail bars (G) to the armrests(C,D) with bolts (1), washer(4) and allen key(5)

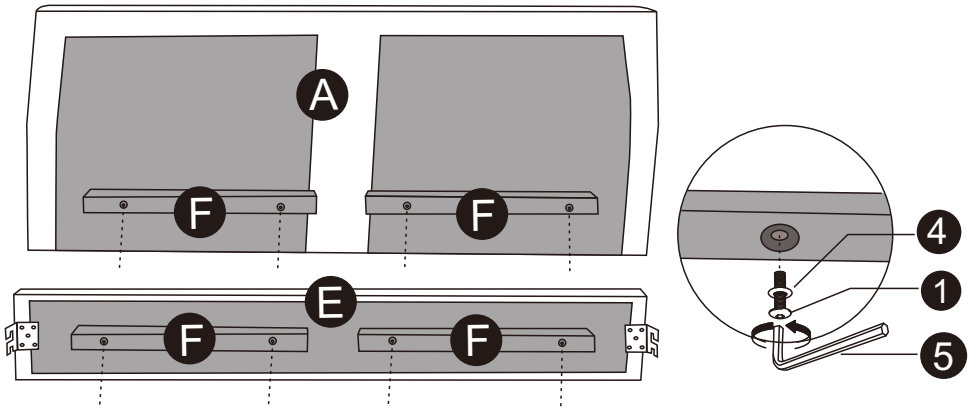


STEP 3: Attach the back and front rail bars (F) to the back frame(A) and front rail with bolts (1), washer(4) and allen key (5)

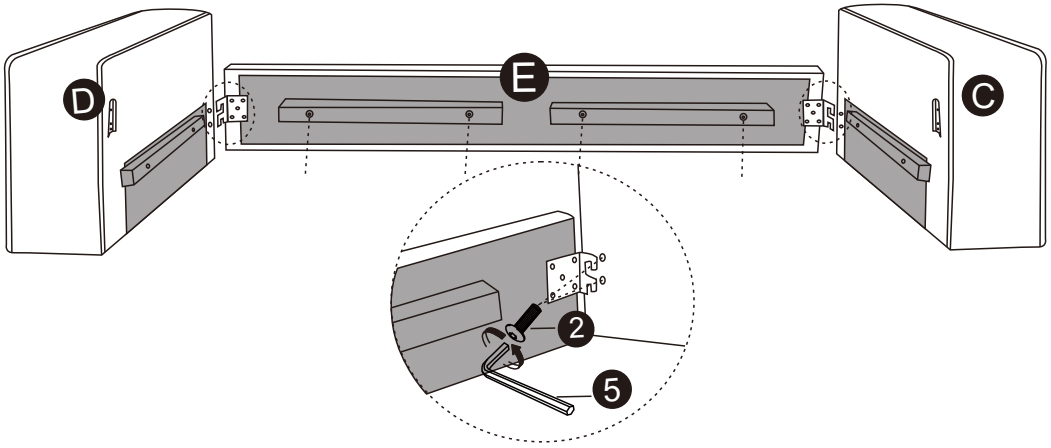


STEP 4: Attach front rail (E)to ammrests (C,D) with bolts (2) and allen key (5).

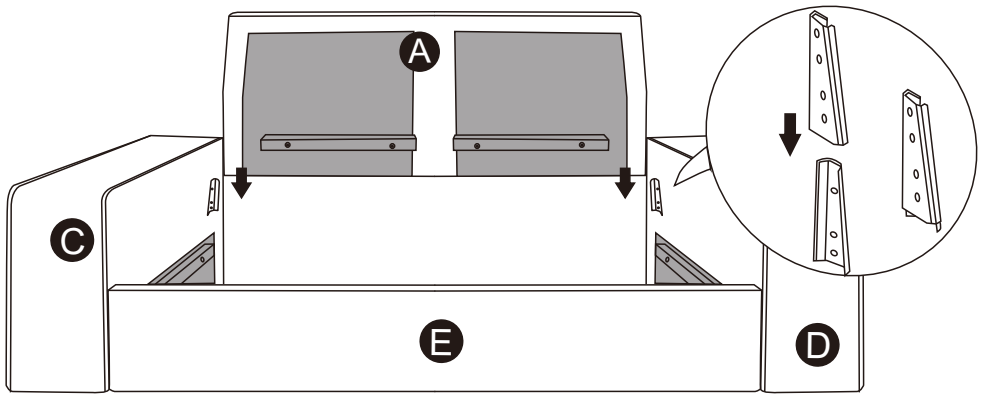


STEP 5: Attach backrest to armrest. Insert both connectors at the same time, push hard to connect fully.

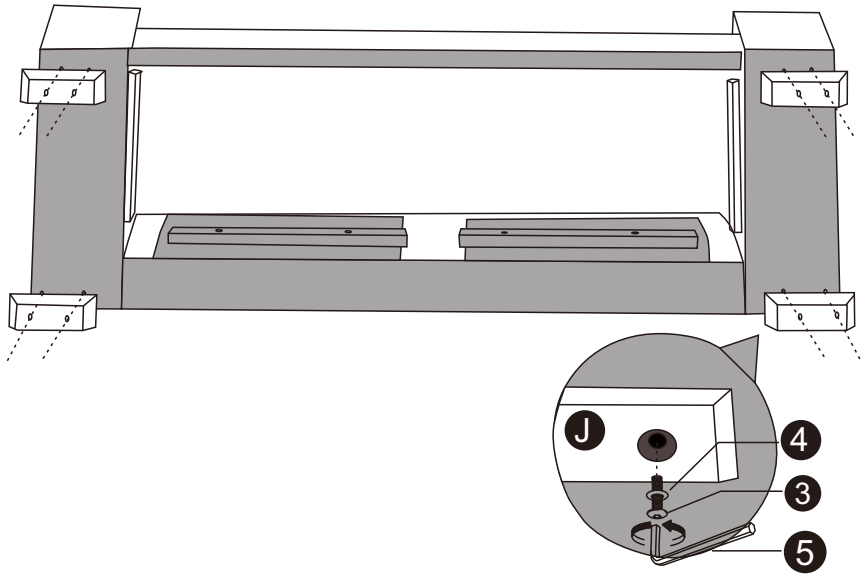

STEP 6: Screw legs(J) in to bottom of armrest with bolts(3), washer(4) and allen key(5).

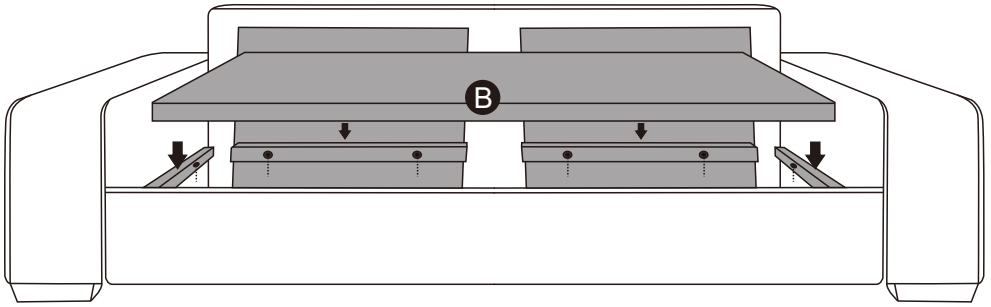

STEP7: Place seat frame(B) on to the rails.

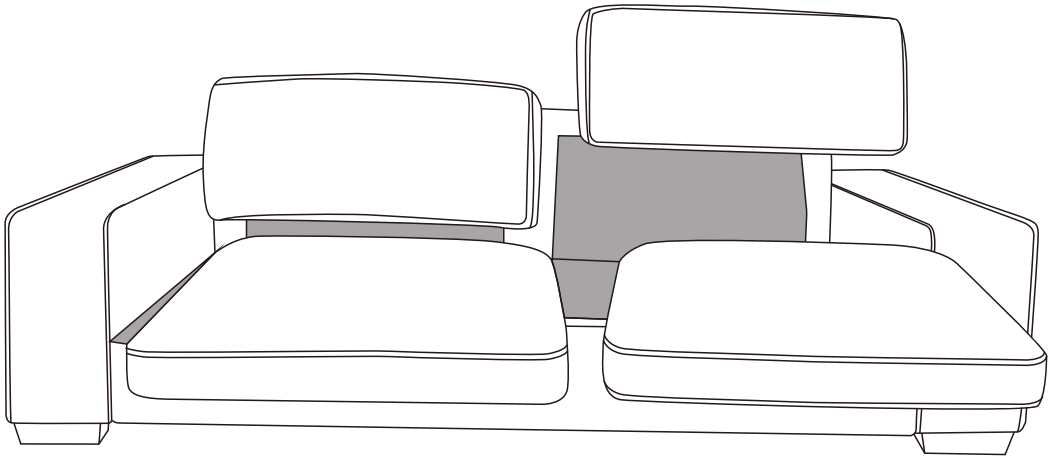

It will take a while for the cushions to expand. Normally it will take up to around 24 hours to expand to its full size.

STEP 9: Place seat cushions and back cushions on to seat frame and back frame.