











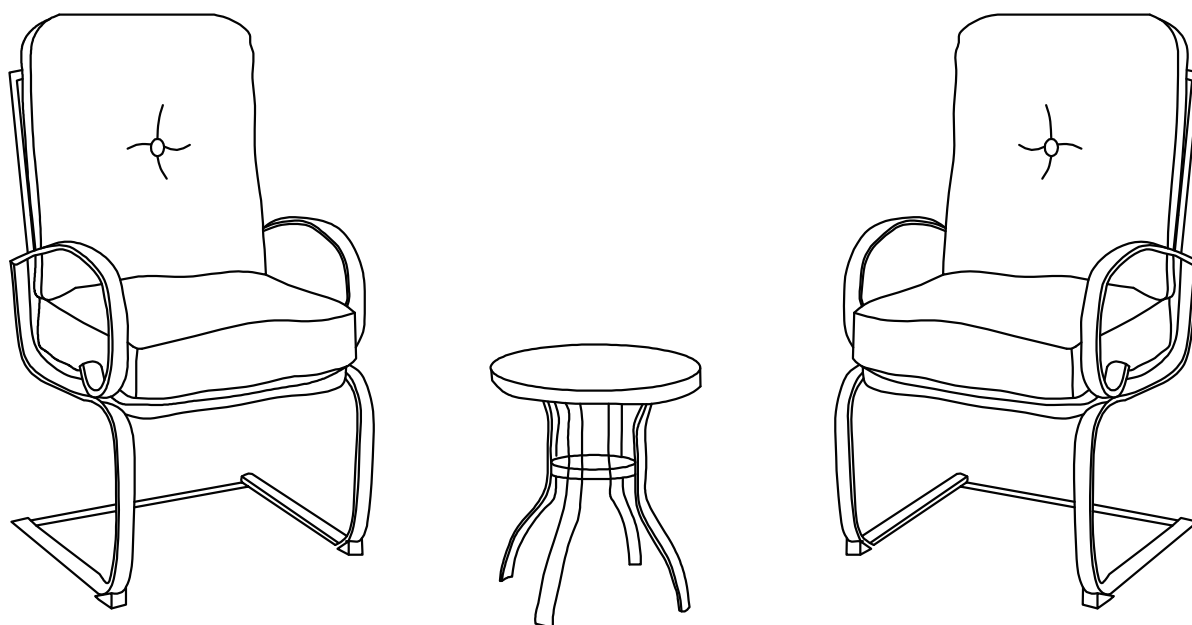

# BISTRO SET

## ASSEMBLY MANUAL



CHAIR


PART LIST	FIGURE	QUANTITY	DESCRIPTION
A		1PC	RIGHT ARM
B		1PC	LEFT ARM
C		1PC	CHAIR FRAME
D		1PC	REAR LEG CONNECTOR
E		8+1PCS	BOLT (M6*18)
F		2+1PCS	BOLT(M6*30)
G		2+1PCS	LEG LEVELER
H		10+1PCS	FLAT WASHER
I		1PC	ALLEN WRENCH
J		1PC	BACK CUSHION
K		1PC	SEAT CUSHION

# STEP-1

A. PLACE CHAIR FRAME (C) UP SIDE DOWN ON A FLAT, PROTECTED SURFACE.

B. CONNECT RIGHT ARM (A) TO SEAT OF CHAIR FRAME (C) WITH FLAT WASHER (H) AND BOLT (E) USING ALLEN WRENCH (I). DO NOT TIGHTEN COMPLETELY.


C. CONNECT RIGHT ARM (A) TO BACK OF CHAIR FRAME (C) WITH FLAT WASHER (H) AND BOLT (F) USING ALLEN WRENCH (I).DO NOT TIGHTEN COMPLETELY.

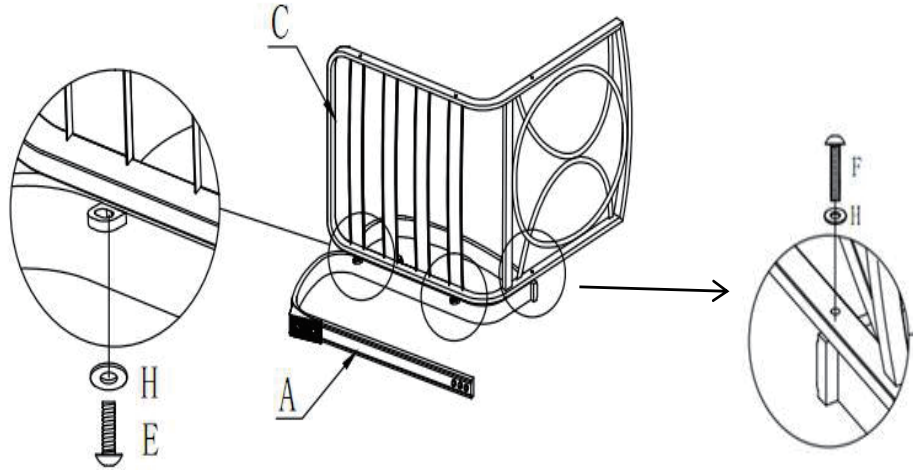

# STEP-2


A. CONNECT LEFT ARM (B) TO BACK OF CHAIR FRAME (C) WITH FLAT WASHER (H) AND BOLT (F) USING ALLEN WRENCH (I). DO NOT TIGHTEN COMPLETELY.

B. CONNECT LEFT ARM (B) TO SEAT OF CHAIR FRAME (C) WITH FLAT WASHER (H) AND BOLT (E) USING ALLEN WRENCH (I). DO NOT TIGHTEN COMPLETELY.

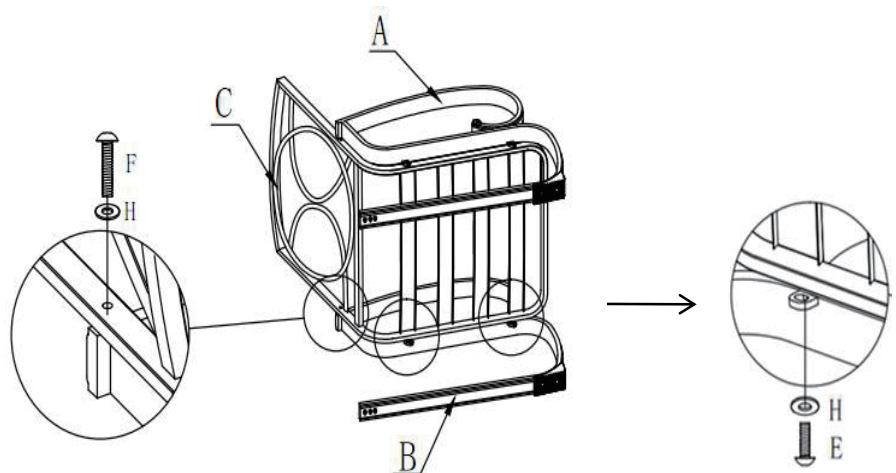


## STEP-3

A. ATTACH REAR LEG CONNECTOR (D) TO CHAIR FRAME (C) ASSEMBLY AND (A) USING LEG LEVELER (G), FLAT WASHER (H) AND BOLT (E) USING ALLEN WRENCH (I). DO NOT TIGHTEN COMPLETELY.

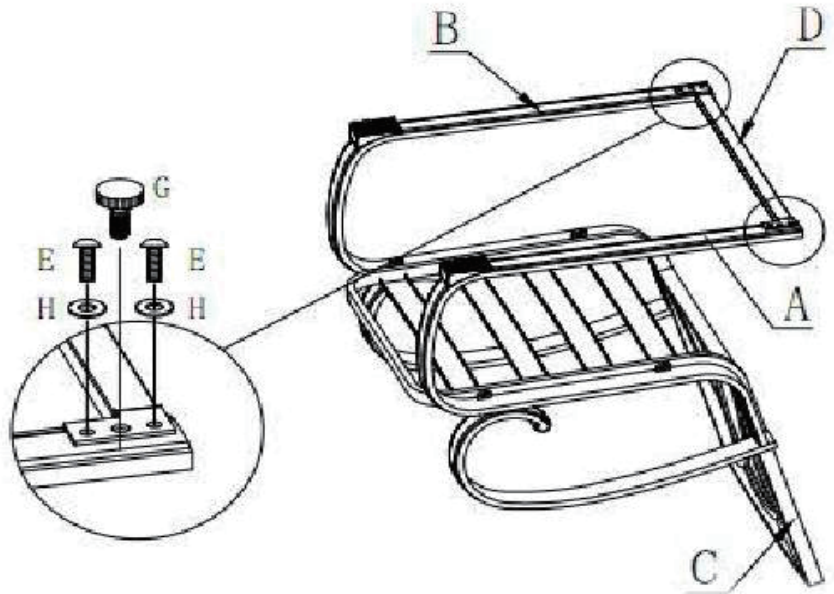
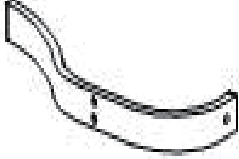





## STEP-4

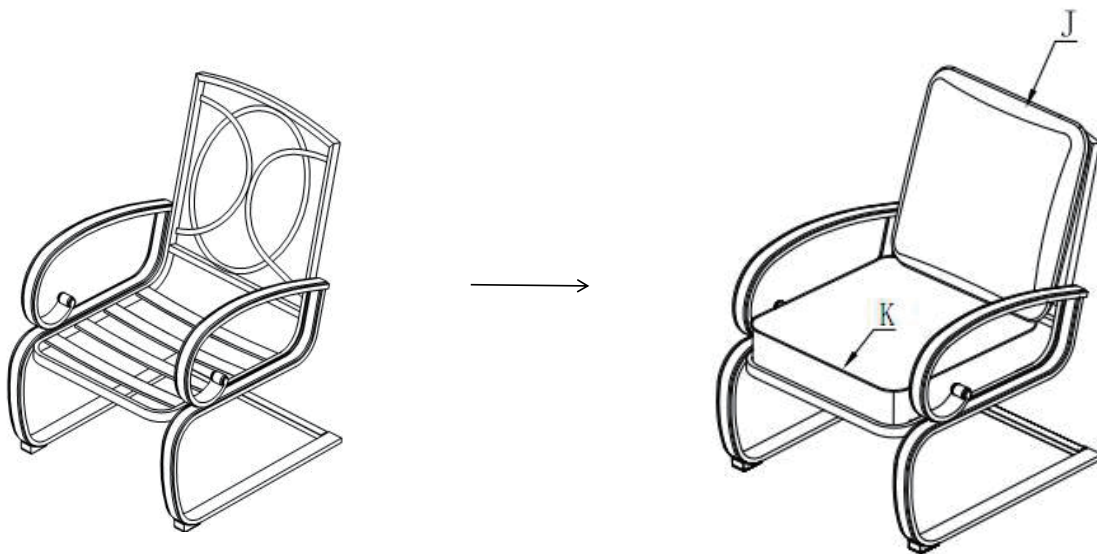- A. TURN CHAIR TO UPRIGHT POSITION SO THAT IT STANDS SQUARELY ON THE FLOOR.
- B. TIGHTEN ALL BOLTS SECURELY USING ALLEN WRENCH (I).
- C. KEEP ALLEN WRENCH (I) TO TIGHTEN ALL BOLTS PERIODICALLY AS NEEDED.
- D. PLACE CUSHION (K) WITH TIES ON THE SEAT, THEN PUT ON BACK CUSHION (J).




## TABLE

PART LIST	FIGURE	QUANTITY	DESCRIPTION
A		1 PC	TOP
B		4 PCS	LEG
C		1 PC	LEG CONNECTOR
D		12 PCS + 1 PC	FLAT WASHER + BOLT (M6*23MM)
E		1 PC	ALLEN WRENCH

## STEP-1

A. PLACE TOP (A) UPSIDE DOWN ON A FLAT, PROTECTED SURFACE.


B. ATTACH LEGS (B) TO TOP (A) WITH FLAT WASHERS AND BOLTS (D) USING ALLEN WRENCH (E). DO NOT TIGHTEN COMPLETELY.

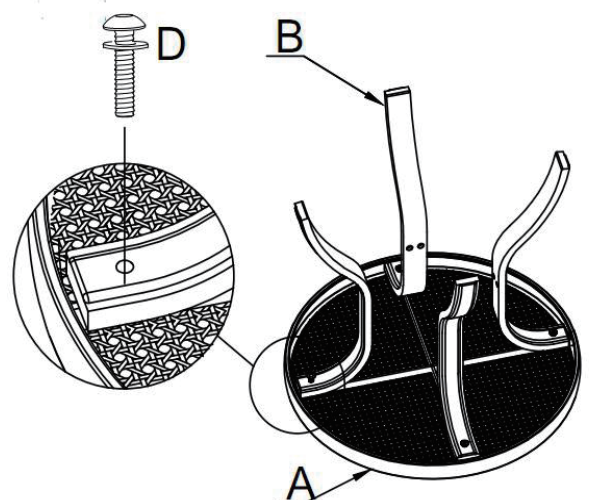

## STEP-2

A. ATTACH LEG CONNECTOR (C) TO LEGS (B) WITH FLAT WASHERS AND BOLTS (D) USING ALLEN WRENCH (E). DO NOT TIGHTEN COMPLETELY.

B. TIGHTEN COMPLETELY ALL BOLTS ON LEG CONNECTOR (C) FIRST THEN AT TOP (A) WITH ALLEN WRENCH (E).

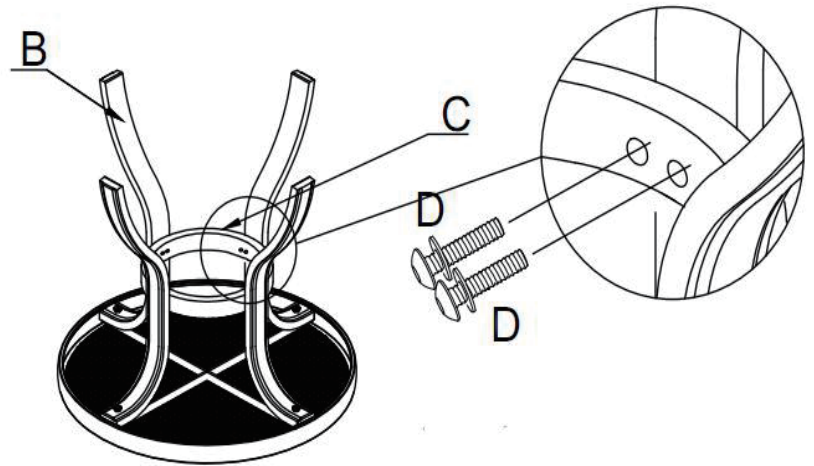

## STEP-3

A. ROTATE TABLE TO THE UPRIGHT POSITION.

B. ASSEMBLY IS COMPLETE.

