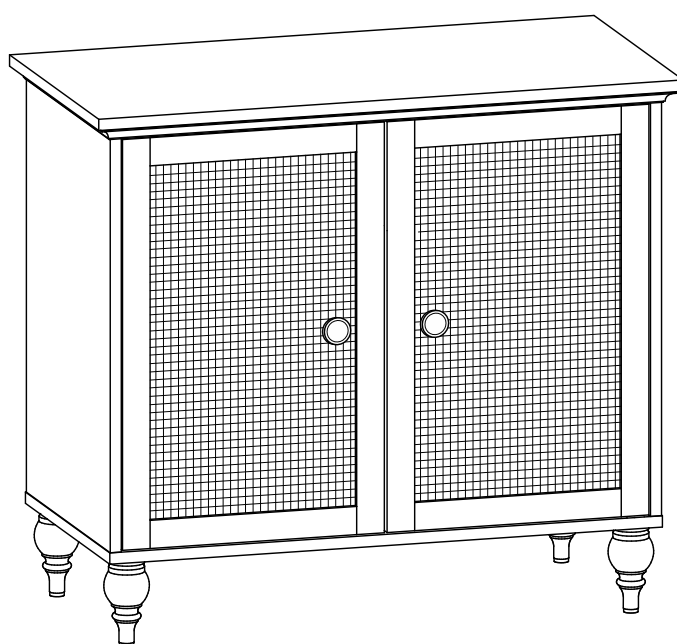


ASSEMBLY INSTRUCTIONS

Sango®

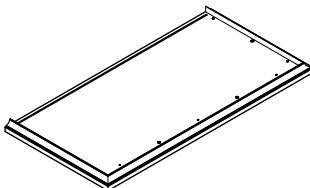
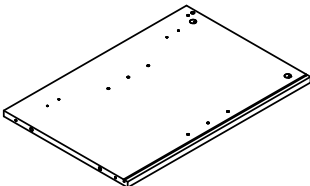
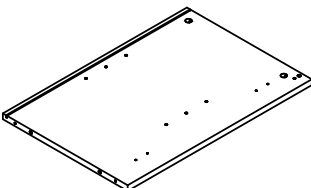
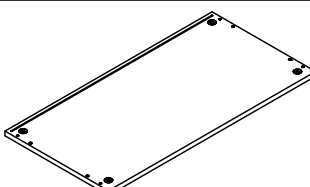
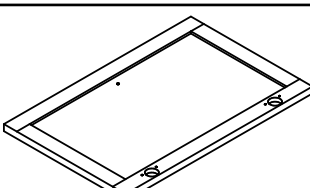
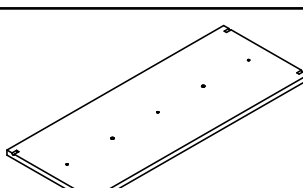
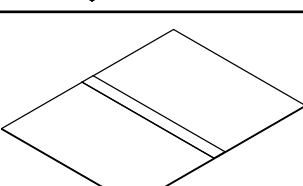
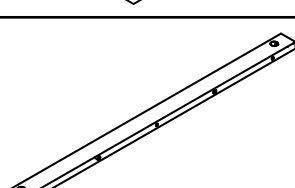
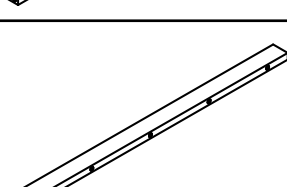
PRODUCT NAME : NEWCOMB 2 DOOR CABINET
DIMENSIONS : 33.15"W x 16.57"D x 30.04"H
ITEM NO. : 7245BR581ACW23 (BROWN)
7245BK581ACW23 (BLACK)










**Note:**

- Please make sure all parts and proper quantities are included.
 - Do not use power tools. We recommend you hand-tighten screws.
- Use care not to overtighten.

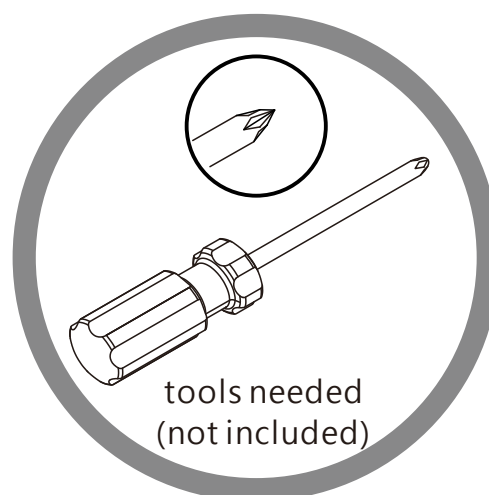
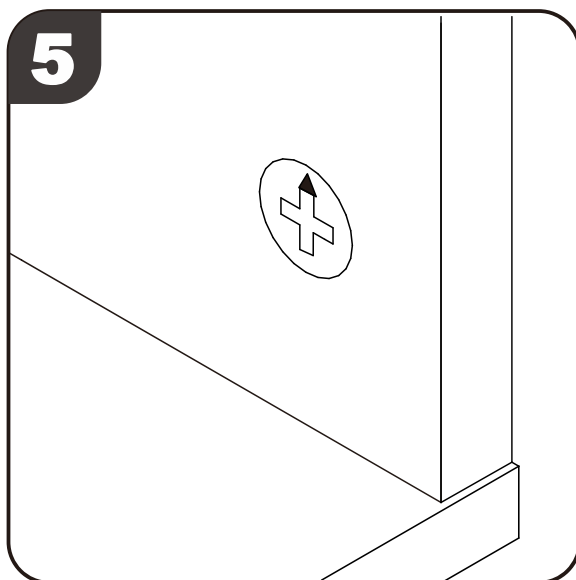
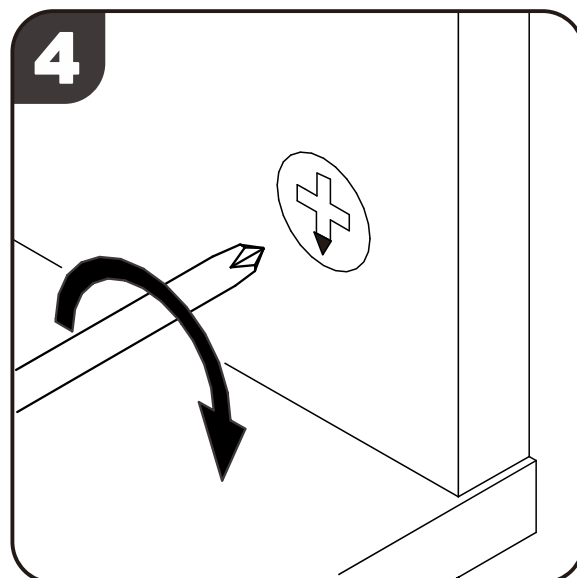
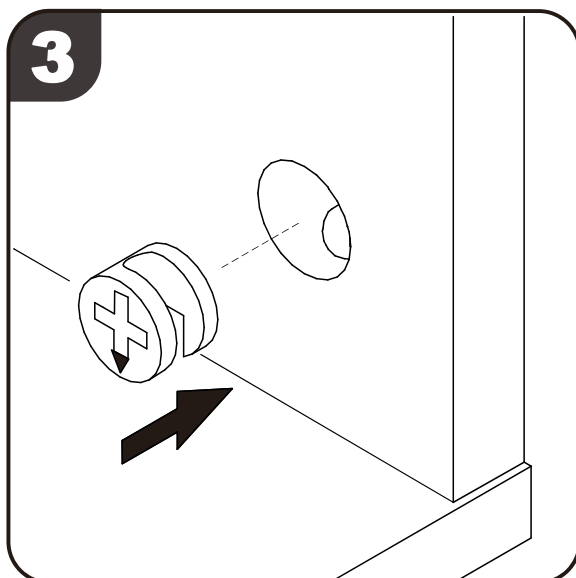
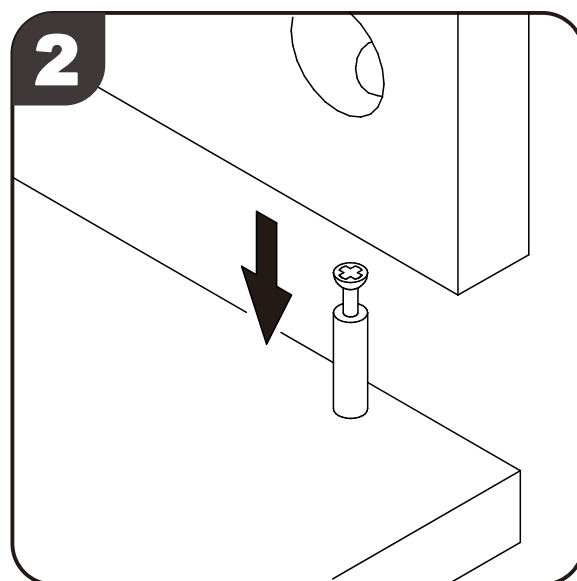
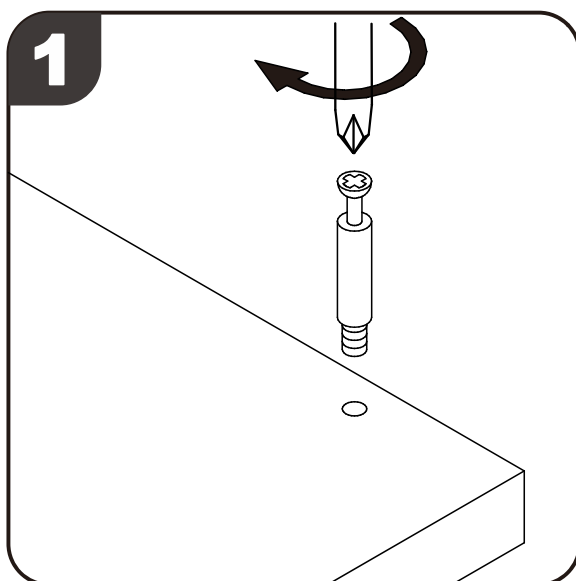


1. Check for damaged or missing parts . Call 1-800-696-8446 to order missing supplies.
2. Use a soft surface or the carton as a working surface to prevent damage during assembly.
3. It is recommended to have 2 adults on hand for assembly.
4. Gather all tools prior to assembly.
5. **WARNING!** When included, anti-tipping hardware **MUST** be installed for your safety.

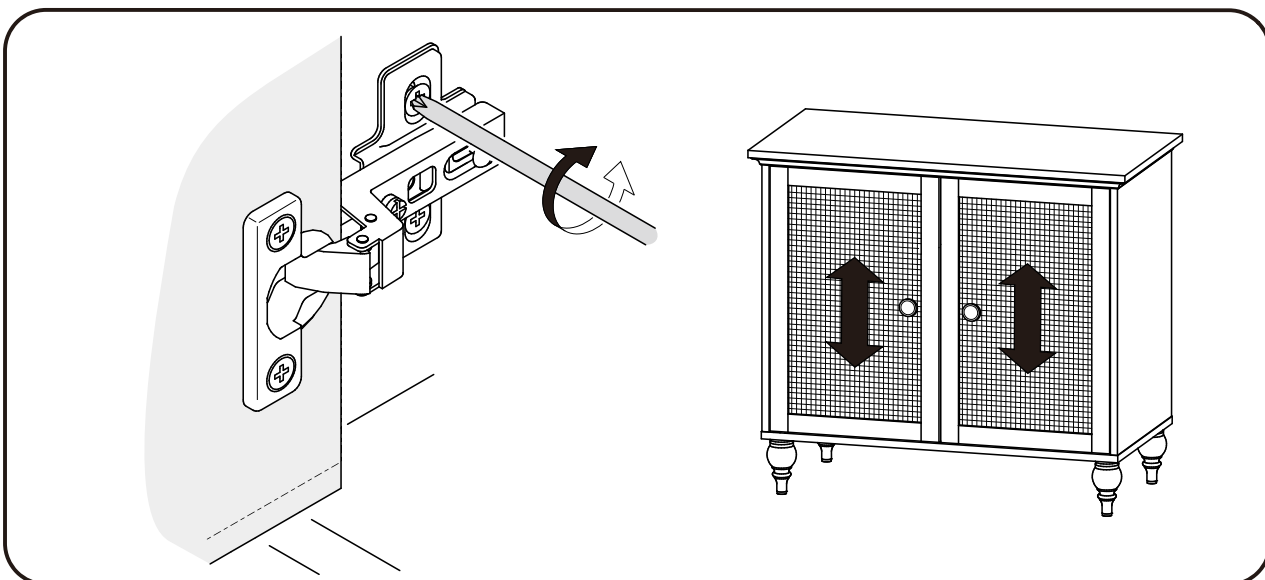
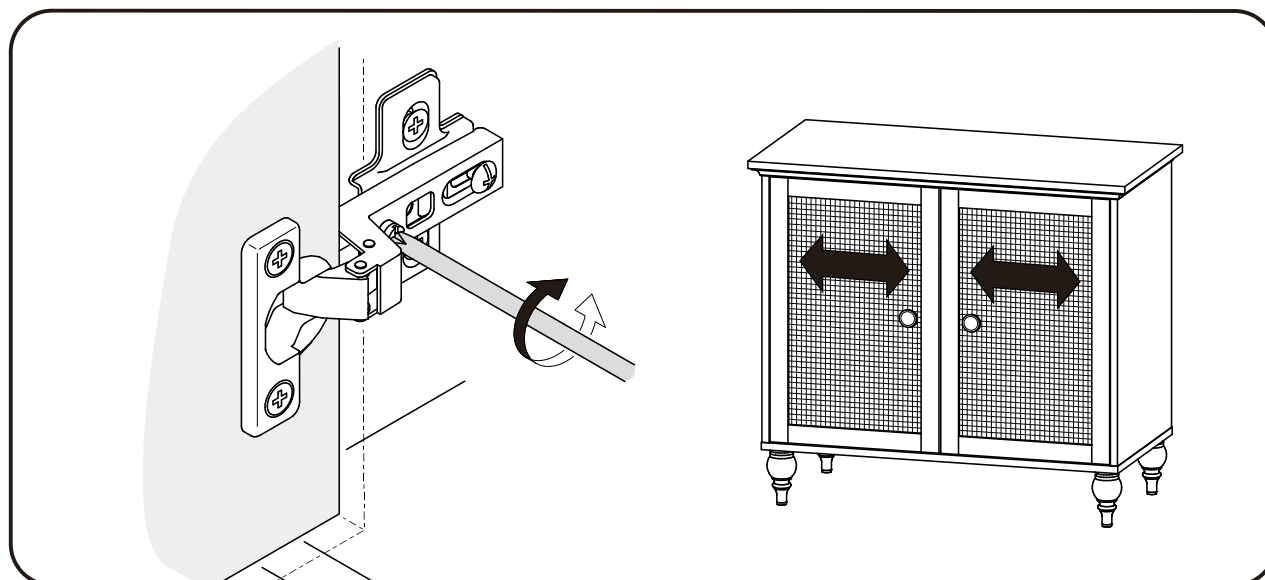
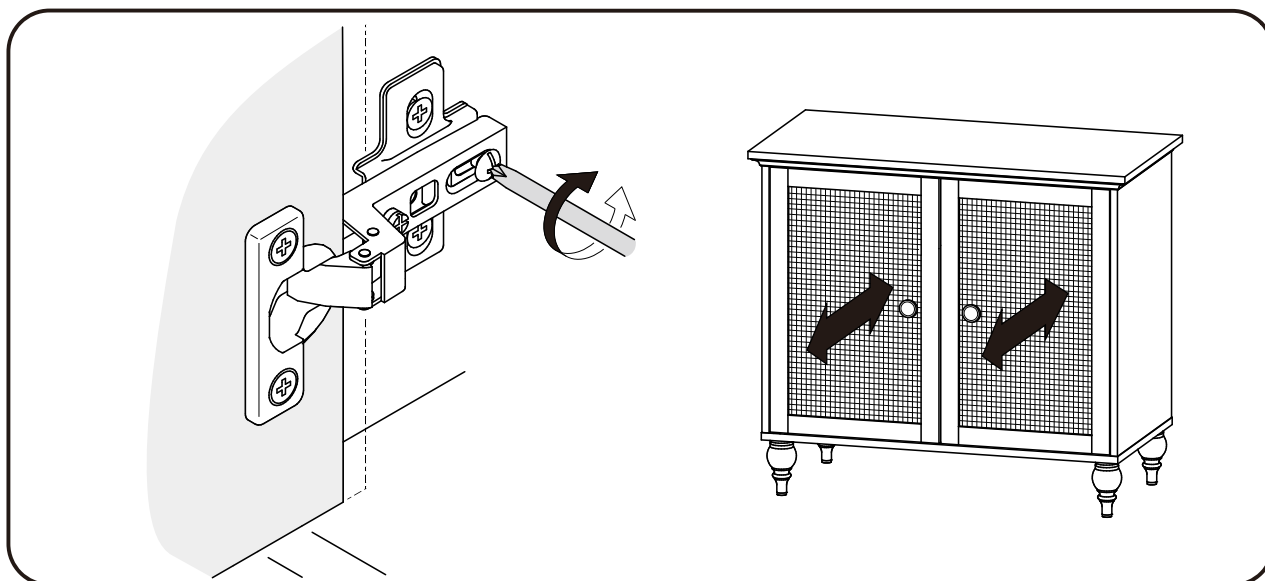
PARTS LIST :			QTY
A	Top Panel		1pc
B	Left Side Panel		1pc
C	Right Side Panel		1pc
D	Bottom Panel		1pc
E	Door		2pcs
F	Shelf		1pc
G	Back panel		1pc
H	Support for Top Panel (L)		1pc
I	Support for Shelf (S)		1pc

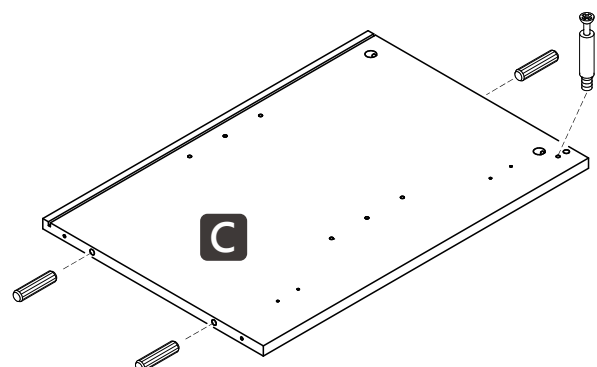
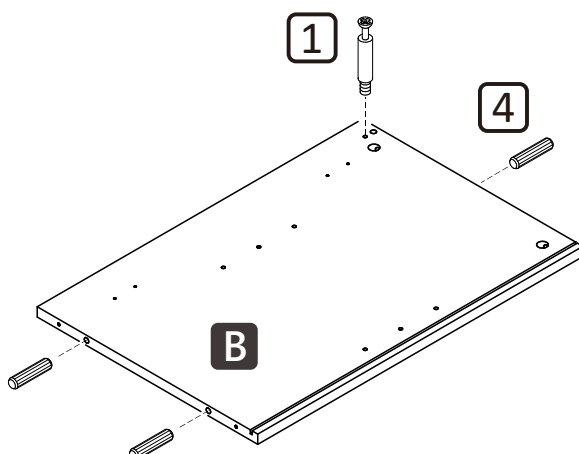
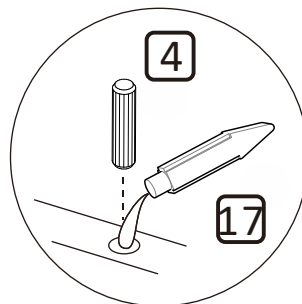
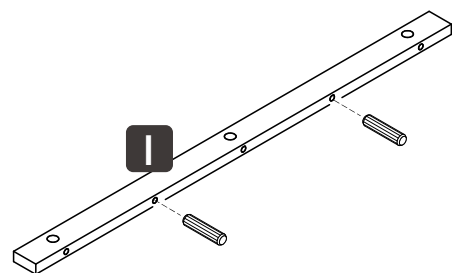
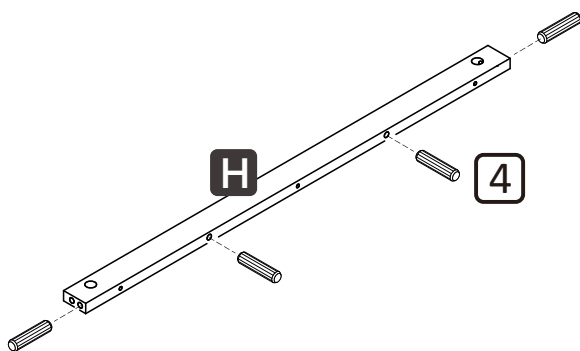
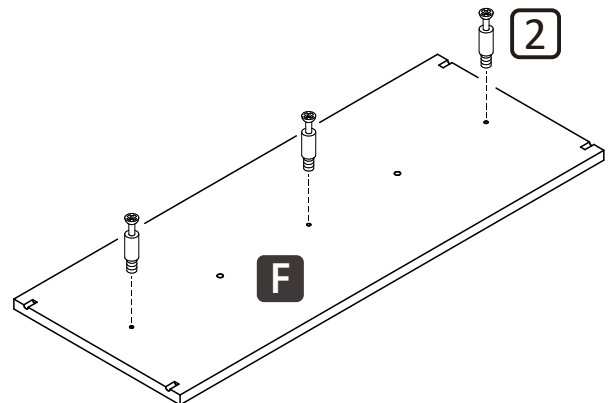
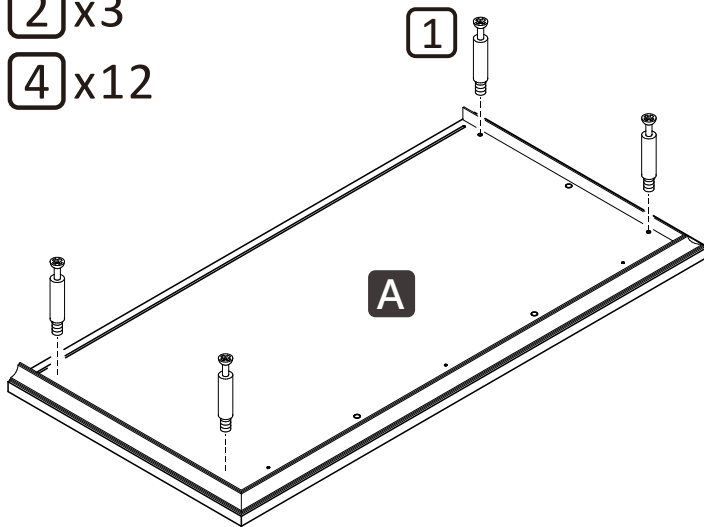
HARDWARE :			QTY
1	Cam Bolt (34mm)		6pcs
2	Cam Bolt (24mm)		3pcs
3	Cam Lock		9pcs
4	Wooden Dowel Ø8x25mm		12pcs
5	Leg Ø63x120mm		4pcs
6	Screw for Bottom		4pcs
7	Handle		2pcs
8	Screw for Handle		2pcs
9	Washer for Handle		2pcs
10	Hinge		4pcs
11	Screw for Hinge		16pcs
12	Shelf Pin		4pcs
13	Plastic Wedge Bracket		6pcs
14	Screw for Plastic Wedge Fixture		6pcs
15	Cover Sticker		4pcs
16	Bumper cushions		2pcs
17	Glue		1pc
18	Anti-tip Bracket		2pcs
19	Plastic Anchor		1pc
20	Screw for Plastic Anchor		1pc
21	Screw for Anti-tip Bracket		1pc
22	Anti-tip Cable Tie		1pc
23	Screw for Support of Top Panel		3pcs

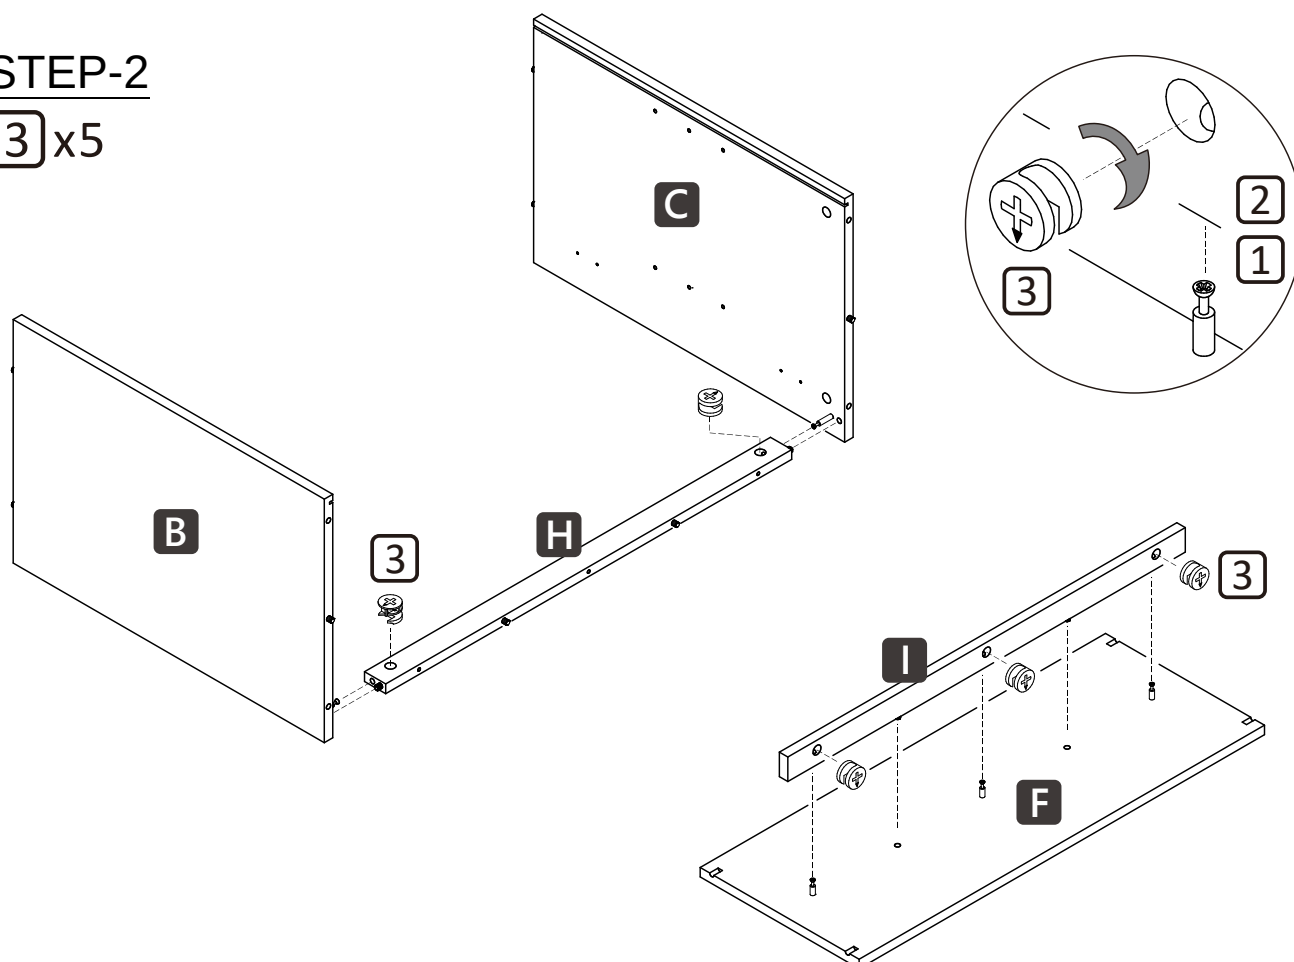
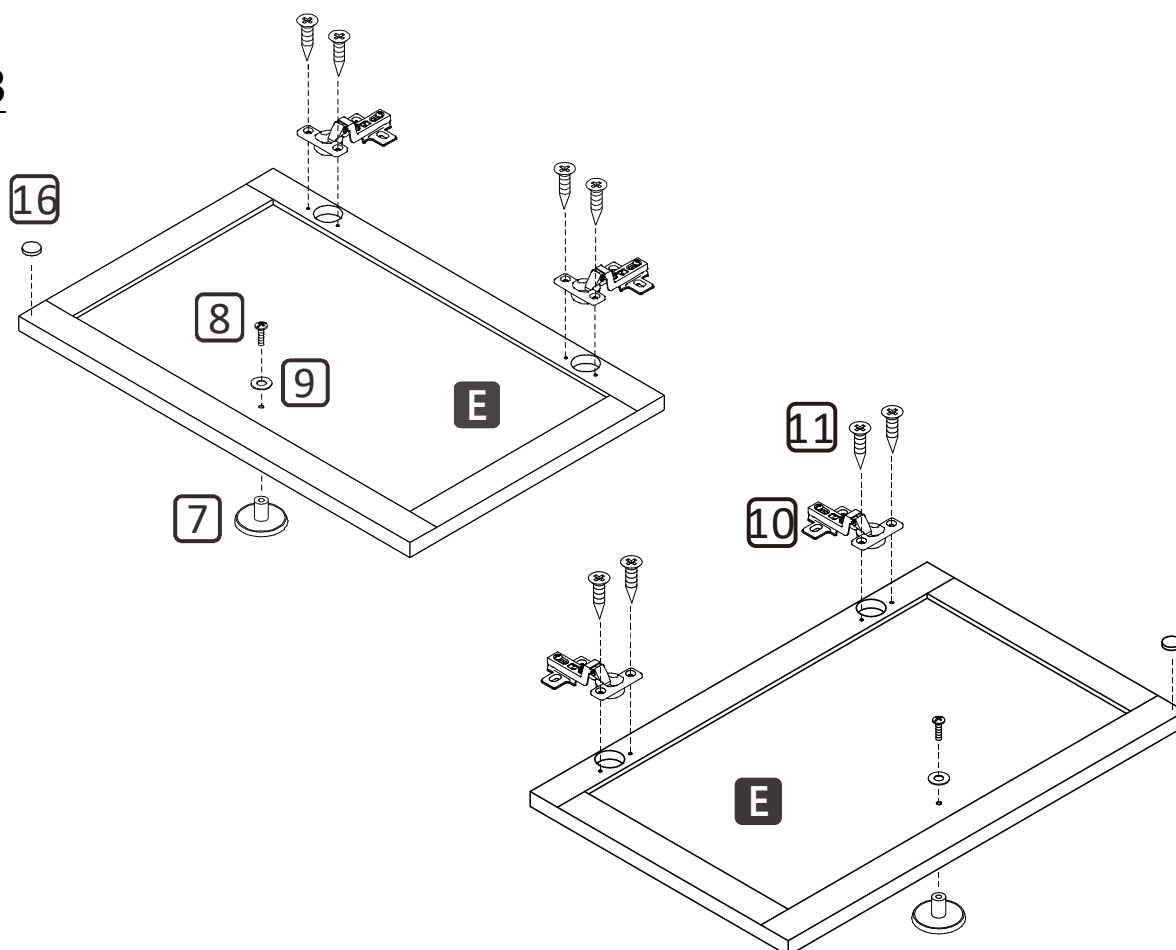
How to use cam lock system

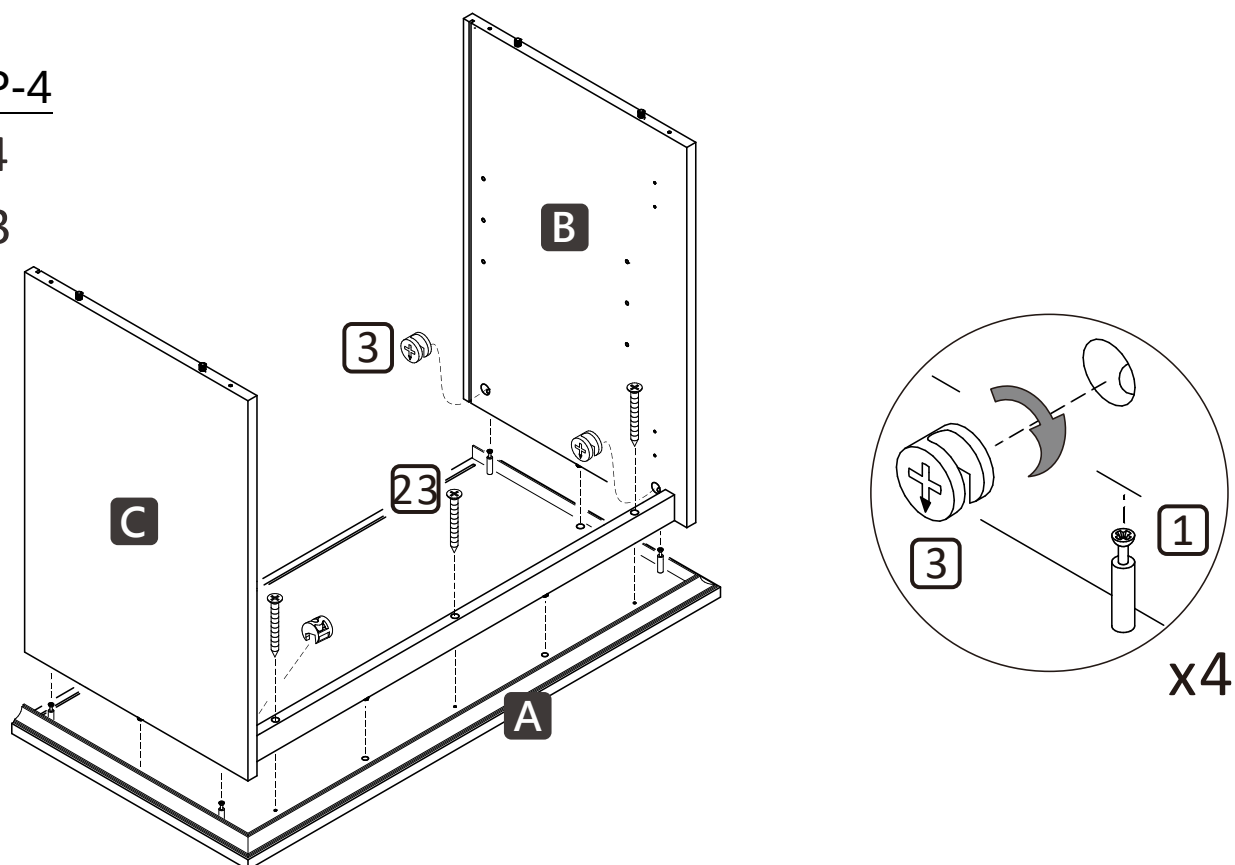
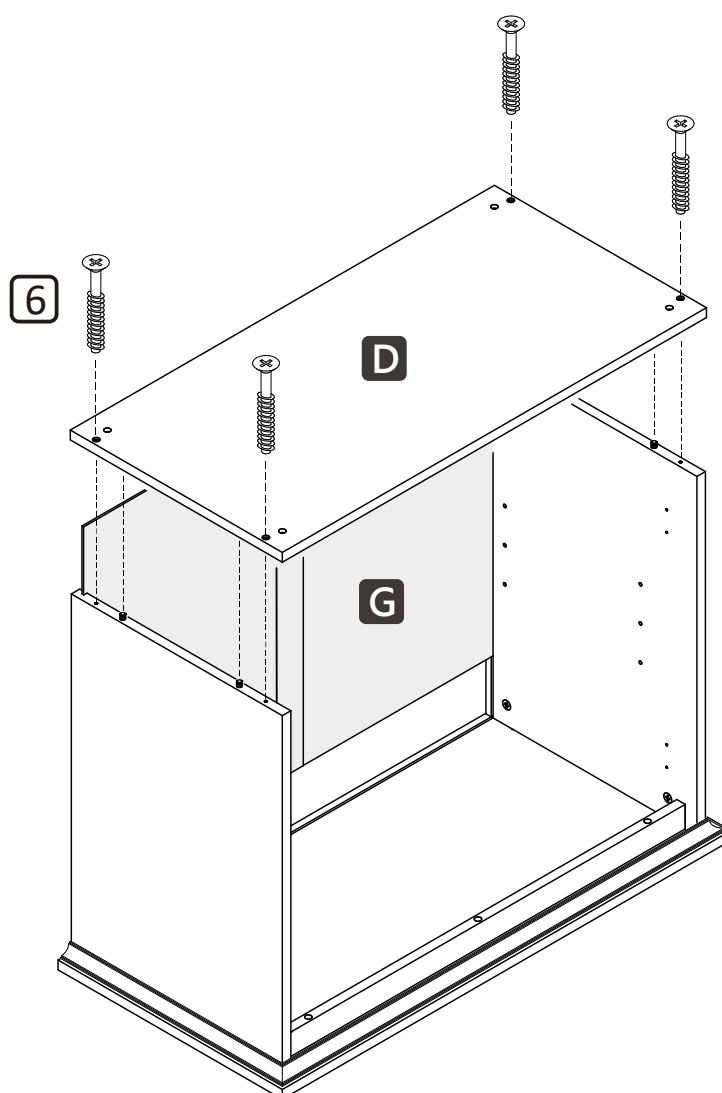


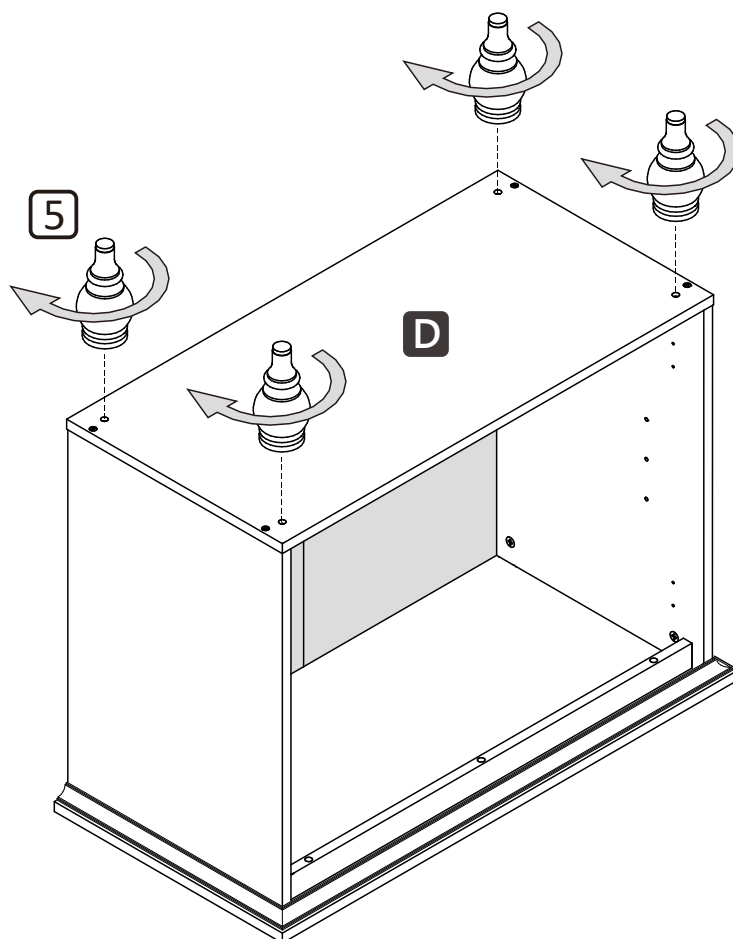
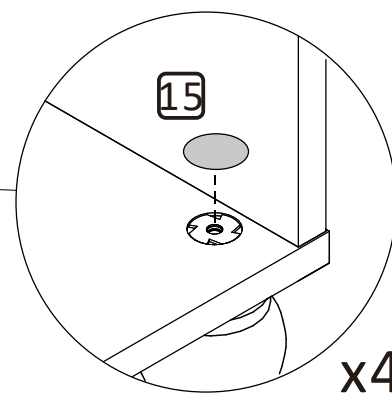
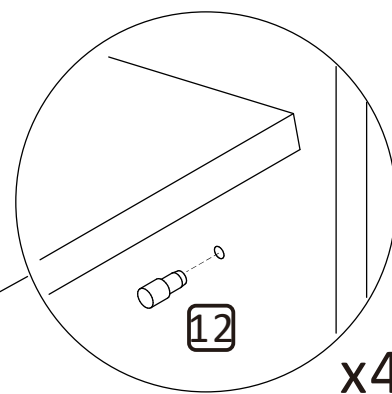
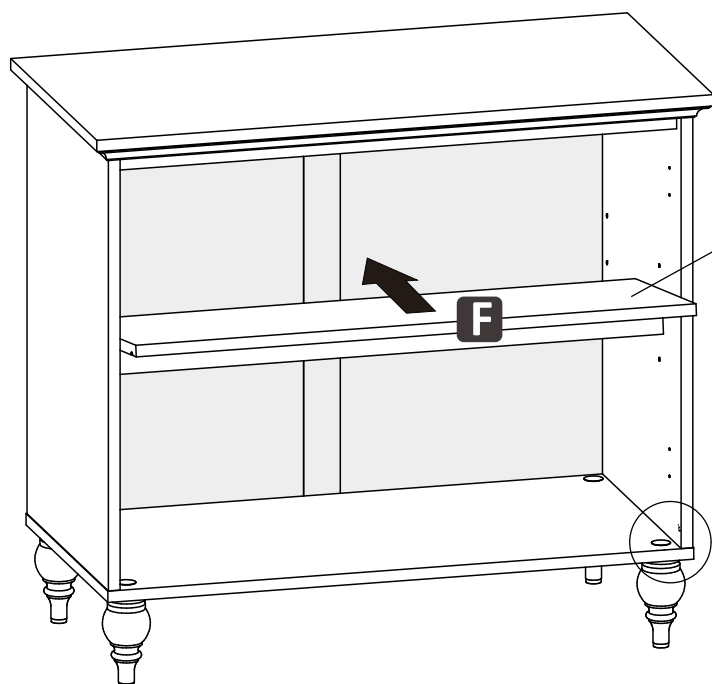
How to adjust door's gap

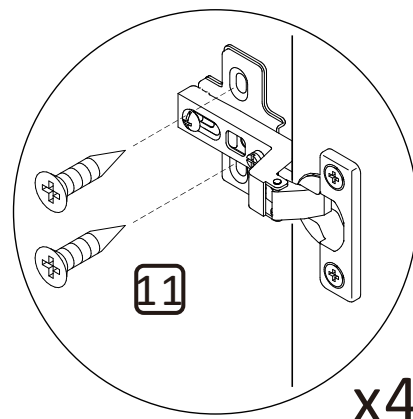
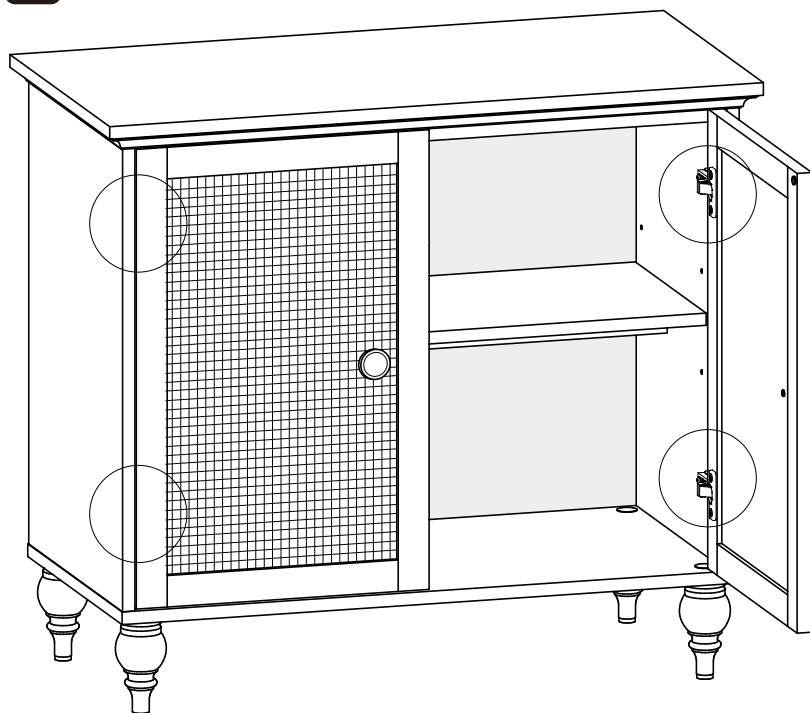
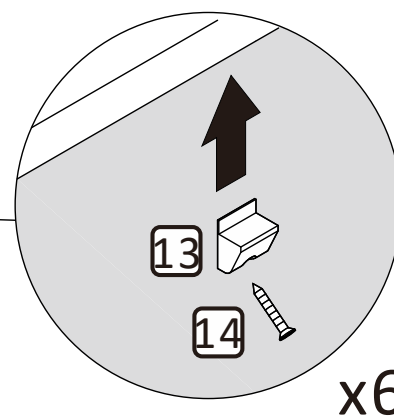
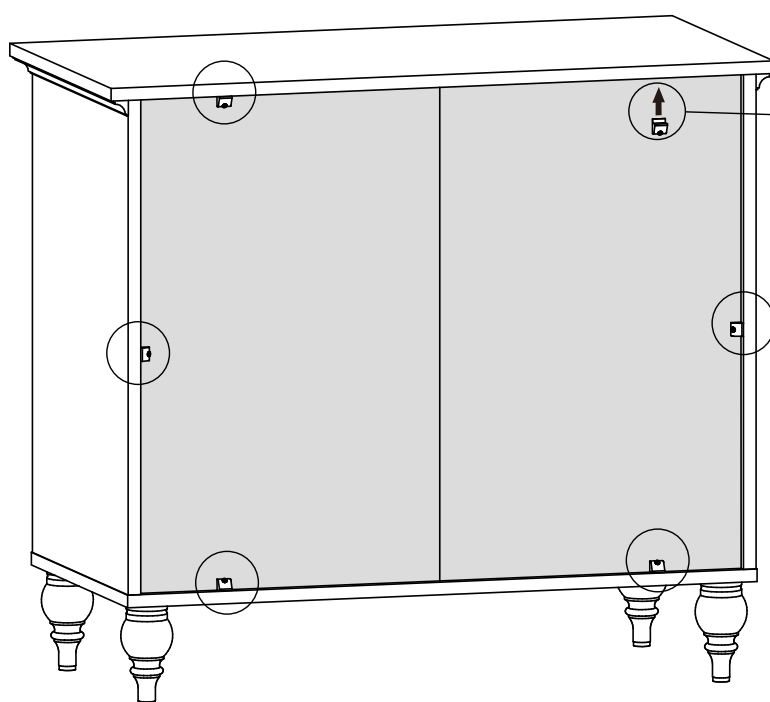


STEP-1**1** x6**2** x3**4** x12

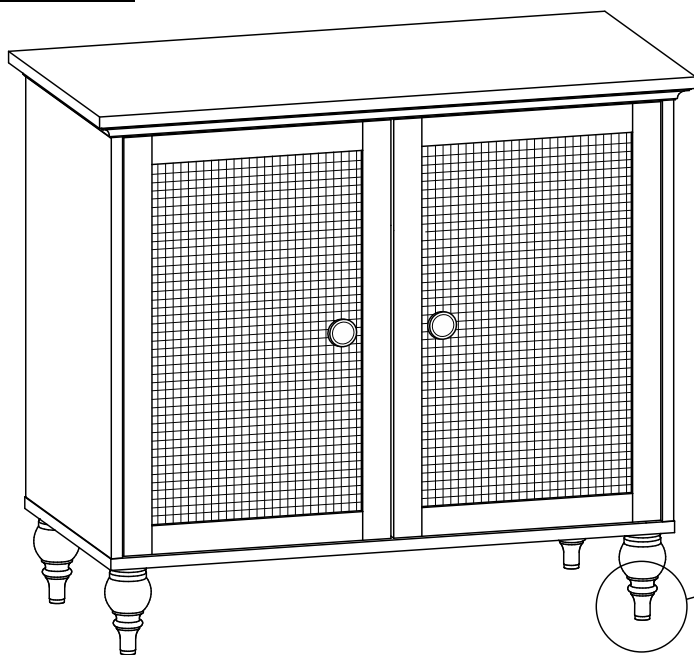
STEP-2**3** x5**STEP-3****7** x2**8** x2**9** x2**10** x4**11** x8**16** x2

STEP-4**3** x4**23** x3**STEP-5****6** x4

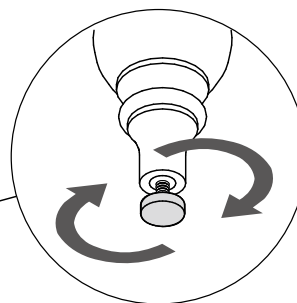
STEP-6**5** x4**STEP-7****12** x4**15** x4

STEP-8**11** x8**STEP-9****13** x6**14** x6

Lock plastic wedge bracket
on 6 corners of the back panel.

STEP-10

Note:
adjust levelers on an uneven floor.

**STEP-11** INSTALL THE TIP-OVER CABLE

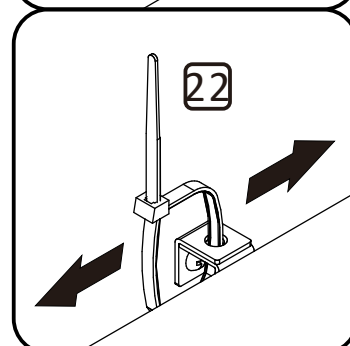
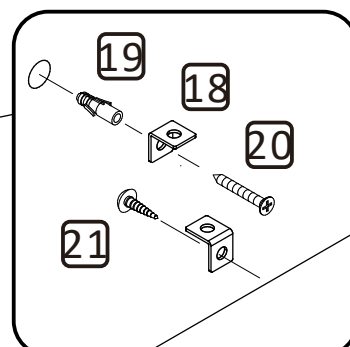
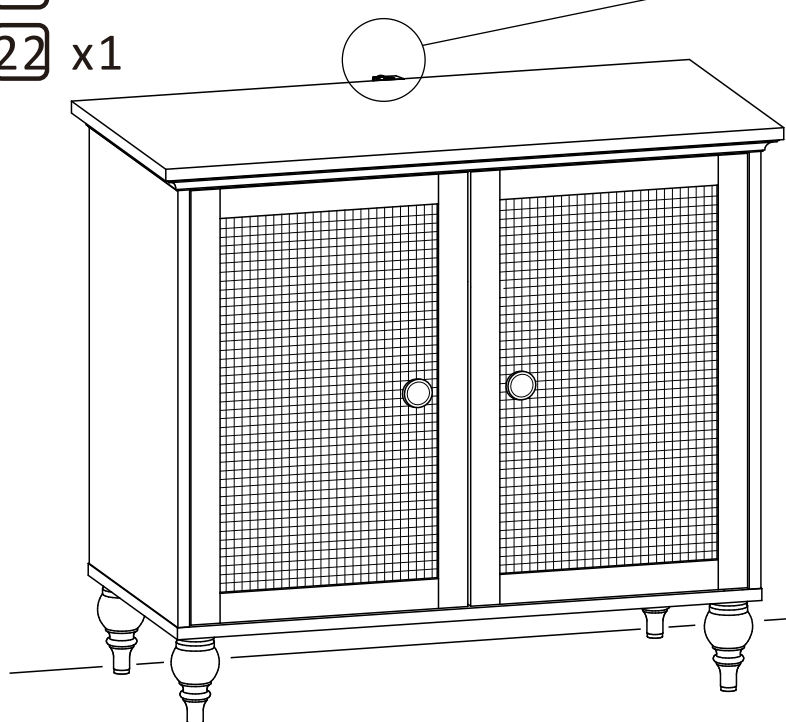
18 x2

19 x1

20 x1

21 x1

22 x1



Screw into wall stud if available.
Use anchor on hollow wall.

WARNING! Team Lifting Required. Do NOT drag the cabinet.