


# ASSEMBLY INSTRUCTIONS




Weight Capacity Max to 700LBS








Mattress Size :



80"L x 76"W x (8"-12")H




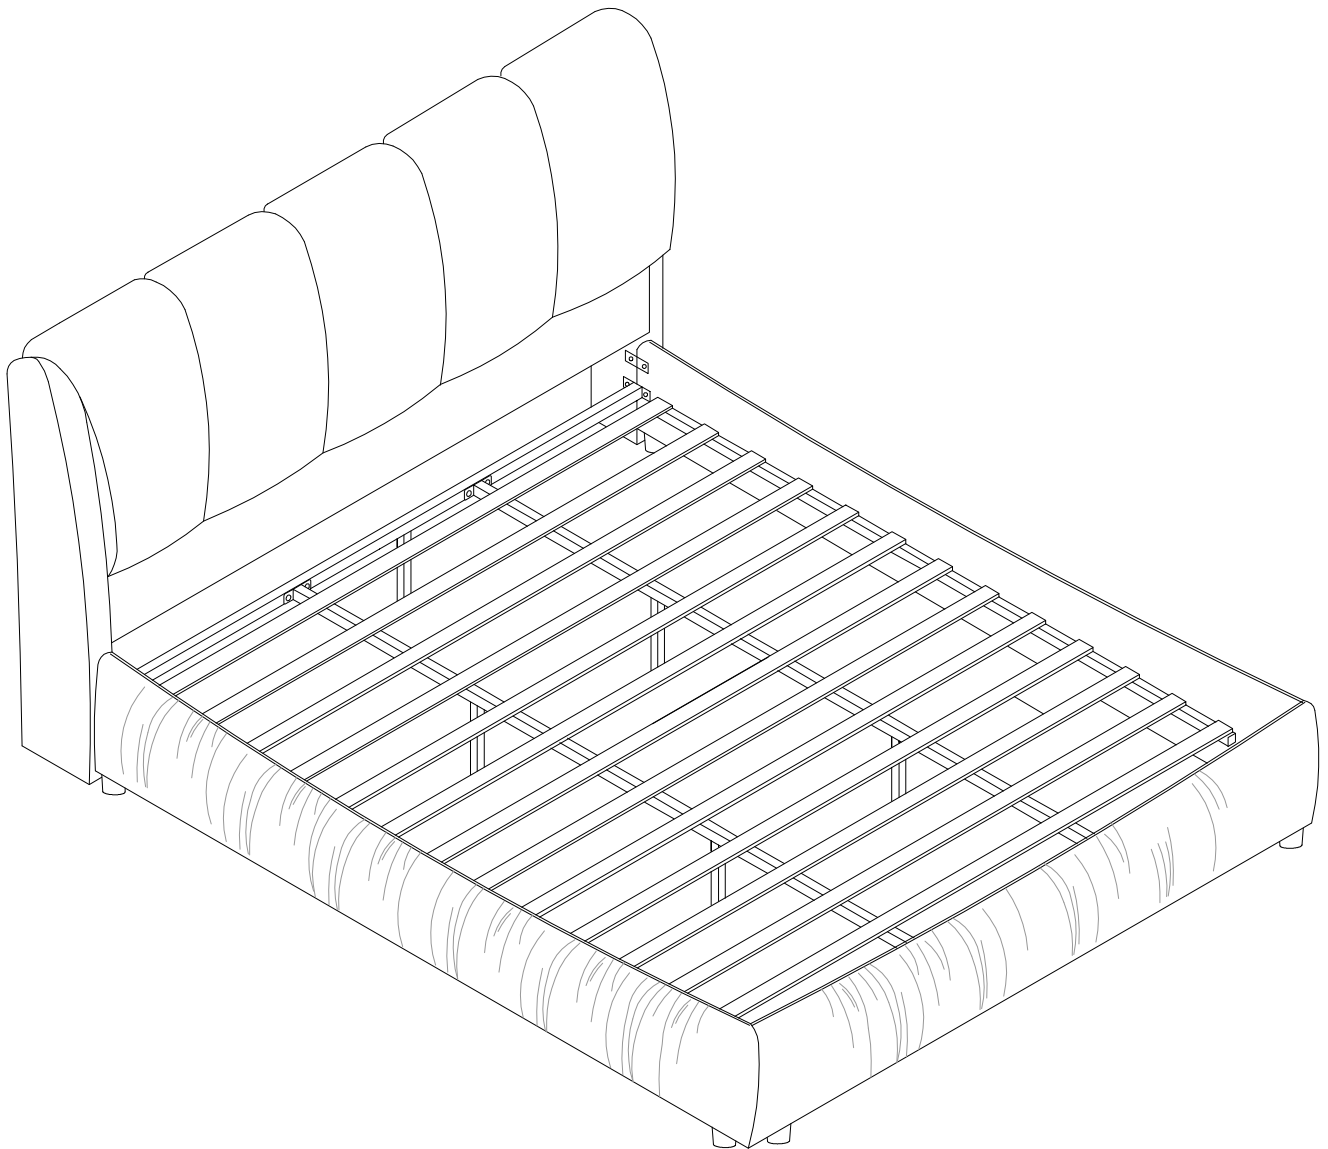


Install all screws according to the instructions, and then tighten them completely.

## PACKING DETAILS:TOTAL 3 BOXES


|                                                                                                   |              |
|---------------------------------------------------------------------------------------------------|--------------|
|                                                                                                   |              |
|                  | 2-(1pc)      |
|                  | 3-(1pc)      |
|                  | 4-(1pc)      |
|                  | 5-(1pc)      |
|                  | 11-(2pcs)    |
|                  | 12-(5pcs)    |
|                 | 13-(6pcs)    |
| (Hardware Packet)                                                                                 |              |
| <br>Bolt M8*45 | A-(8pcs) +1  |
| <br>Bolt M8*25 | B-(20pcs) +1 |
| <br>M8         | C-(28pcs) +1 |
| <br>M8*19      | D-(28pcs) +1 |
| <br>M8         | E-(1pc)      |
| <br>M4*25      | F-(14pcs) +1 |
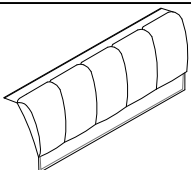
|                                                                                    |           |
|------------------------------------------------------------------------------------|-----------|
|                                                                                    |           |
|  | 1-(1pc)   |
|  | 8-(1pc)   |
|  | 14-(1set) |

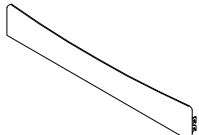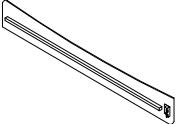
|                                                                                      |           |
|--------------------------------------------------------------------------------------|-----------|
|                                                                                      |           |
|   | 6-(1pc)   |
|  | 7-(1pc)   |
|  | 9-(1pc)   |
|  | 10-(2pcs) |

# ASSEMBLY INSTRUCTIONS

## STEP 1

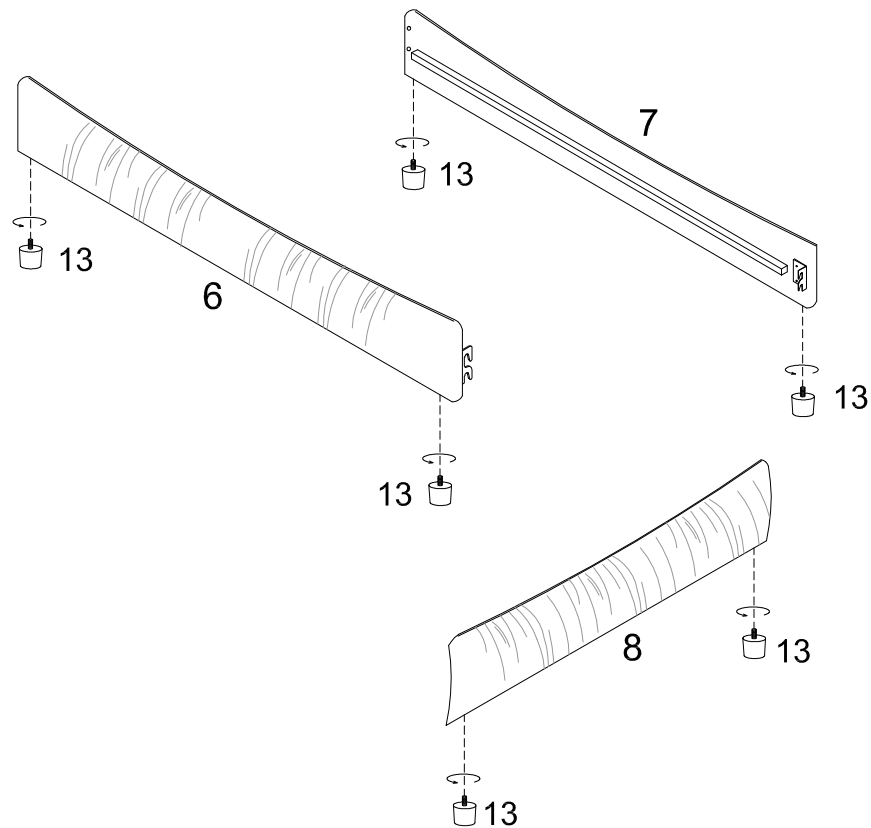


## STEP 2

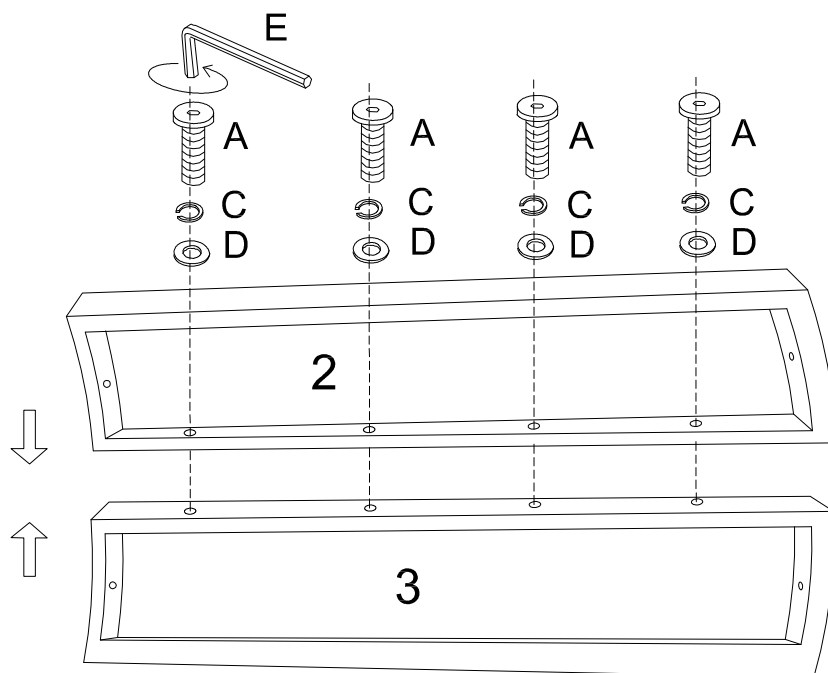


# ASSEMBLY INSTRUCTIONS

## STEP 3

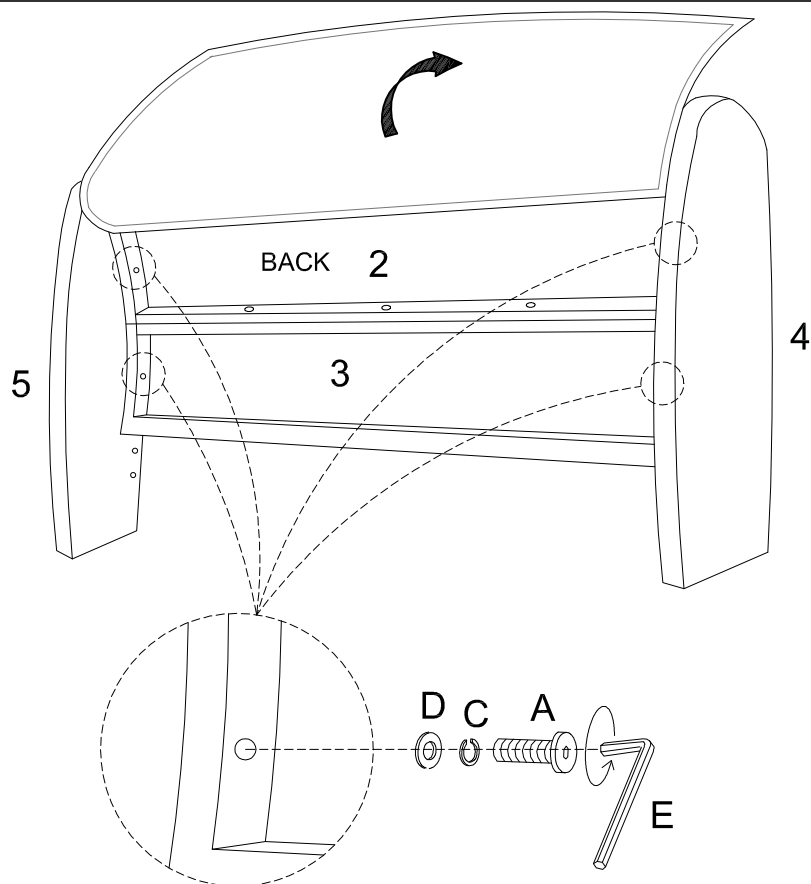

## STEP 4

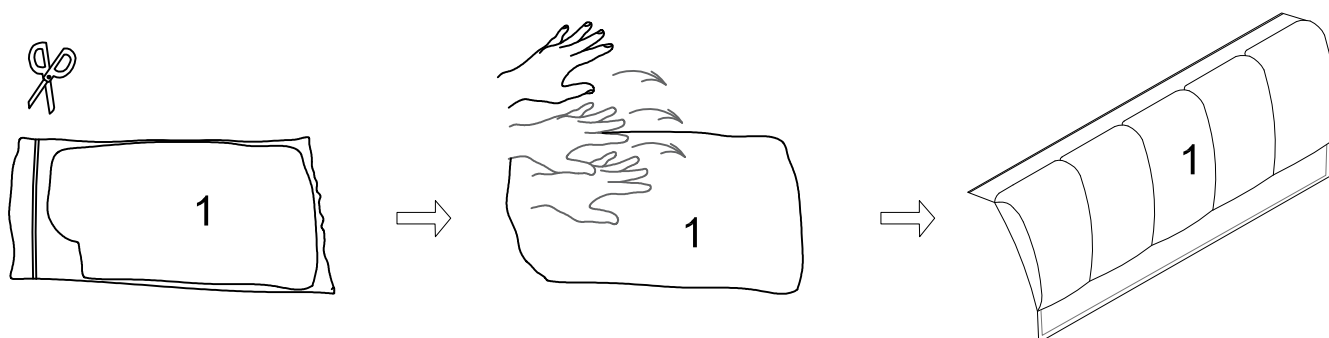


The compressed bedside soft bag will rebound 75-85% after being opened for 24 hours.


After opening the bag, use your hand to pat it so the back inflates by itself.

# ASSEMBLY INSTRUCTIONS

## STEP 5

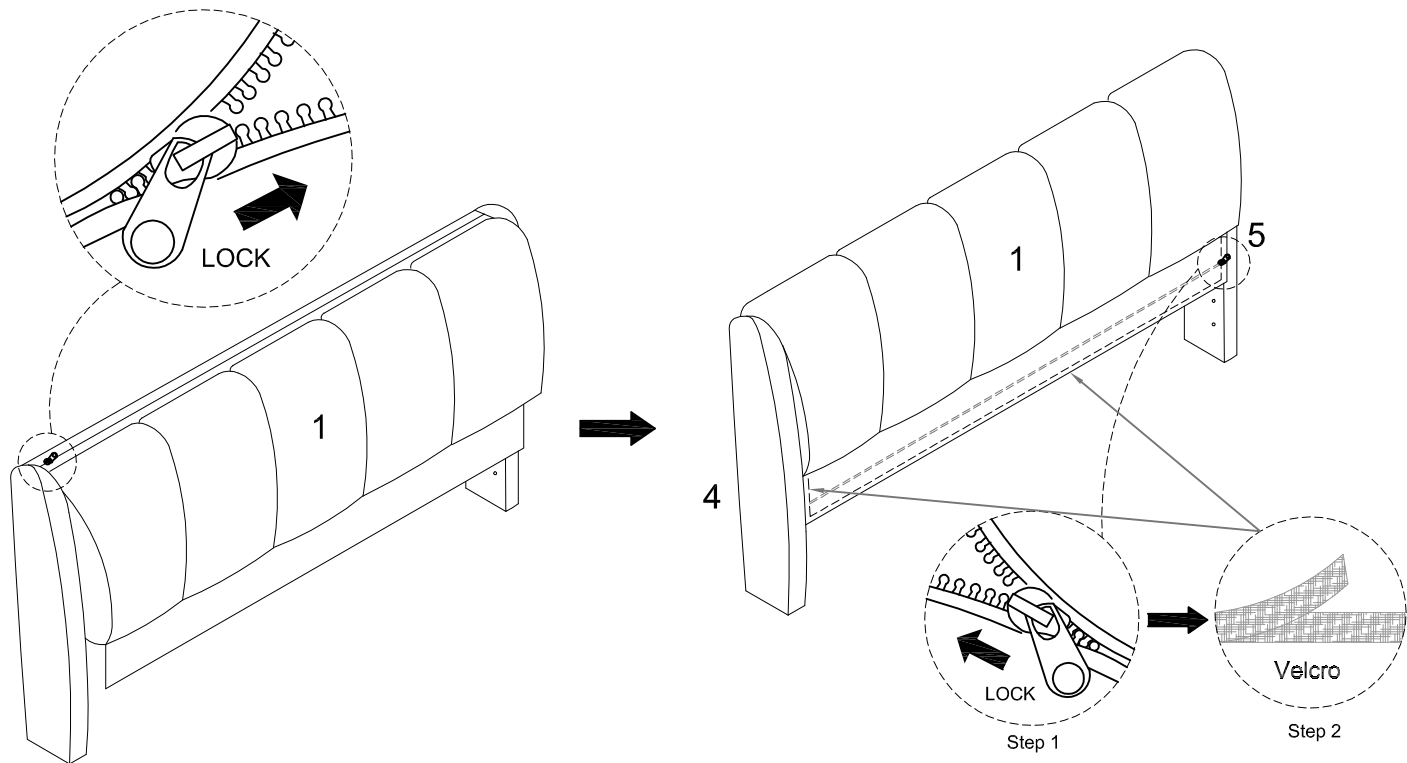


## STEP 6

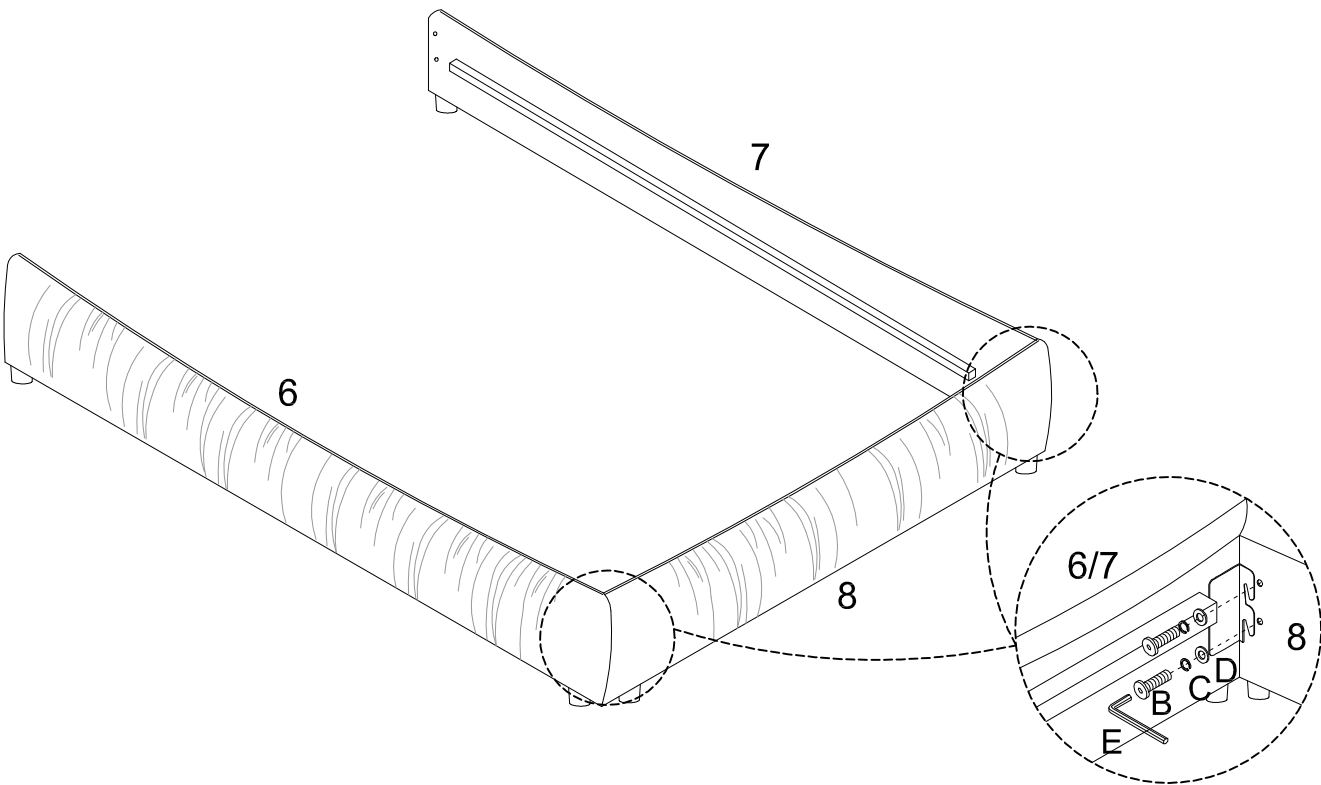


# ASSEMBLY INSTRUCTIONS

## STEP 7

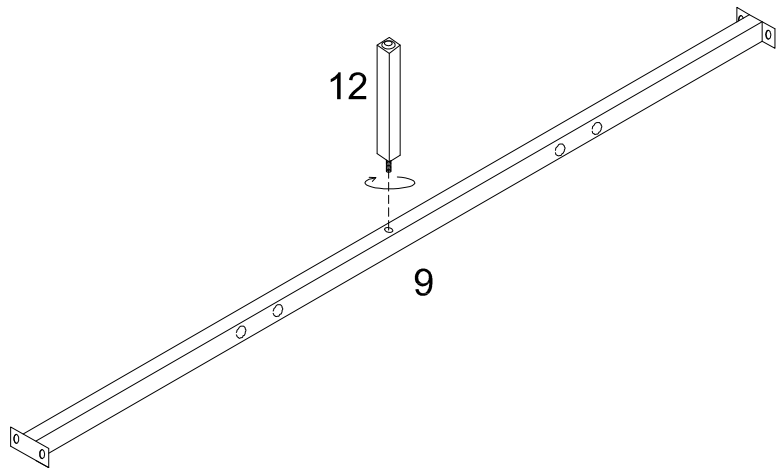


## STEP 8

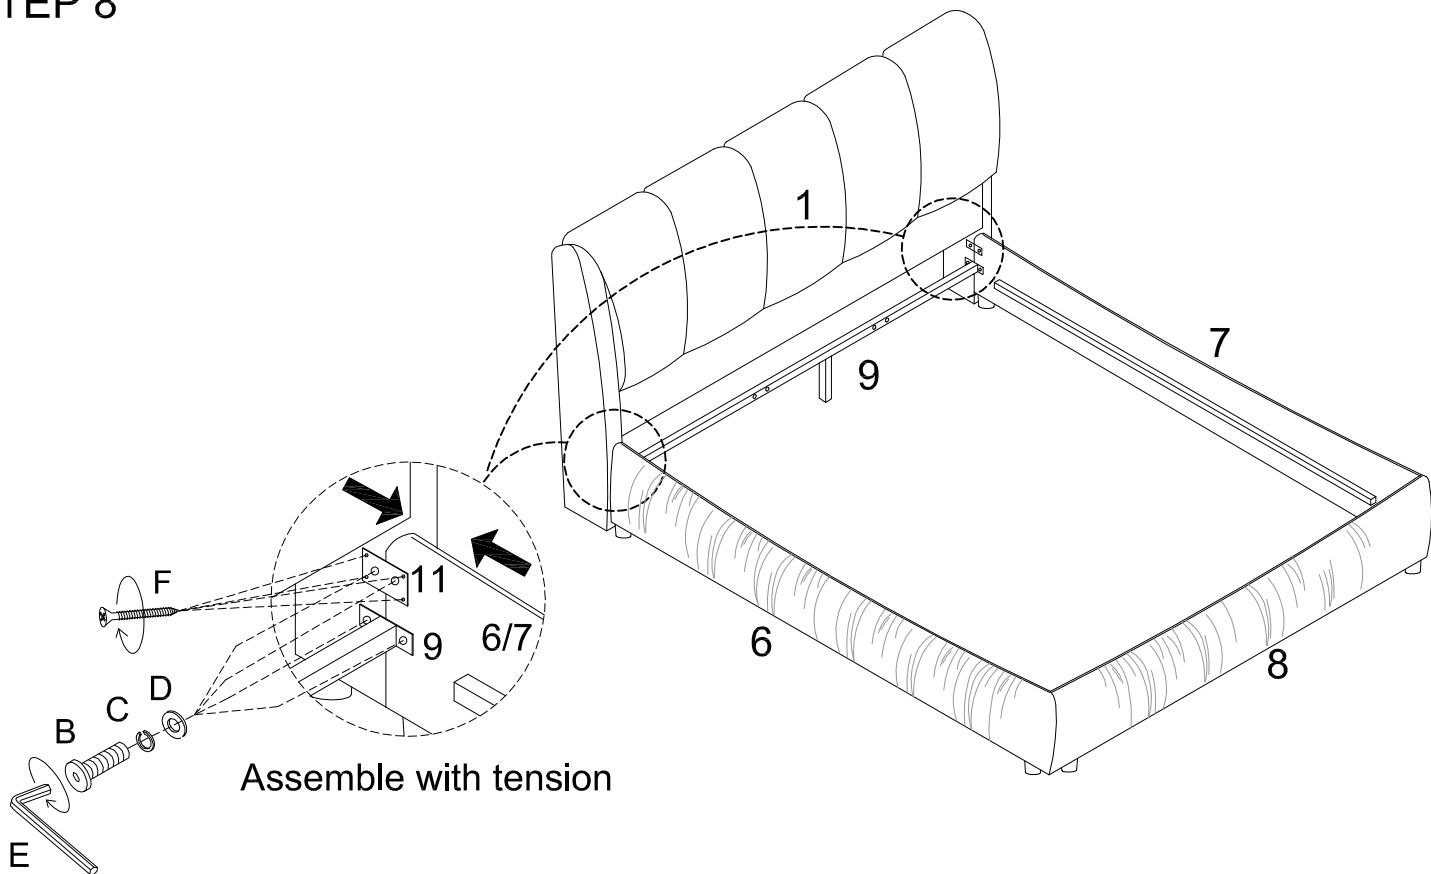


# ASSEMBLY INSTRUCTIONS

## STEP 9

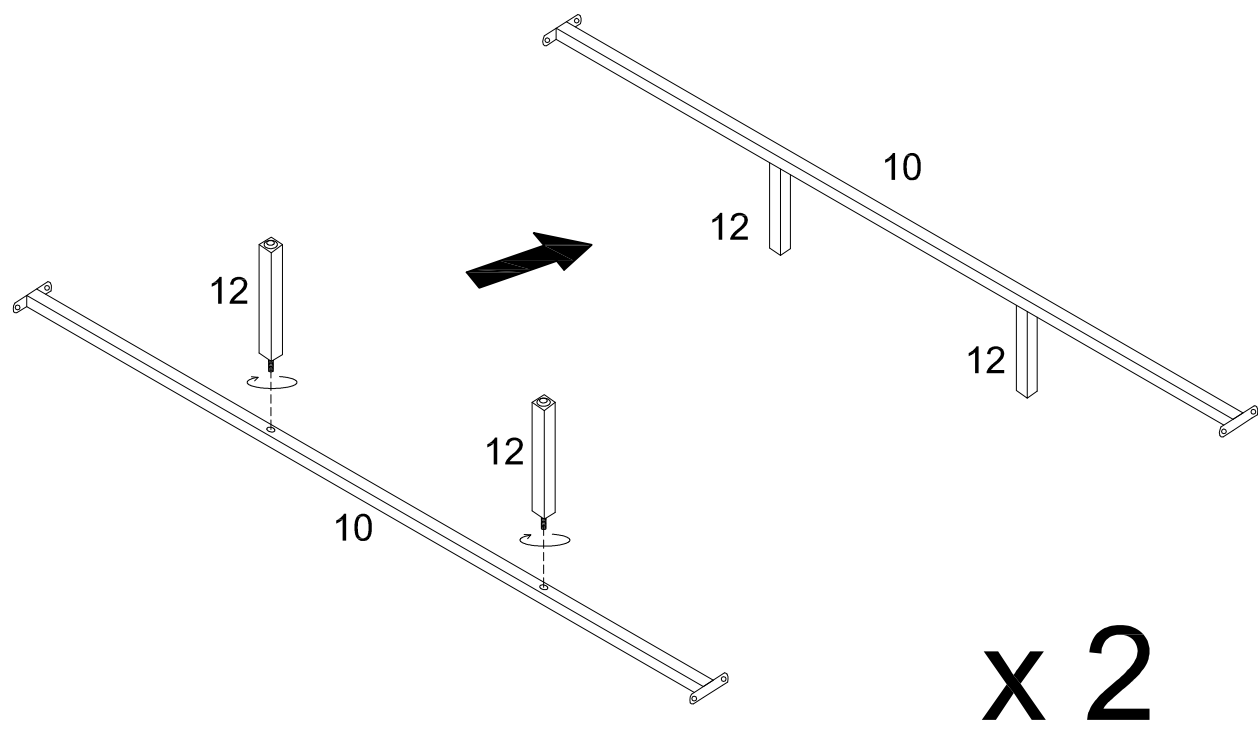


## STEP 10

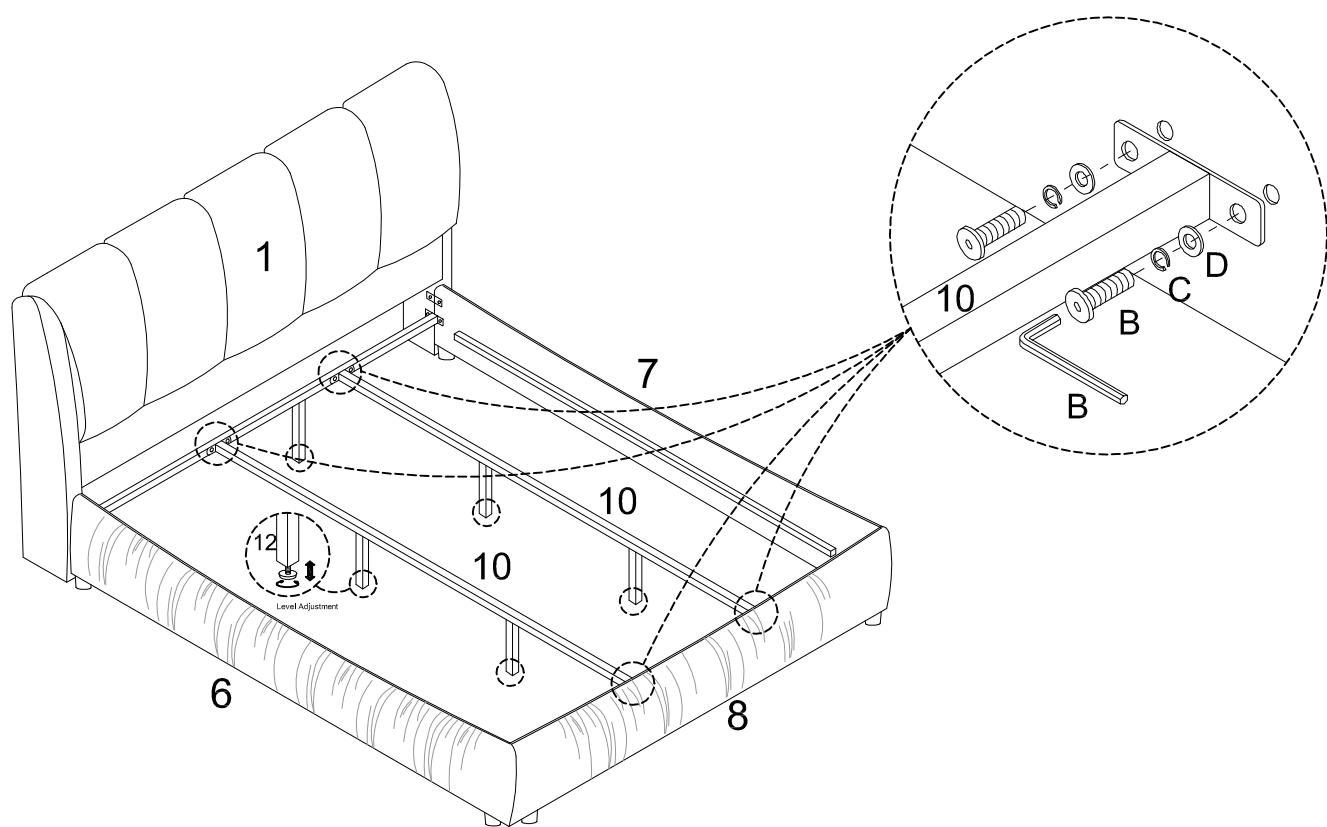


# ASSEMBLY INSTRUCTIONS

## STEP 11

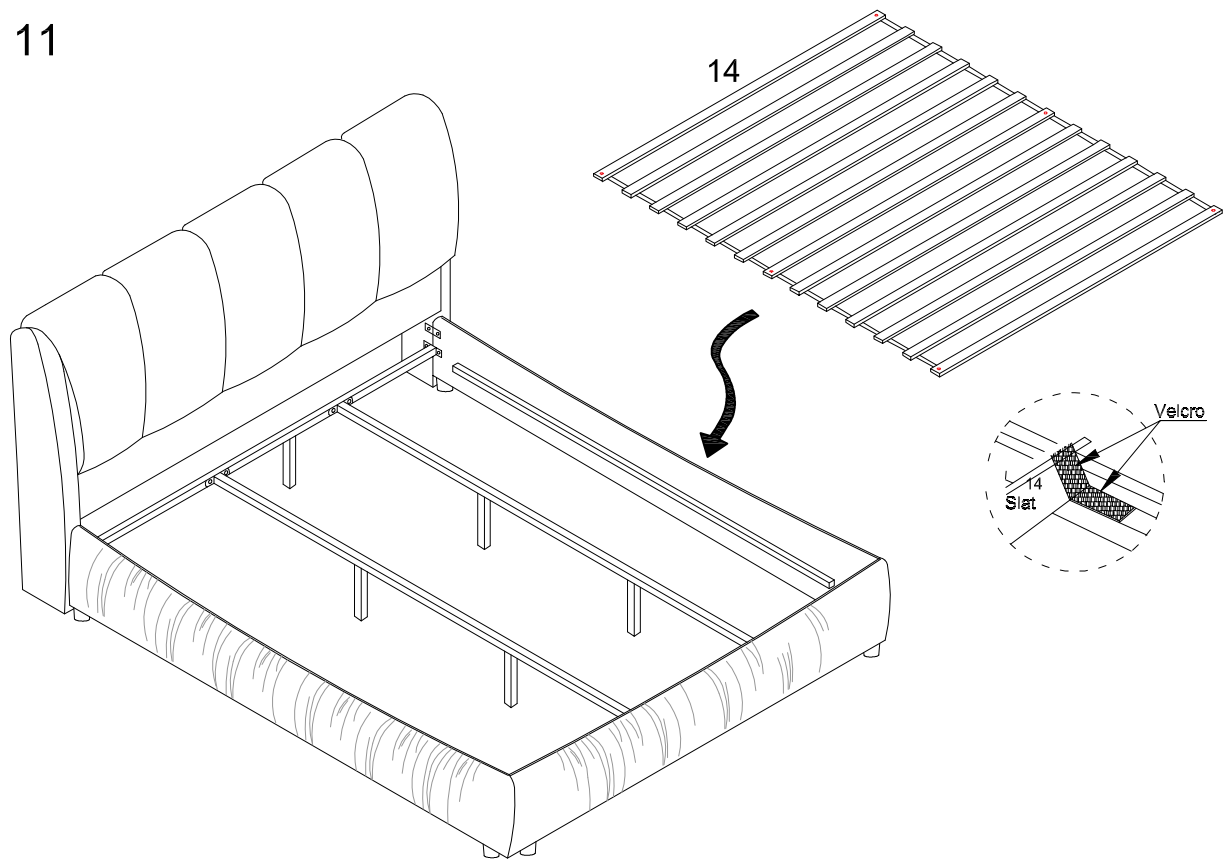

## STEP 12

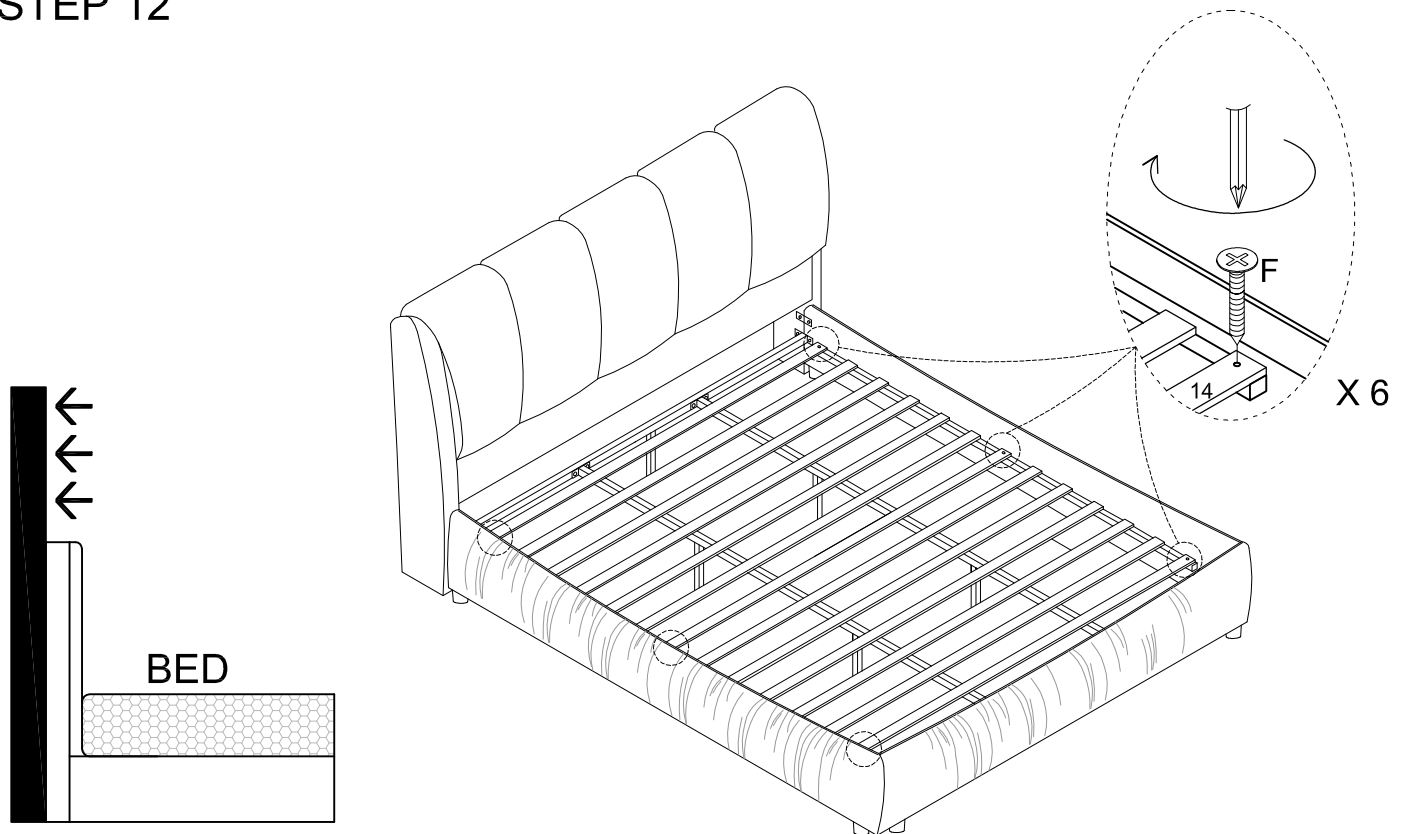

Use Against the Wall