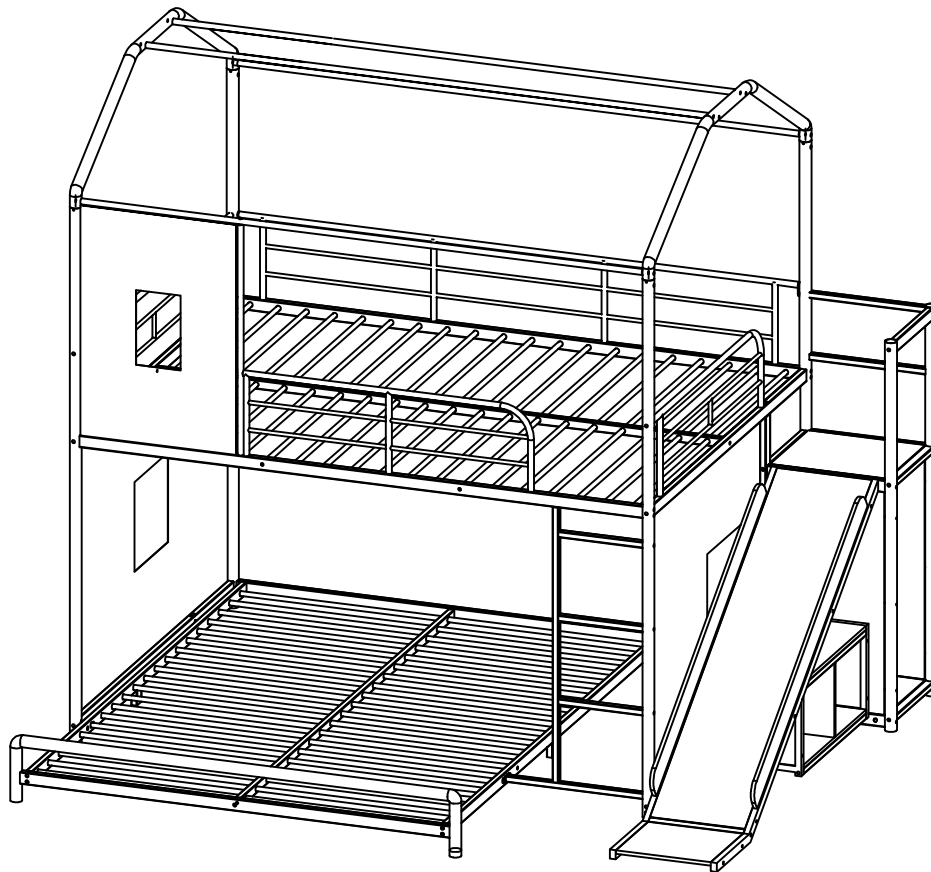


THE BED ASSEMBLY INSTRUCTIONS



SAFETY WARNINGS AND GENERAL NOTES:

1. Follow the information on the warnings on the bunk bed end structure and on the carton. Do not remove the warning label from the bed.
2. Always use the recommended size mattress on mattress support, or both, to help prevent the likelihood of entrapment or falls.
3. Do not allow children under 6 years of age to use the upper bunk.
4. Periodically check and ensure the guardrail, ladder and other components are in their proper position, free from damage, and all connectors are tight.
5. Do not allow horseplay on or under beds.
6. Always prohibit jumping on the bed.
7. Prohibit more than one person on upper bunk.
8. Always use the ladder for entering and leaving the upper bunk.
9. Do not use substitute parts. Contact the manufacturer or dealer for replacement parts.
10. Use of a night-tight may provide added safety precaution for a child using the upper bunk.

11. Always use guardrails on both long sides of the upper bunk.
12. If the bunk bed will be placed next to a wall, the guardrail that runs the full length of the bed should be placed against the wall to prevent entrapment between the bed and the wall.

The use of water or sleep flotation mattresses is prohibited.

13. **STRANGULATION HAZARD**-Never attach or hang items to any part of the bunk bed that are not designed for use with the bed; for example, but not limited to, hooks, belts and jump ropes.

14. Keep these instructions for future reference.

15. We recommend assembling your bunk bed on the shipping carton to protect your floor or carpet.

16. Be certain all staples are out of the box before beginning assembly on the shipping carton.

17. **USE ONLY MATTRESSES WHICH ARE AS THE TABLE BELOW ON UPPER AND ON LOWER BUNKS.**

Down bed

Mattress type	Length	Width	Thickness
FULL Standard	74"-75"	53-54"	8"

Up bed (bunk bed and tribed included)


Mattress type	Length	Width	Thickness
TWIN Standard	74"-75"	38-39"	6"Max

18. **SURFACE OF MATTRESS MUST BE AT LEAST 5"(127MM) BELOW THE UPPER EDGE OF GUARDRAILS.**





















19. Replacement Parts:

Replacement Parts, including additional guardrails, may be obtained from any of our (Shenzhen Yuefeng Zhiqi Technology Co., Ltd) dealers.

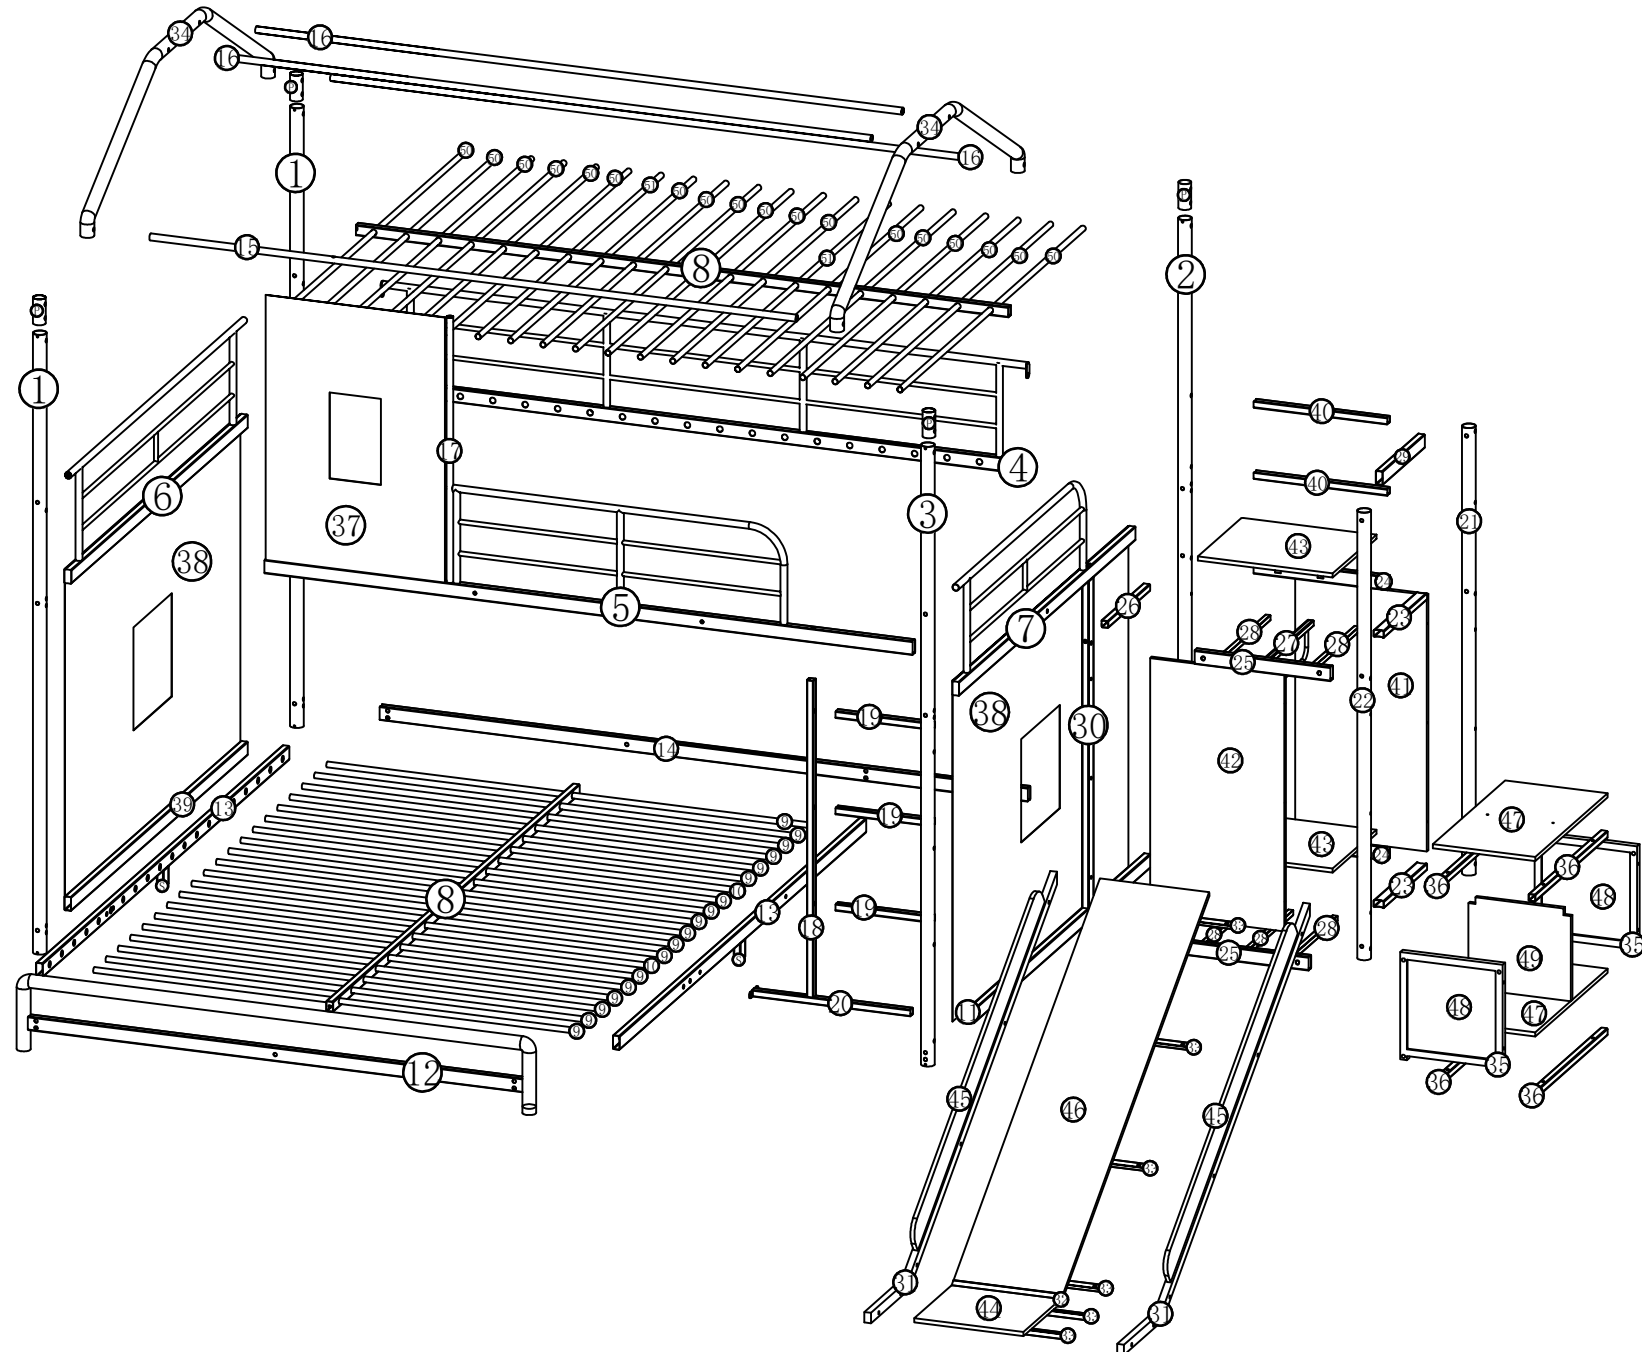Bed parts view



















Part List

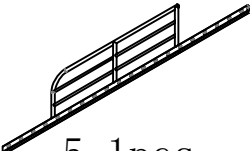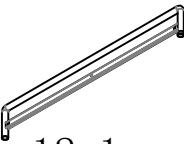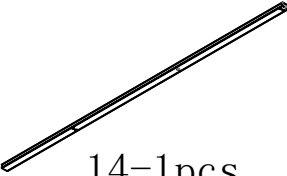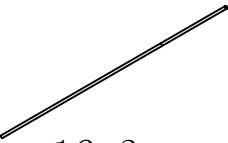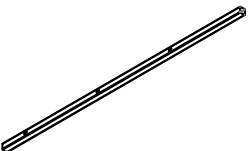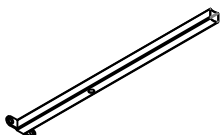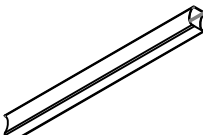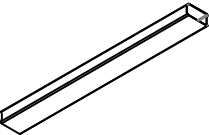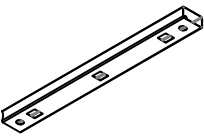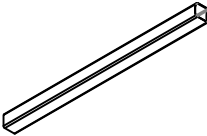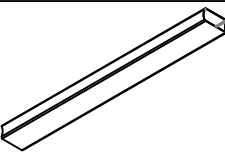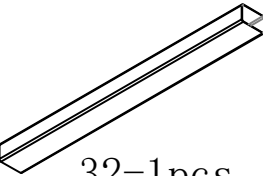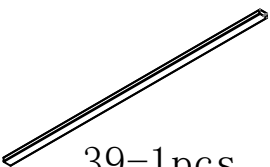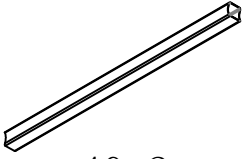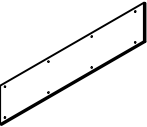					
1-2pcs	2-1pcs	3-1pcs	4-1pcs	5-1pcs	8-2pcs
					
9-18pcs	10-2pcs	12-1pcs	13-2pcs	14-1pcs	15-1pcs
					
16-3pcs	18-1pcs	19-3pcs	20-1pcs	23-2pcs	24-2pcs
					
25-2pcs	26-1pcs	29-1pcs	31-2pcs	32-1pcs	33-6pcs
					
36-4pcs	39-1pcs	40-2pcs	44-1pcs	46-1pcs	

H000138-1

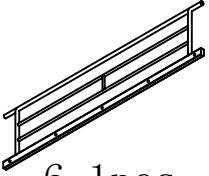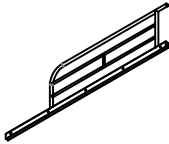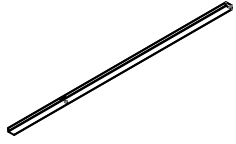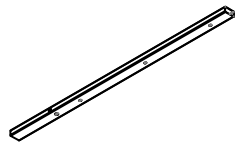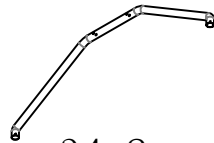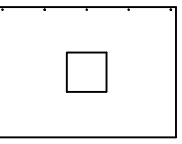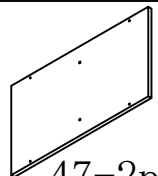Part List



 6-1pcs	 7-1pcs	 11-1pcs	 17-1pcs	 21-1pcs	 22-1pcs
 27-1pcs	 28-5pcs	 30-1pcs	 34-2pcs	 35-2pcs	 37-1pcs
 38-2pcs	 41-1pcs	 42-1pcs	 43-2pcs	 45-2pcs	 47-2pcs
 48-2pcs	 49-1pcs	 50-18pcs	 51-2pcs	H000138-2	

Hardware List

 O M6*10 8PCS	 B 8*15 2PCS	 C 8*35 35PCS	 D 8*55 62PCS	 E 6*25 20PCS	 F 8*18 7PCS	 H M4*50 21PCS	 G M4*35 15PCS	 R M4*25 8PCS
 Z*6	 W 12PCS	 V 6*35 12PCS	 Q--1PCS	 L=4MM L=5MM	 M 1PCS	 K 8*30 4PCS	 S 3PCS	 P 4PCS


Step 1

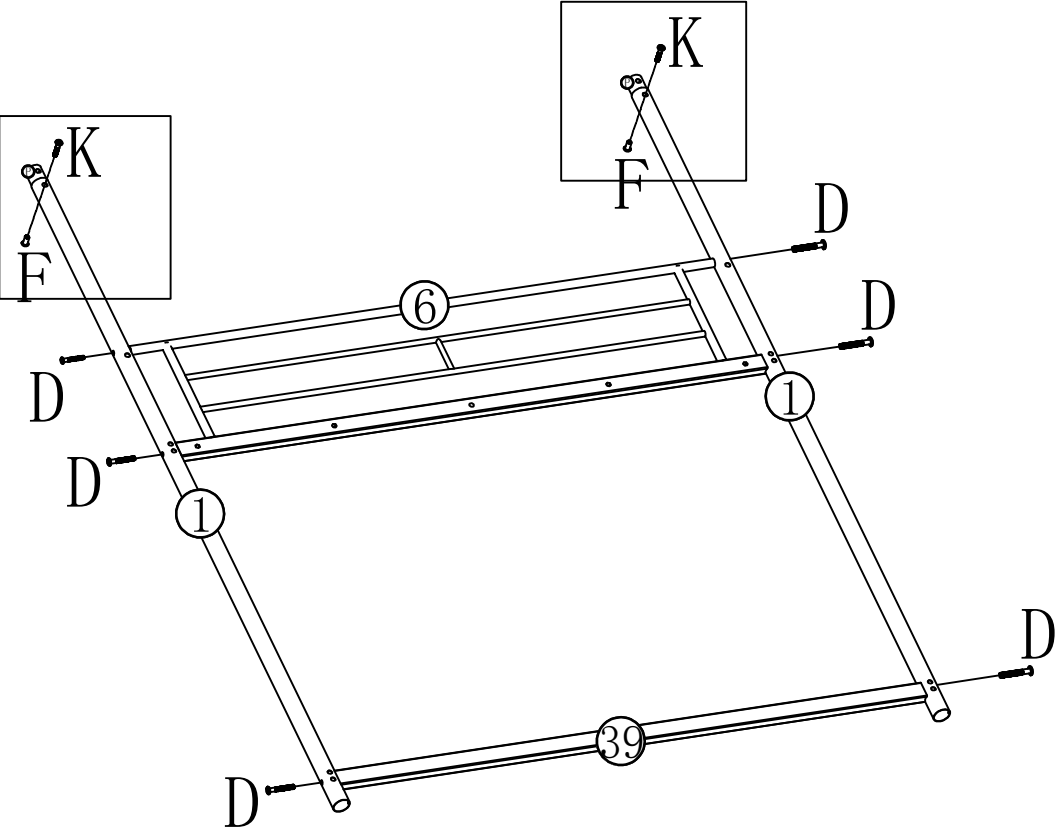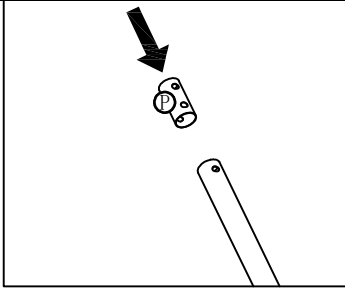Insert part P into part 1 and align the holes.



Step 2

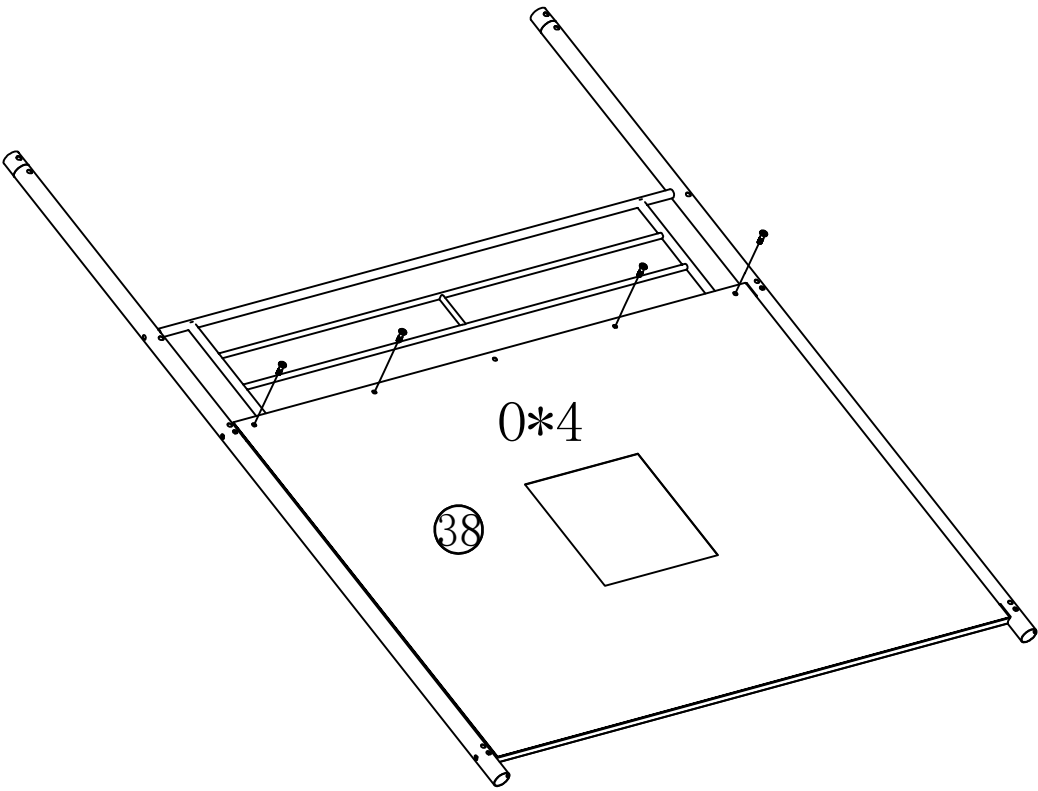Unfold Part 38, align the holes and fix with screws.





K 8*30-2PCS	F 8*18-2PCS	D 8*55-6PCS	L

0 6*10-4PCS	L


Step 3

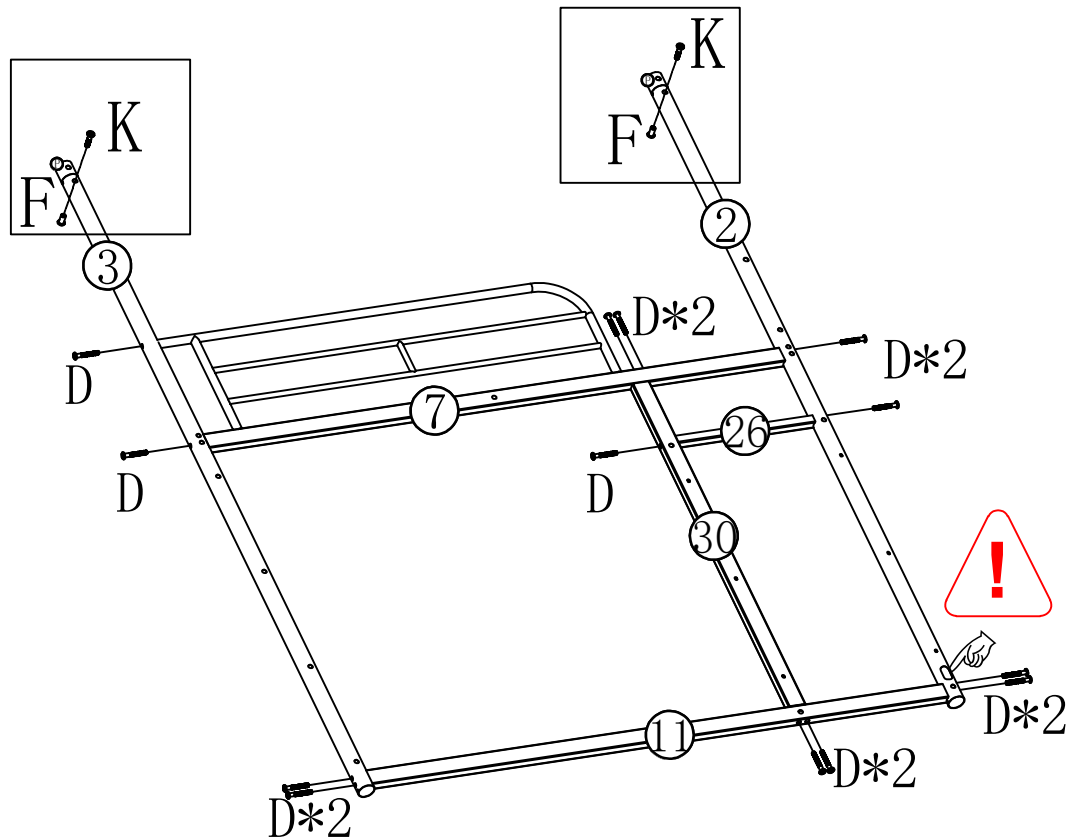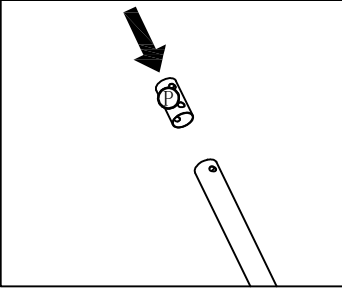Insert part P into Part 1 and Part 2, align the hole positions.



Step 4

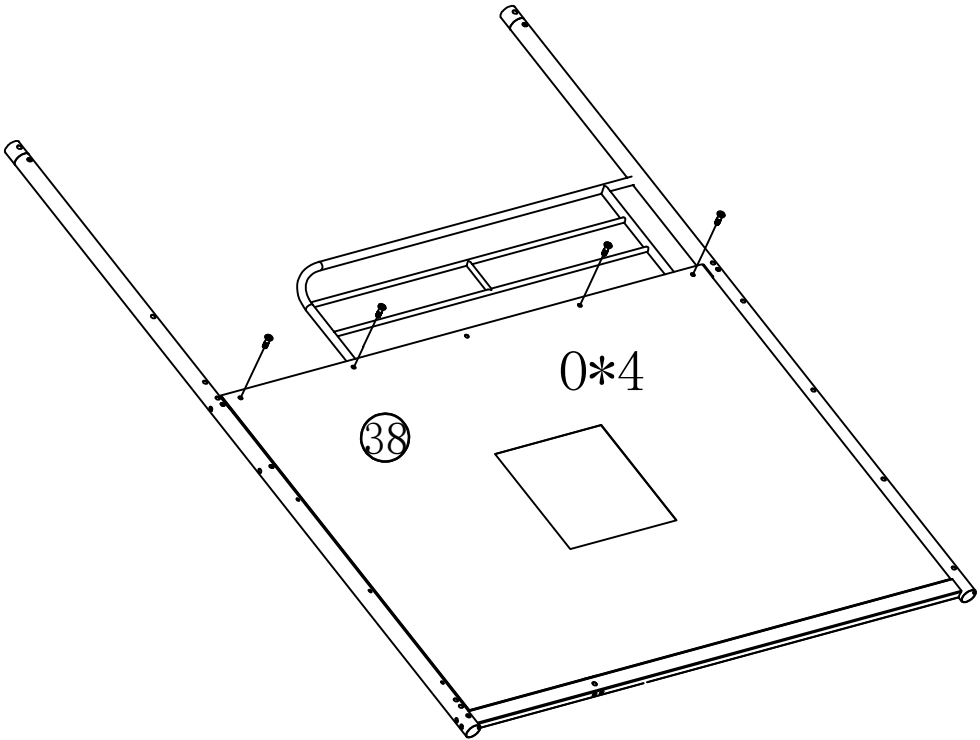Unfold Part 38, align the holes and fix with screws.



K
8*30-2PCS



F
8*18-2PCS



D
8*55-13PCS



L

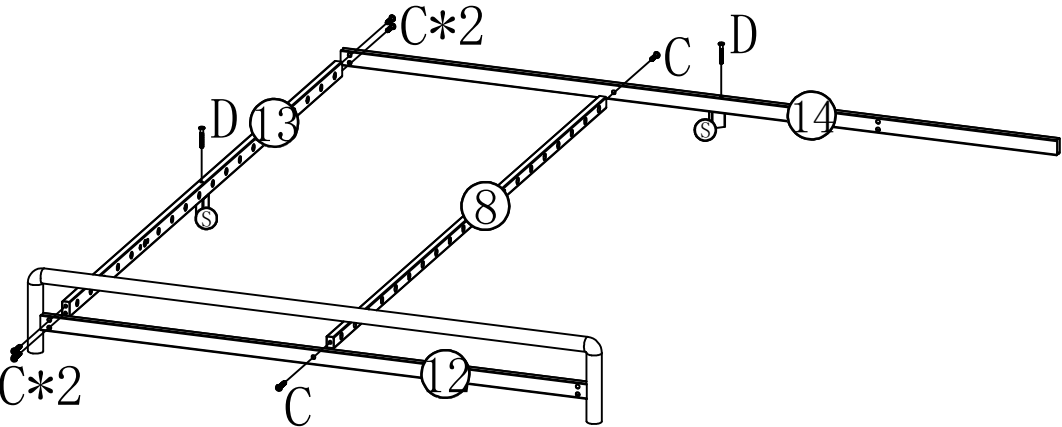


0
6*10-4PCS



L

Step 5



C
8*35-6PCS

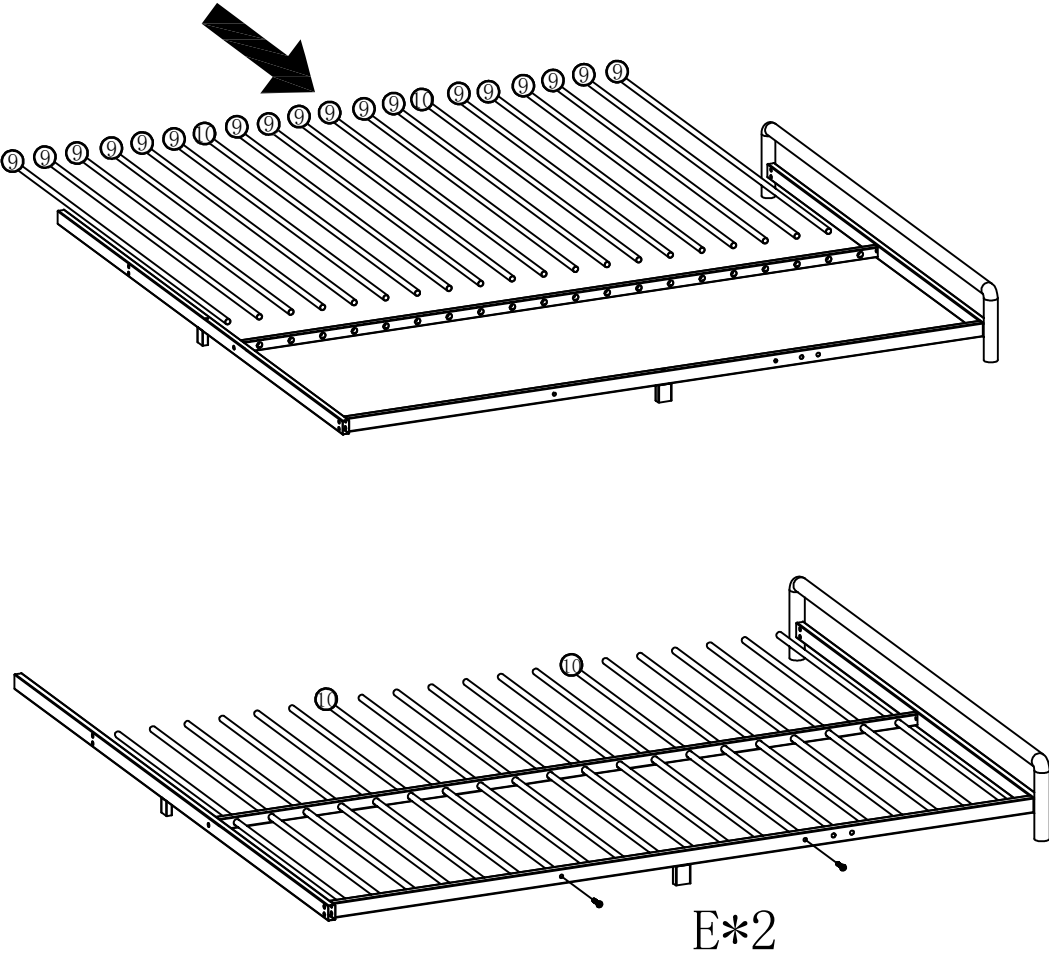


D
8*55-2PCS



L

Step 6




E
6*25-2PCS



L

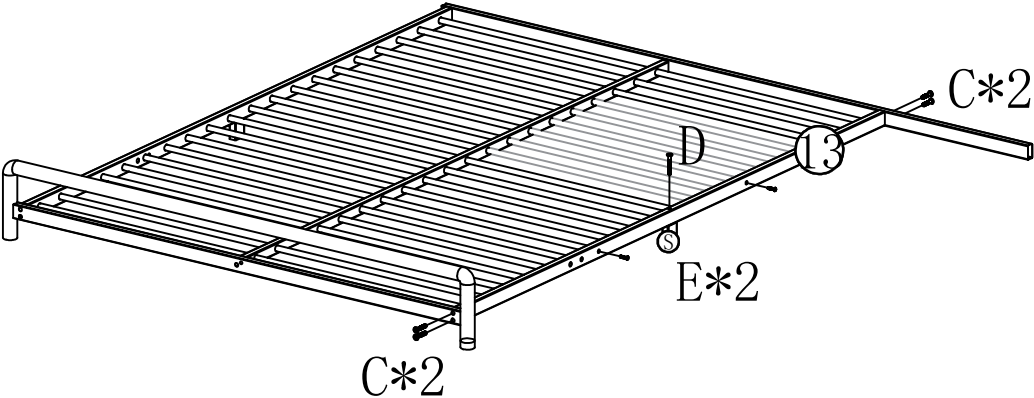Step 7




C
8*35-4PCS

E
6*25-2PCS

D
8*55-1PCS

L

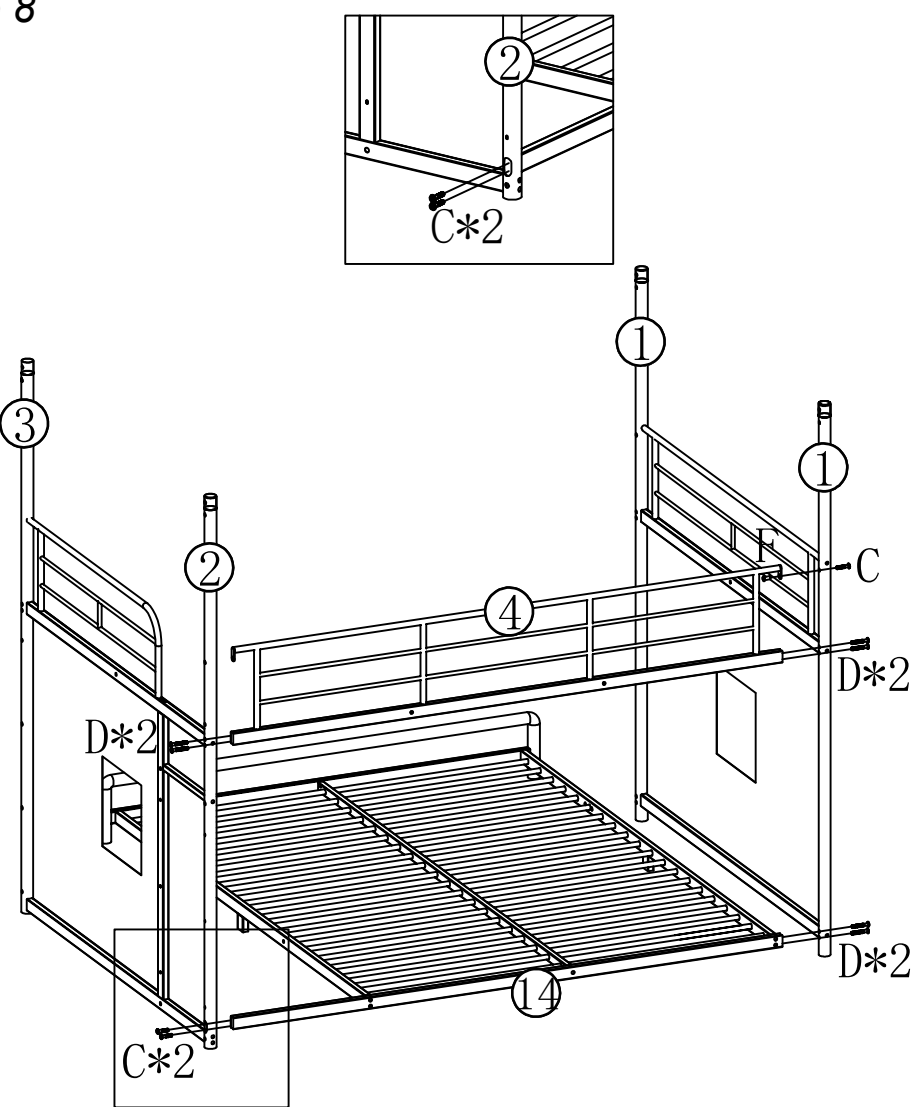Step 8




C
8*35-3PCS

F
8*18-1PCS

D
8*55-6PCS

L

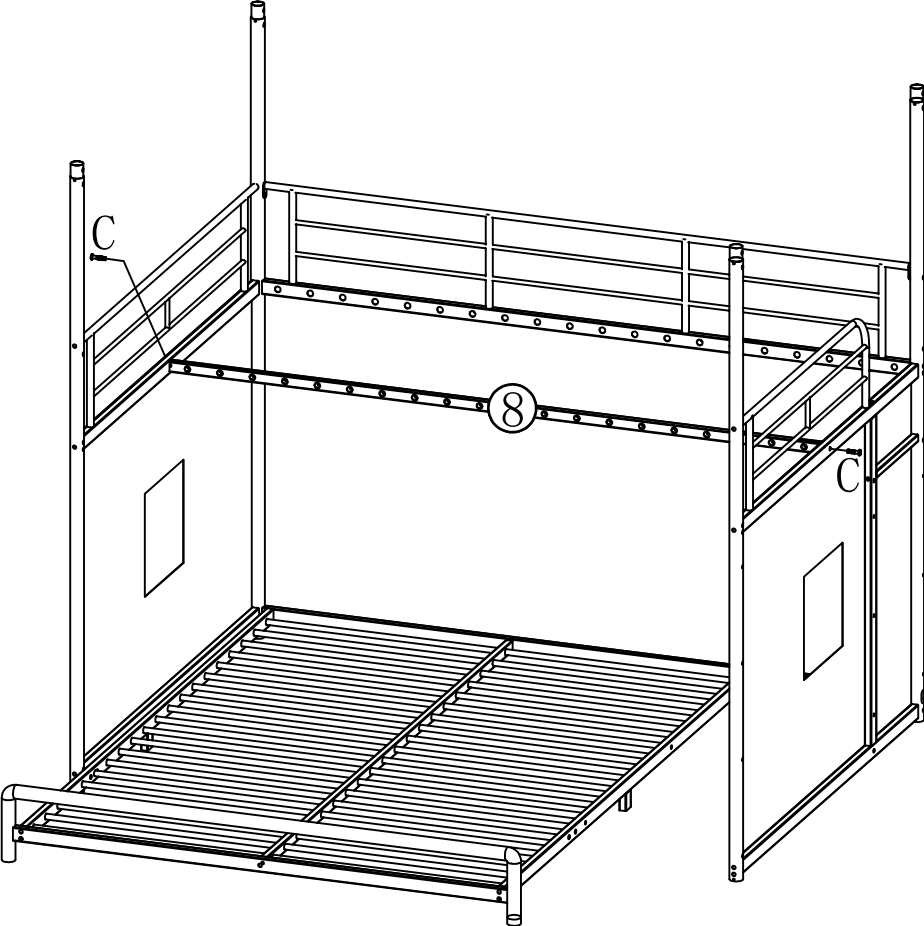Step 9




C
8*35-2PCS



L

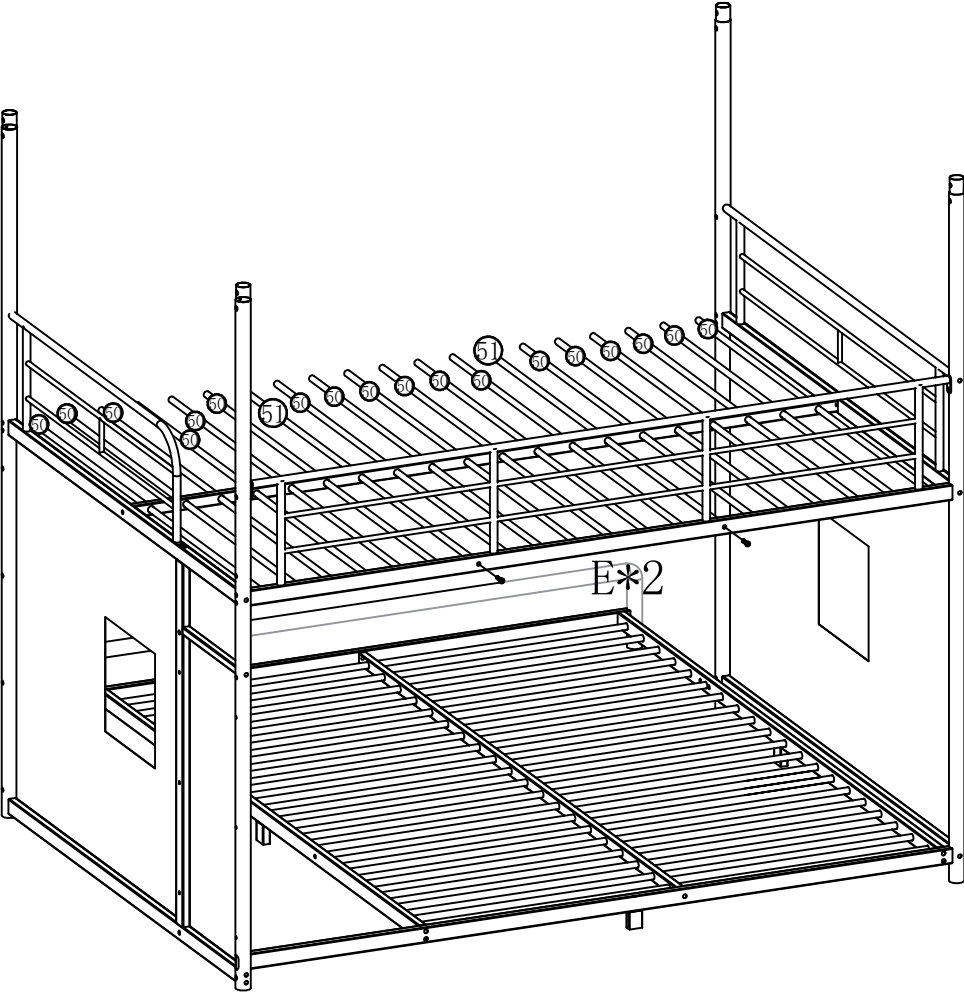Step 10





E
6*25-2PCS



L

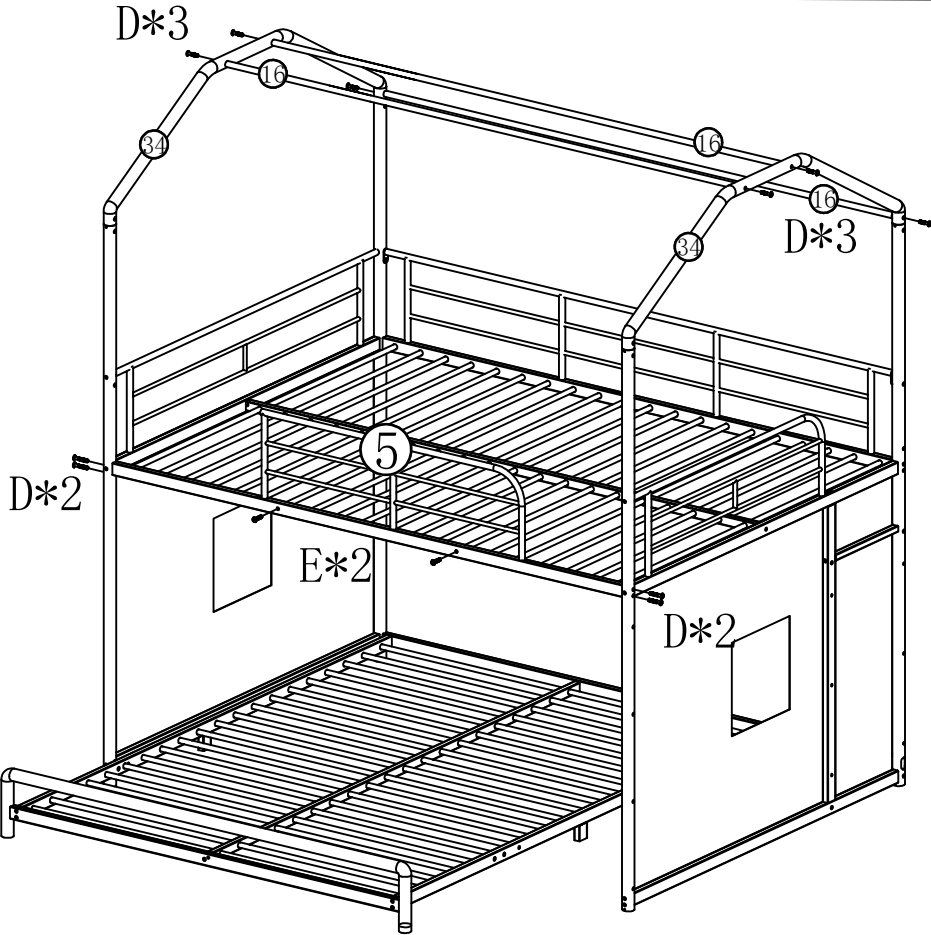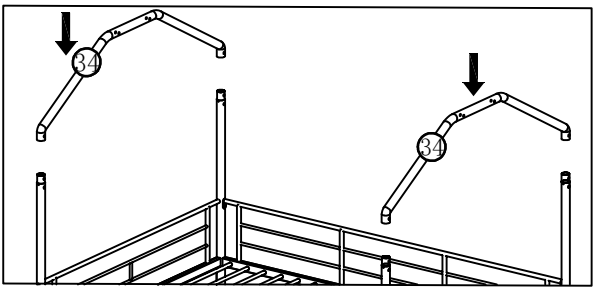Step 11






E
6*25-2PCS


D
8*55-10PCS


L

Step 12

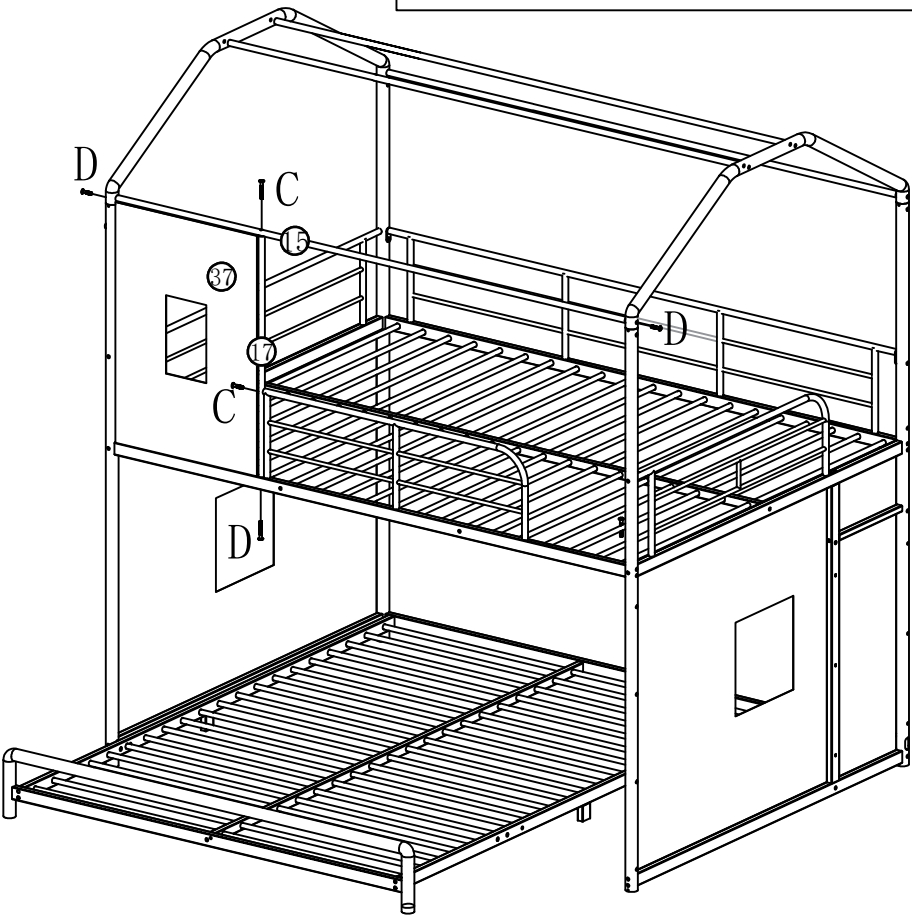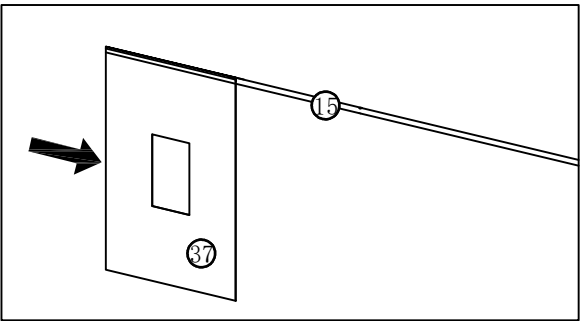Unfold Part 37 and thread it through Part 15.






C
8*35-2PCS




D
8*55-3PCS


L

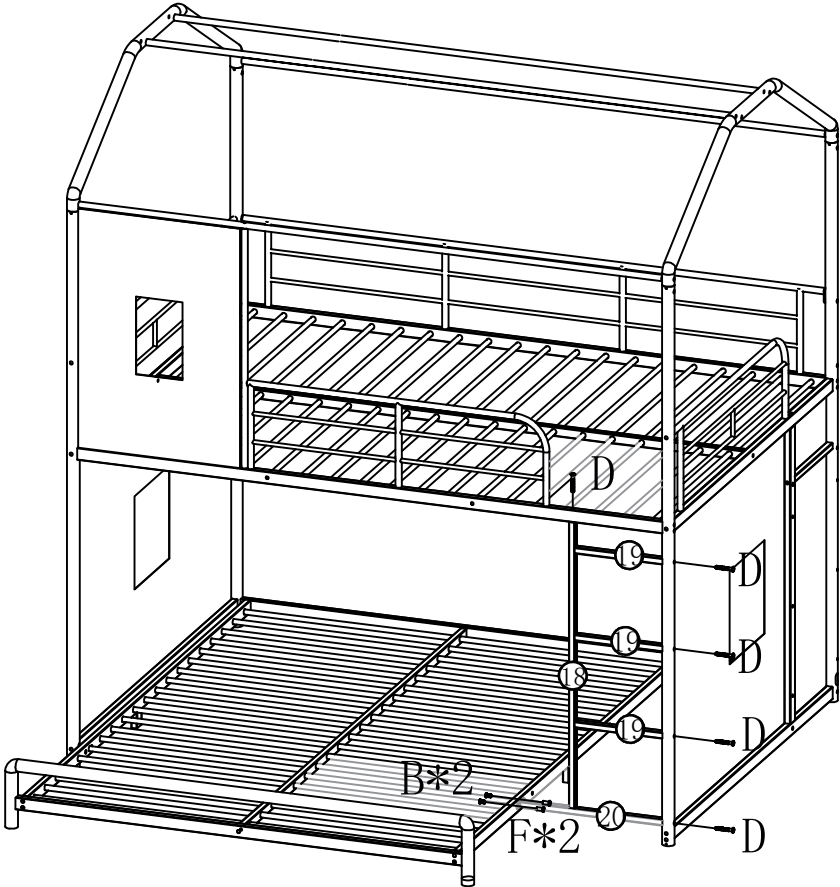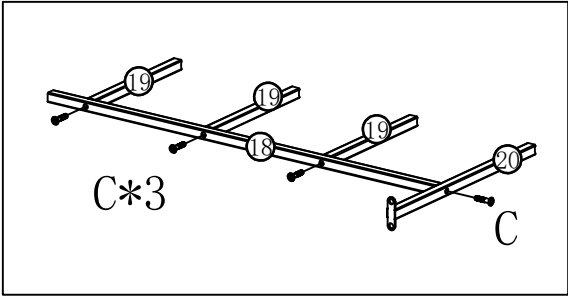Step13



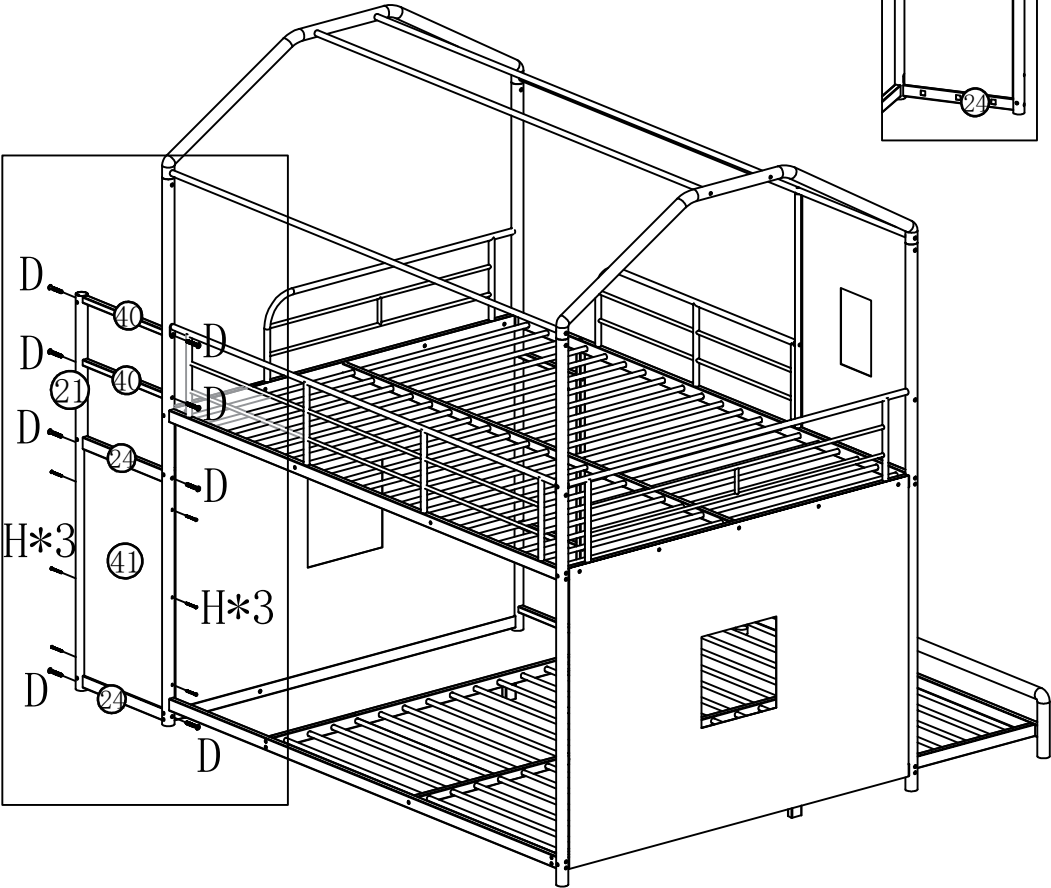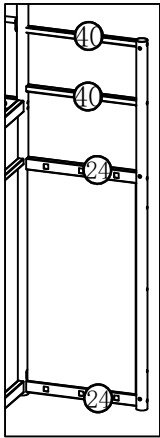Step 14



C
8*35-4PCS



F
8*18-2PCS



B
8*15-2PCS



D
8*55-5PCS




L



D
8*55-8PCS



H
4*50-6PCS




M



L


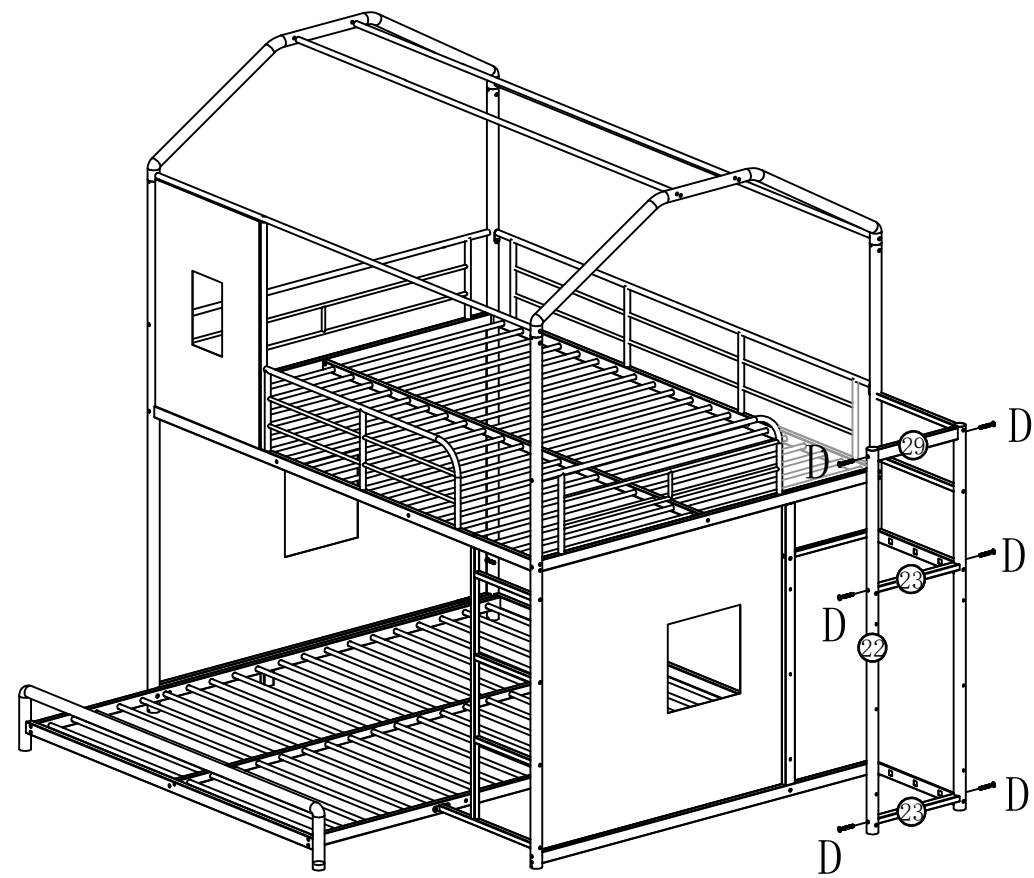
Step 15




D
8*55-6PCS


L

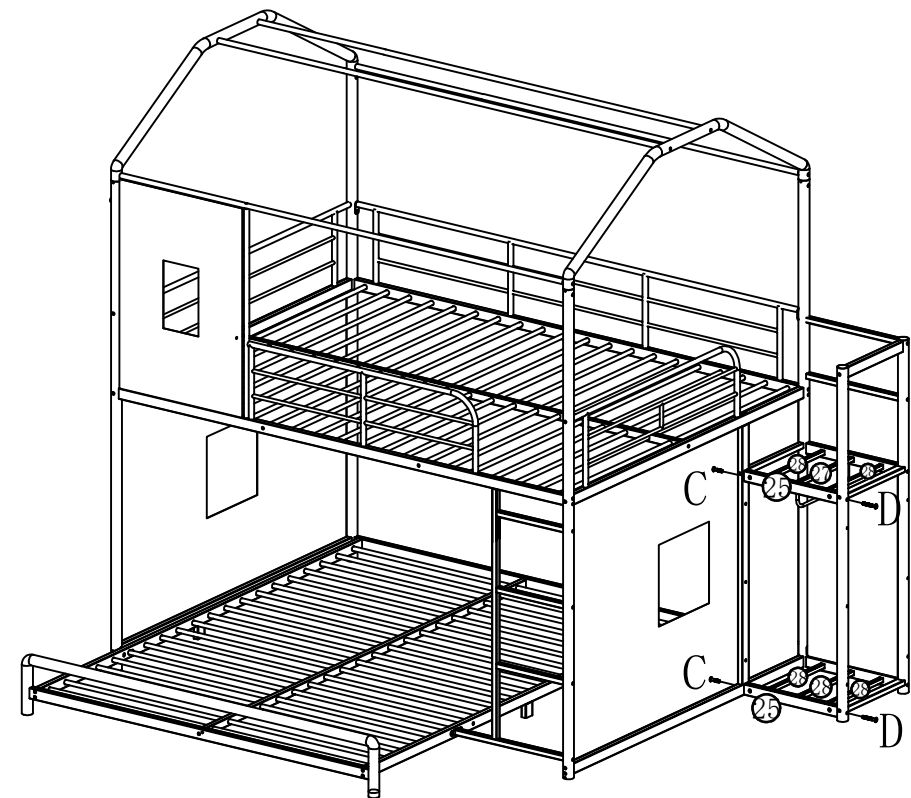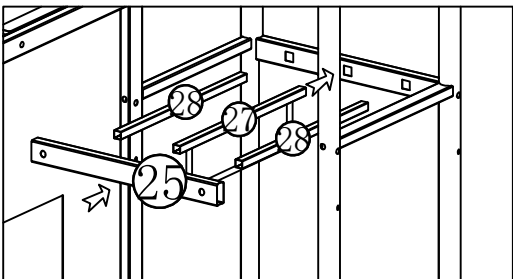Step 16





C
8*35-2PCS


D
8*55-2PCS


L

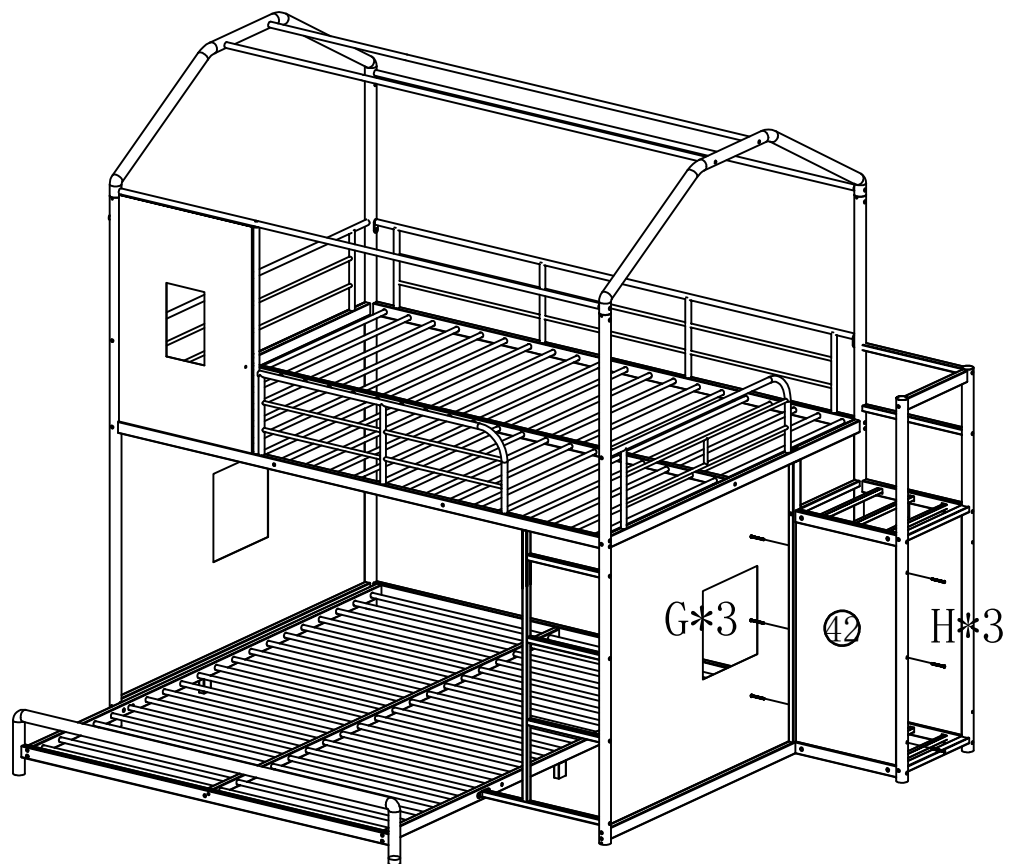Step 17



G
4*35-3PCS

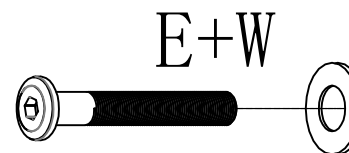


H
4*50-3PCS




M

Step 18



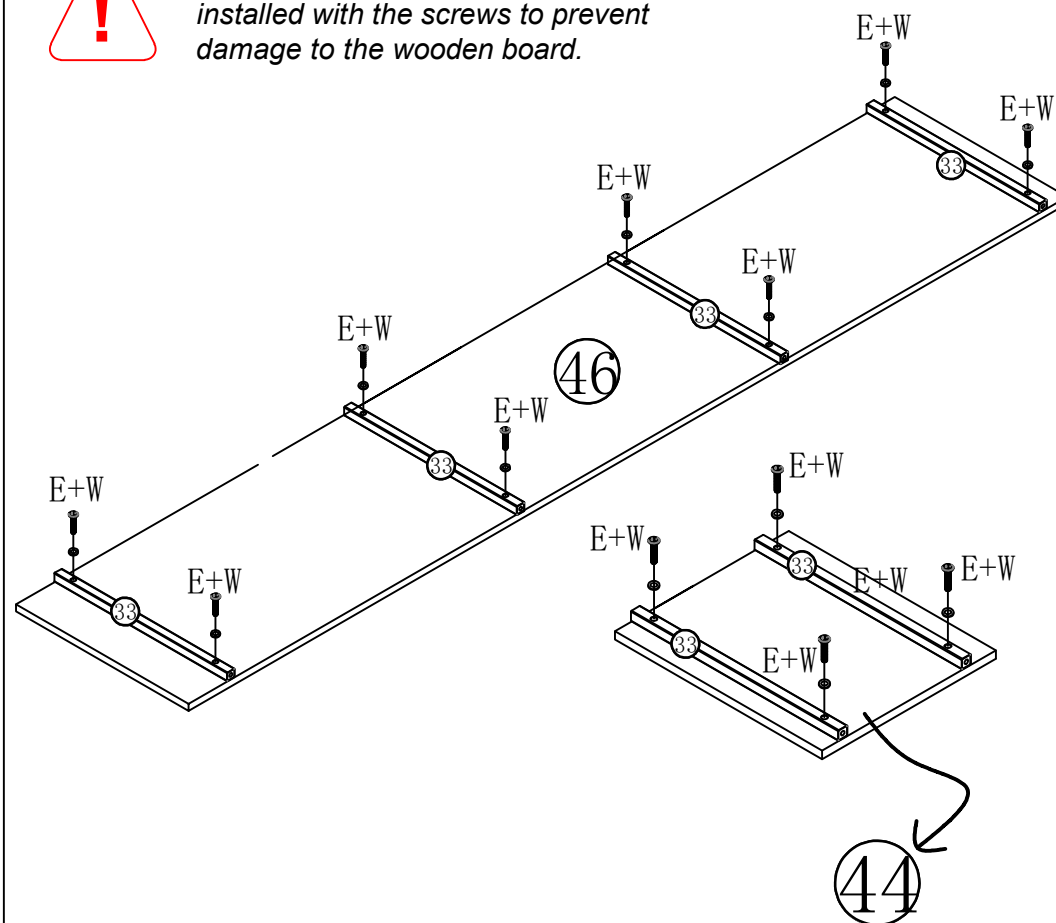In this step, washers must be installed with the screws to prevent damage to the wooden board.



E
6*25-12PCS

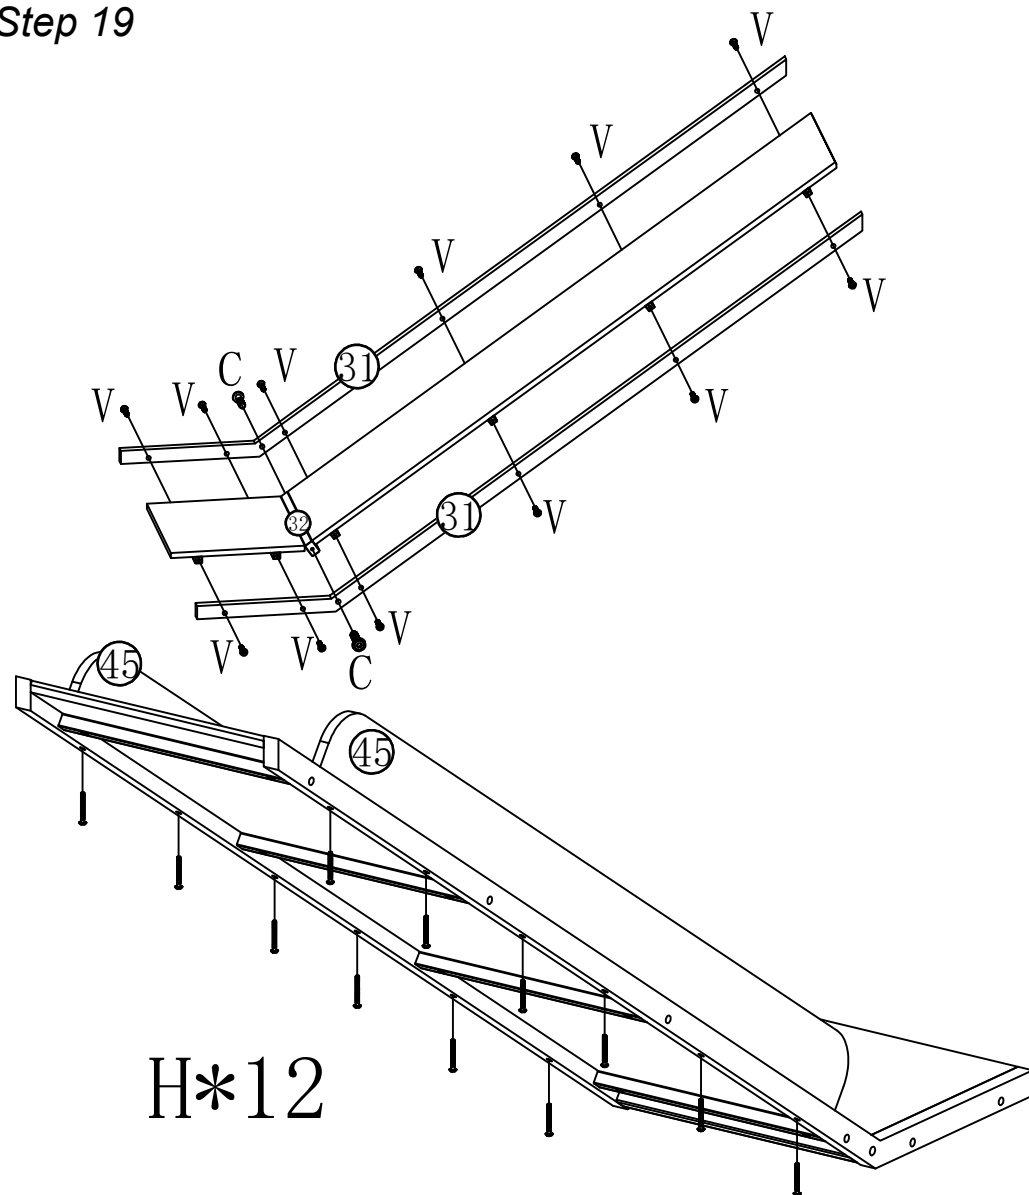


W
6*3-12PCS



L

Step 19



H
4*50-12PCS



C
8*35-2PCS



V
6*35-12PCS

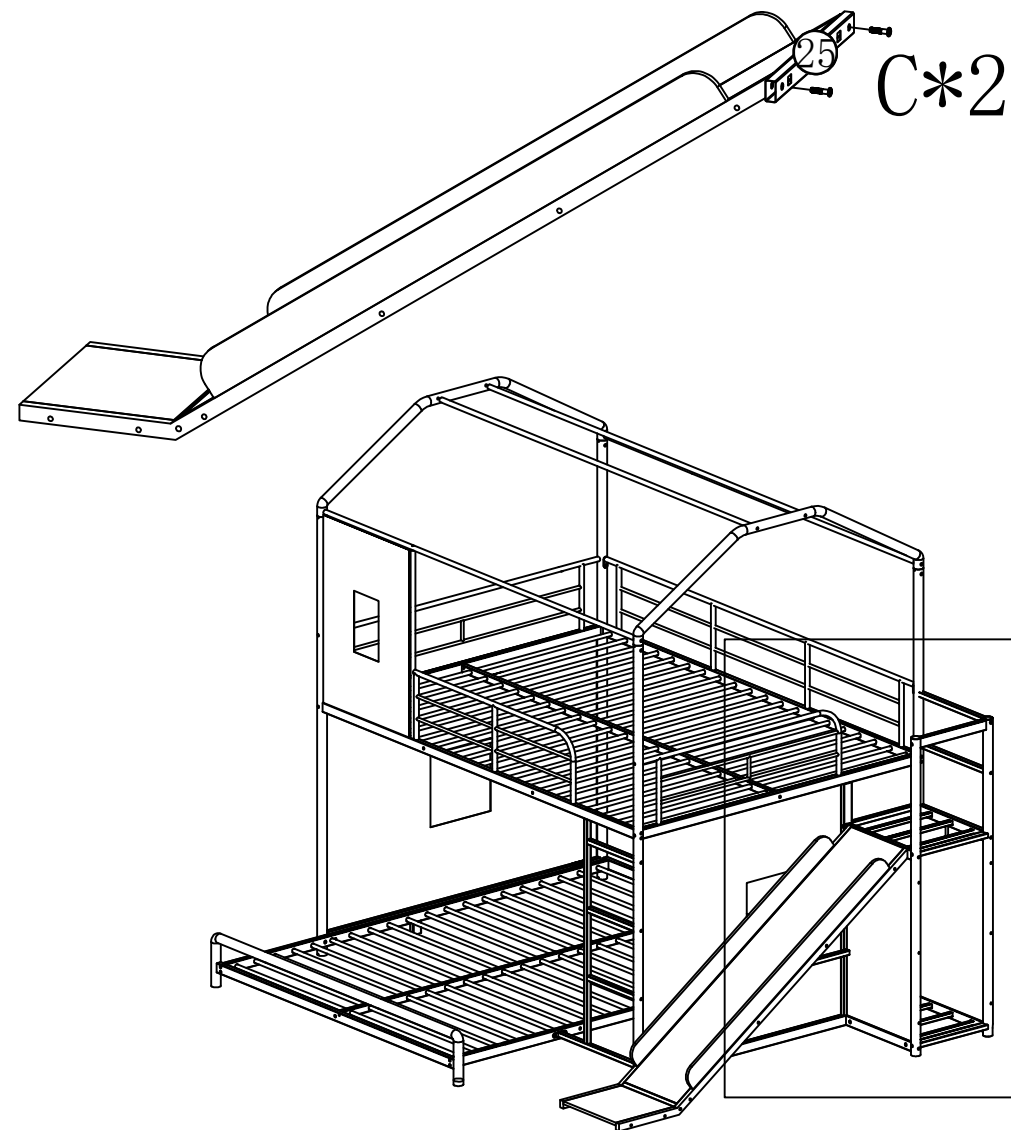


M



L

Step 20




C
8*35-2PCS




L

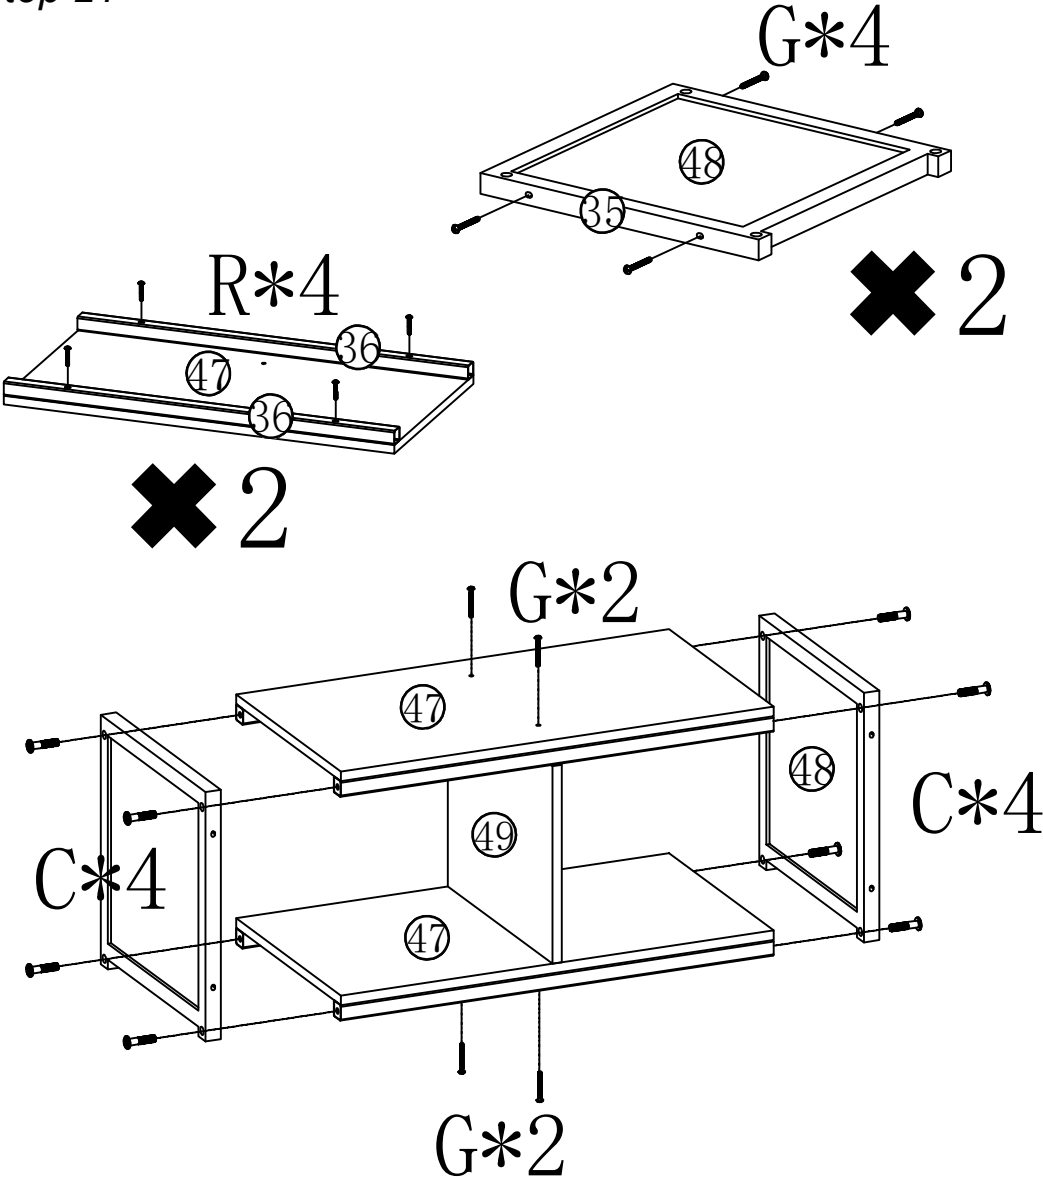Step 21



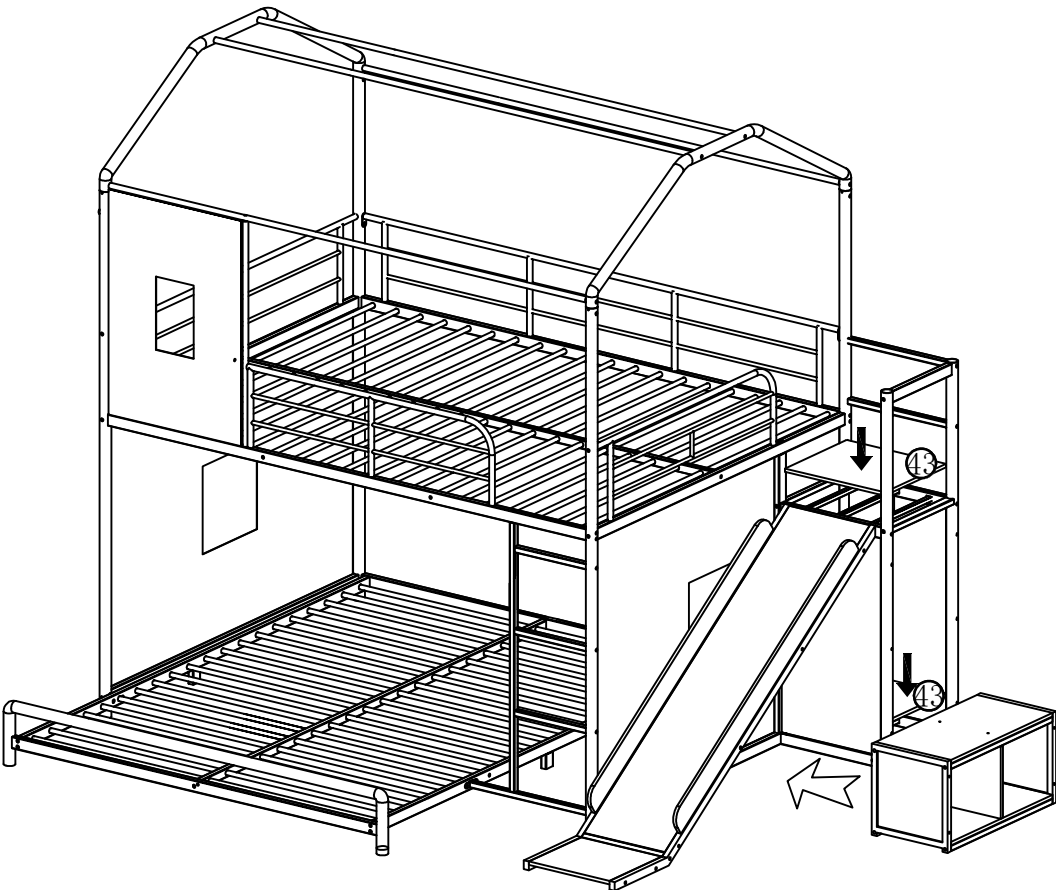Step 22



R
4*25-8PCS



G
4*35-12PCS



C
8*35-8PCS



L

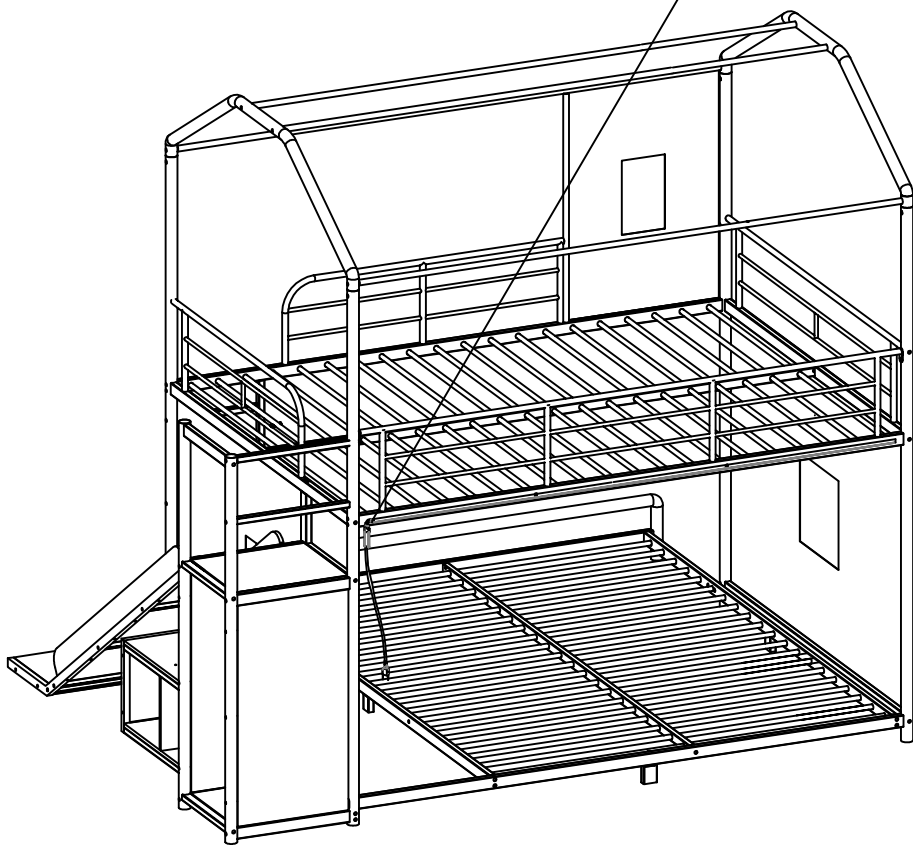


M

Step 23




First, peel off the adhesive backing of part Q, then install Q onto the back of part 4 as shown in the diagram



Q--1PCS

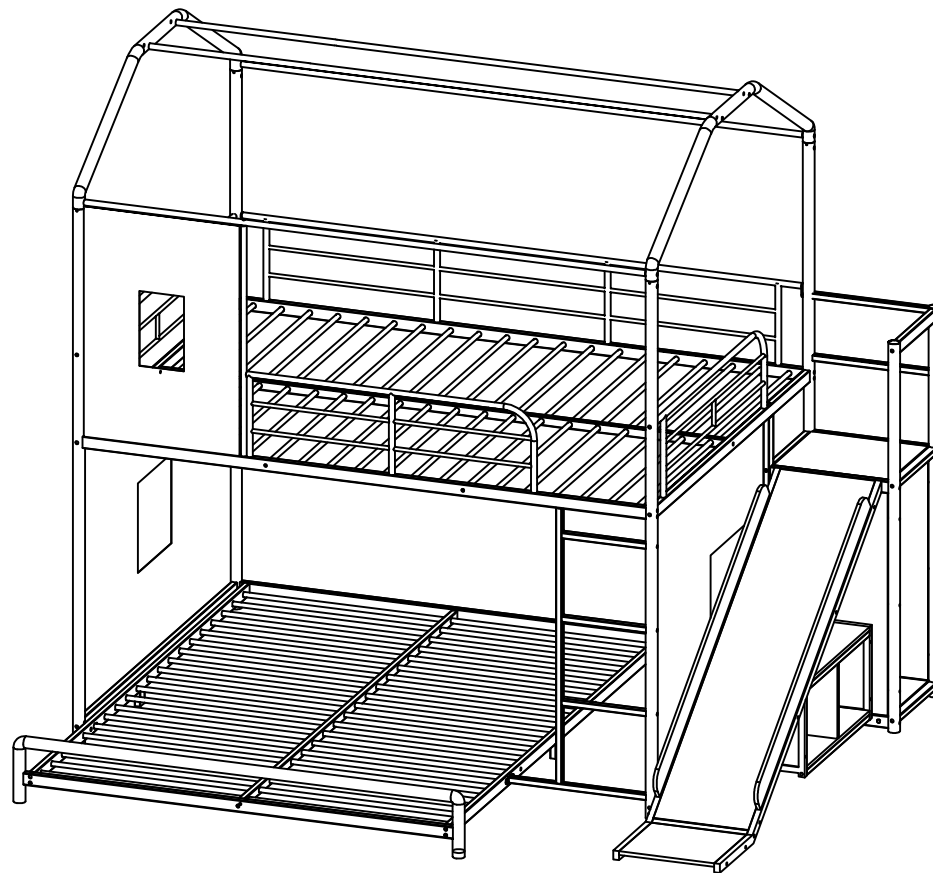Completed



Attention

Please tighten all screws before use,thank you.