


BATHROOM MEDICINE CABINET

INSTALLATION MANUAL

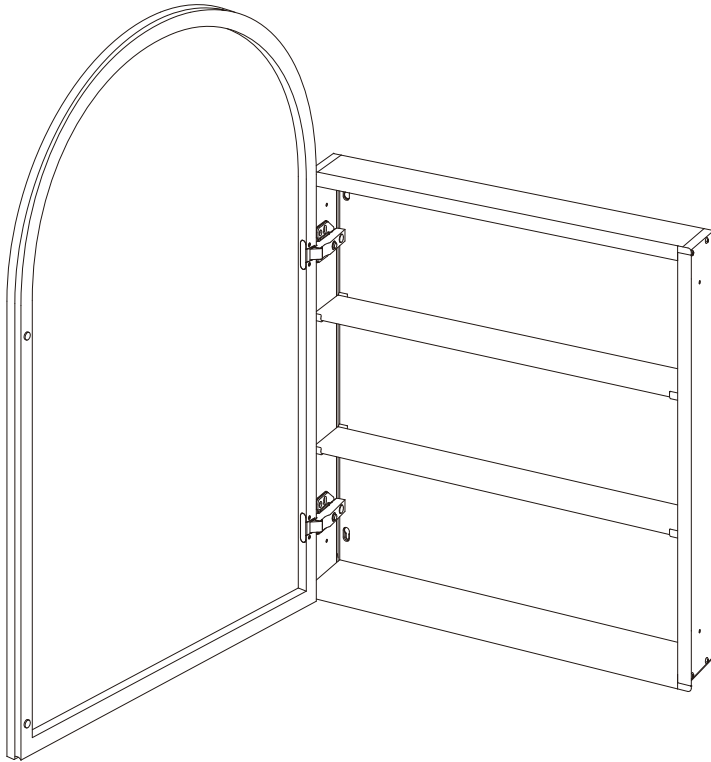

Scan the QR code to
watch the installation video

CONTACT US

Thank you for shopping with us! We hope that our products have added a touch of brightness to your life. If you need any assistance, please don't hesitate to reach out. Our dedicated team is available 24/7 to ensure your satisfaction.



MC@ZRSupport.com




1-888-204-3326




ZRSupport

PACKING LIST


Please ensure that you have received all parts and accessories
in the correct specifications and quantities as listed below:

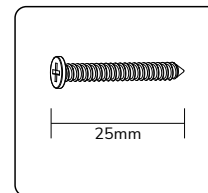


①×8

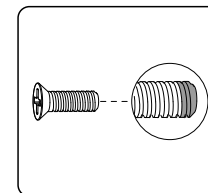


②×4

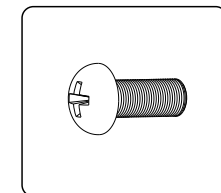


③×4

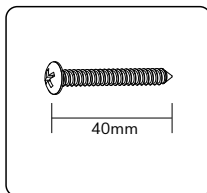


④×4

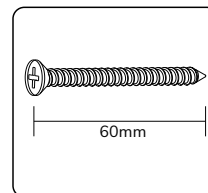


⑤×4

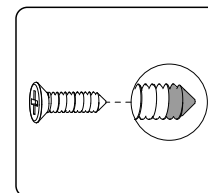

⑥×4

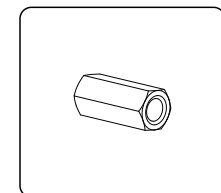


⑦×0

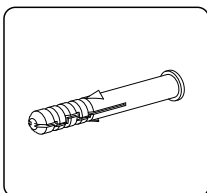


⑧×4


Please ensure that you have received all parts and accessories in the correct specifications and quantities as listed below:

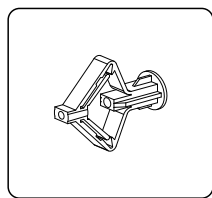


⑨×4

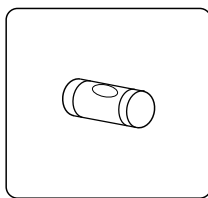


⑩×1

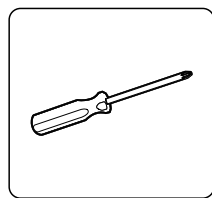


⑪×1

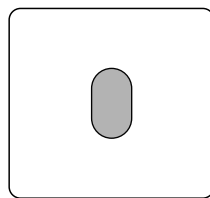


⑫×4

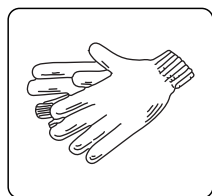


⑬×1

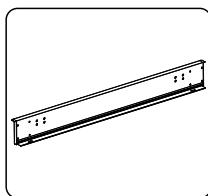


A1×1

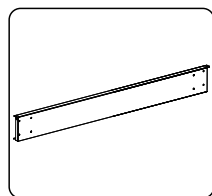


A2×1

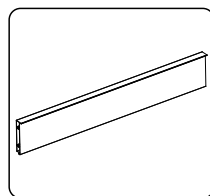


B×2

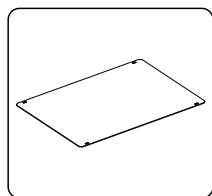


C×1

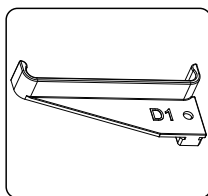


D1×2

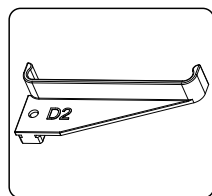


D2×2

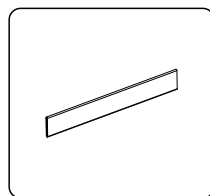


G Height under 32 inches×2
Height above 32 inches×3

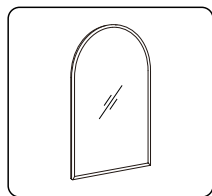

H×1

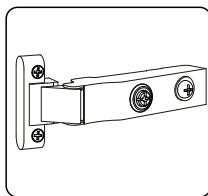

×2

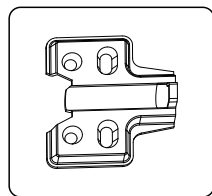

×2

Note: For medicine cabinets taller than 32 inches, an additional piece of

D1 D2 G will be provided for assembly.

INSTALLATION TOOLS




Electric Drill




Hammer



Tape Measure



Level




Marker




Safety Goggles

EXPLODED DIAGRAM

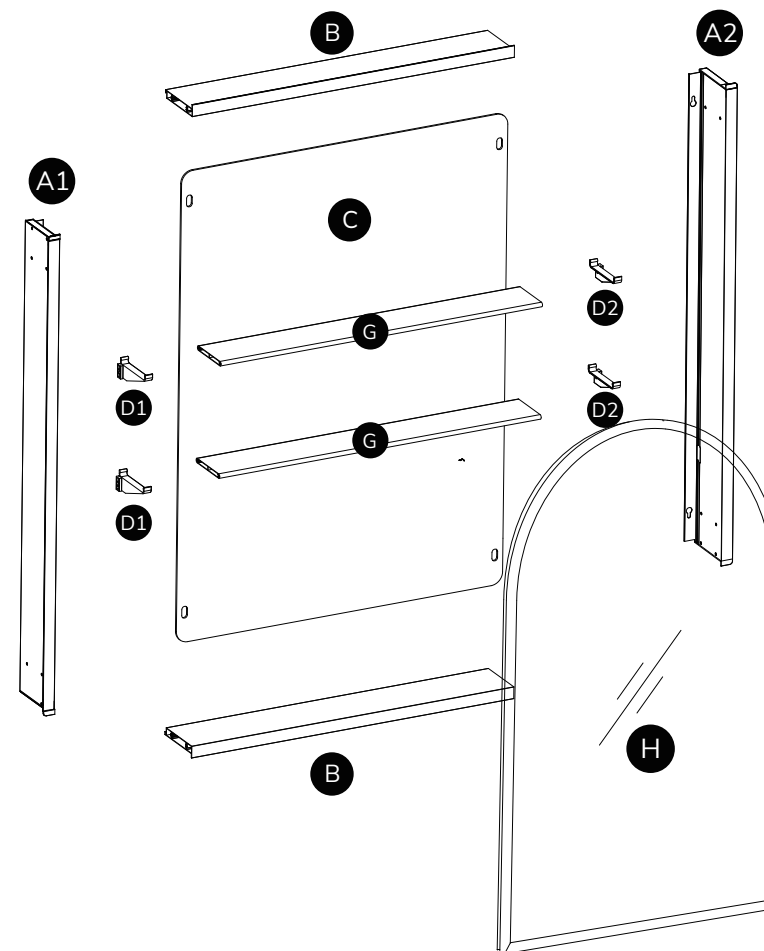


Assembly Instructions

1 Installation preparation

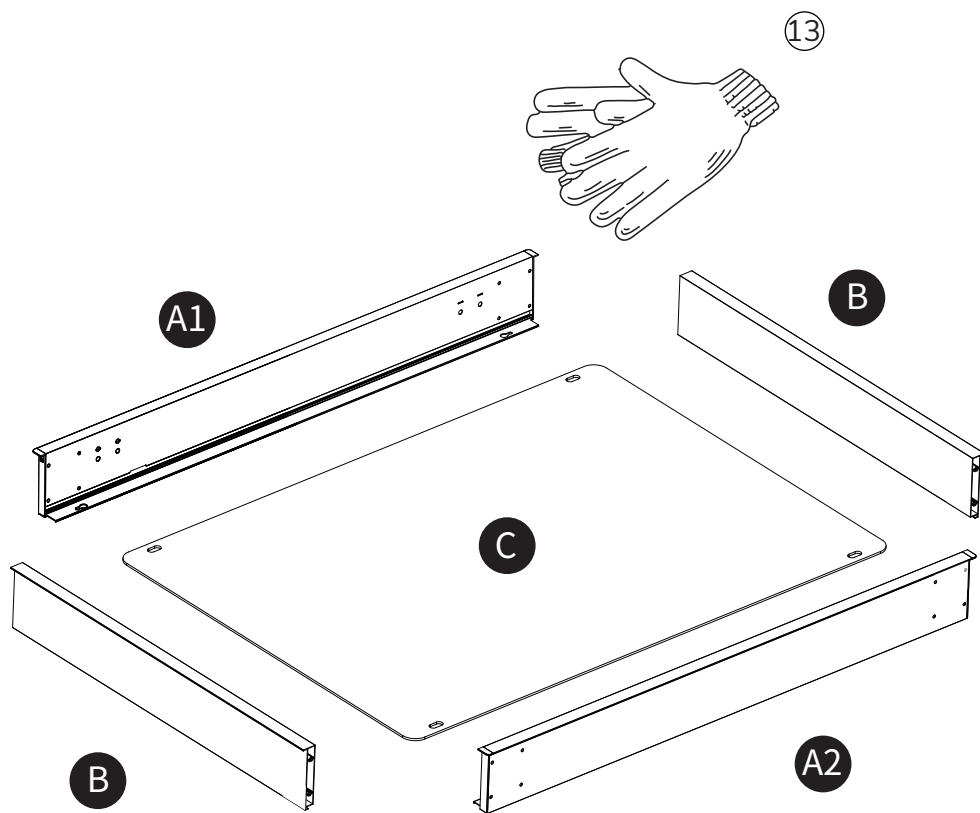


2 Install hinge base

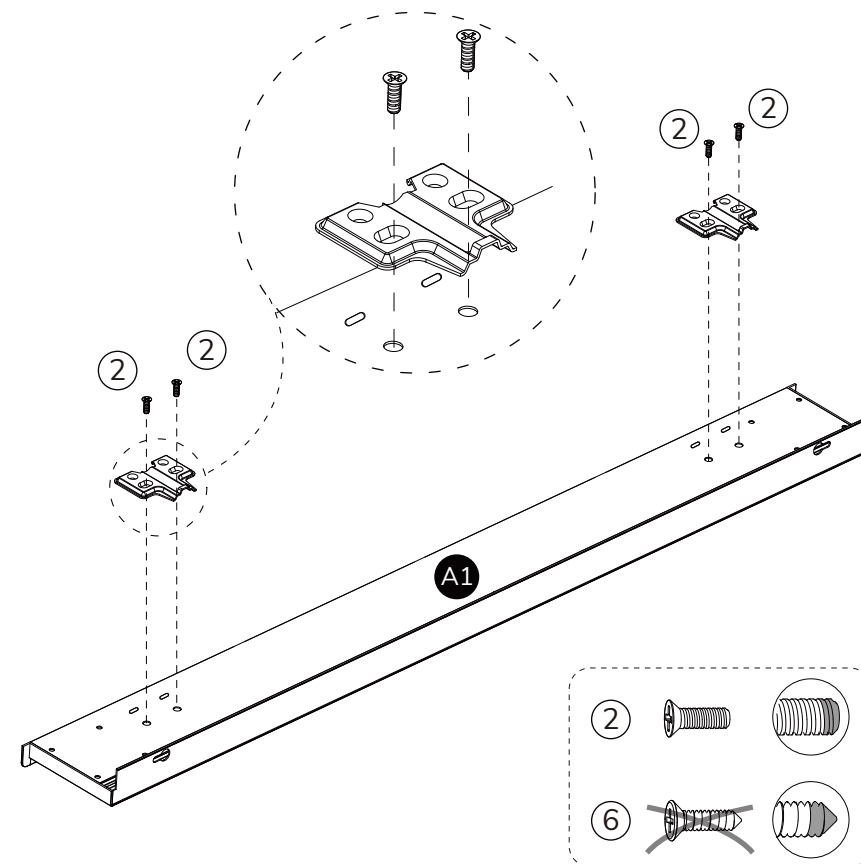


3 Install the top and bottom plate

Step 1

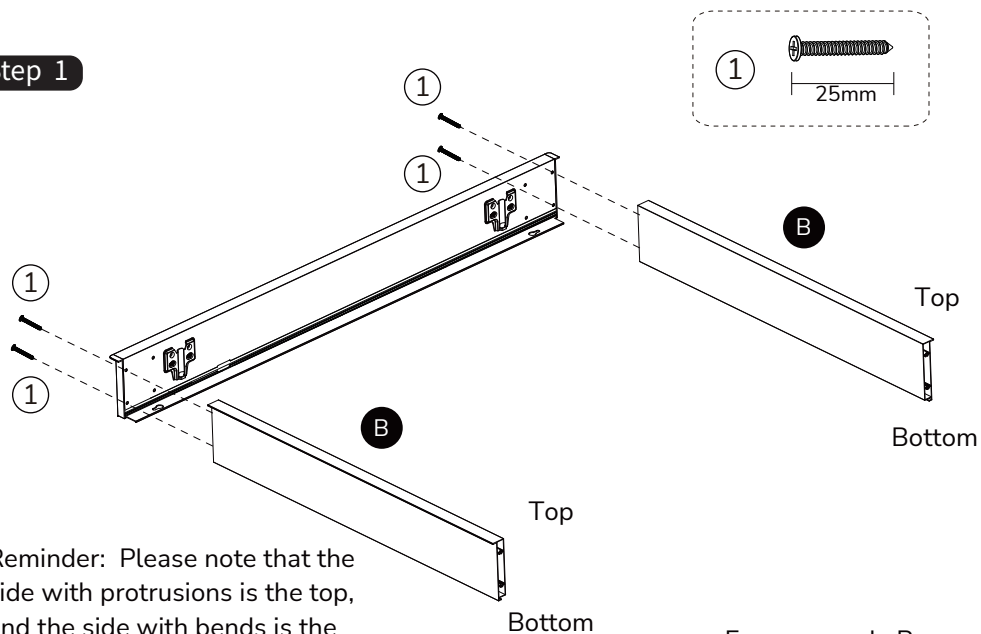


Reminder: Please note that the side with protrusions is the top, and the side with bends is the bottom and ensure that parts A1 and B are seamlessly joined and aligned top.

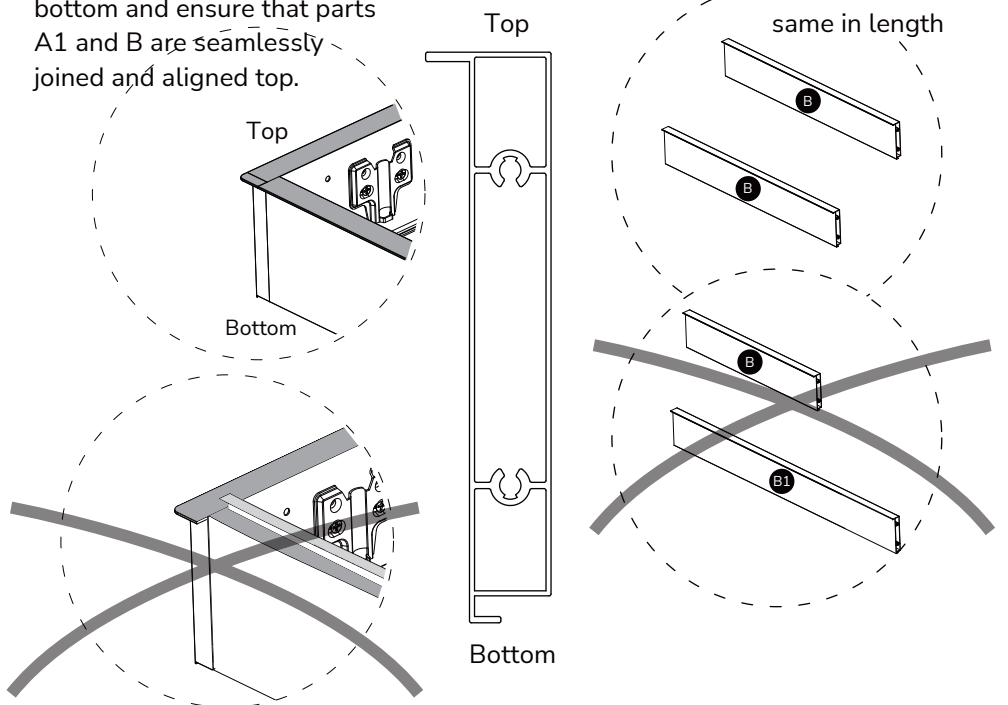


Step 2

Reminder: The labeled side of the rear panel shall be the outside.

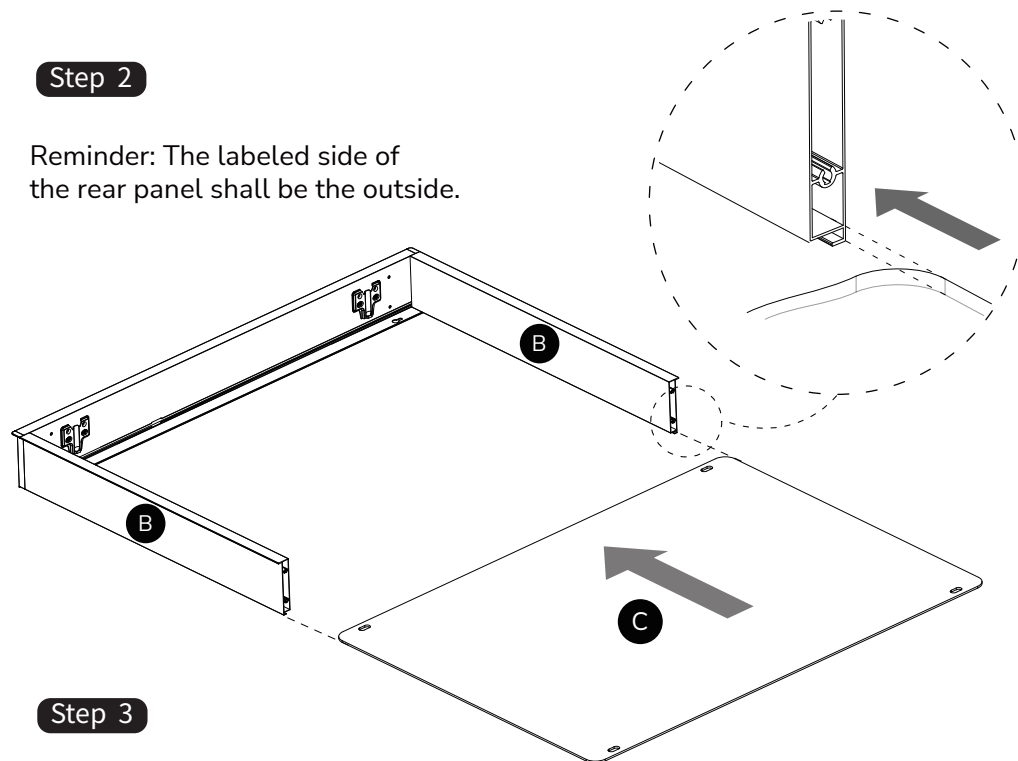


Step 3

Align the holes on the back panel with those on the side panels.

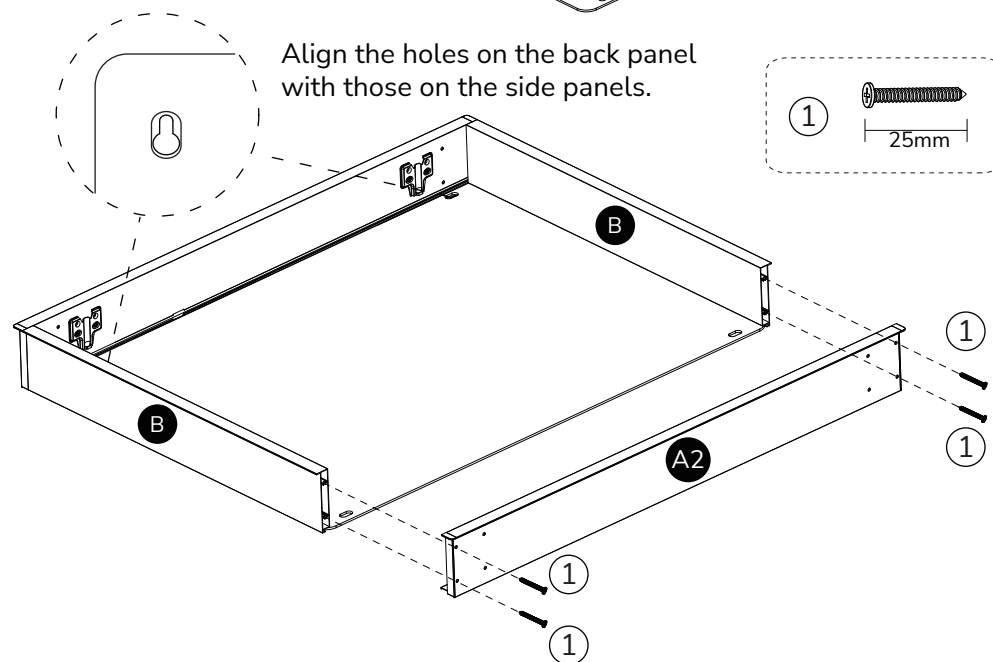


4 Install cabinet door hinges

Push the hinge into the slot.

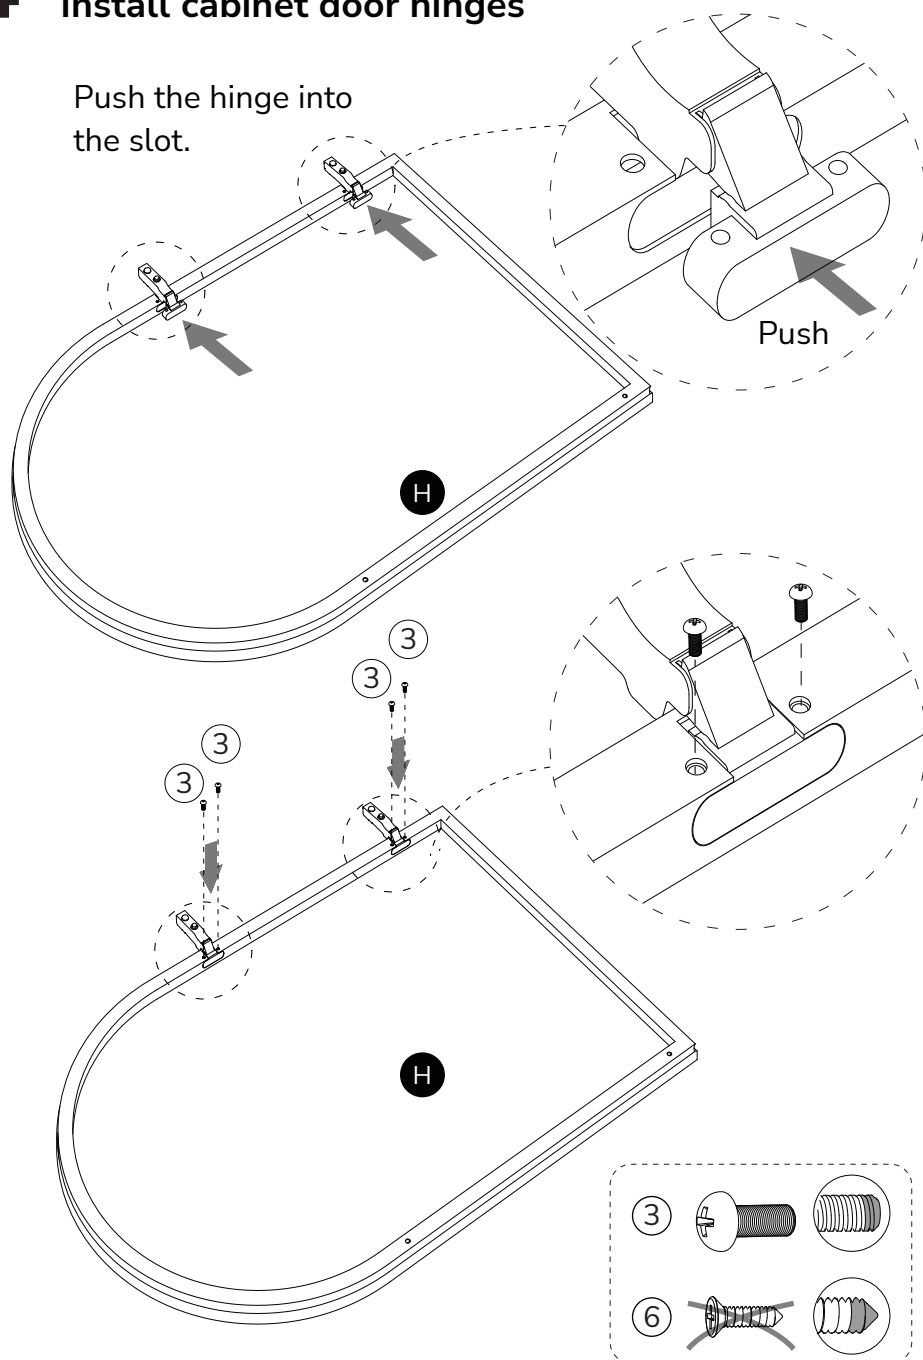


5 Installation of shelves


Step 1 Loosen the screws on parts D1 and D2, do not separate them.

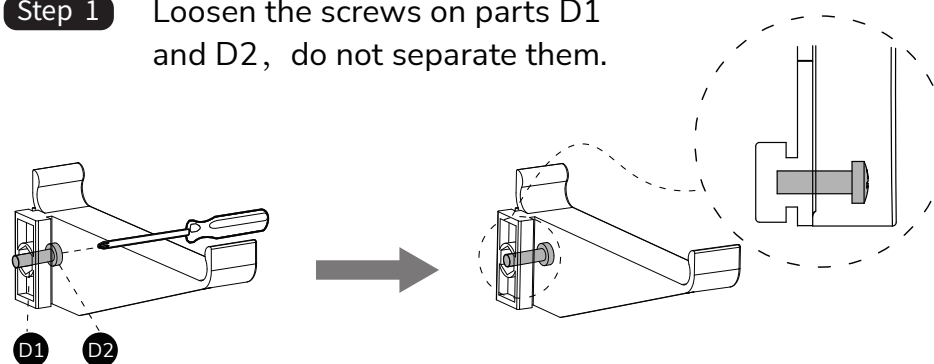

Step 2

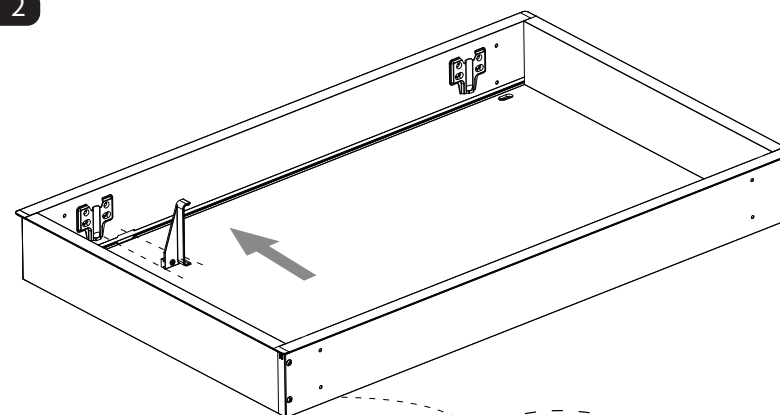


Align the shelf with the slot and insert it vertically

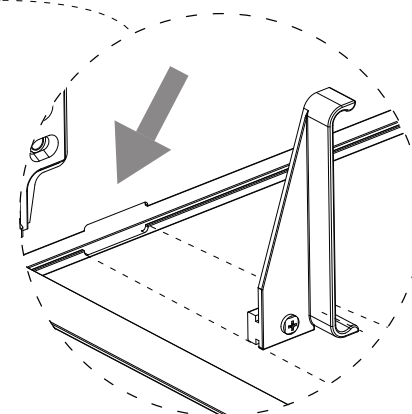


5-1 Installation of shelves

Step 3

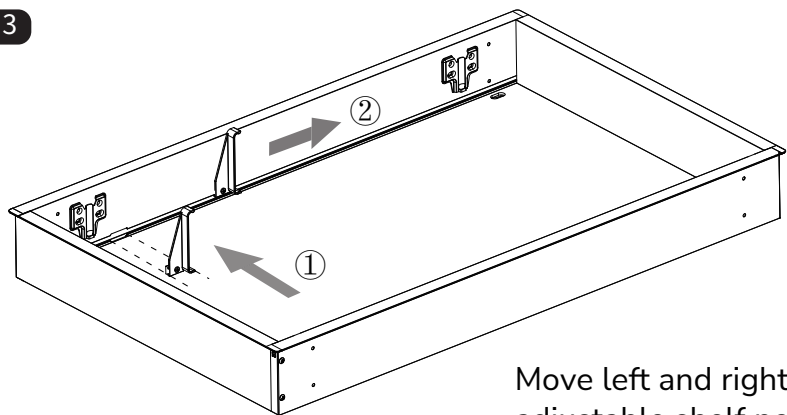

Move left and right,
adjustable shelf position

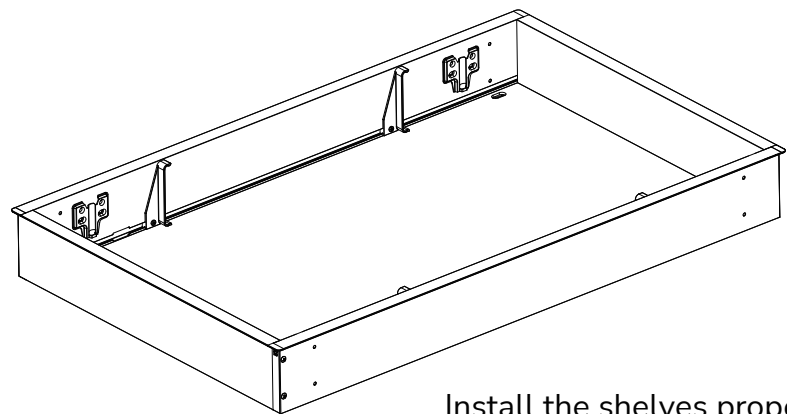

Install the shelves properly


ATTENTION:

Left door opening: D1 needs to be installed on the side with hinges

Right door opening: D2 needs to be installed on the side with hinges


6 Install the shelves

Step 1

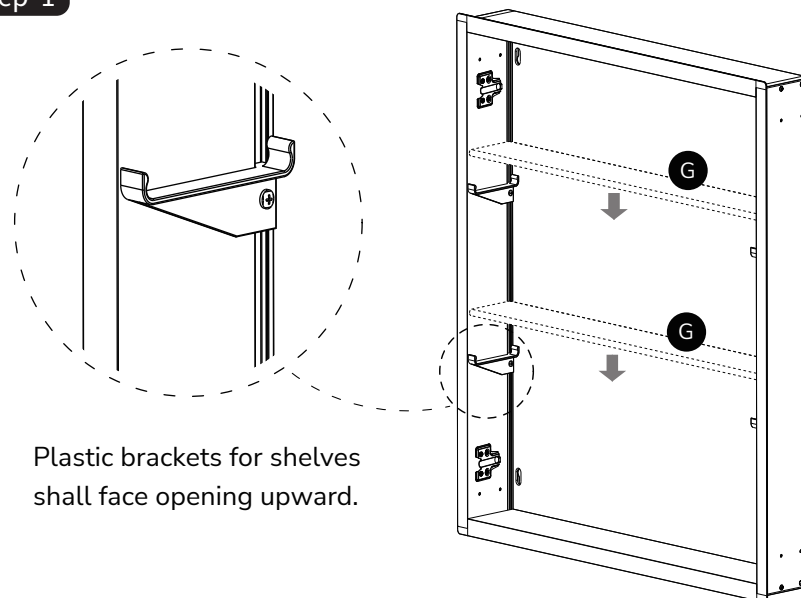

Plastic brackets for shelves
shall face opening upward.

Reminder: If the medicine cabinet
you purchased is taller than 32
inches, please assemble all the
included G parts.


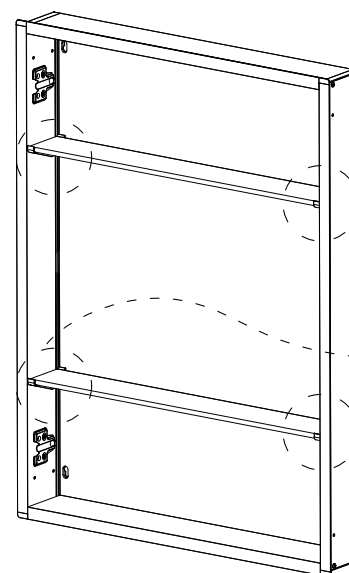


Finish

The shelf panel needs to
snap into the shelf frame.



6-1 Install the shelves

Step 2

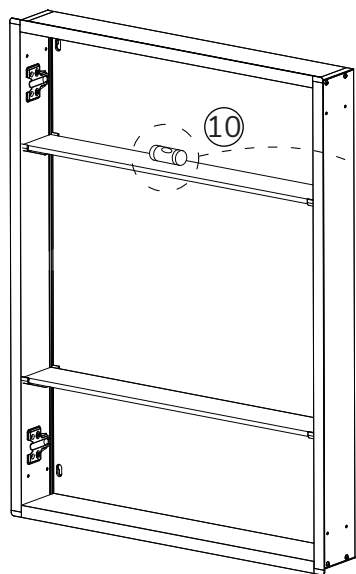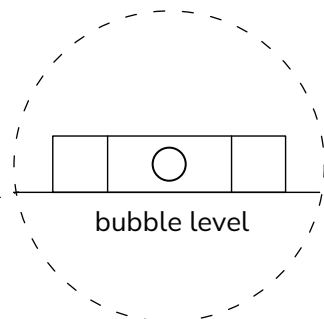

Reminder: Place the cabinet vertically on the desk-top, Please ensure the shelves are horizontal with the bubble level.

Step 3

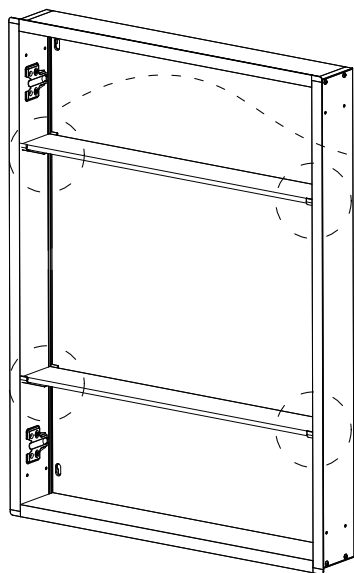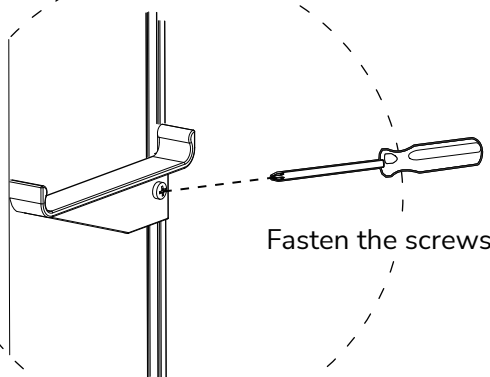


Fasten the screws

7

WALL MOUNTING


Step 1

Measure the distance between the upper mounting hole to the bottom of cabinet box

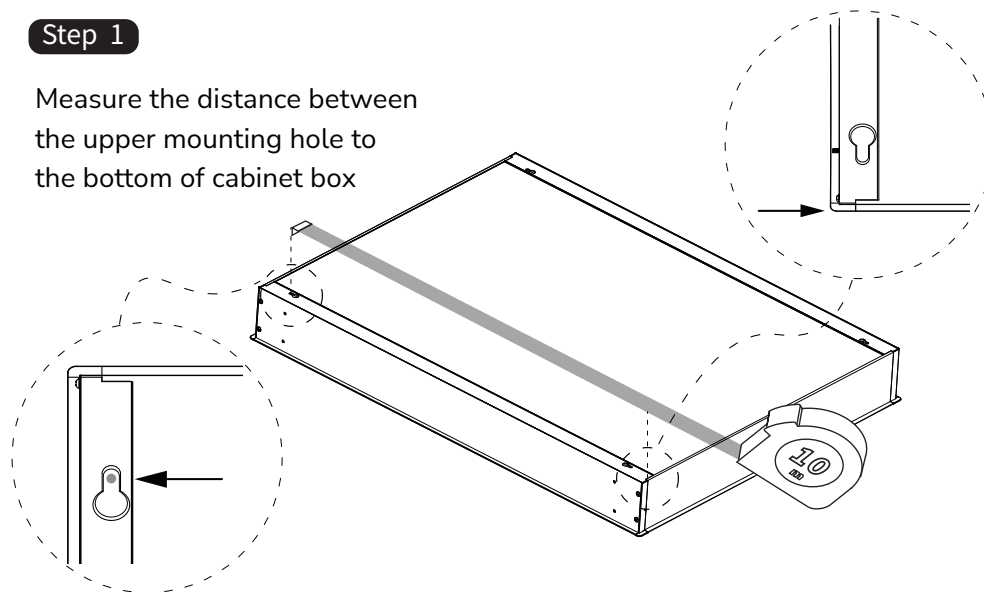


Step 2

1. Based on the measured distance, mark spots for the mounting holes on the wall.
2. From the two designated spots, draw straight lines using a bubble level to ensure they are perfectly horizontal.
3. Draw a vertical line at the middle of vanity sink as a reference.

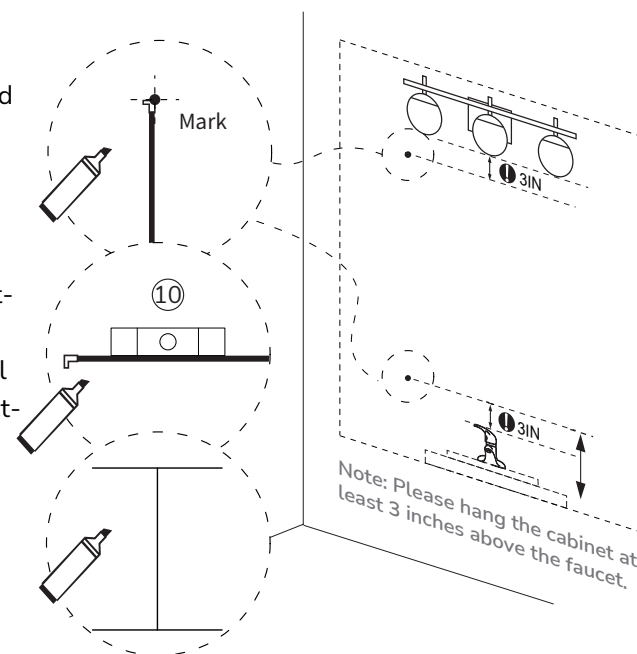


Note: Please hang the cabinet at least 3 inches above the faucet.

Step 3

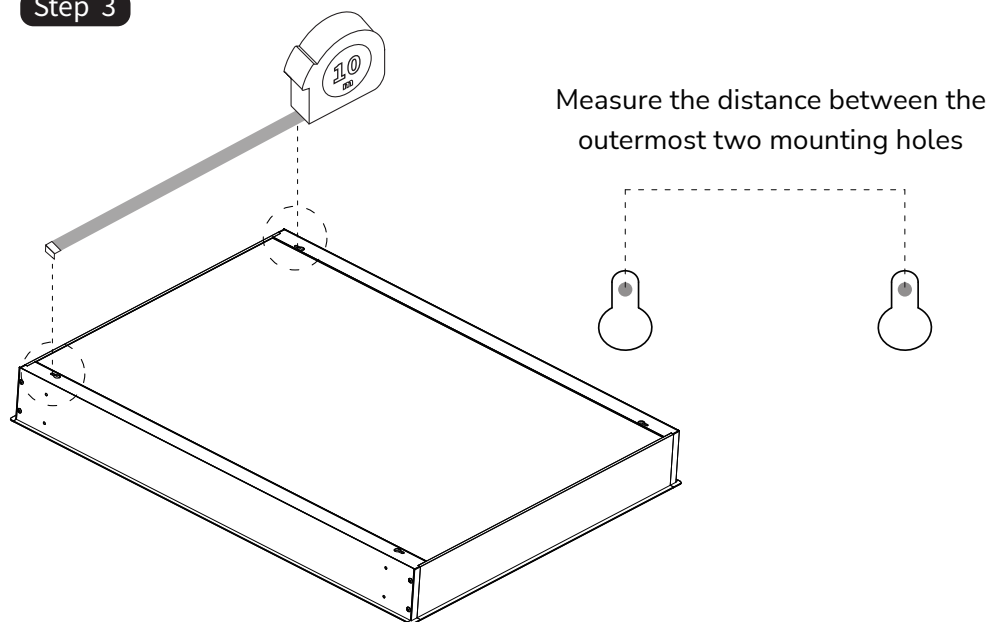

Step 4


Based on the measured distance, mark the other two spots on the wall.

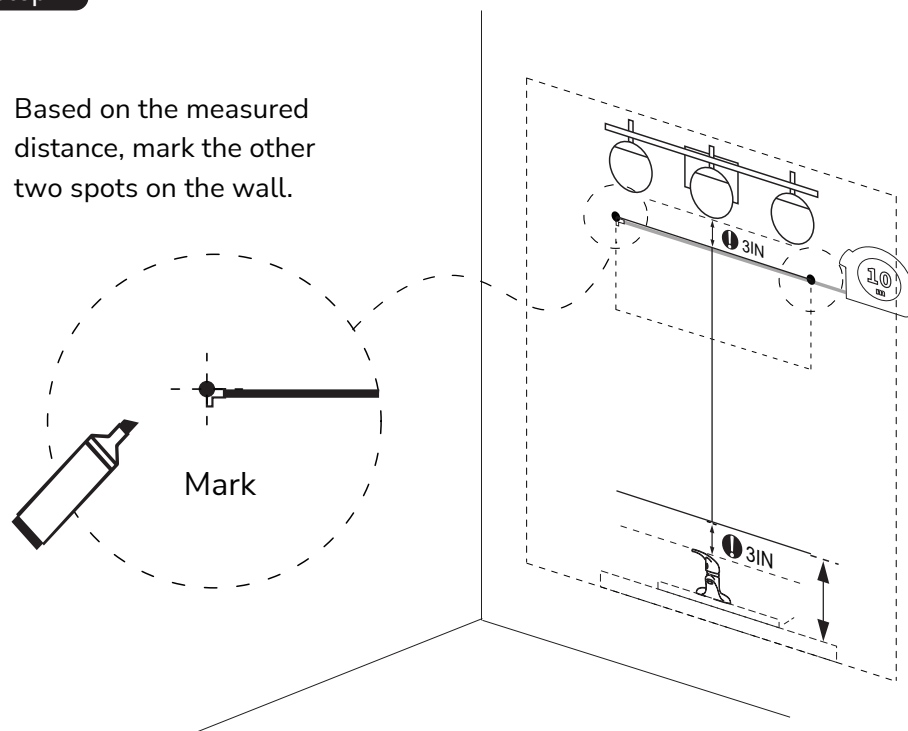

7-1

Step 1

Drill holes at the marked spots.

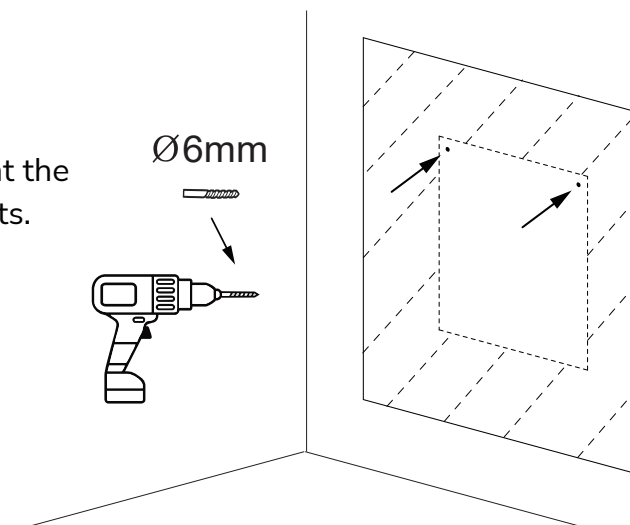


Step 2

Choose appropriate drill bits that match the thickness and material of the wall to ensure secure mounting.


Thickness of Wall :	Recommended Drill Bit :
> 5/8" (16mm)	1/4" (6mm) drill bit, drilling depth in 1 31/32" (50mm)  
5/16" (8)-5/8" (16mm)	25/64" (10mm) drill bit  
< 5/16" (8mm)	Unapplicable

Fit the screws but leave
a 0.27-0.55in (7-14mm)
gap between the screw-
head and the wall

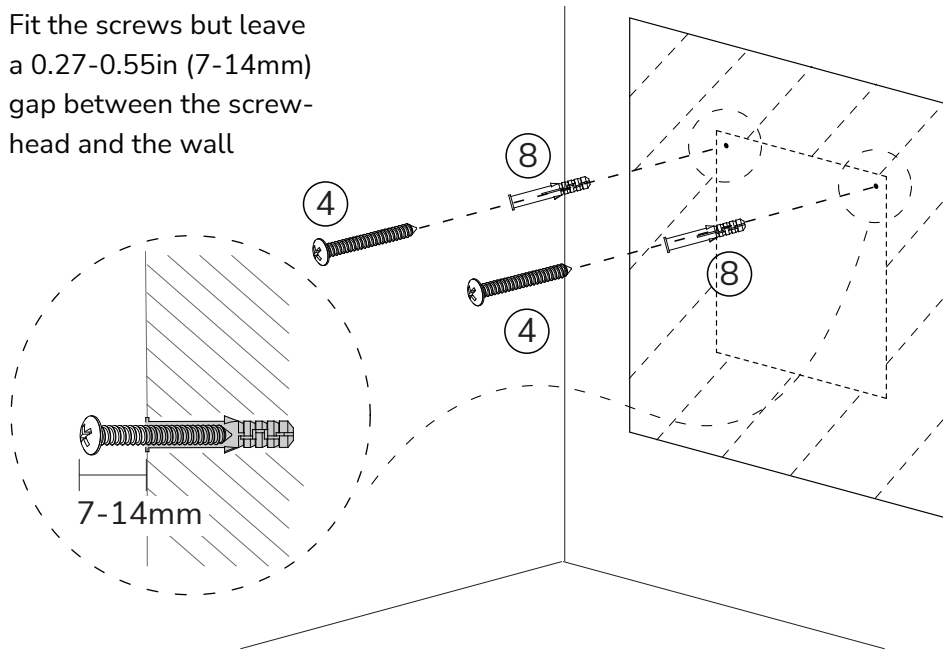


7-2

Step 1

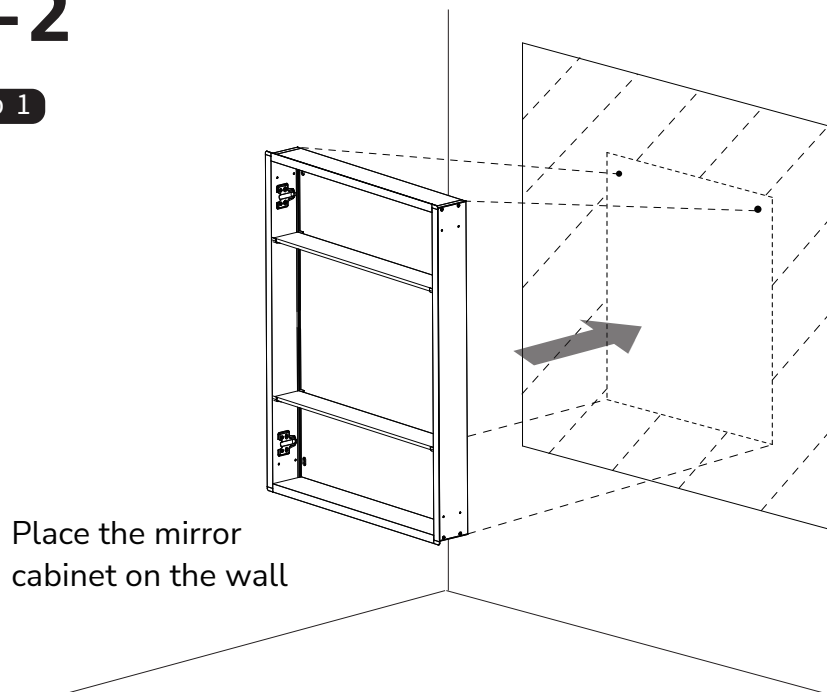

Place the mirror
cabinet on the wall


Step 2

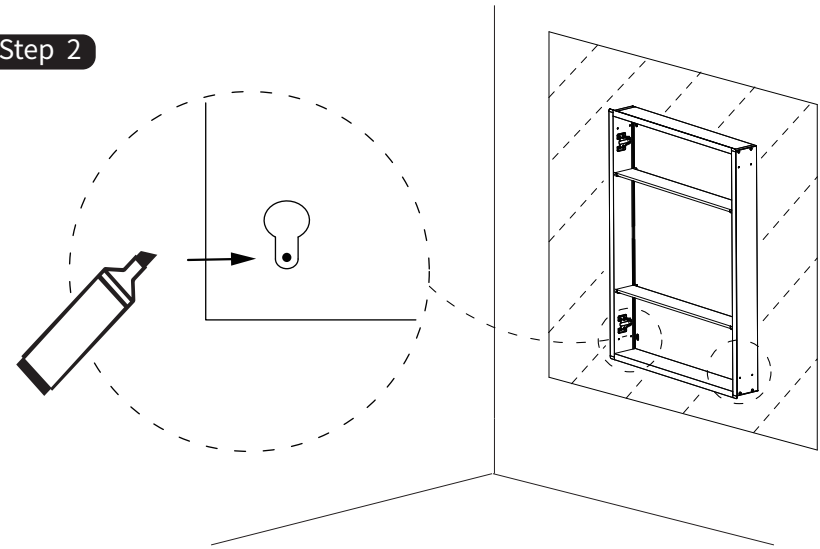

Mark the two bottom spots on the wall.


7-3

Step 1

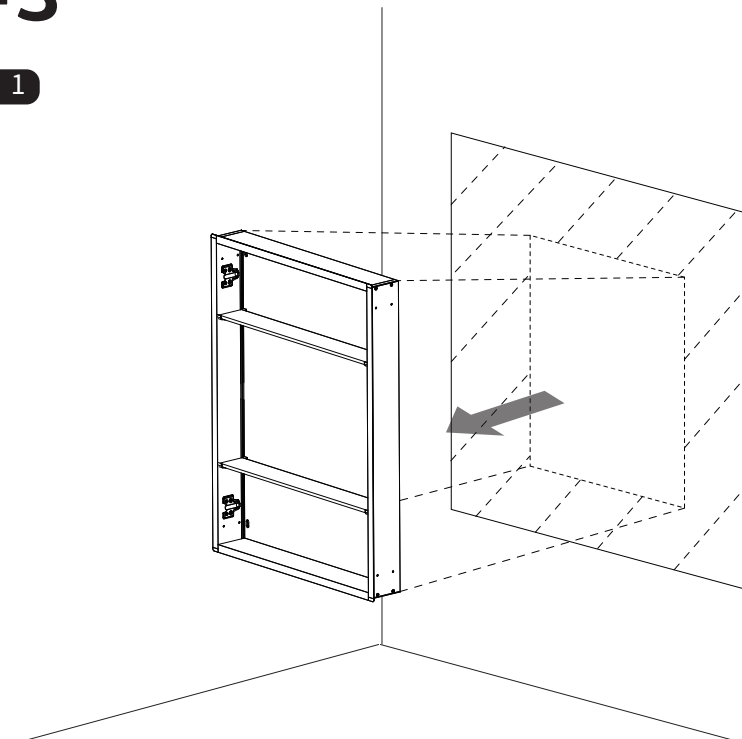


Step 2

Drill holes at the marked spots.

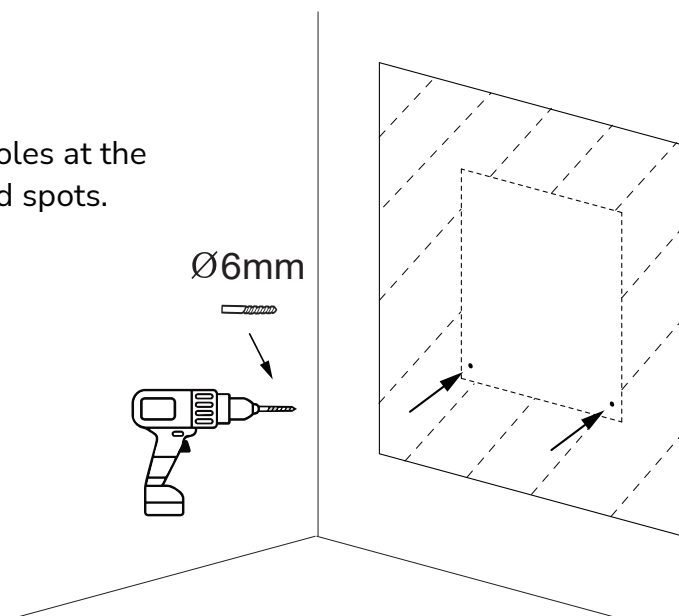

Step 3


Install wall anchors.

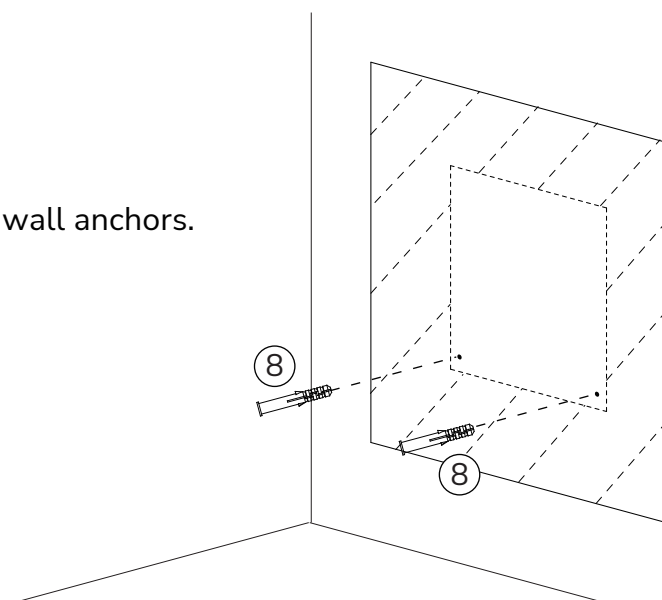

7-4


Step 1

Set screws

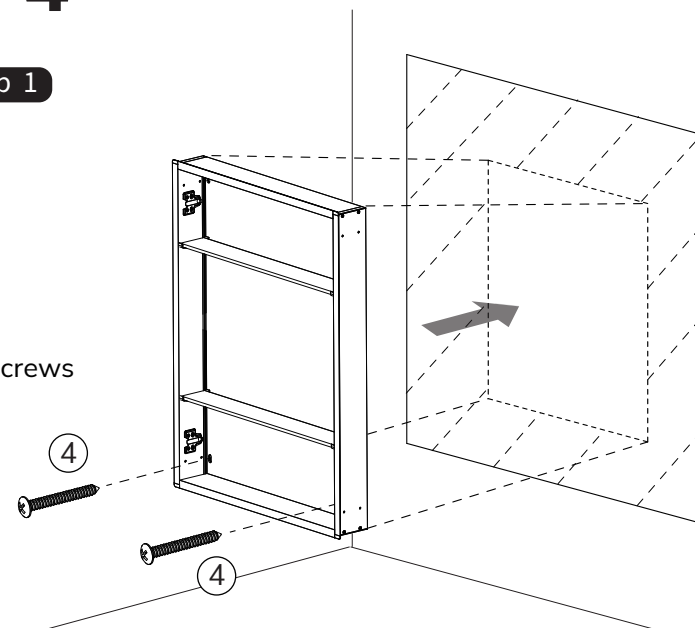


Step 2

Fasten the screws

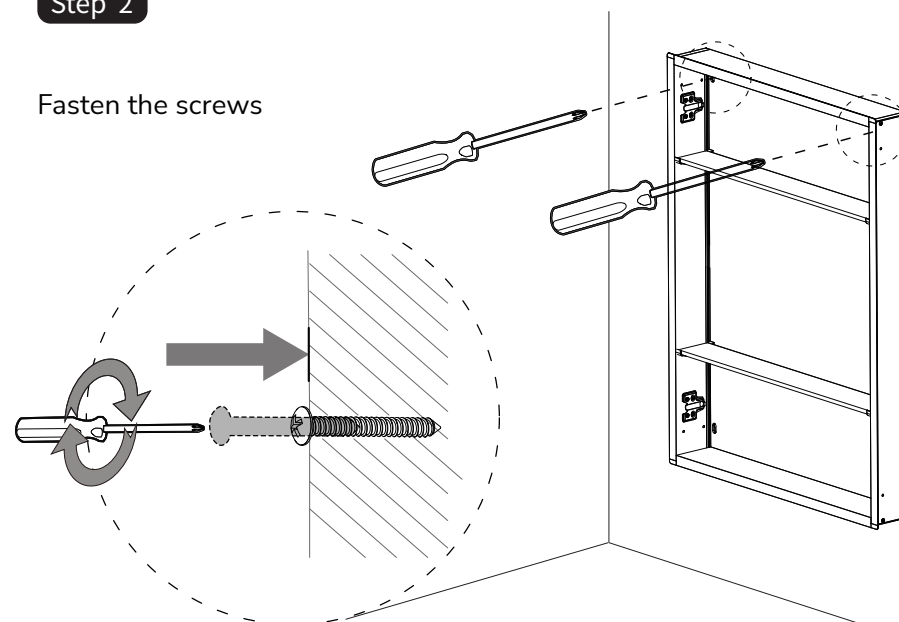

7-5


Apply stickers to cover the screwheads

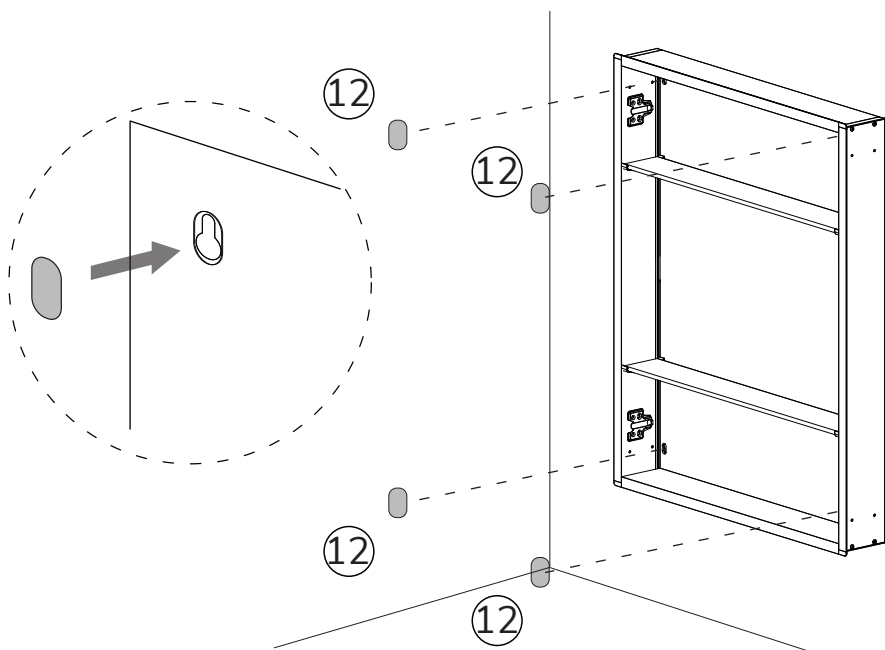

7-6


Step 1

Align the hook of the hinge with the groove at the hinge base. Link the cabinet door to the cabinet body.

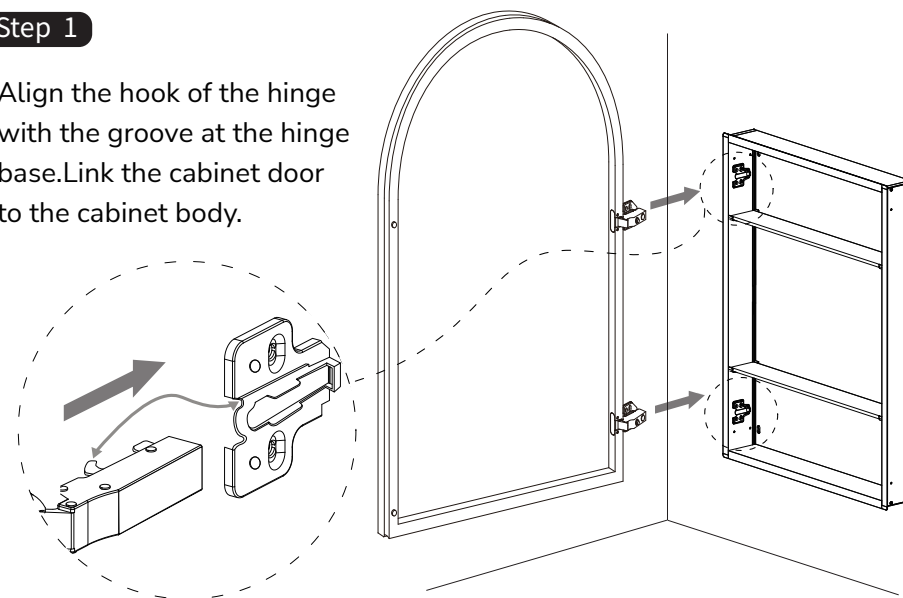


Step 2

Press the hydraulic hinge into place. Once you hear a click, it indicates that the installation is complete.

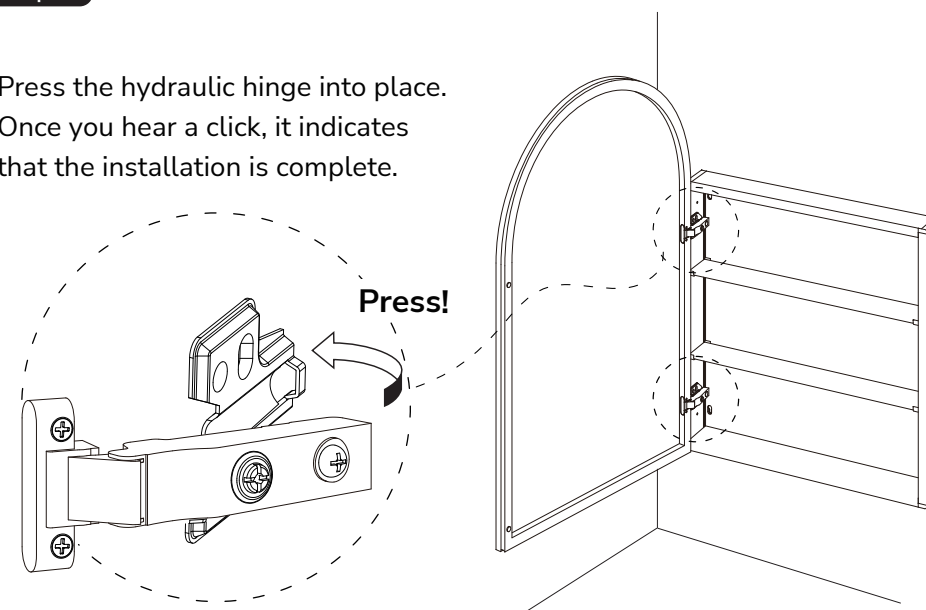



HOW TO ADJUST HYDRAULIC HINGES

Open the hydraulic hinge cover and adjust the cabinet door by fastening or loosening the screws accordingly.

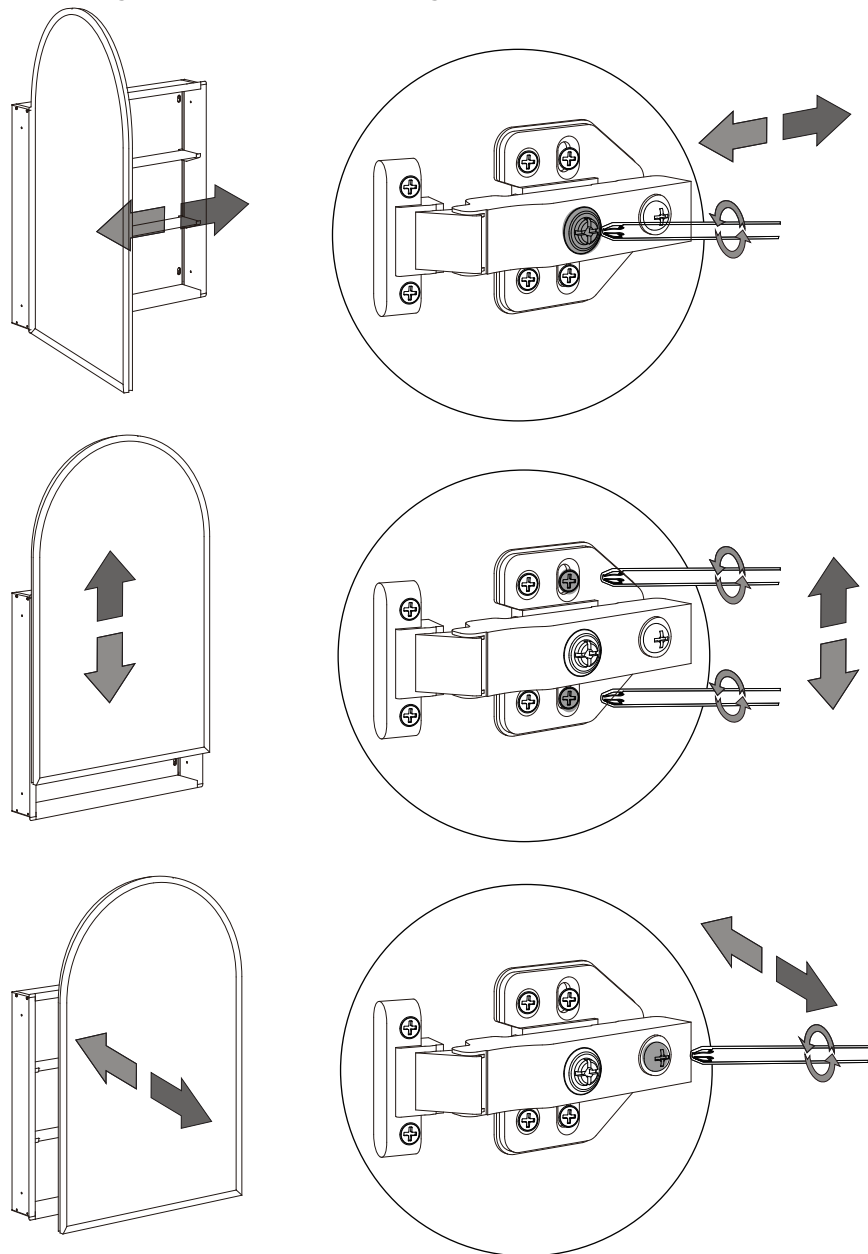


7-7

Adjust hinge

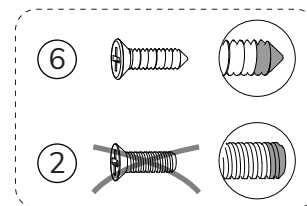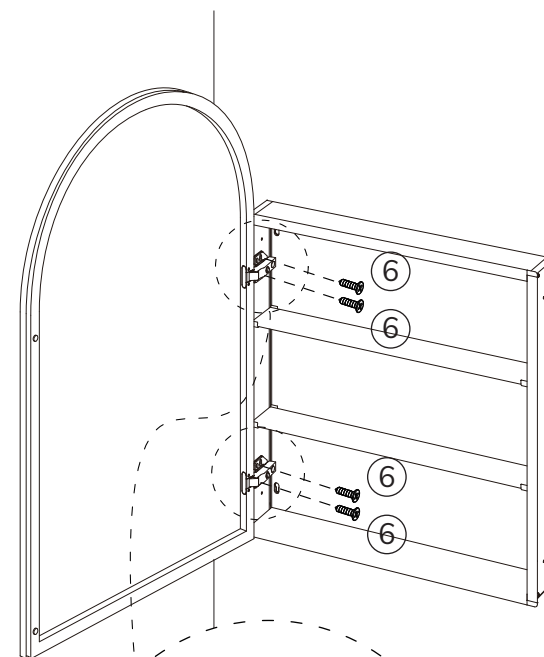


Step 1

1. Adjust the screws on hydraulic hinge, ensuring the cabinet door locates perfectly.

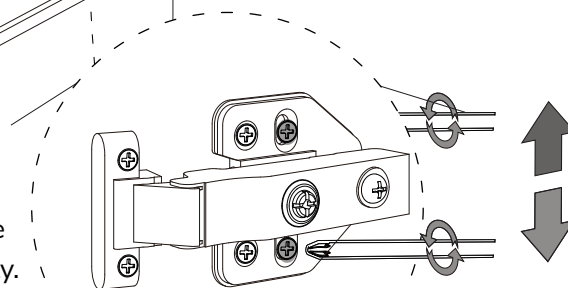

Step 2

2. Fasten the screws

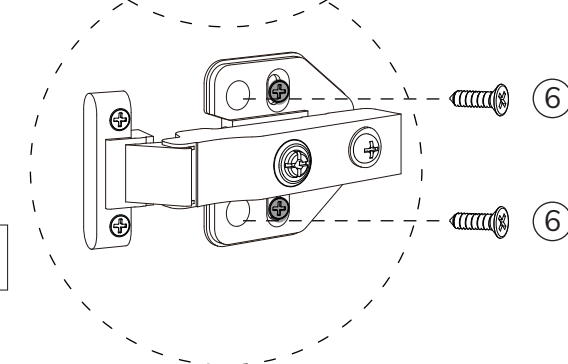


Installation Completed

RECESSED MOUNTING

8-1


Step 1

Ensure the cabinet is level

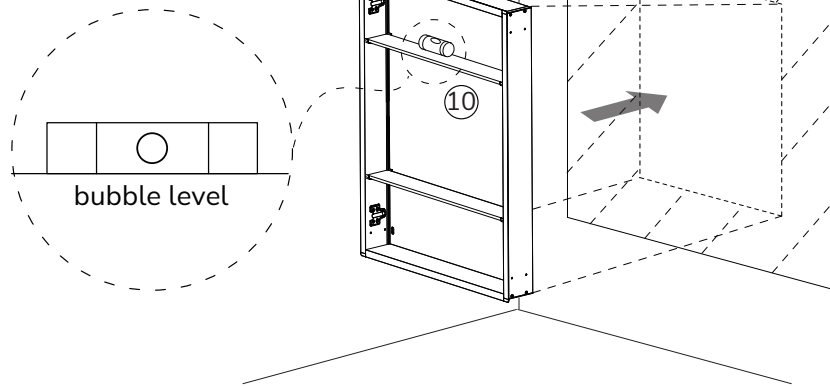



Step 2

Mark the placement of the cabinet

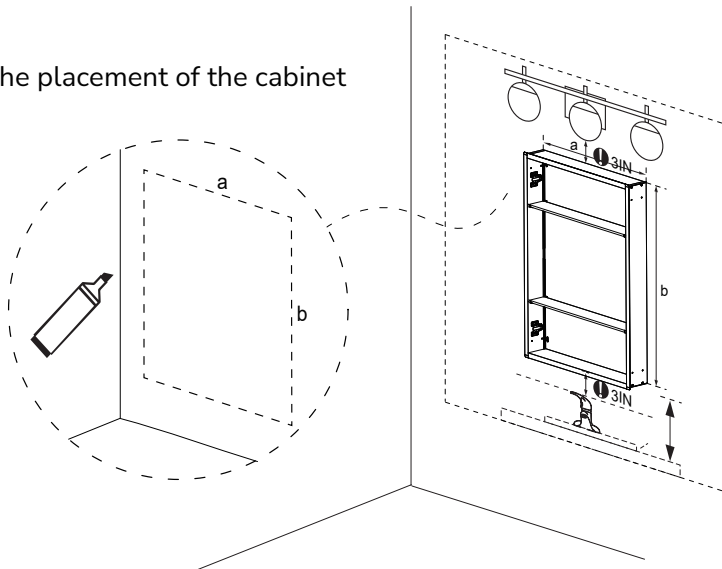

Note: Please hang the cabinet at least 3 inches above the faucet.

8-2

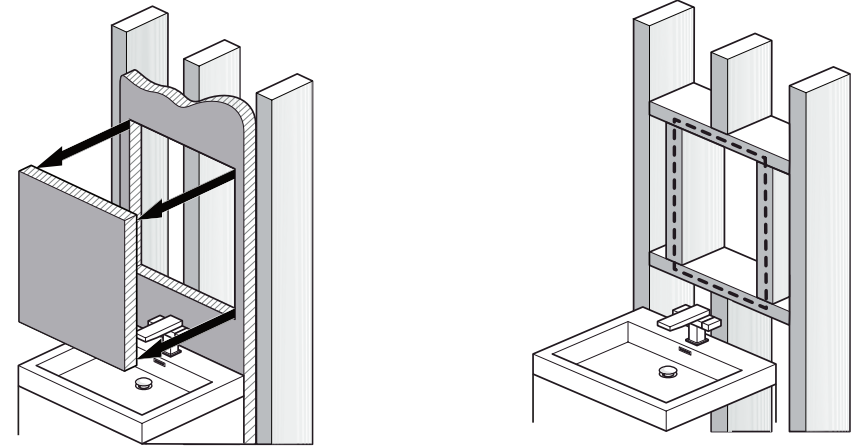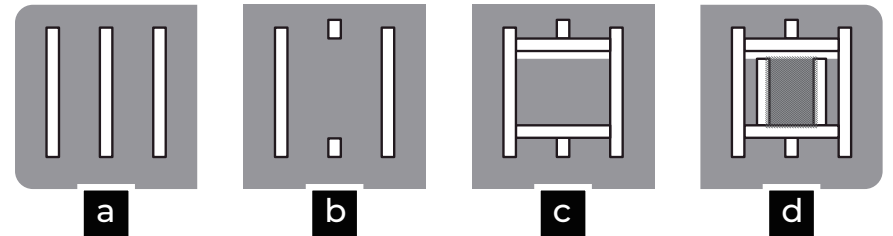


- Mark the center stud;
- Saw it for cabinet to rest on;
- Add additional 2 studs on the top and at the bottom of the opening to support the cabinet;
- Two more studs on both sides for the cabinet to be secured on.

8-3


Step 1

Place the mirror cabinet into the wall

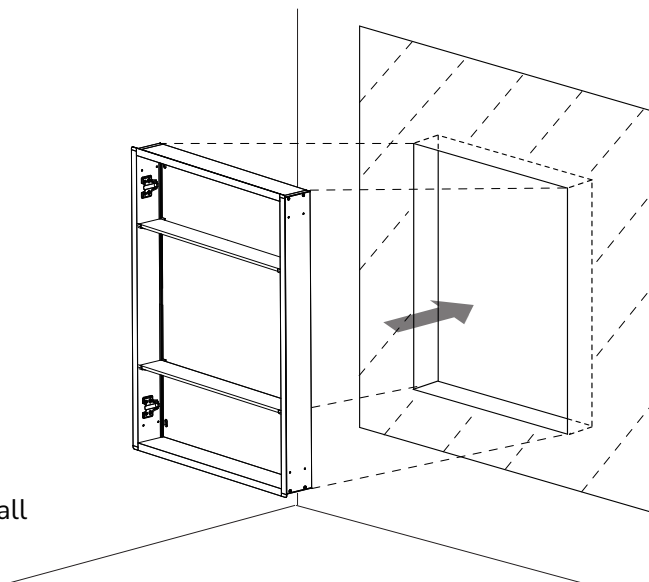

Step 2


Mark spots for mounting hydraulic hinge

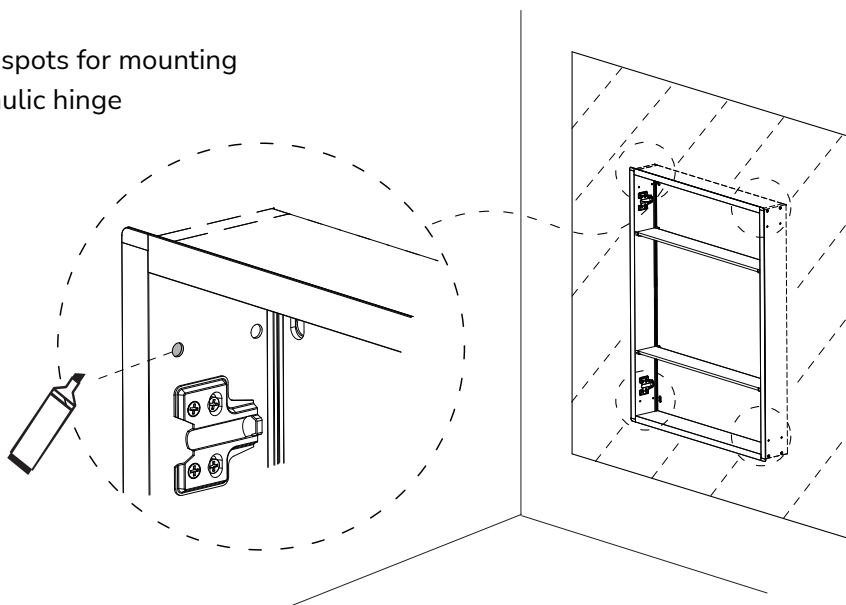


8-4

Step 1

Choose appropriate drill bits that match the thickness and material of the wall to ensure secure mounting.


Thickness of Wall :	Recommended Drill Bit :
> 5/8" (16mm)	1/4" (6mm) drill bit, drilling depth in 1 31/32" (50mm)  
5/16" (8)-5/8" (16mm)	25/64" (10mm) drill bit  
< 5/16" (8mm)	Unapplicable

Take out the cabinet box and drill holes at the marked spots.

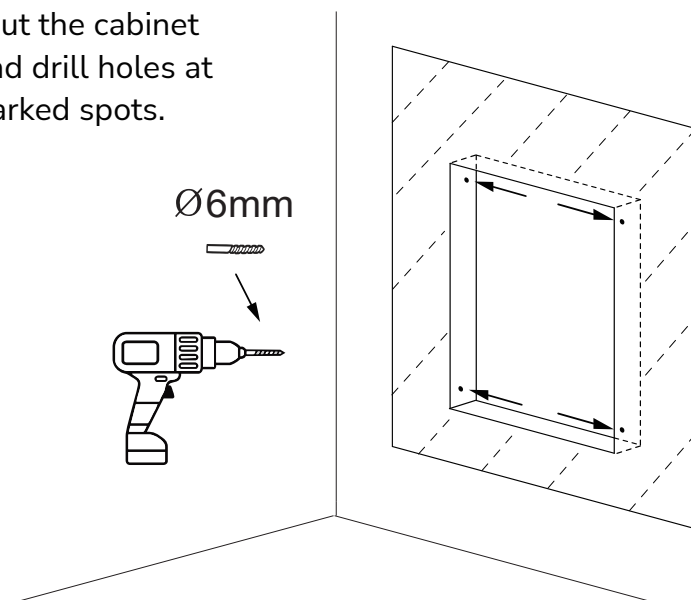


Step 2

Install wall anchors

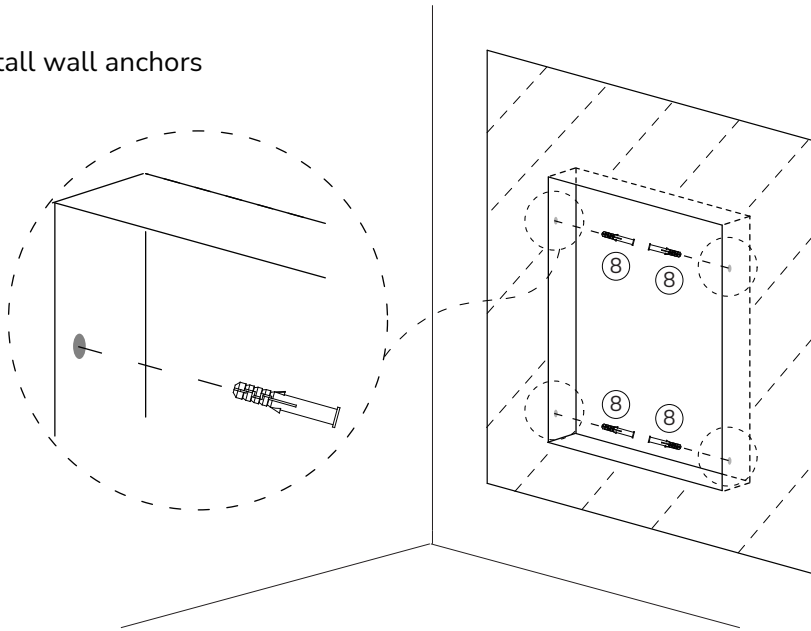


Step 3

Place the mirror cabinet into the wall

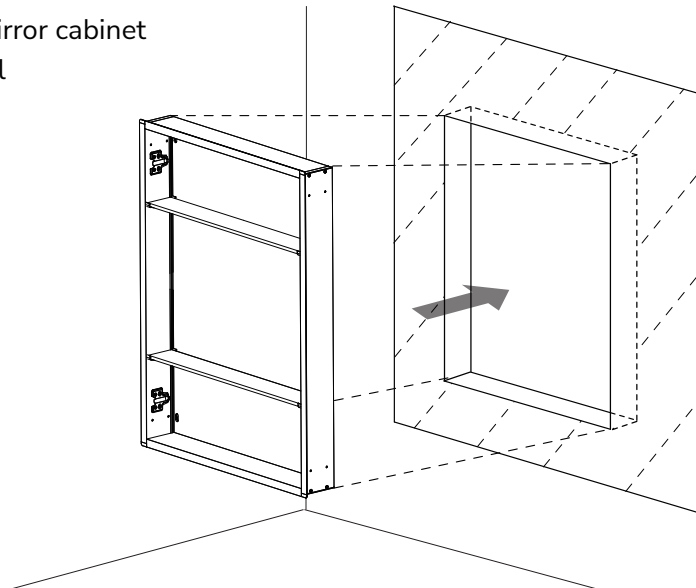


Step 4

Set screws

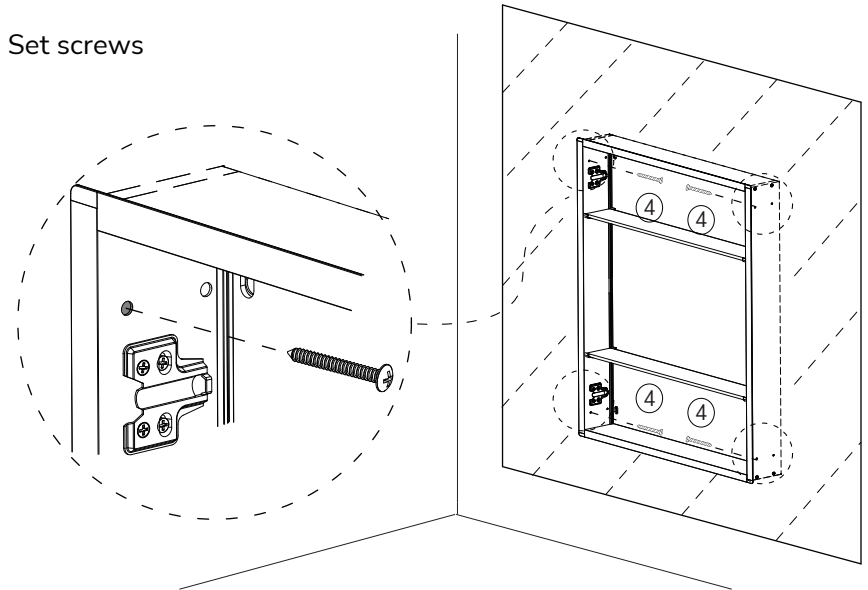

8-5


Apply stickers to cover the screwheads

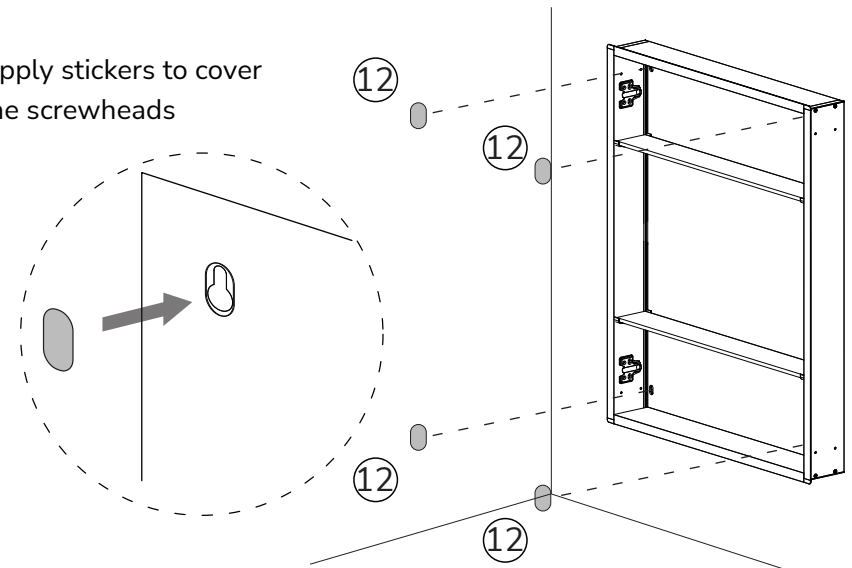

8-6


Step 1

Align the hook of the hinge with the groove at the hinge base. Link the cabinet door to the cabinet body.

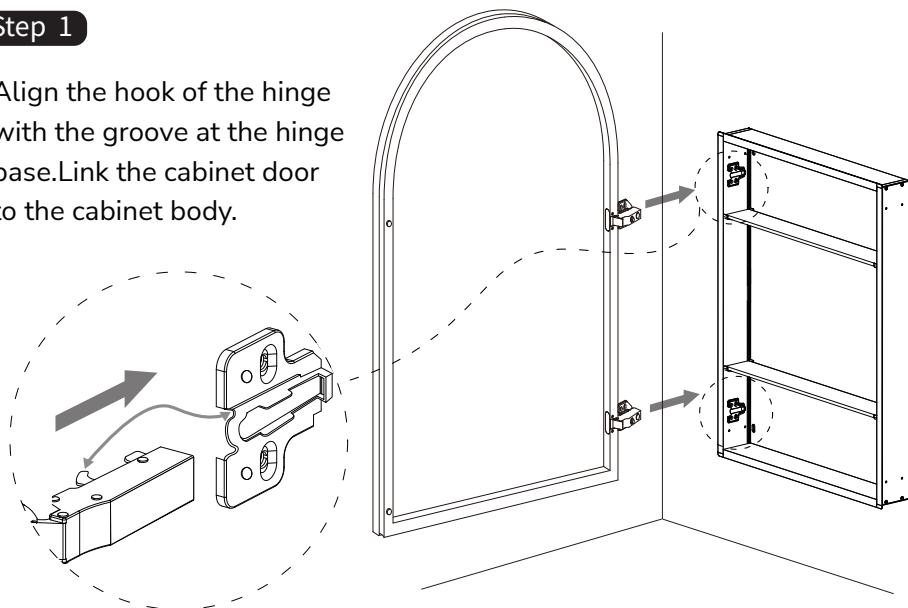


Step 2

Press the hydraulic hinge into place. Once you hear a click, it indicates that the installation is complete.

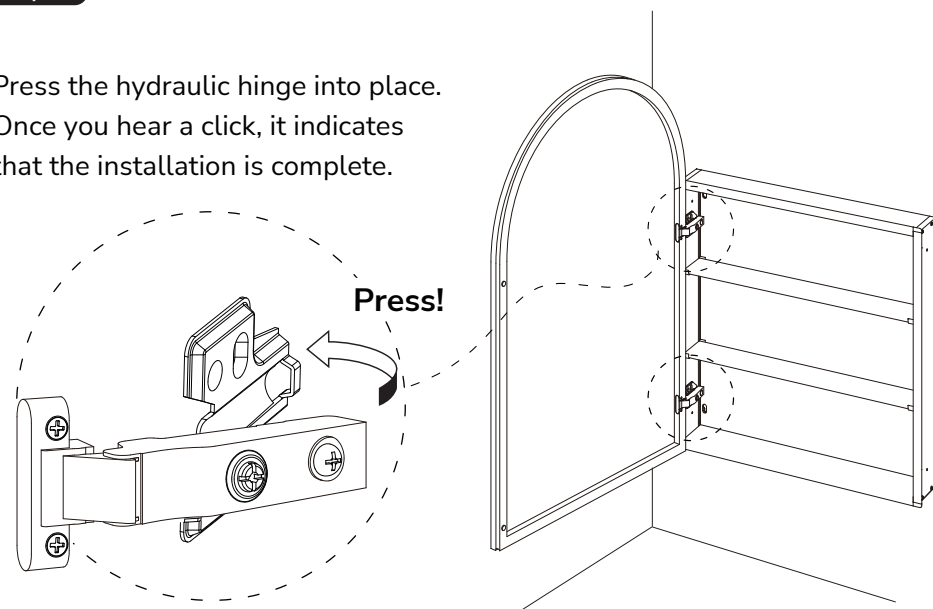



HOW TO ADJUST HYDRAULIC HINGES

Open the hydraulic hinge cover and adjust the cabinet door by fastening or loosening the screws accordingly.

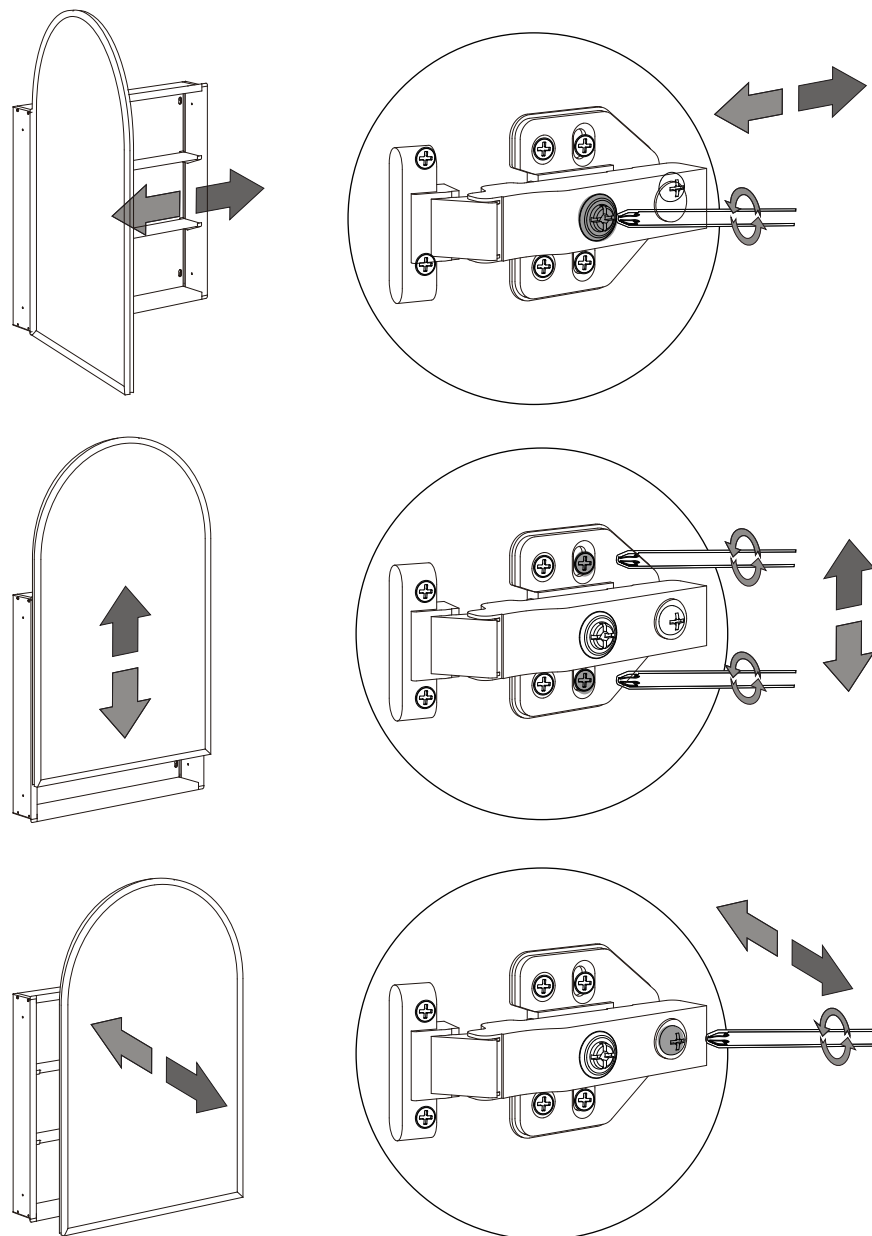


8-7

Adjust hinge

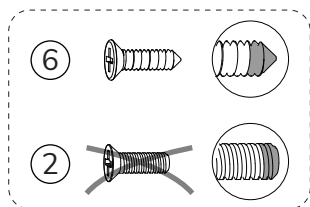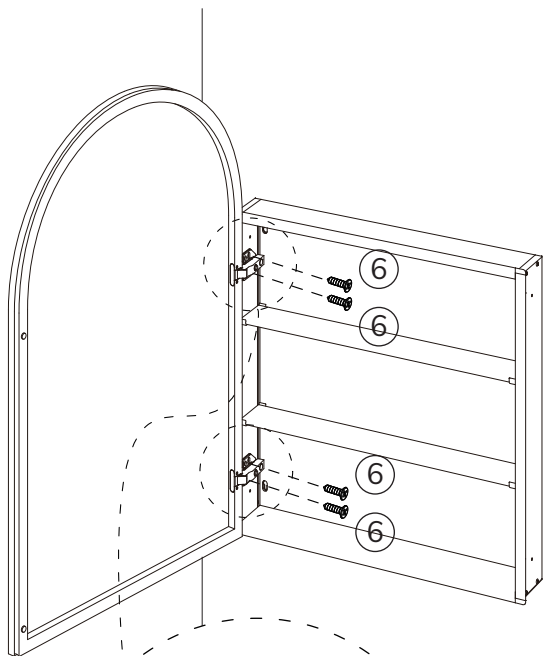


Step 1

1. Adjust the screws on hydraulic hinge, ensuring the cabinet door locates perfectly.

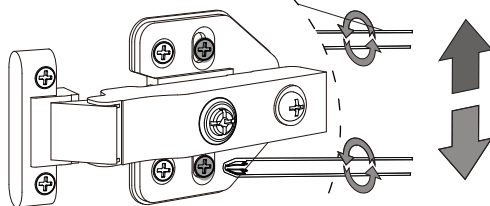

Step 2

2. Fasten the screws

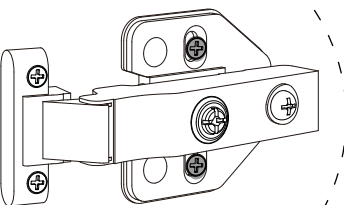

Installation Completed

HOW TO CLEAN

When cleaning the mirror, please follow these instructions:

1. Use a soft, non-abrasive cloth to clean the mirror. Avoid using rough or abrasive materials that may damage the surface.
2. Do not use any cleaning agents that may cause irritation or damage to the mirror's finish. Instead, use any of the recommended cleansers to remove dirt and grime:
 - ☒ Gentle liquid detergents
 - ☒ Colorless cleansers
3. If any adhesive residue left, please wipe it off with a cloth dipped in water (instead of detergents).

★ Warranty

A two-year warranty from the date of your purchase.

★ Contact Email

If you have any questions, please feel free to contact us via MC@ZRsupport.com



Scan the QR code to watch the installation video