



ASSEMBLY INSTRUCTION

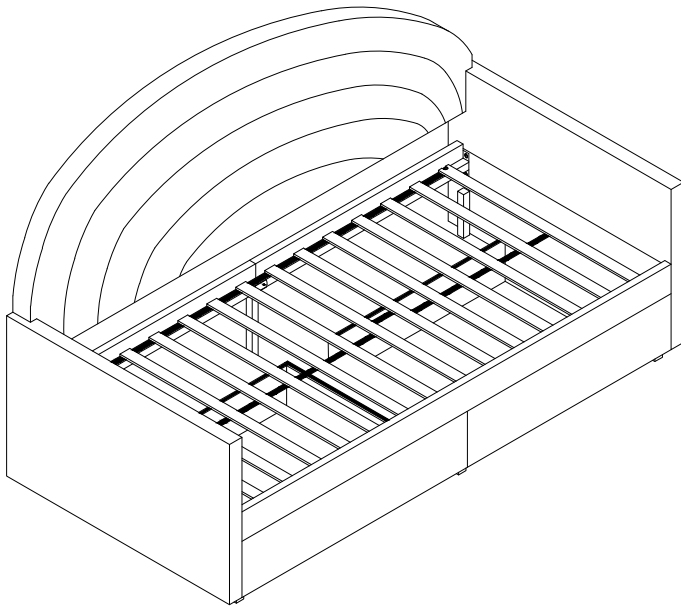


Please **TEAR OFF** this shrink film from side!
DO NOT USE CUTTER!

IMPORTANT NOTE



- 1. The product is shipped in two packages. Please check the number of packages received before assembly. If you are missing one package, receive a duplicate package, or have any assembly or after-sales issues, please contact**
2. FOR THE PROTECTION OF YOUR FURNITURE, PLACE ALL PARTS ON A CLEAN AND SMOOTH SURFACE TO PREVENT ANY DAMAGE.
3. KEEP FITTINGS OUT OF CHILDREN'S REACH AND KEEP CHILDREN WELL AWAY FROM CONSTRUCTION AREA.
4. WHEN MOVING YOUR ASSEMBLED BED. IT IS BEST TO LIFT THE BED AND NEVER TO DRAG IT.
5. NOT USE THIS PRODUCT IF PARTS ARE MISSING, DAMAGED OR WORN.
6. THIS PRODUCT SHOULD ONLY BY USED ON FIRM, LEVEL GROUND.
7. PLEASE PERIODICALLY CHECK ALL FITTINGS AND RE-TIGHTEN AS NECESSARY.
8. DO NOT USE THE BED UNLESS ALL BOLTS AND SCREWS ARE FIRMLY SECURED.
9. NEED PARTS OR ASSISTANCE? EMAIL US AT

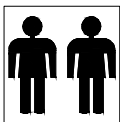

Minimum two
person assembly

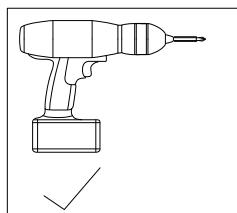


PART LIST

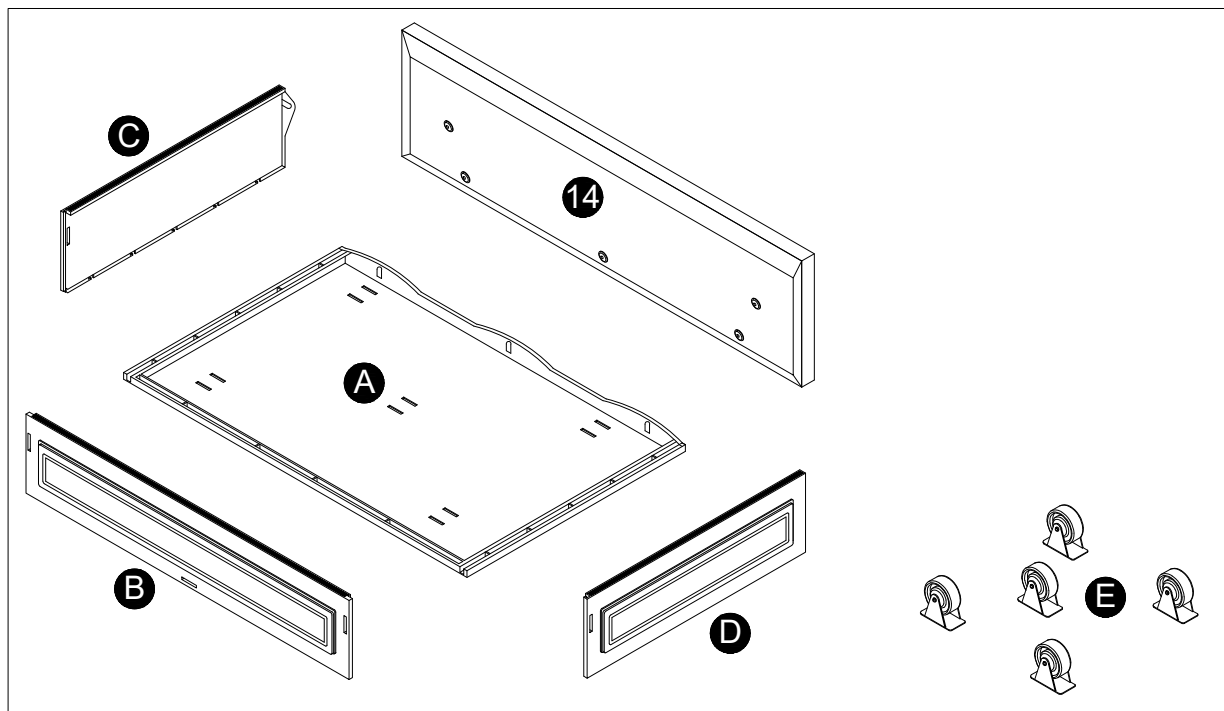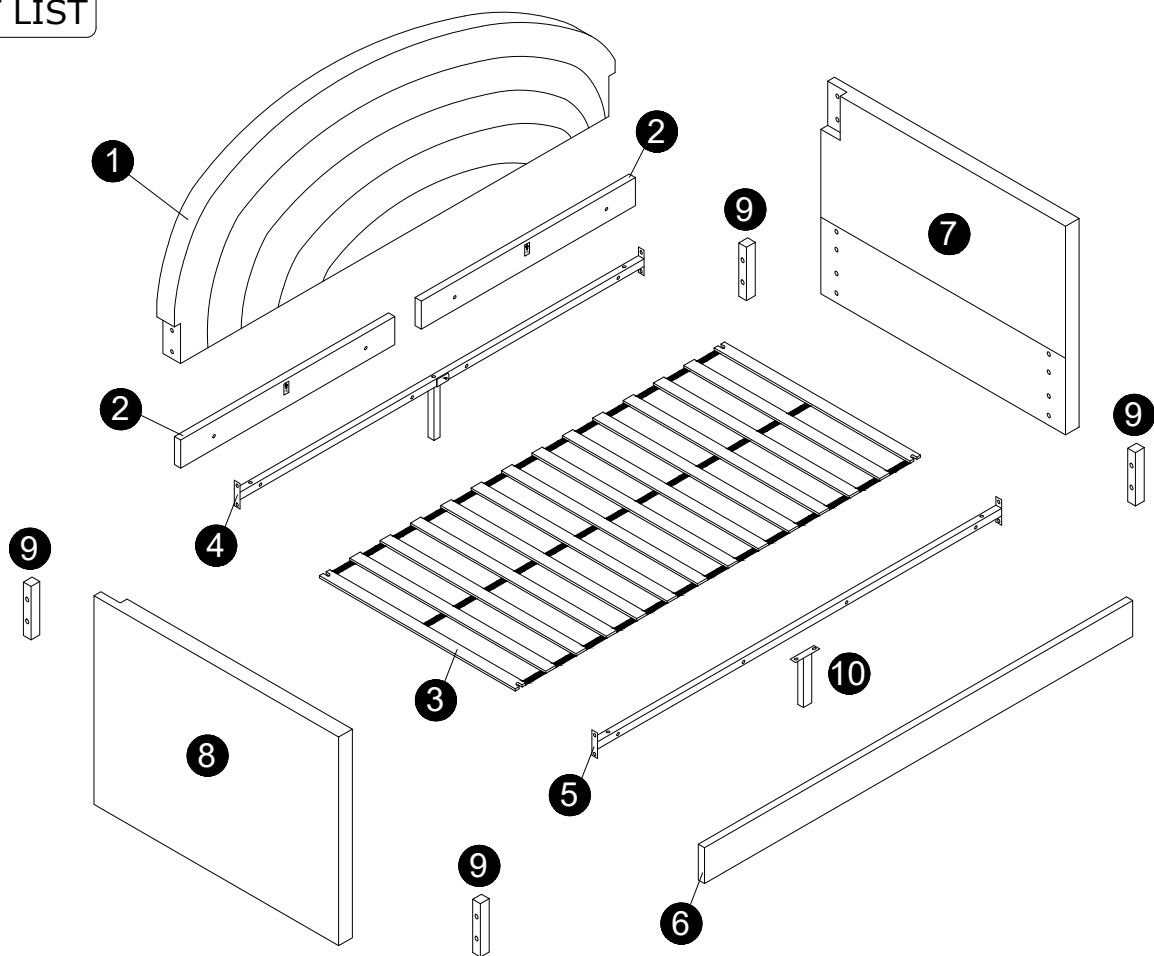


x2

PART LIST


1 x 1pc

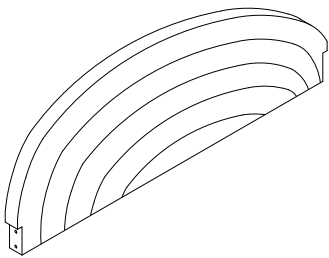


2 x 2pcs

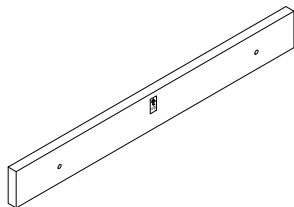


3 x 1pc

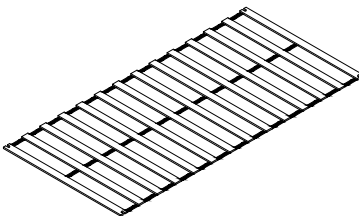


4 x 1pc

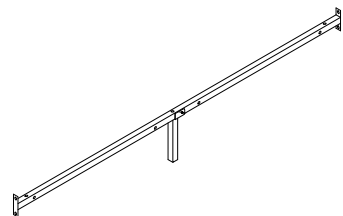


5 x 1pc

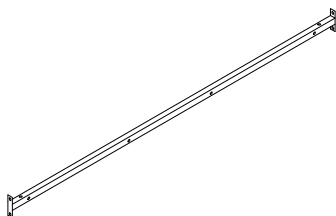


6 x 1pc

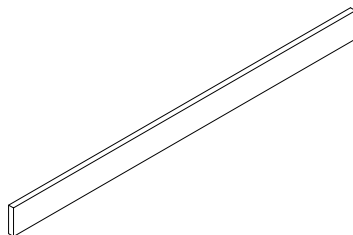

7 x 1pc

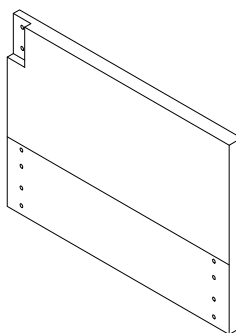


8 x 1pc

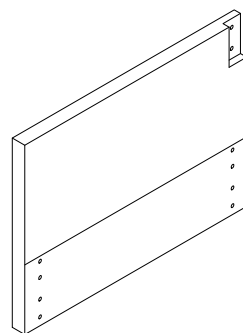


9 x 4pcs




10 x 1pc



14 x 2pcs

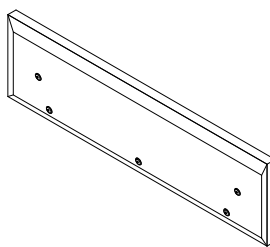


A x 2pcs

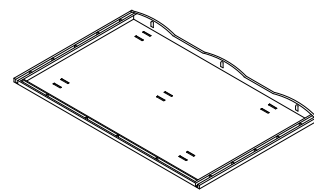


B x 2pcs



C x 2pcs

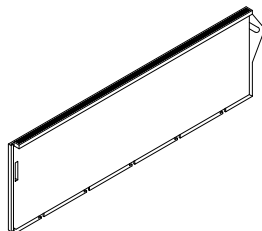

D x 2pcs

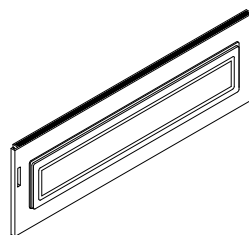

E x 10pcs



HARDWARE LIST



H1 M5 x 1pc



H2 M8x25mm x 10pcs



H3 M8x40mm x 13pcs



H4 M8x45mm x 12pcs



H5 M8 x 12pcs



H6 M8x22mm x 12pcs




H10 M6x15mm x 10pcs




H14 x 6pcs

1


Take out the all parts

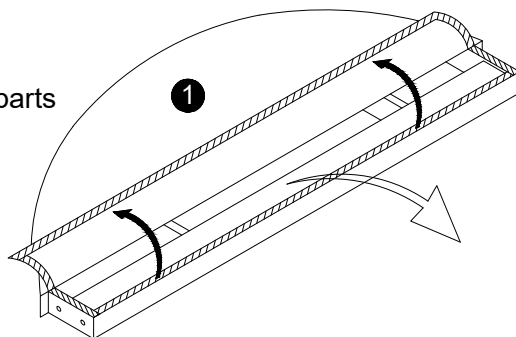


2

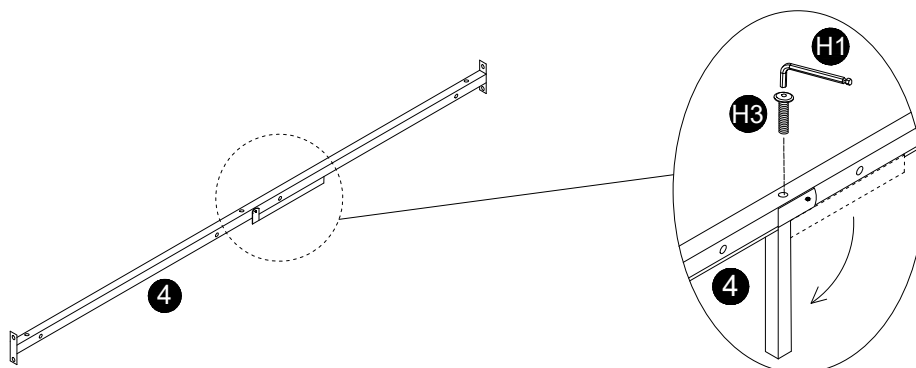


3

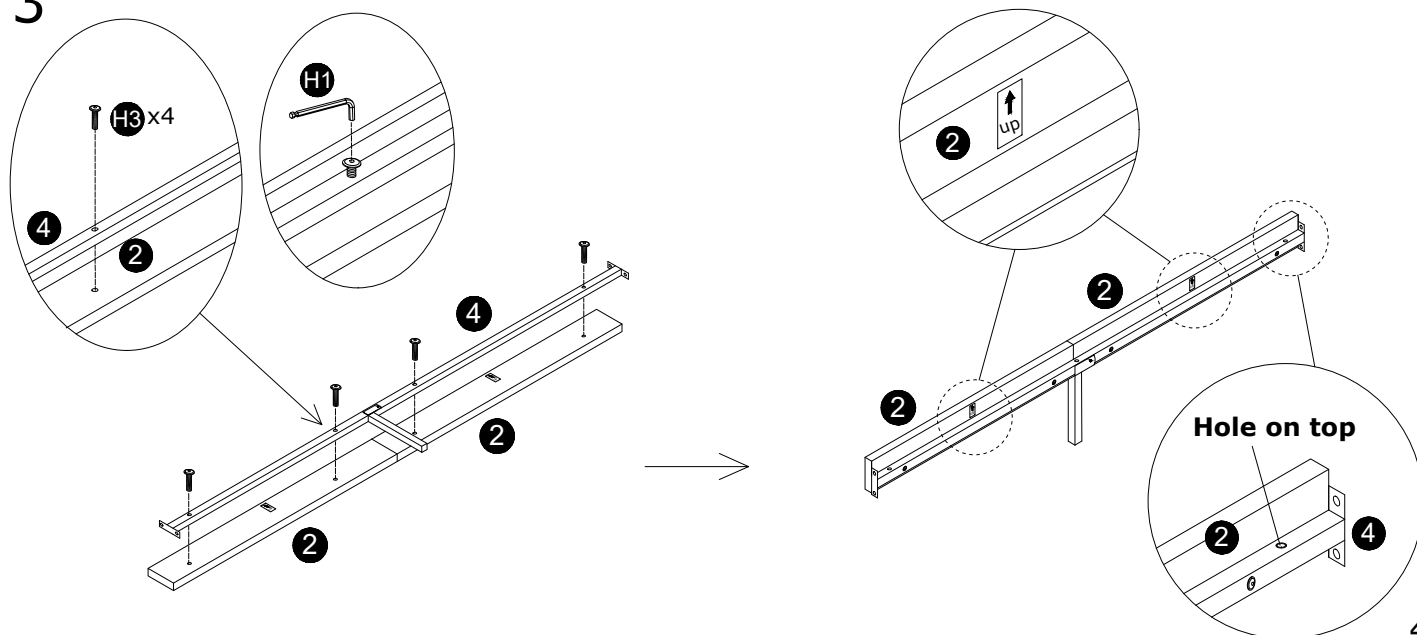


4

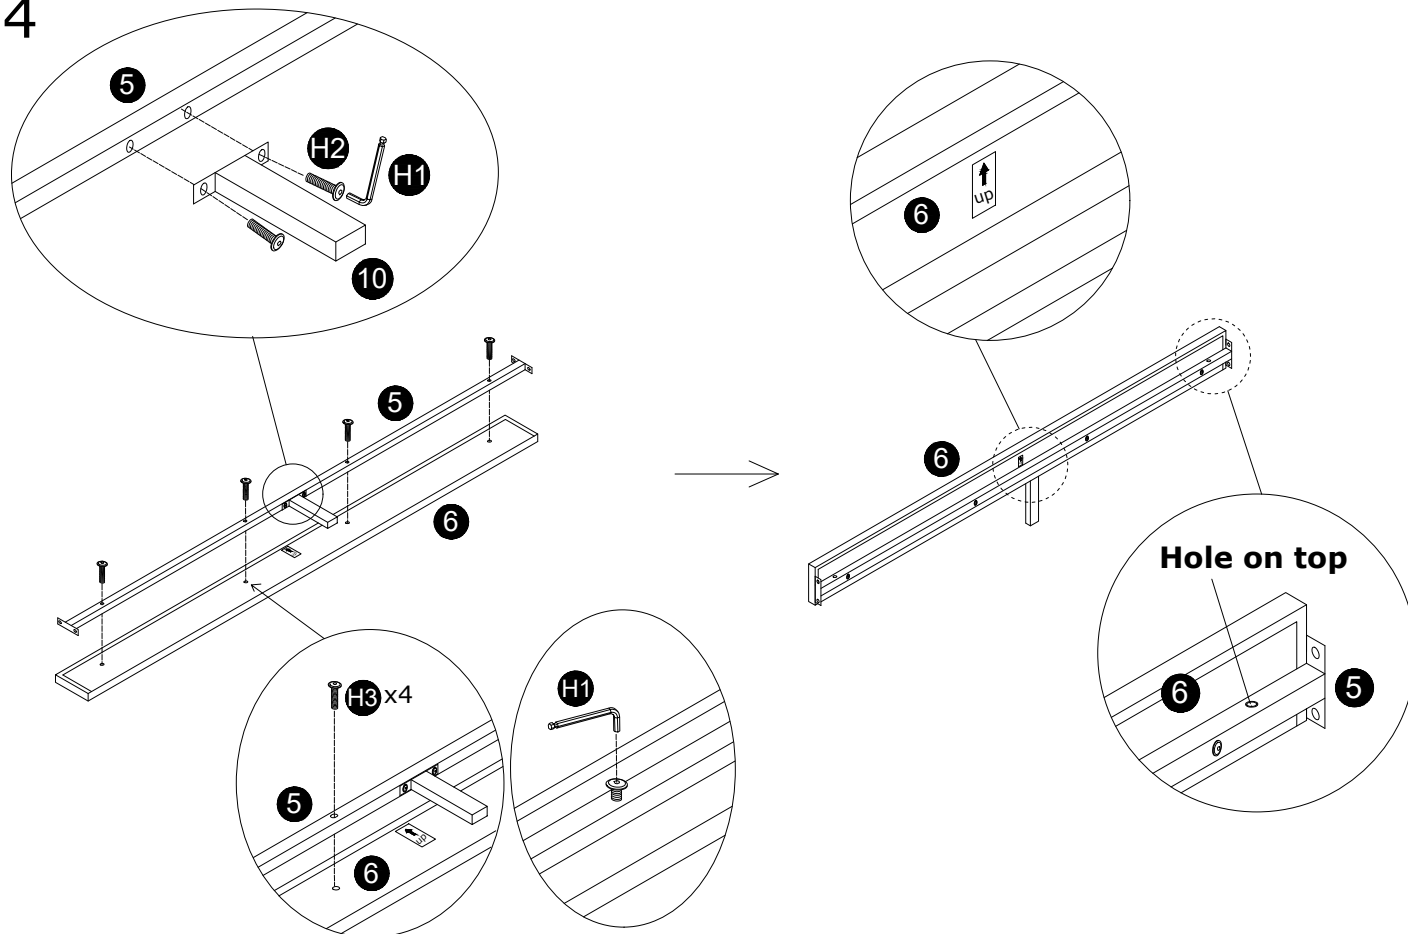


5

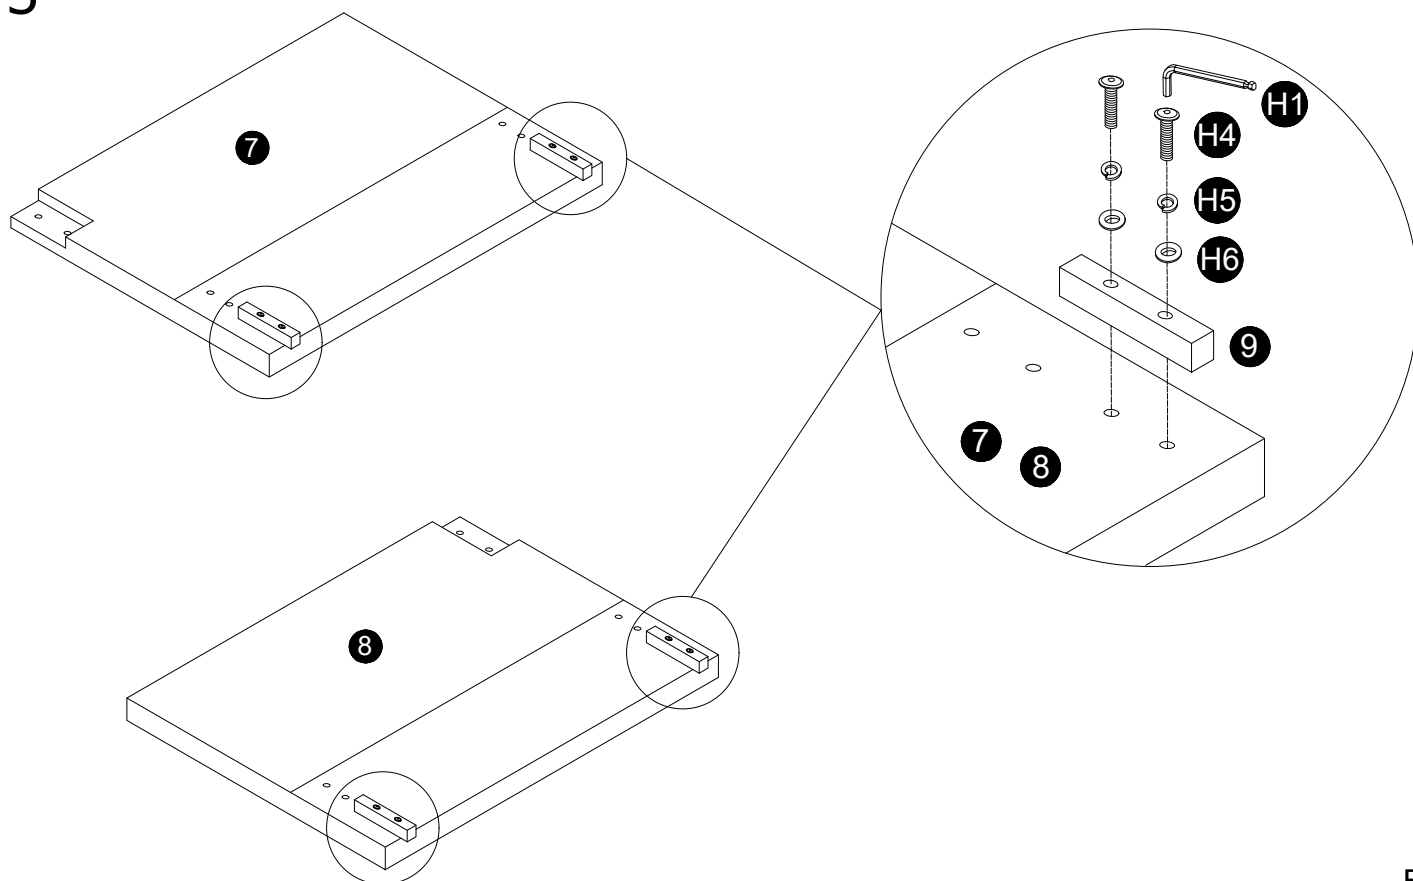





6

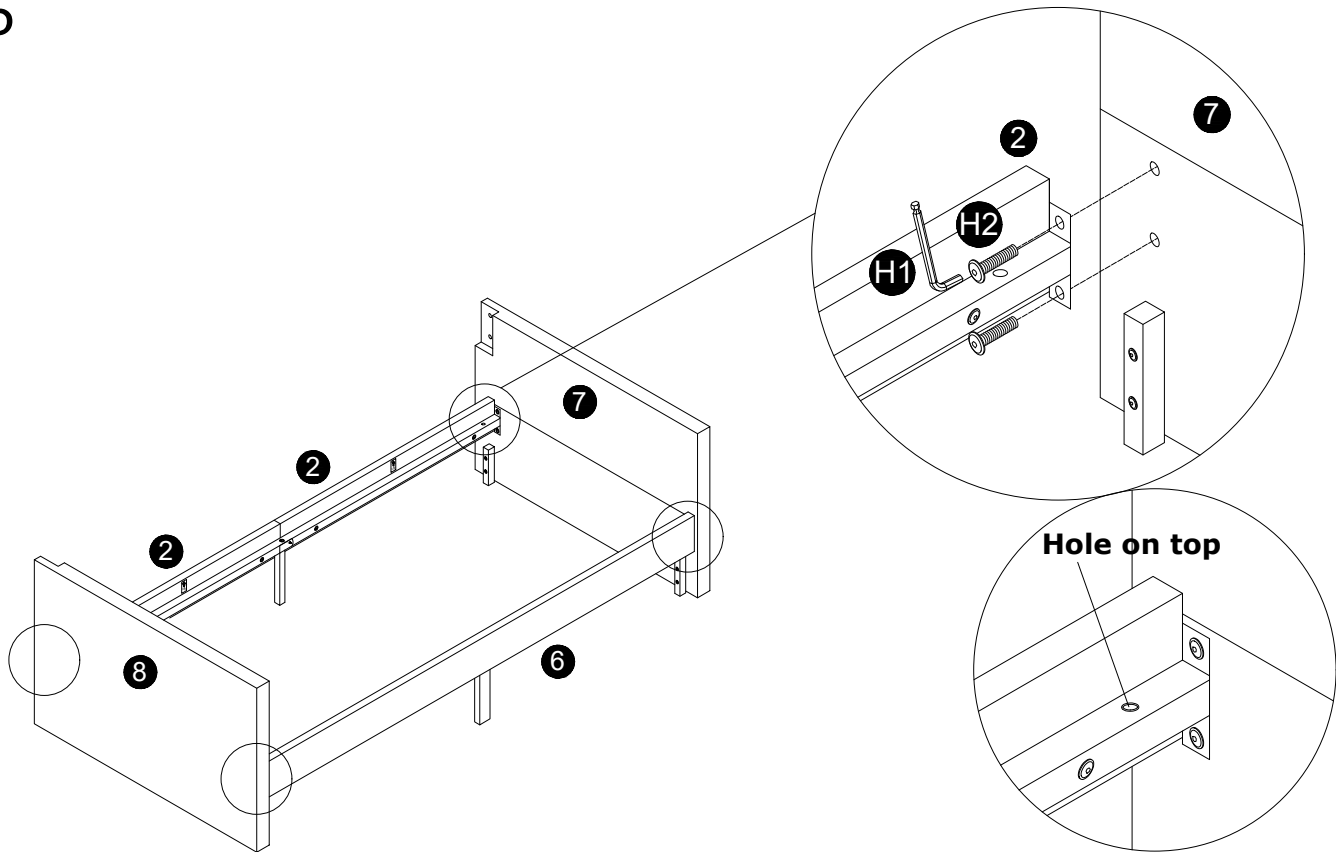

7

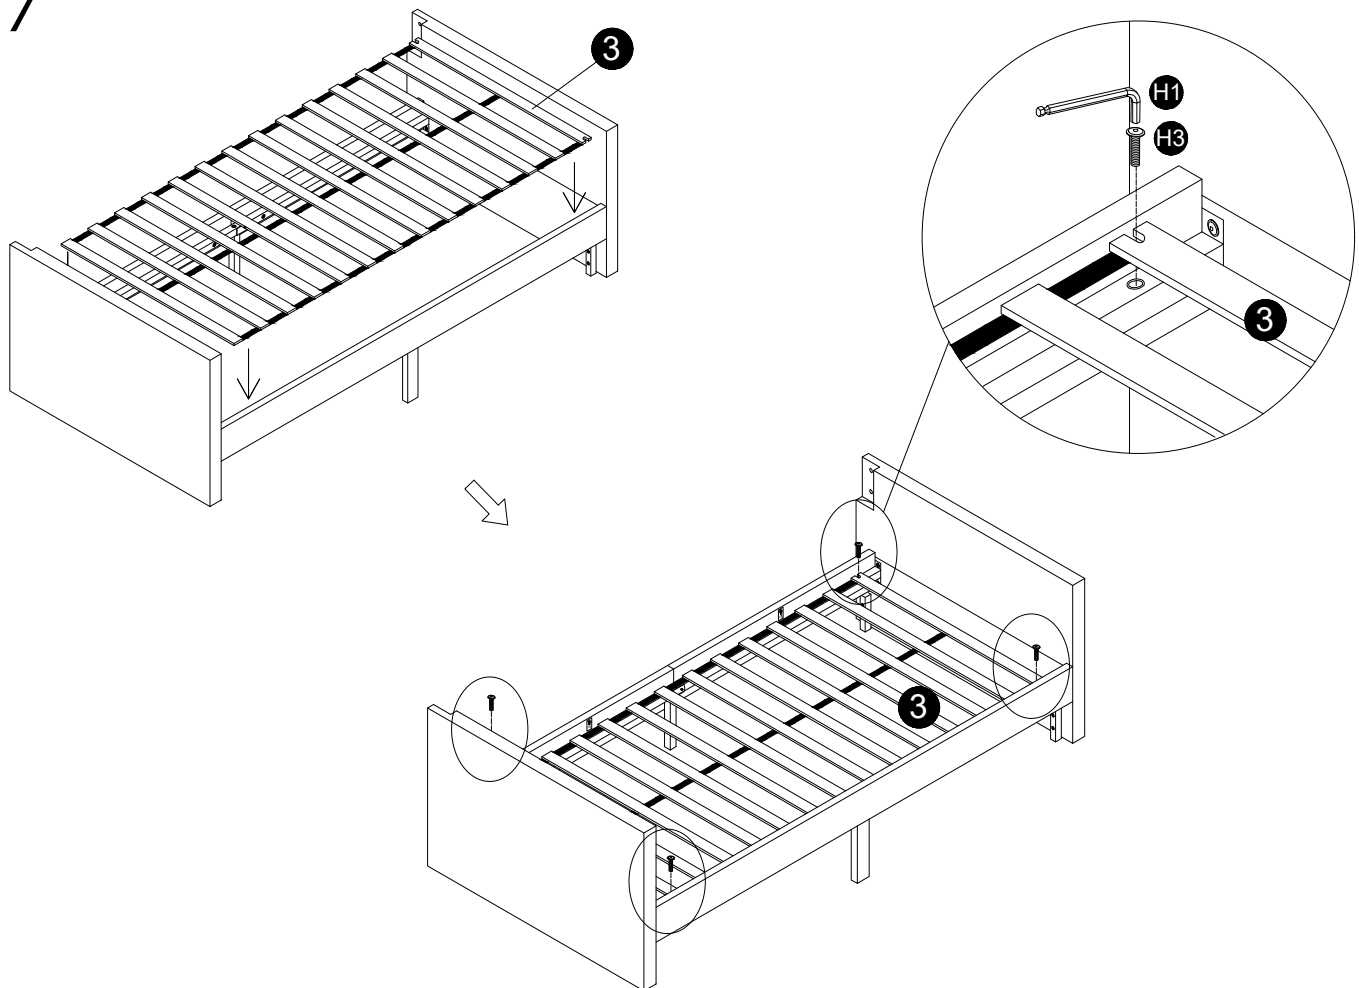


8

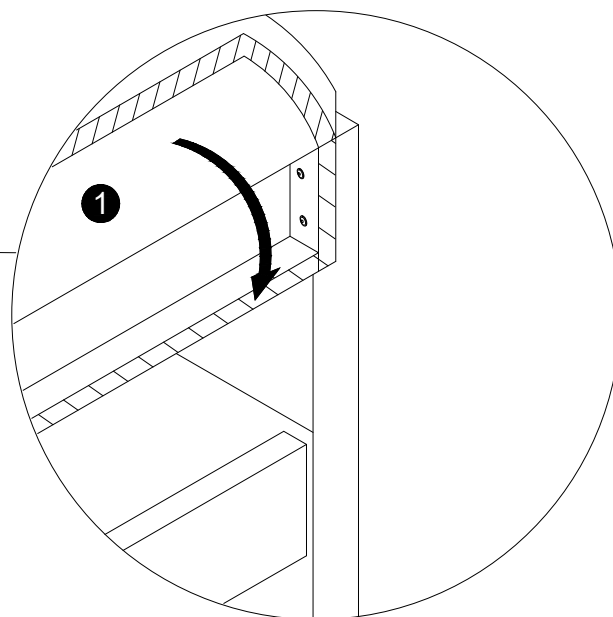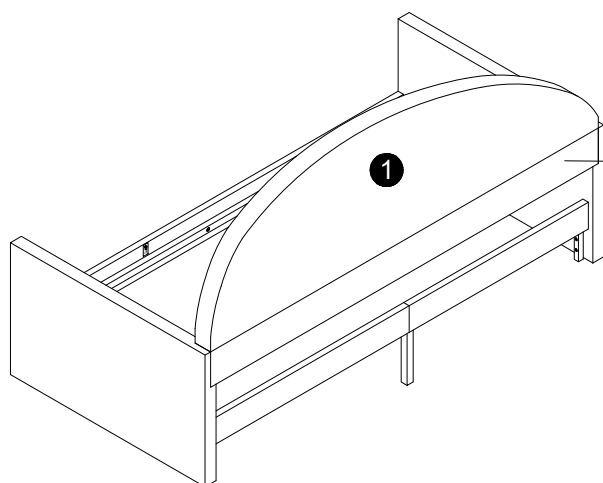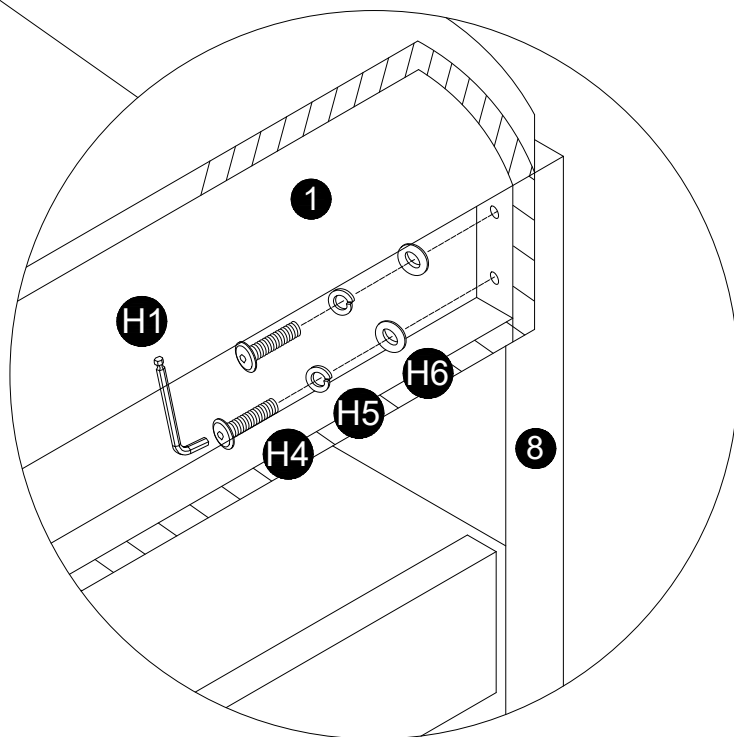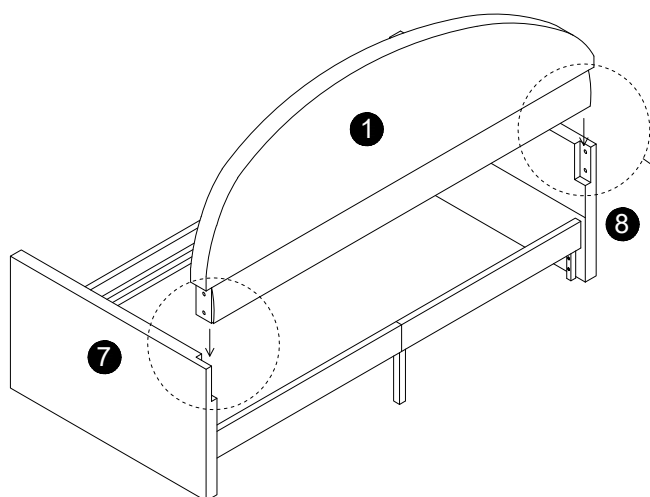


9

Put plastic baseboard (A) flat on the floor, assemble side baffles (C&D), following the assemble picture aligning them inward, ensuring all fit into all slots, and push forcefully until the side panels are flush with the baseboard.

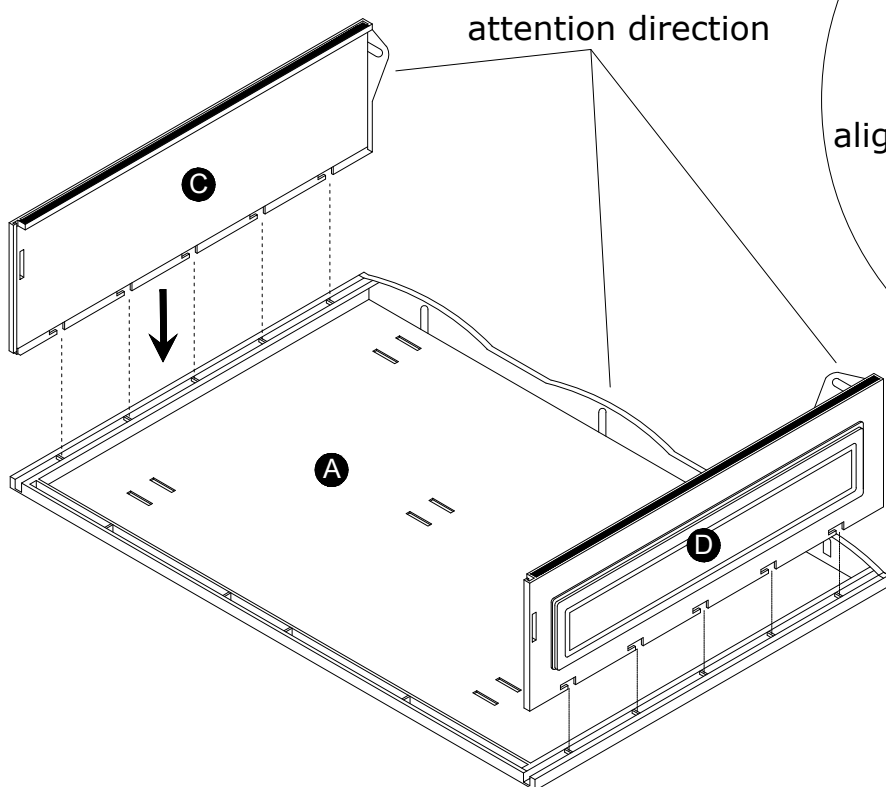


10

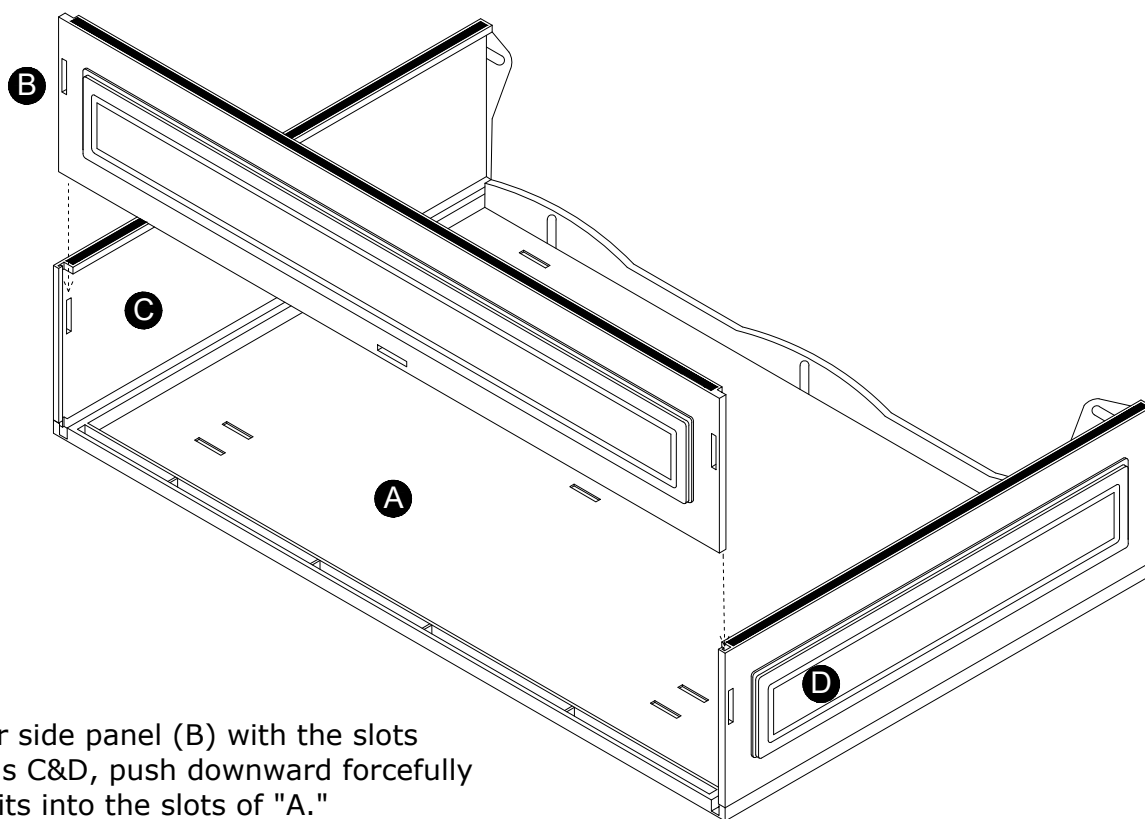


Align the rear side panel (B) with the slots on side panels C&D, push downward forcefully to ensure B fits into the slots of "A."



- 11** Take clip H14 and secure side panels D&B, B&C, and A&B, ensure the clips fully engage with the slots.

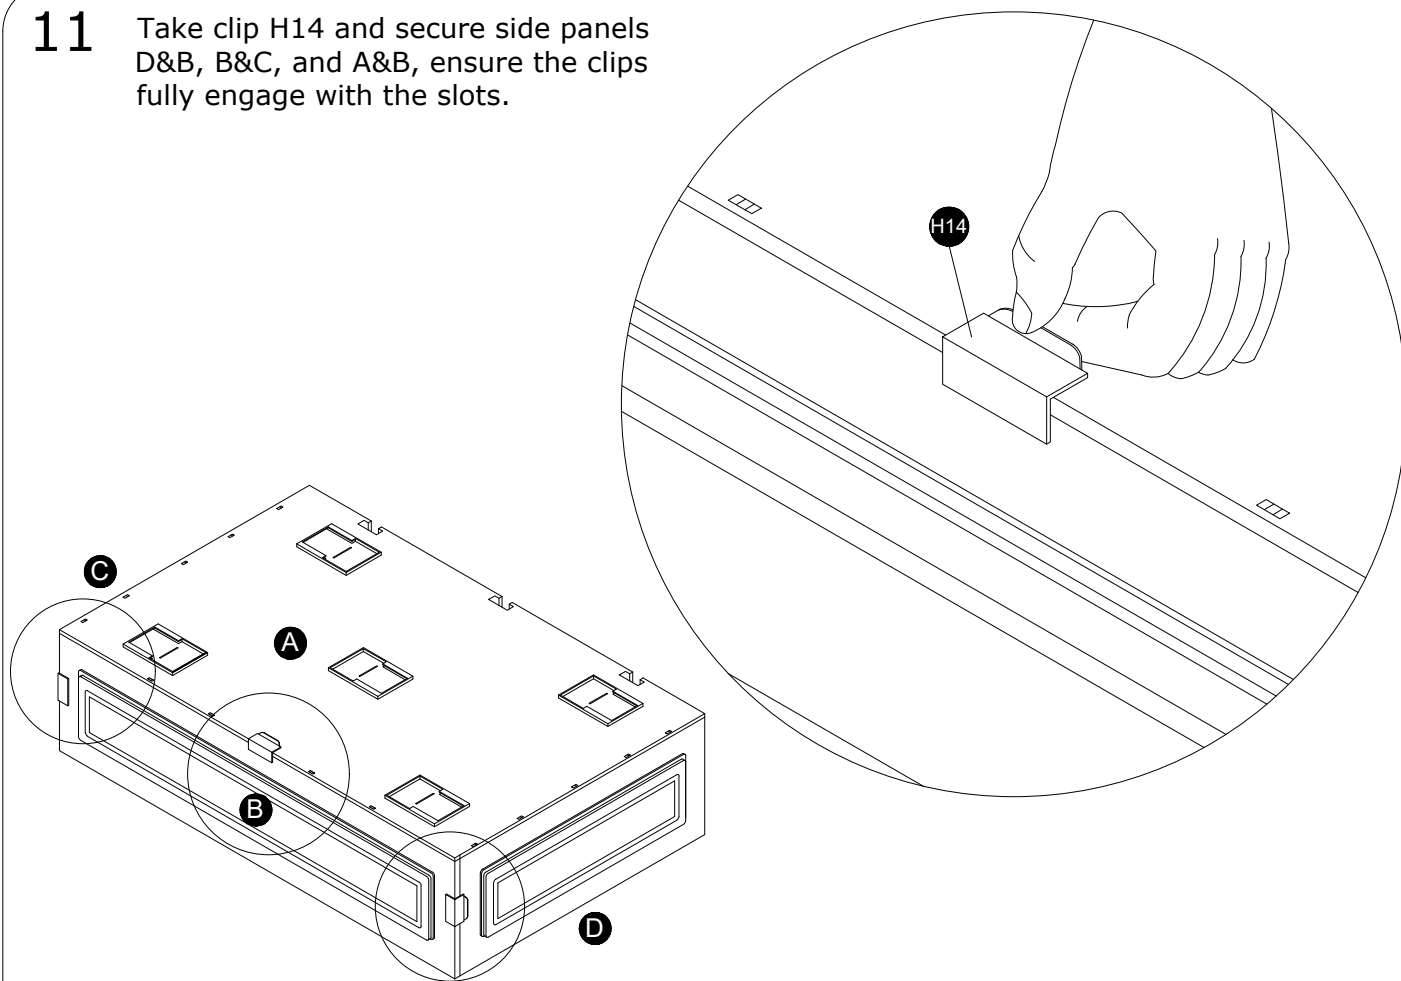


- 12** Install wheels "E" by forcefully pushing them into the slots; once pushed to the bottom, a protrusion will engage with the metal sheet to prevent them from easily coming off. All five part "E" wheels need to be installed correctly.

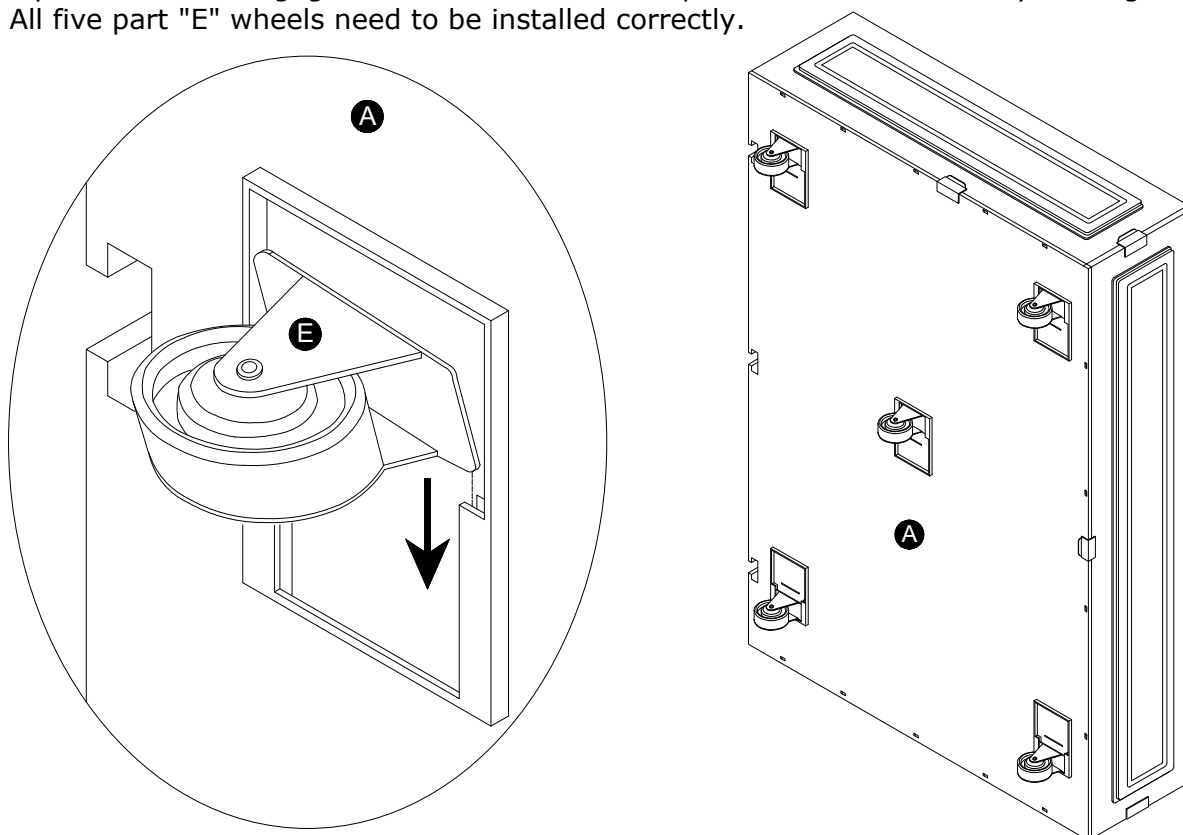

- 13** Take screw H10, first install it into drawer panel 14, then screw in the bottom 3 screws partially leaving them protruding 8mm (for easy installation). Insert the drawer bottom A into the three screws of the panel, ensuring no distortion of the drawer and panel to prevent plastic parts from breaking during installation.

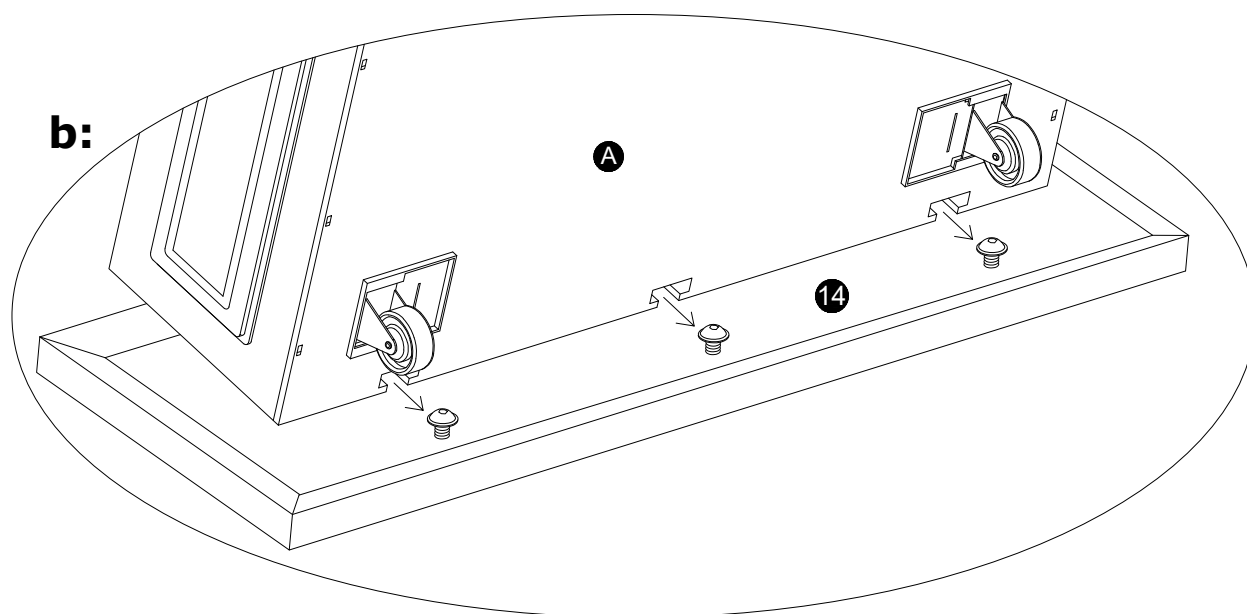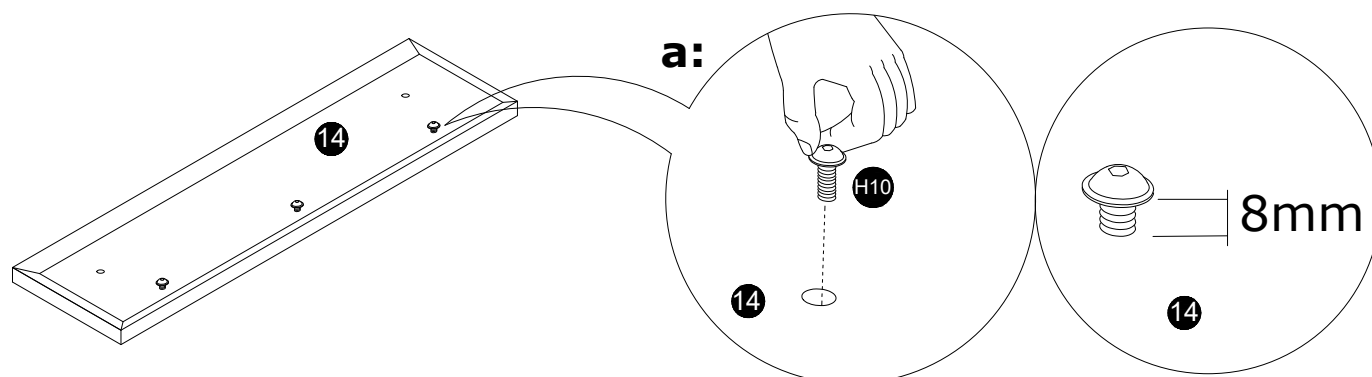


14

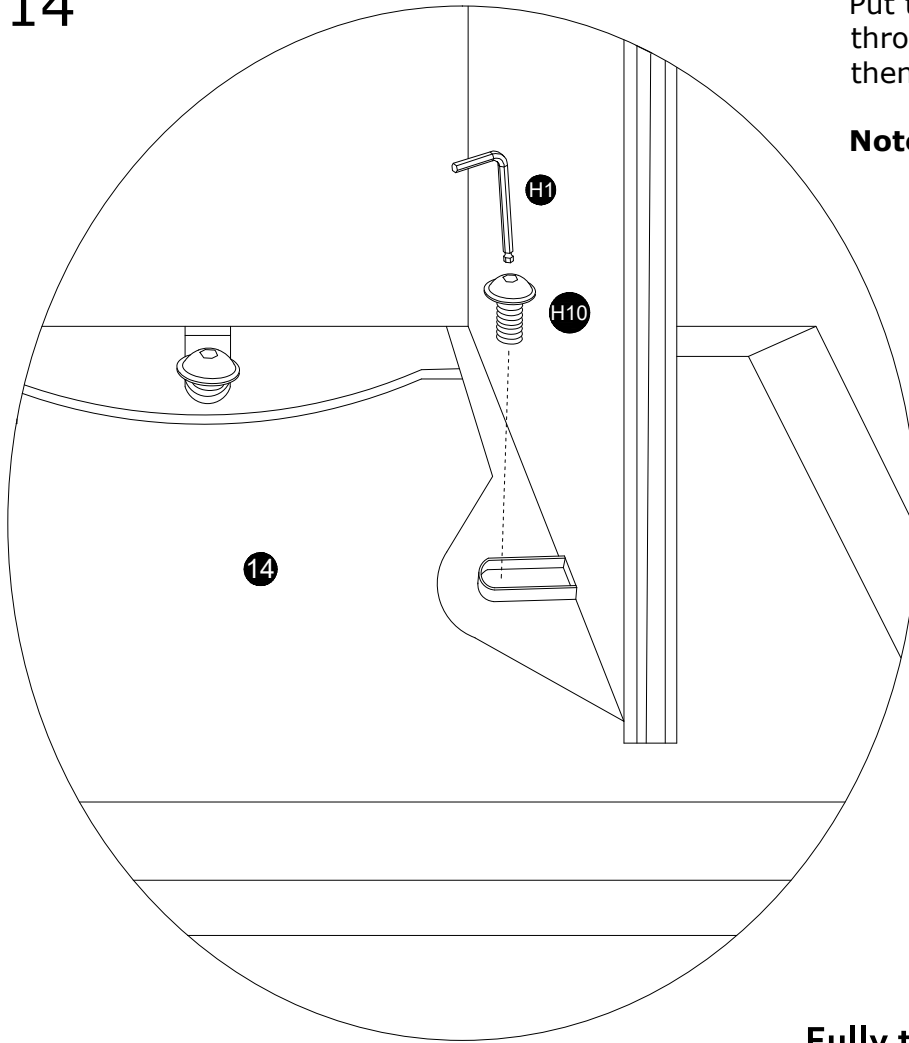


Put the drawer flat, install screw H10 through the holes in drawer sides C&D, then tighten all screws.

Note: Plastic drawers should not be installed with power tools; tightening manually is sufficient.

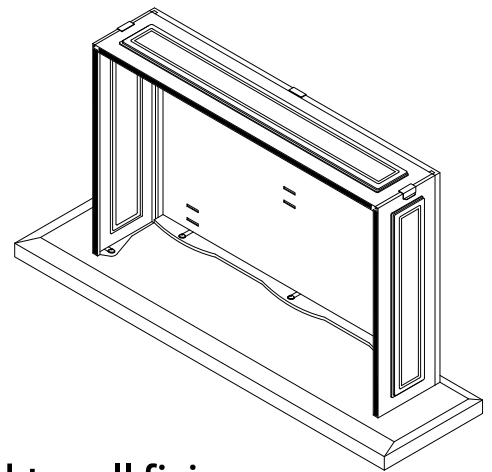

Fully tighten all fixings.

15

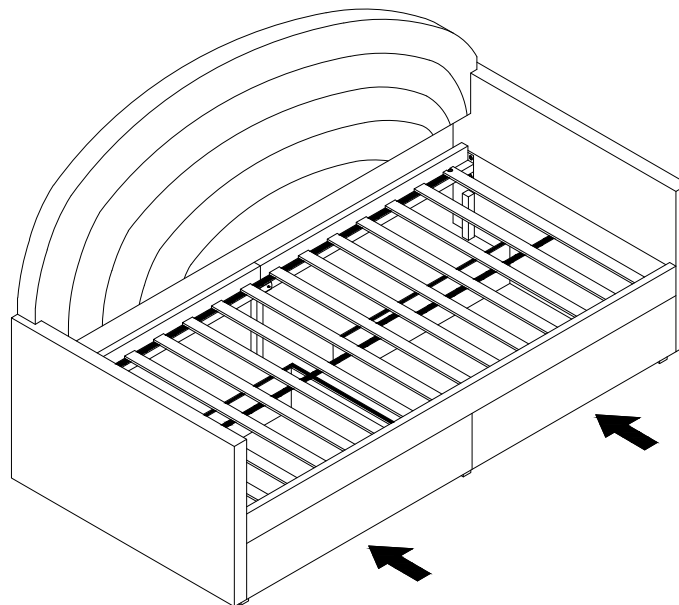

Job Complete !

In the interest of our environment please dispose of all packaging thoughtfully.