




# INSTRUCTION

AUGWALSCKD

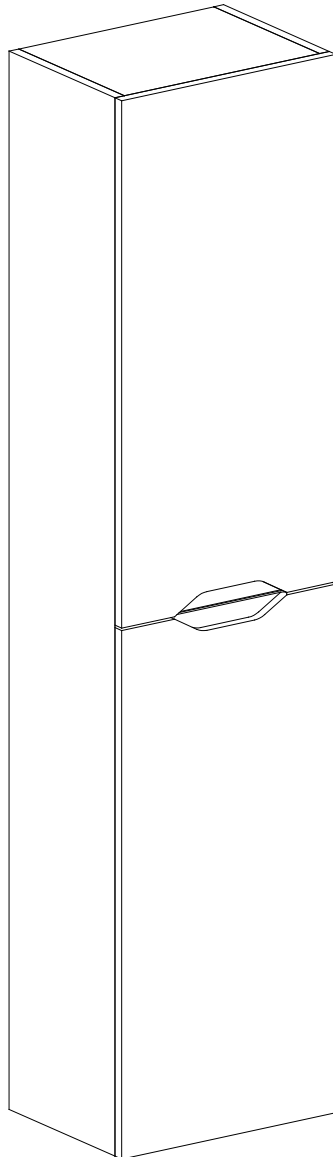


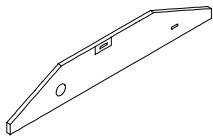


Spirit level




Tape measure  
(3m~5m)

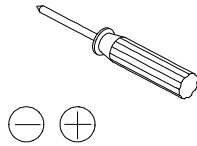

Screwdriver

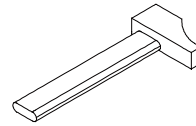

Hammer

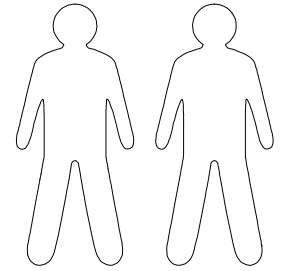


Electric drill




Drill bit  
(Ø8)



Pencil

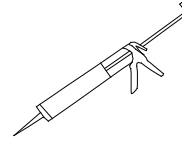


Silicone

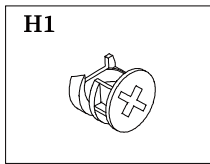


H1

16\*

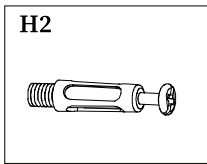


H2

16\*

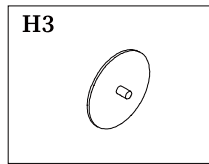


H3

16\*

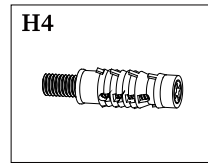


H4

12\*

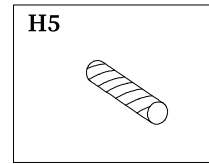


H5

8\*φ8\*30

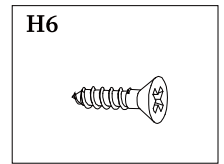


H6

24\*φ4\*16

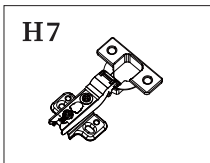


H7

4\*

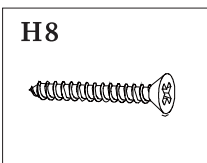


H8

5\*Ø4x28

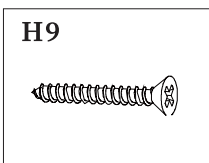




H9



6\*Ø4x50

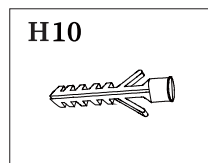




H10

6\*Ø8x40

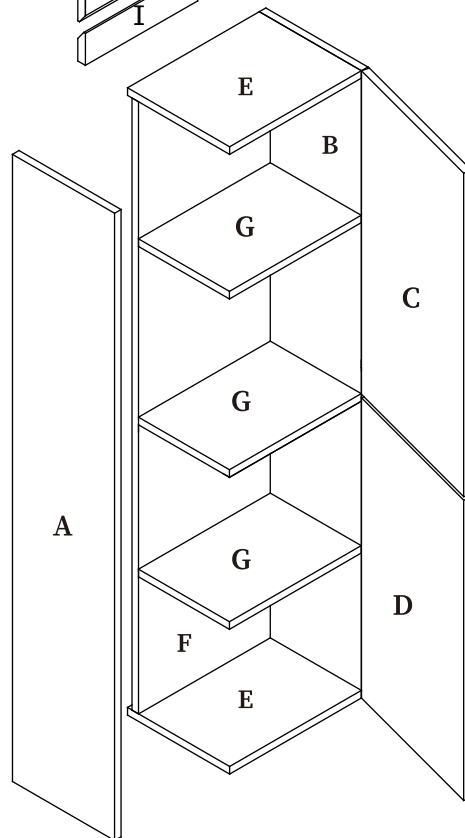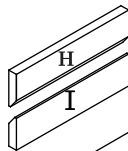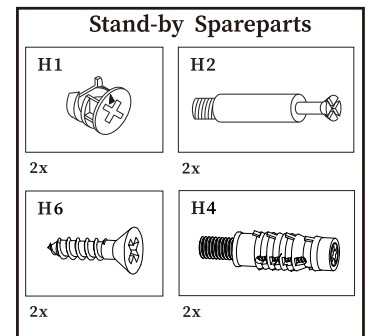

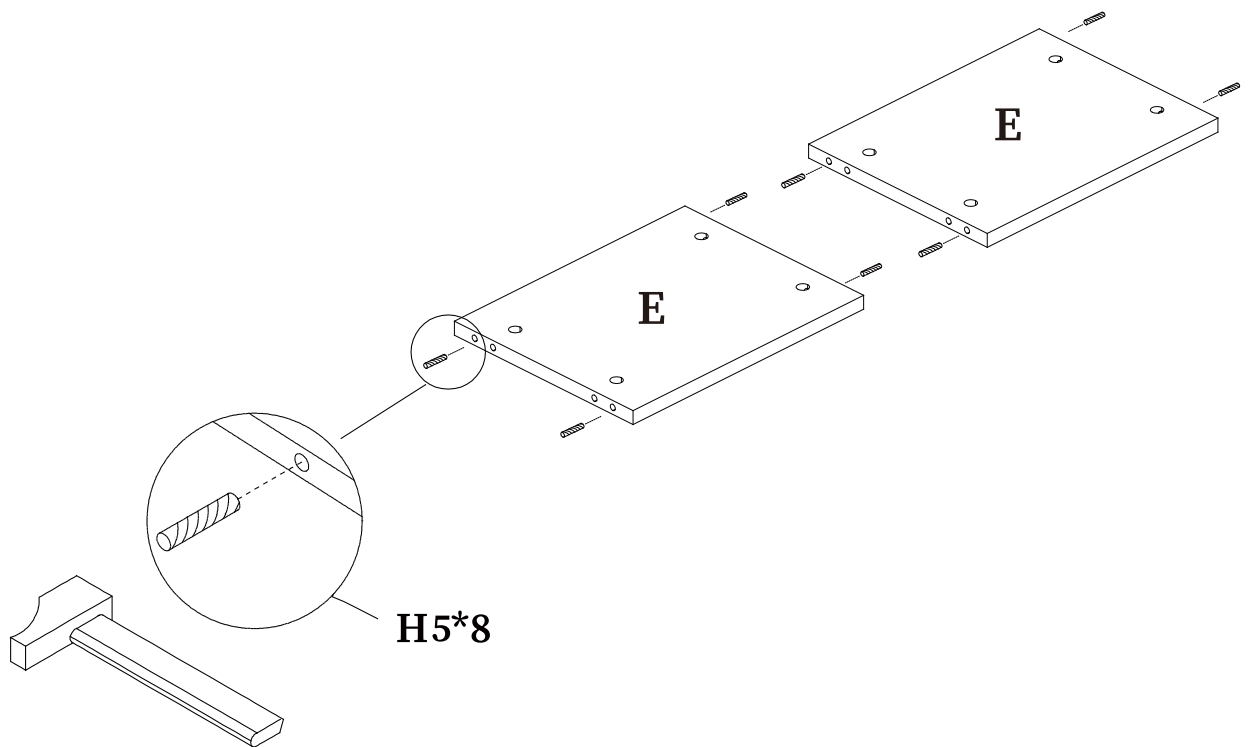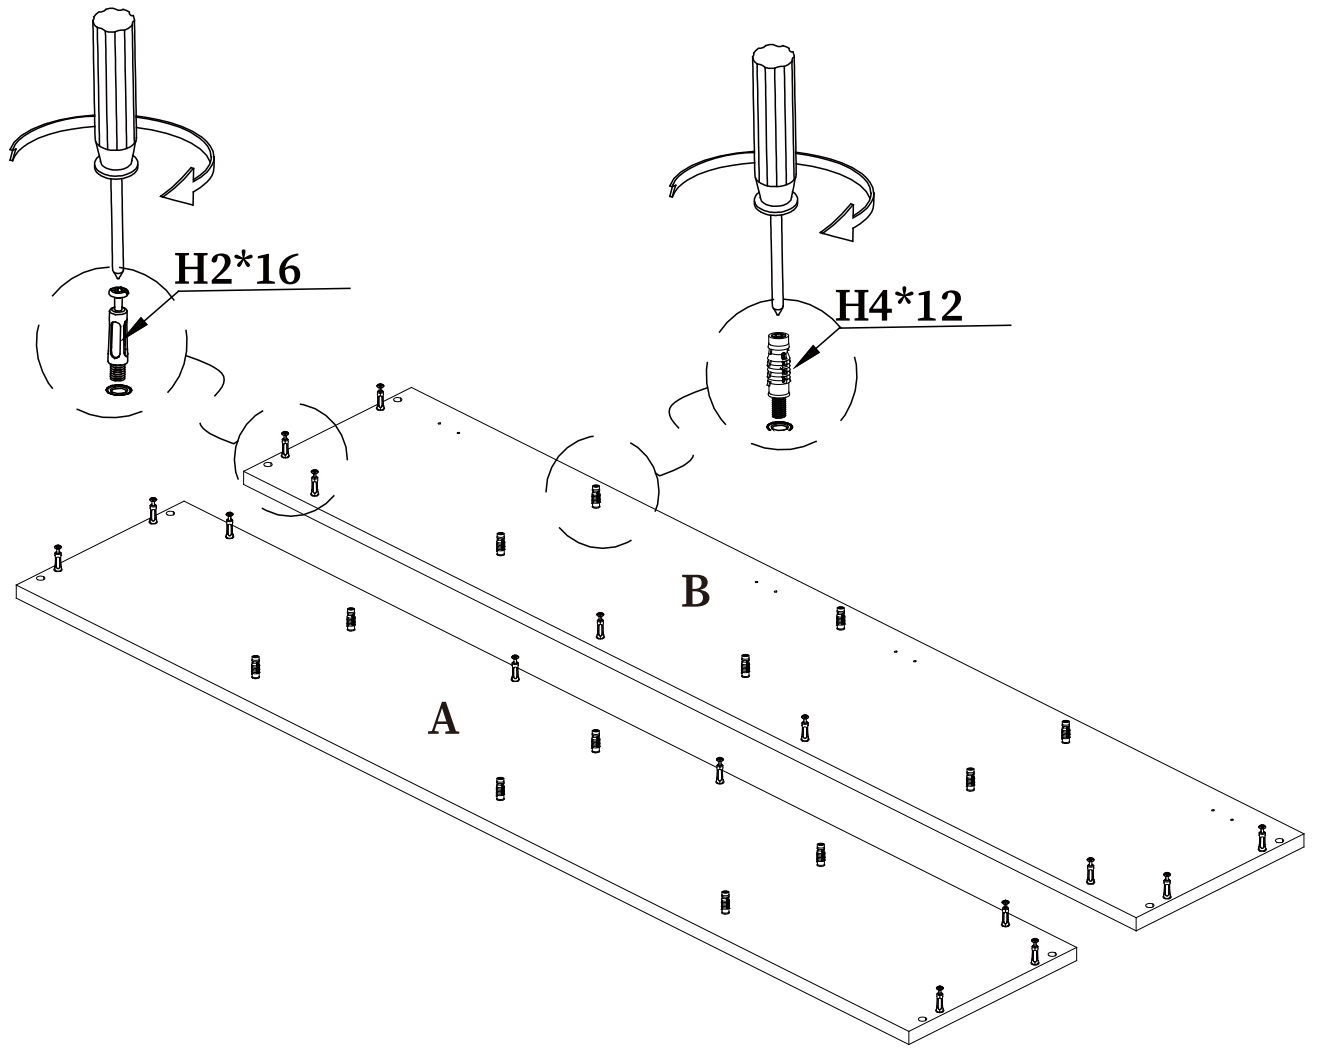

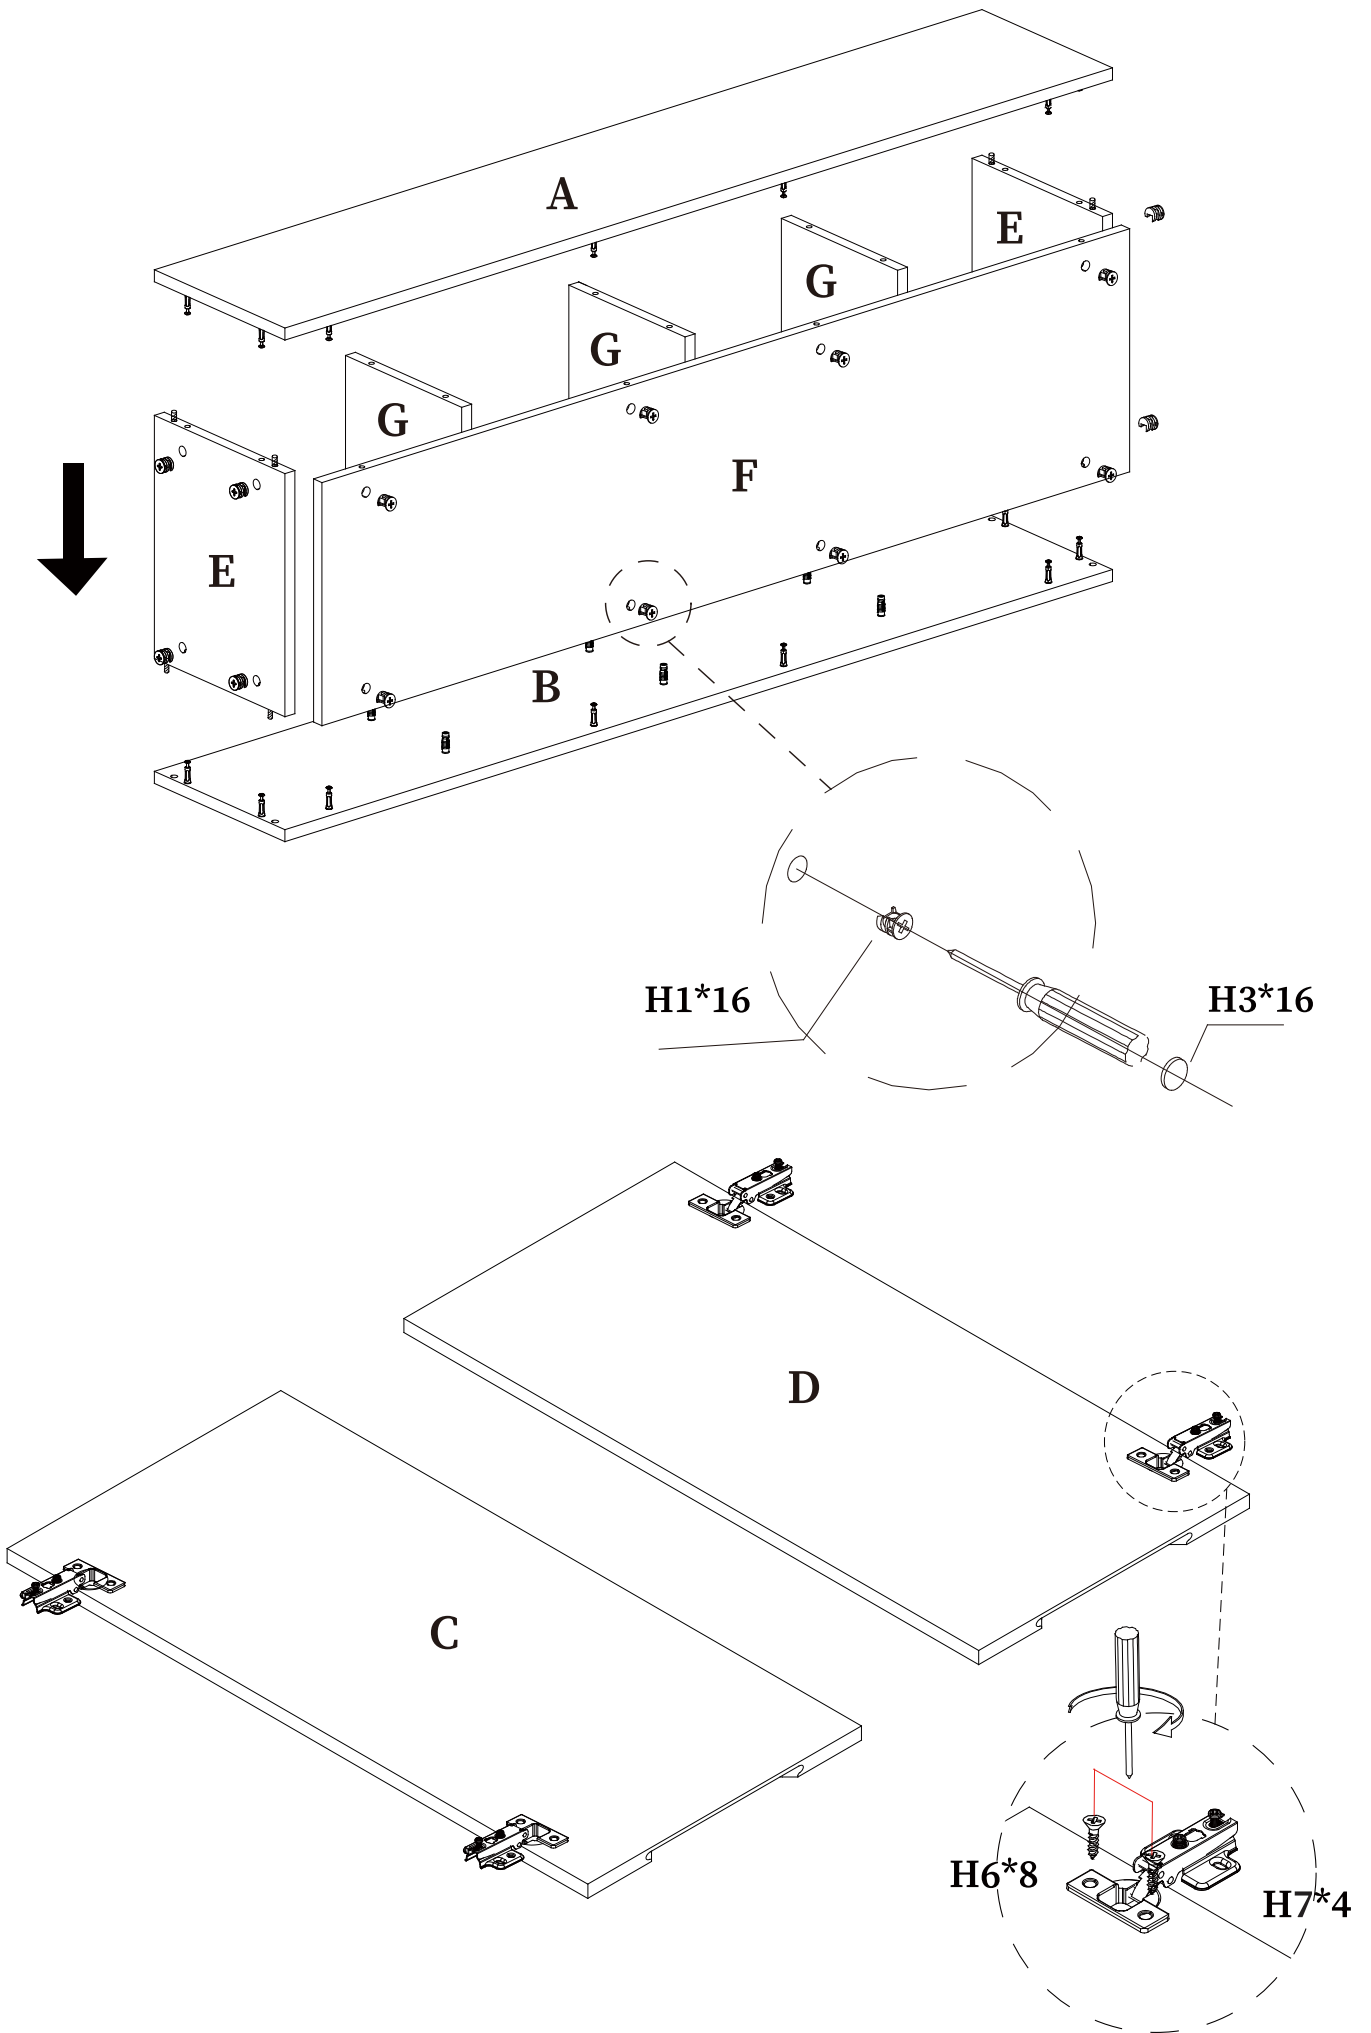

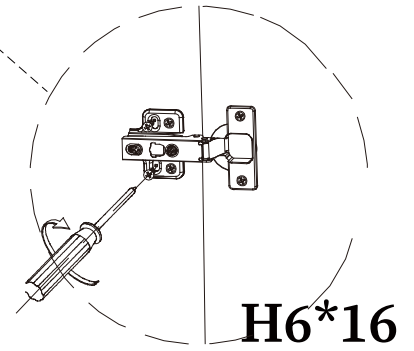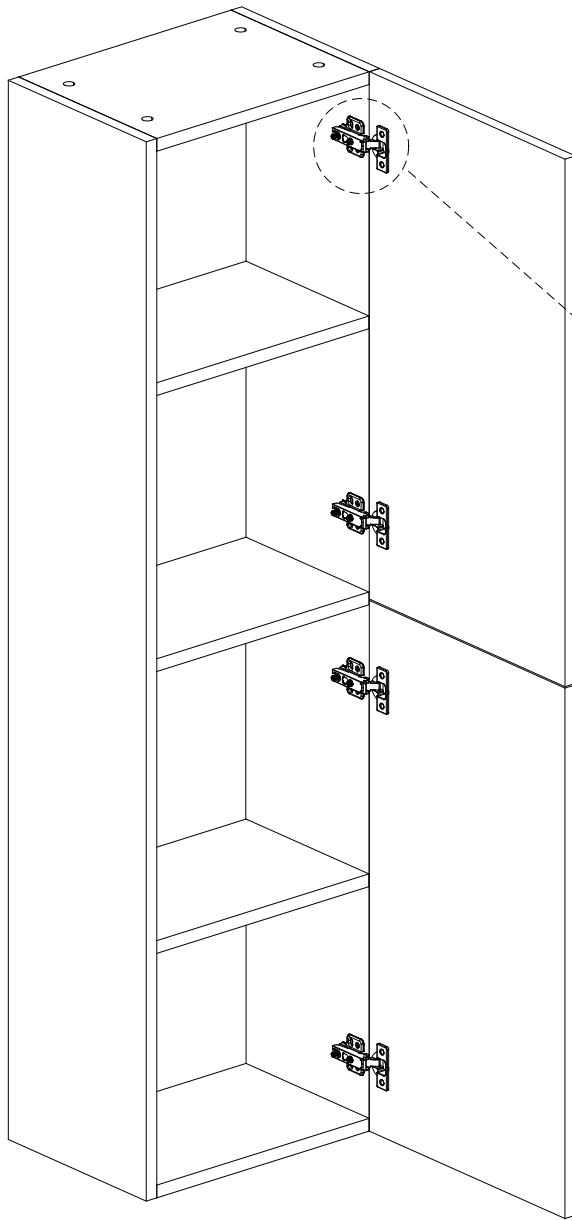

### DOOR ADJUSTMENTS

