


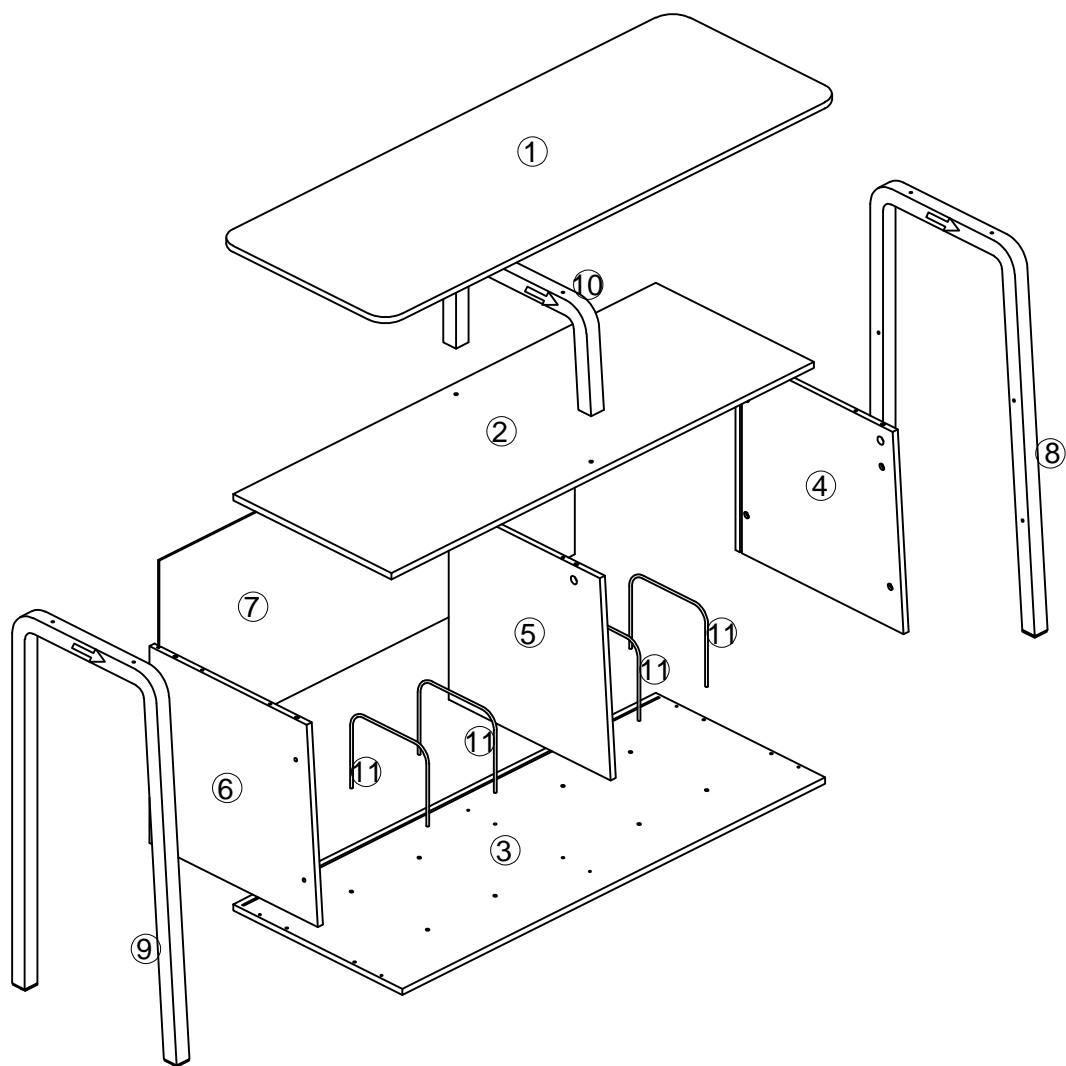














ASSEMBLY INSTRUCTION

Packaging Details







A X12+1  Ø6x30mm	B X6+1  Ø15x9.5mm	C X6+1  Ø6x35mm	D X6+1  Ø5x38mm	E X6+1  M6*38mm	F X18+1  M6*25mm
G X4+1  Ø7xØ3.5x12mm	H X8+1  15x14x10mm Ø6*Ø3*16mm	I X1  M4	J X1 	K X2 	L X1 



Step 1

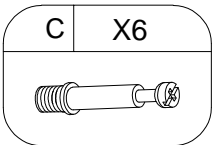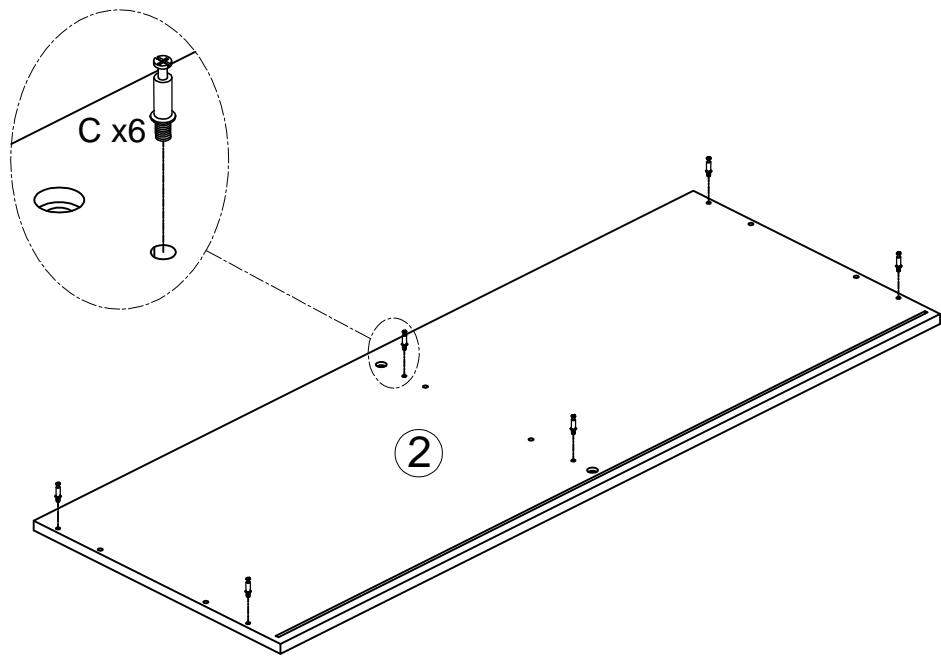



Step 2

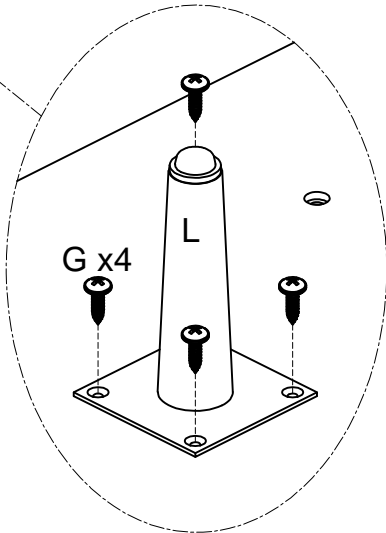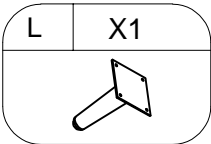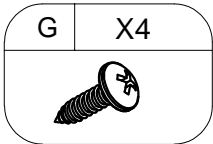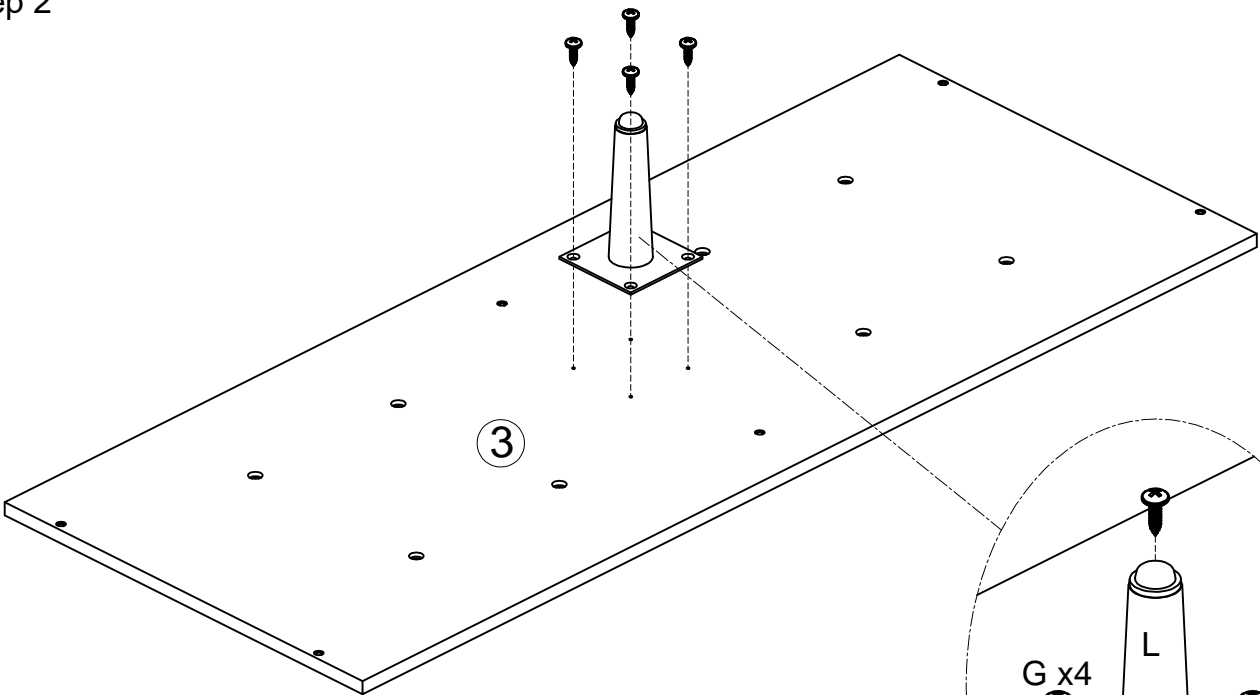


Step 3

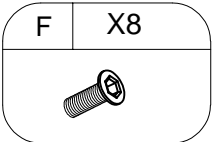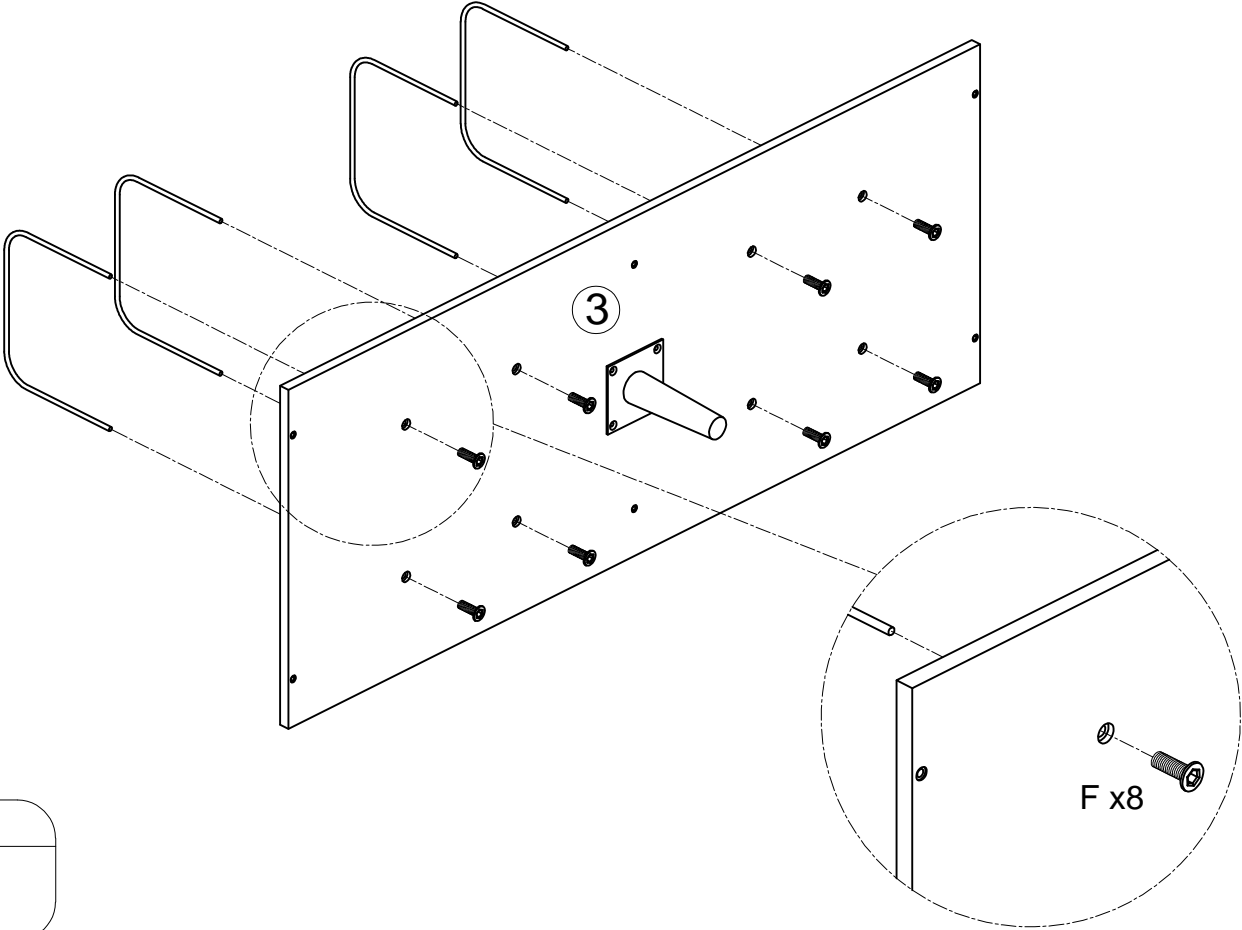


Step 4

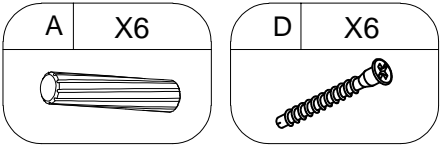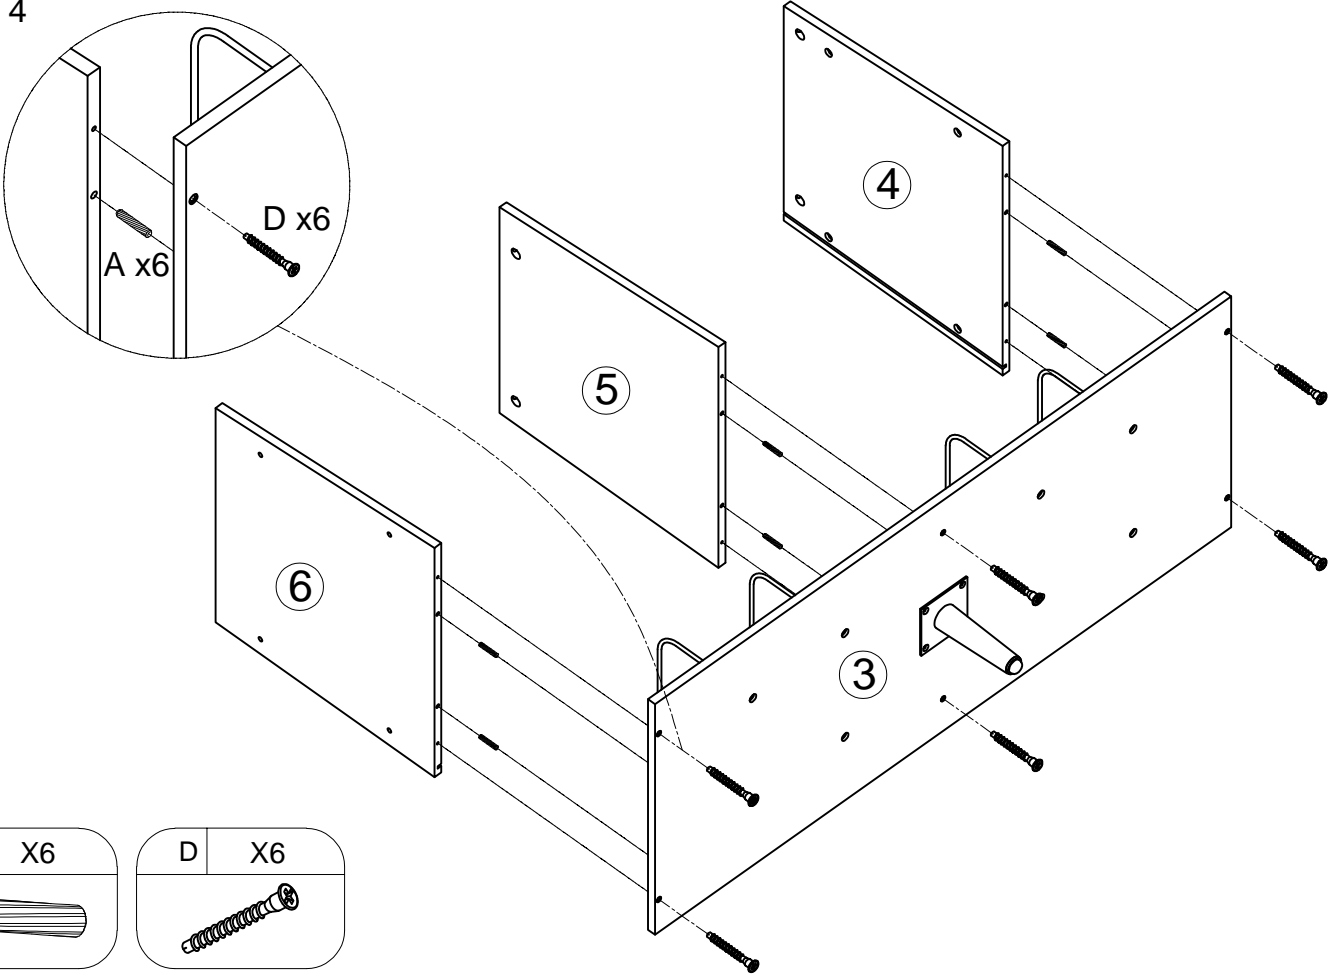


Step 5

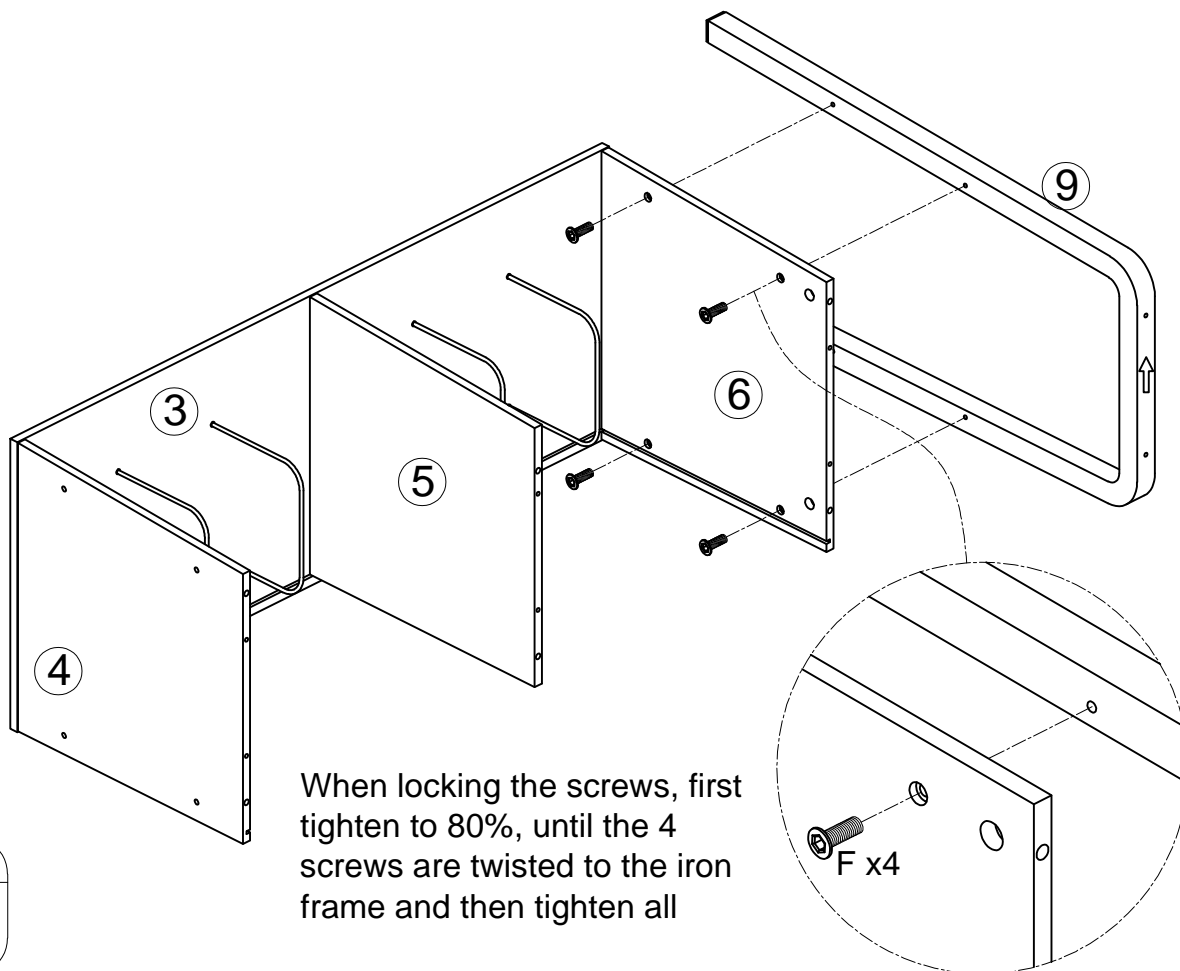


Step 6

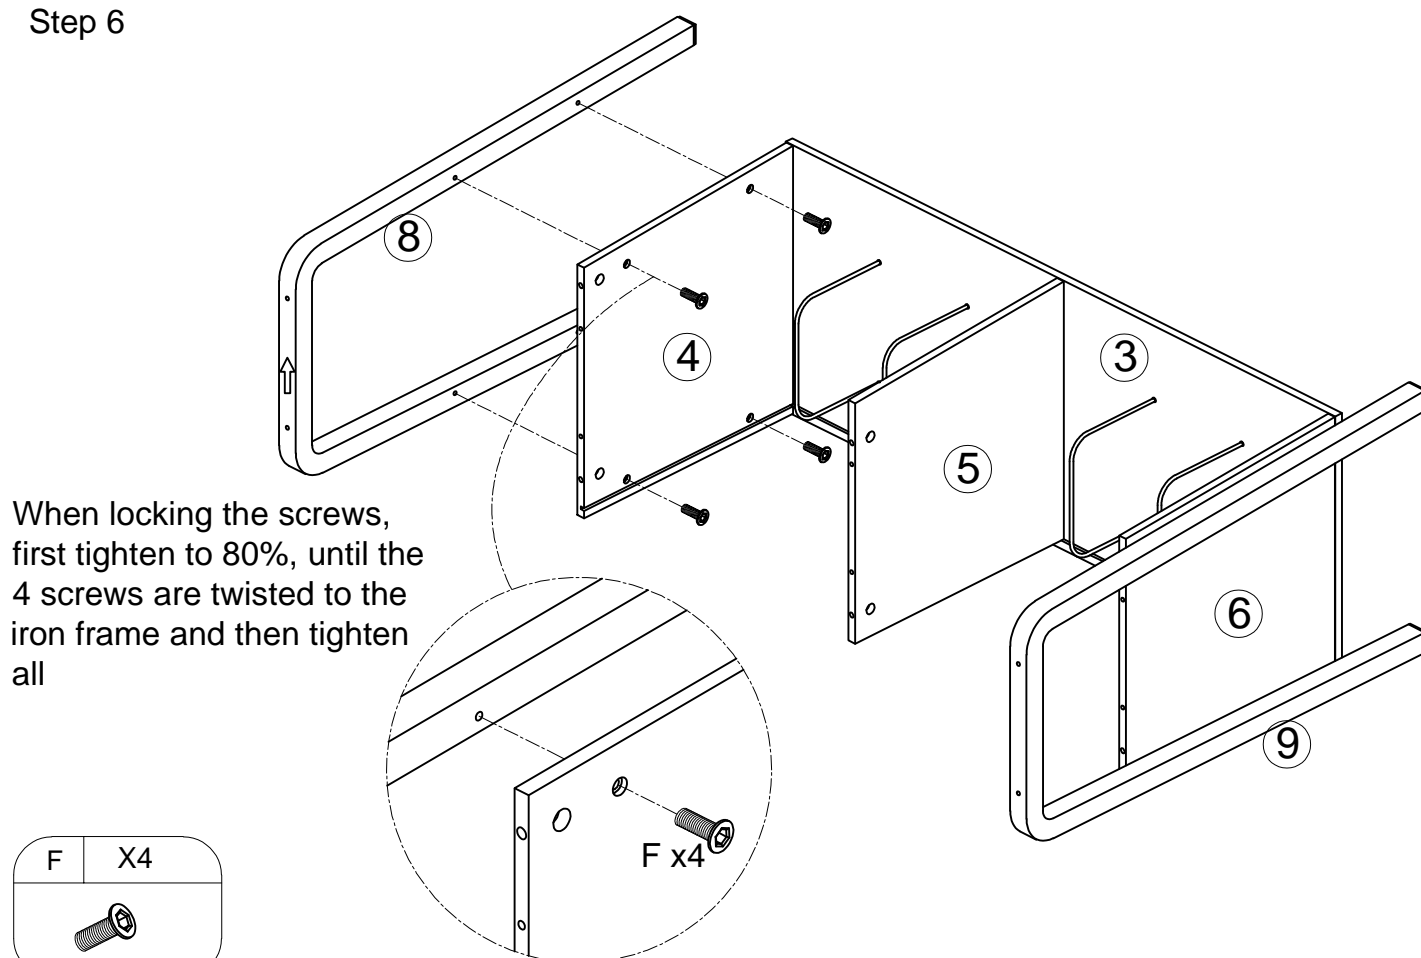






Step 7

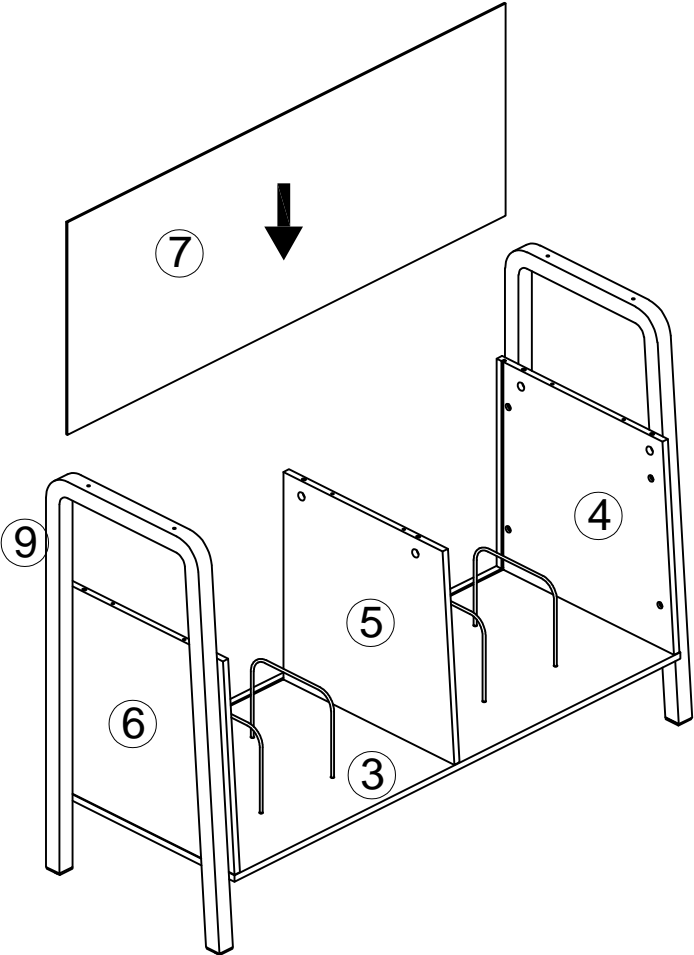




Step 8

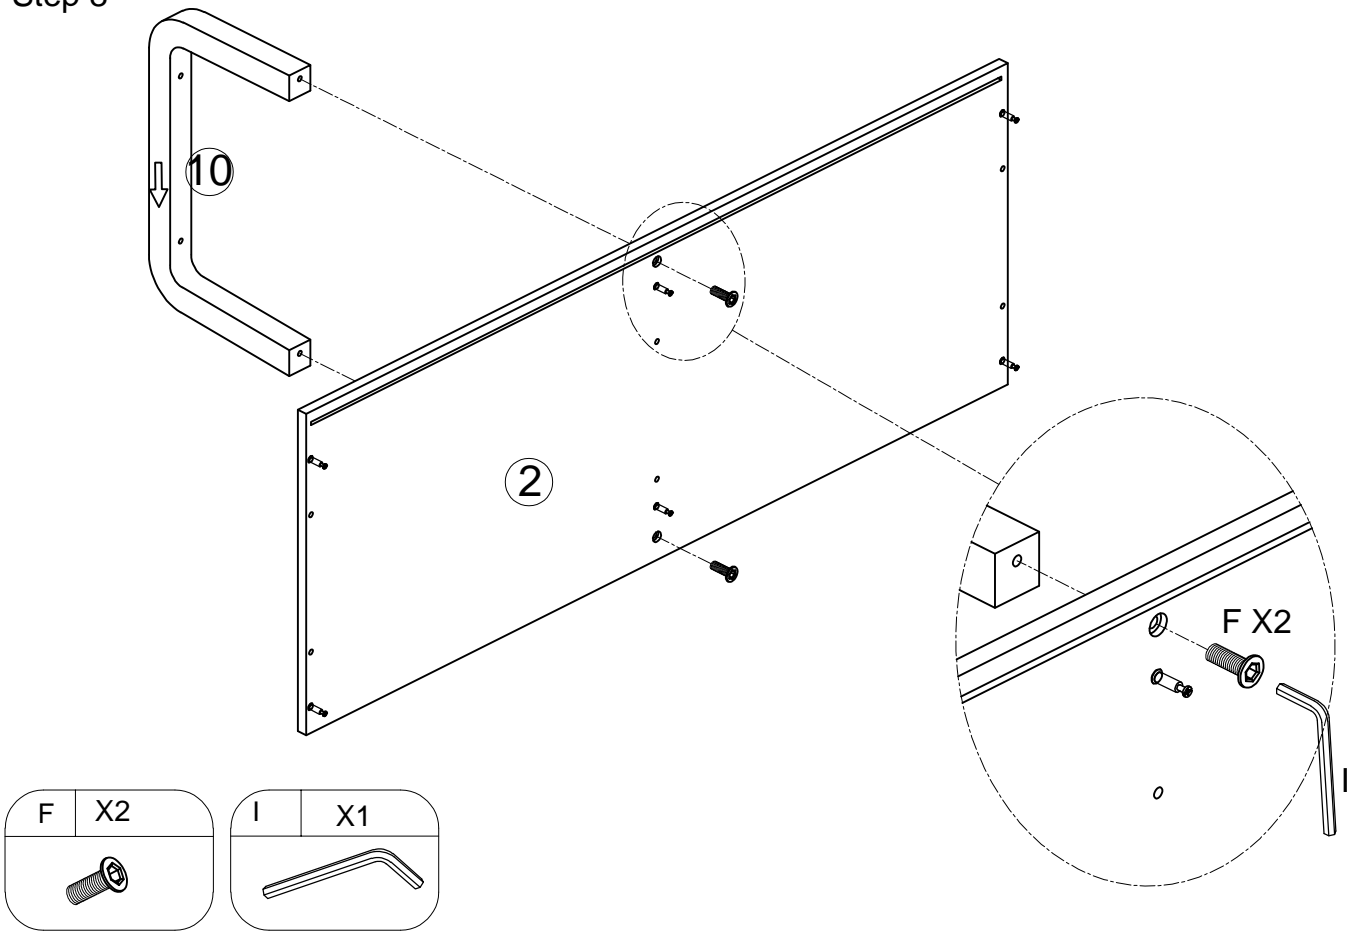

Step 9

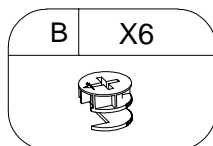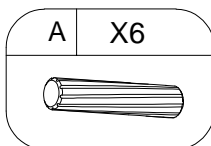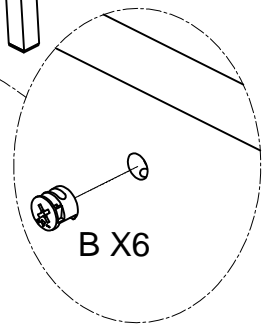
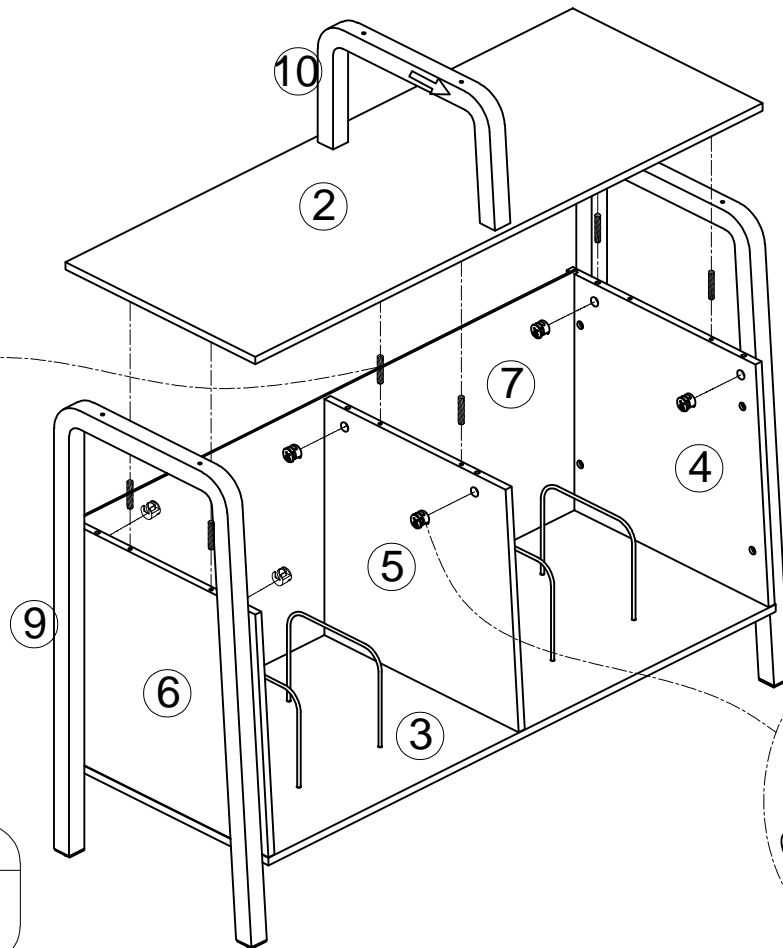
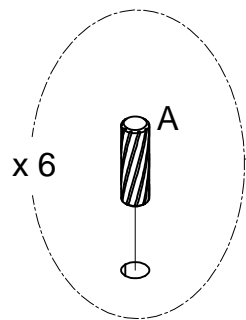


Step 10

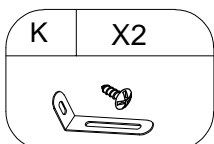
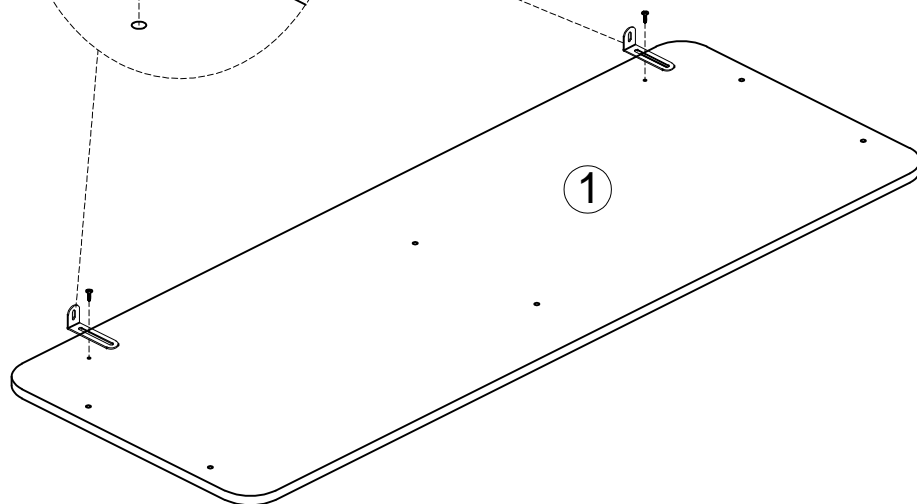
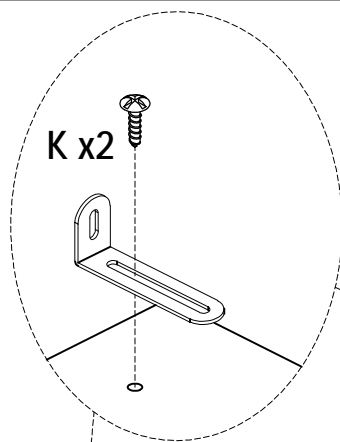


Step 11


When locking the screws, first tighten to 80%, until all 6 screws are twisted to panel (1) and then tighten all

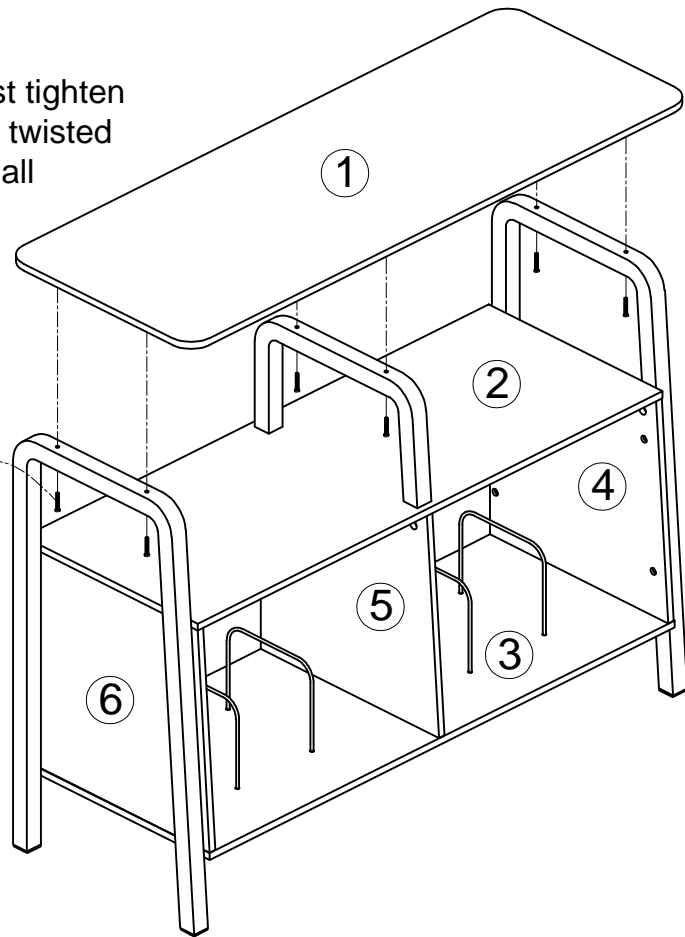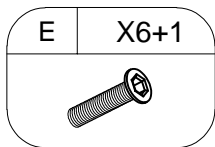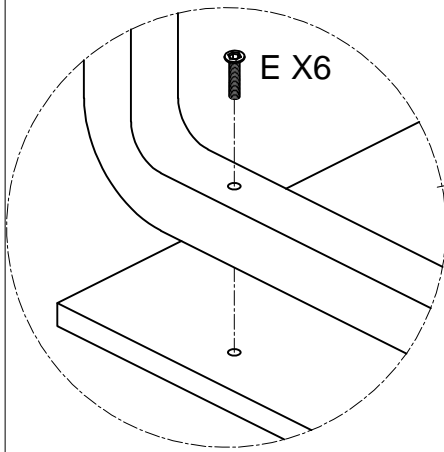

Step 12

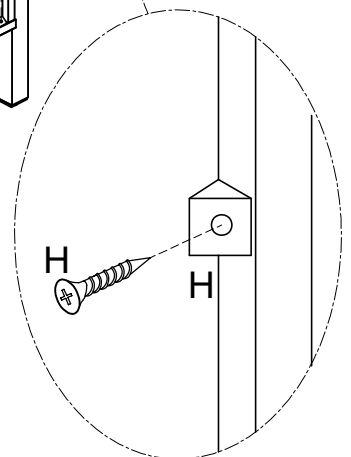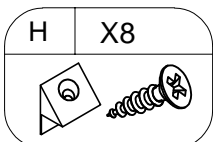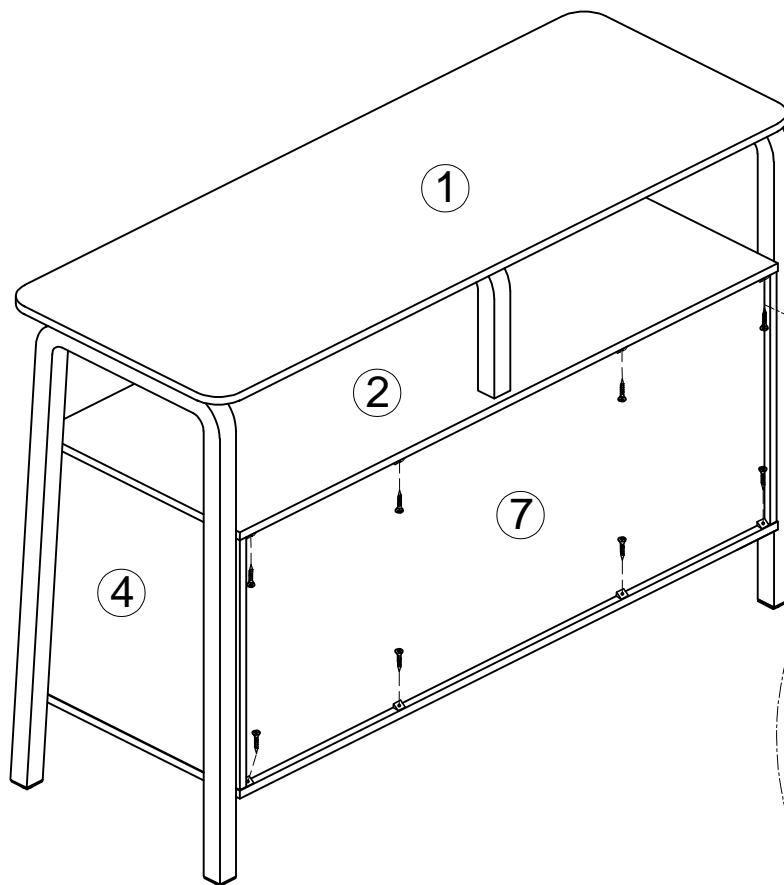

Step 13

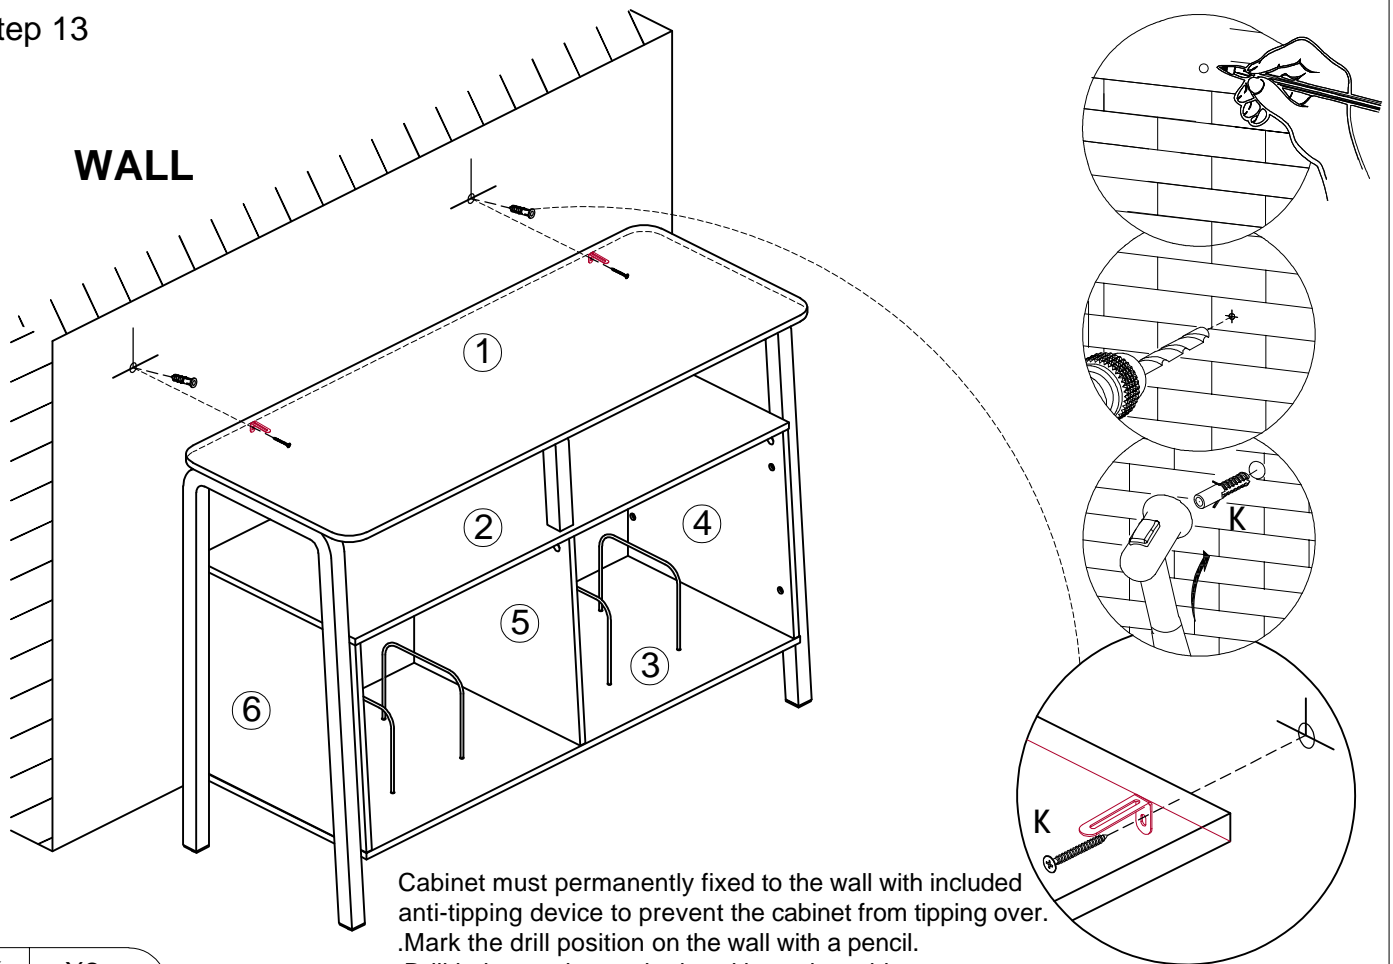

Cabinet must permanently fixed to the wall with included anti-tipping device to prevent the cabinet from tipping over.
 .Mark the drill position on the wall with a pencil.
 .Drill holes on the marked position using a bit.
 Gently insert the wall anchor (K) into the drilled hole with the help of a hammer.
 .Fixed the cabinet to the wall with provided screws (K).

Step 14

