


INSTALLATION



Product Manual

Version: 740004US-01-26A-AA

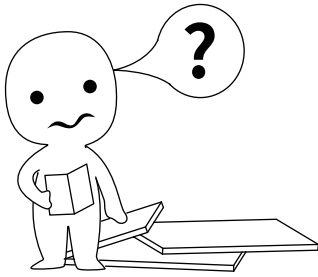



IMPORTANT INFORMATION!

please read the entire manual before starting to assemble and/or using this product. follow the manual thoroughly and keep it for further reference.

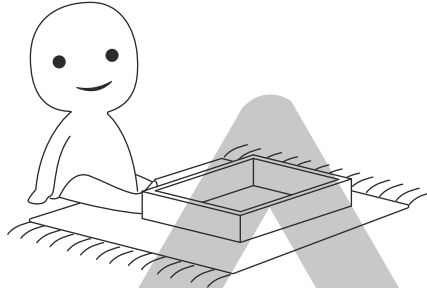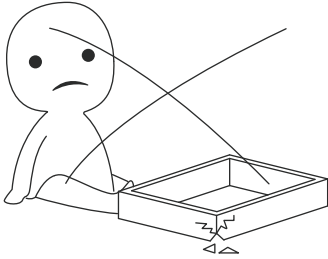




AVOID SCRATCHES!

In order to avoid scratching this furniture should be assembled on a soft layer-could be a rug.

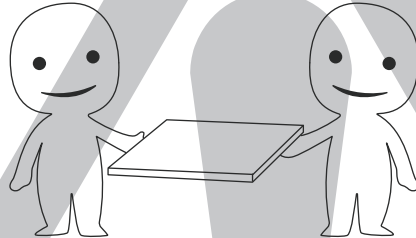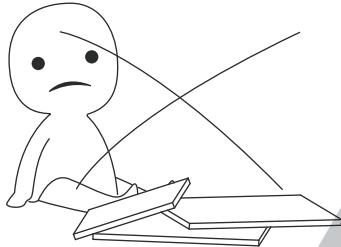

IMPROVE EFFICIENCY !

Try to find a partner to install with you, which can speed up the installation efficiency and shorten the time.

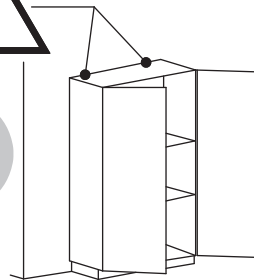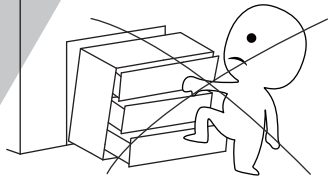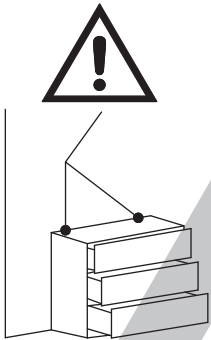

ANTI-TOPPLE WARNING !


Overturned furniture can cause serious or fatal crush injuries. To prevent tipping over, be sure to use the wall attachment, if not included with this product. Please purchase the wall attachment that fit your wall. If unsure, seek professional advice. Please read and follow each step of the instructions carefully.

IMPORTANT !






It is important that any product which is assembled using any kind of screw is re-tightened 2 weeks after assembly, and once every 3 months - in order to assure stability through-out the lifespan of the product.

For regular maintenance and cleaning of the product, for the frame, please use a rag dipped in neutral detergent to fully wipe it, and then dry it with a clean rag. For glass materials, wipe with a rag dampened with water glass cleaner, and then dry with a dry rag.

Do not use an electric screwdriver, and do not use too much force when installing, because the board is easy to break.

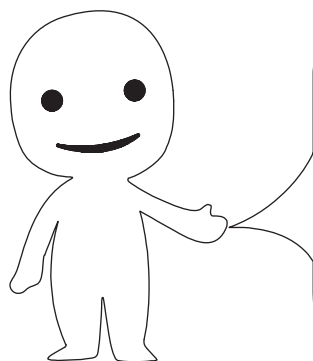

Please prepare the following tools

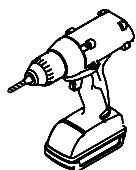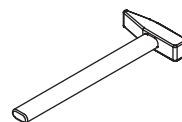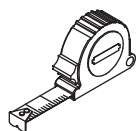


When installing, please carefully confirm whether each screw corresponds to the manual, accessories with similar shapes can be distinguished by size

A x 103



CRB1595A

B x 103



CRA0635B

C x 103




D x 34




CRF0630A

E x 44



CRC0540A

F x 8

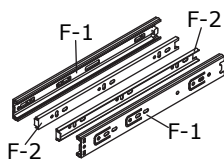

#3508 12"

G x 66




CRD3512A

H x 8




J x 8




CRE0412A

K x 2

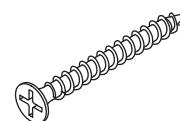


CRD3535A

L x 6

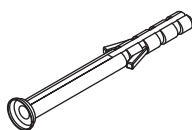


M x 6

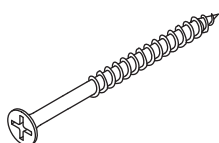


CRD0590A

N x 6




P x 6

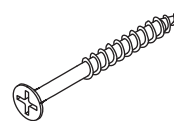

CRD0468A

Q x 24




R x 24



CRD0314A

S x 1











CRD3520A

T x 6



U x 2

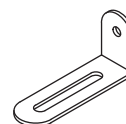


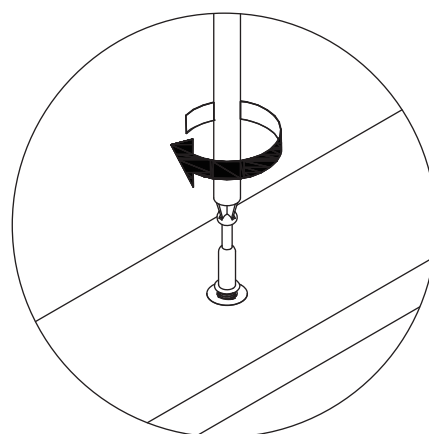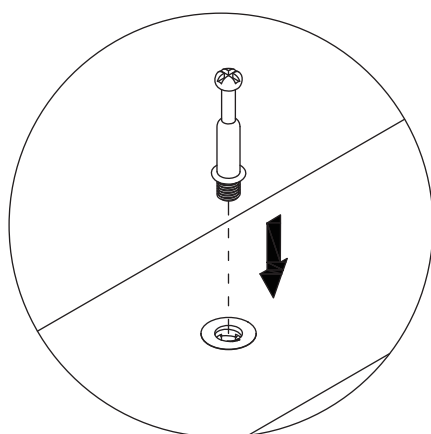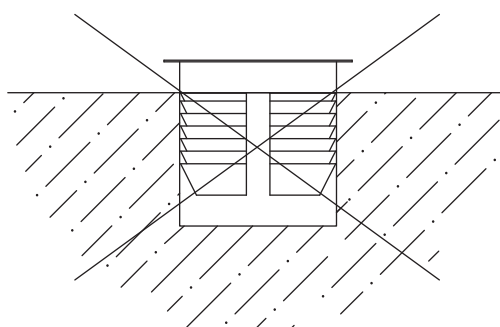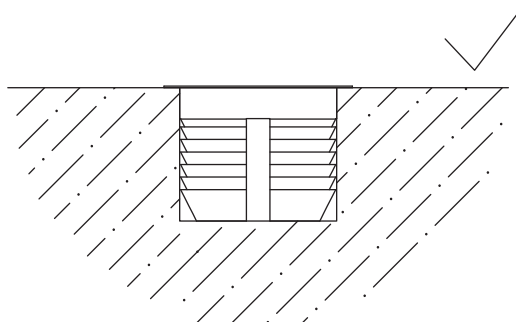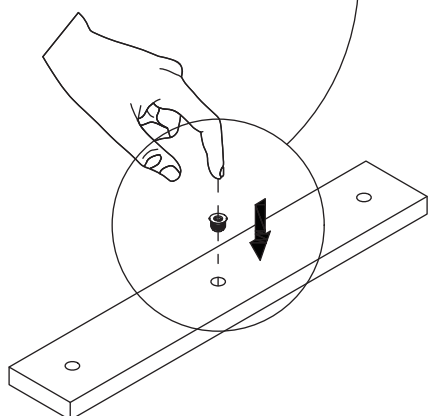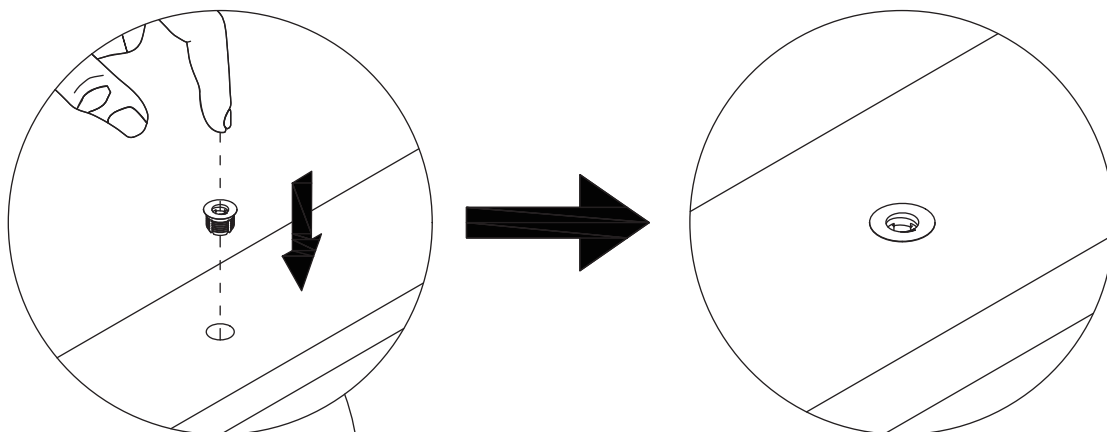


Slides Must Be Separated Before Assembly.
After Separated, Set Aside Until Needed for Assembly.

Las diapositivas deben separarse antes del montaje.
Después de la separación, déjelo a un lado hasta que sea necesario.


Les glissières doivent être séparées avant l'assemblage.
Après la séparation, mettez de côté jusqu'au moment de l'assemblage.

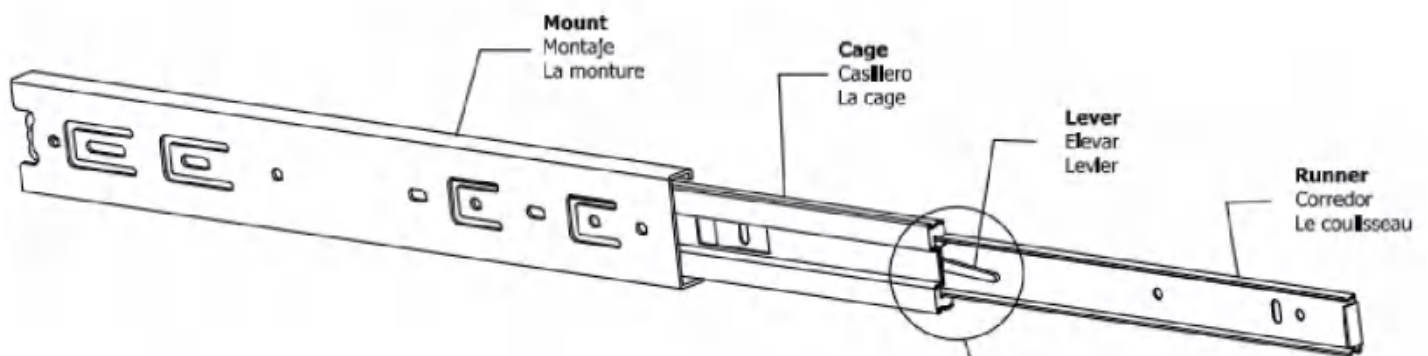


STEP 1: Extend Slide
Extender la diapositiva
Extendre la diapositive


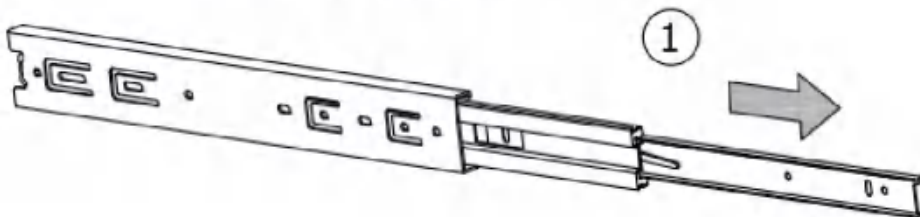


STEP 2: Push Lever UP
Empujar hacia arriba
Lever le levier

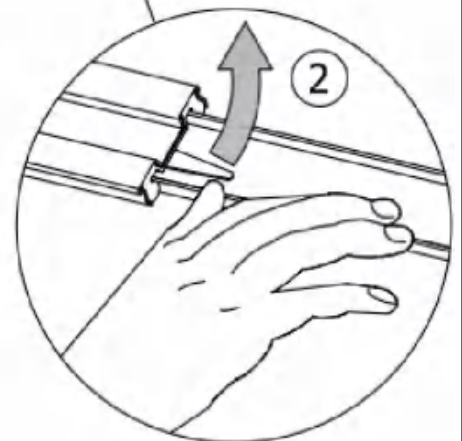

STEP 3: Remove Runner
Quitar el corredor
Enlever le coureur

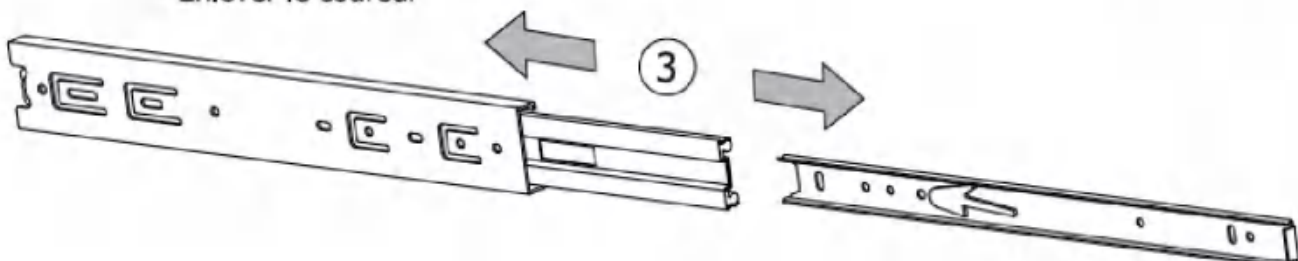

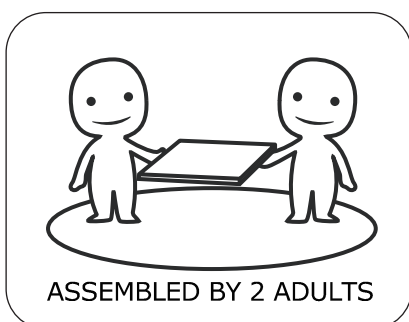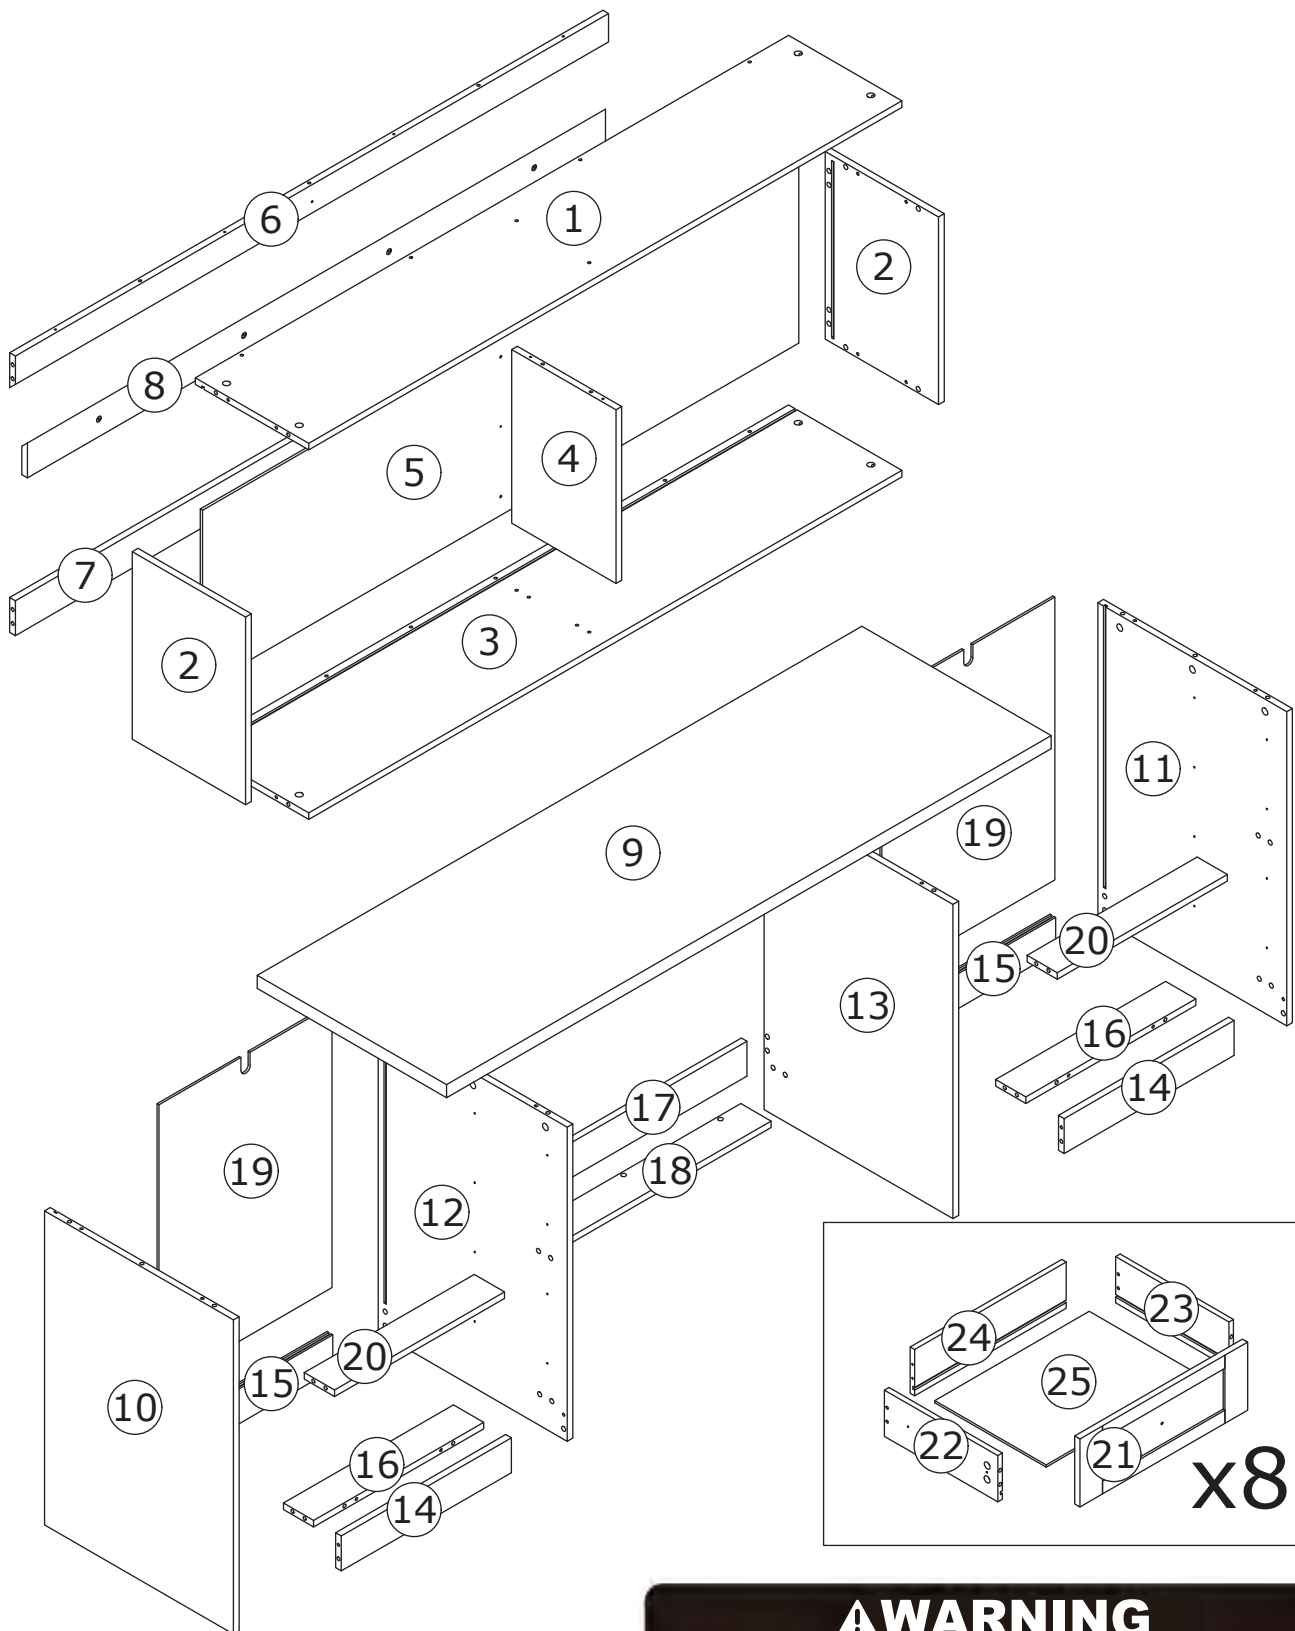

⚠ WARNING


Children have died from furniture tipover. To reduce the risk of furniture tipover:

- ALWAYS install Anti-tip device provided.
- NEVER put a TV on this product.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heaviest items in the lowest drawers.

*This is a permanent label.
Do not remove!*


1

B x 7







CRA0635B

C x 7





First, install plug (C) onto panel 10, then screw self-tapping rod (B) into panel 10.

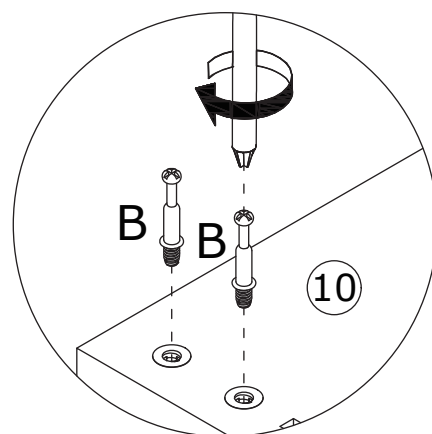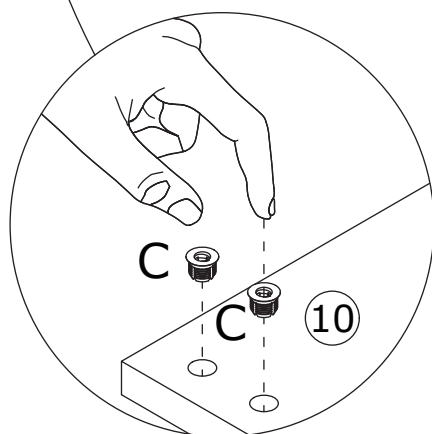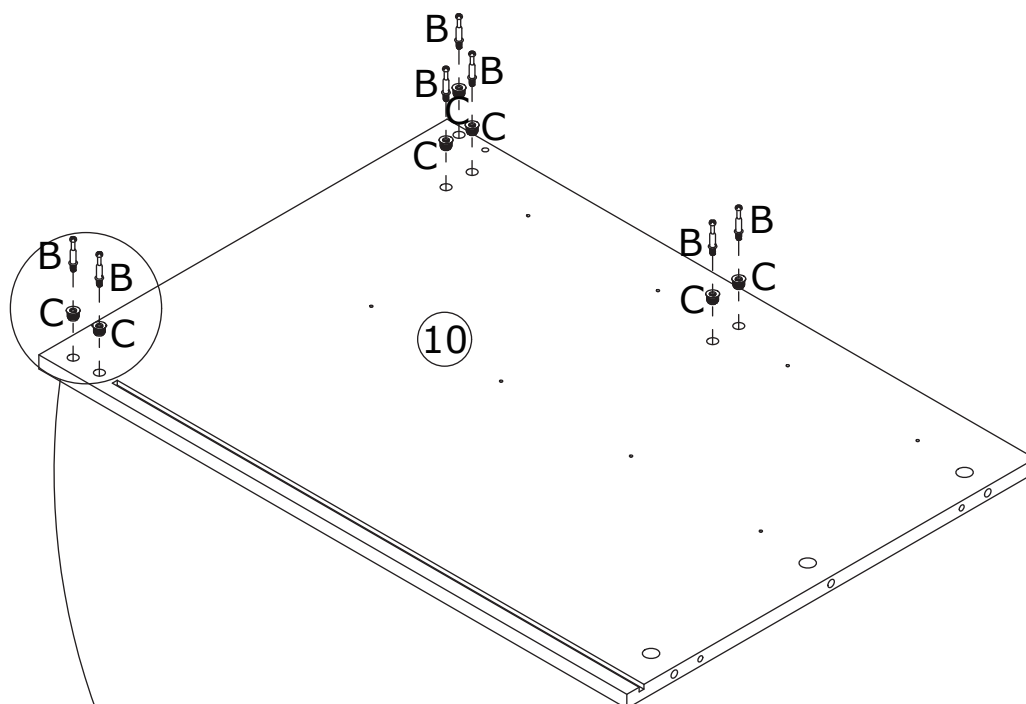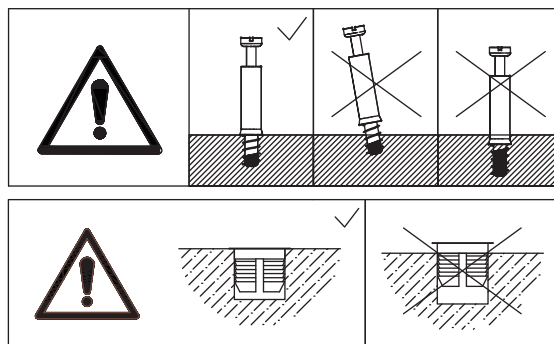

2




First, install plug (C) onto **both sides** of panel 12, then screw self-tapping rod (B) into panel 12.

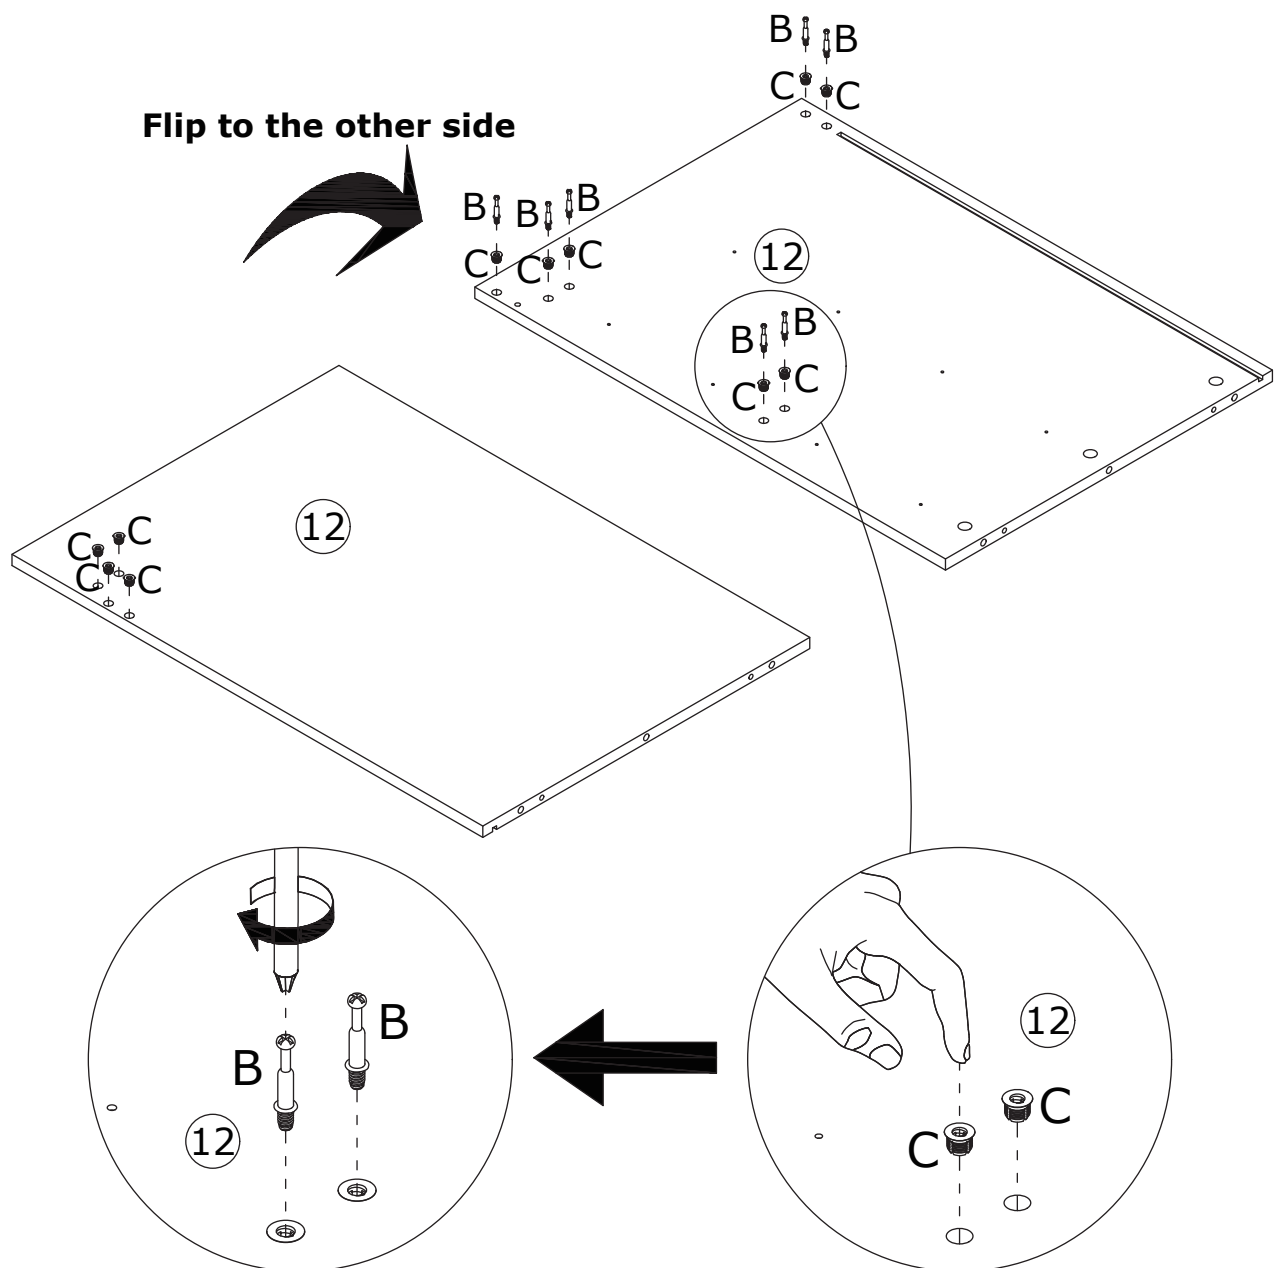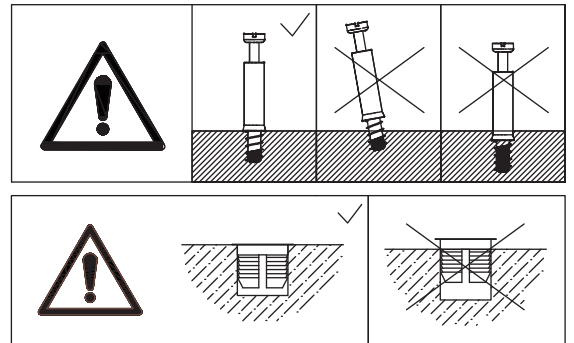

3


F x 4
F-1
#3508 12"

G x 16
CRD3512A




G
CRD3512A

R
CRD0314A



Secure slide rail (F-1) to panel 10 and 12 using screw (G).

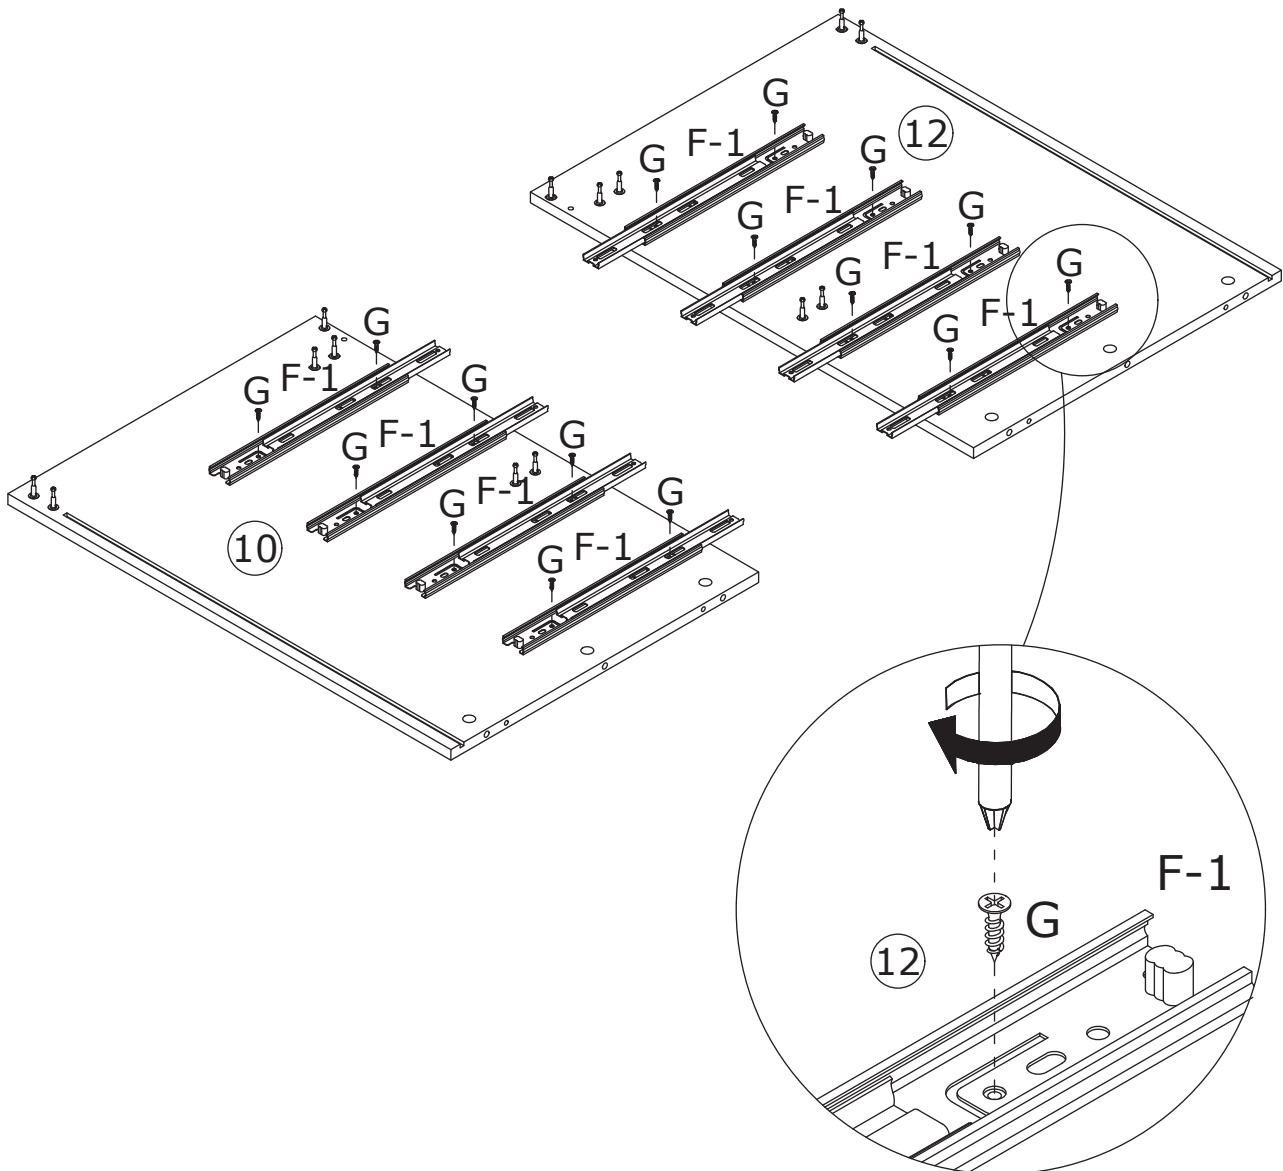


4



B x 4



C x 4



First, install plug (C) onto panel 14, then screw self-tapping rod (B) into panel 14.

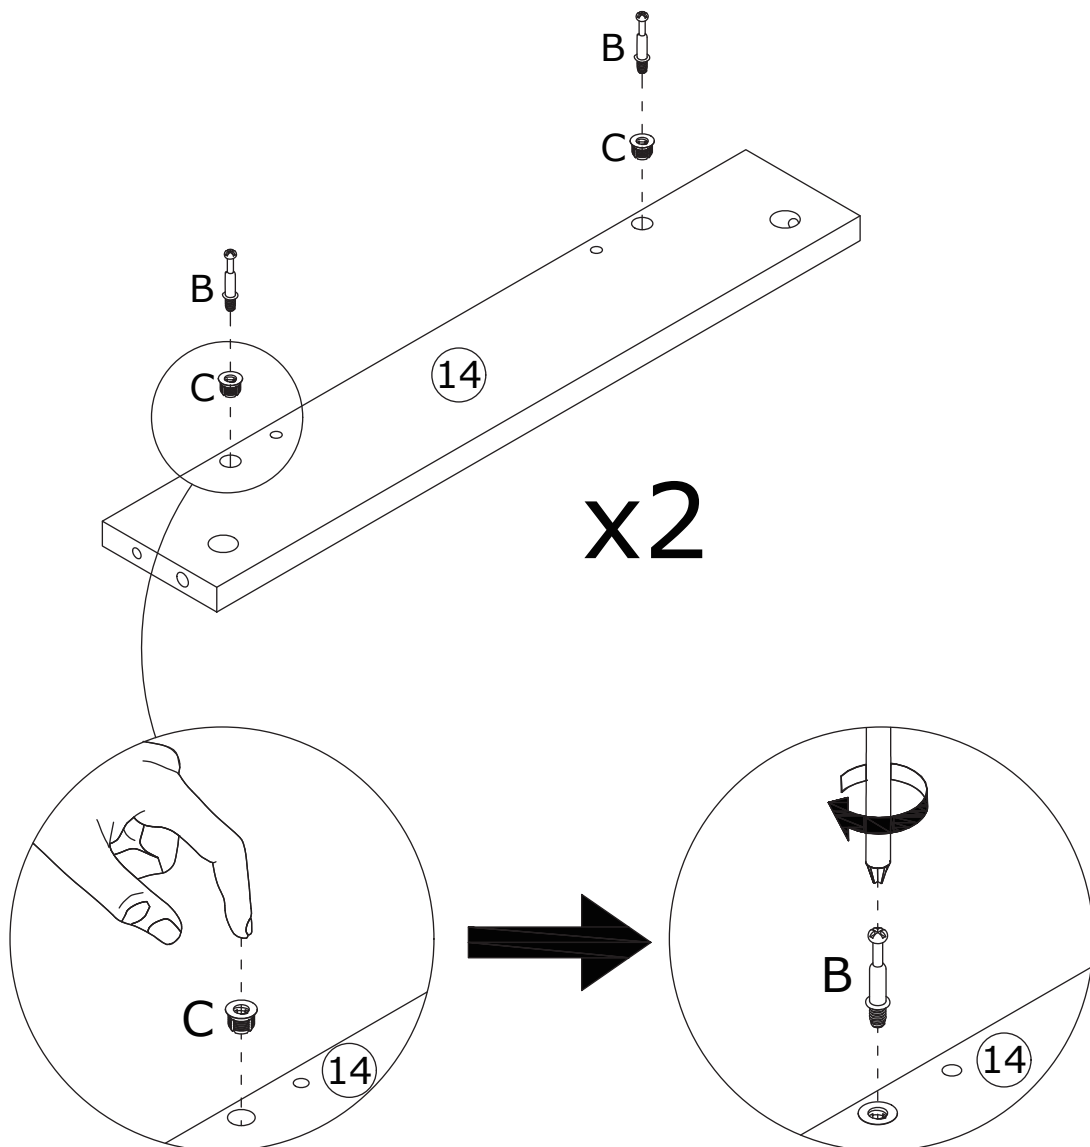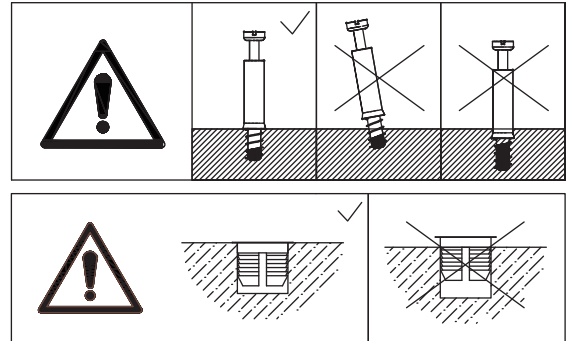


5

A x 4




CRB1595A



D x 4



CRF0630A



Connect panel 16 to panel 14 using wooden dowel (D), then tighten by turning cam lock (A) clockwise.

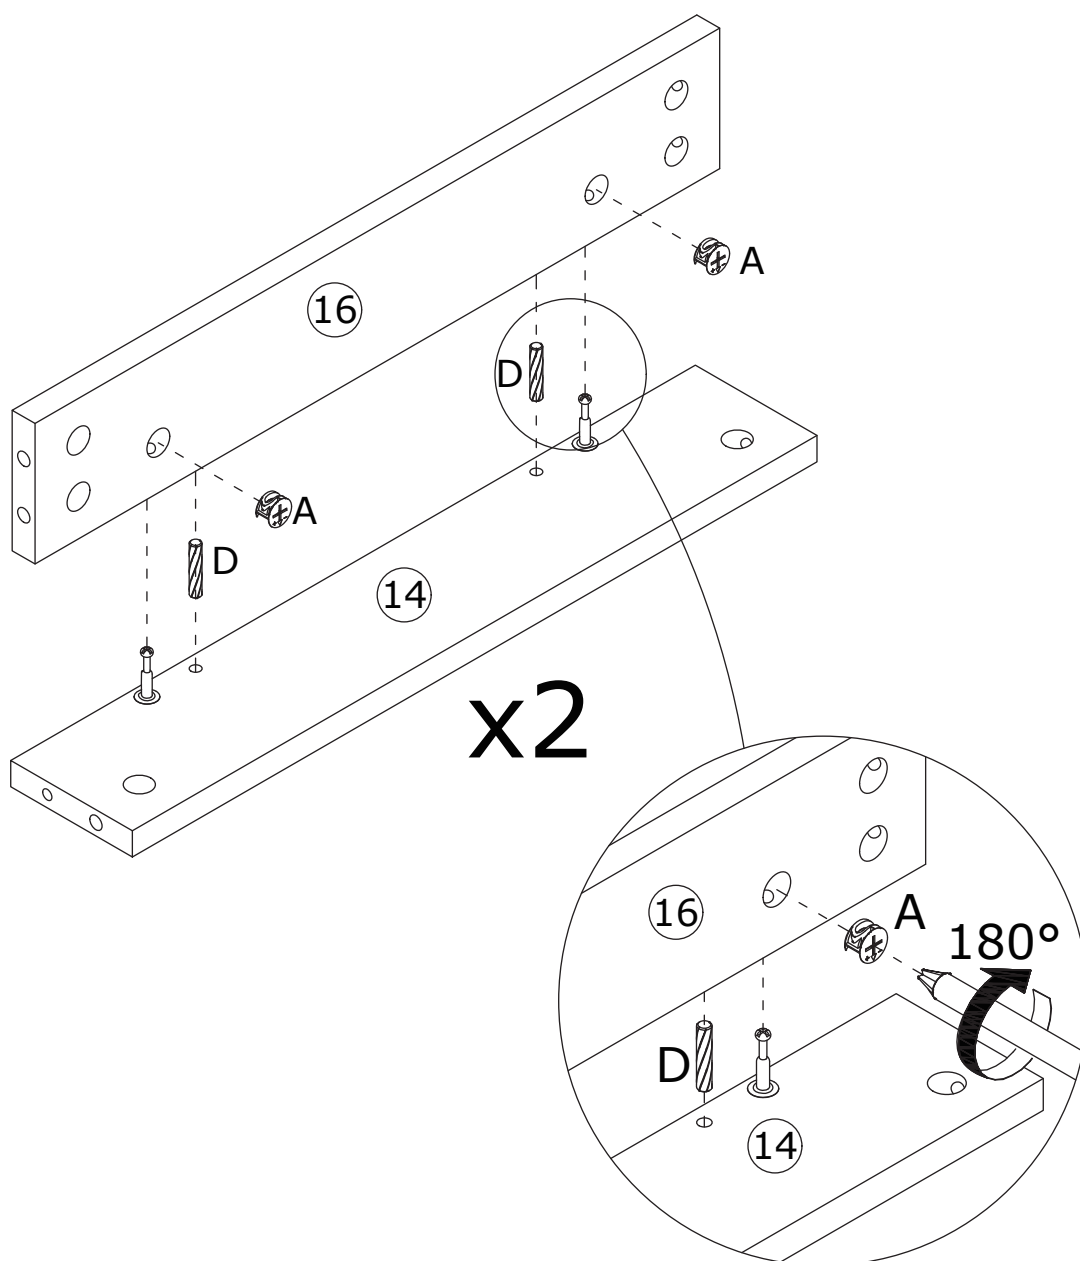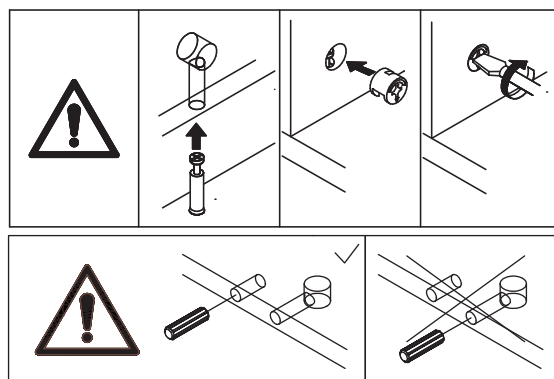


6

A x 7




CRB1595A



D x 1






CRF0630A





Insert wooden dowel (D) into panel 14.
Connect panels 14, 16, 15 and 20 to
panel 10, then tighten by turning cam
lock (A) clockwise.

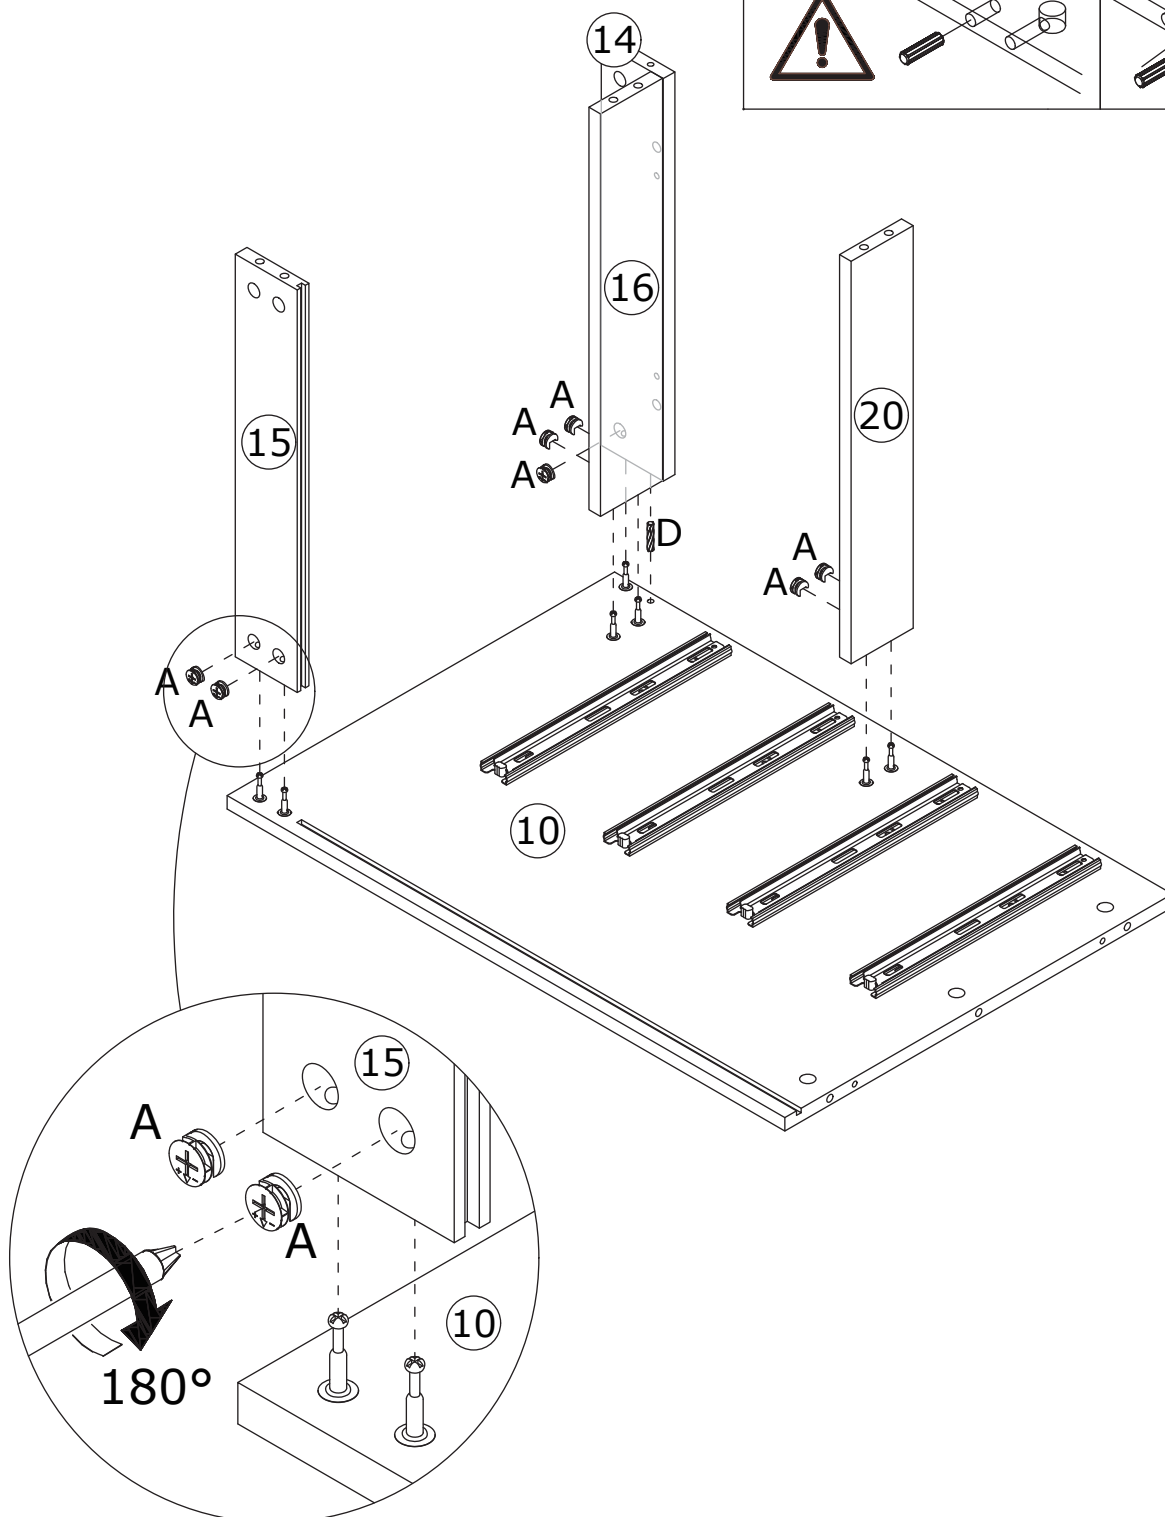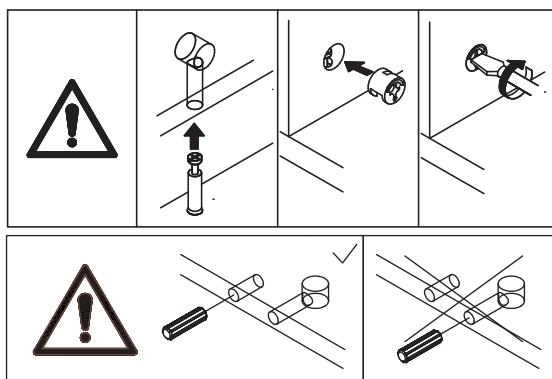

7

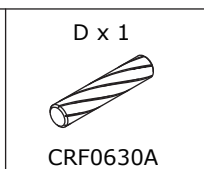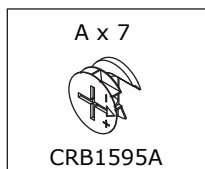


Insert wooden dowel (D) into panel 14.
Connect panels 14, 16, 15 and 20 to
panel 12, then tighten by turning cam
lock (A) clockwise.

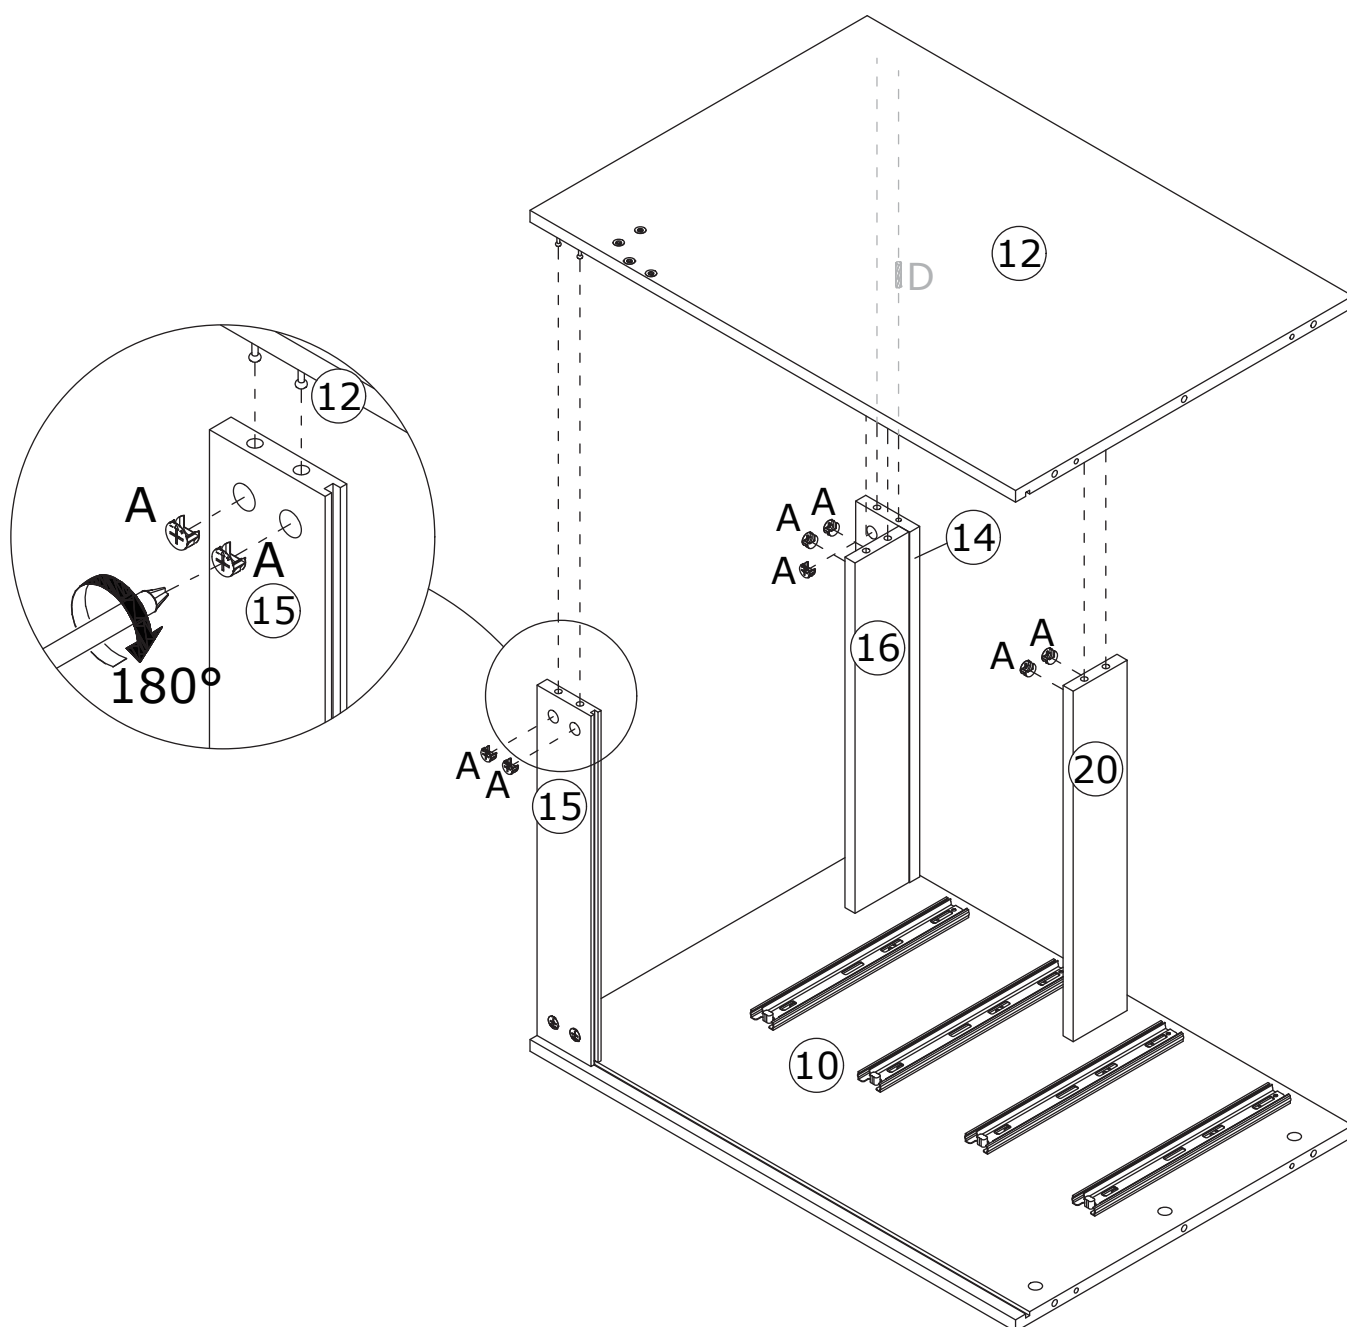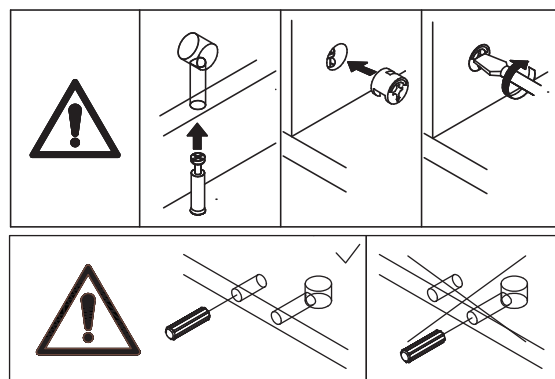


8

B x 7





CRA0635B

C x 7



First, install plug (C) onto panel 11, then screw self-tapping rod (B) into panel 11.

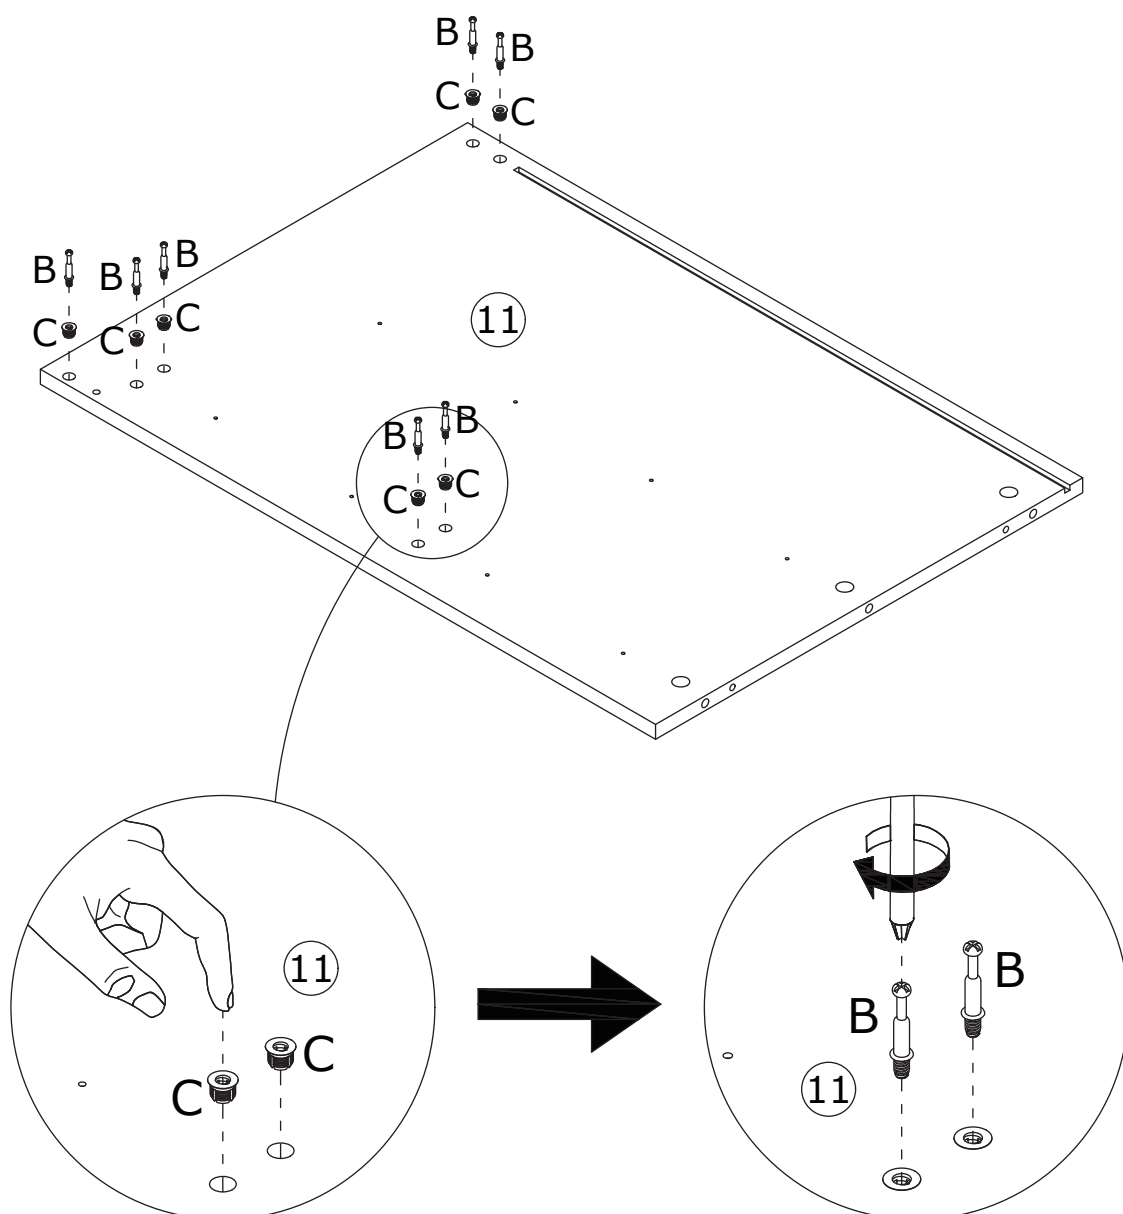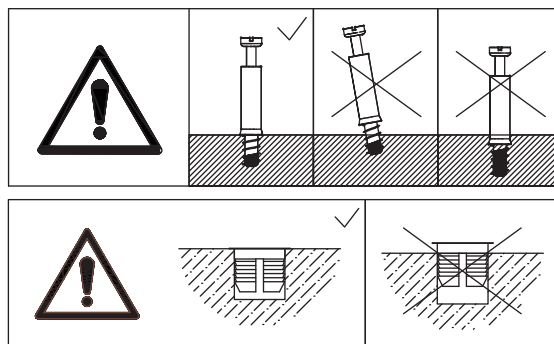


9


B x 7




C x 11





First, install plug (C) onto **both sides** of panel 13, then screw self-tapping rod (B) into panel 13.

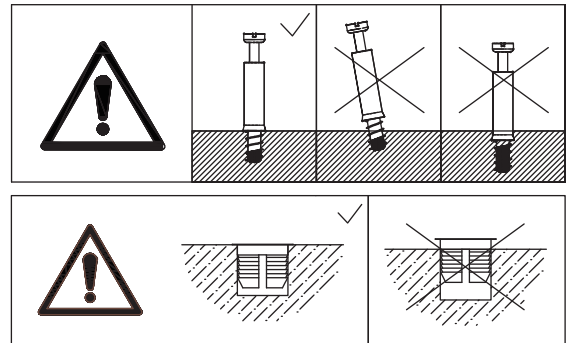




Flip to the other side

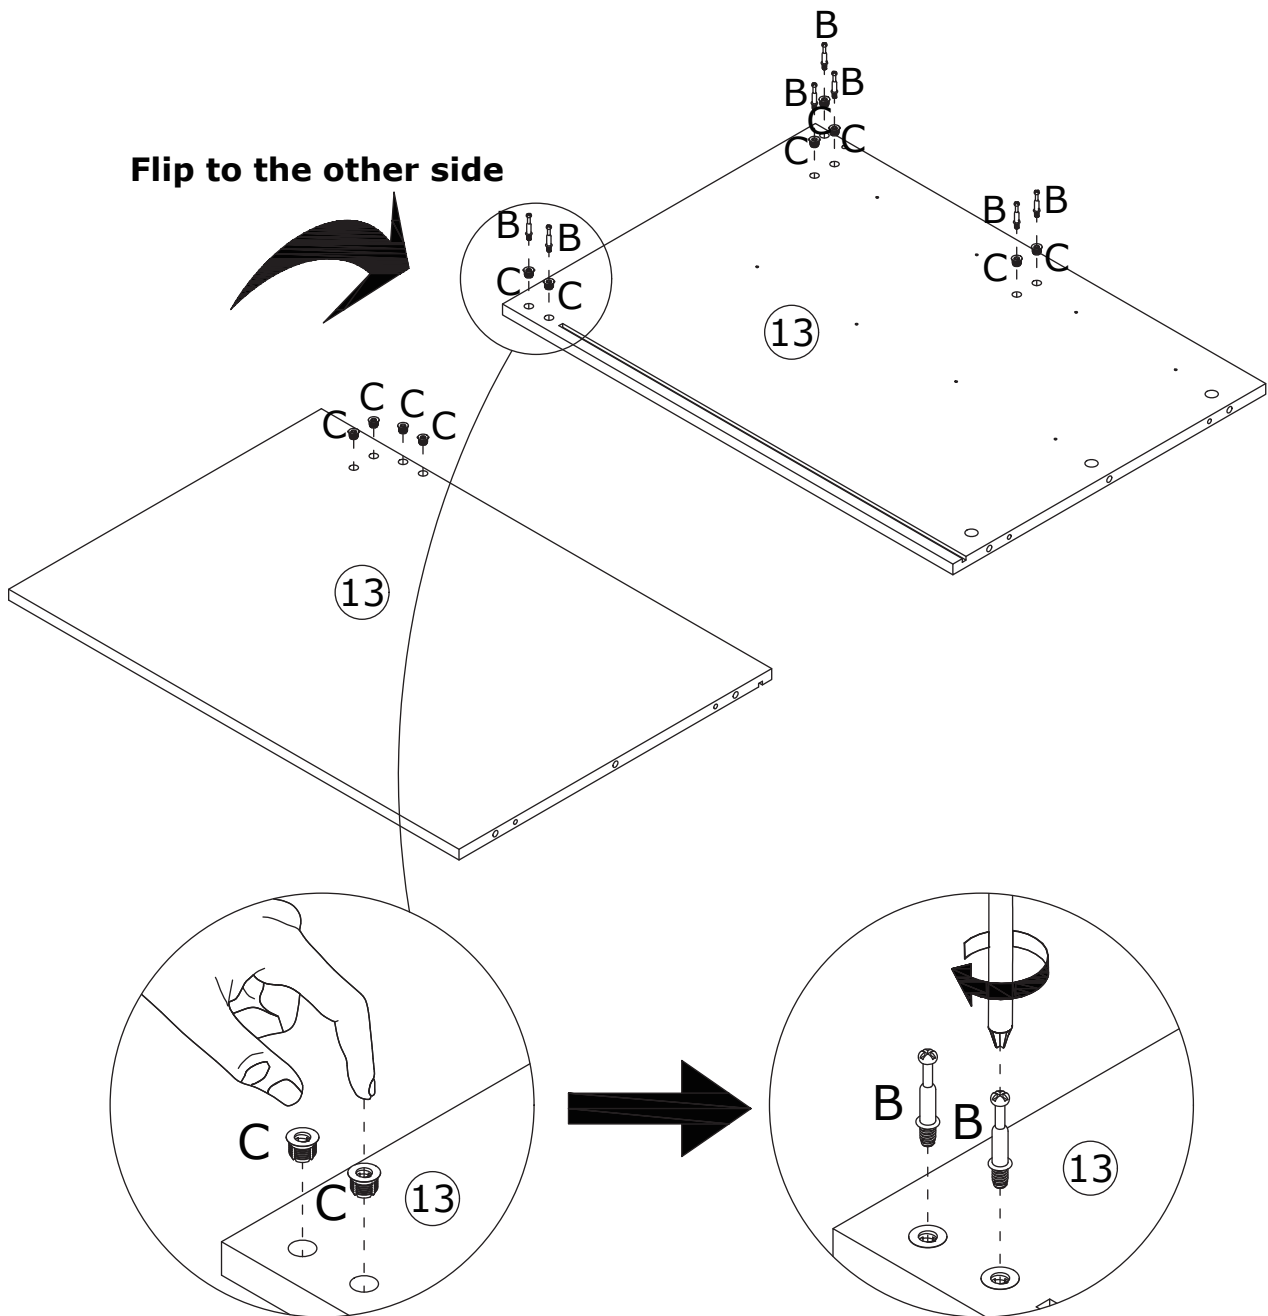



10

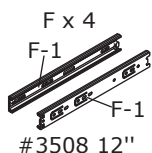



Secure slide rail (F-1) to panel 11 and 13 using screw (G).

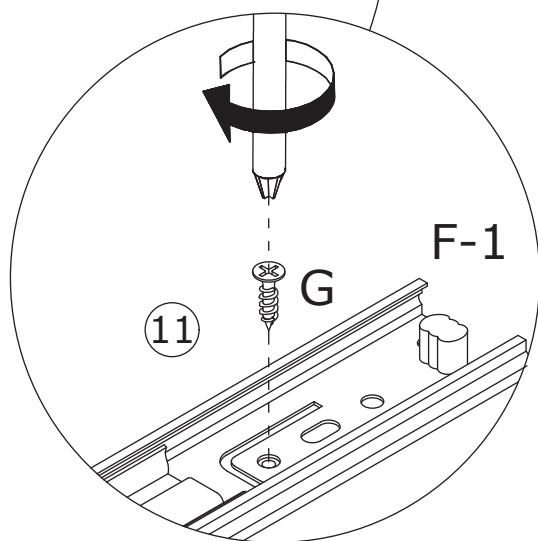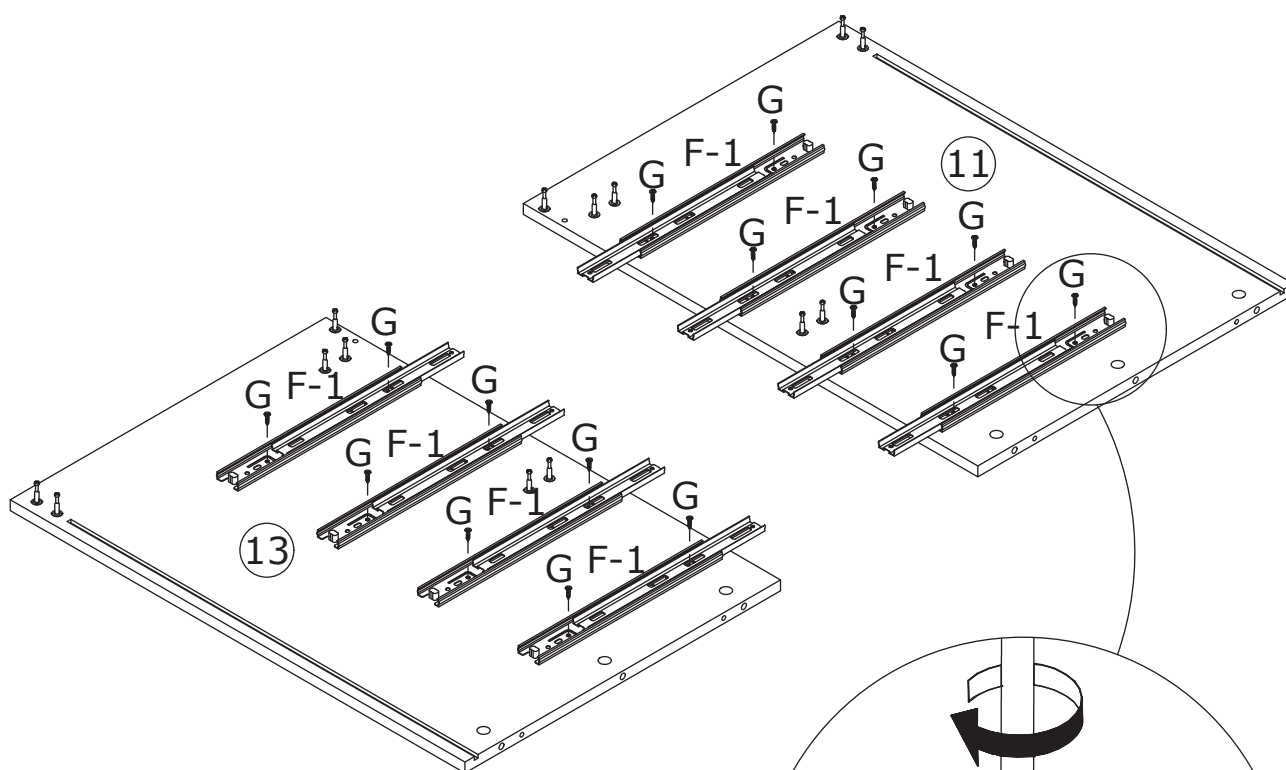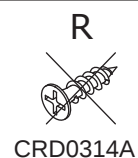

11

A x 7  CRB1595A	D x 1  CRF0630A	
--	--	---

Insert wooden dowel (D) into panel 14.
Connect panels 14, 16, 15 and 20 to
panel 11, then tighten by turning cam
lock (A) clockwise.

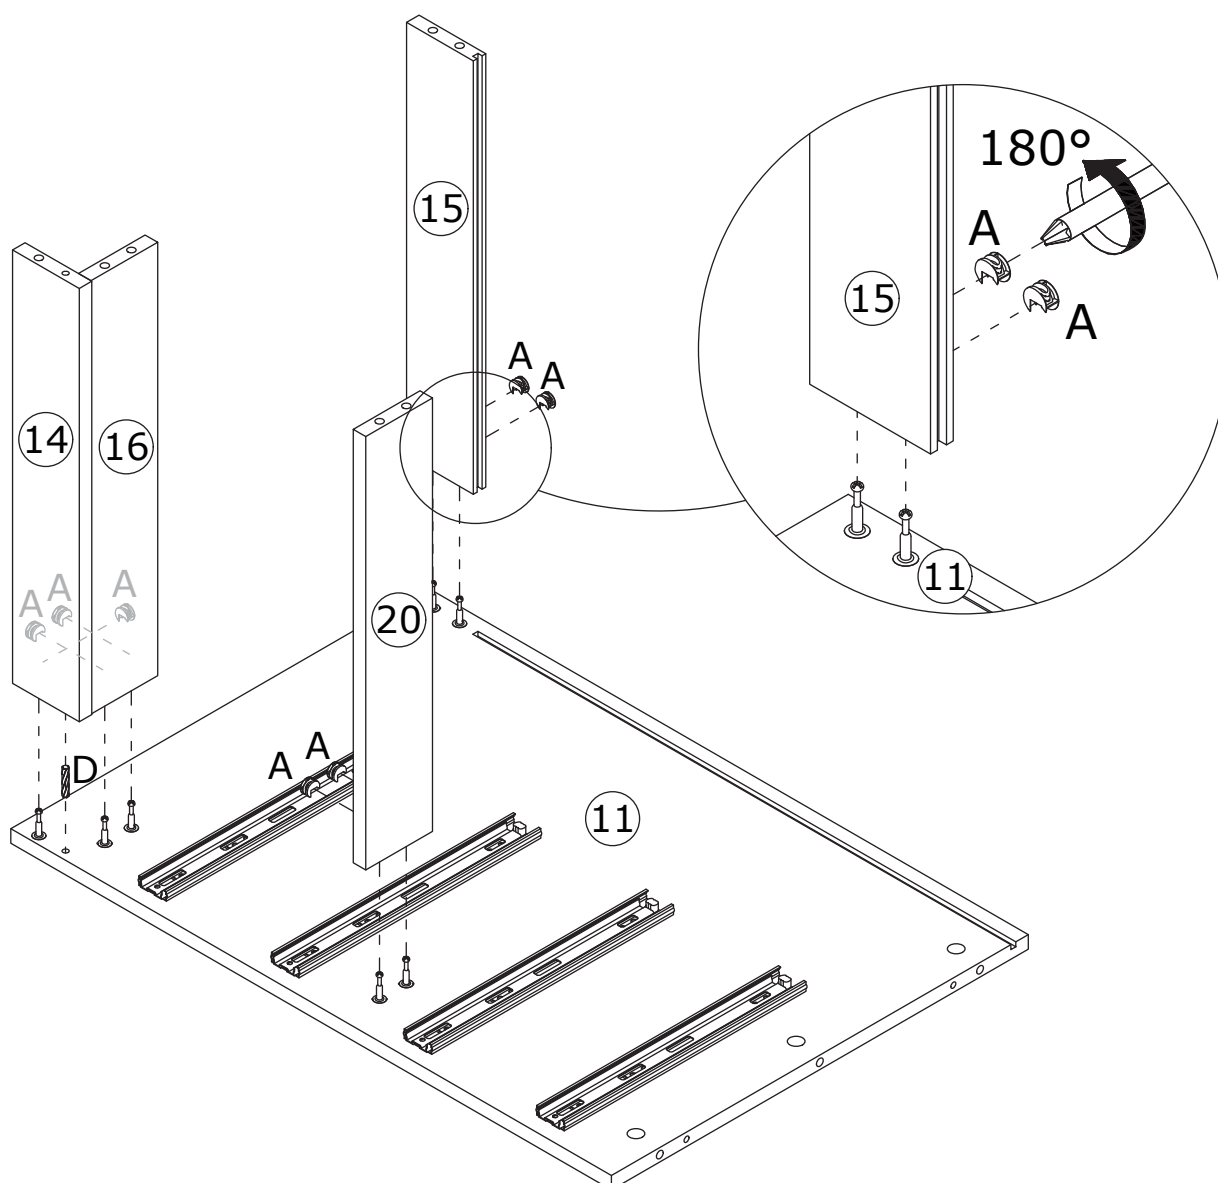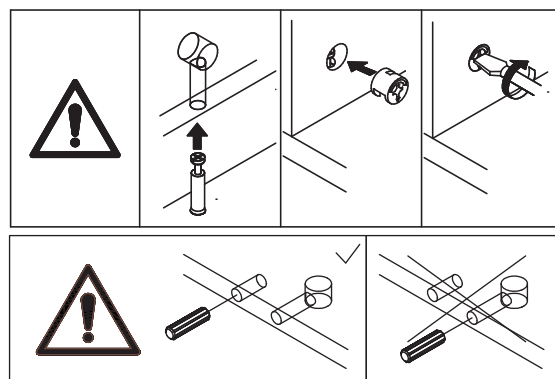


12

A x 7




CRB1595A



D x 1



CRF0630A




Insert wooden dowel (D) into panel 14.
Connect panels 14, 16, 15 and 20 to
panel 13, then tighten by turning cam
lock (A) clockwise.

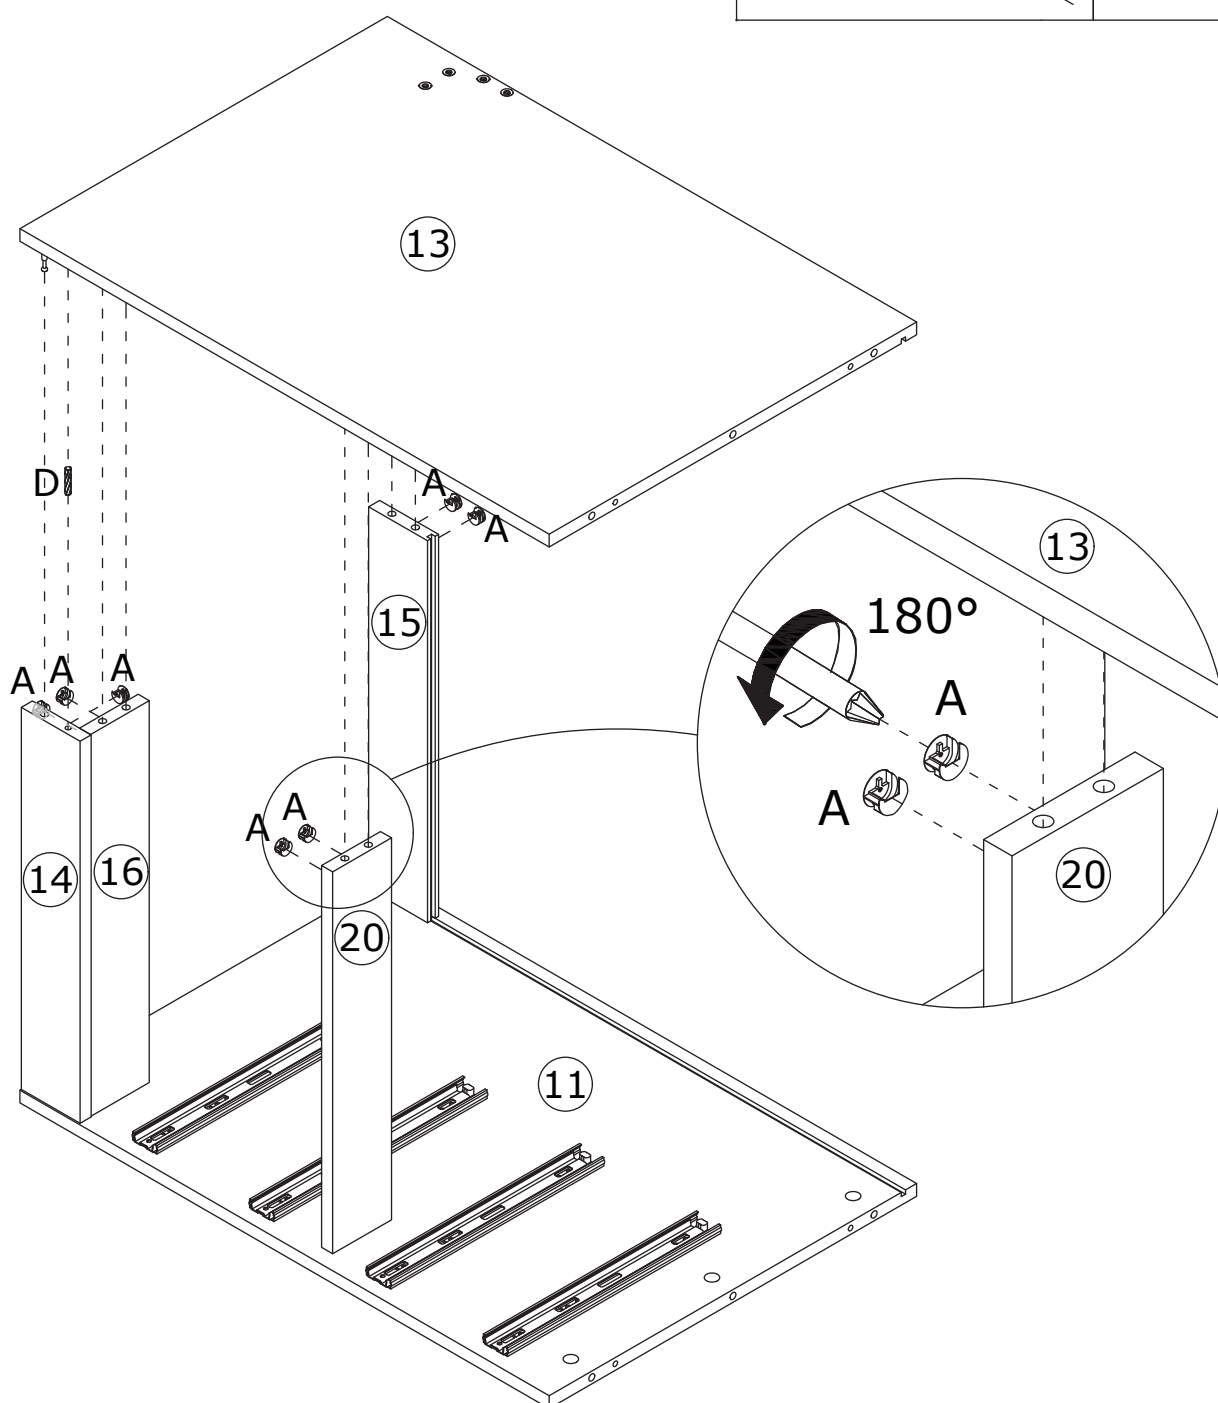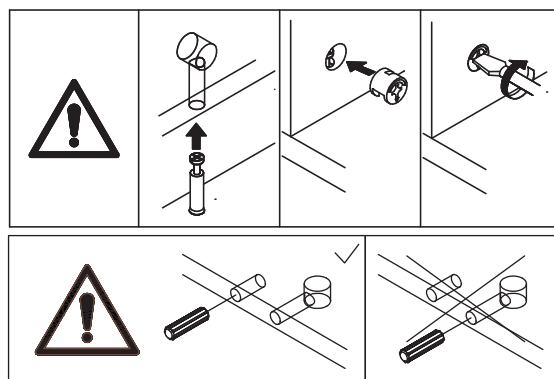


13

B x 3







CRA0635B

C x 3



First, install plug (C) onto panel 18, then screw self-tapping rod (B) into panel 18.

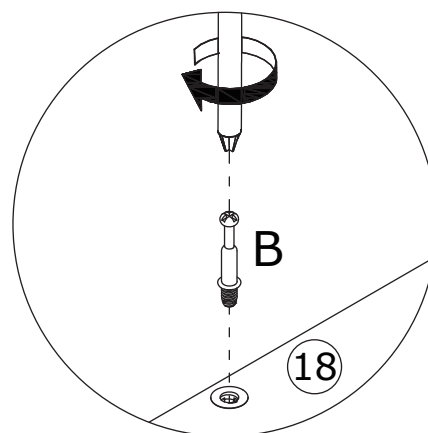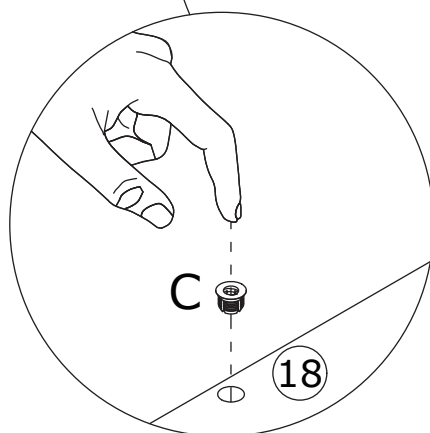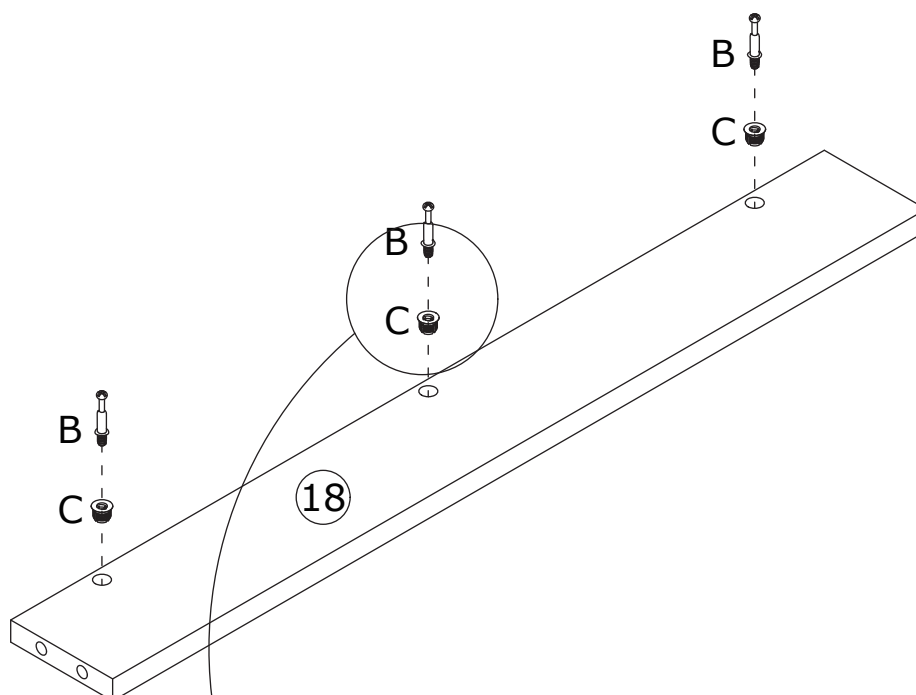
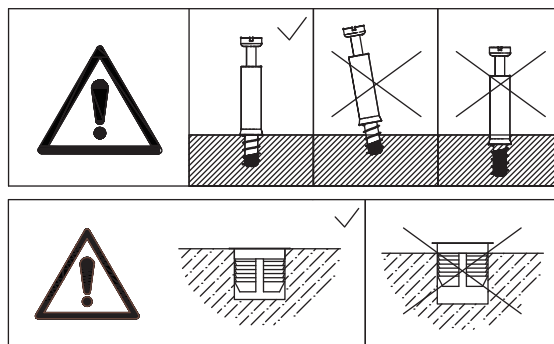


14


A x 3



CRB1595A

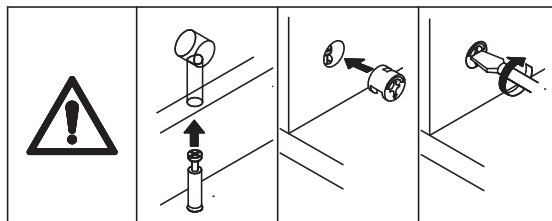


Connect panel 17 to panel 18, then tighten by turning cam lock (A) clockwise.


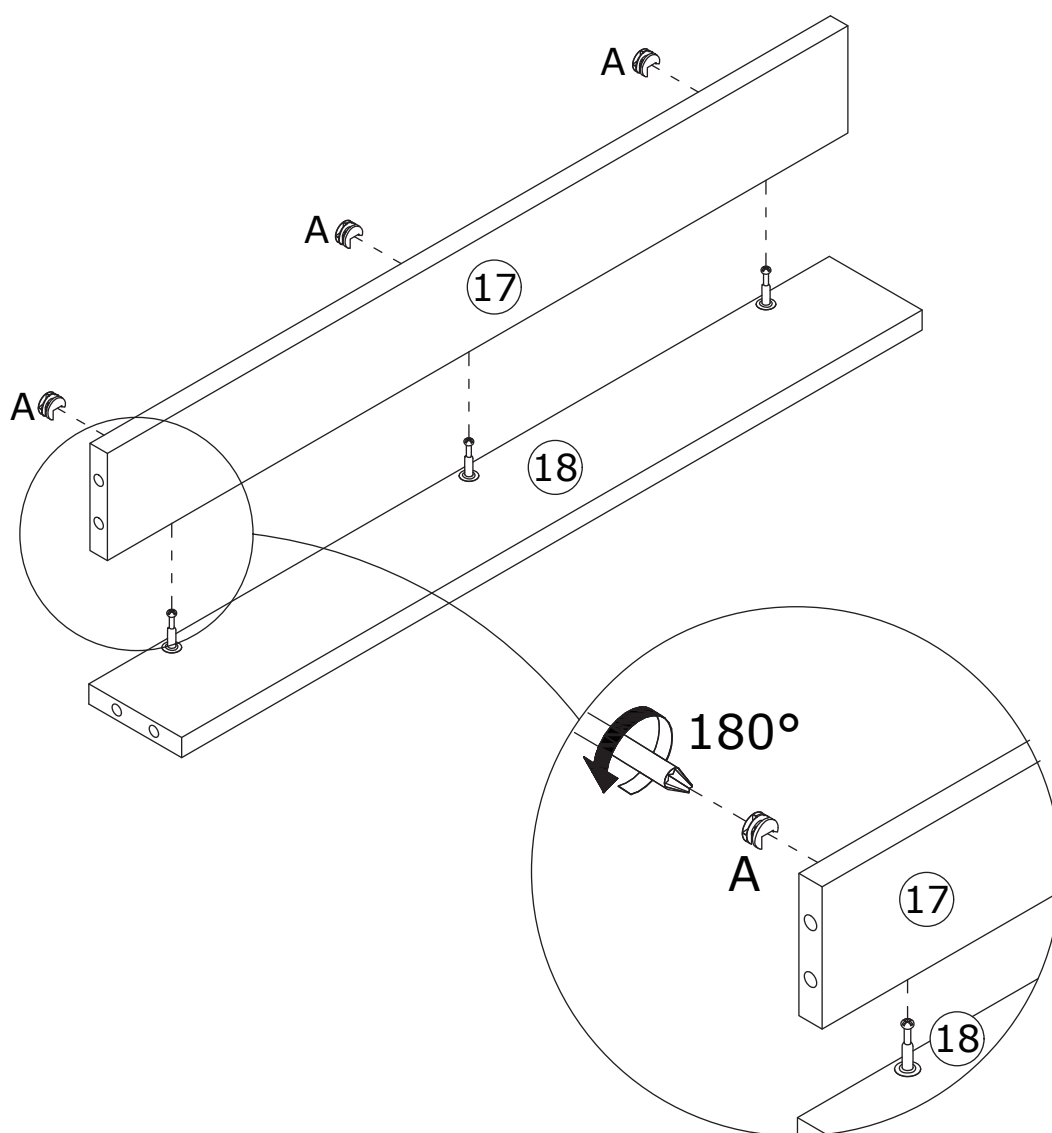


15


B x 4






CRA0635B

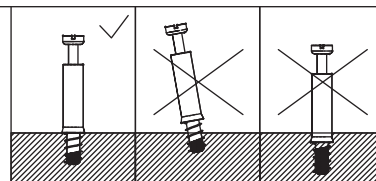


Screw self-tapping rod (B) into panel 12.

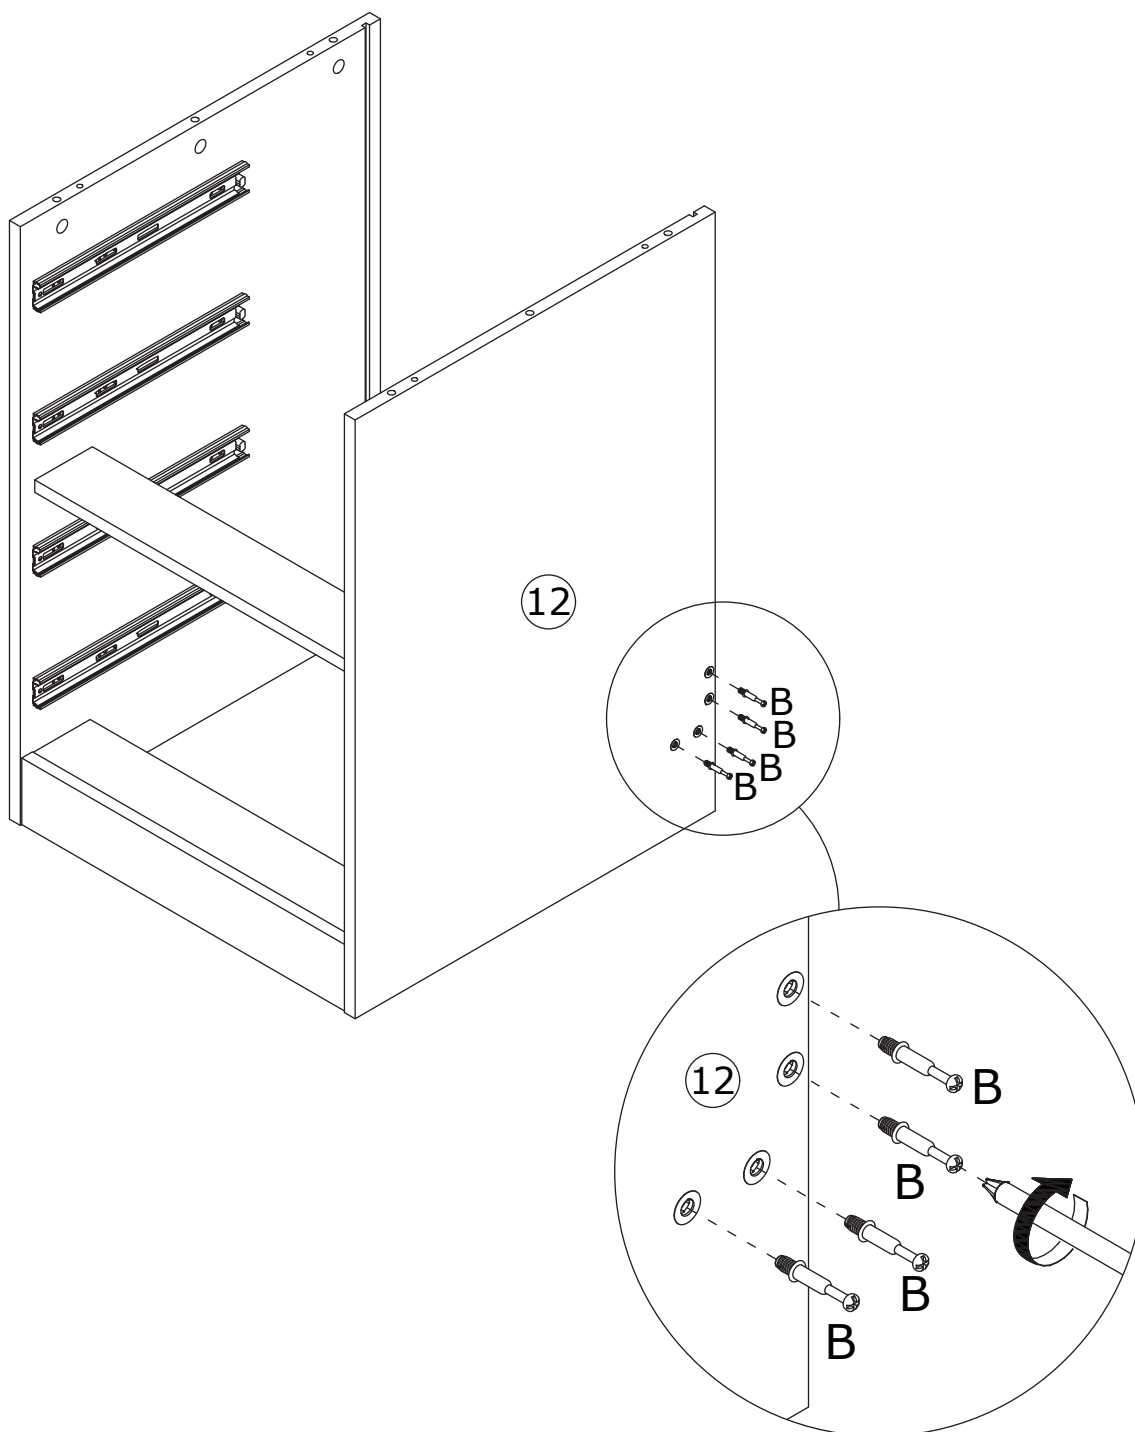

16

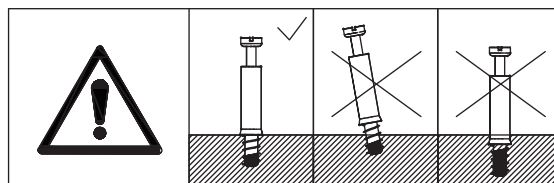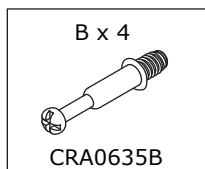

Screw self-tapping rod (B) into panel 13.


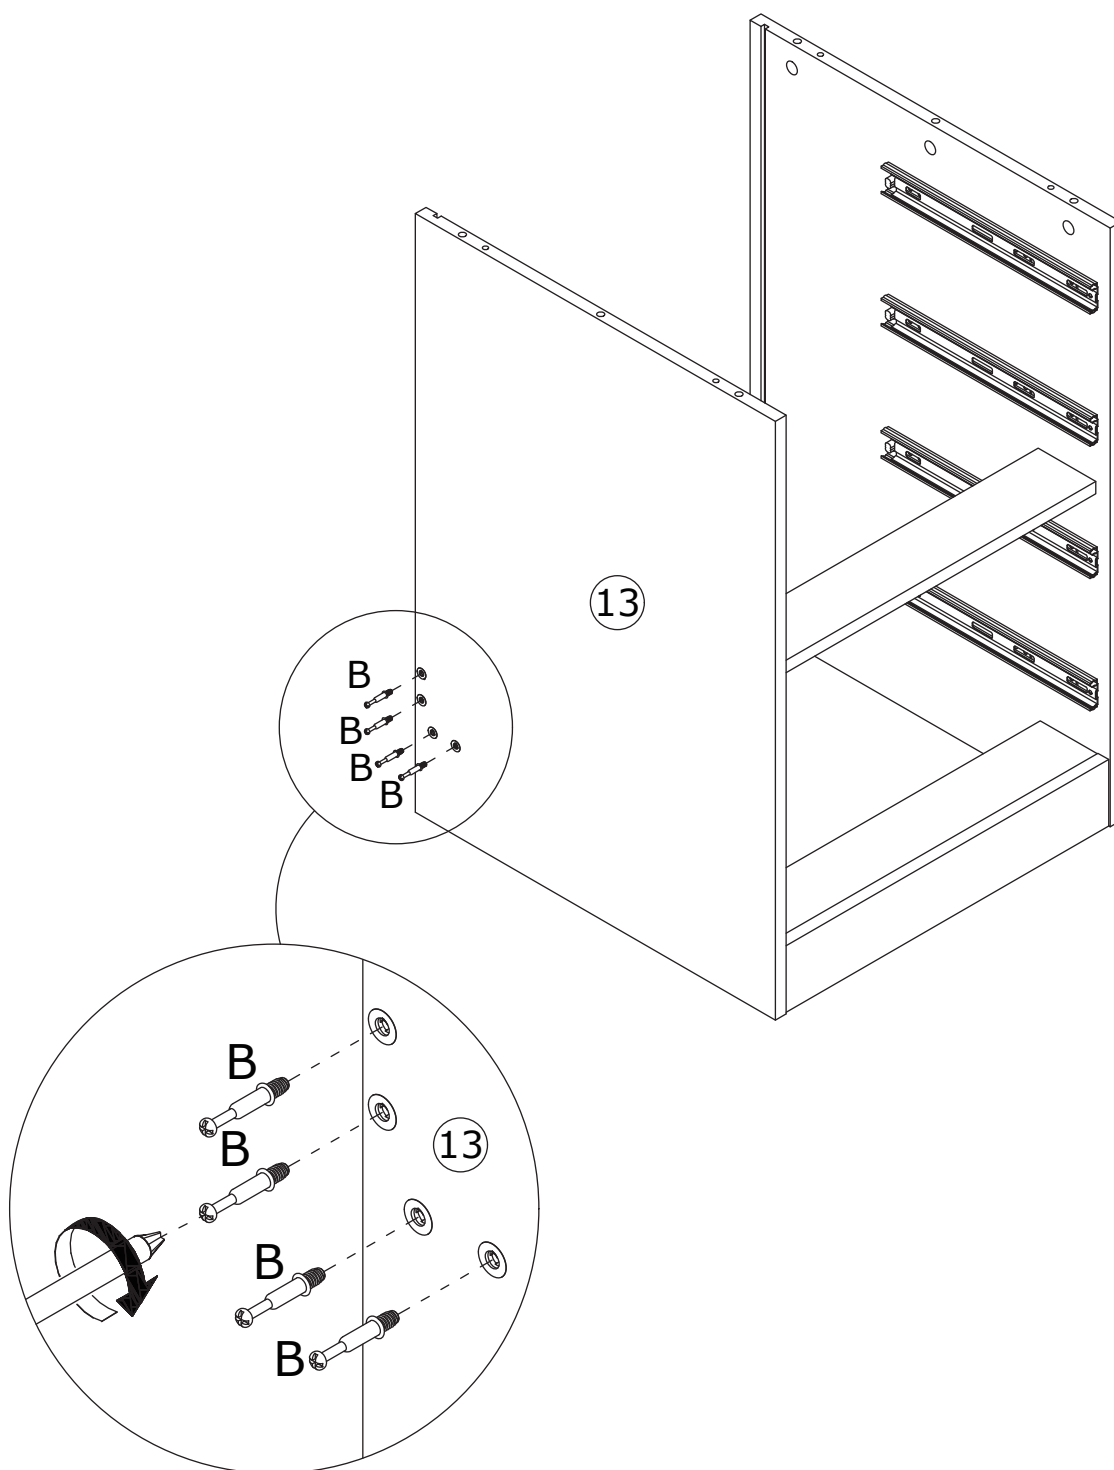


17


A x 8



CRB1595A

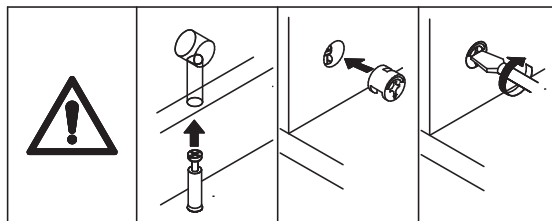


Turn the cabinet upside down, connect panel 12 and 13 to panel 17 and 18, then tighten by turning cam lock (A) clockwise.

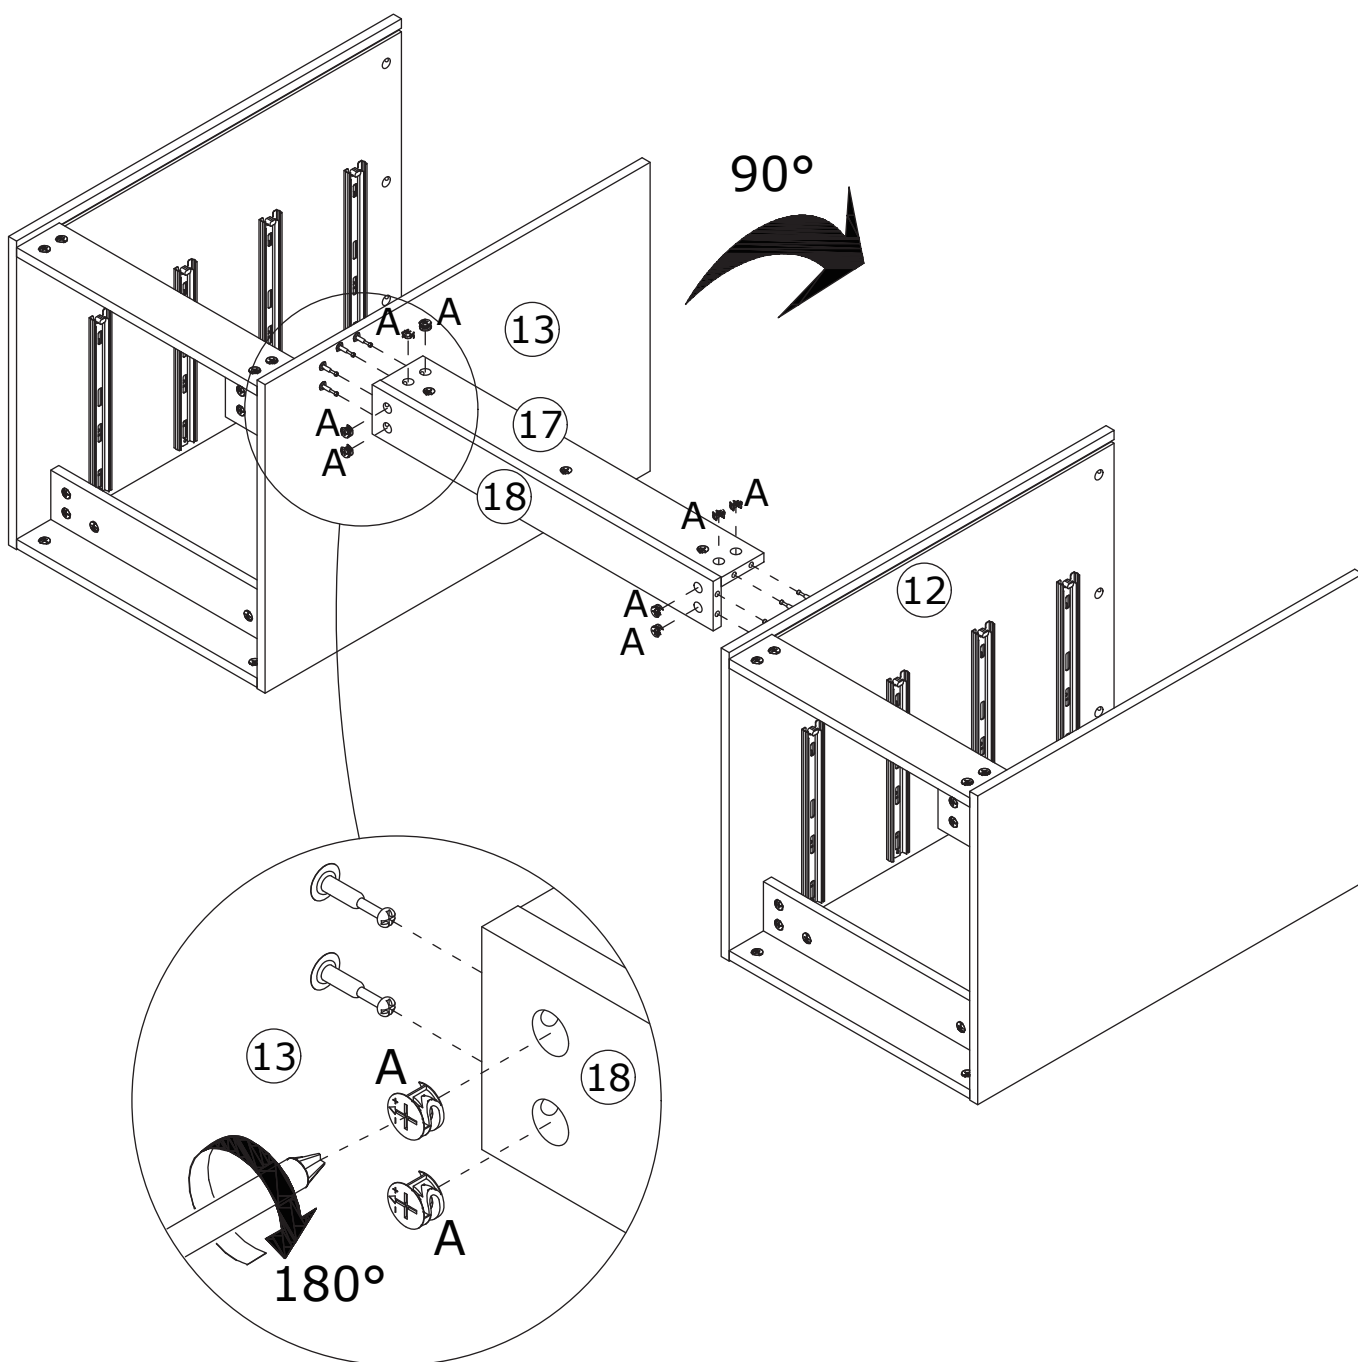


18


Turn the cabinet over and insert panel 19 into the available slots.

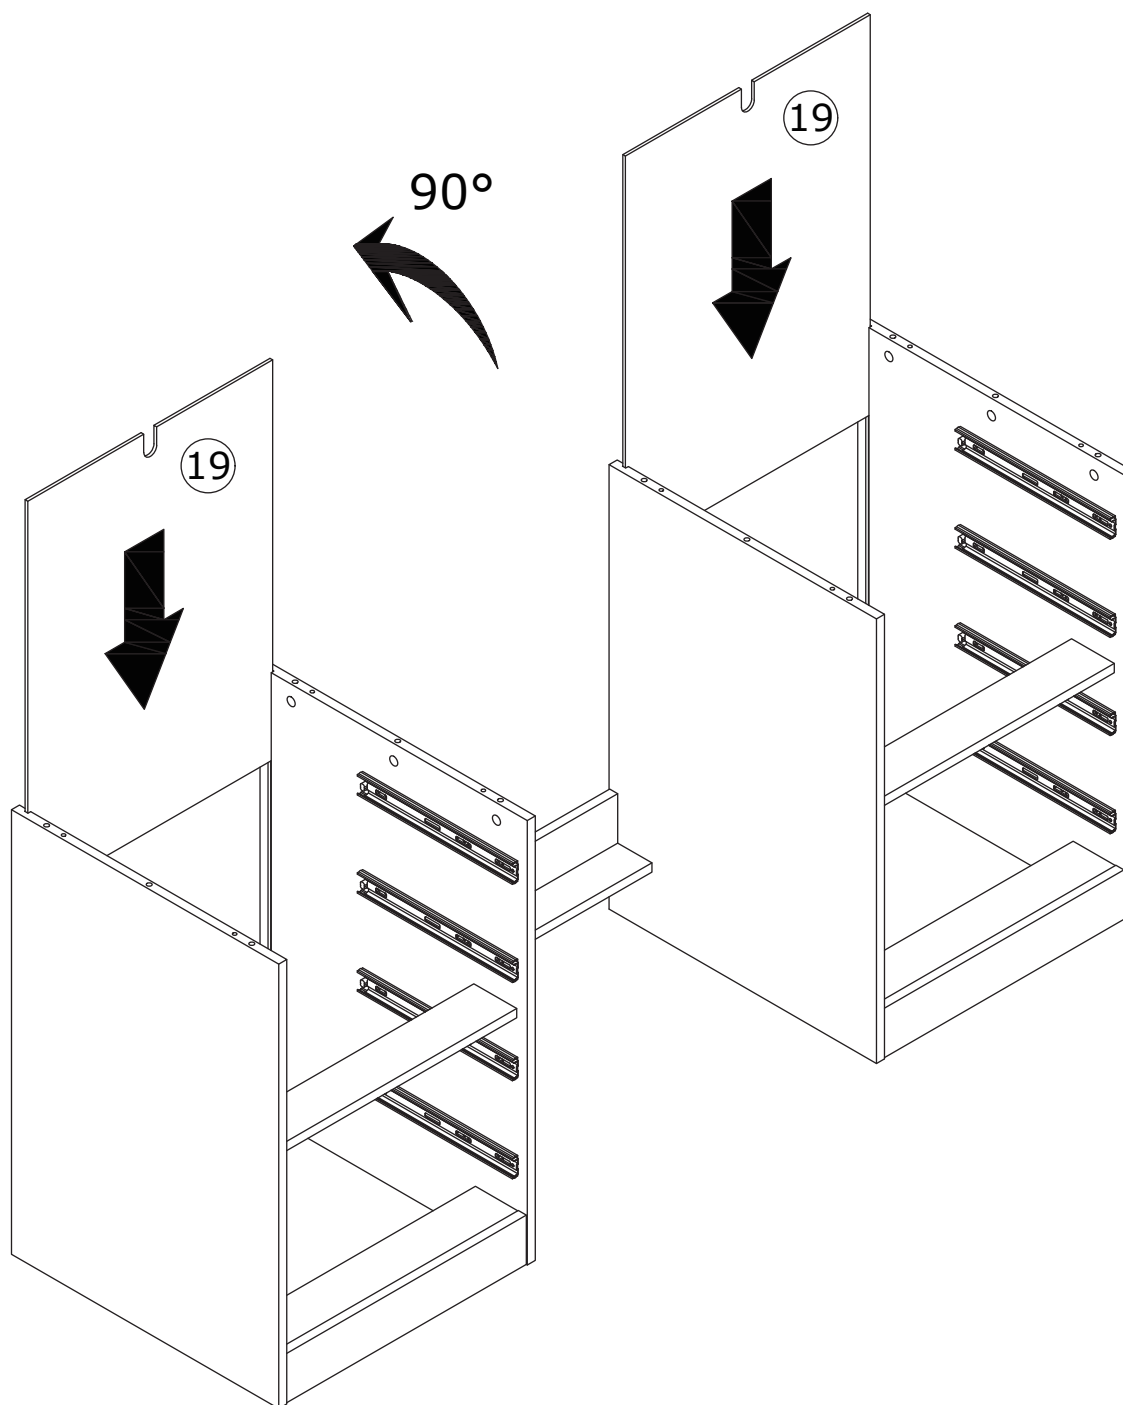


19

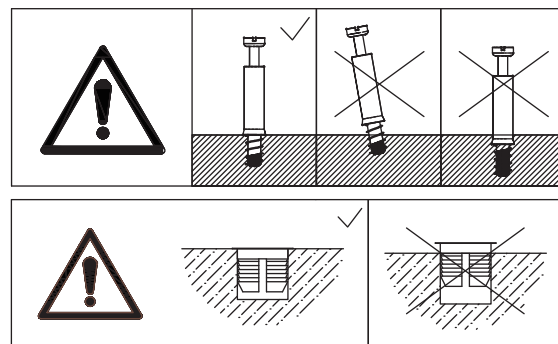


First, install plug (C) onto panel 9, then screw self-tapping rod (B) into panel 9.

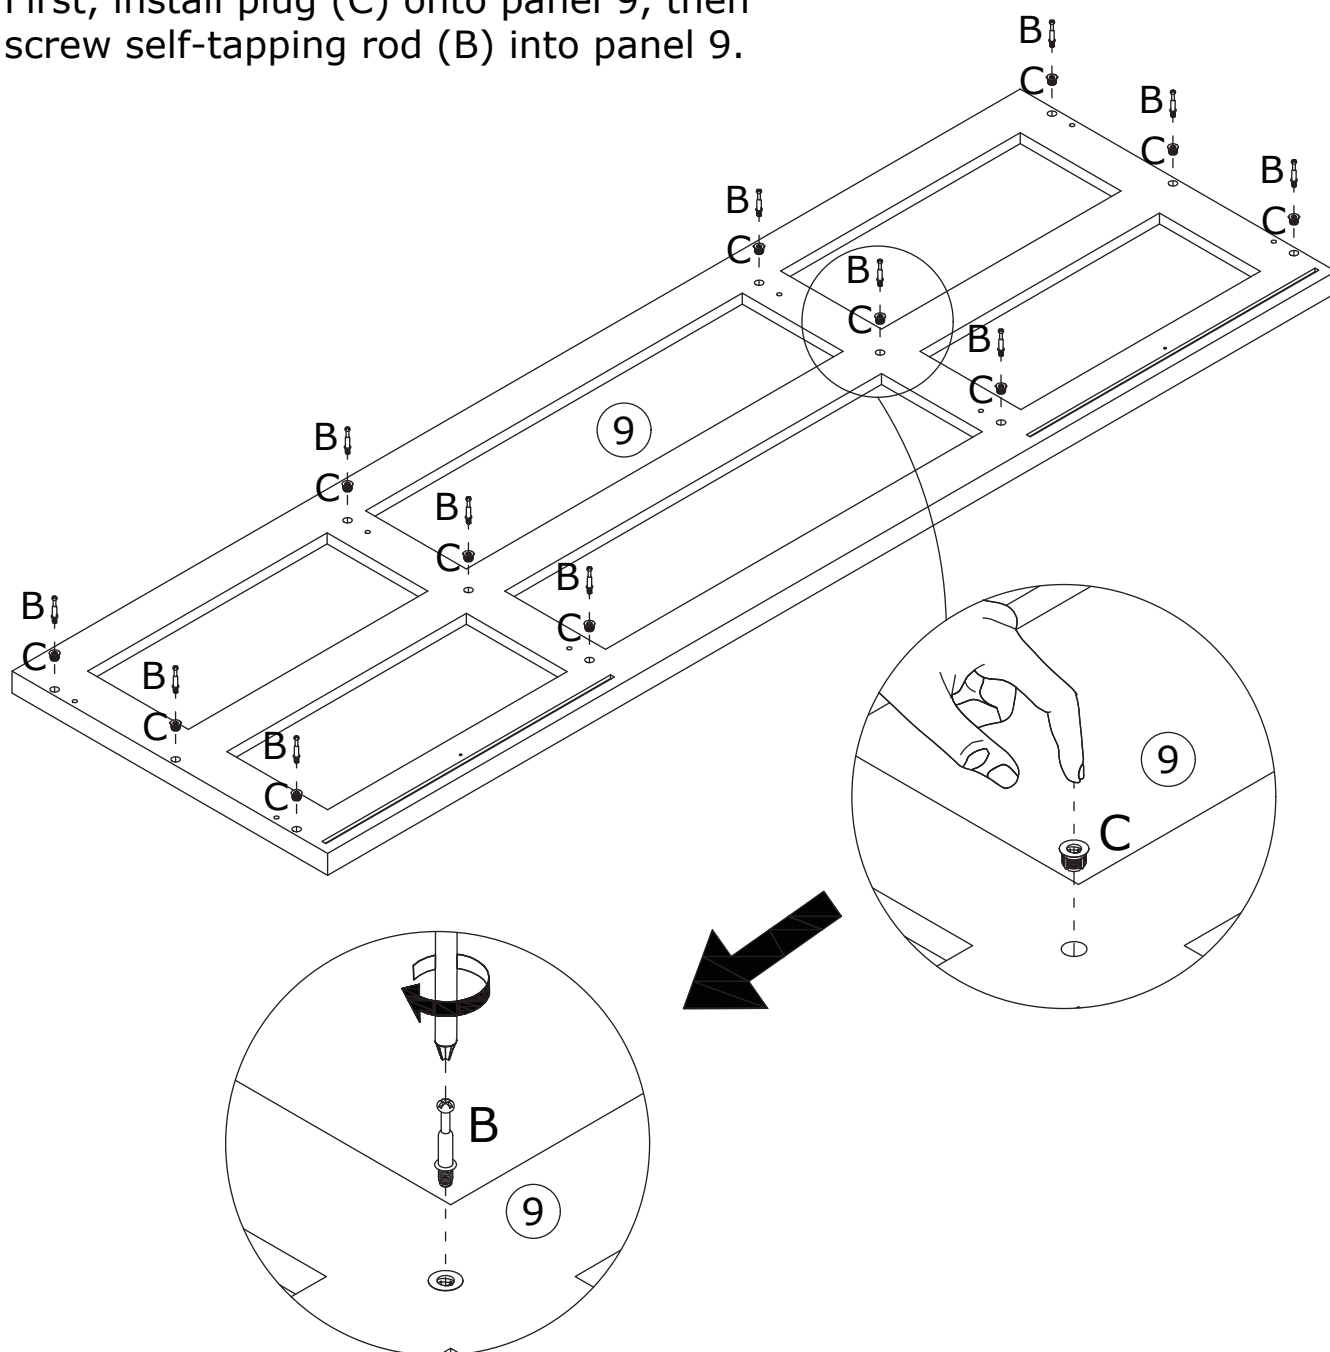

20

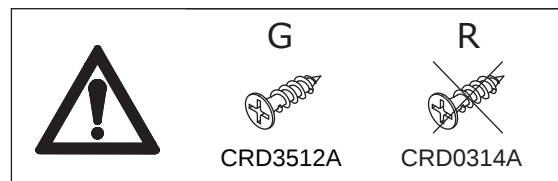

Secure bracket (U) to panel 9 using screw (G).


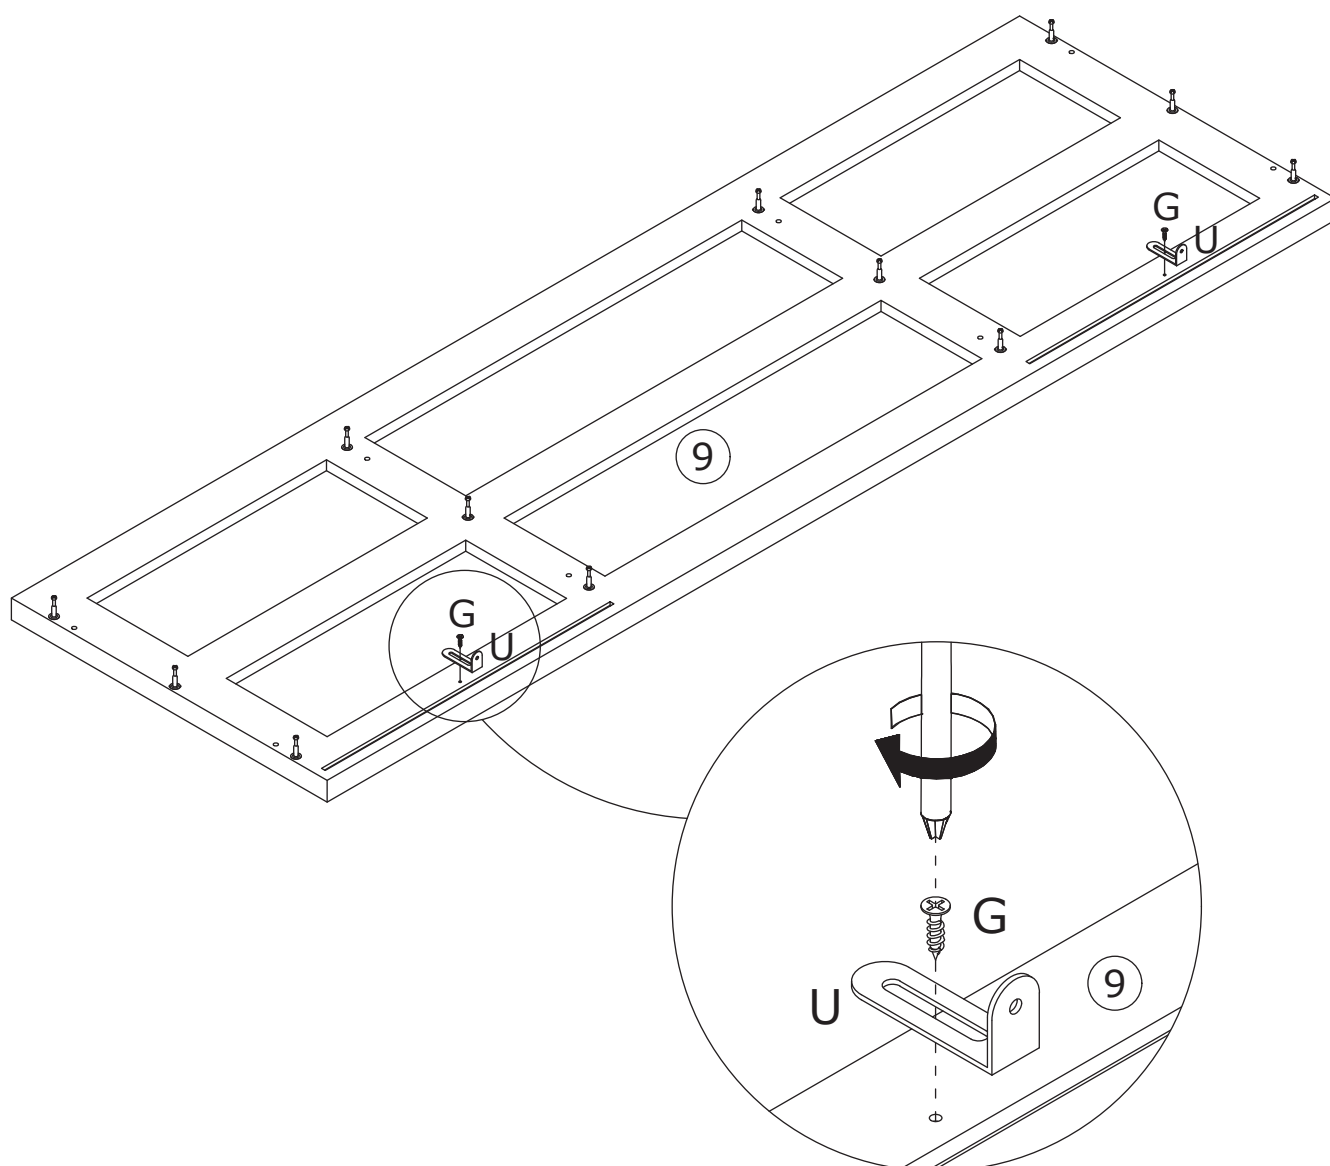


21


D x 8



CRF0630A



Insert wooden dowel (D) into the mounting unit.

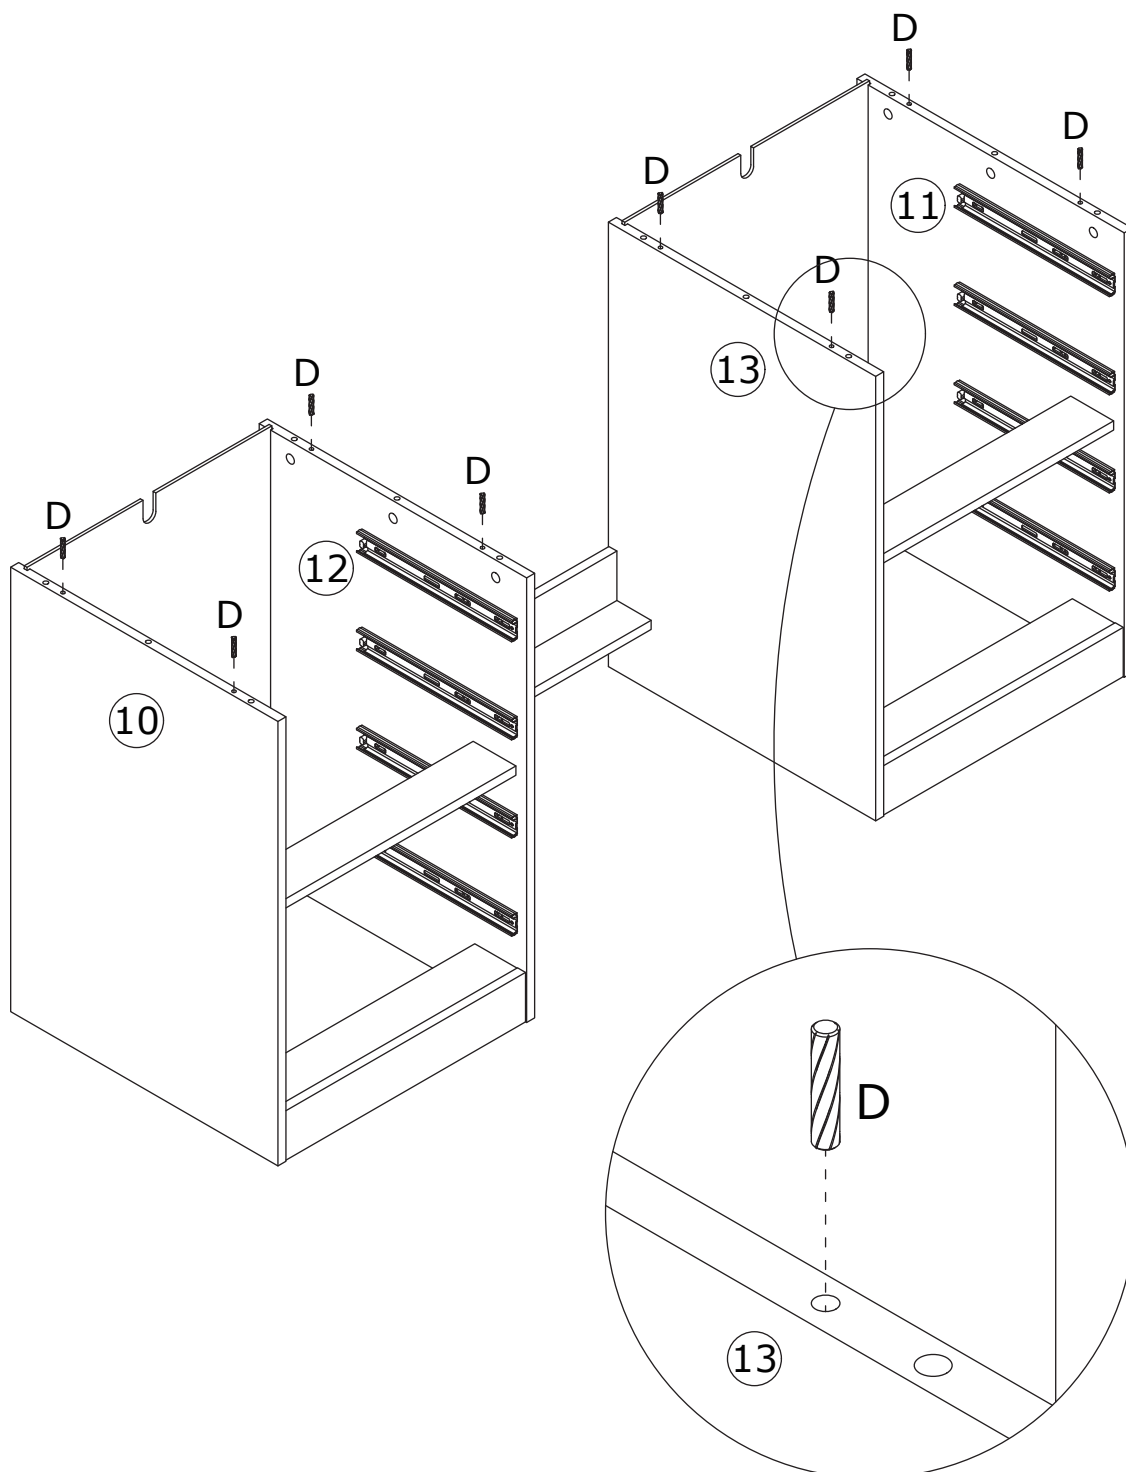


22




A x 12



CRB1595A




Connect panel 9 to the mounting unit,
then tighten by turning cam lock (A)
clockwise.

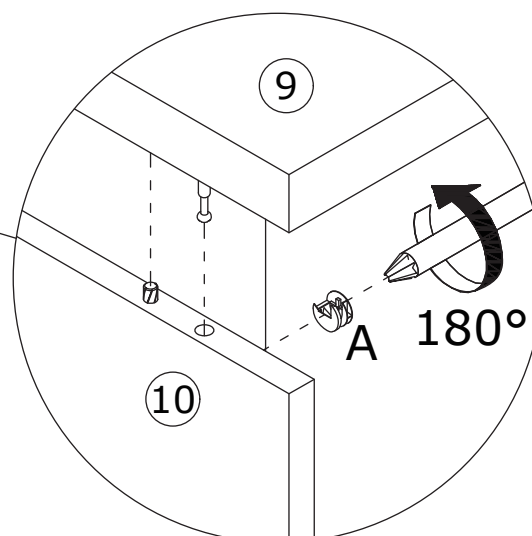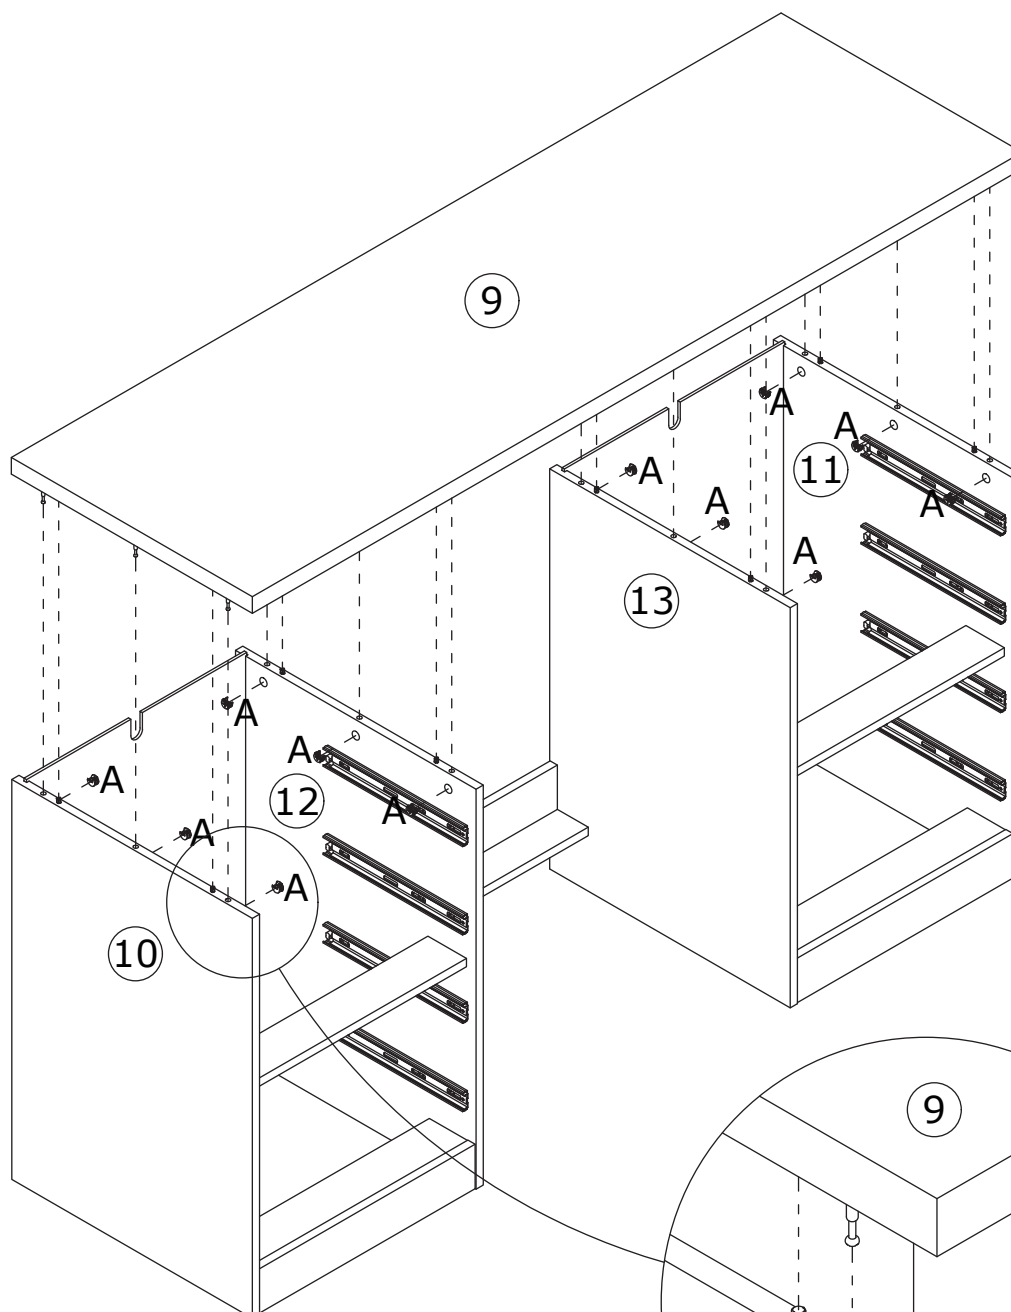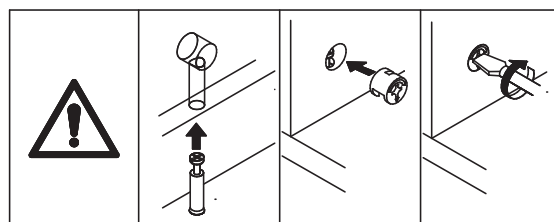

23


Q x 20



R x 20



CRD0314A



G




CRD3512A

R




CRD0314A

First, insert clip (Q) into the available slots,
then secure them with screw (R).

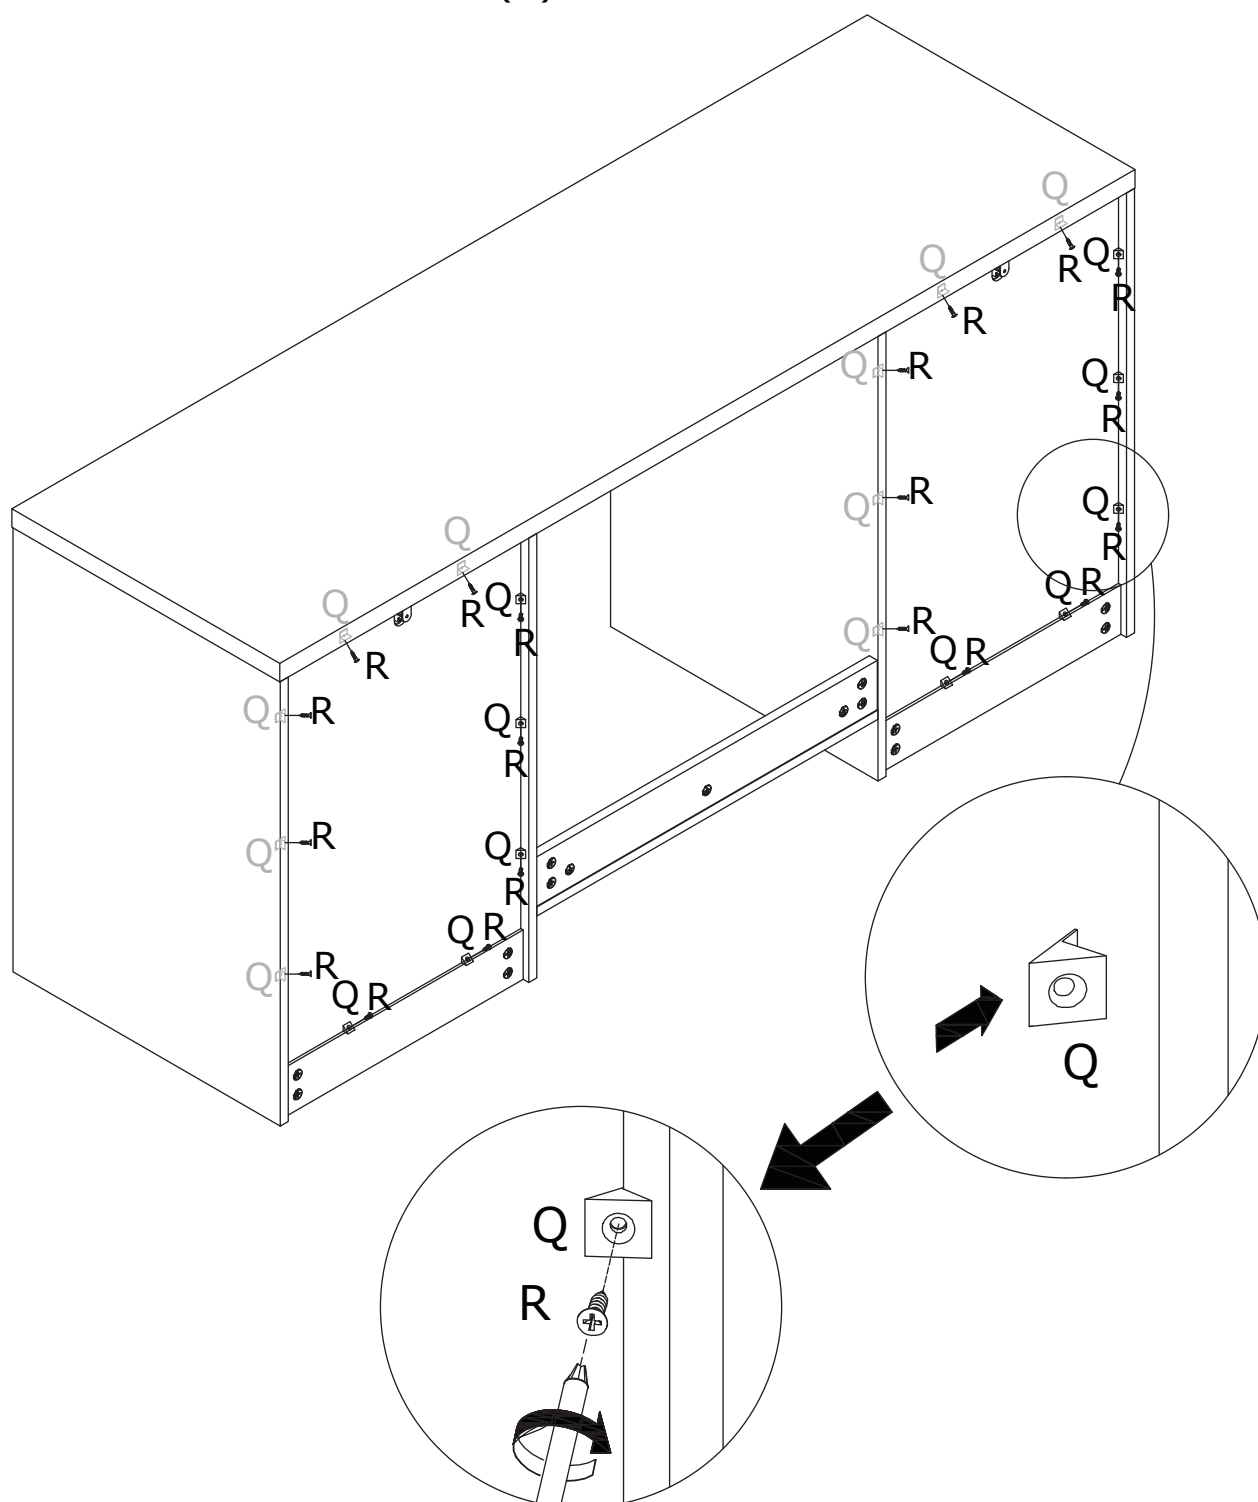


Choose the appropriate installation method based on the material of your wall.

- If it is a solid wall, please select Option A.
- If it is not a solid wall, please select Option B.

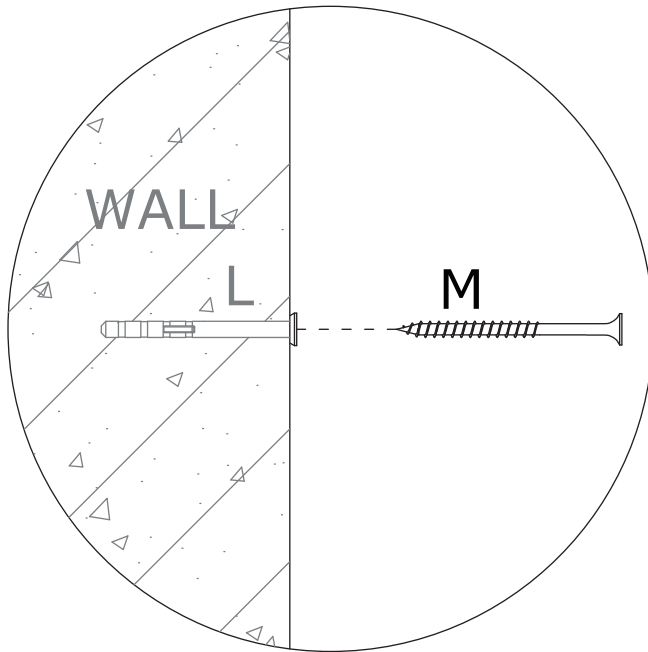


Option A

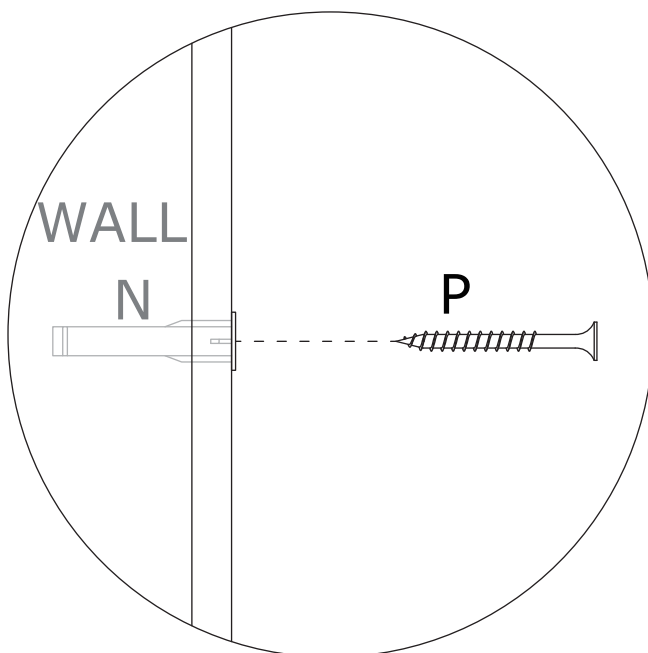

Option B

24




L x 2




M x 2



CRD0590A



Option A

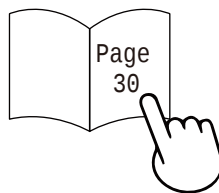


M



CRD0590A


P




CRD0468A

Install an anti-tipping device.
The wall is solid.

WALL

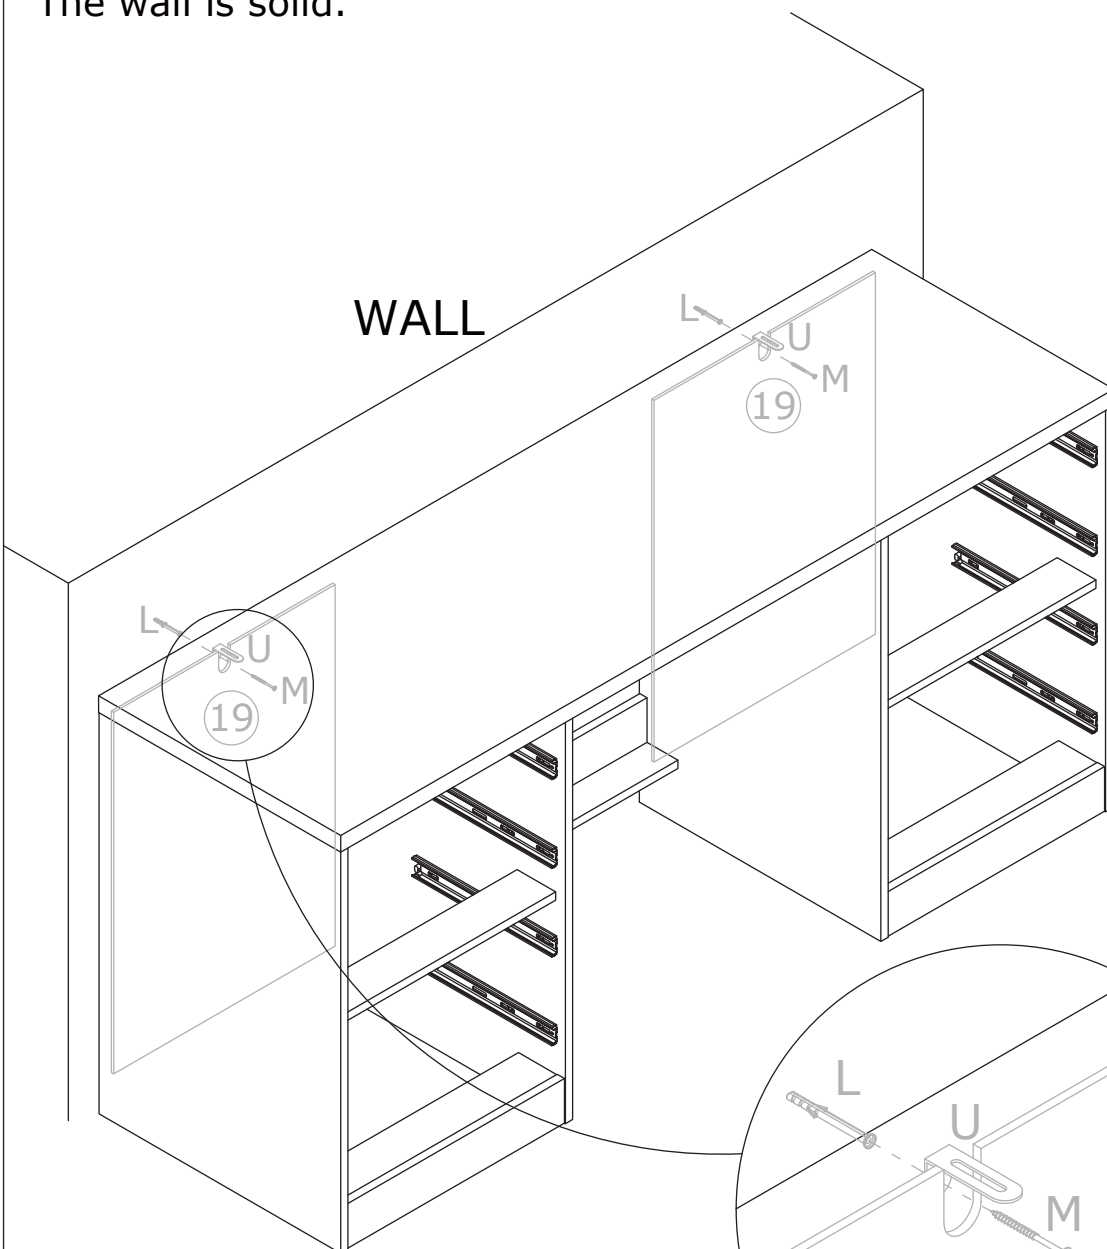


- 1.
- 2.
- 3.
- 4.

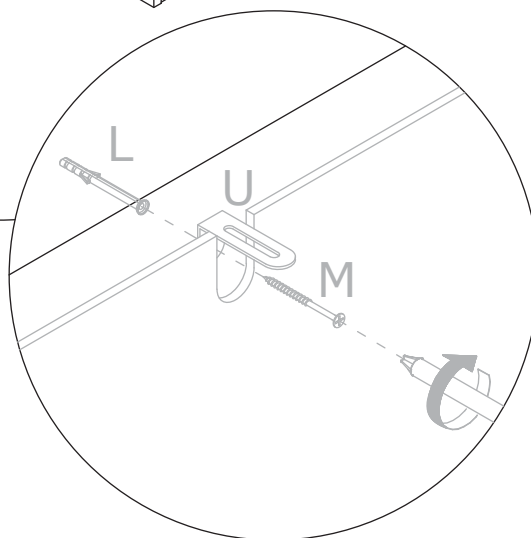


25




N x 2




P x 2



CRD0468A



Option B

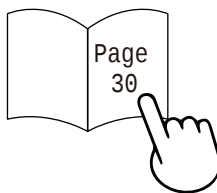


M



CRD0590A


P




CRD0468A

Install an anti-tip device.
The wall is not solid.

WALL

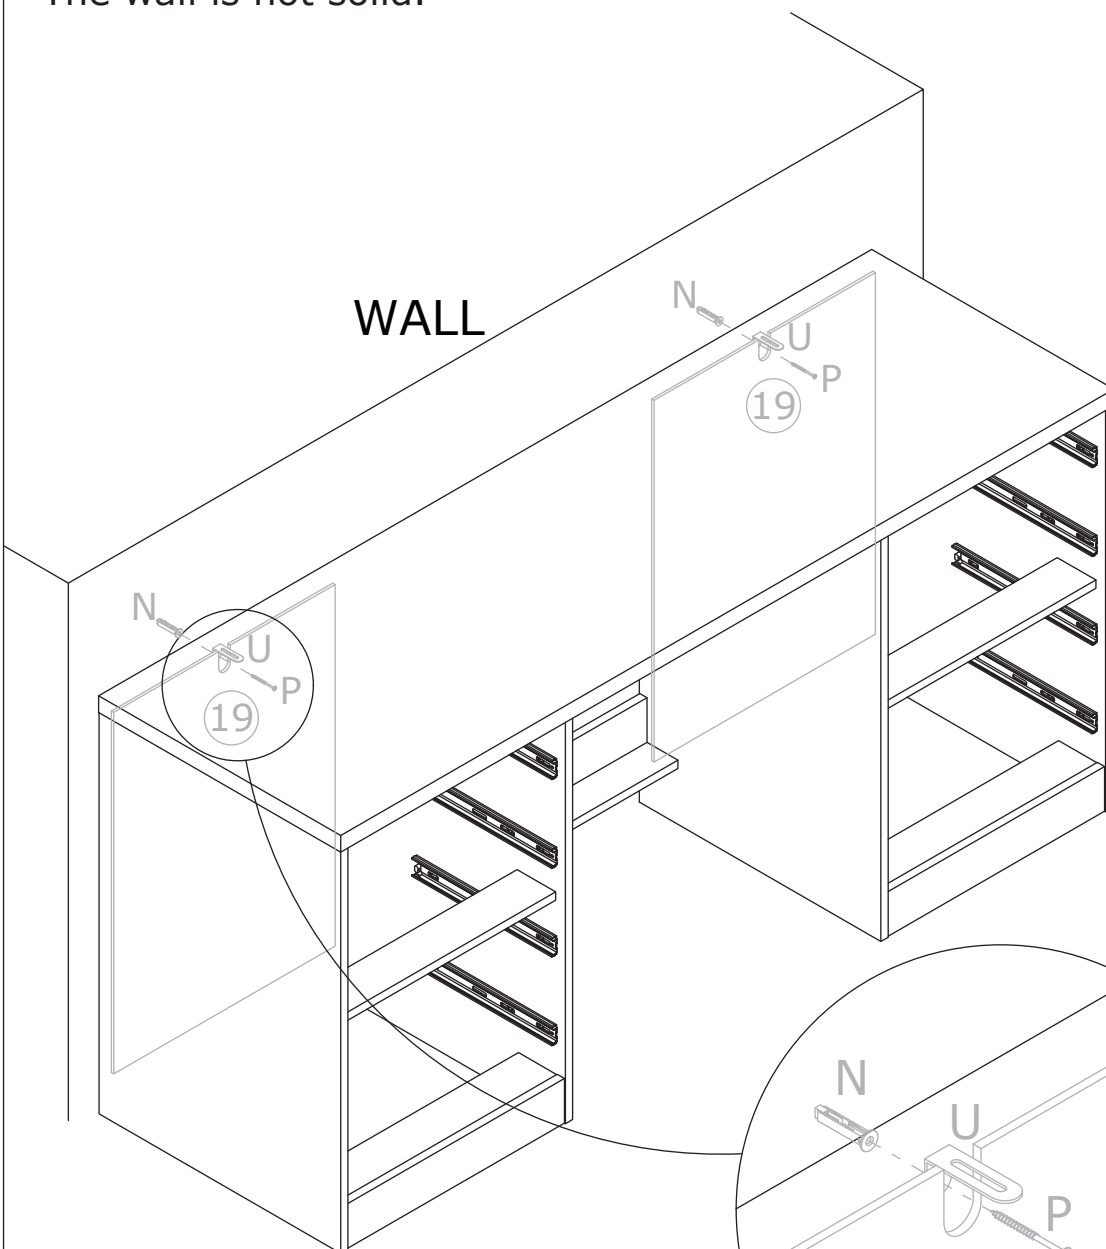


- 1.
- 2.
- 3.
- 4.

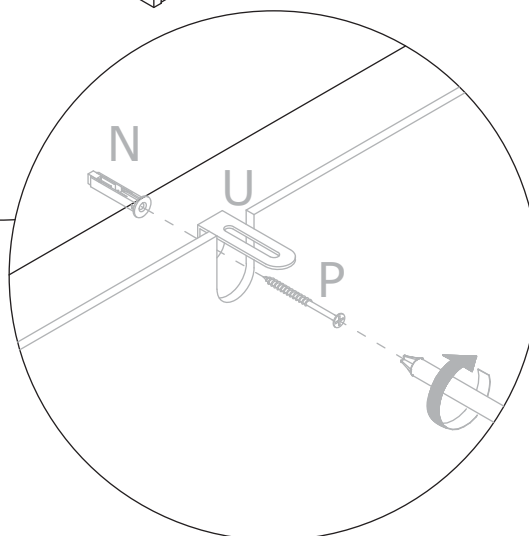


26

D x 3






CRF0630A


E x 4




CRC0540A




Connect panel 1 to panel 6 using wooden dowel (D), and secure them with screw (E).

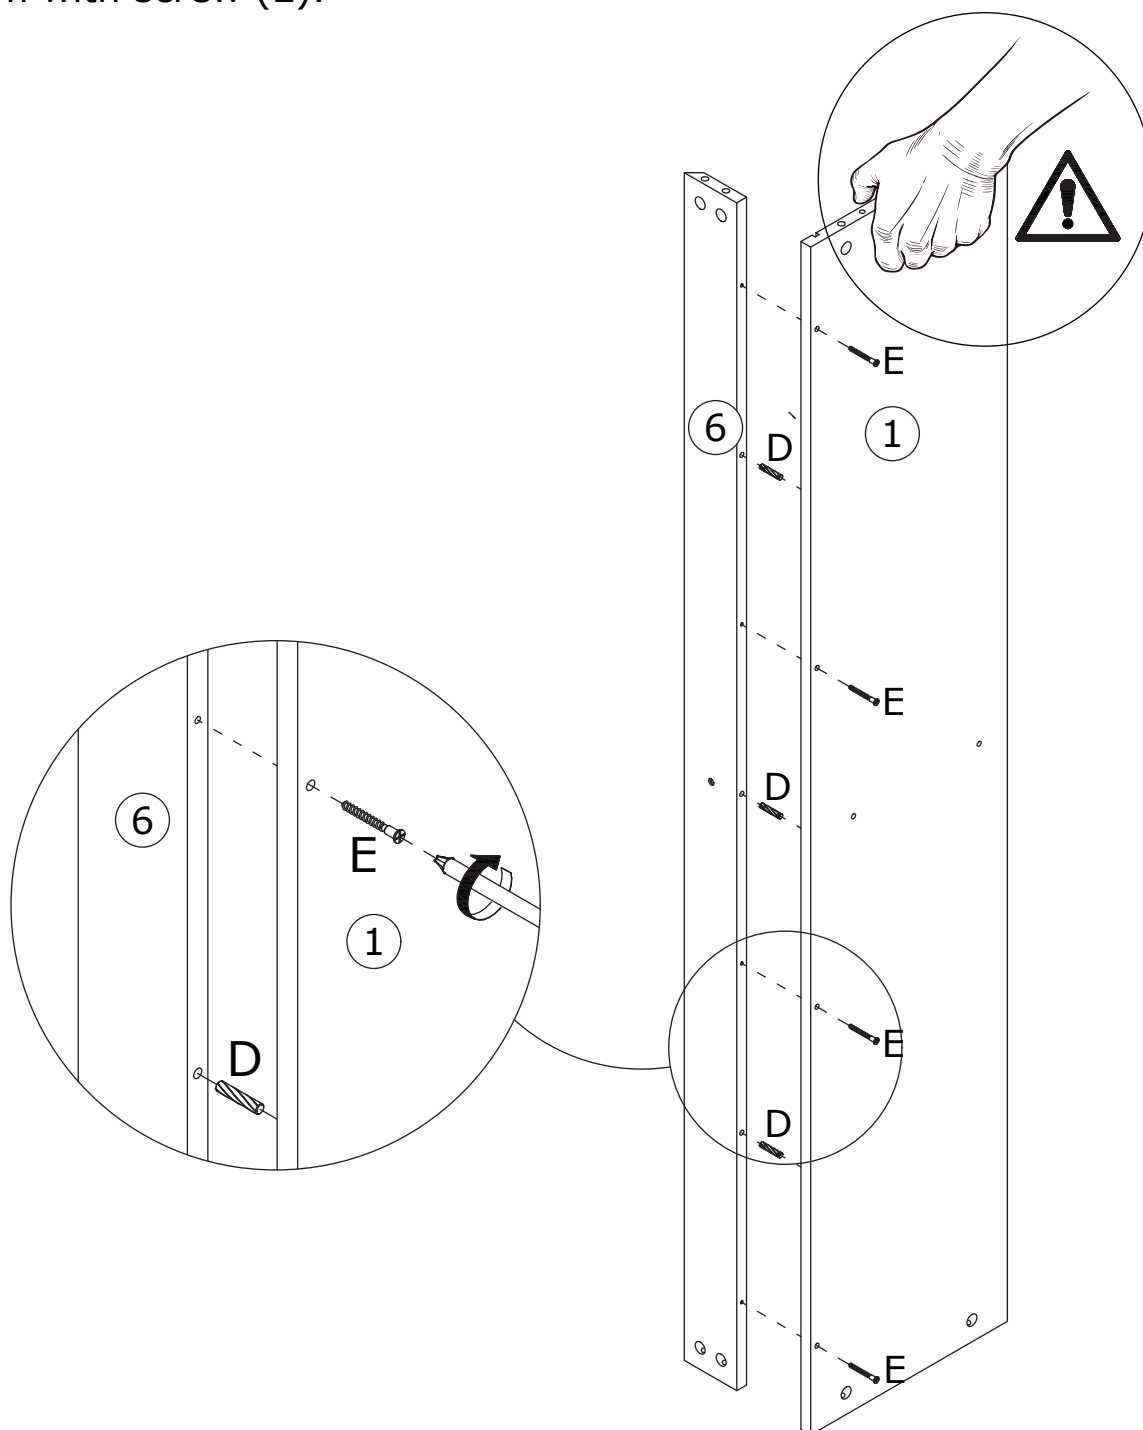

27

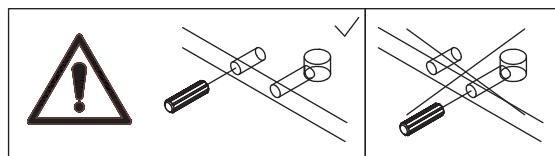

Connect panel 3 to panel 7 using wooden dowel (D), and secure them with screw (E).

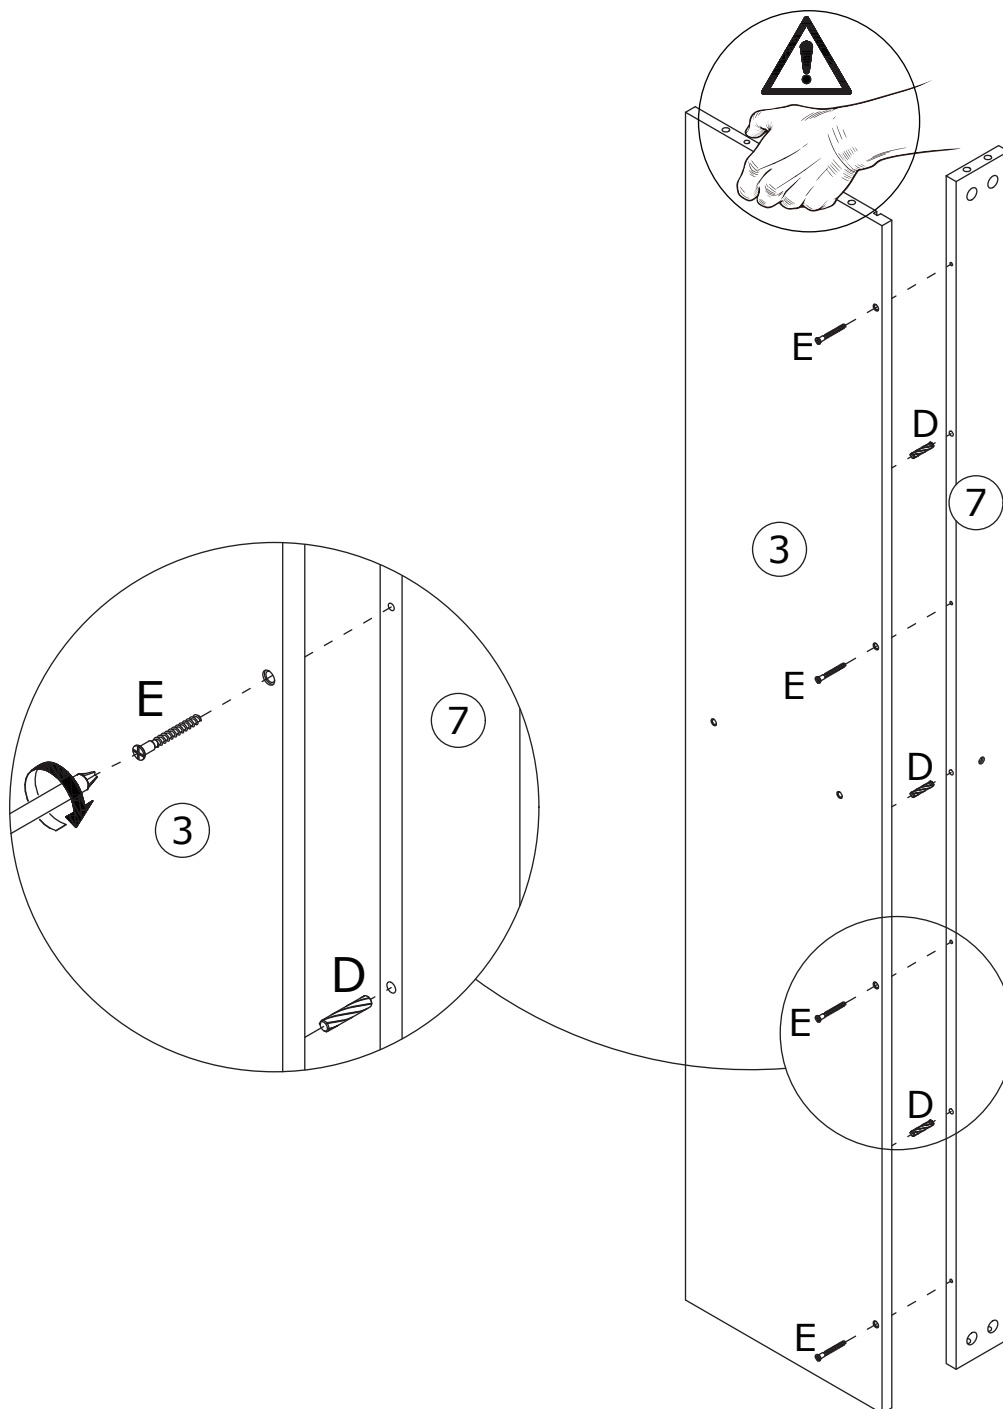


28

D x 4






CRF0630A


E x 4



CRC0540A




Connect panel 1 and 3 to panel 4 using wooden dowel (D), and secure them with screw (E).

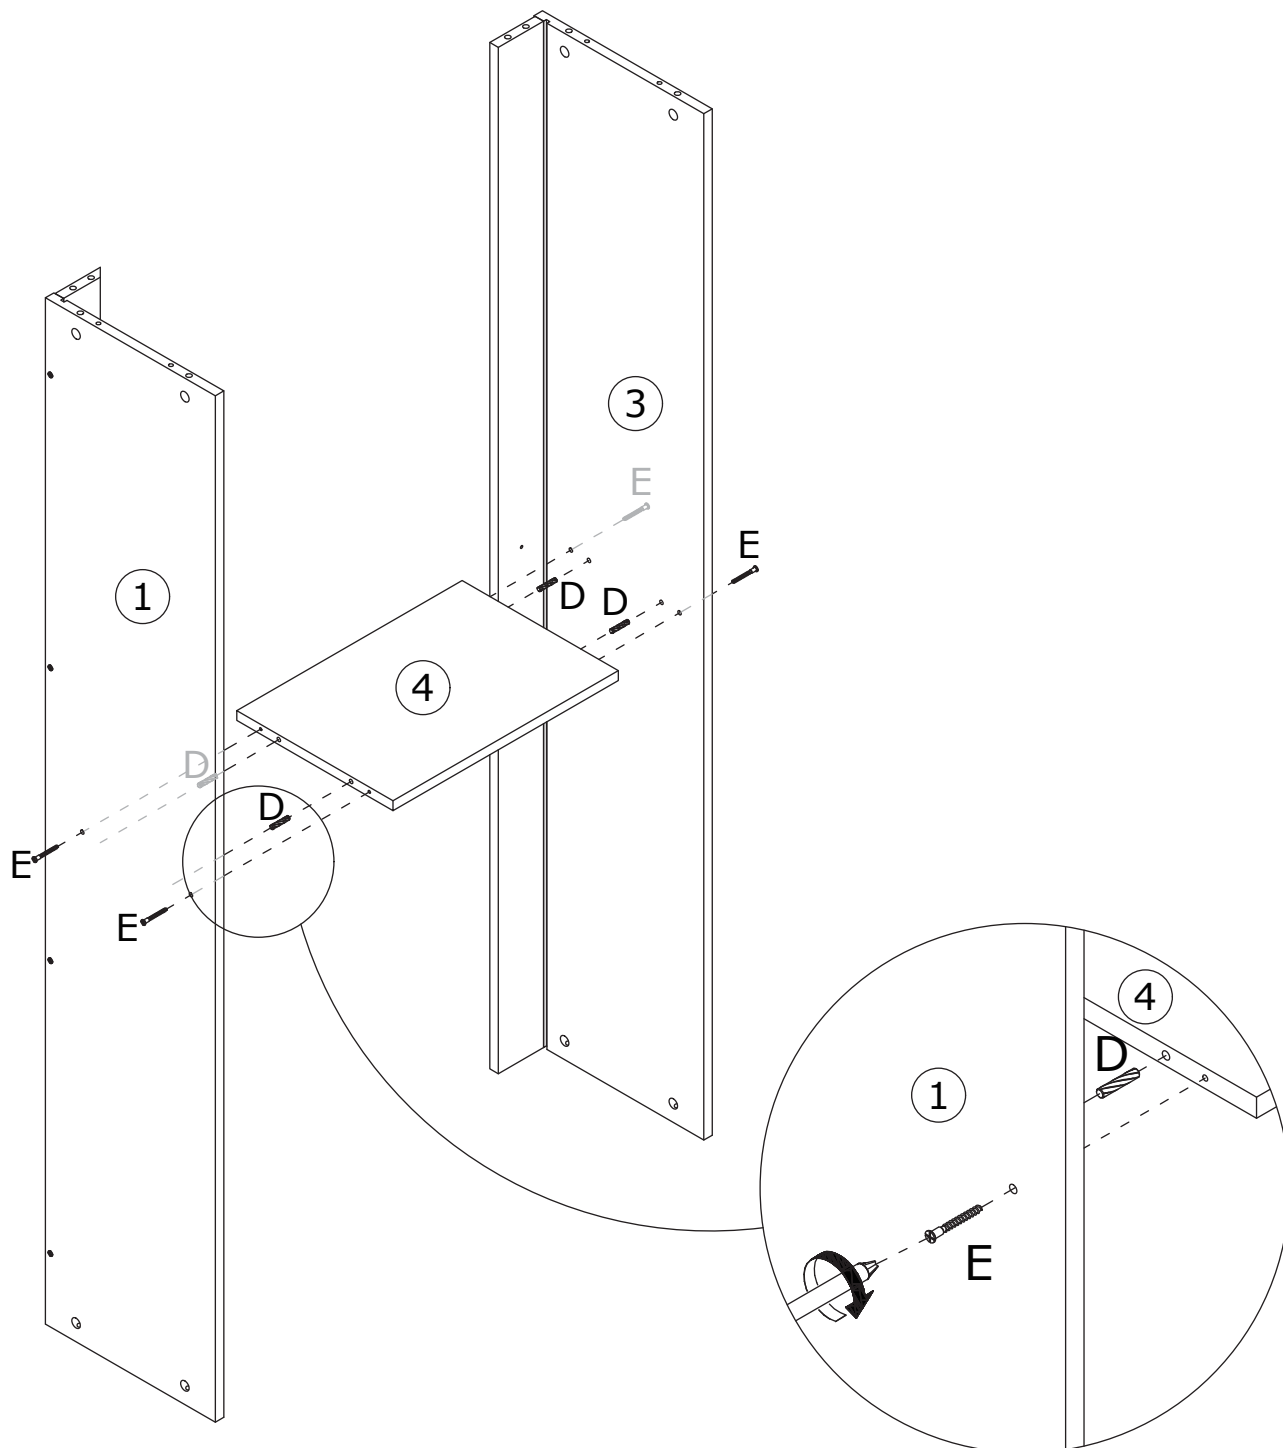




29

B x 16







CRA0635B

C x 16

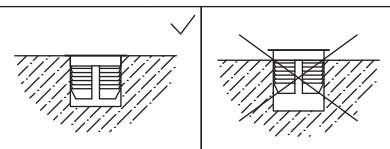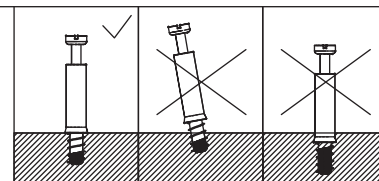

First, install plug (C) onto panel 2,
then screw self-tapping rod (B) into
panel 2.

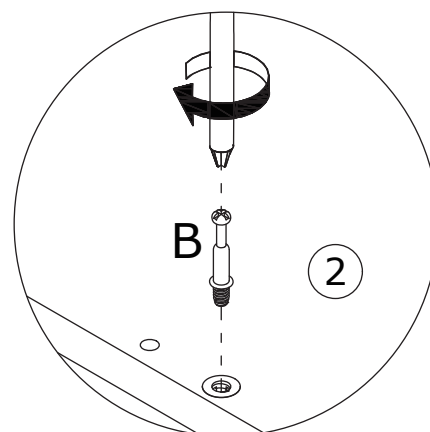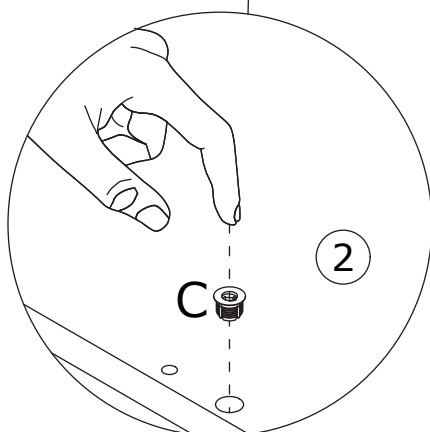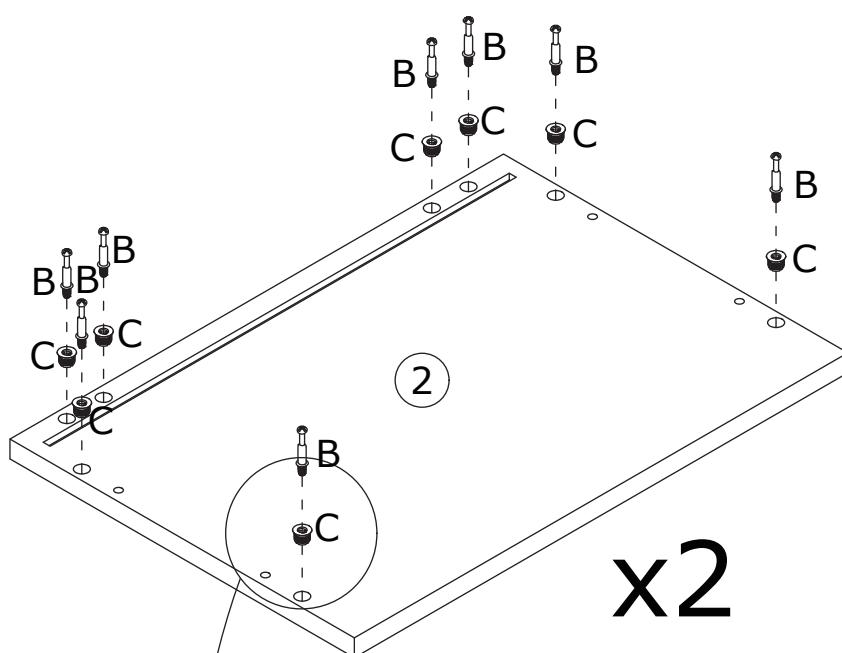


30

A x 8




CRB1595A




D x 4



CRF0630A




Attach panel 2 to the mounting unit using wooden dowel (D), then tighten by turning cam lock (A) clockwise.

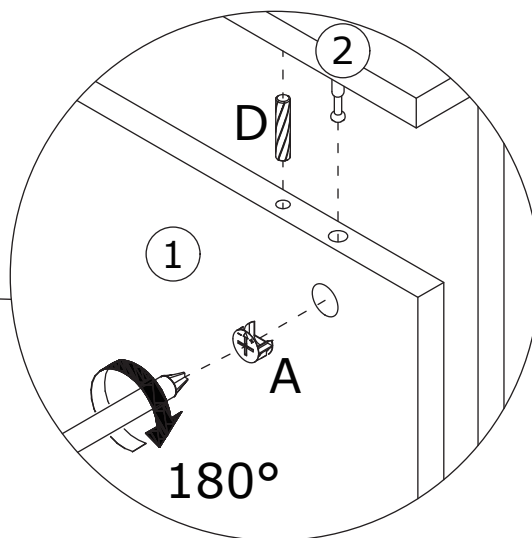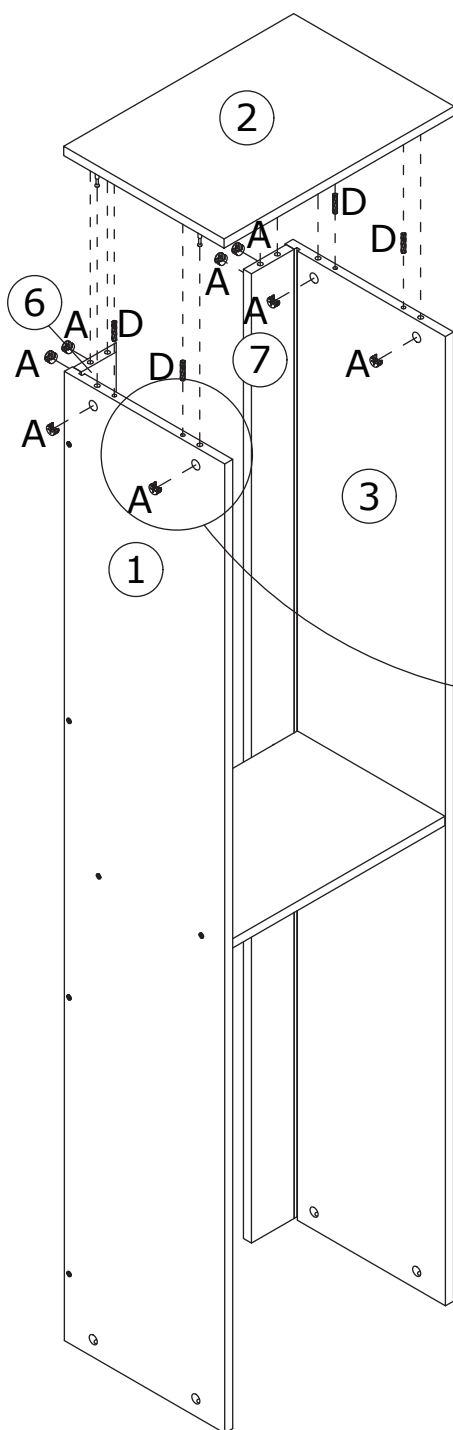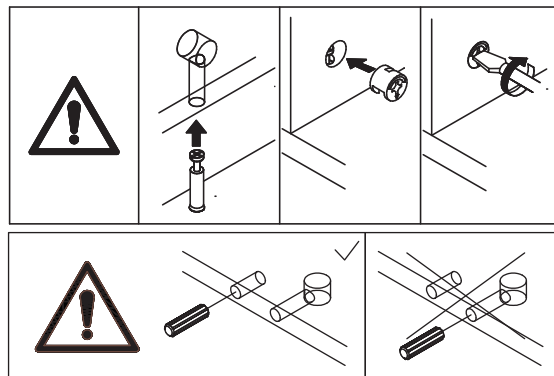

31

Turn the cabinet upside down and insert panel 5 into the available slots.

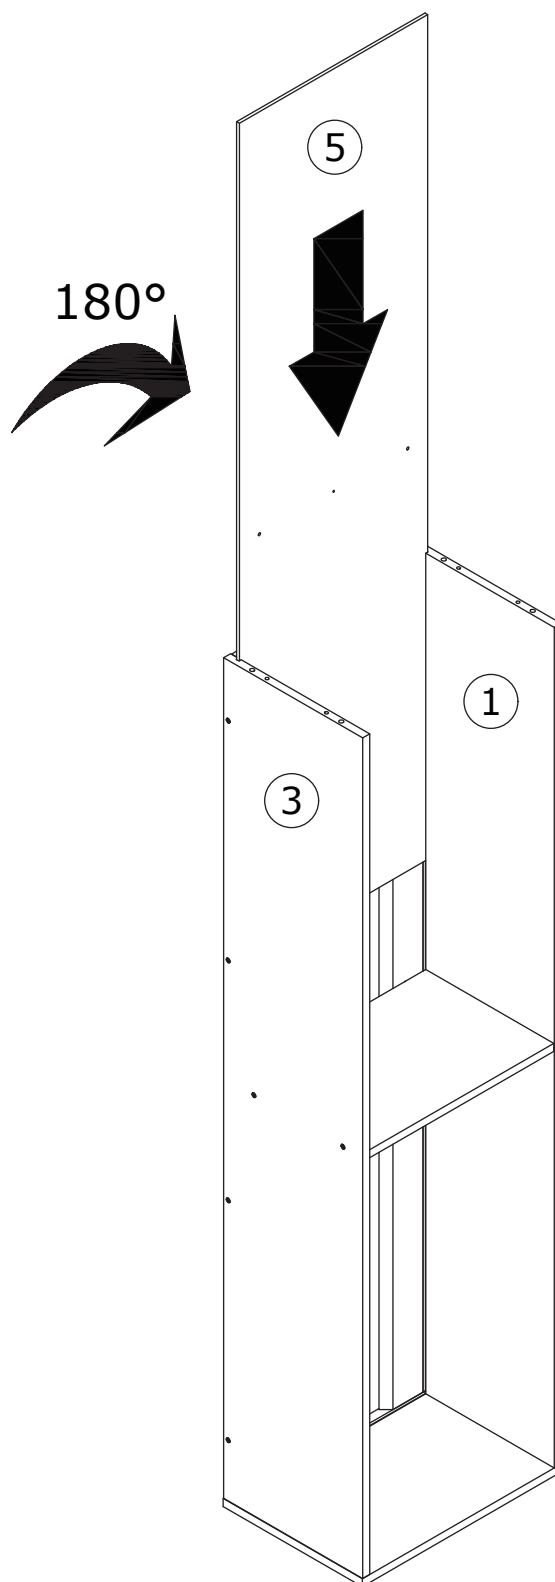


32

A x 8




CRB1595A




D x 4



CRF0630A



Attach panel 2 to the mounting unit using wooden dowel (D), then tighten by turning cam lock (A) clockwise.

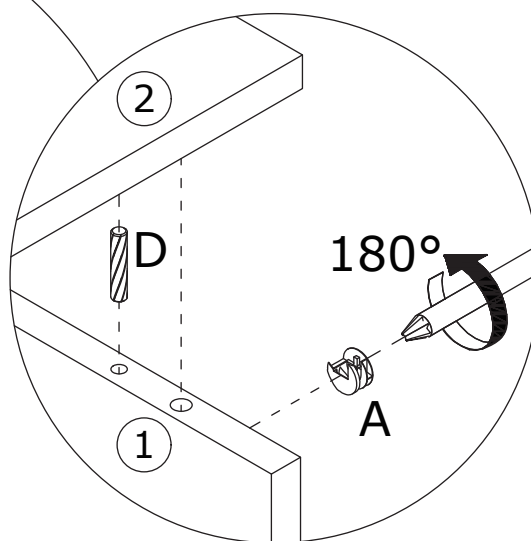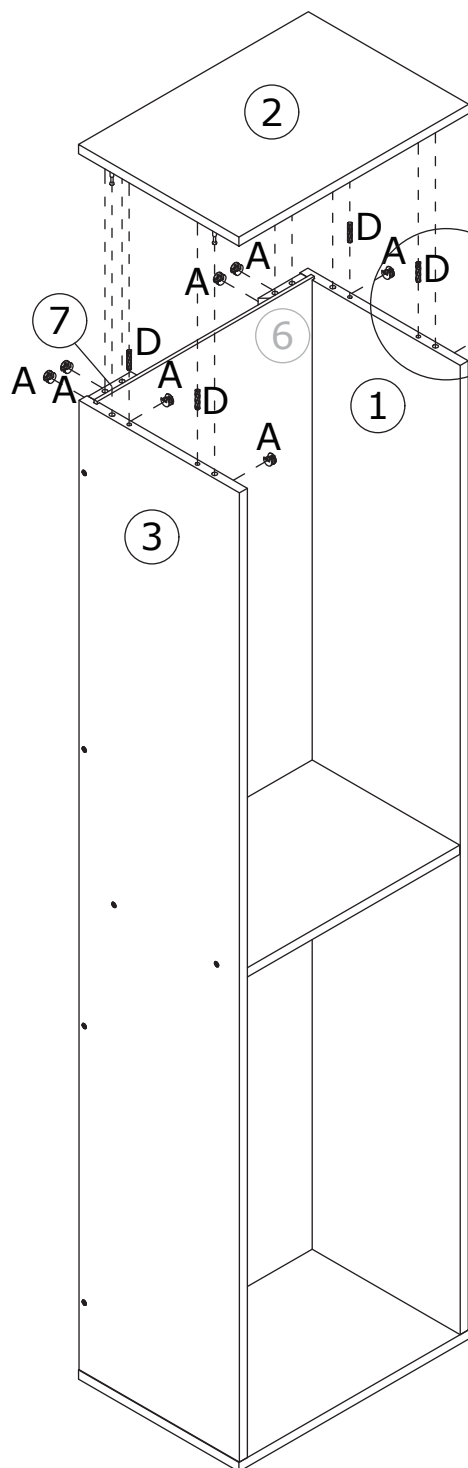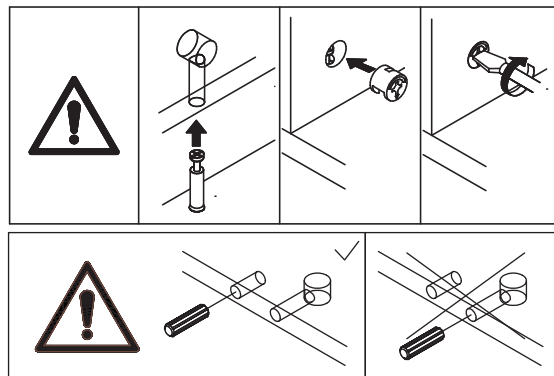


33


K x 2



S x 1




Turn the cabinet upside down and secure panel 6, 7, and 5 to panel 4 using screw (K) and screw (S).

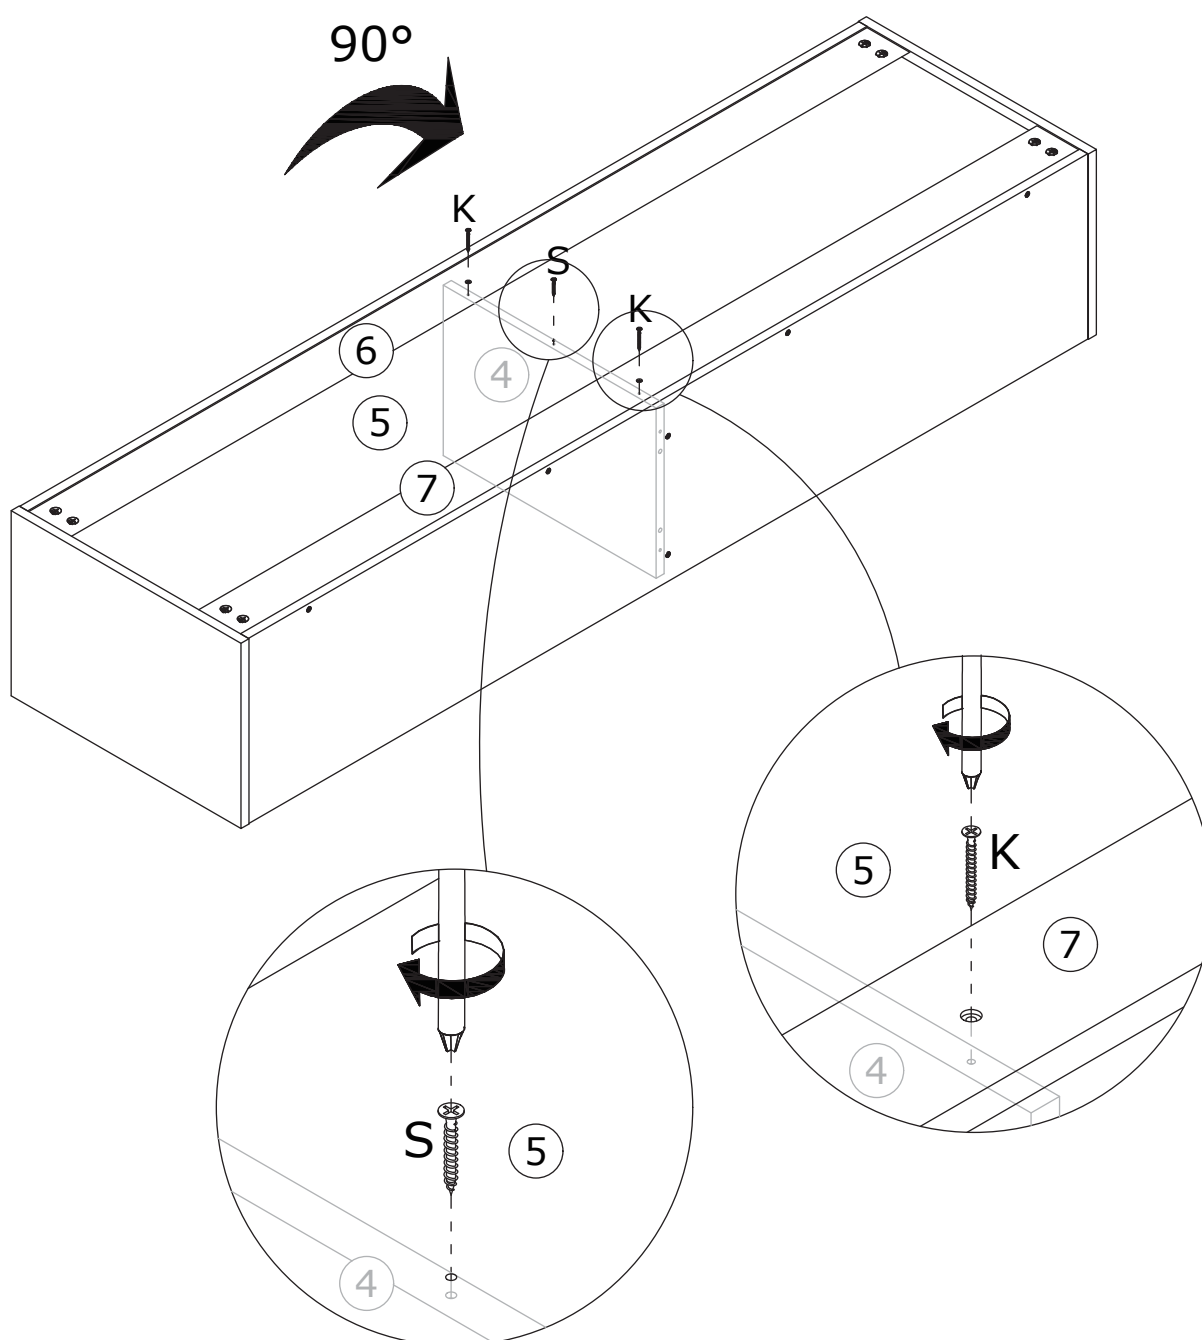

34


Q x 4



R x 4



CRD0314A



G




CRD3512A

R



CRD0314A

First, insert clip (Q) into the available slots, then secure them with screw (R).

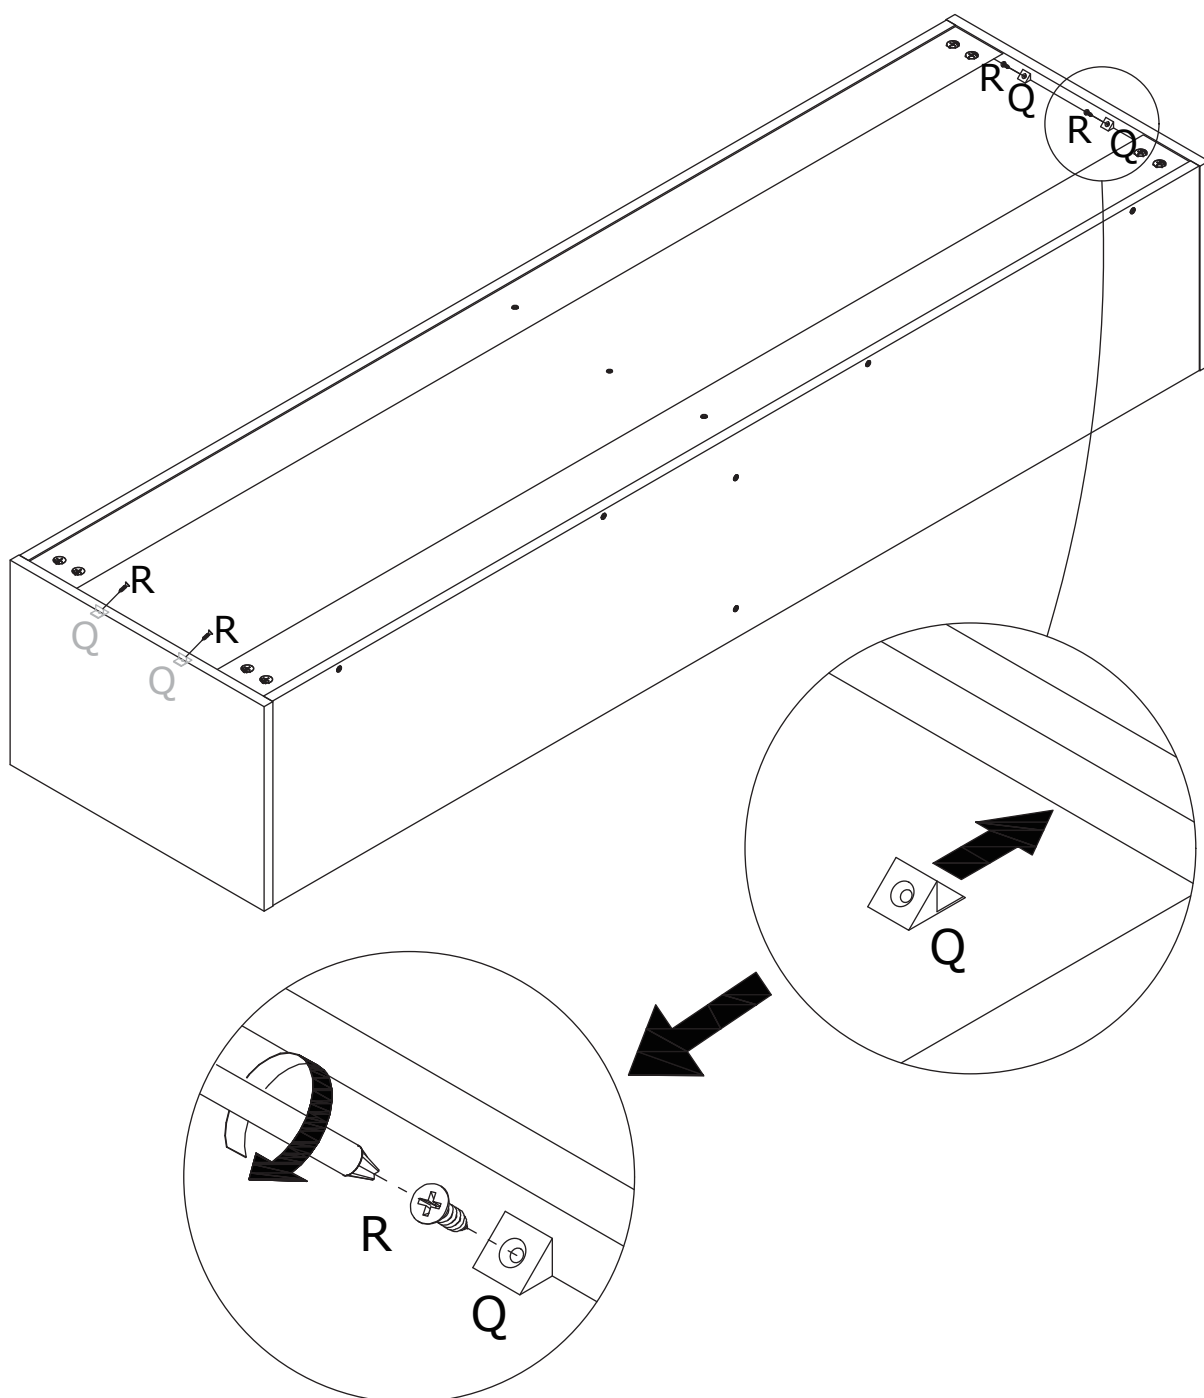




35

T x 6




Cover holes using sticker (T).

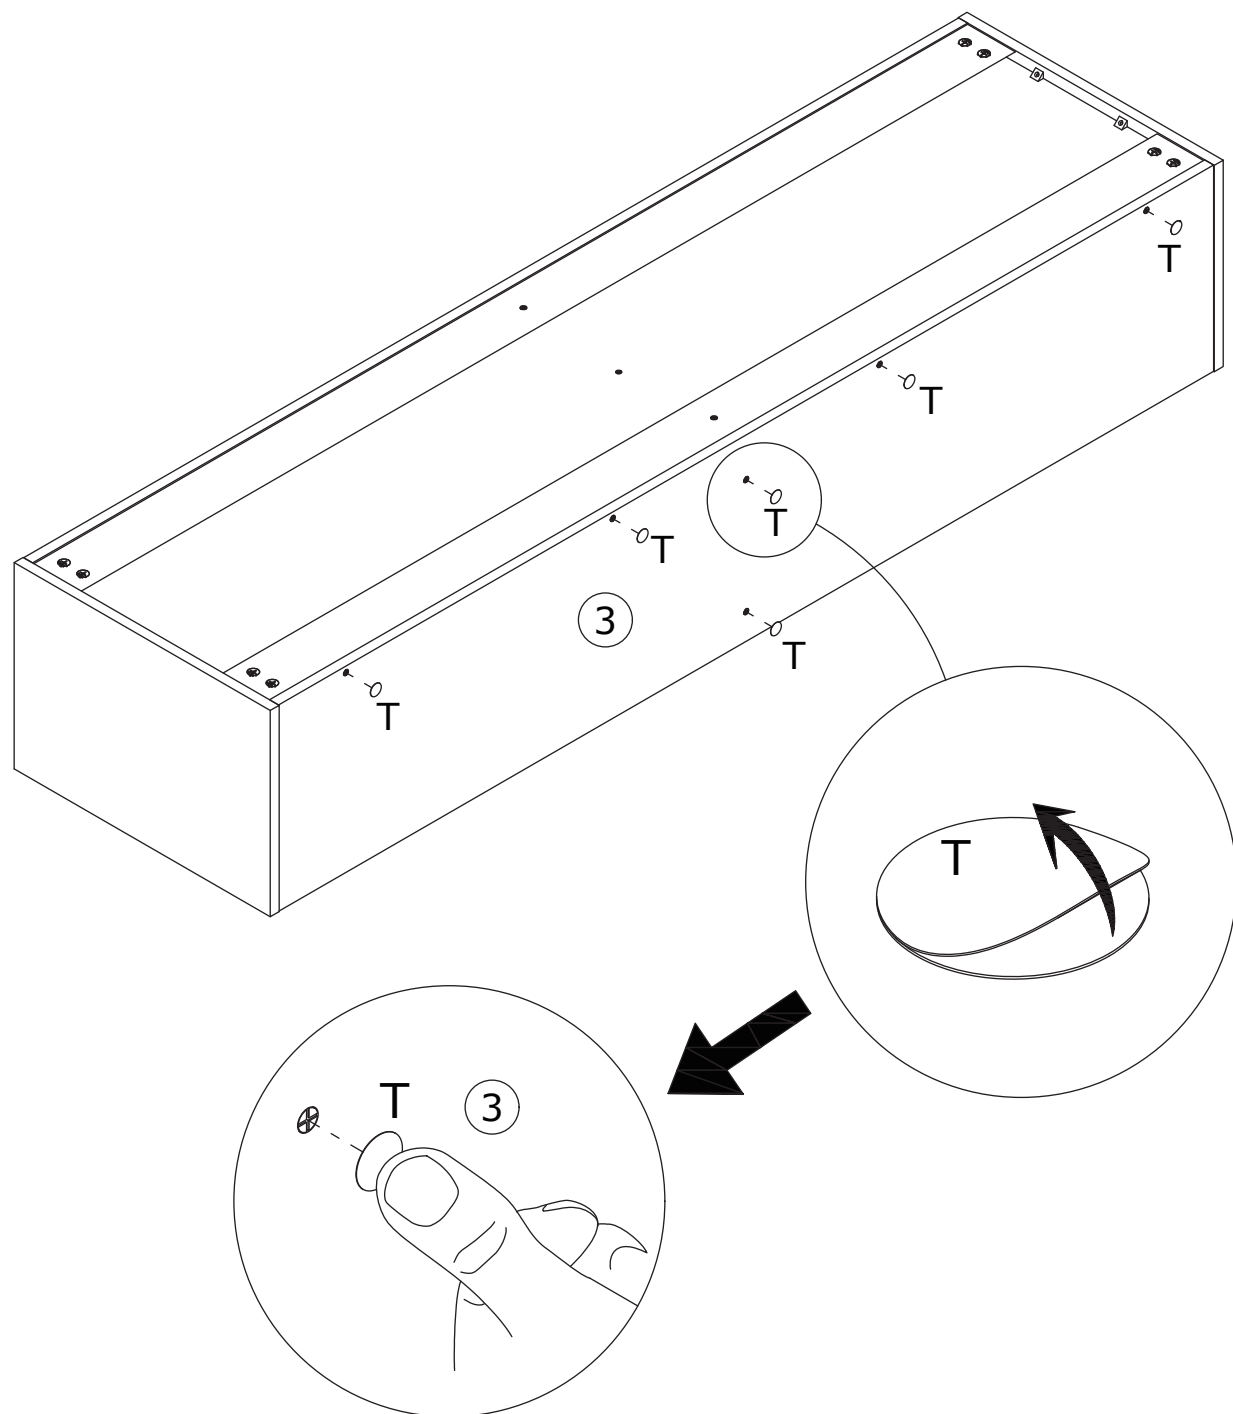

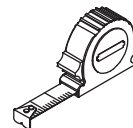


If you purchase other cabinets in this series, please refer to this step; if not, please ignore this step.

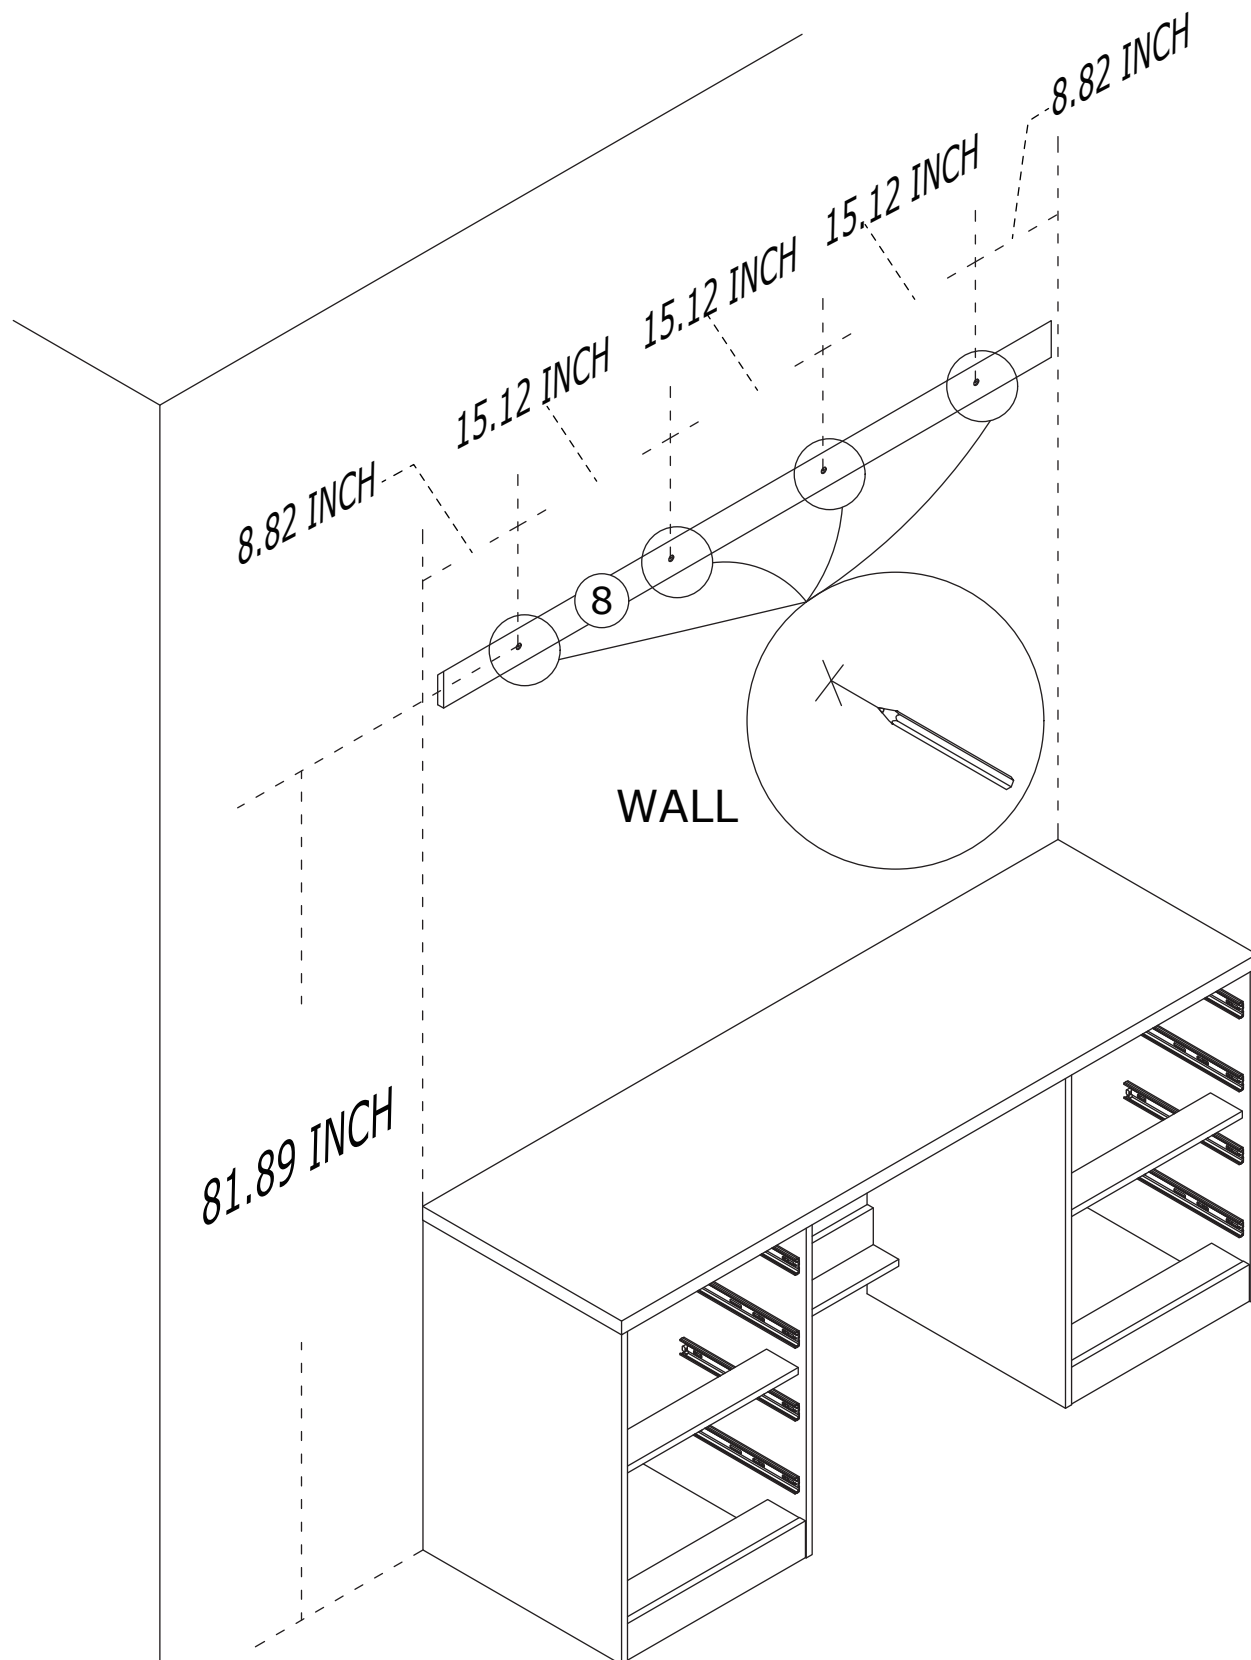

37



L x 4



M x 4



CRD0590A



Option A




M




CRD0590A

P




CRD0468A




1.

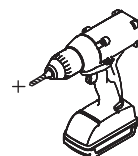

2.

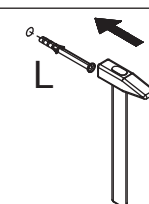

3.

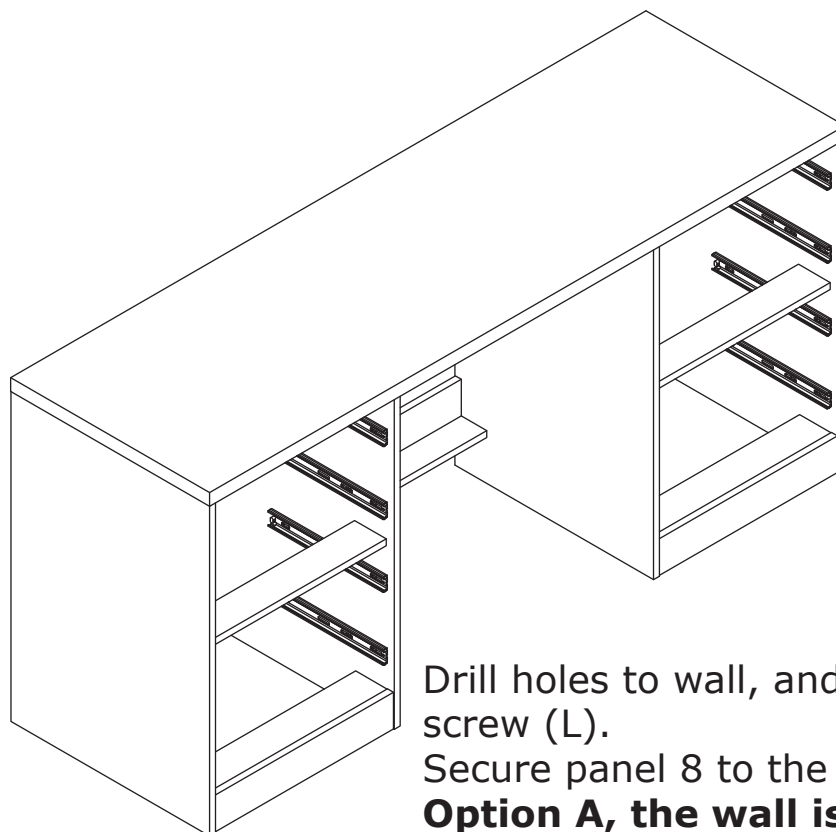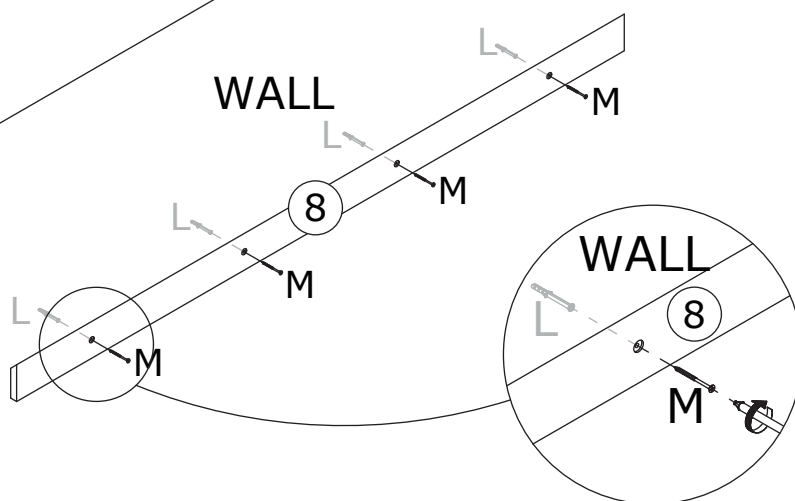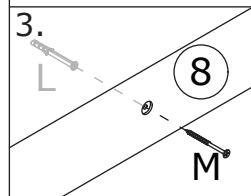


Drill holes to wall, and insert the expansion screw (L).

Secure panel 8 to the wall using screw (M).


Option A, the wall is solid.

38



N x 4




P x 4




CRD0468A



Option B

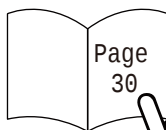


M




CRD0590A

P




CRD0468A




1.

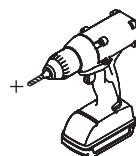

3.

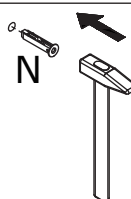

3.

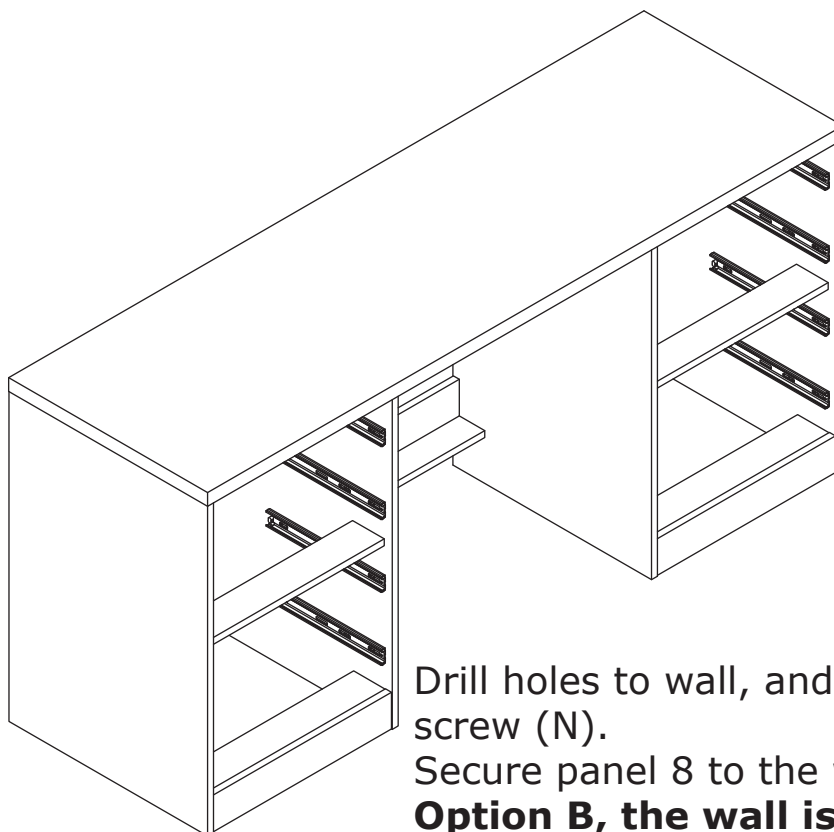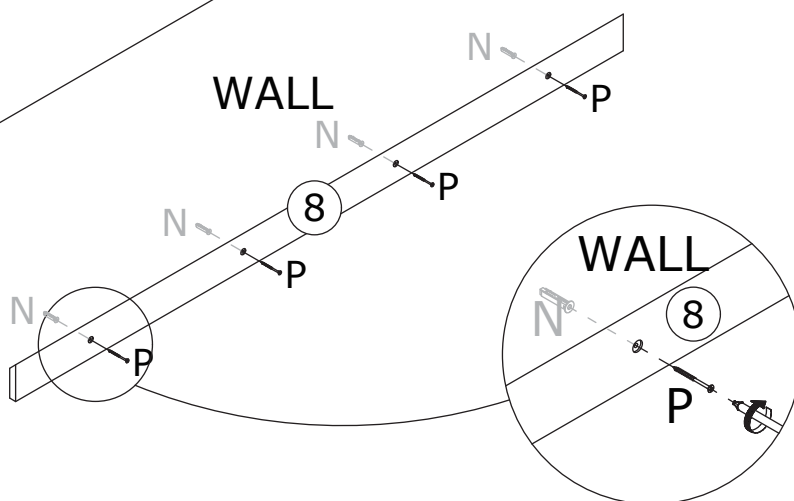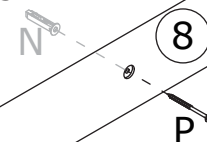


Drill holes to wall, and insert the expansion screw (N).

Secure panel 8 to the wall using screw (P).



Option B, the wall is not solid.

39

Please have two or more people place the top cabinet onto panel 8.

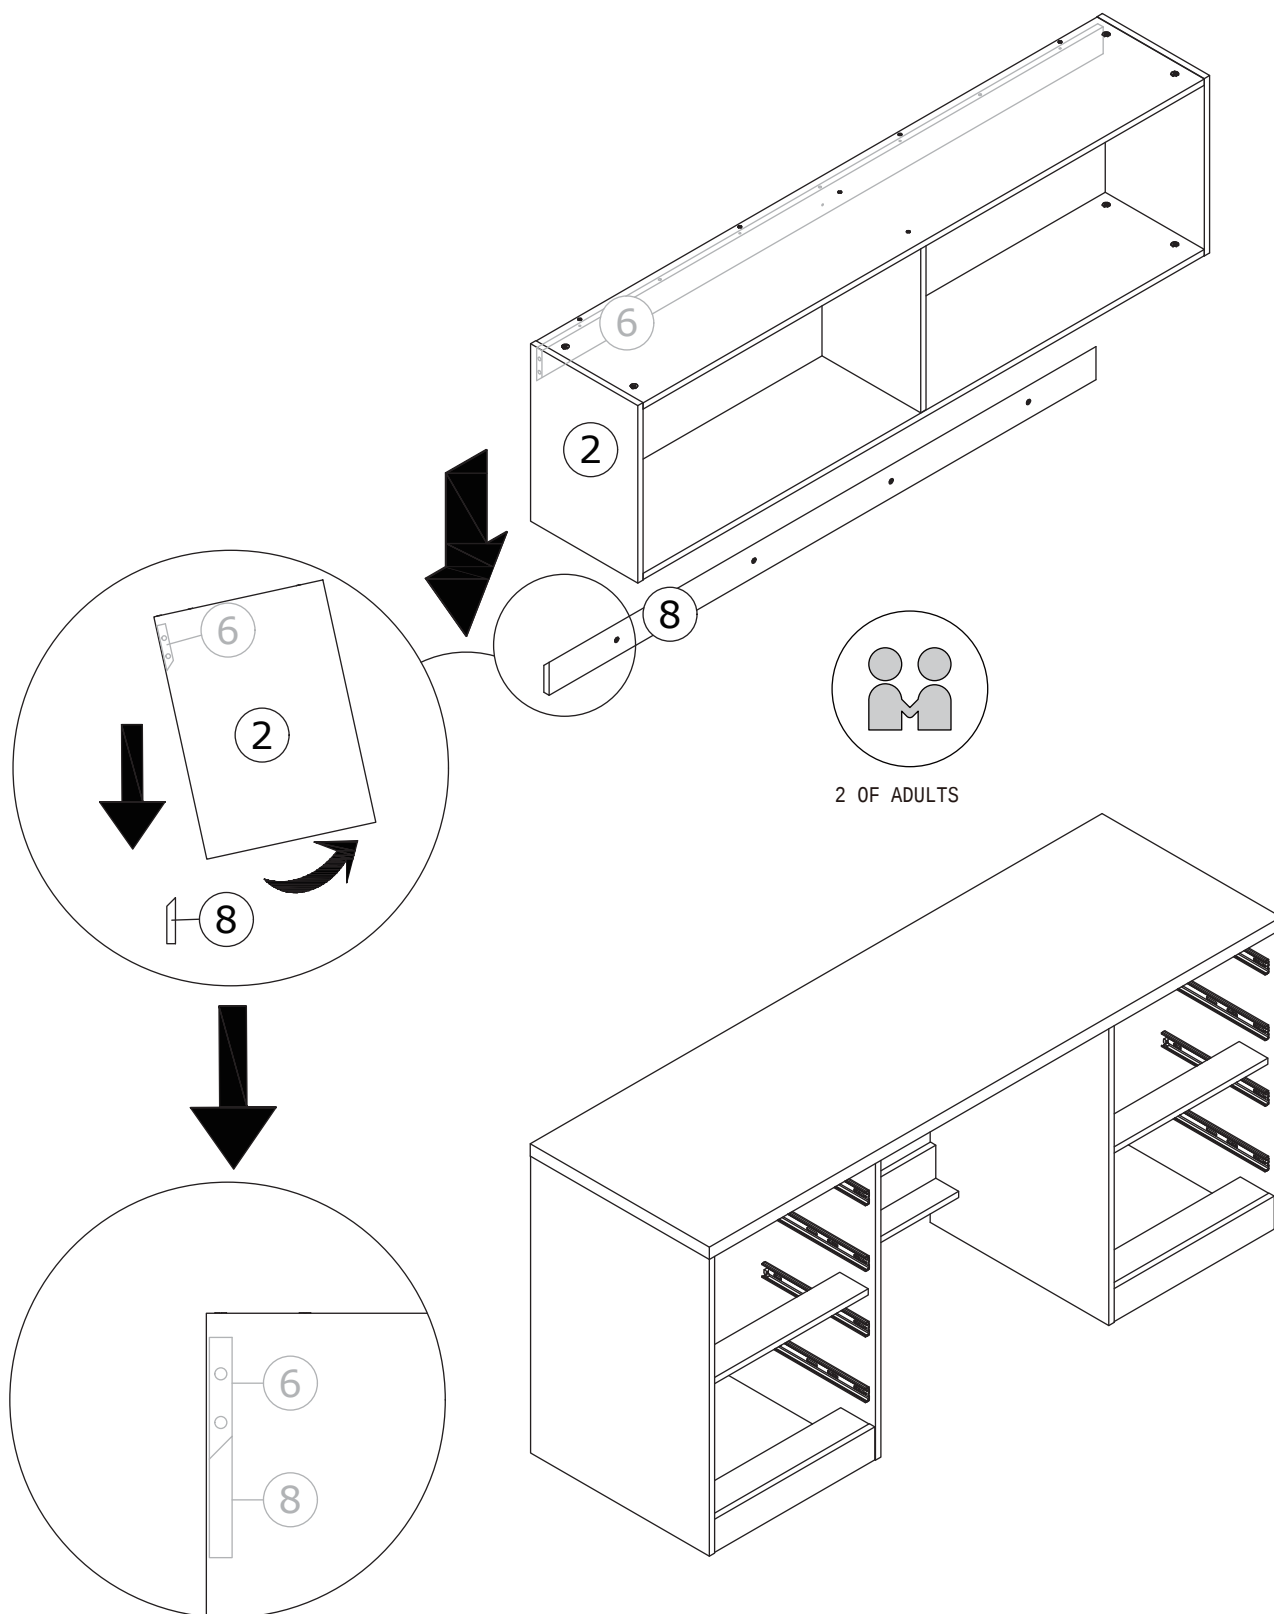


If you purchase other cabinets in this series, please refer to this step; if not, please ignore this step.

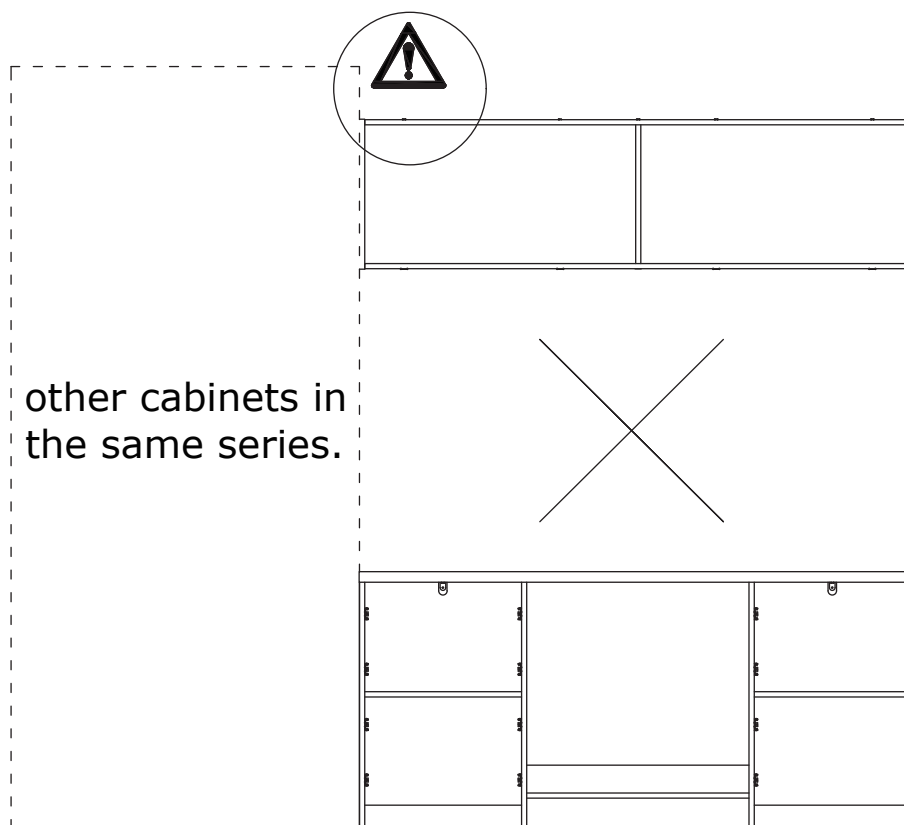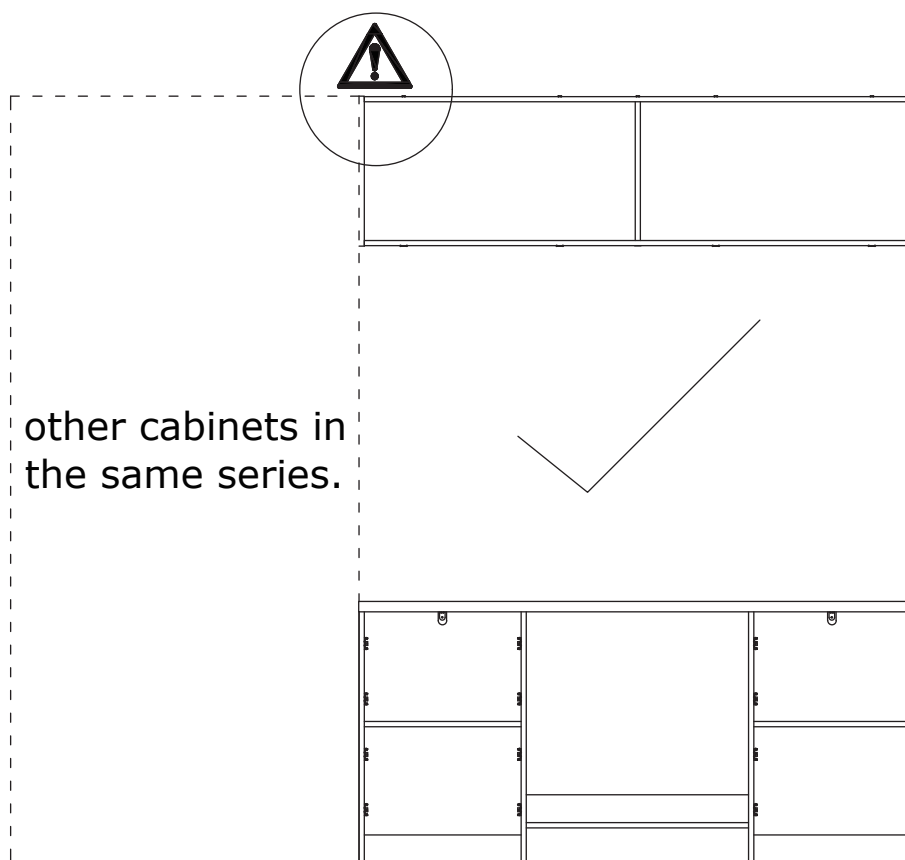




40

B x 32




CRA0635B

C x 32

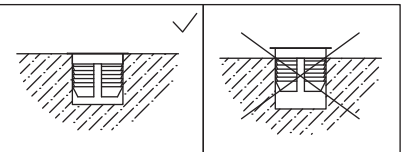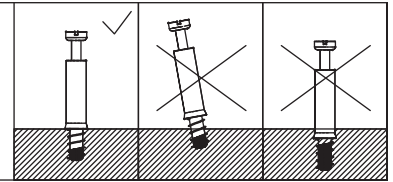

First, install plug (C) onto panel 21,
then screw self-tapping rod (B) into
panel 21.


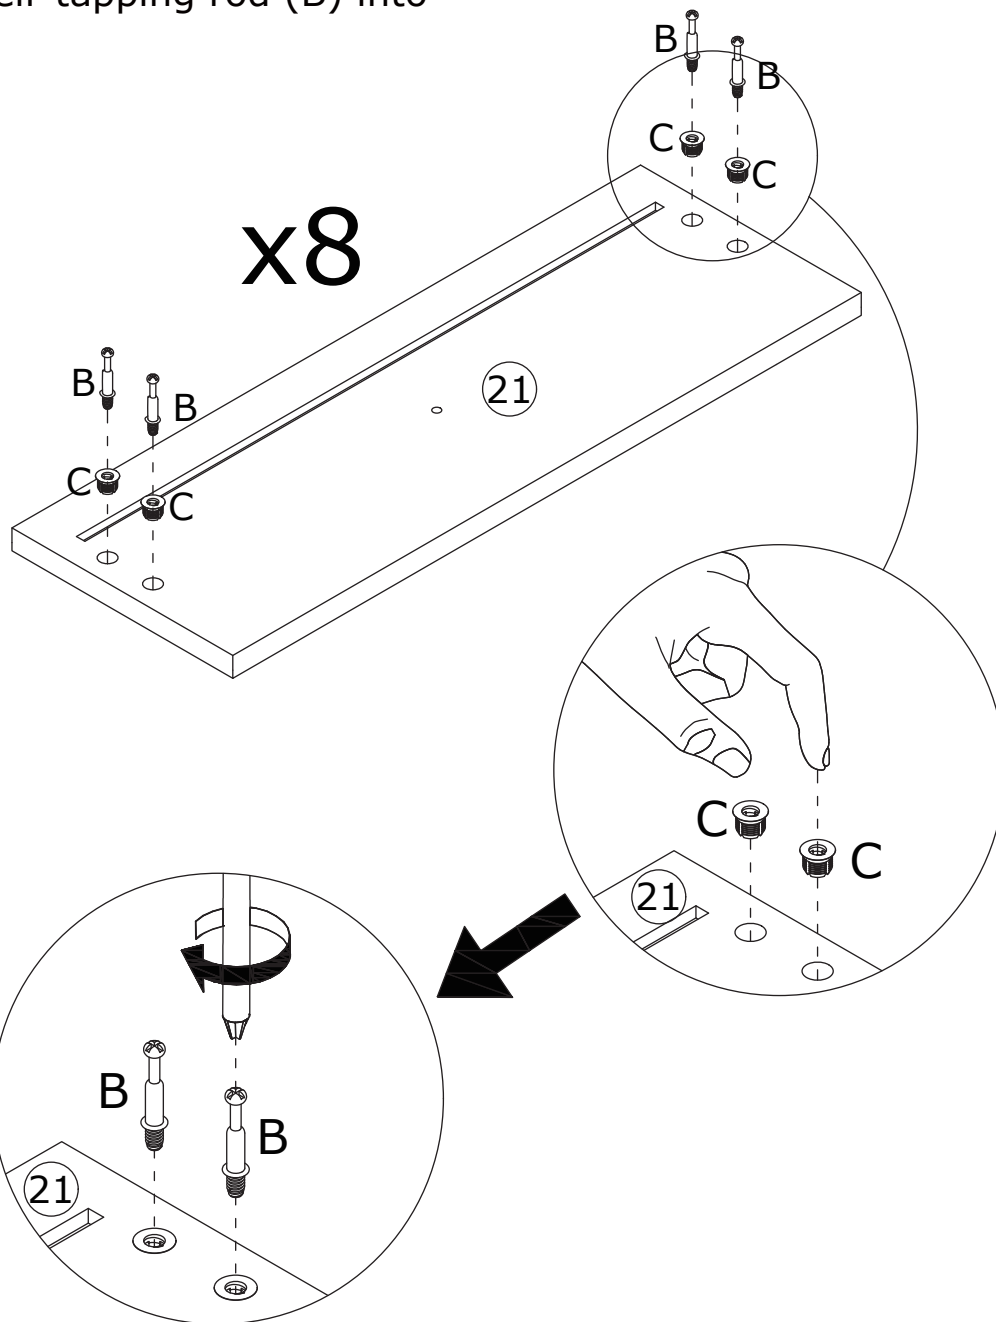


41


A x 32



CRB1595A

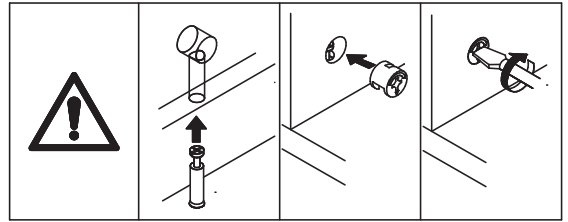


Connect panel 22 and 23 to panel 21, then tighten by turning cam lock (A) clockwise.

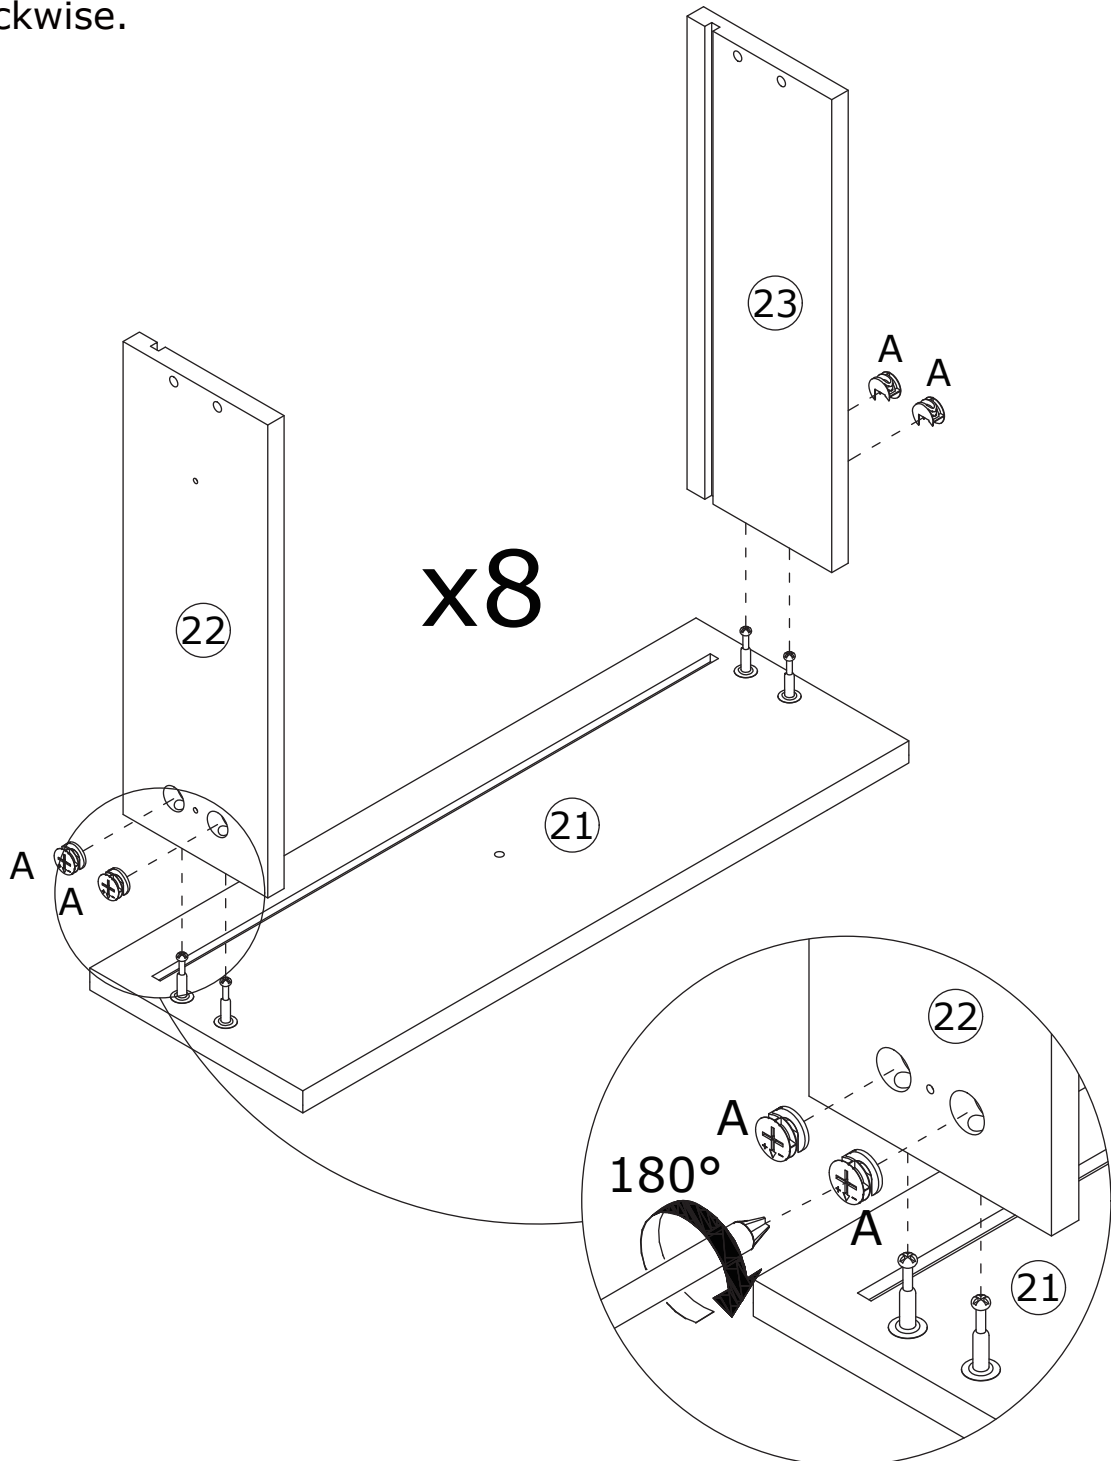


42

Insert panel 25 into the available slots.

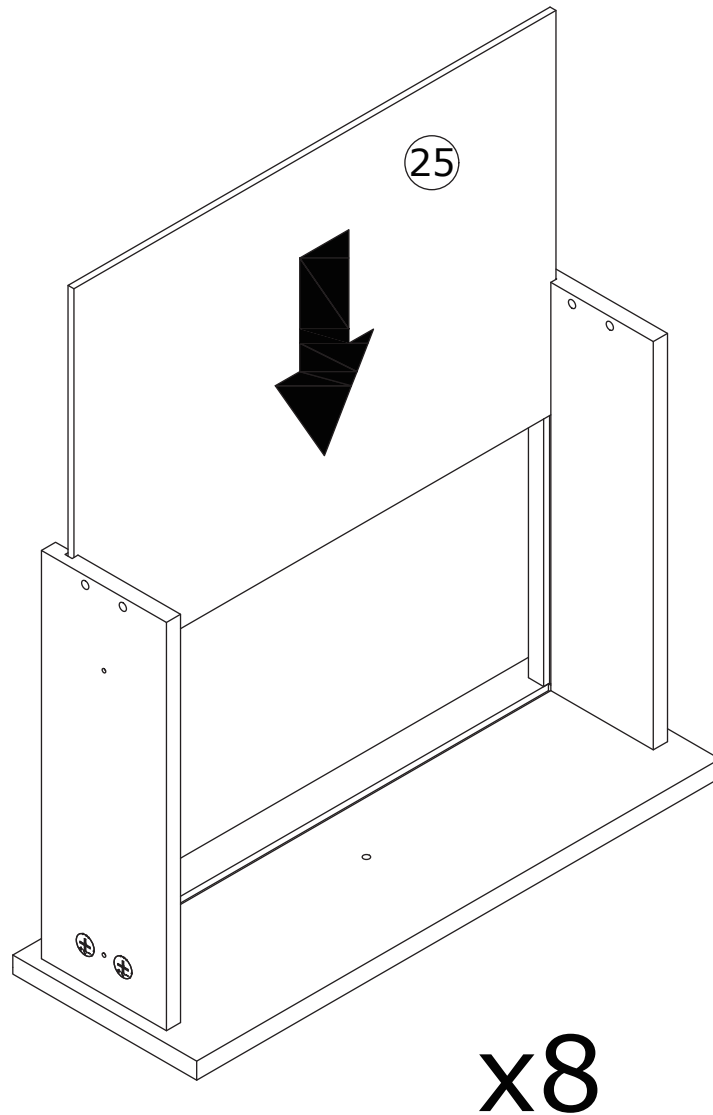


43


E x 32




CRC0540A




Secure panel 22 and 23 to panel 24 using screw (E).

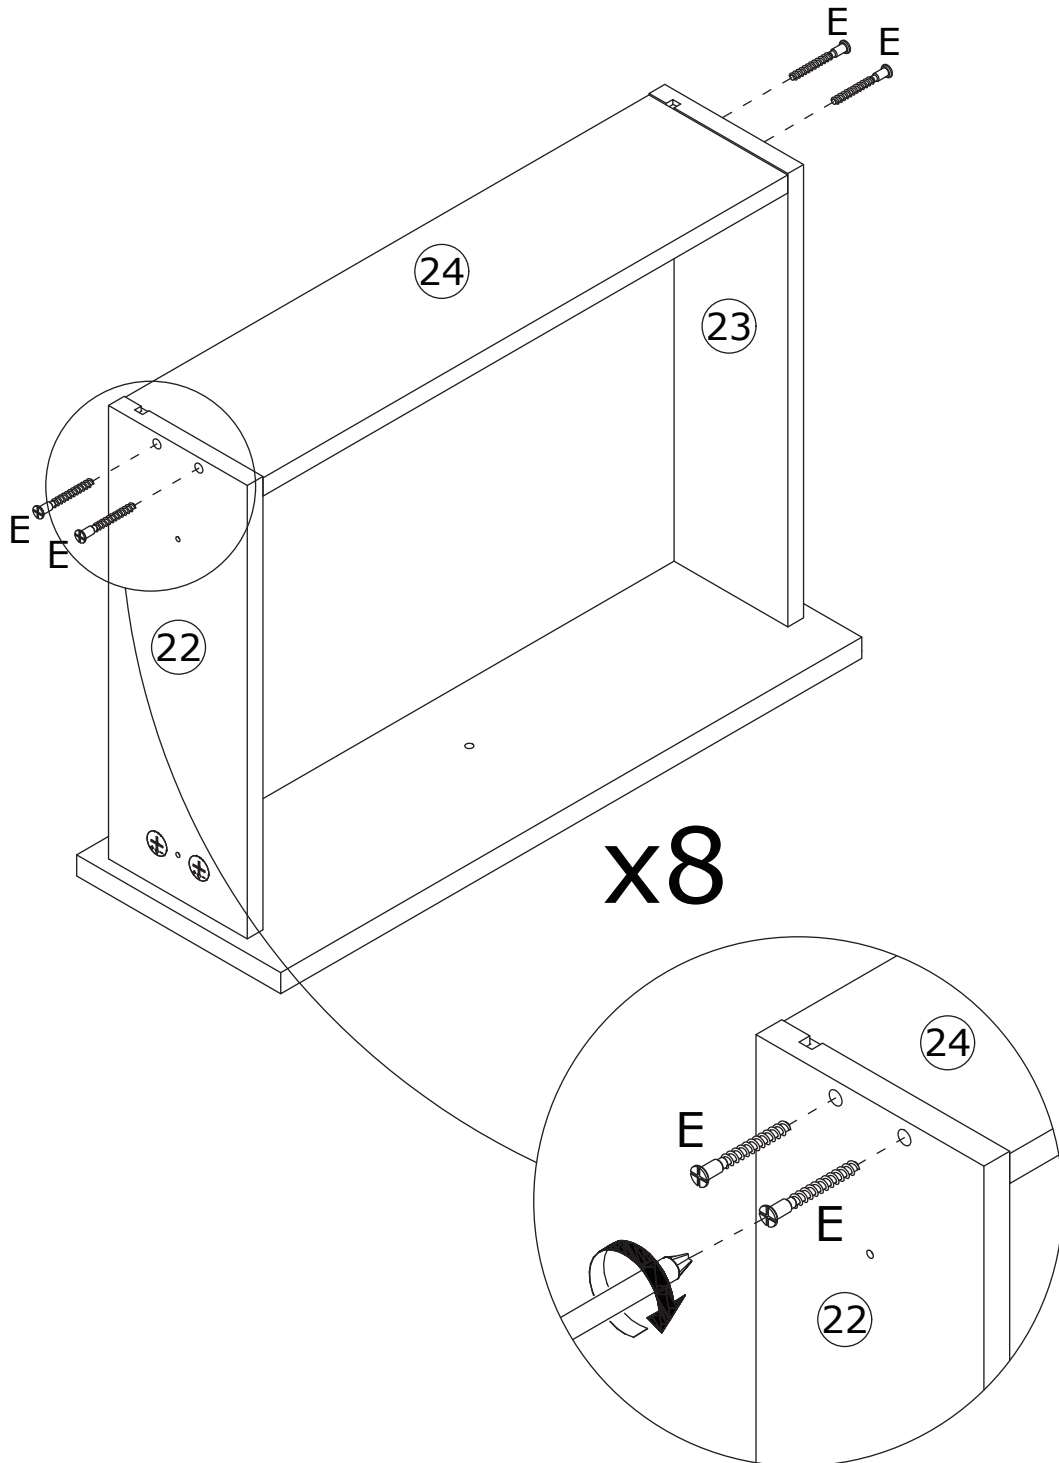

44

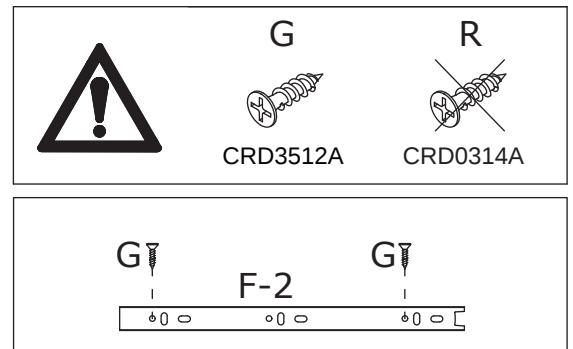

Secure slide rail (F-2) to panel 22 and 23 using screw (G).

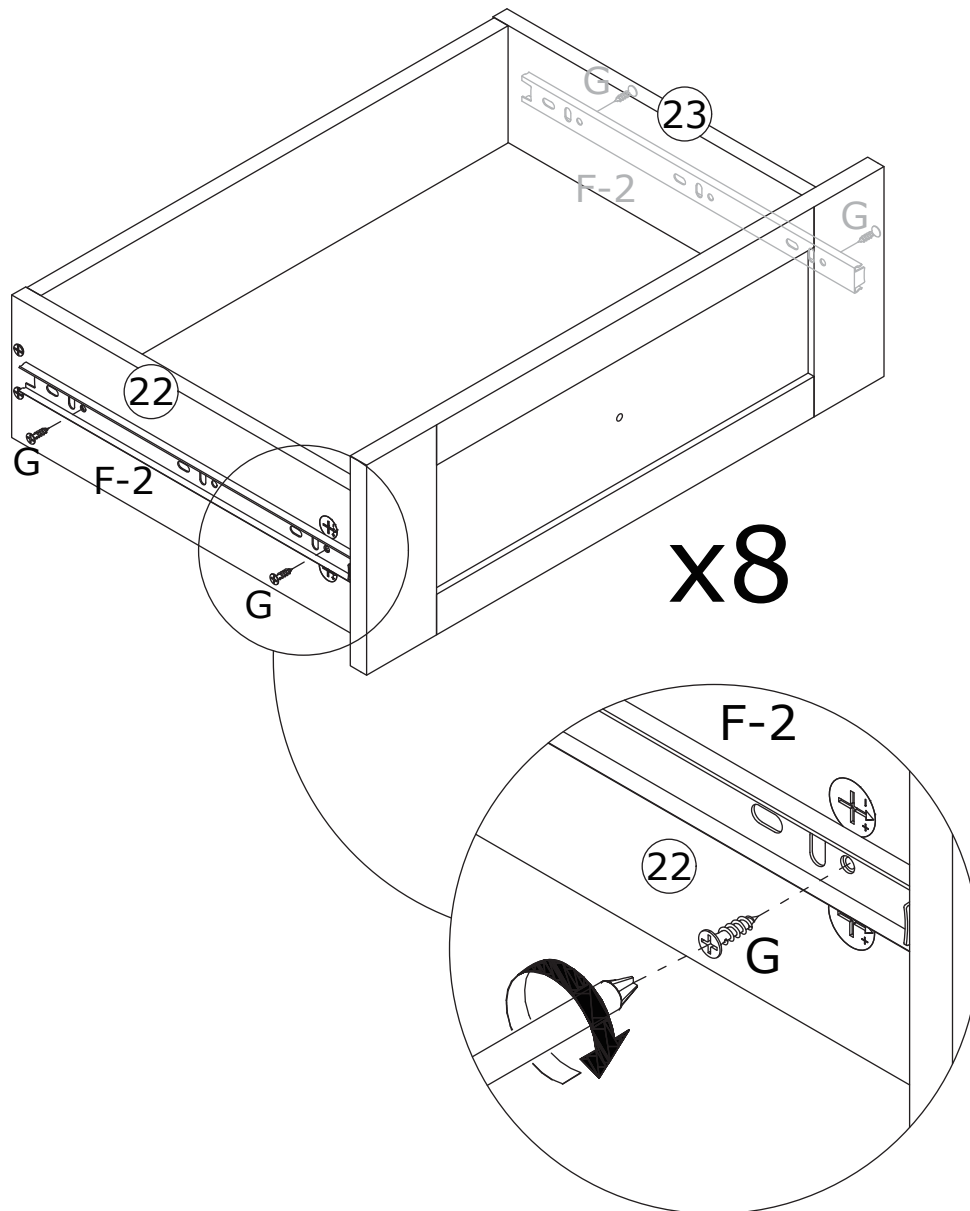


45


H x 8





J x 8



CRE0412A




Secure knob (H) to panel 21 using screw (J).

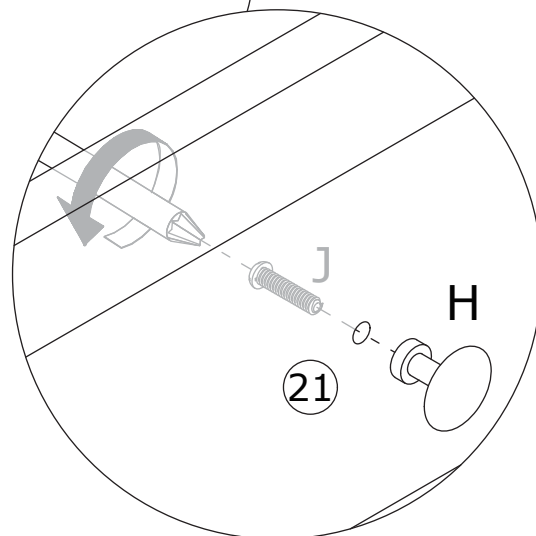
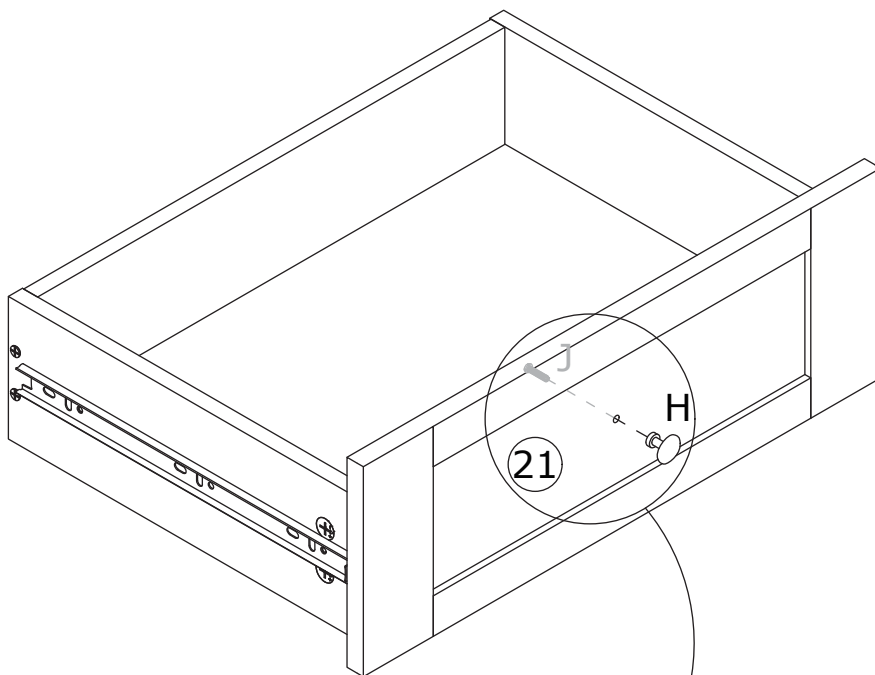


46

Insert the drawers into the main unit.

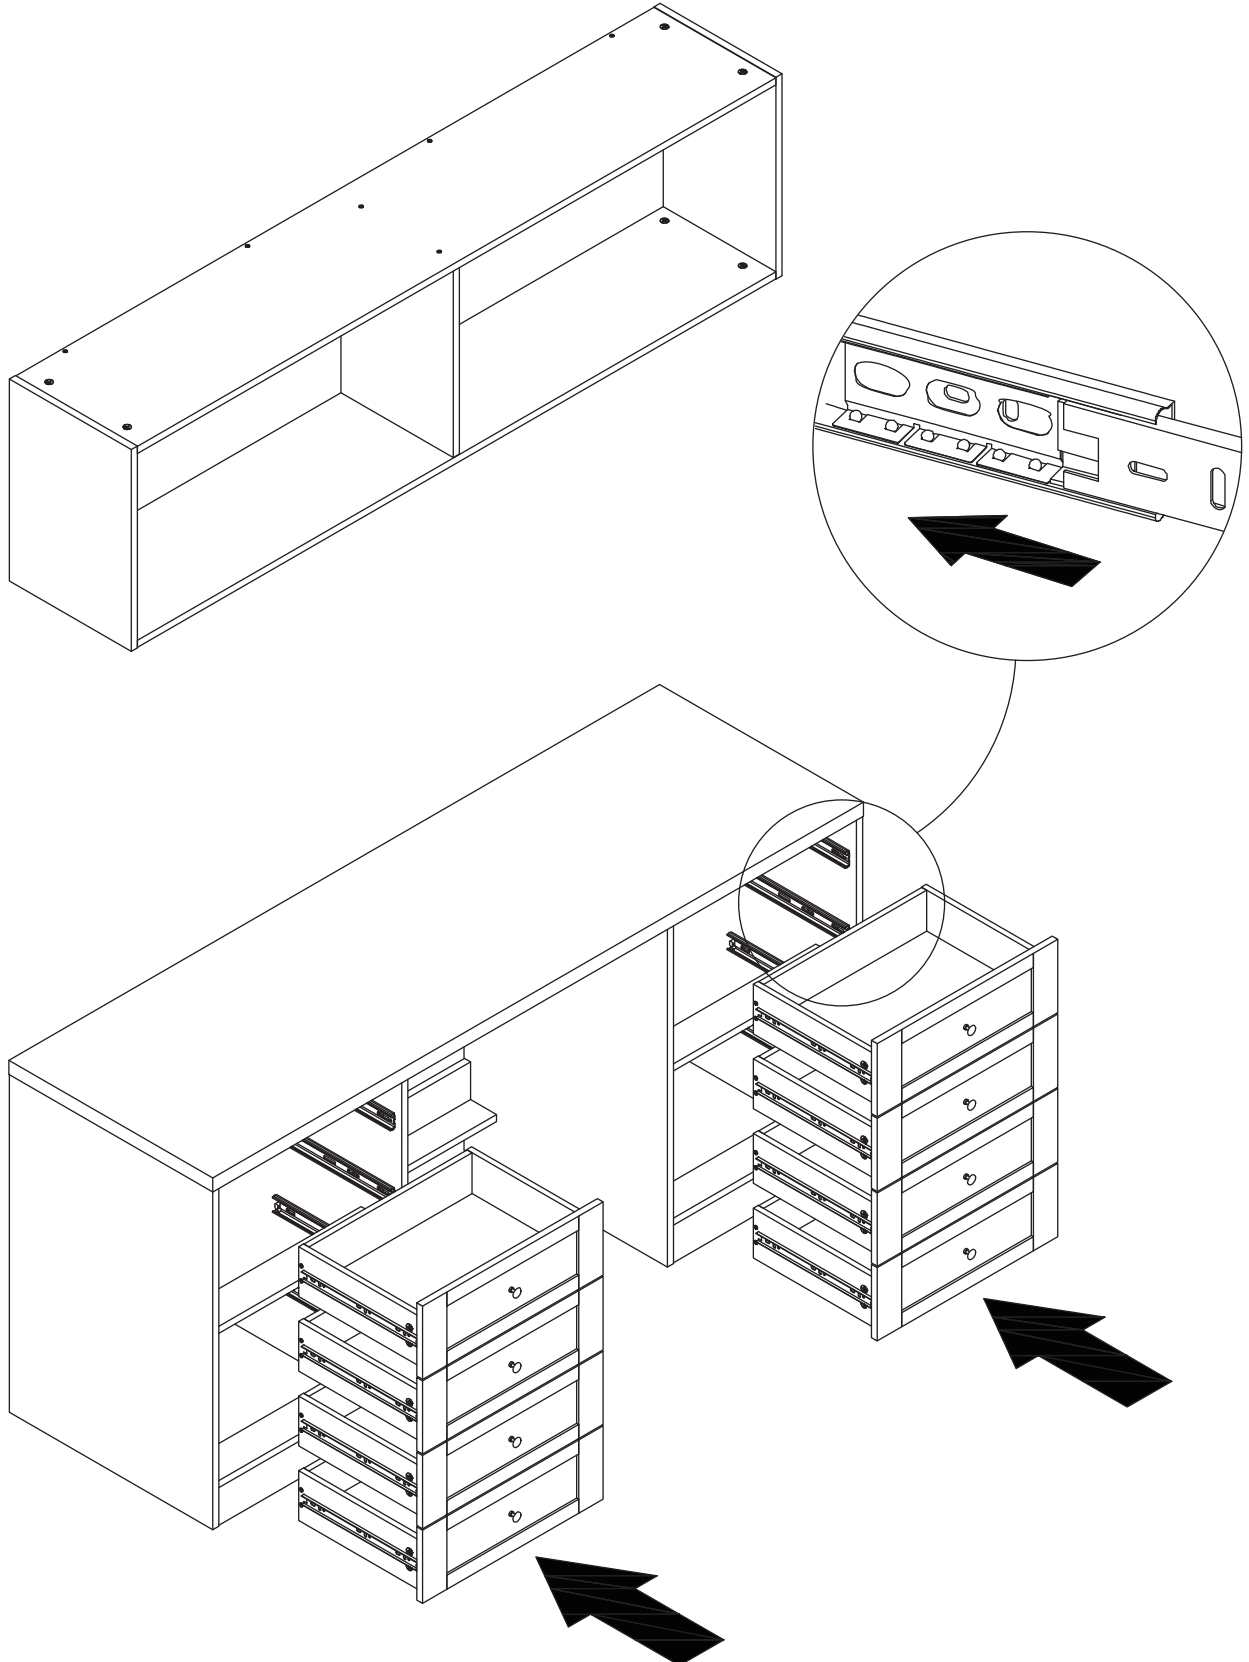

47

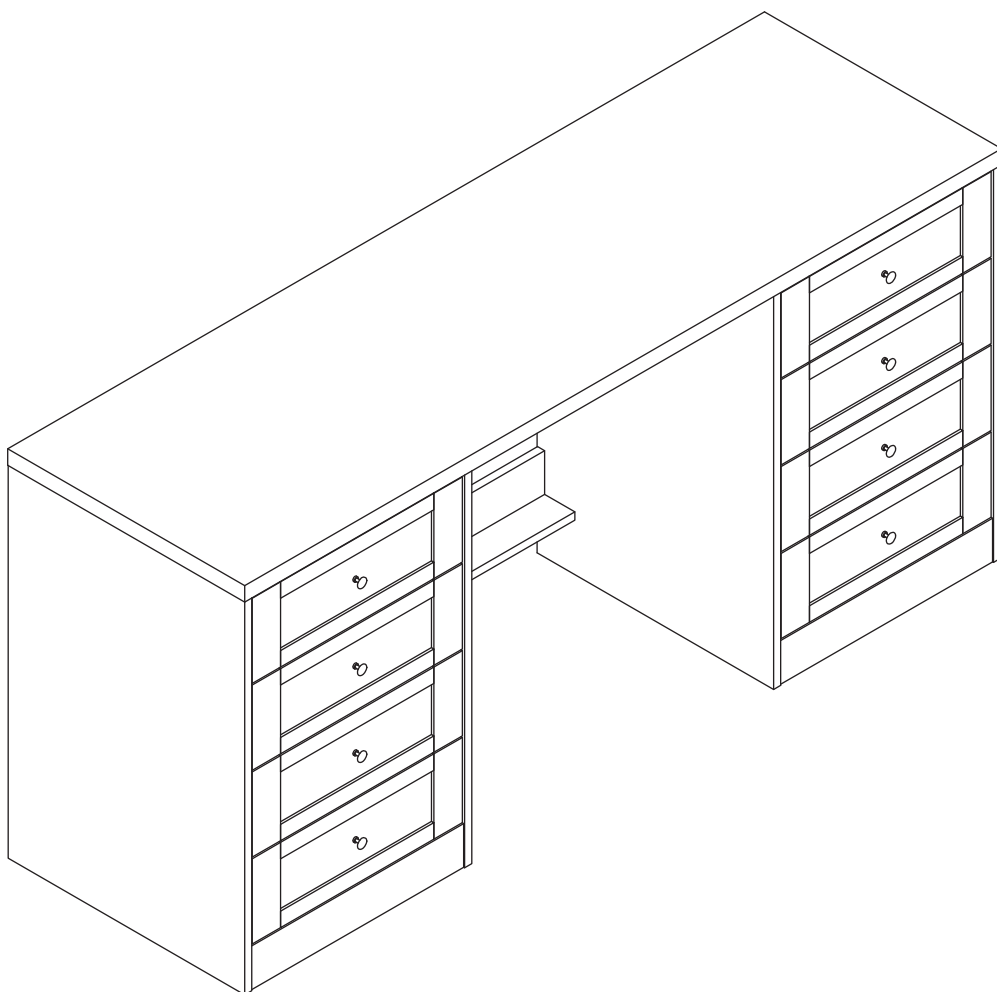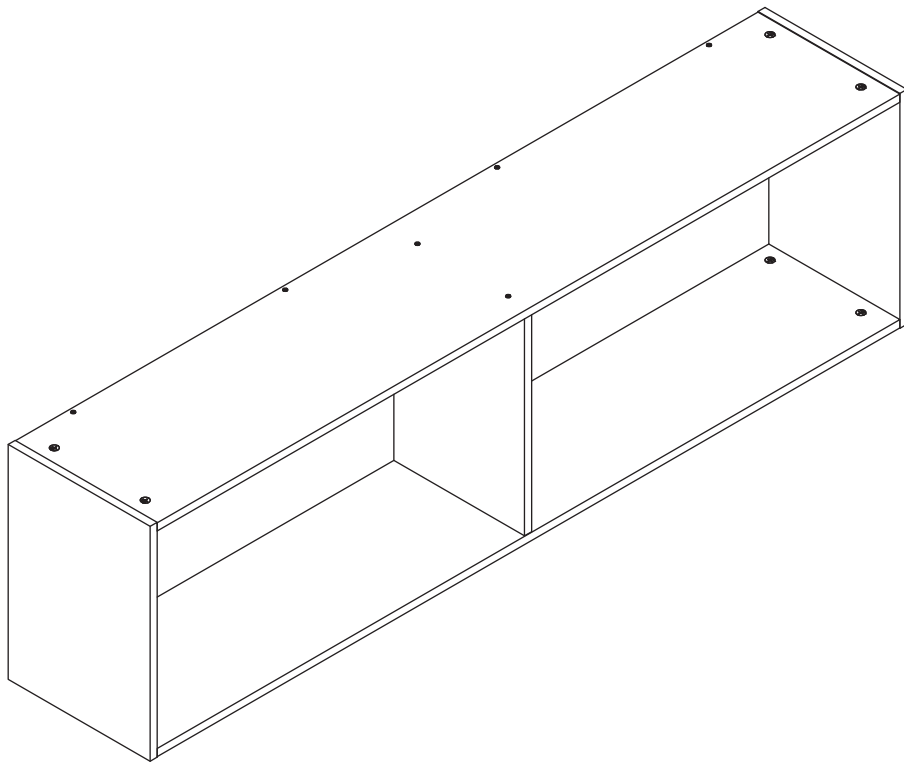

WARRANTY

WARRANTY CLAIMS

- There is a 30-day warranty for broken furniture or any other problems that do not work properly. The warranty will start from the date of purchase which must be verified by proof of purchase.
- Before making a claim, we may be able to answer your query, simply call us. Please leave your purchase order number, along with some details of the problem, if you want a replacement part. We will arrange within 48 hours. If there is out of stock, we will reply with a shipping date.
- The product must be used in accordance with the instructions provided. For health reasons.
- For other reasons, if the furniture needs to be returned, it must be cleaned and dried and operated within 30 days of receipt.

Type of Warranty Claim

- Failure to follow the furniture instructions will invalidate the warranty. Attention please.
- Does not include damage during installation, but includes damage during transportation.

Scope of responsibility

- Shall not bear any responsibility for misuse or user damage and / or loss of parts during the installation of furniture.
- After using, the damage and scratches of the furniture are not covered by the warranty.

The Warranty Relates to All Bought in The Us and Covers The Following Areas

- Sheet parts: 1 month from the date of purchase.
- Electrical parts: 1 month from the date of purchase.

RETURNS

CHANGED YOUR MIND AND NEED TO RETURN YOUR ITEM?

PLEASE FOLLOW THE BELOW INSTRUCTIONS:

- If you have purchased and have simply changed your mind, follow the retailer's instructions for returns.

DEFECTIVE ITEMS

- If your item is defective in any way, i.e. it doesn't work but you can't identify why, in the first instance, please call us.

DAMAGED ITEMS

- If you receive an order with obvious shipping damage from the retailer, then we suggest the delivery is refused. If the delivery has been accepted and then shipping damage is found, please follow the specific instructions advised by the retailer.
In all circumstances please save all packaging material and paperwork for the order. Please be aware that if you dispose of packaging material or attempt to return the merchandise without contacting the fulfiller, you jeopardise your chances of making a claim, and you may not receive a credit for the return.

AFTER-SALES CONTACT



adelahu@fufugaga.com



208-820-0068