


ASSEMBLY INSTRUCTIONS

Queen Bed - CHEVBedQN GY & WN

Important :

Assembly and installation must be performed by 2 adults

PARTS

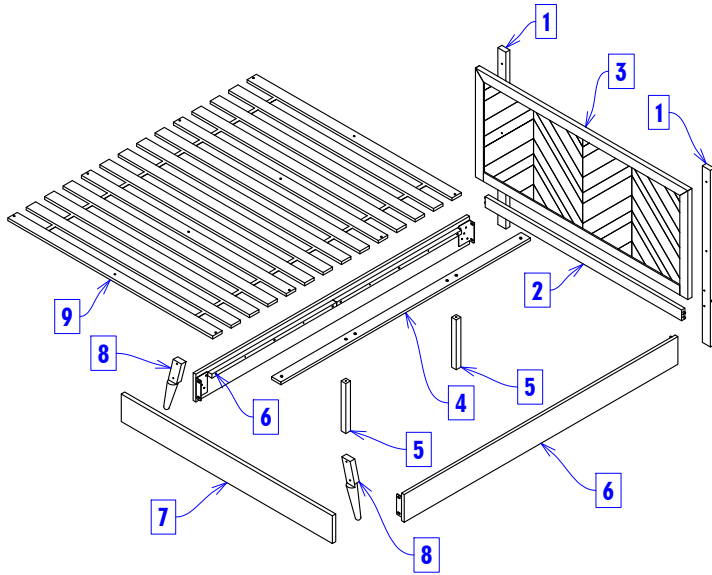

HARDWARE

a. Bolt M8x20
8 pcs

d. Allen Key 4
1 pc

g. Washer M8
8 pcs

b. Bolt M6x40
14 pcs


e. Allen Key 5
1 pc

c. Bolt M6x60
2 pcs


f. Screw
8 pcs

Tool Require
Screw Driver
(NOT PROVIDED)

STEP 1

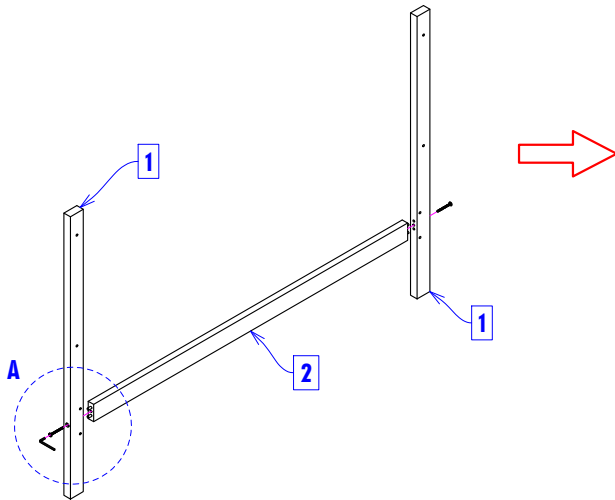

STEP 2

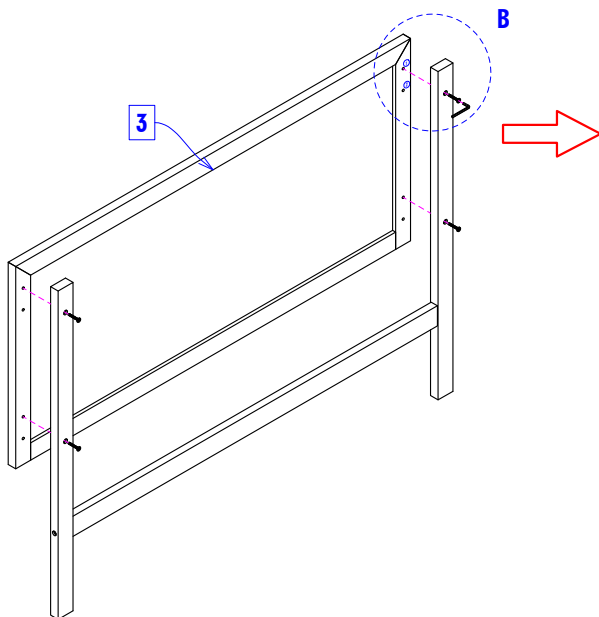


Note :


B.1 = Insert the Bolt (b) into hole (1) for 45" Headboard height

B.2 = Insert the Bolt (b) into hole (2) for 48" Headboard height


Detail A

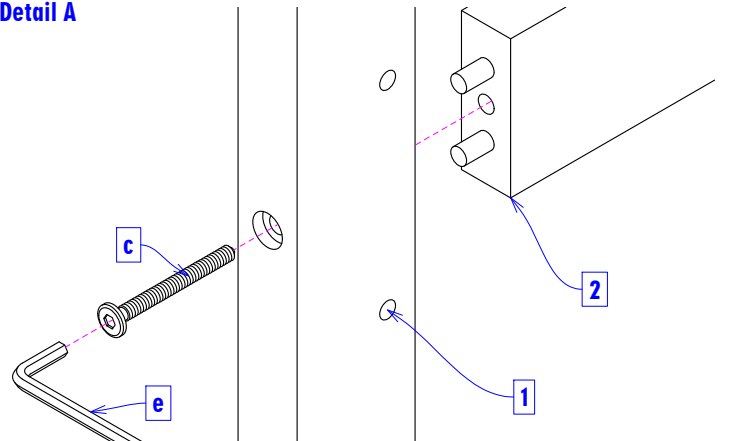


Detail B.1 (45" Head board Height)

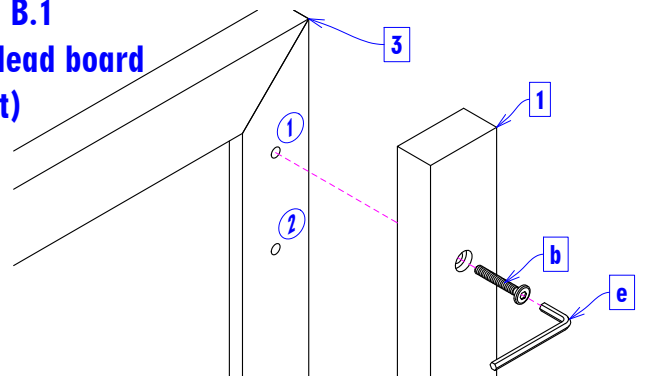


Detail B.2 (48" Head board Height)

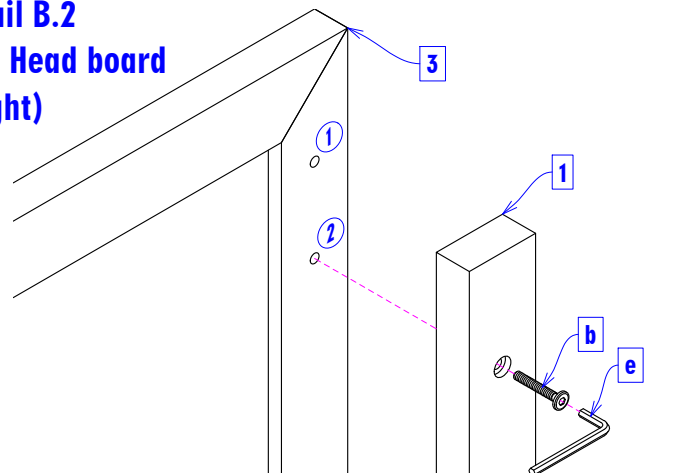


STEP 3

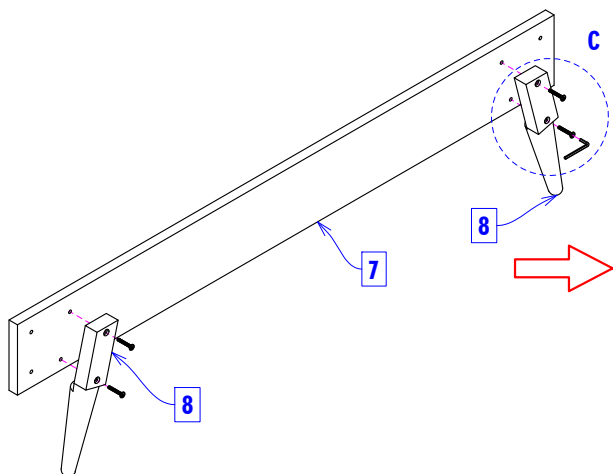


Detail C

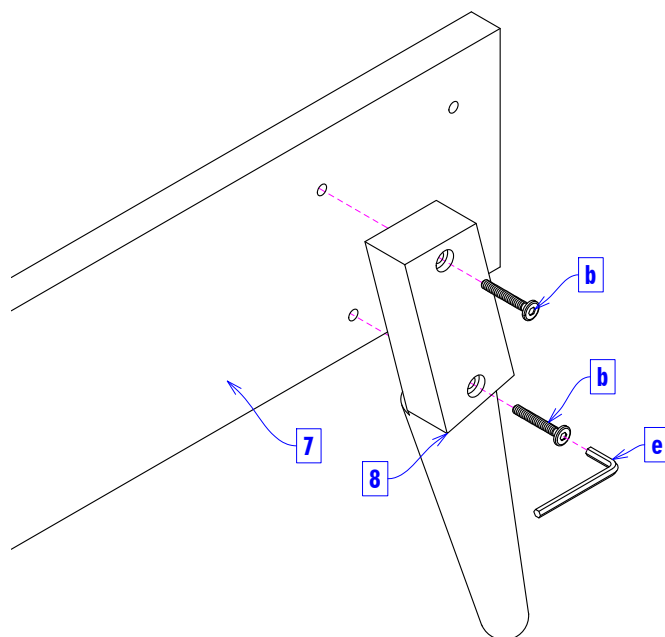


STEP 4

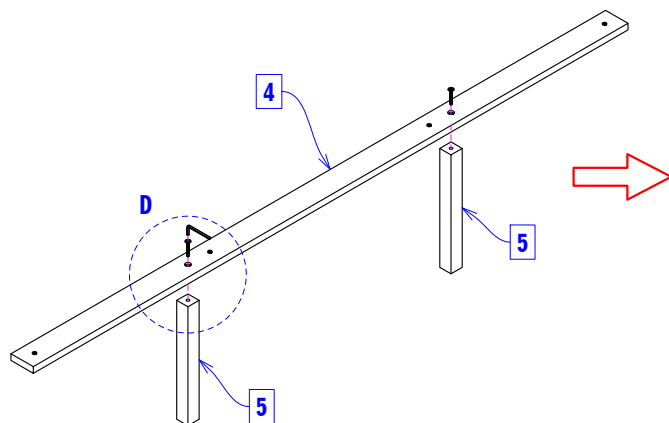


Detail D

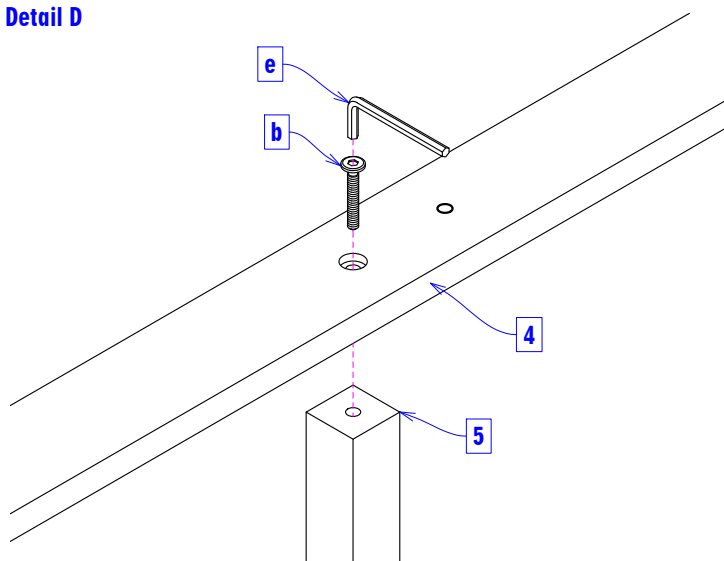

STEP 5

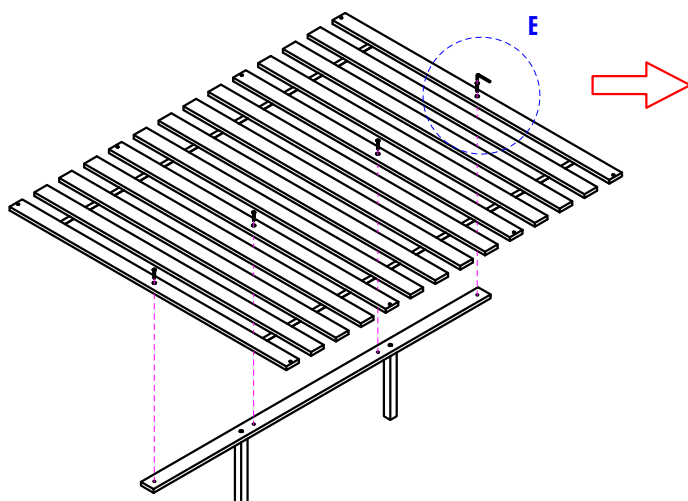

Detail E

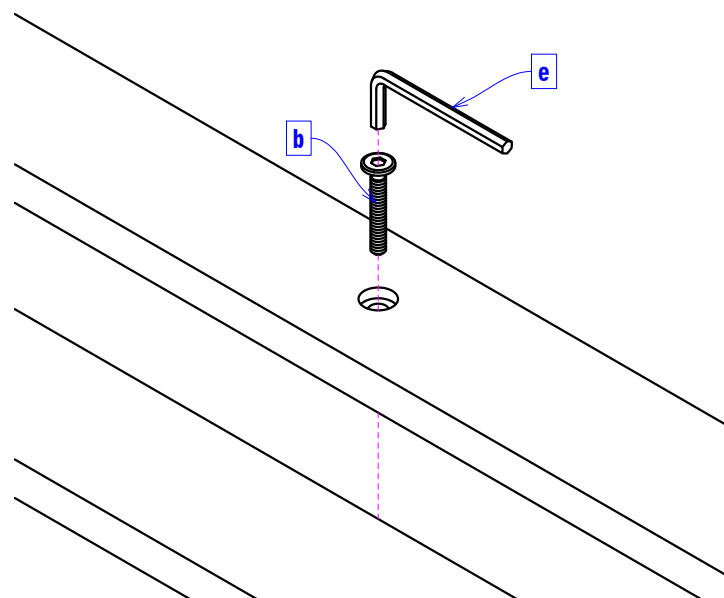


ASSEMBLY INSTRUCTIONS

Queen Bed - CHEVBedQN GY & WN


Important :

Assembly and installation must be performed by 2 adults


STEP 6

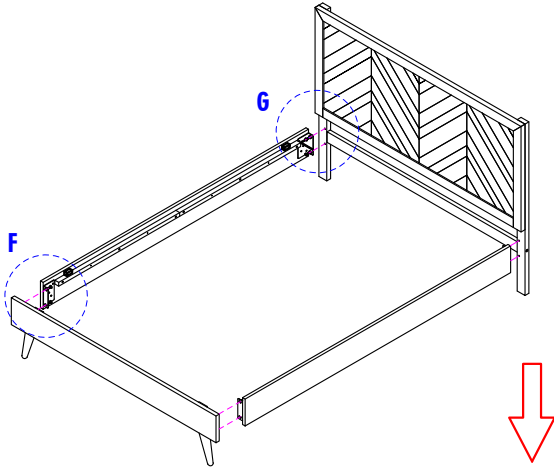


Detail F

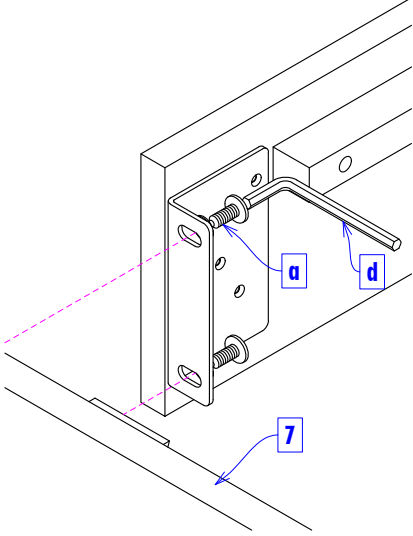


Detail G

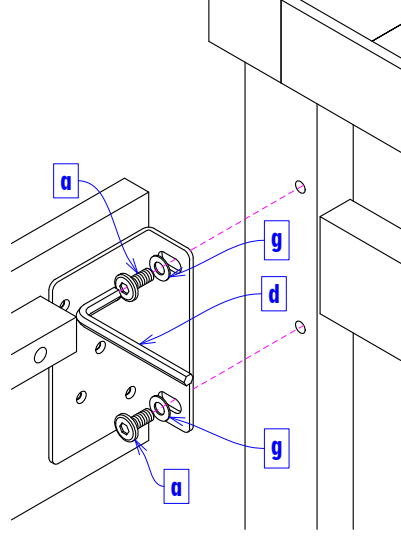

Assembly Completed

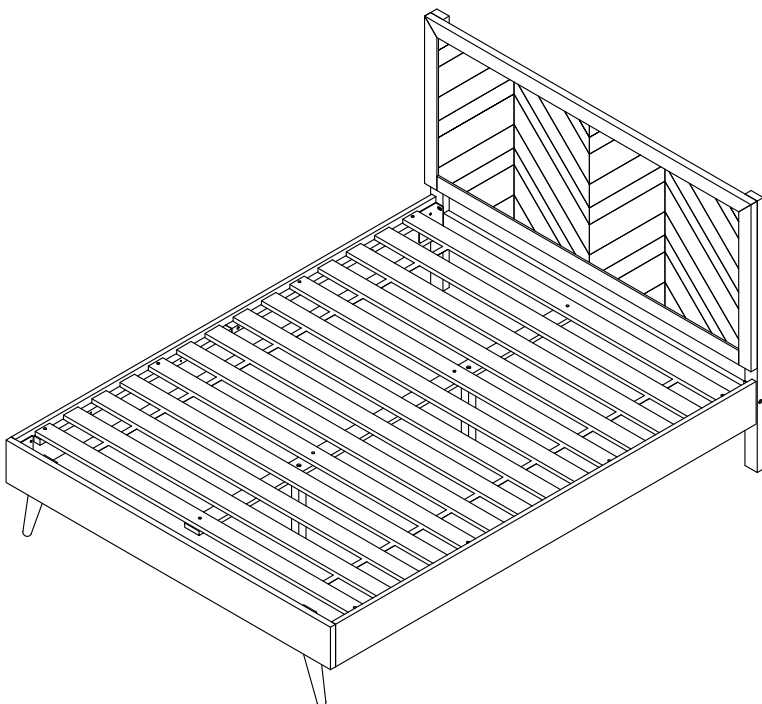

STEP 7

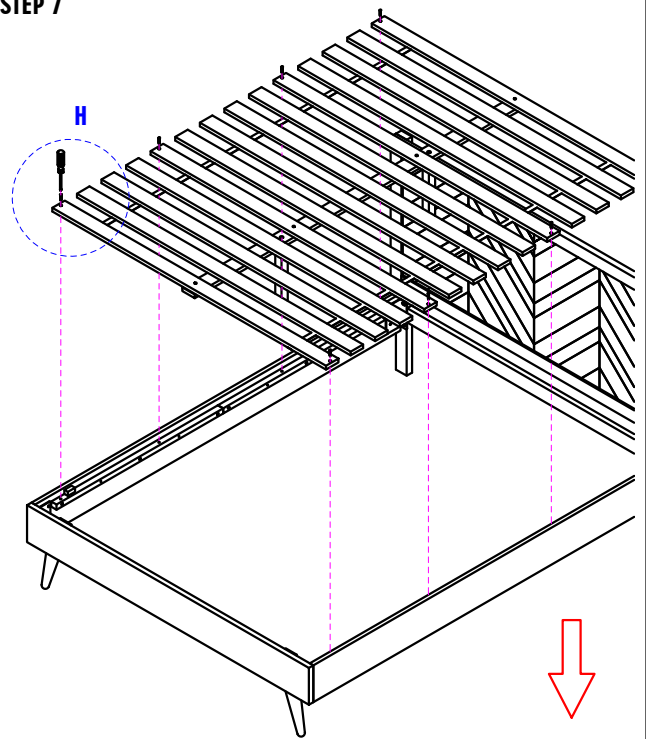

Detail H

