



Assembly Instruction

FRONT

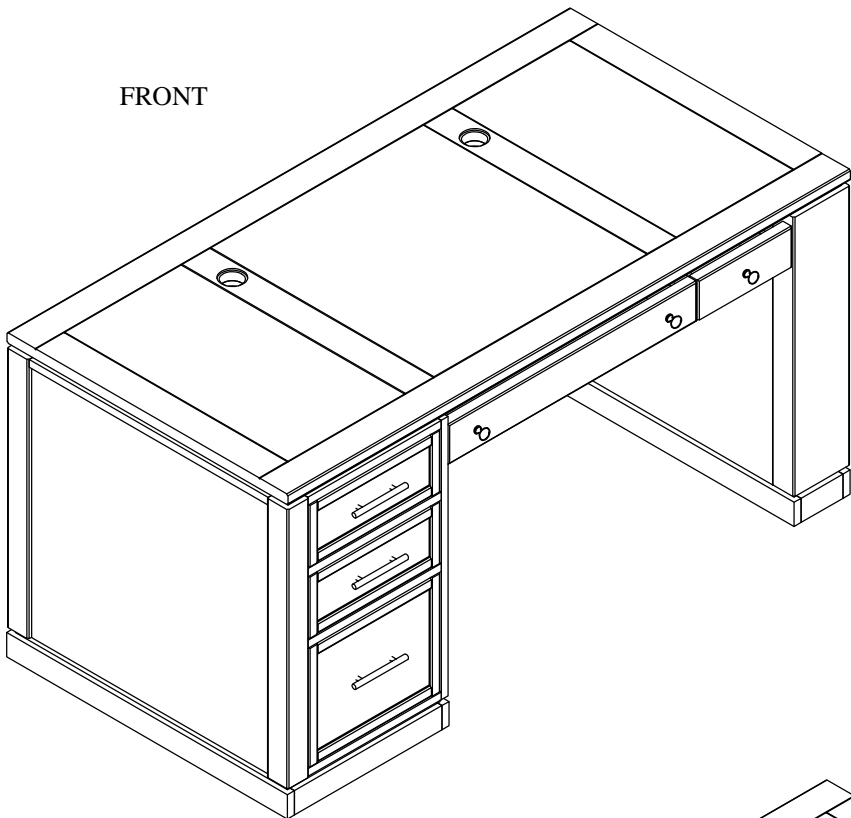



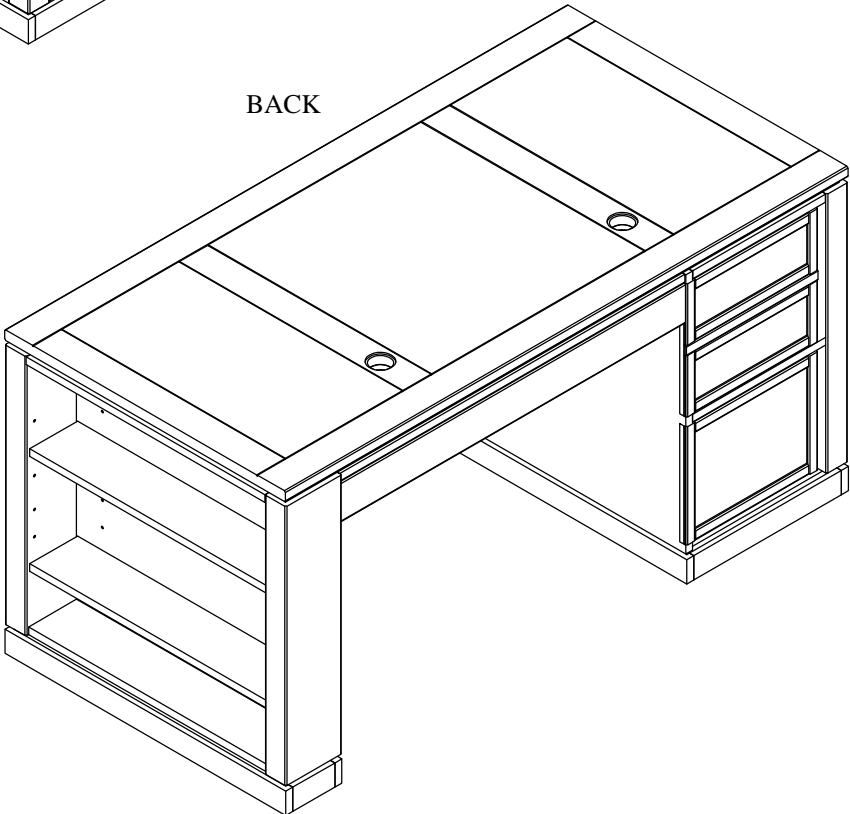






BACK




Assembly Instruction

HARDWARE LIST


No	Description	Sketch	Q'TY
A	Allen Wrench 4mm		1PC
B	Bolt Ø 1/4"x1-1/4"		8PCS
C	Lock washer		8PCS
D	Flat washer		8PCS
E	Grommet		2PCS
F	Allen Wrench 4mm		1PC
G	Head Screw		4PCS
H	2 port USB		1PC
I	File rods 320x3x12mm		2PCS

STEP 1

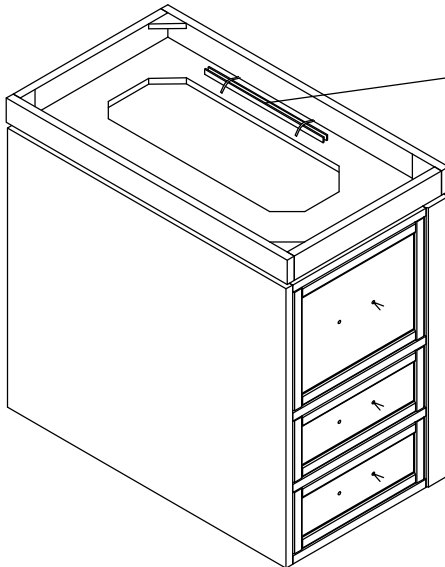

HARDWARE
File rods pack is here


Hardware pack is here

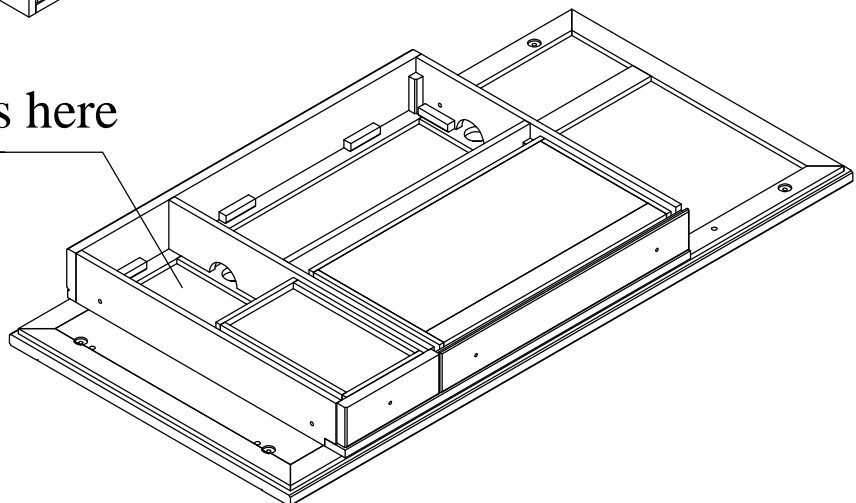

Assembly Instruction


To connect the Desk top, you will need to detach the top drawer of the left Pedestal. To remove the drawers, press on the levers located on both sides of the drawer simultaneously while pulling the drawer out.

STEP 2

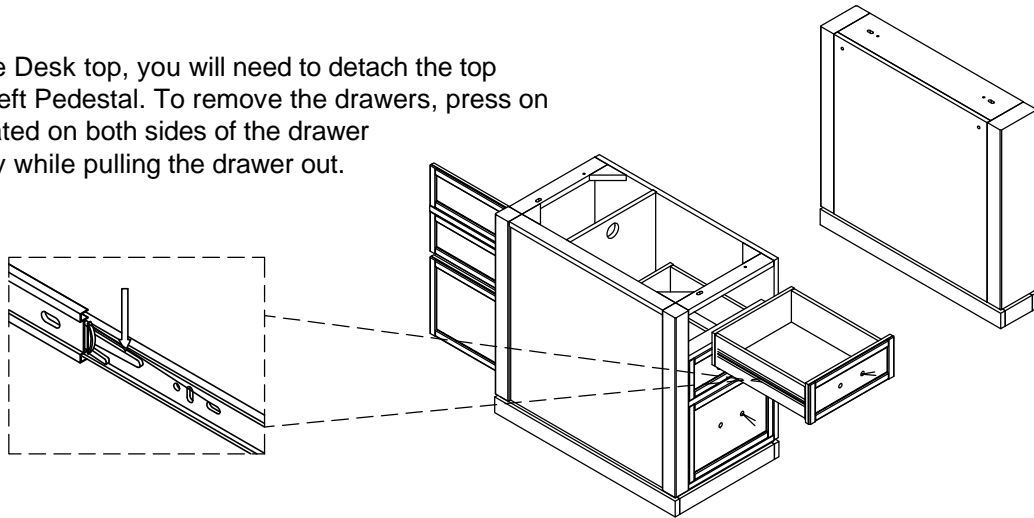


Insert Wire Grommets (E) into wire hole on desk's top.

STEP 3

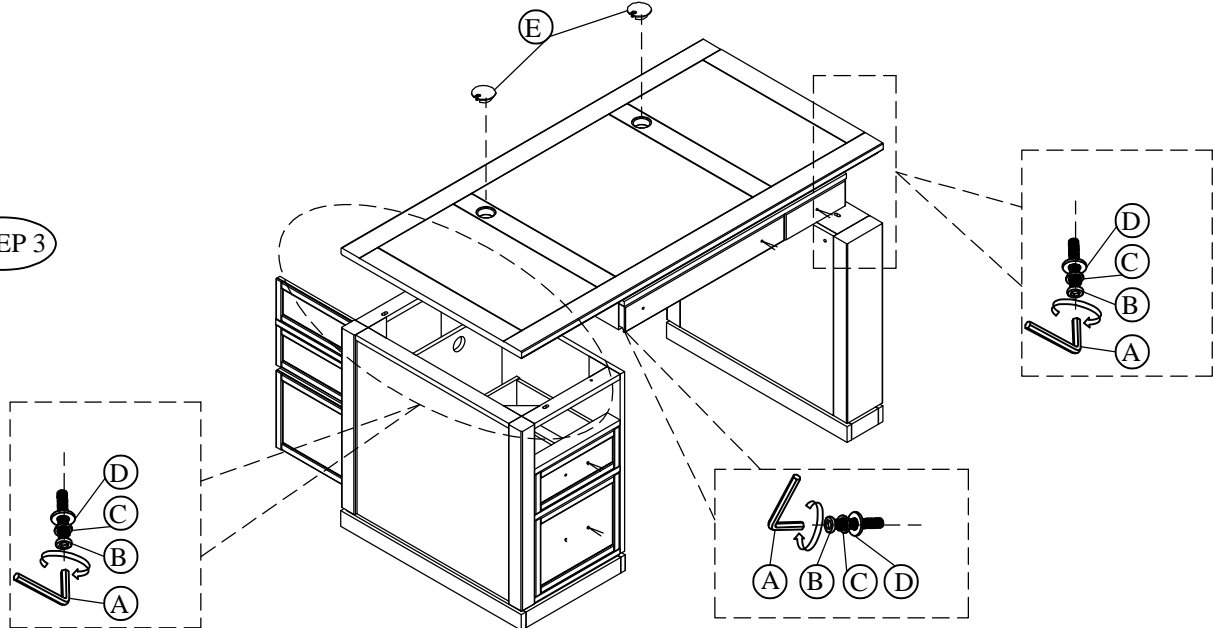


Place the desk top on the left and right pedestal lining up the dowel's and bolt holes. once aligned, secure the top using the Bolt (B), Lock Washers (C), and Flat Washers (D) as shown in the diagram.


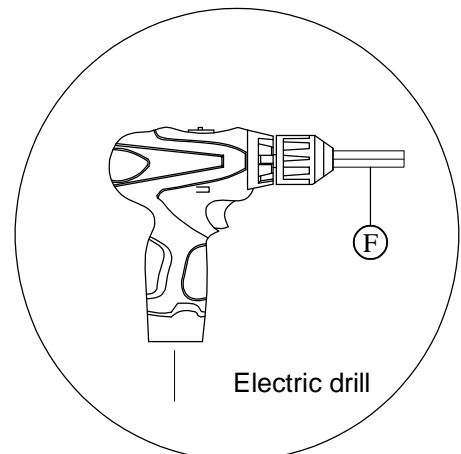


Assembly Instruction

Mount the 2 port USB at the desired place with screw(G).

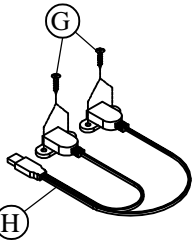


STEP 4

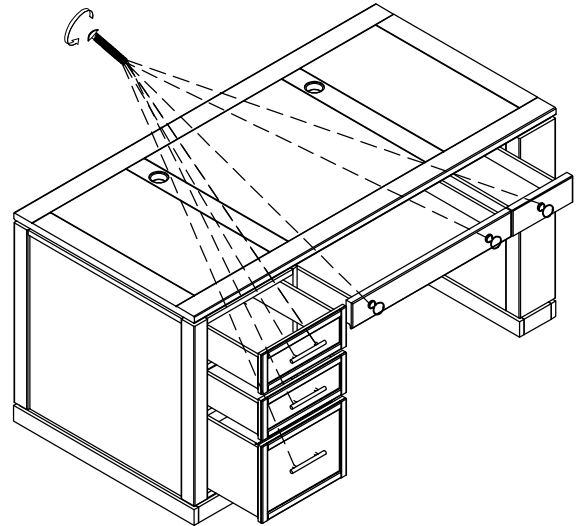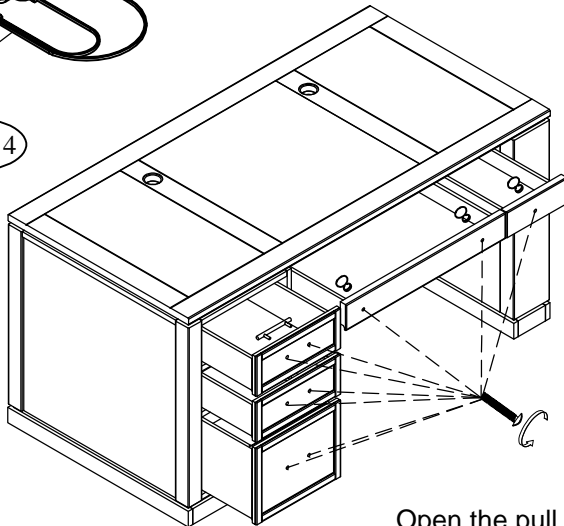

Open the pull out drawer, take off the handle & knobs installed on the back of drawer front and reattach the handle on the front side as shown.

STEP 5

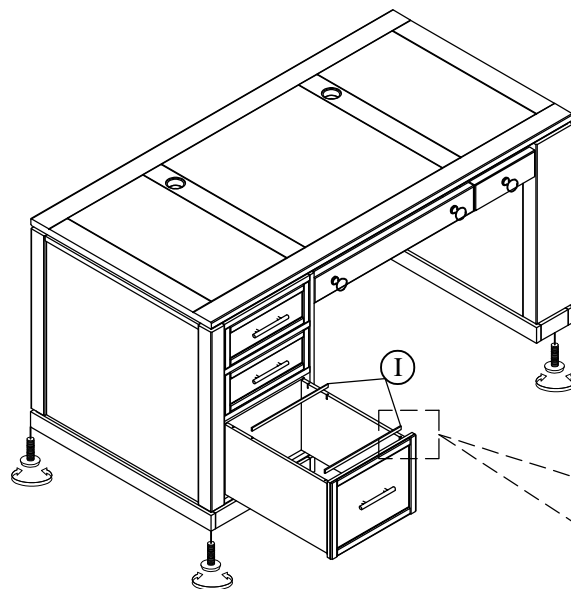

LEVELER =8PCS

