



Multifunctional storage











Assembly Instructions

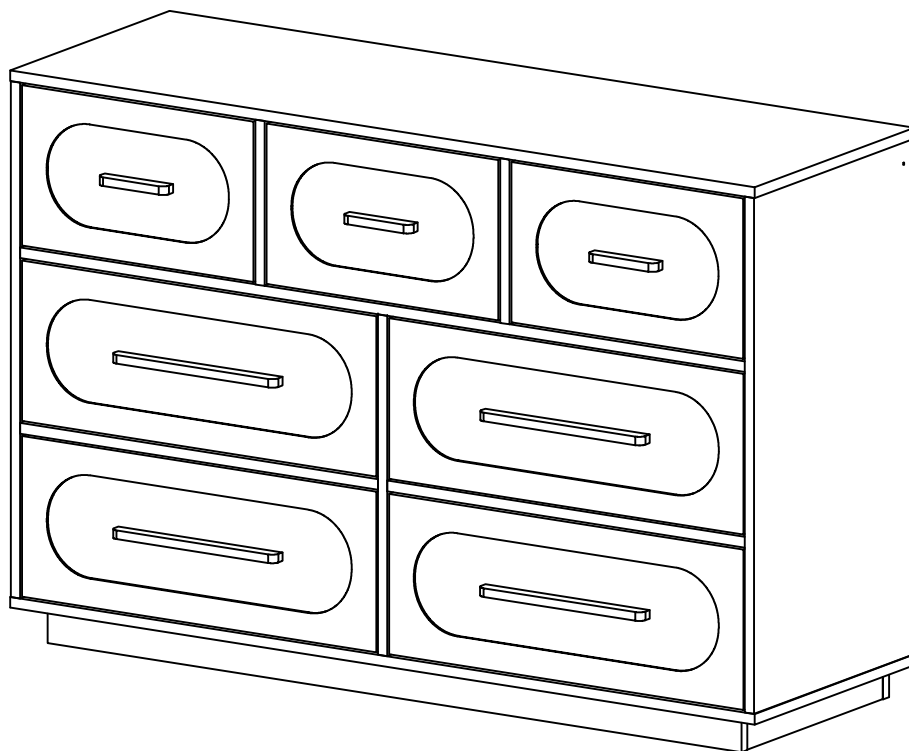












Parts List

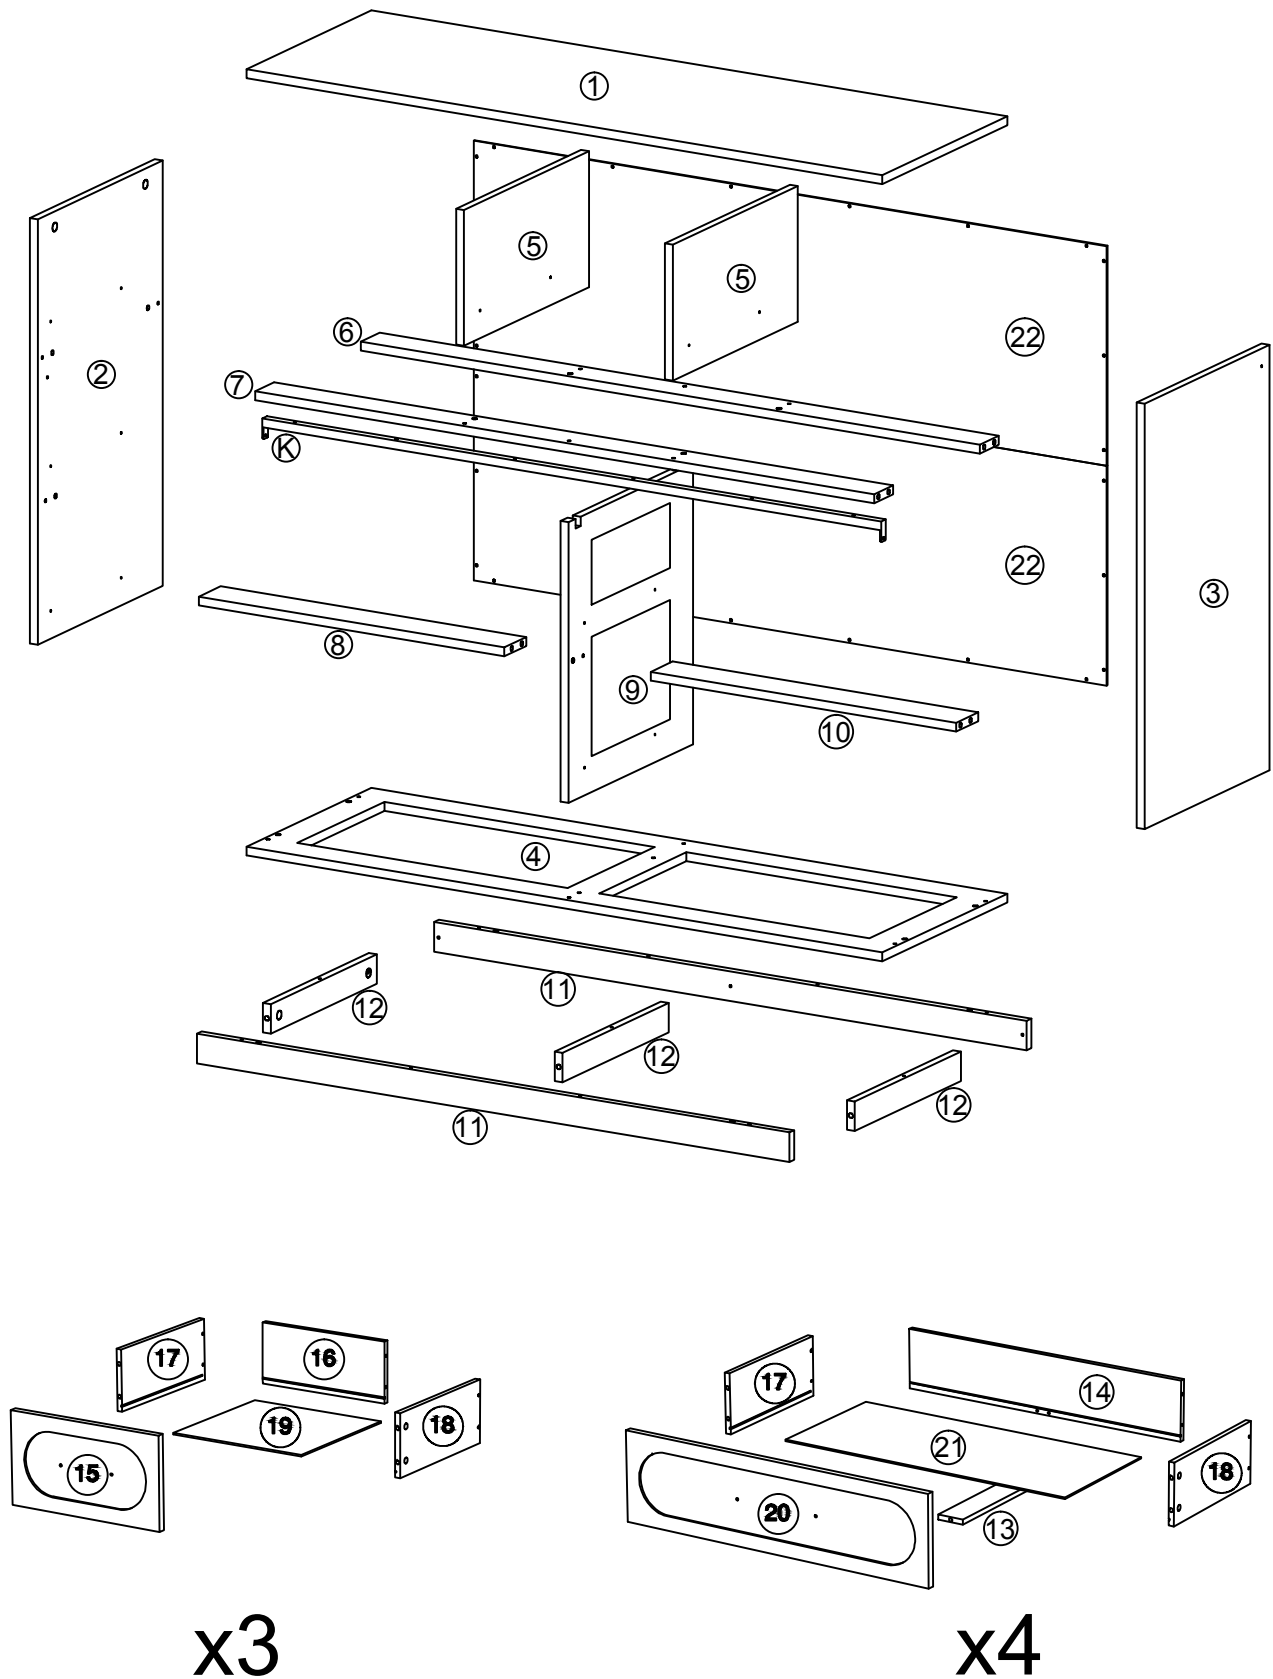



Hardware

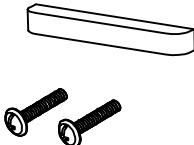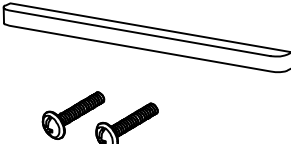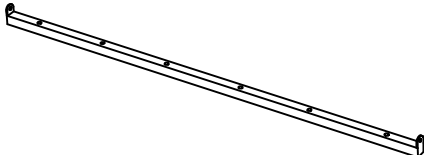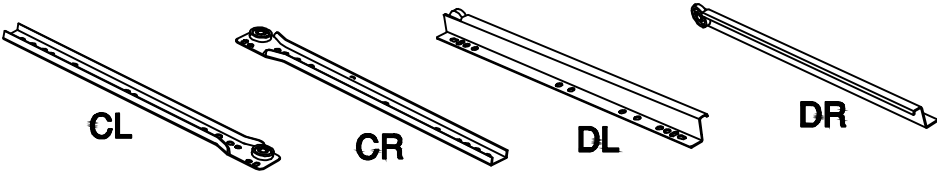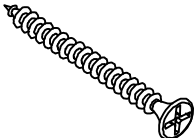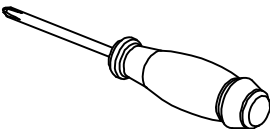A  M6 x 35mm54+5PCS	B  Ø15 x 9mm54+5PCS	C  Ø8 x 30mm32+3PCS	D  Ø4 x 35mm11+2PCS
E  Ø4 x 30mm36+3PCS	F  Ø3.5 x 12mm84+6PCS	G  Ø3.5 x 12mm26+2PCS	H  Ø3.5 x 25mm6+1PCS
I  3SETS	J  4SETS	K  1PC	
L  SAFETY STRAP KIT1SET	M  CLCRDLDR L300mm7 SETS		
N  Ø4 x 45mm12+2PCS	 1PC		


ASSEMBLY MATERIAL

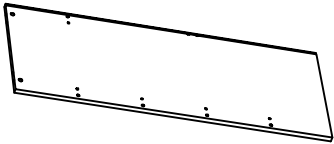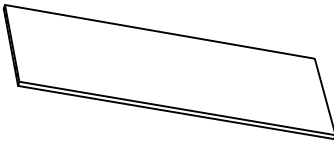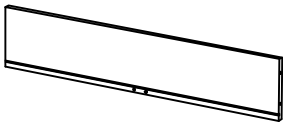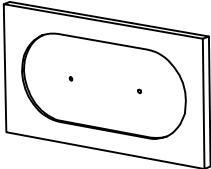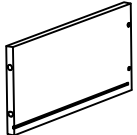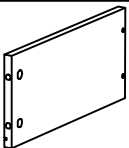Item no.	Reference Image	QTY.	Item no.	Reference Image	QTY.
①		1	⑩		1
②		1	⑪		2
③		1	⑫		3
④		1	⑬		4
⑤		2	⑭		4
⑥		1	⑮		3
⑦		1	⑯		3
⑧		1	⑰		7
⑨		1	⑱		7


ASSEMBLY MATERIAL

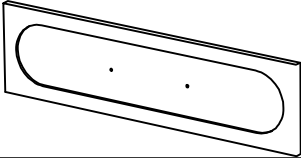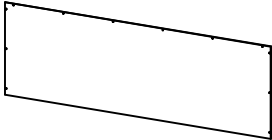Item no.	Reference Image	QTY.
19		3
20		4
21		4
22		2


How to use the cam lock system

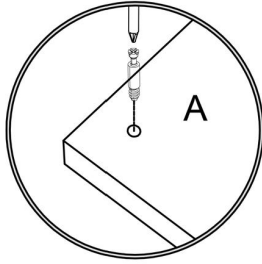


1. Screw cam bolt into panel

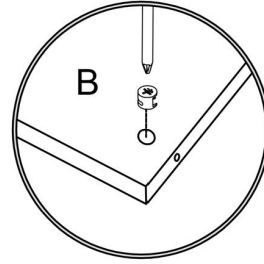


2. Push cam into panel - arrow feature on cam top points to panel edge

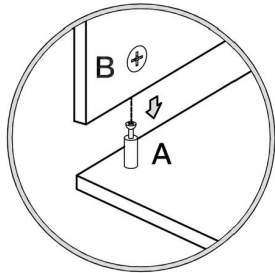

3. Align cam bolt(s) with cam(s) and insert all the way into cross-bored hole(s)




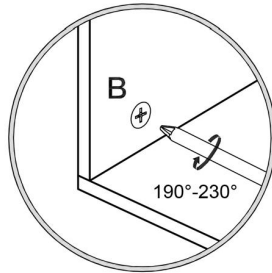


4. Rotate cam(s) clockwise 190°-230° to lock panels together

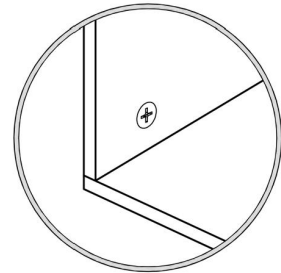

5. Panels should be tight against each other and connection should be rigid

Insert the wood dowel [C] at least half way by tapping lightly with a rubber mallet, IF NECESSARY.

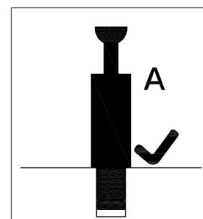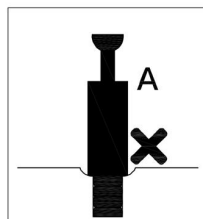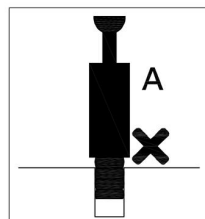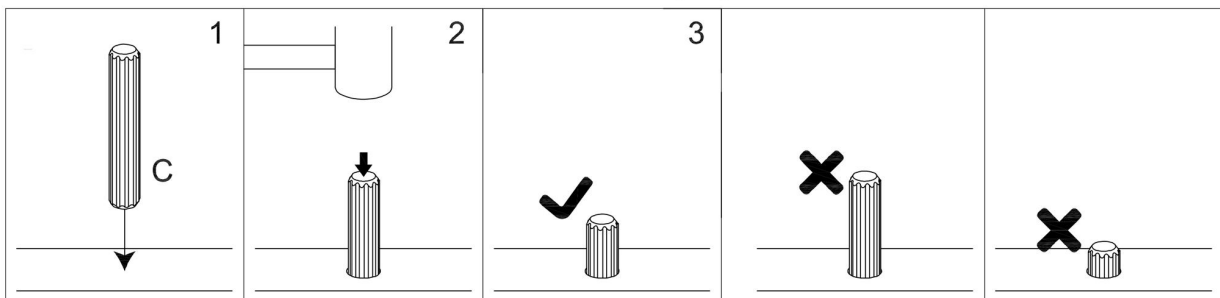

WARNING





- Unit must be placed on a level surface or leveled with included hardware (when applicable).
- Do not sit or stand on or allow children to climb, sit or stand on the assembled product.
- For safety reasons, it is imperative that this unit be mounted to the wall.
- Do not use without installing the tip restraint.
- Unit can tip over causing severe injury or death.
- Do not exceed the recommended weight limits.
- Evenly distribute the weight on each level and always keep the heavier loads on the bottom.
- Before cutting, drilling or hammering into any wall or floor surface, verify the location of electrical, plumbing and gas lines. Cutting may cause serious injury.

Step 1

F  X 18
Ø3.5 x 12mm



First secure the two screws with pre-drilled holes to ensure the rail is properly positioned.

Then, install the first reinforcement screw (which has no pre drilled hole) to enhance overall stability.

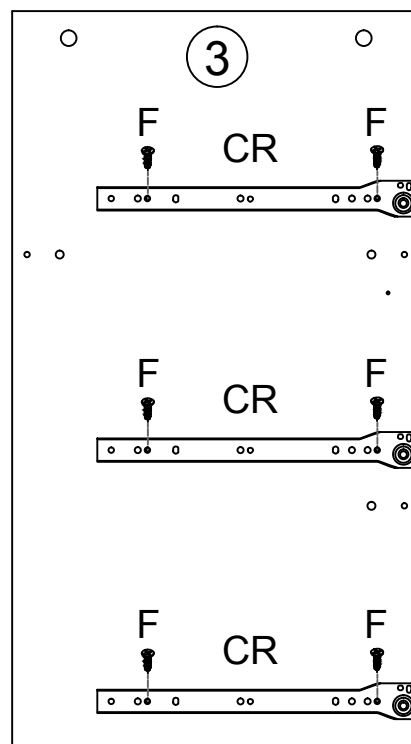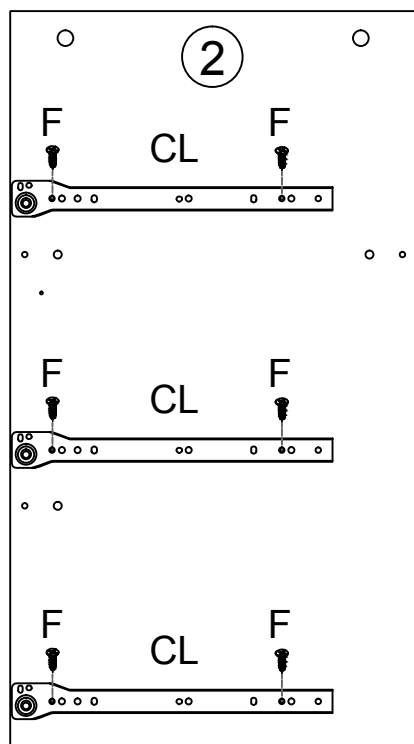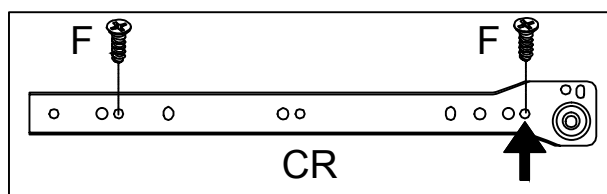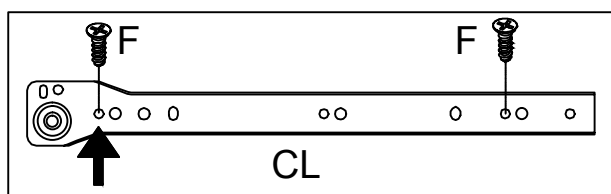


Step 2

F  X 12
Ø3.5 x 12mm

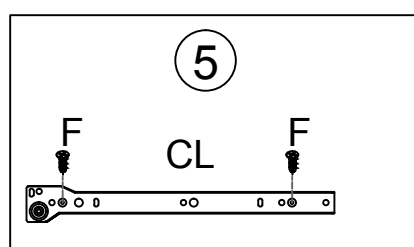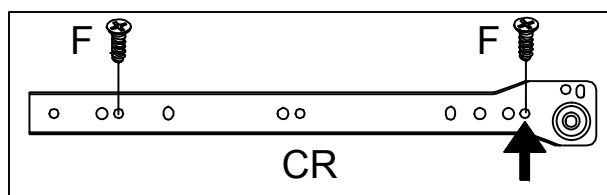

x2




180°

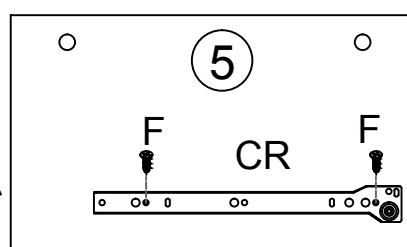


x2

Step 3



F  X 12
Ø3.5 x 12mm

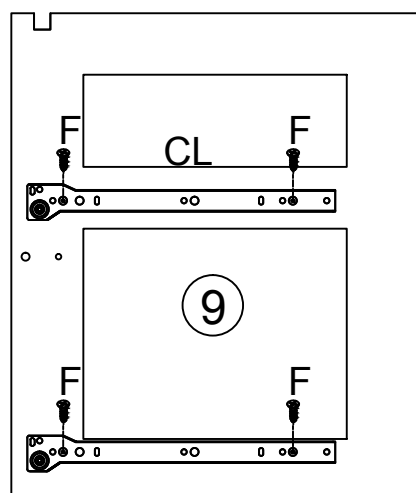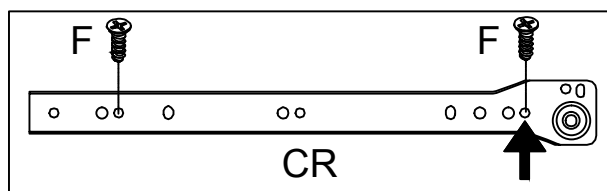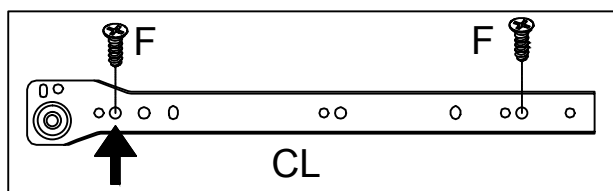



180°

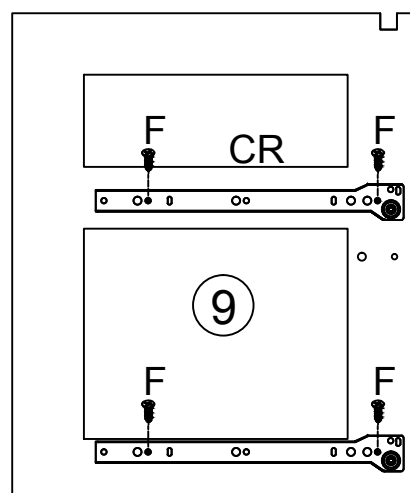



Step 4

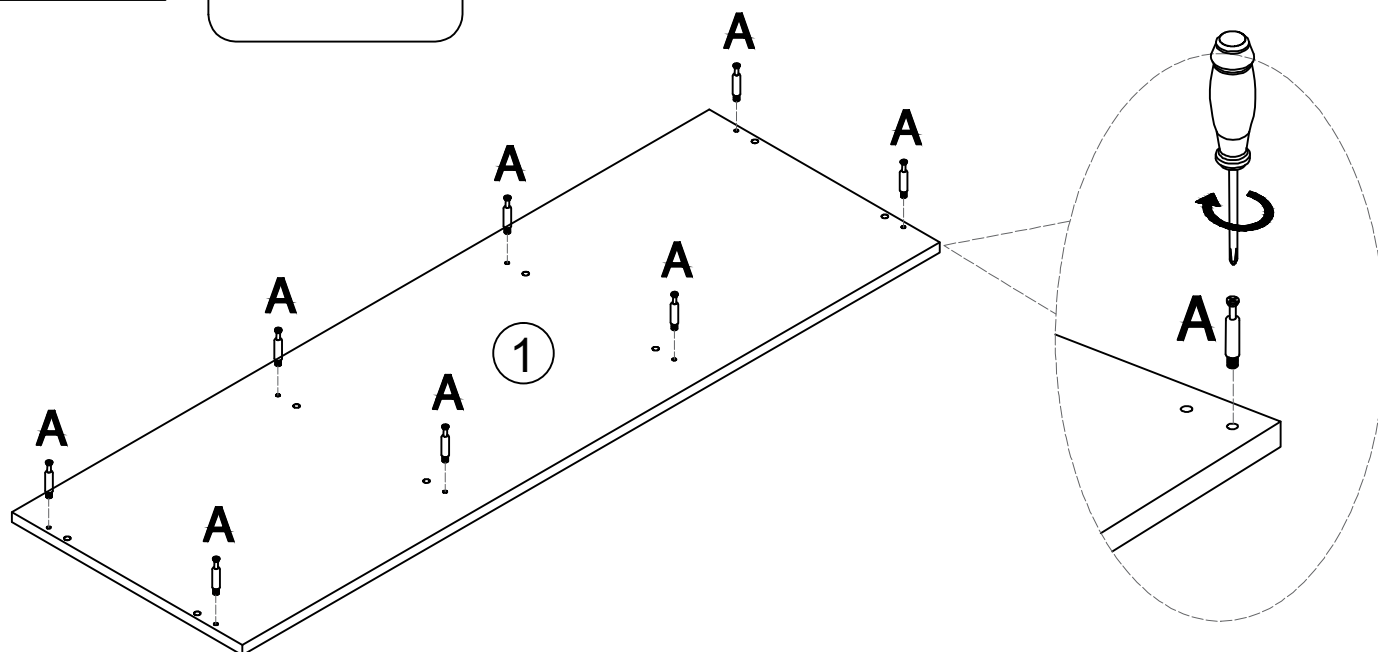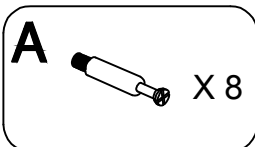





Step 5

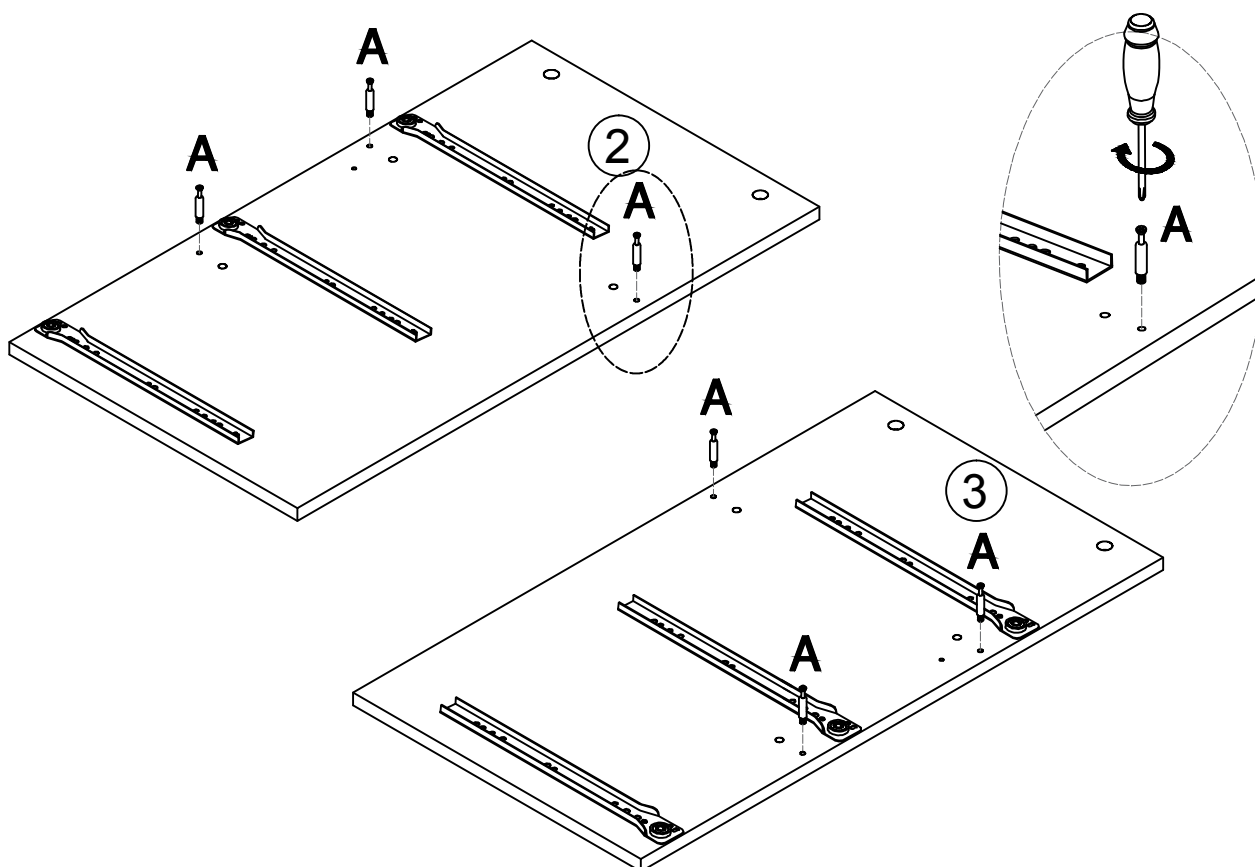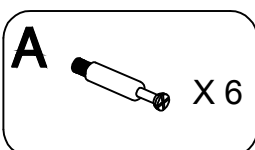





Step 6

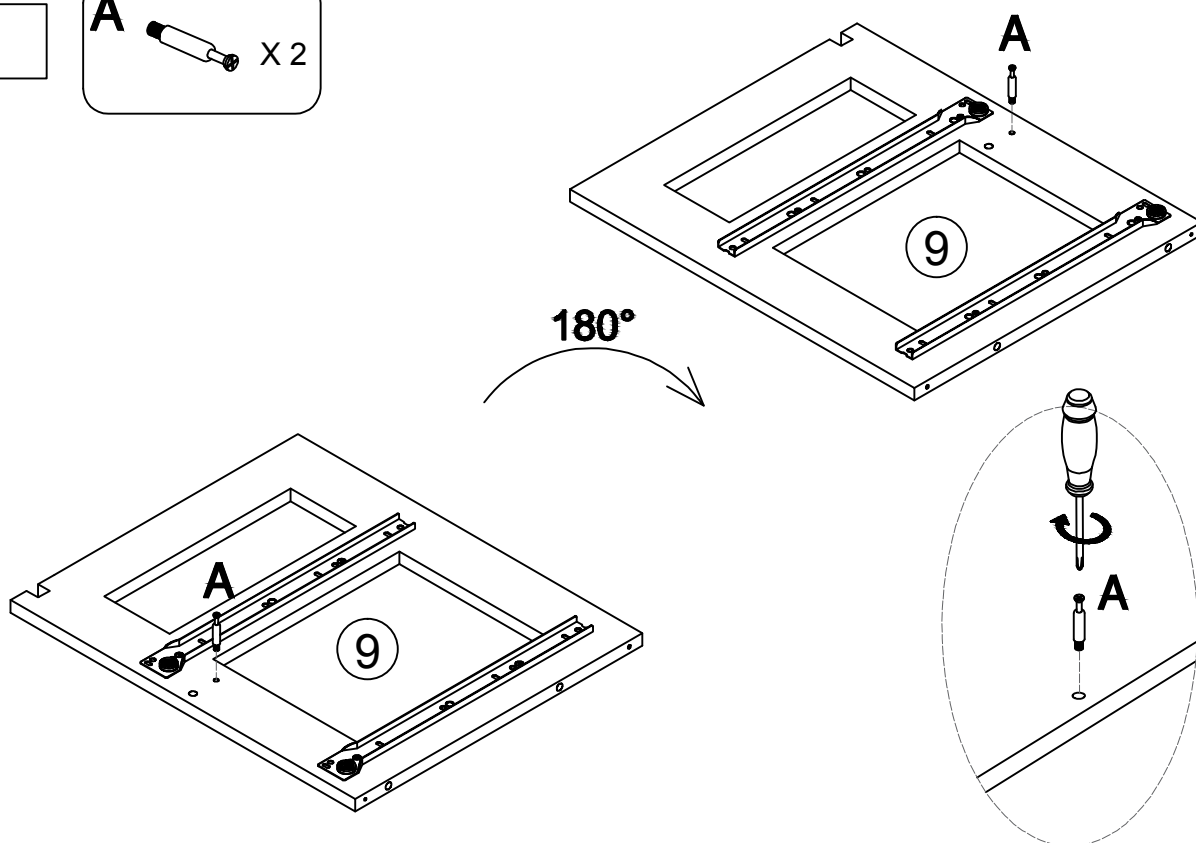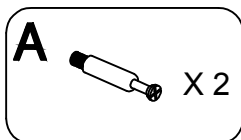




Step 7

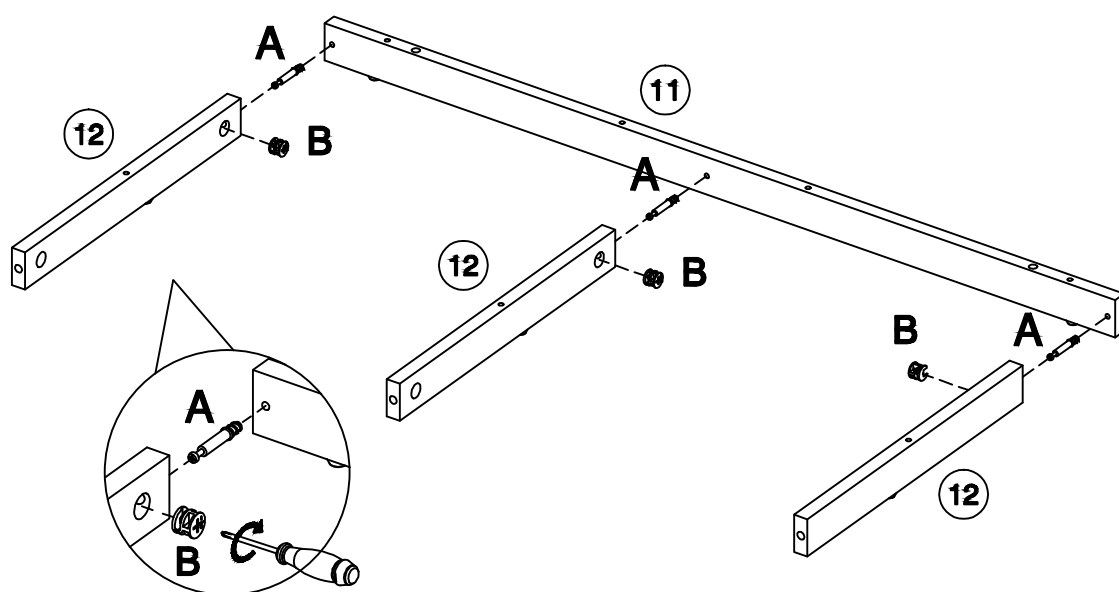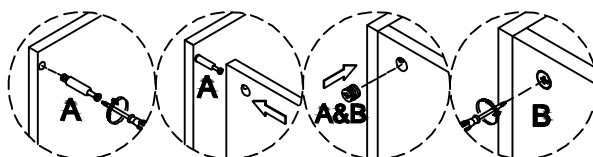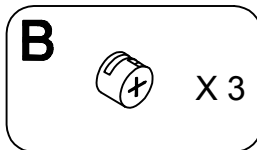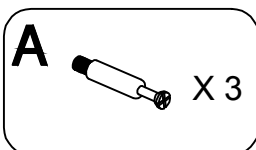



Step 8

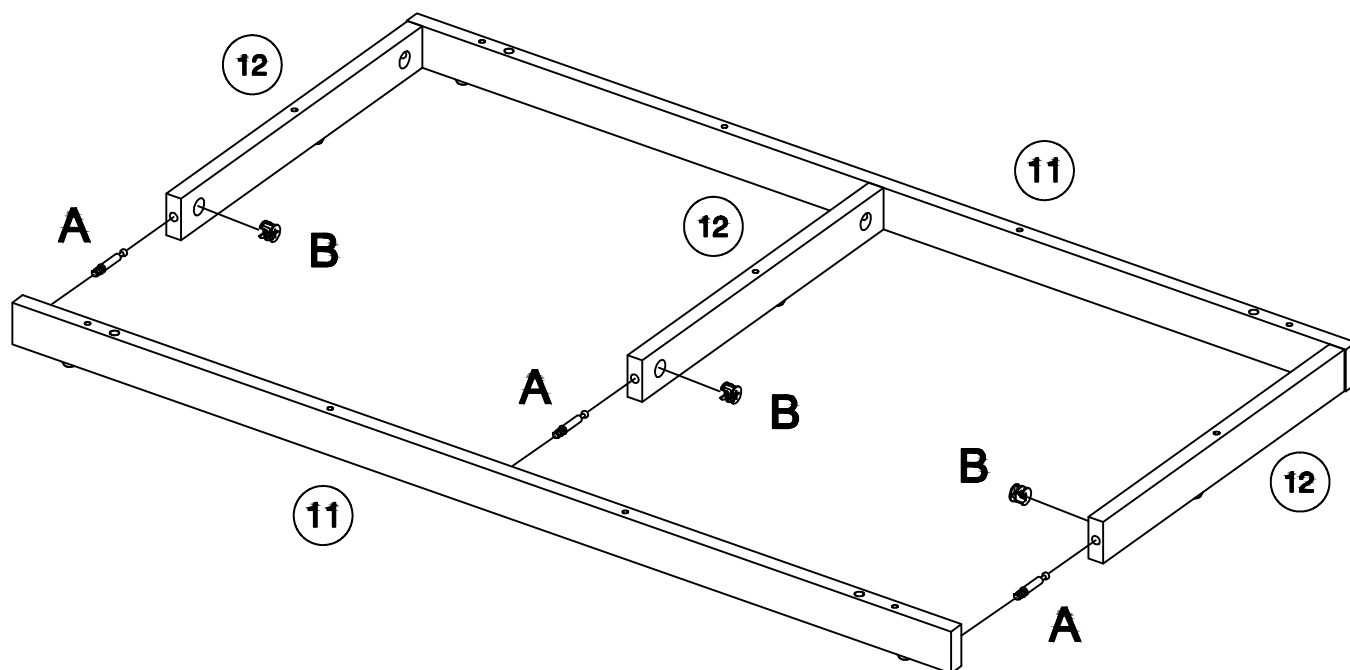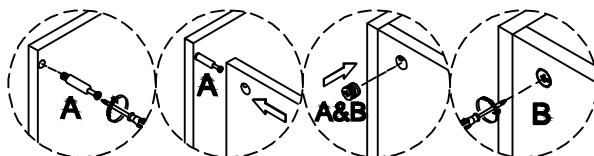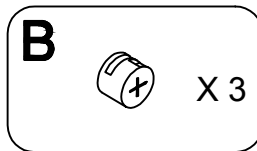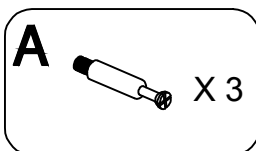



Step 9

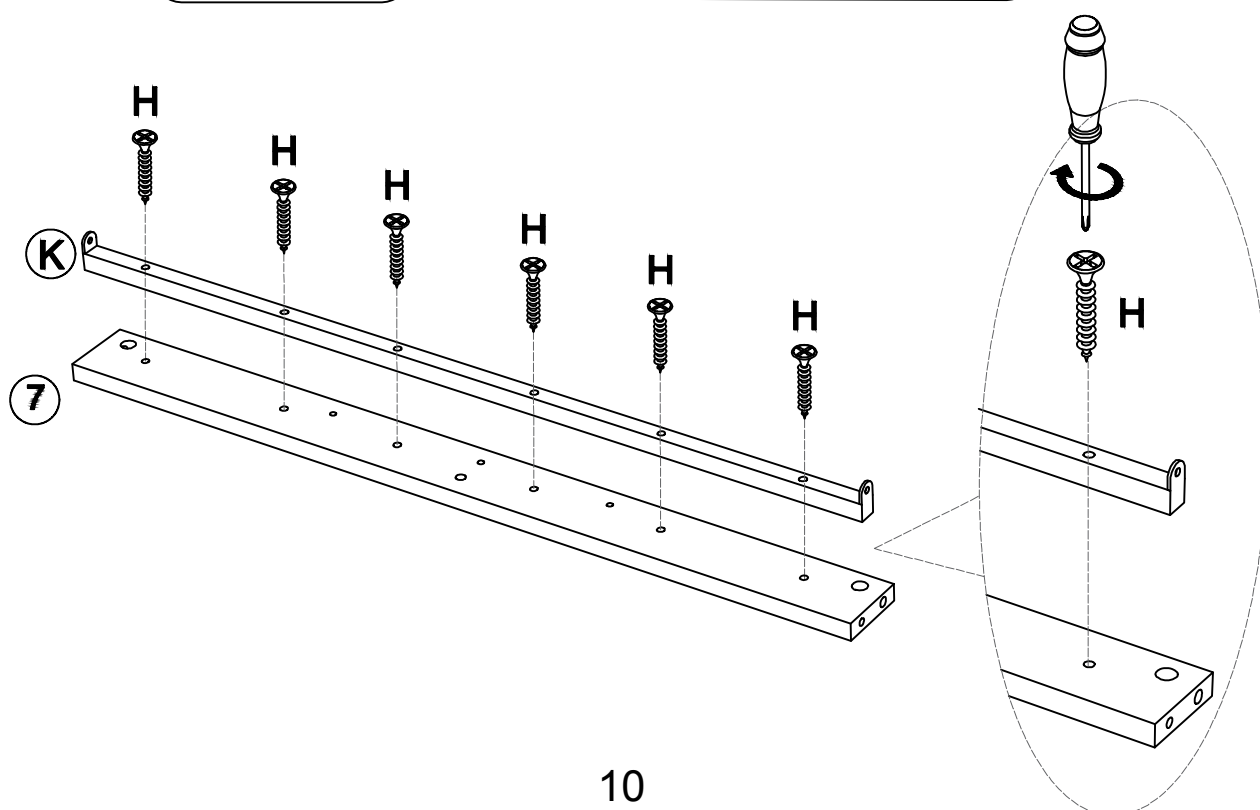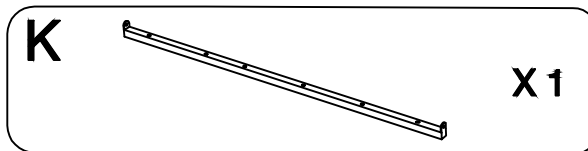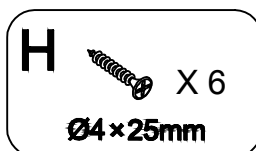

Step 10

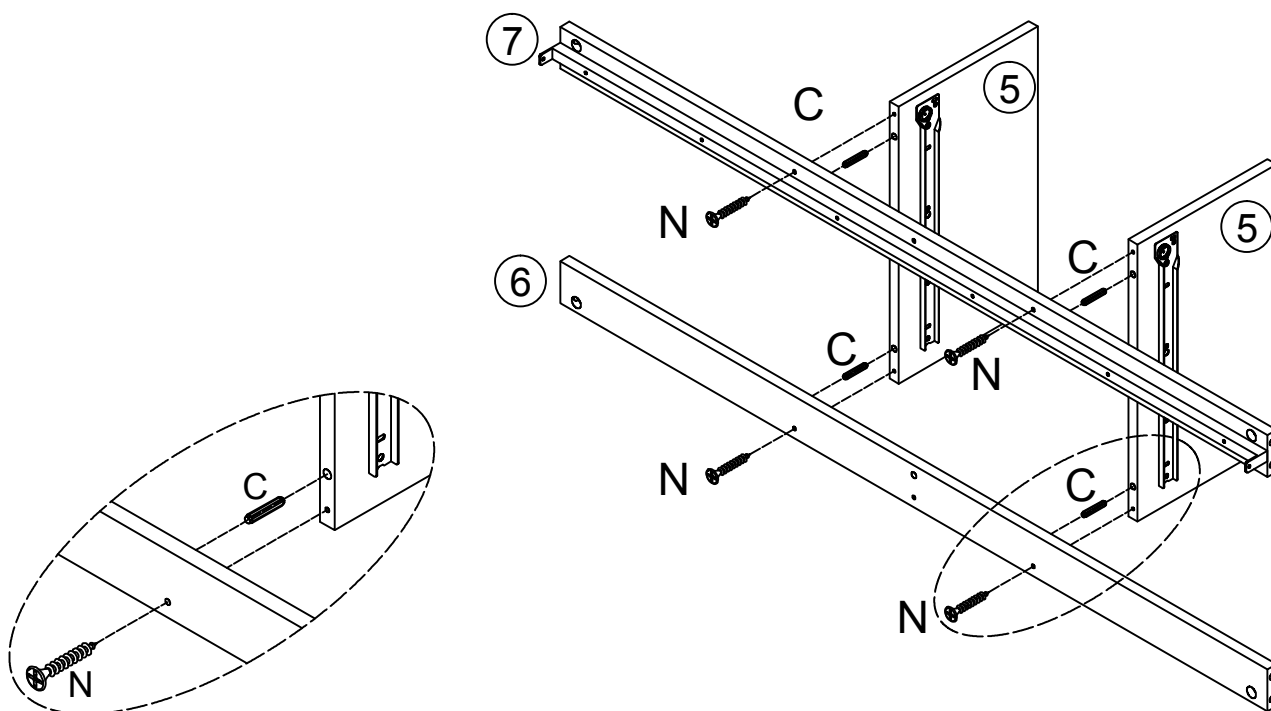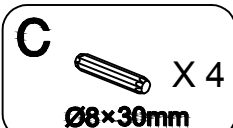




Step 11

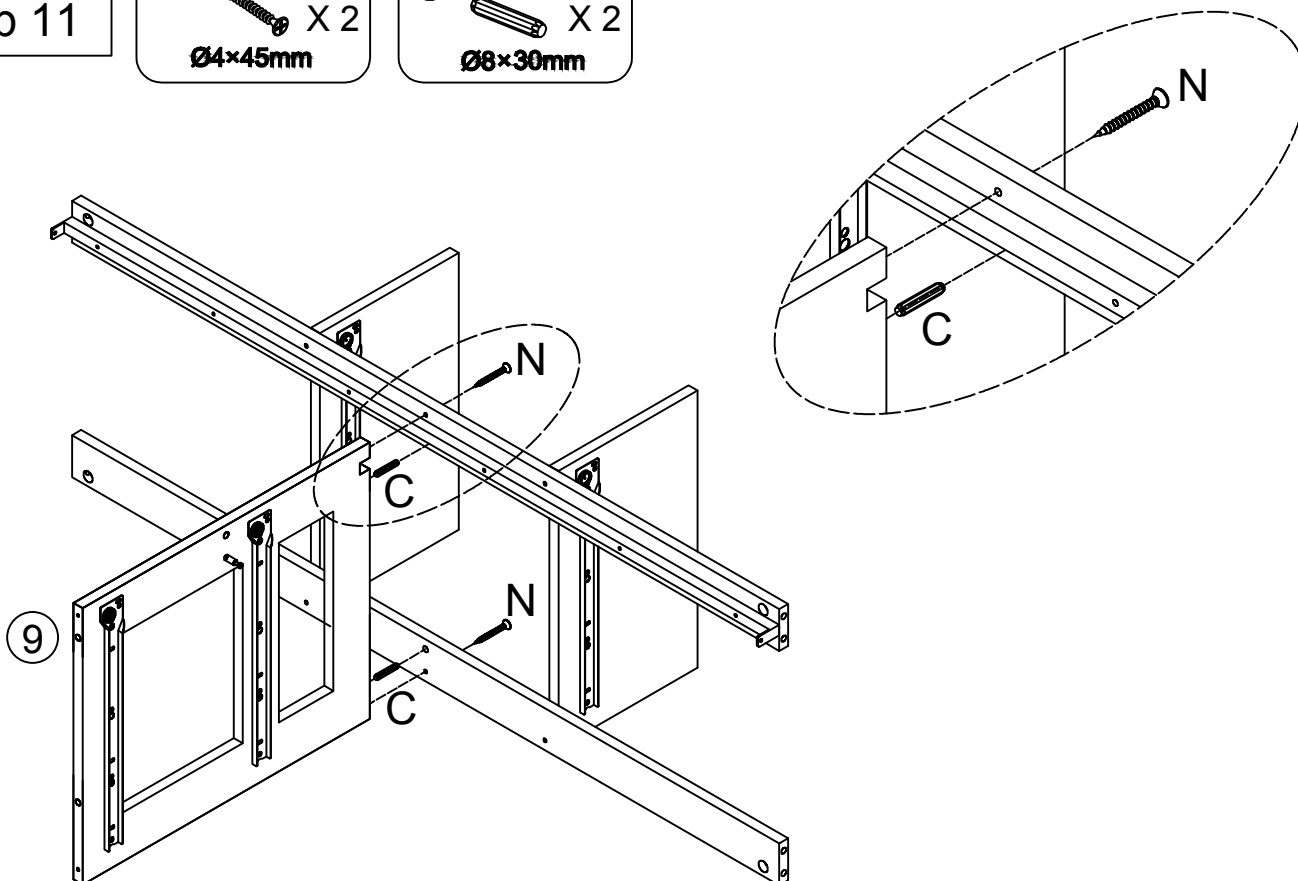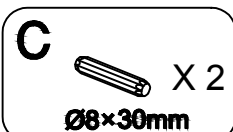

Step 12

C  X 1
Ø8×30mm



B  X 1

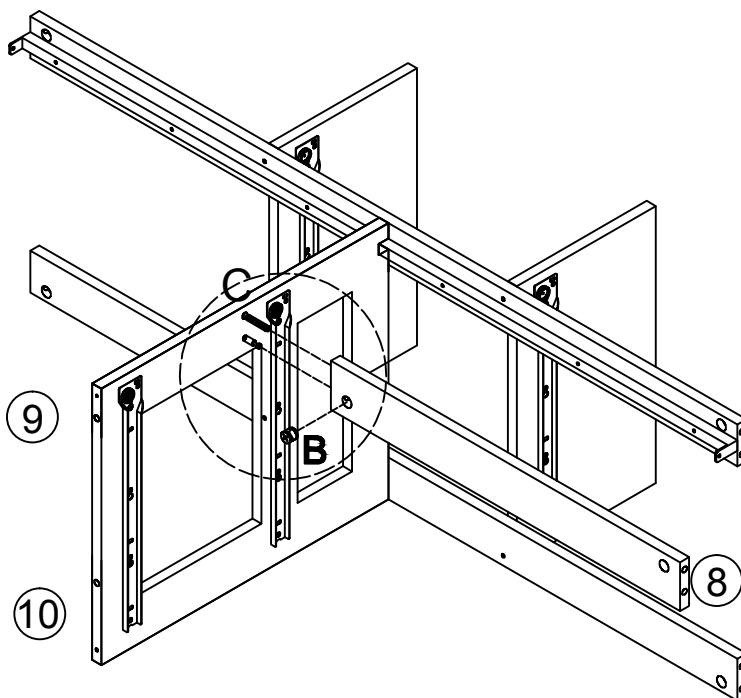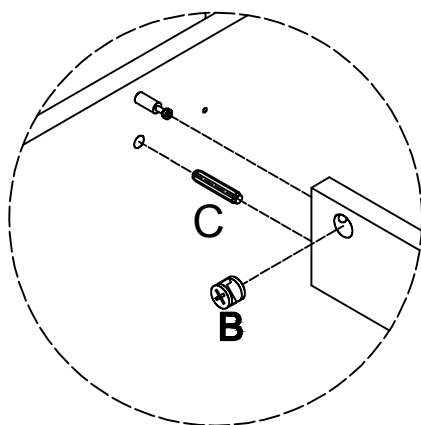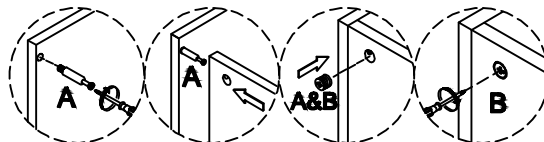

Step 13

C  X 1
Ø8×30mm

B  X 1

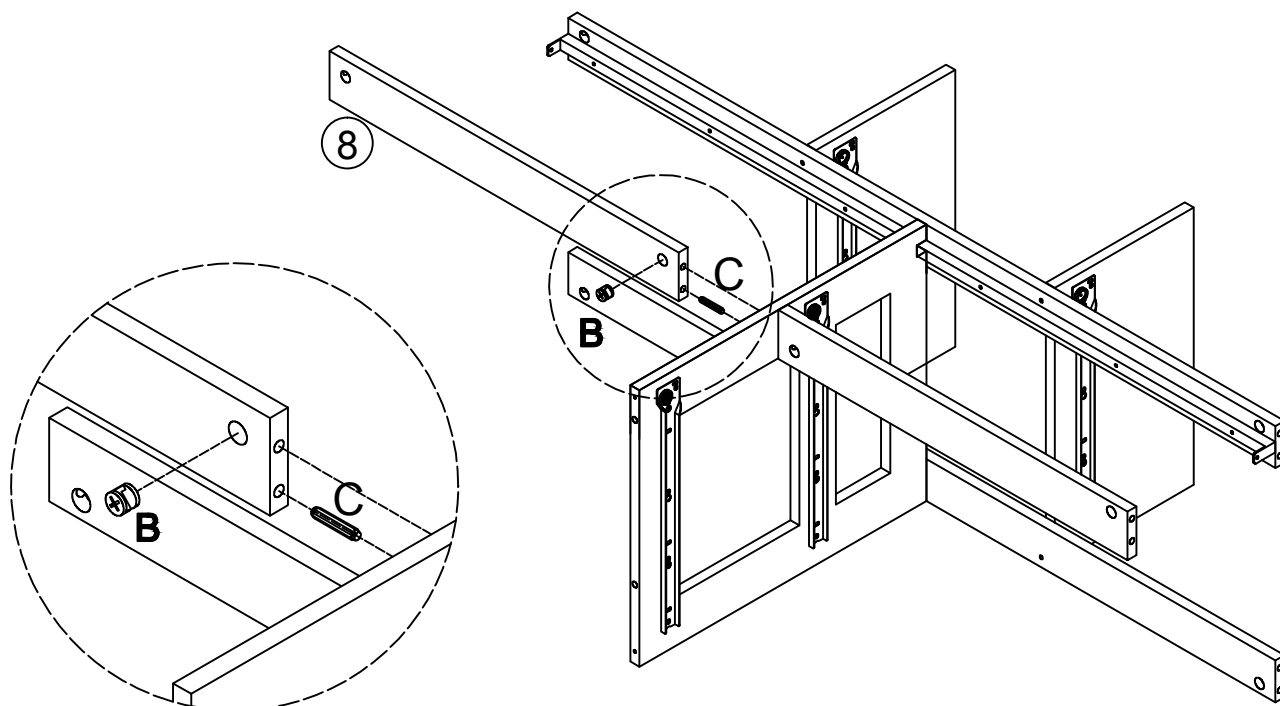
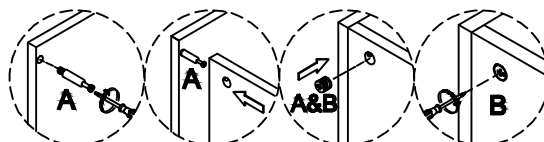


Step 14

C  X 3
Ø8×30mm

B  X 3

G  X 1
Ø3×12mm

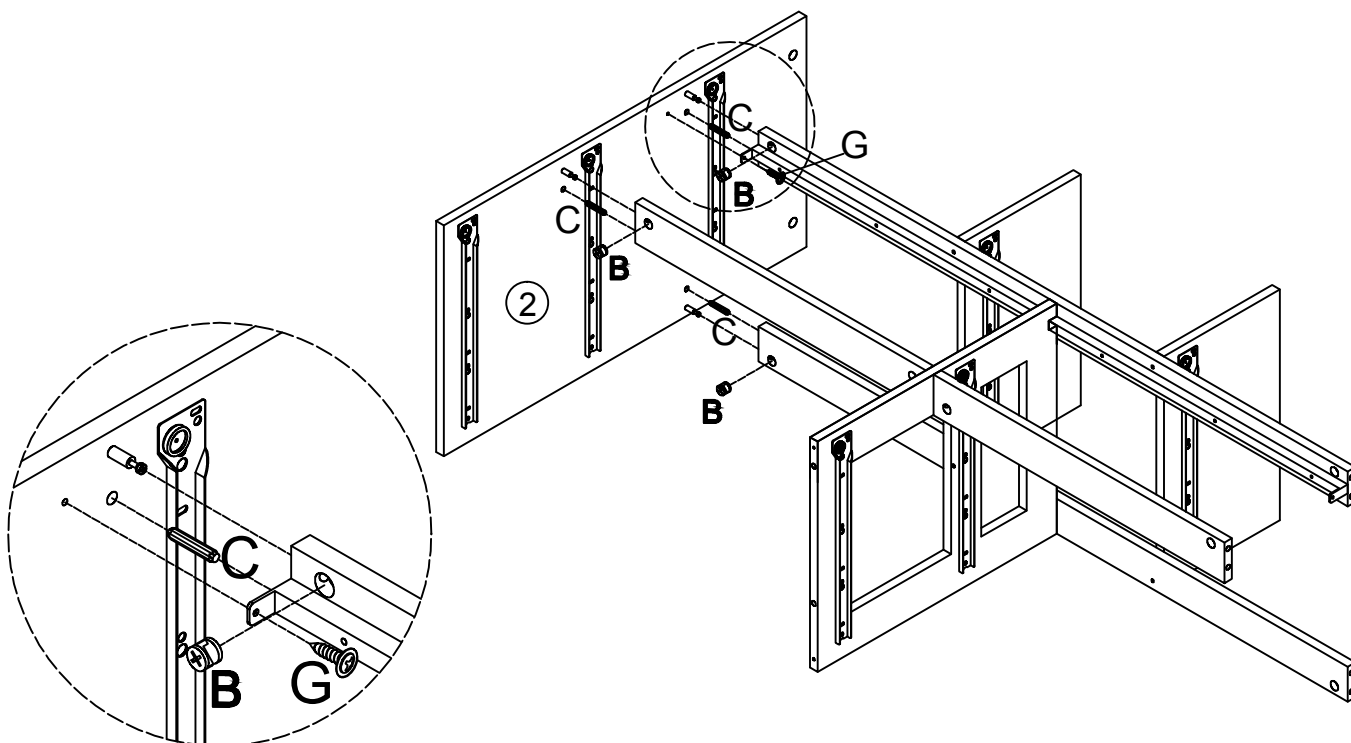
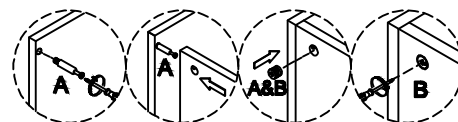


Step 15

C  X 3
Ø8×30mm

B  X 3


G  X 1
Ø3×12mm

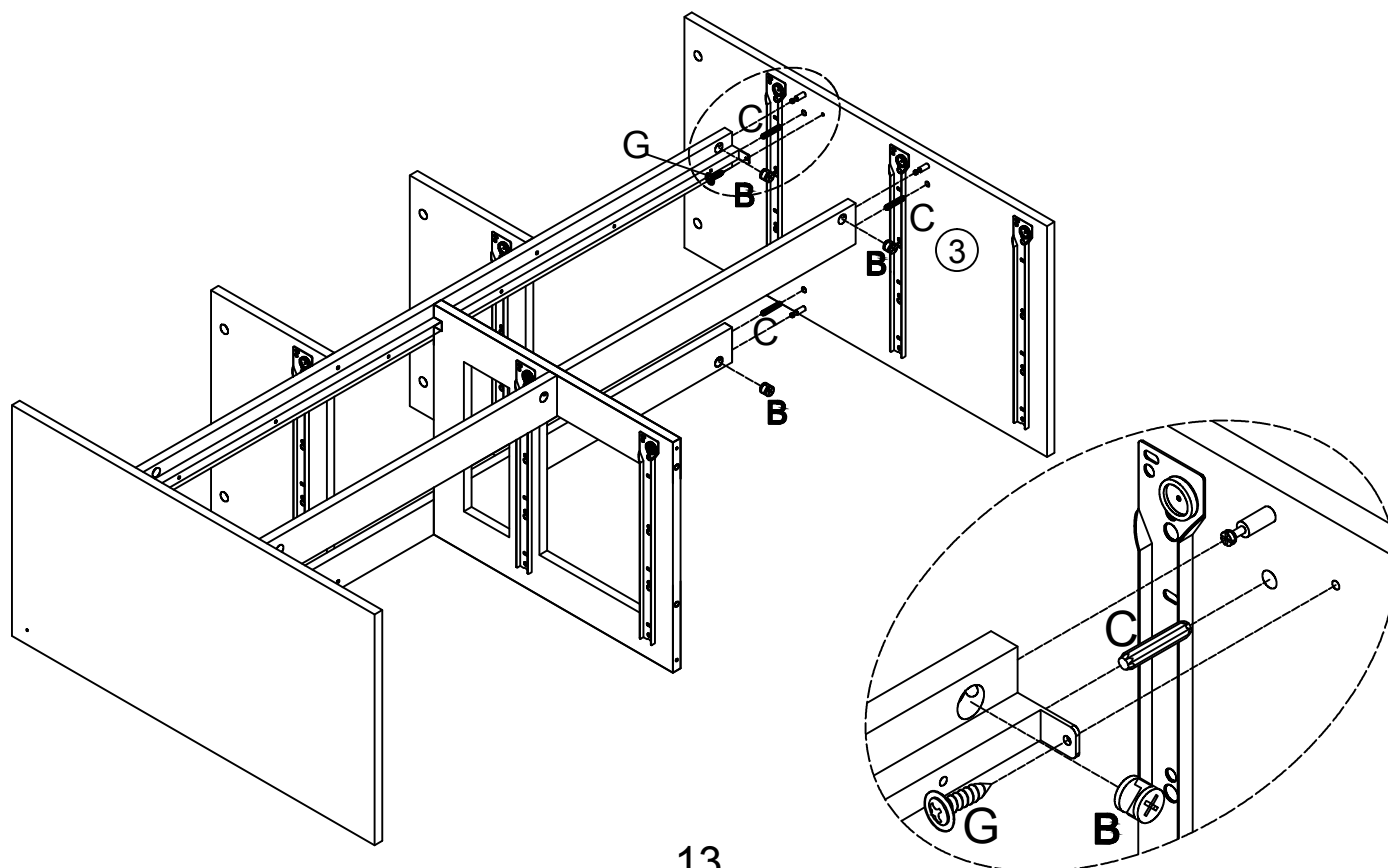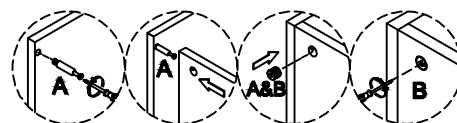

Step 16

N  X 6
Ø4×45mm


C  X 6
Ø8×30mm

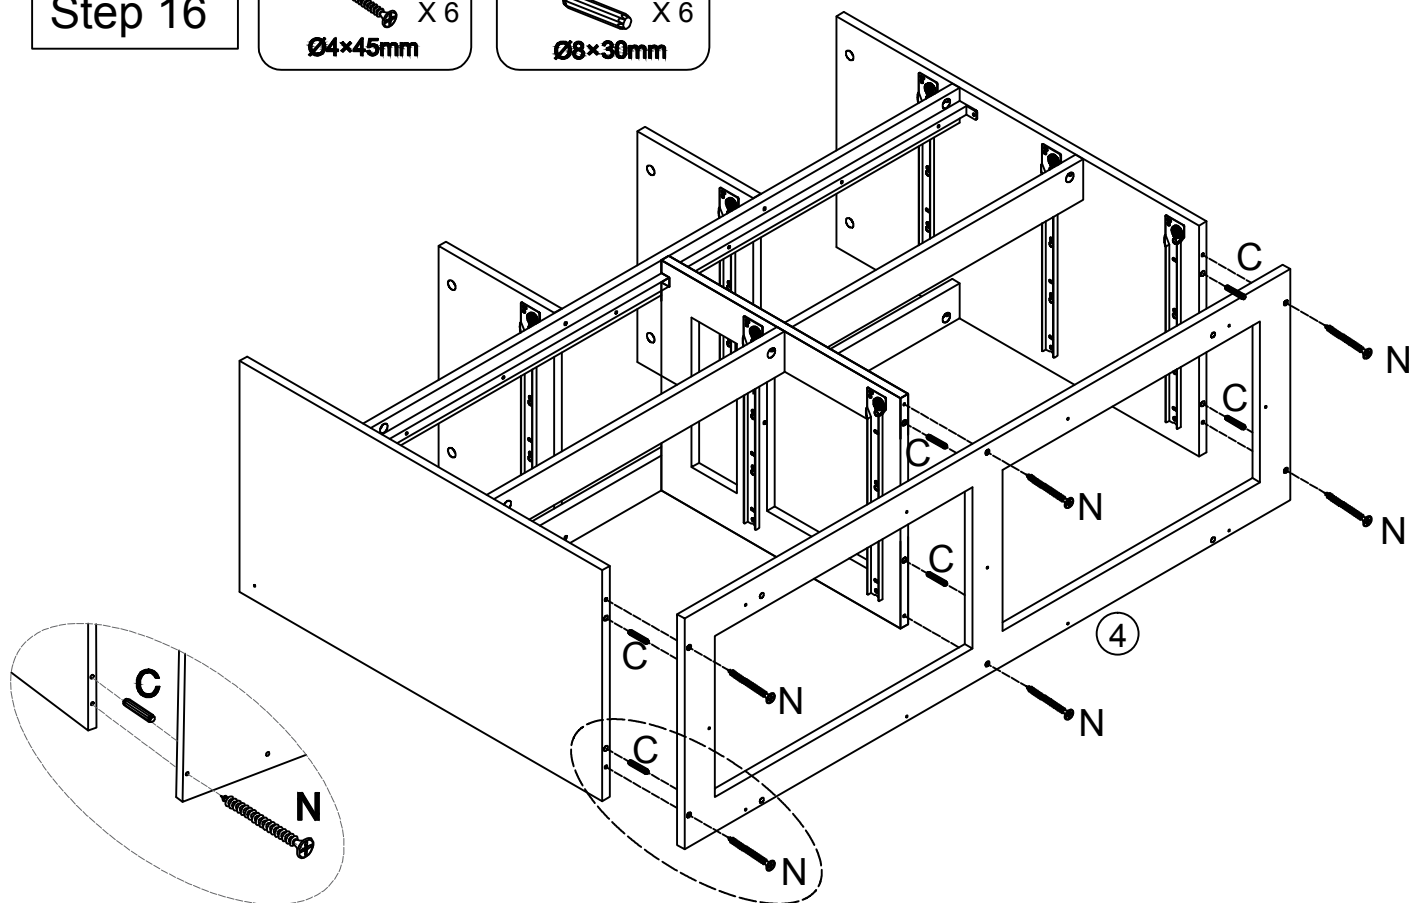

Step 17

D  X 11
Ø4×38mm

C  X 4
Ø8×30mm

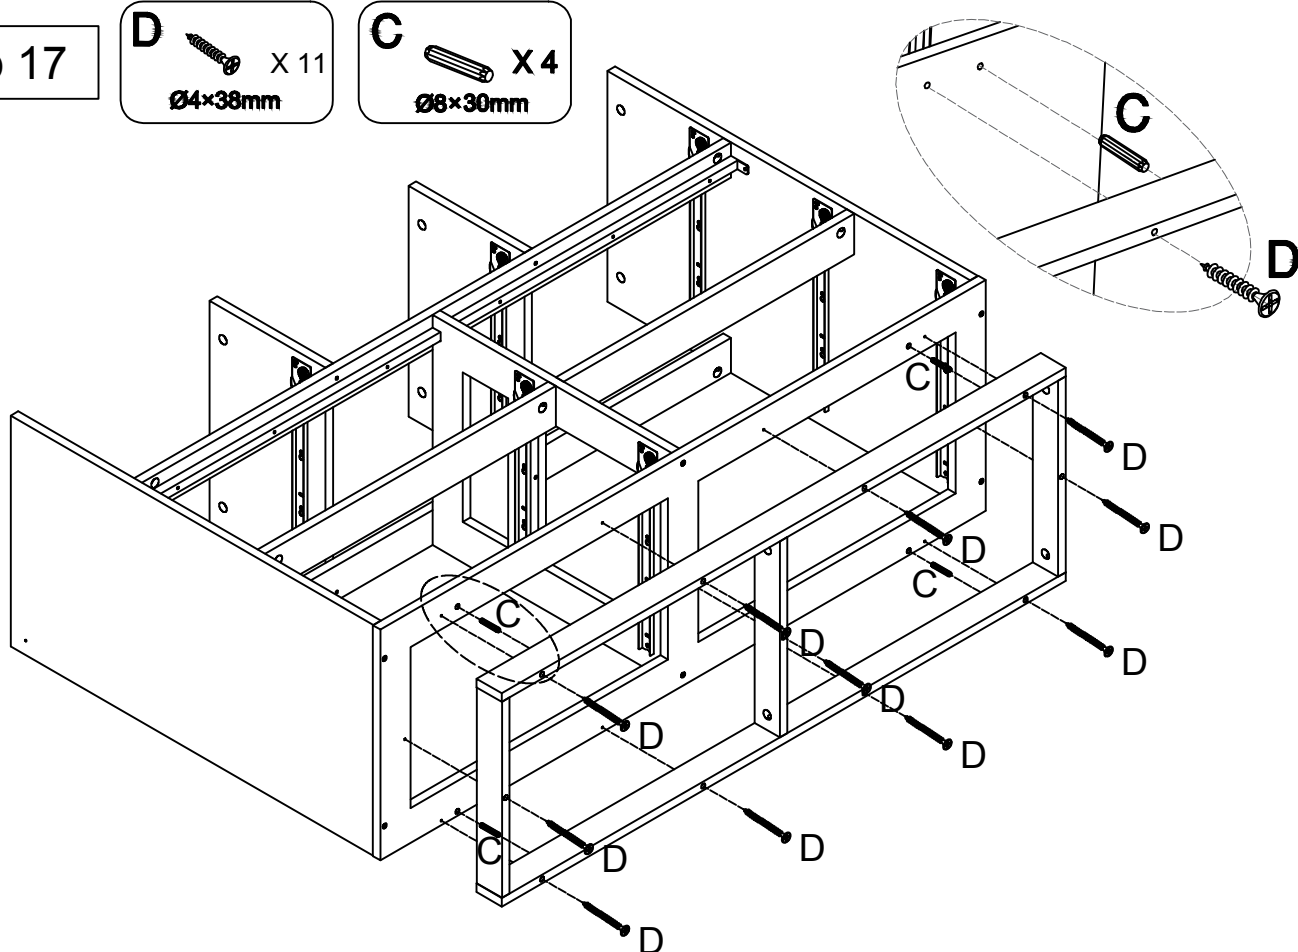

Step 18



B

X 8

C

X 8

Ø6x30mm

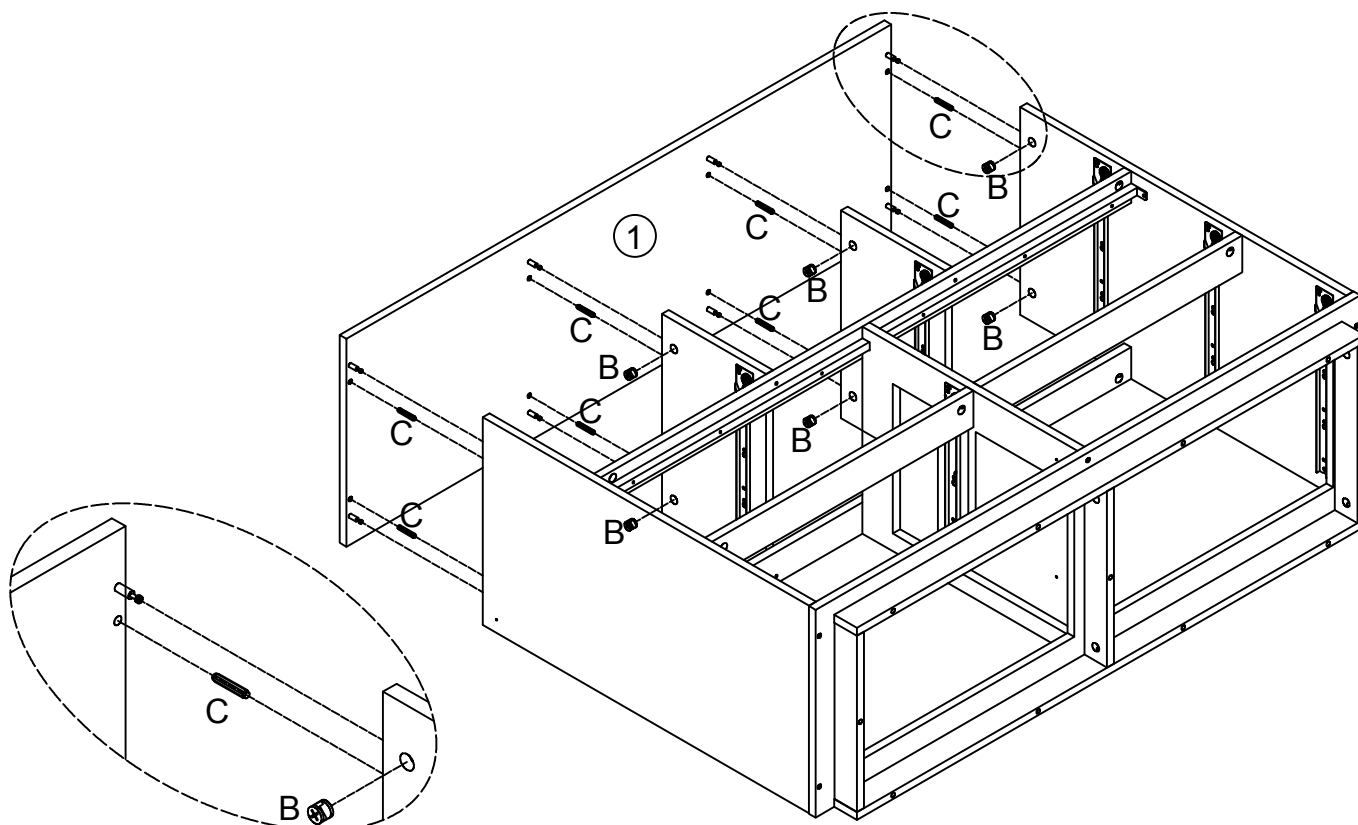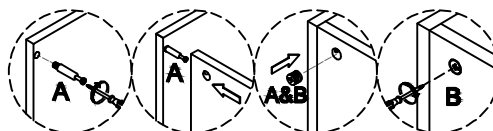


Step 19



G

X 24






Ø3.5 x 12mm

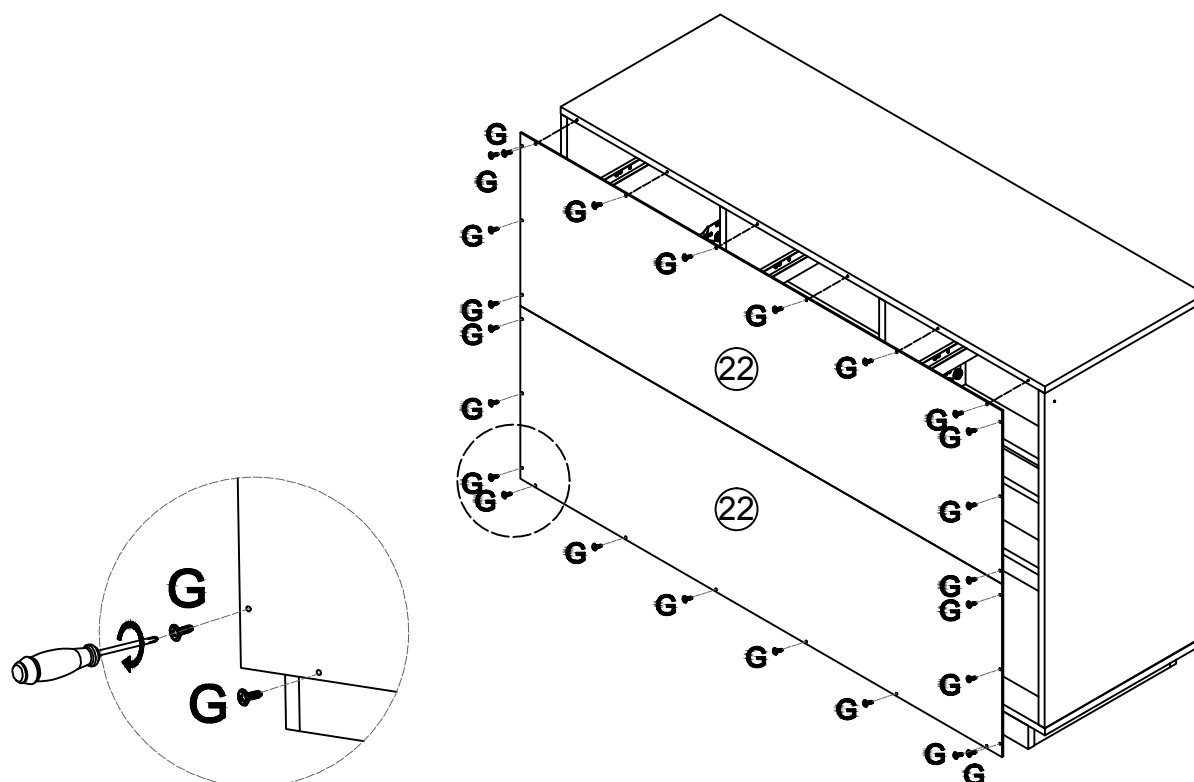

Step 20

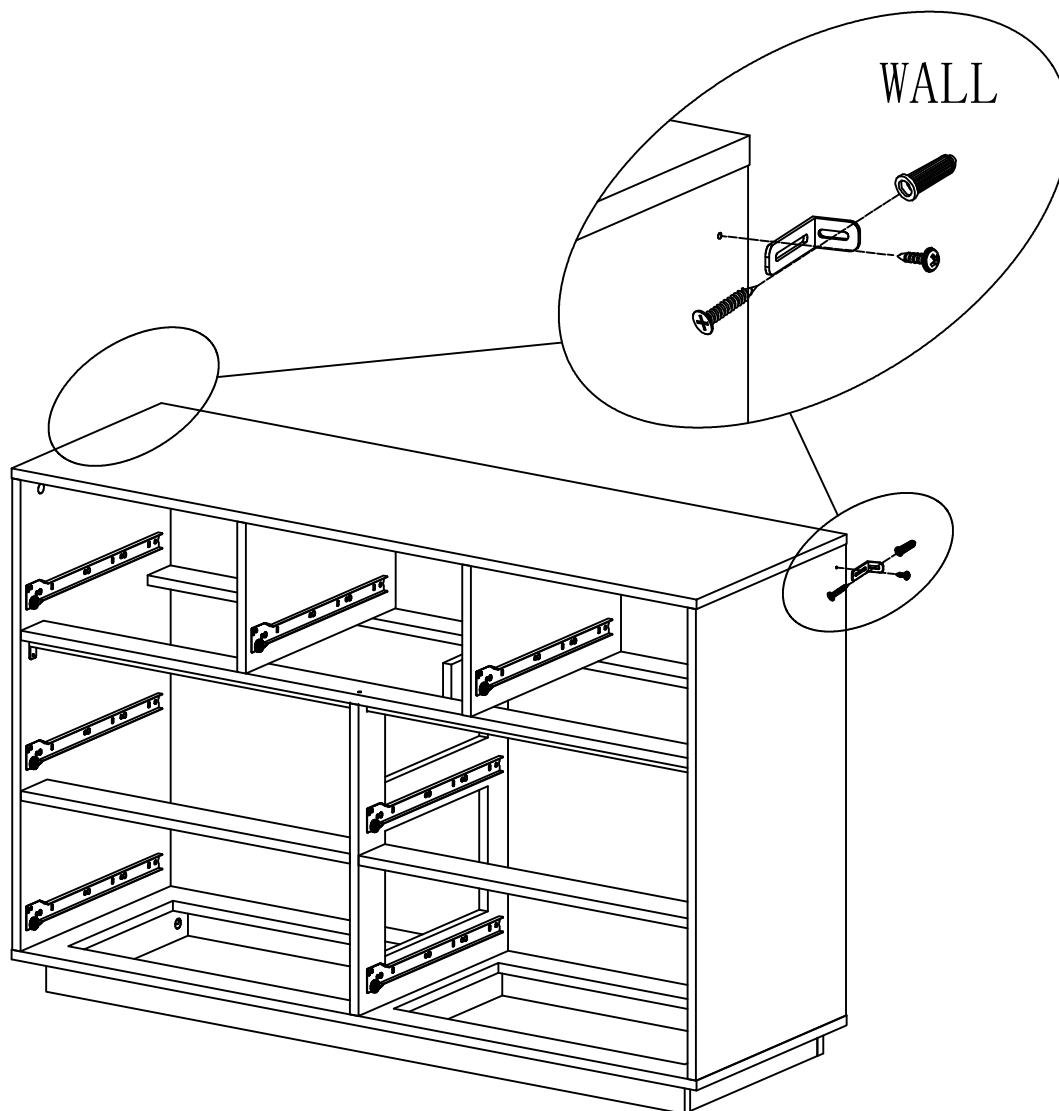

Step 21

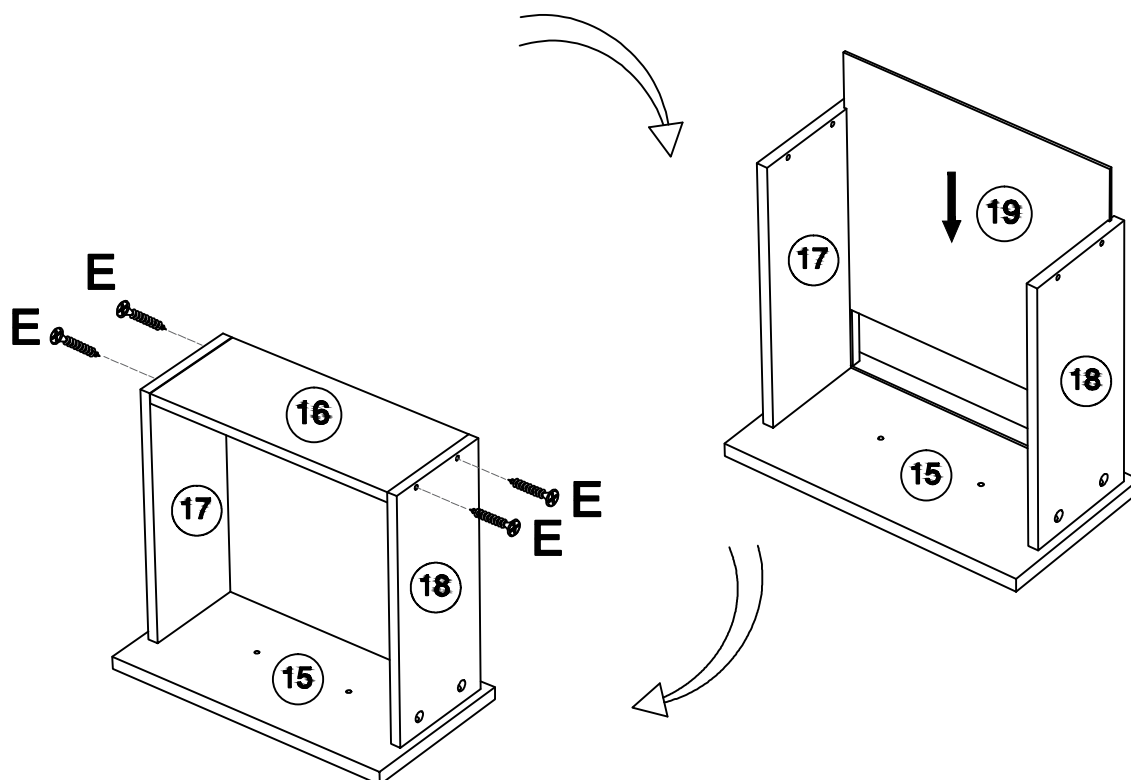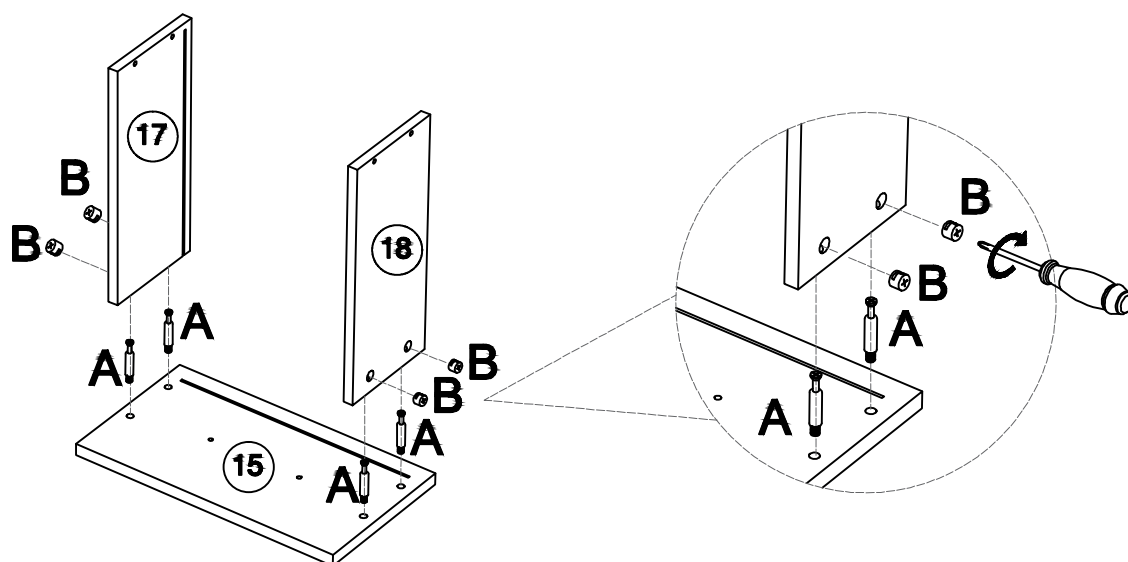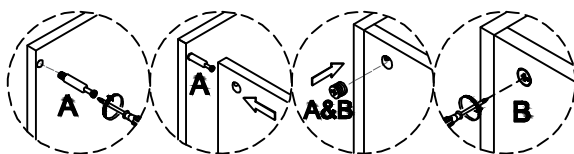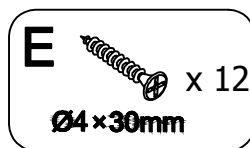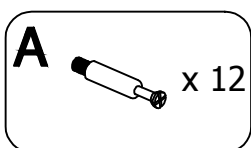



x 3

Step 22

F  x 18
Ø3.5 x 12mm







I  x 3
 

M  **DR**  **DL** x 3

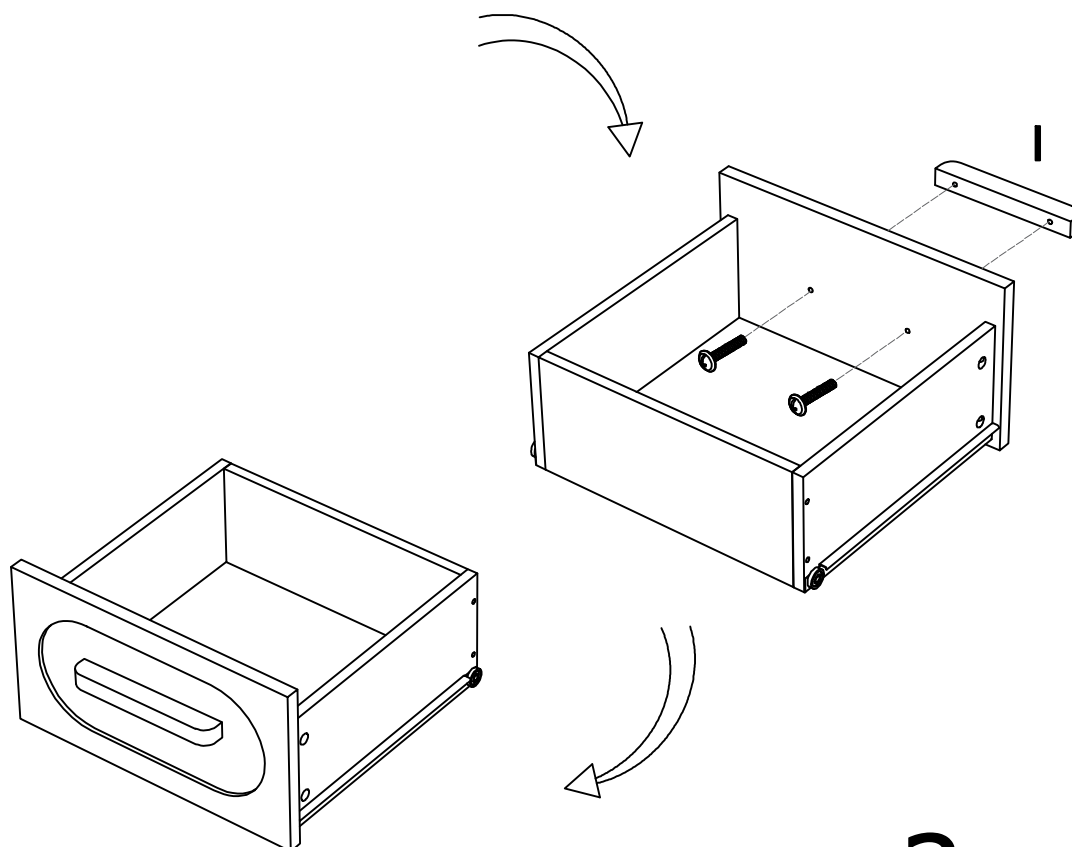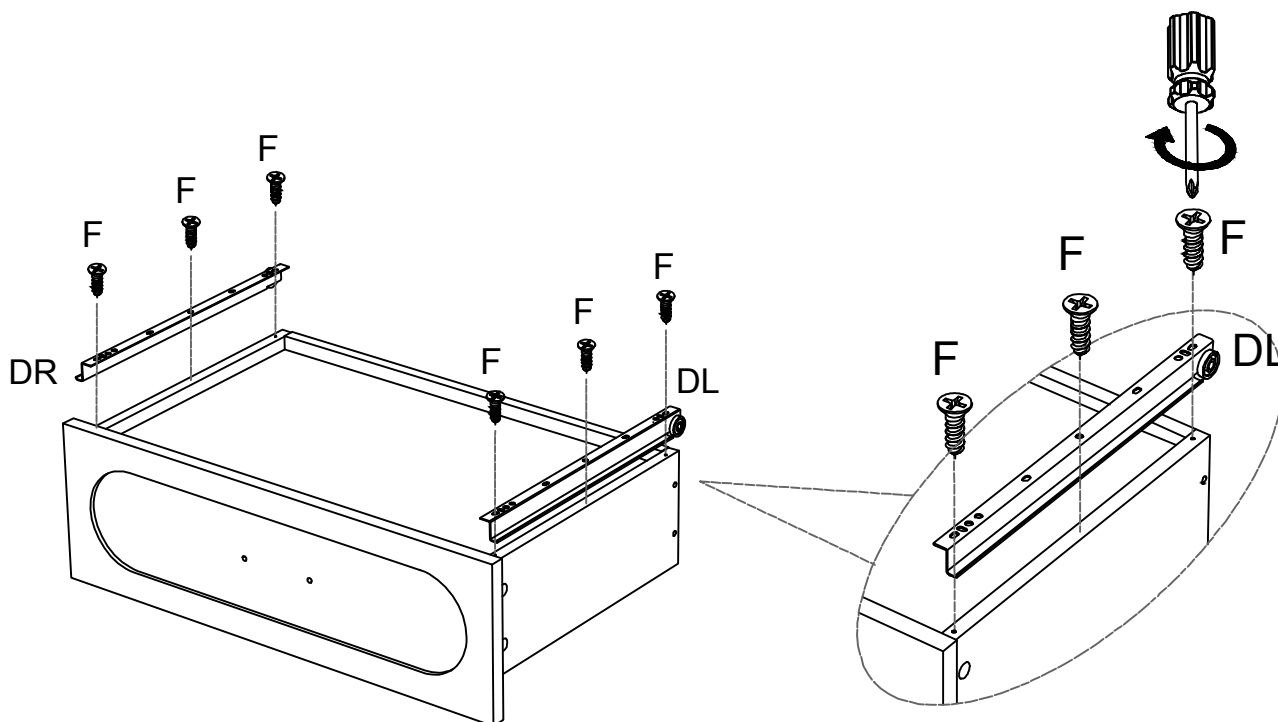

x 3

Step 23

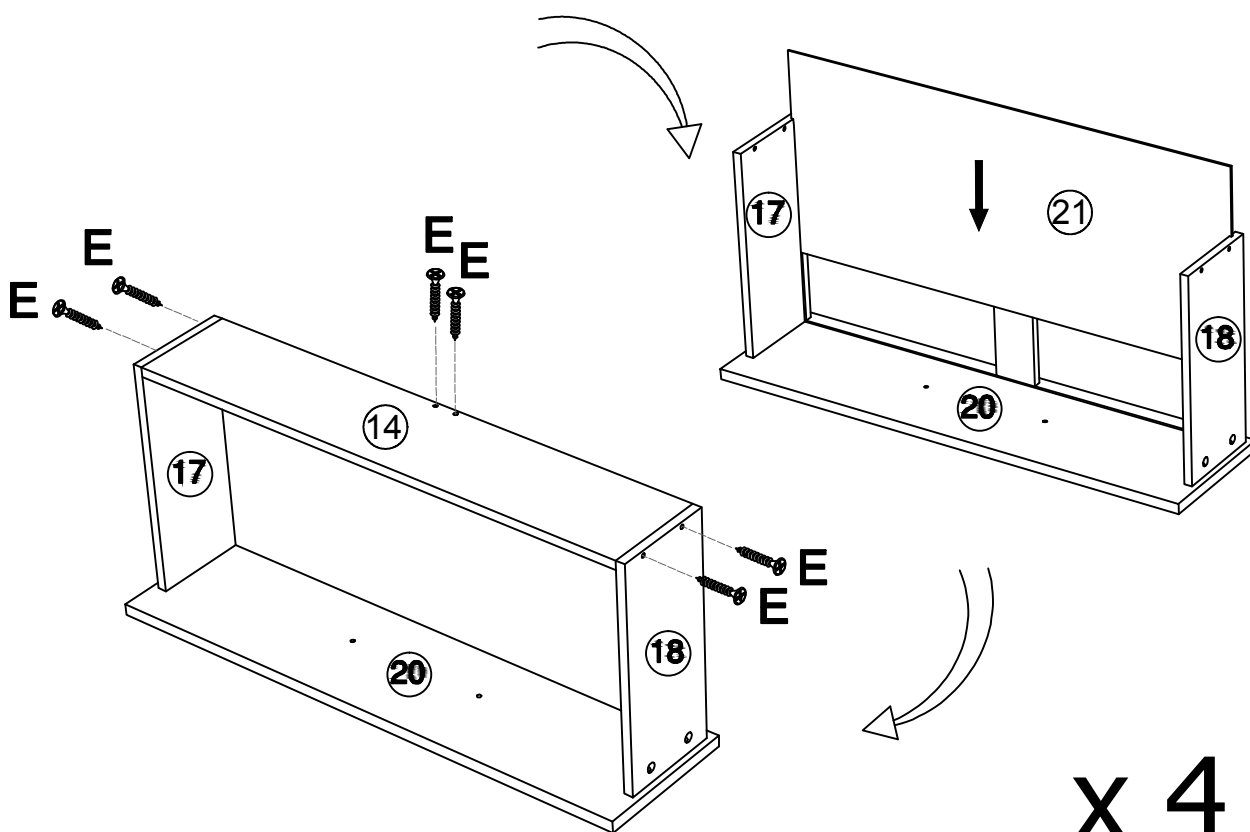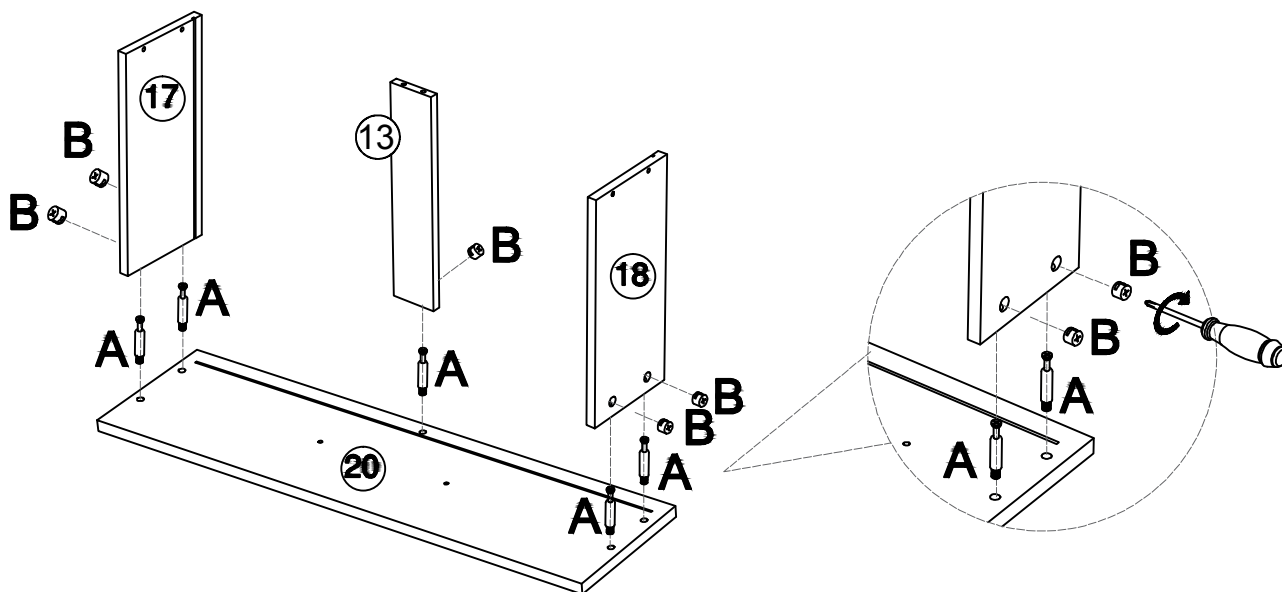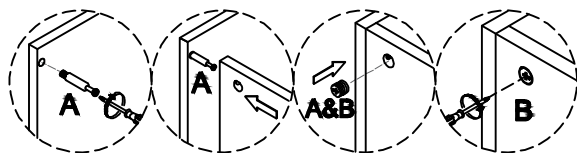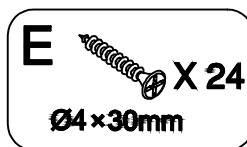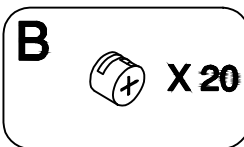
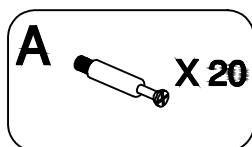


Step 24

F  **X 24**
Ø3.5 x 12mm

J  **X 4**

M  **X 4**
DR DL

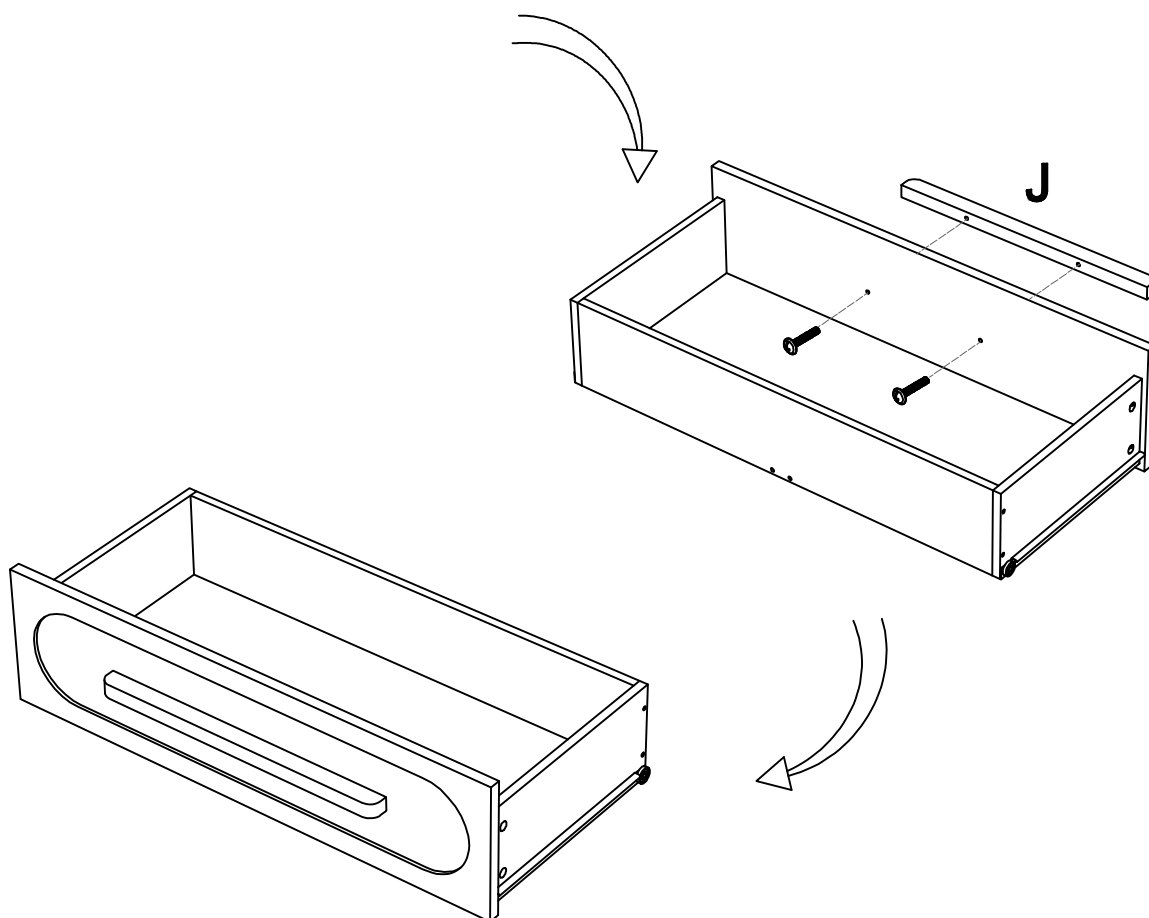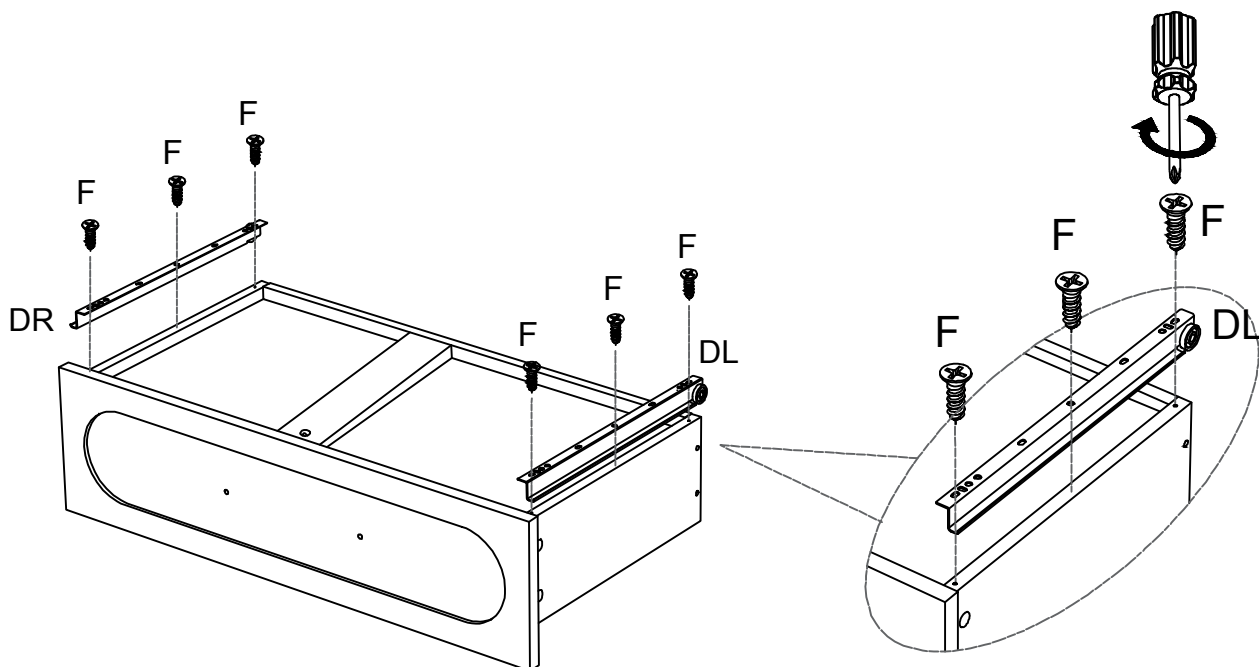

x 4

Step 25

