


# Installation Instruction

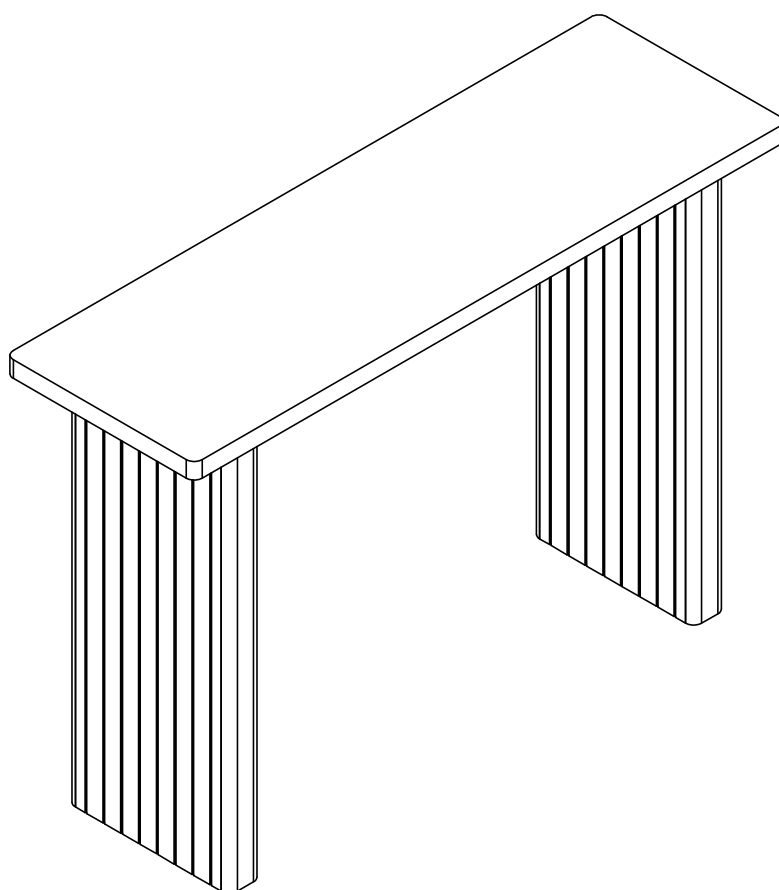


# Assembling

---


## What you need

- Use the packaging carton as a working surface to prevent product damage during assembly
- Phillips head screwdriver



## Weight Limitation

 **100** | **35**  
lbs table top      lbs per

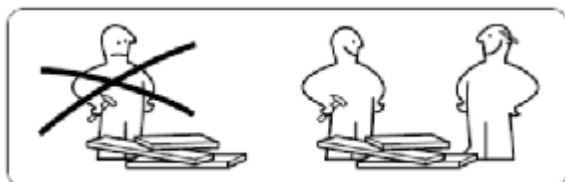


# What' included

---

Code Description	Qty
A Cam Bolt M6X35MM	11
B Cam Lock 15X12MM	11
C Wooden Dowel M8X30MM	8
D Screw M4X40MM	2
E Screw M3.5X14MM	2
F Anchor	2
G L-shaped metal sheet	2
H EVA foot mat	4
I Circular hole Decals	11

# The Hardwares


Ⓐ




Ⓑ



Ⓒ



Ⓓ




Ⓔ




Ⓕ




Ⓖ



Ⓗ



Ⓘ



## IMPORTANT:


1. Do not tighten bolts / screws completely until all bolts / screws are lined up and inserted into holes.
2. Do not over tighten screws and bolts to avoid stripping
3. Please use hand tools to assemble this product, you can also use power tools (please use power tools carefully)

# Included Accessories


---

Code	Description	Qty
1	Cabinet Top	1
2	Left and right side panels	2
3	Reinforcing strip	1


# The Accessoriess

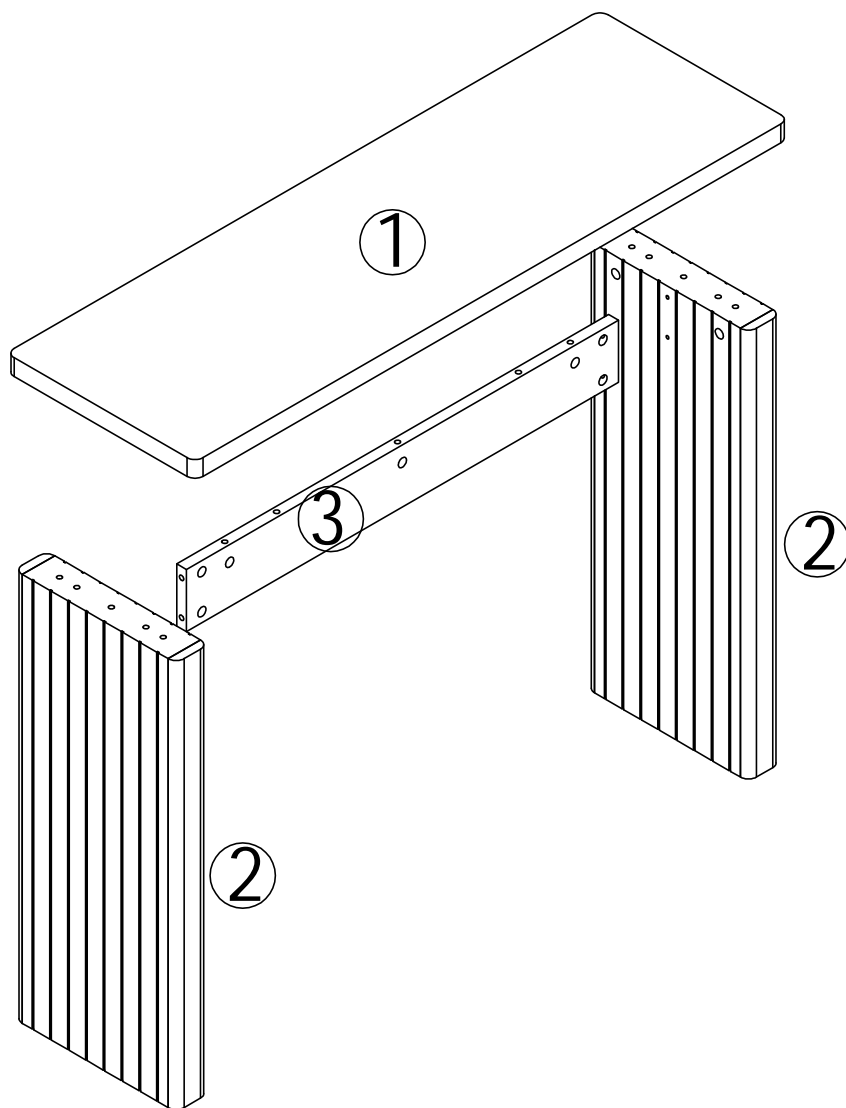




# Step 1






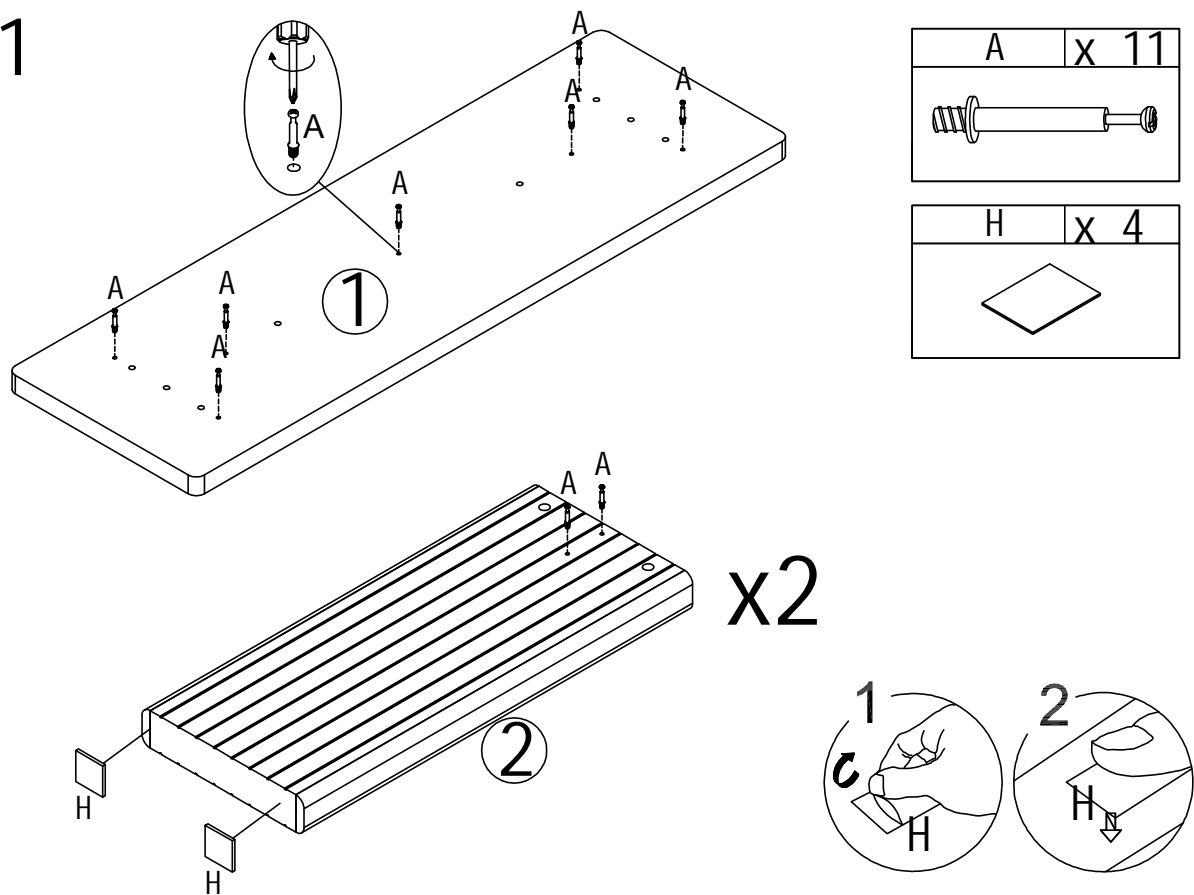


# Step 2

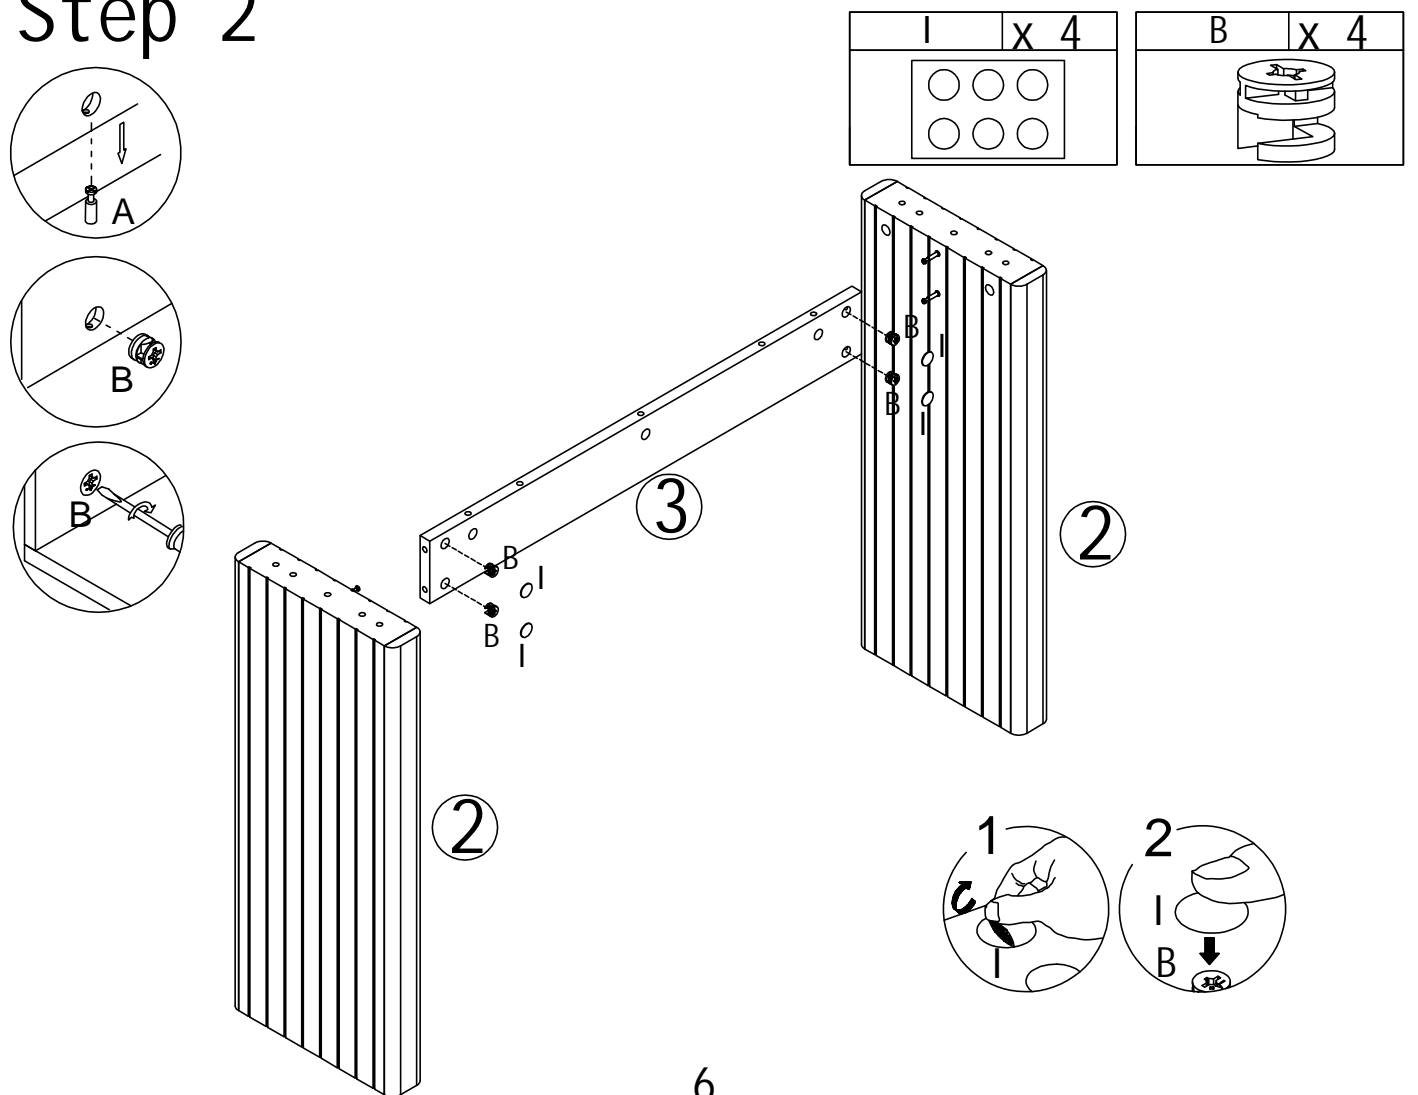



# Step 3

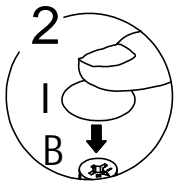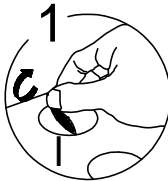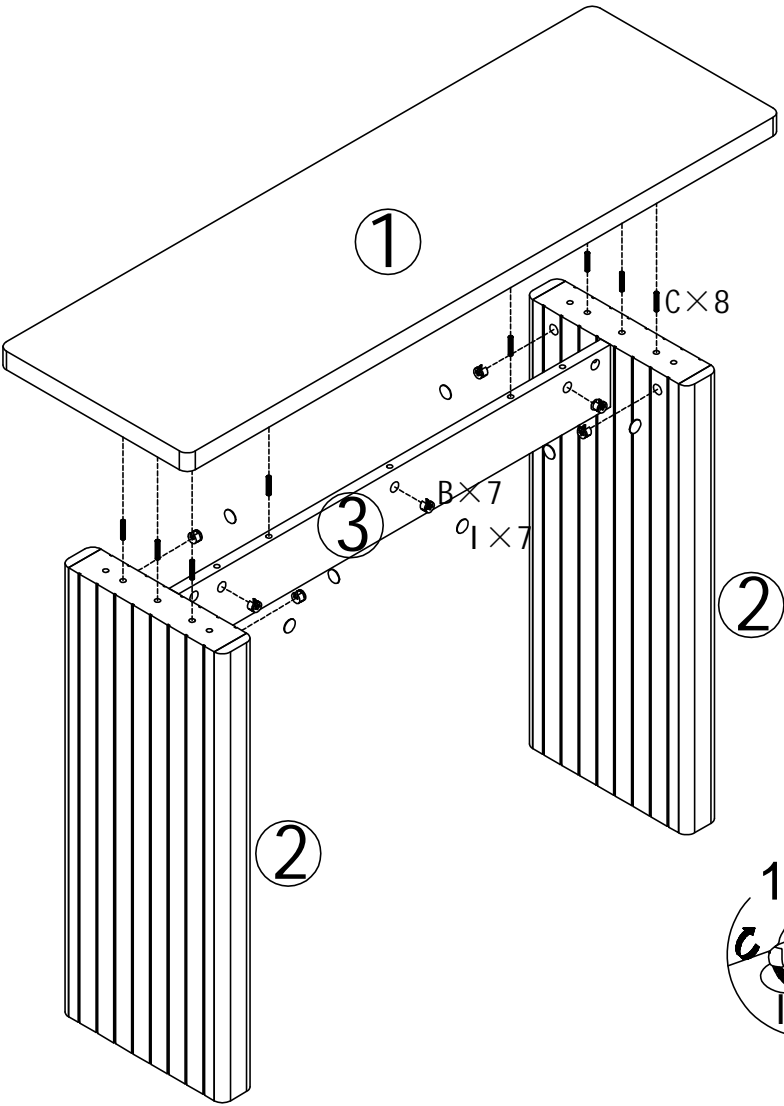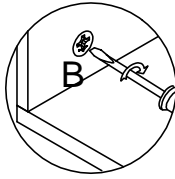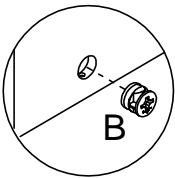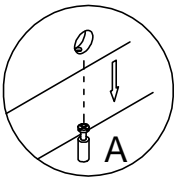
C	x 8	I	x 7	B	x 7
					





# Step 4


G	X 2
	

F	X 2
	

D	X 2
	

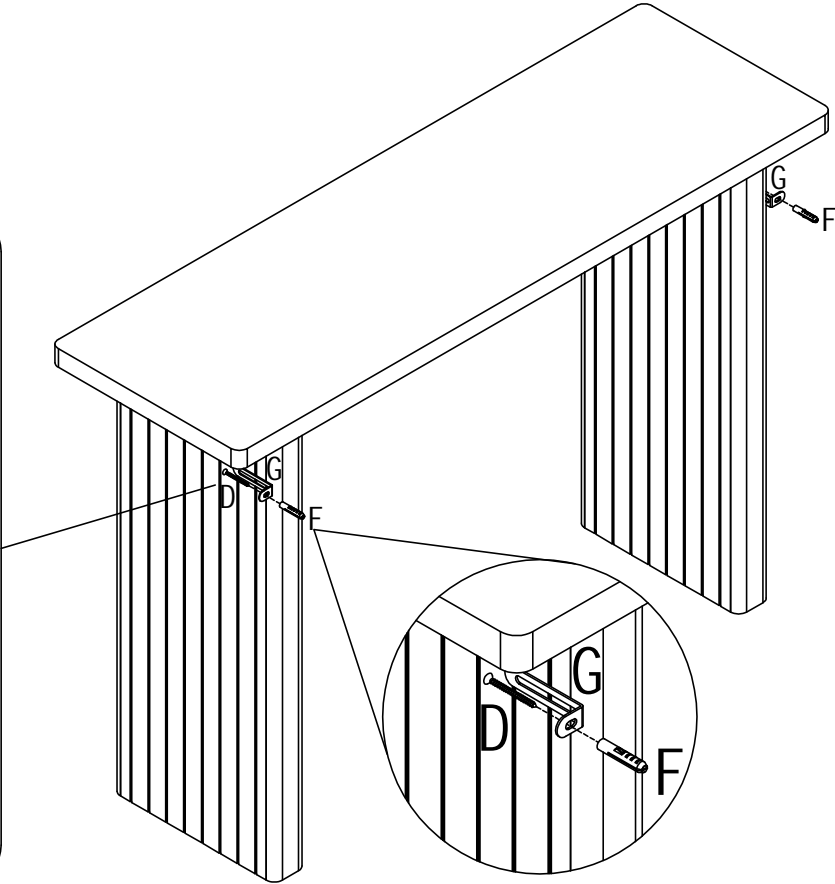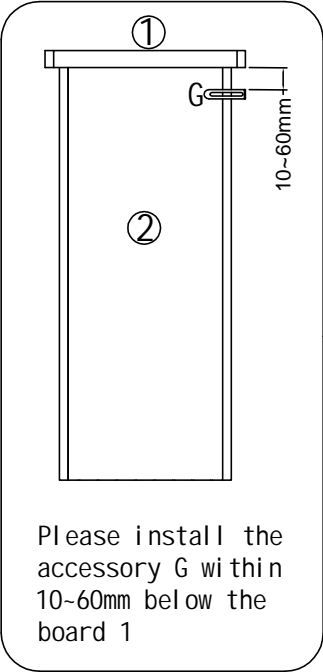

drill hole in wall

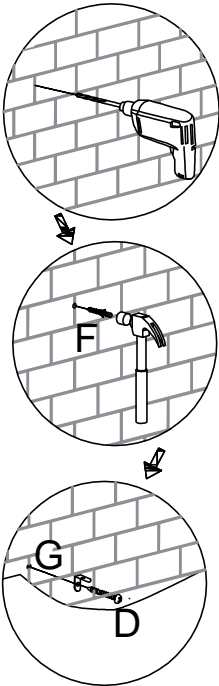

# Step 5

E	X 2
