


2422-3

ASSEMBLY INSTRUCTIONS

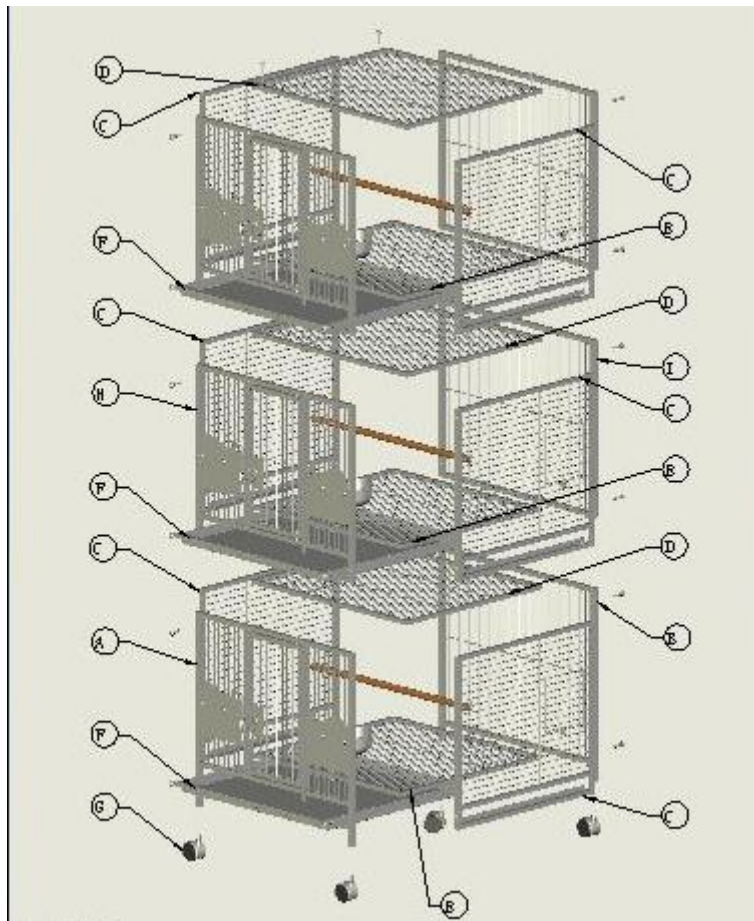

ESTIMATED ASSEMBLY TIME: 40 MINUTES

NEED: SCREWDRIVER

1. Screw Part G onto bottom of Part A(front wire) ,B(back wire);
2. Attach Part A, B,C(side wire) together with screws to form a BODY;
3. Assembly Part D(top wire) onto the BODY to get the first cage;
4. Repeat 2nd 3rd steps to get the second cage and the third cage;
5. Attach the second cage onto the first cage with screws tightly;
6. Attach the third cage onto the second cage with screws tightly;
7. Slide Part E(grate) and Part F (base) into bottom of each cage from front;
8. Put the feeder dish into the dish door for each cage;
9. Put the perches inside the cage from left to right;

Congratulations ! You have got it !