



SOFT, DRY CLOTH




CHEMICAL




HEAT



KEEP DRY



HANDLE WITH CARE



DO NOT USE KNIFE


ASSEMBLY INSTRUCTION

DESCRIPTION : 2 DOORS SHOE CABINET


HARDWARE

A	B	C	D	E	F	G	H	I	J	K	L	M	N
													
WOOD DOWEL 8 X 25 1X10	CB SCREW M3.5X16MM 1X44	CB SCREW M4X38MM 1X8	CSK CAP WOOD M6X50MM 1X4	NAIL 5/8 1X30	L KEY 1X1	METAL SHELF SUPPORT 1X8	H1 H2 H3 MINIFIX 5654+5546 6 SETS	H3 MINIFIX CAP 1X3	HANDLE 5022 (METAL) 1X3	HANDLE SCREW M4X19MM 1X2	HANDLE SCREW M4X35MM 1X1	HINGES 5/8 4 SETS	38100 PVC LEG 1X4
													N1 N2 DRAWER SLIDE 12" 1 SET


PART LIST

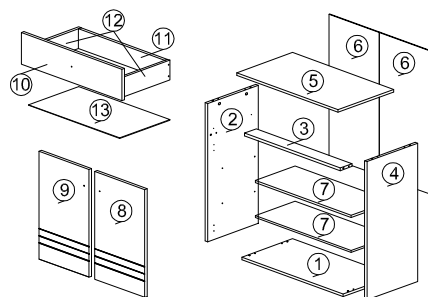


STEP 1

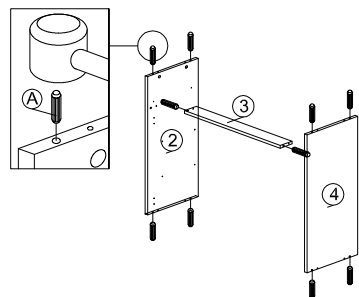


STEP 2

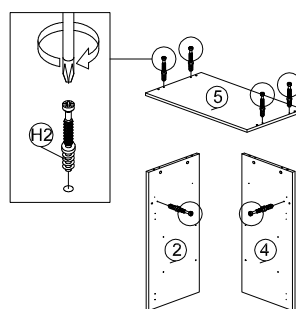


STEP 3

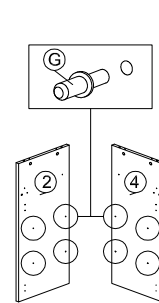


STEP 4

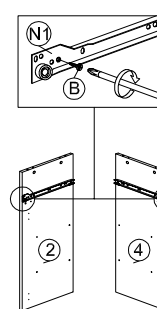


STEP 5

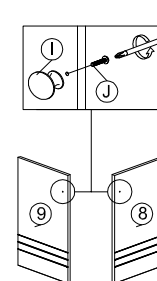


STEP 6

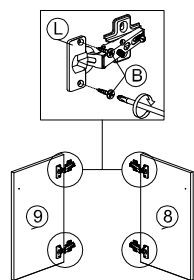


STEP 7

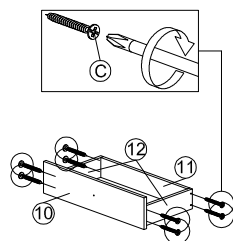


STEP 8

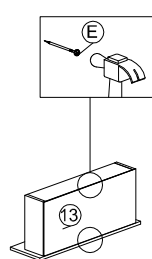


STEP 9

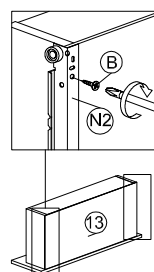


STEP 10

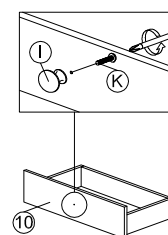


STEP 11

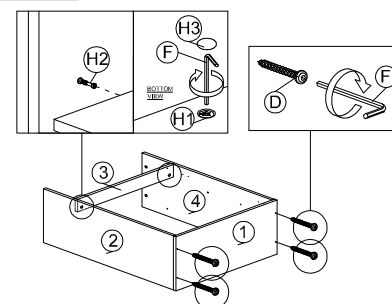


STEP 12

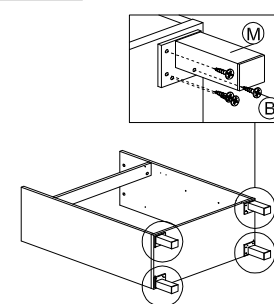


STEP 13

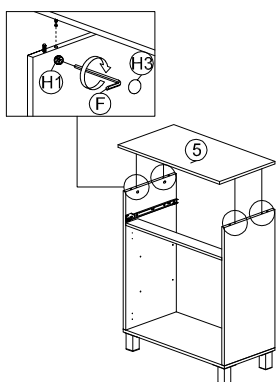


STEP 14

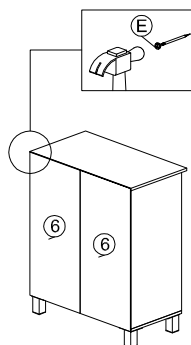

STEP 15

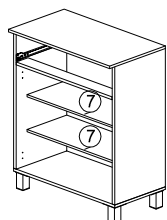

STEP 16

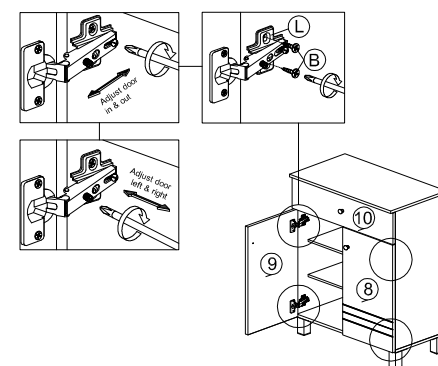

COMPLETED

