


Instructions for Assembly


LNG881

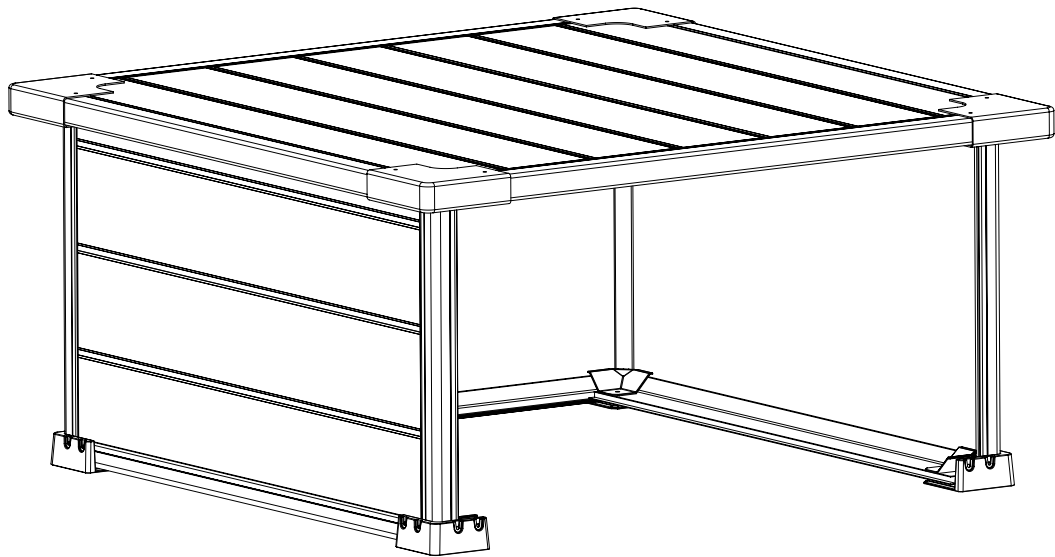

WARNING

Please read the instruction manual carefully before assembly.
Please assembly strictly in accordance with the instruction.
Please double-check to ensure that all parts of the package contents intact.
To avoid injury, work gloves are recommended during assembly.


Level the ground surface

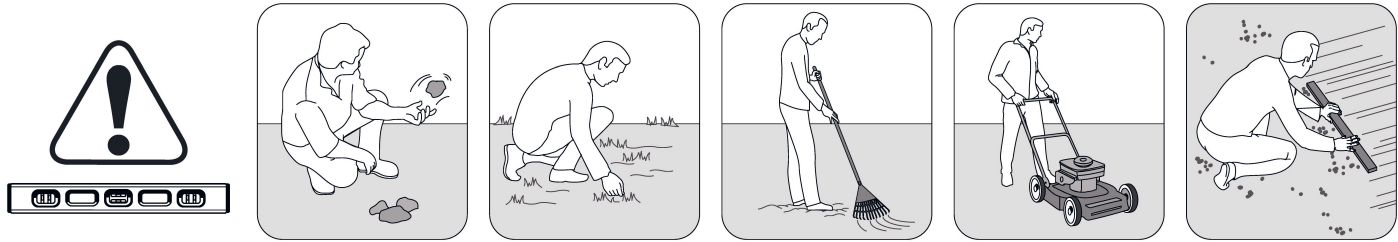

BEFORE STARTING ASSEMBLY

Read the care and safety guidelines at the end of this manual.
Check to ensure that there are no missing or damaged parts before starting or arranging assembly.
Remove all parts from the package(s) and spread them out on a clean work surface.
Review all assembly instructions.
Assemble all the parts according to the directions in this manual.
Do not skip any steps.

REQUIRED TOOLS(Tools Not Included)

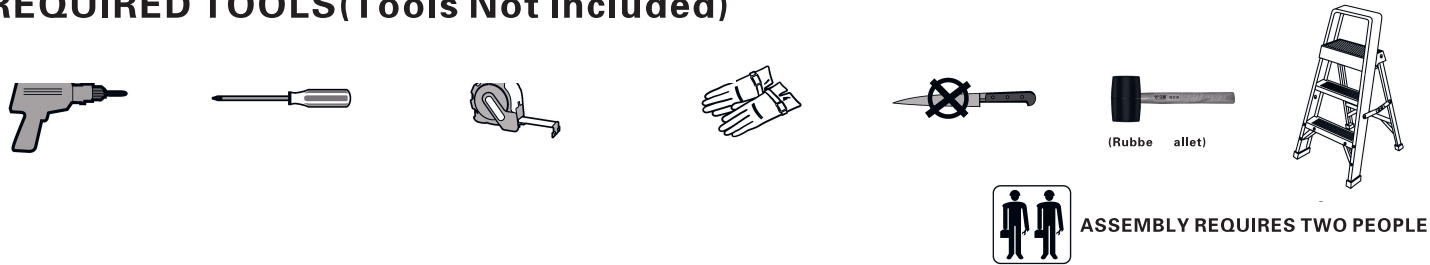

PARTS LIST

NO.	PART	Qty
P1		1
P2		1
P3		1
P4		2
P5		1
P6		1
J1		4
J2		4

NO.	PART	Qty
L1		1
L2		2
L3		4
L4		2
L5		2
D1		43+ 7
D3		14+1
SG		2
W1		4



- Use spatula (part" SG") for easier insertion of panel into profile
- Please ensure the panels are all installed on position before screwing

FLOOR ASSEMBLY




● Use spatula (part "SG") for easier insertion of panel into profile

Note: The crease line of the floor must be underneath

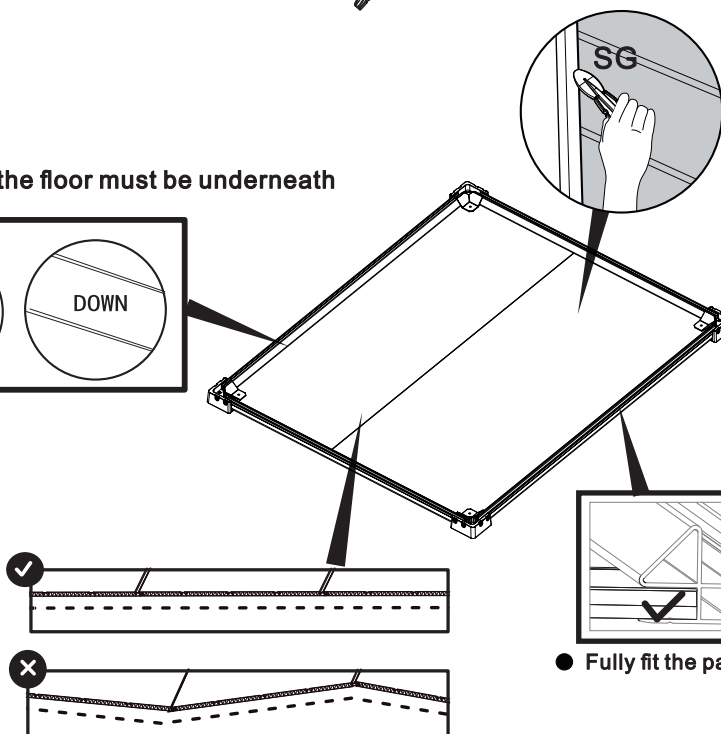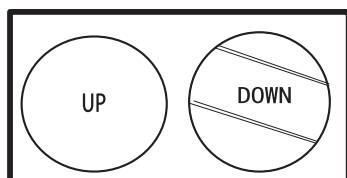


● Fully fit the panel inside the profile

Step 1

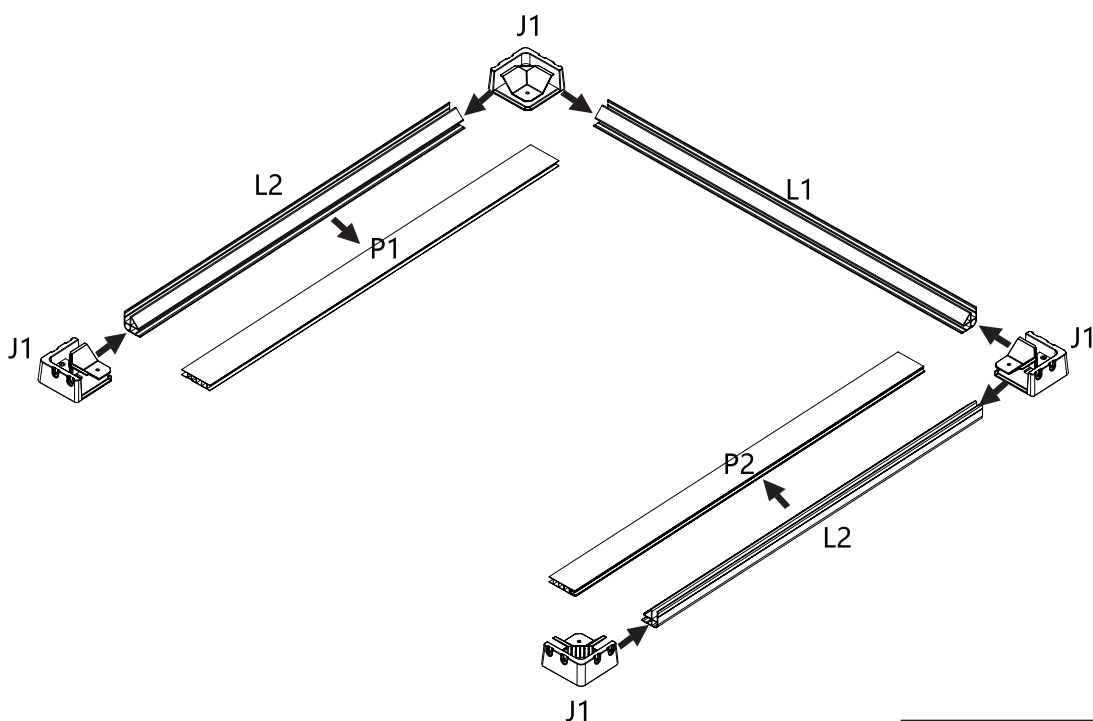


First connect L2P1 and L2P2.
Then connect the 4J1 to them.
Finally combine with L1

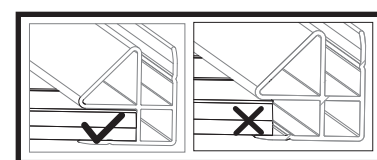


● Fully fit the panel inside the profile

Step 2

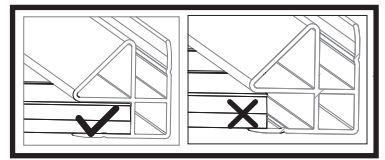

● Fully fit the panel inside the profile


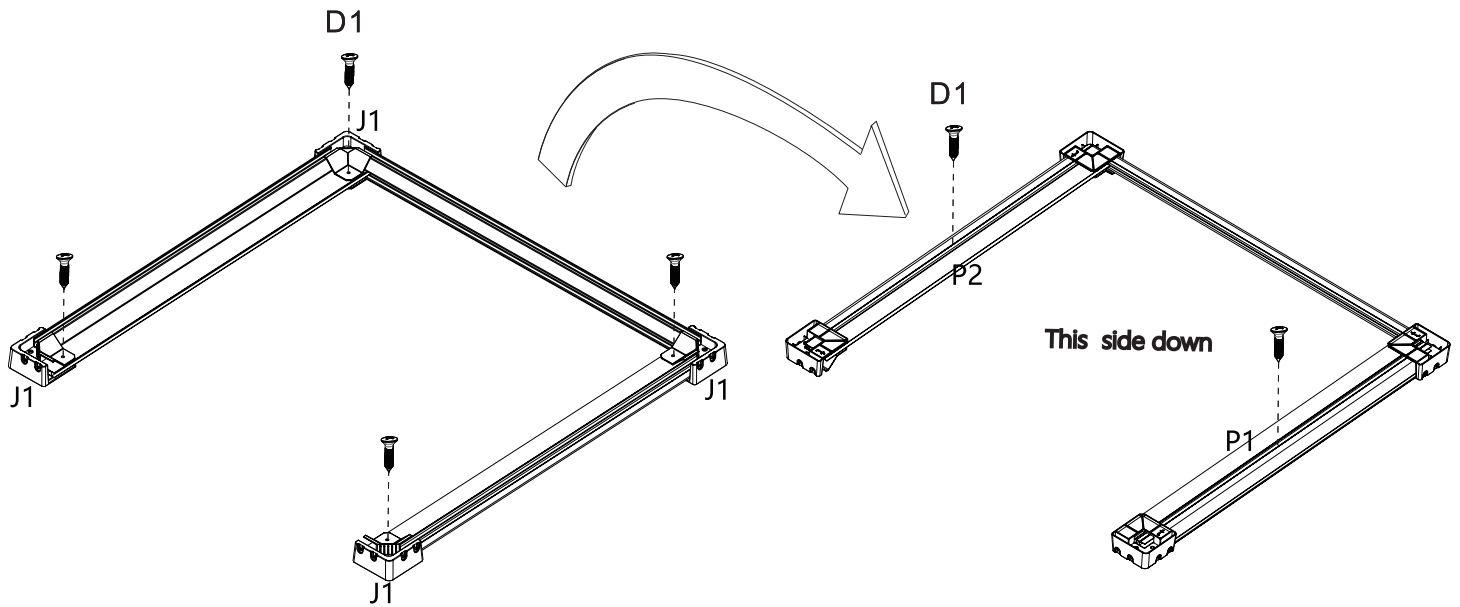


Secure with D1 screws on top of J1,
then flip the product over and fasten directly onto P1 & P2 using D1 screws.




D1X6 PC

Step 3

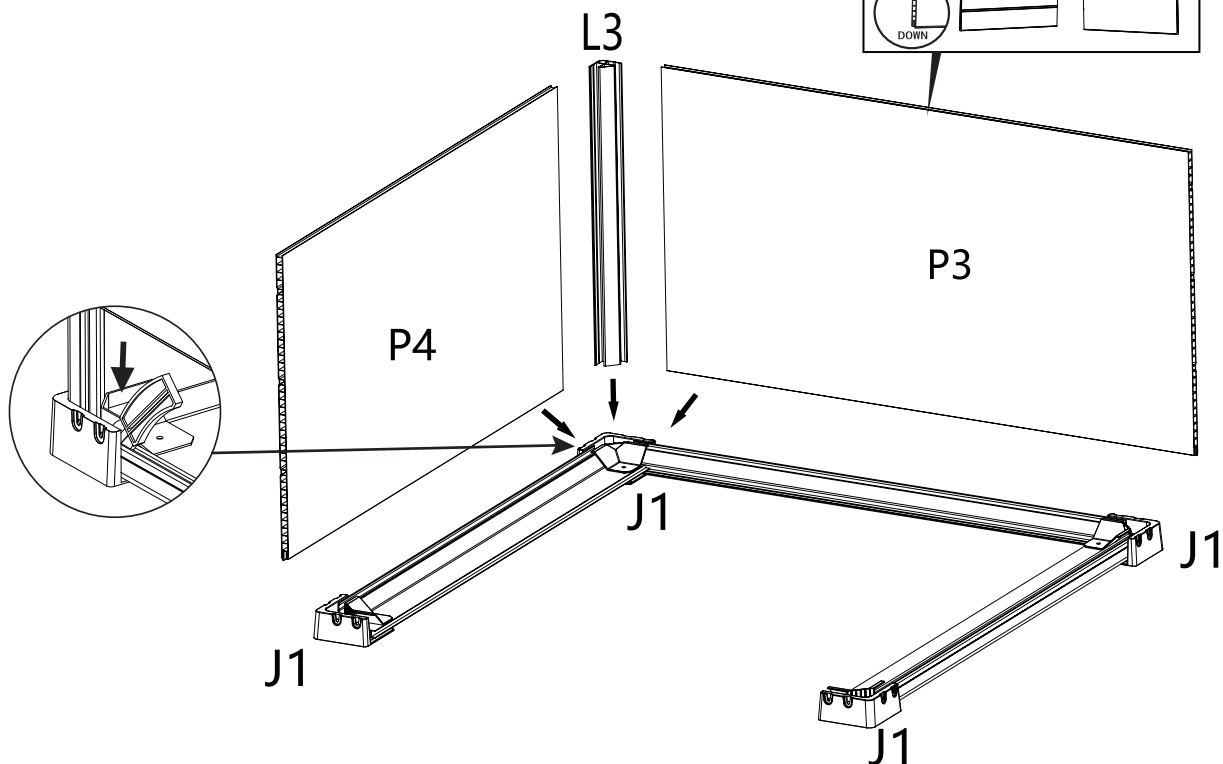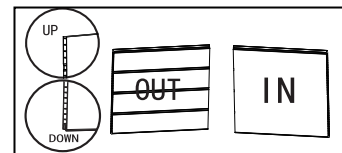


Insert L3 first, then insert P4 and P3 in order.
Remember to use the assembly aid tool.

Step 4

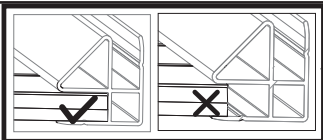


- Fully fit the panel inside the profile

SG

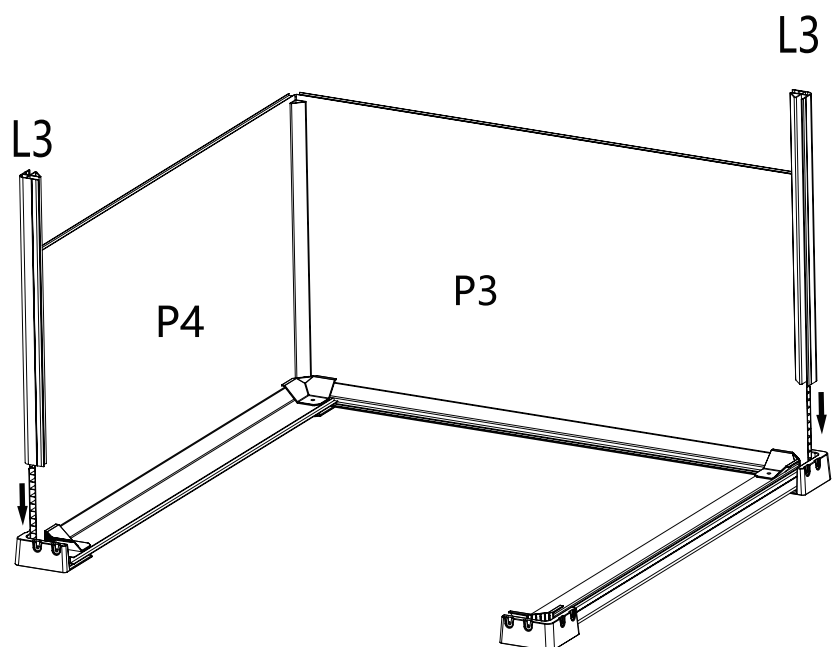


Insert another two L3 parts.

Step 5

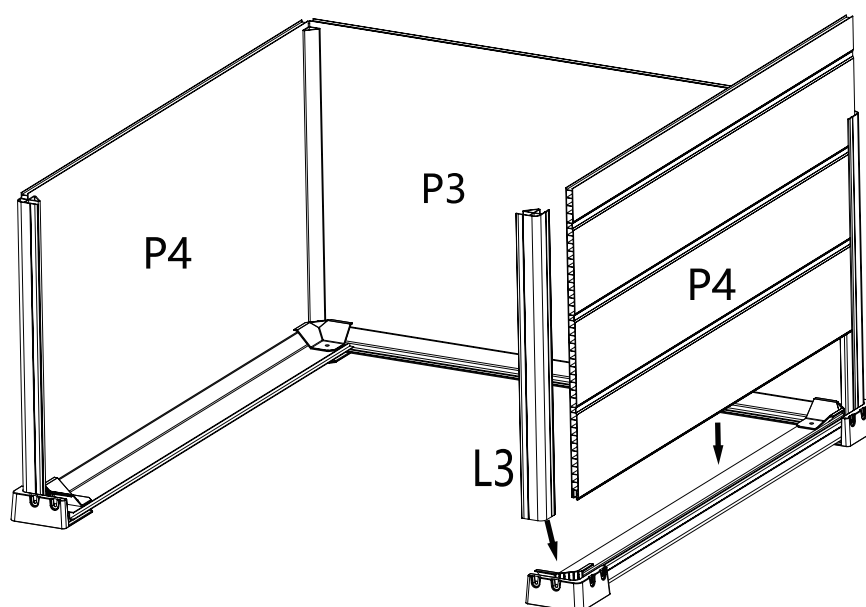


Insert L3 and P4.


Step 6

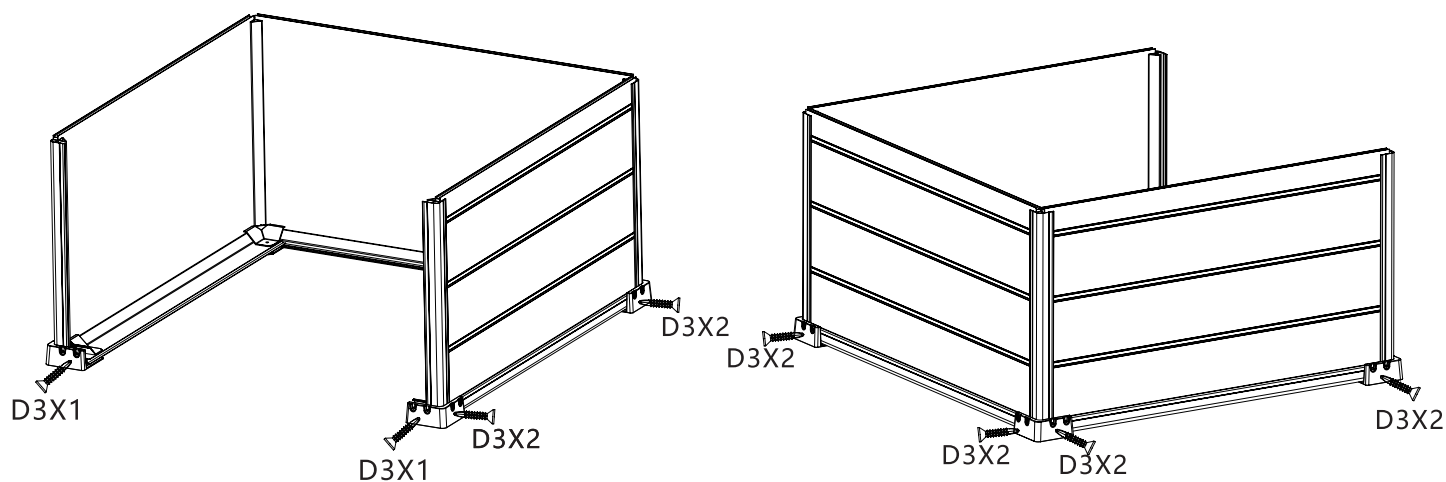

Secure with D3 screws.

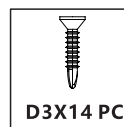


Step 7

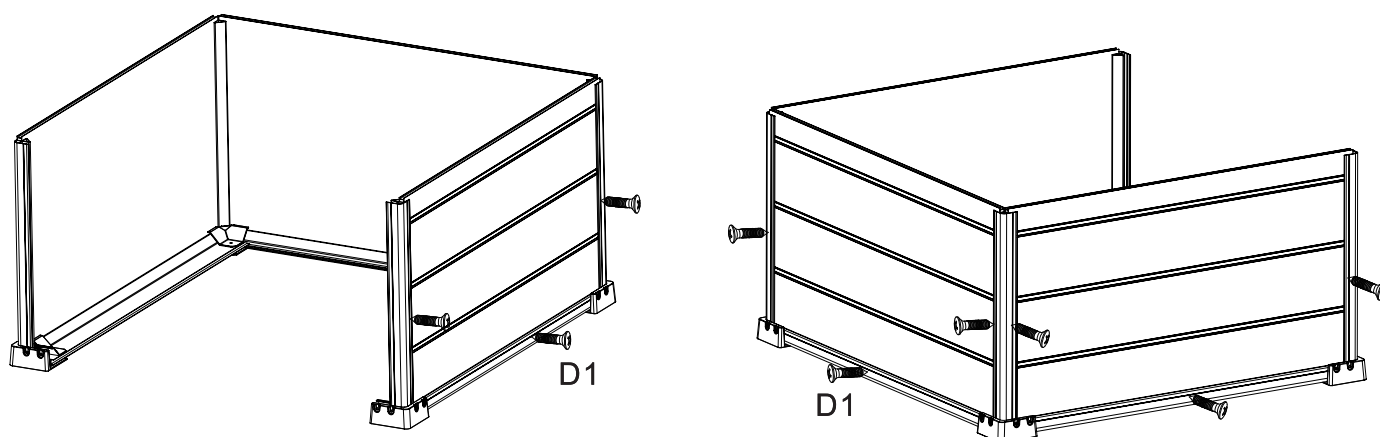

Secure with D1 screws, and try to fix them as centered as possible.




Step 8

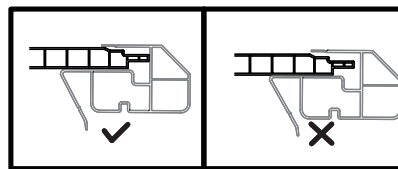


Fully fit the panel inside the profile




SG

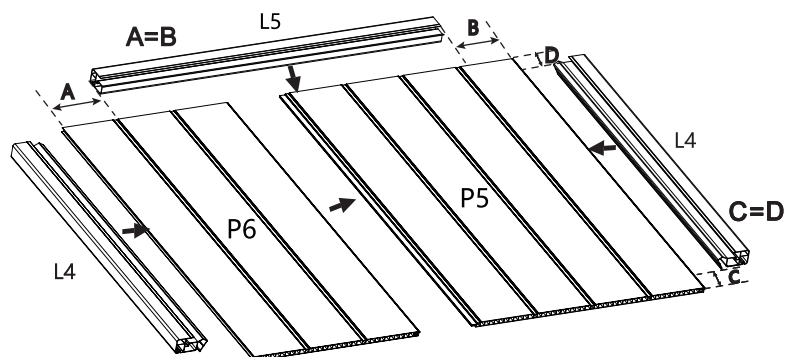

First join part P5 and part P6.
Next connect them to L4 and L5.
Ensure L4 and L5 are positioned centrally,
with a 2.8-inch clearance to the side edge.

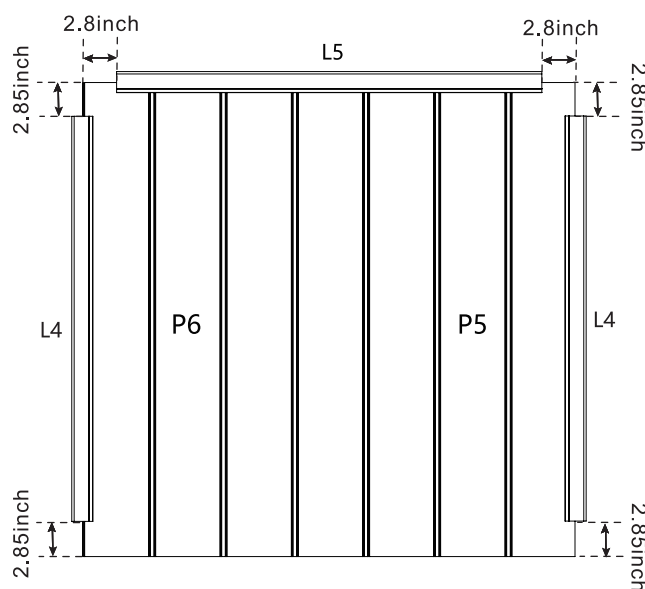

Step 9

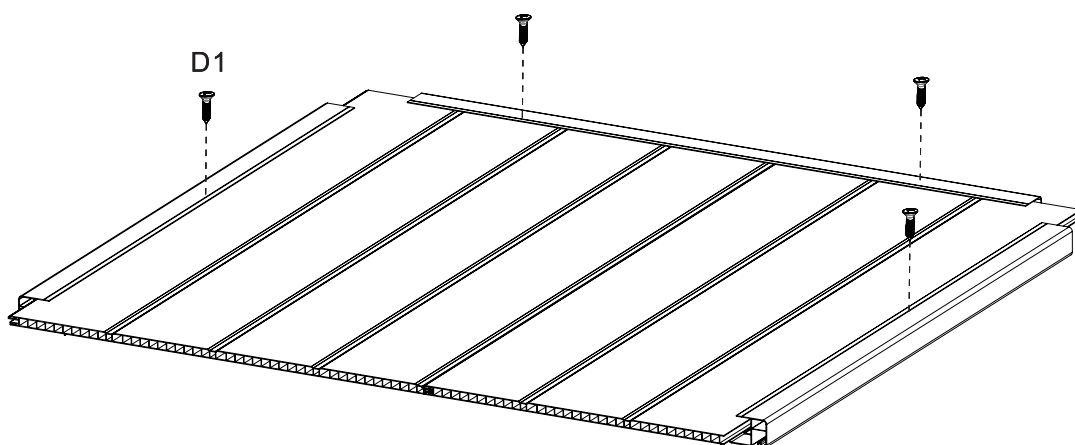


Secure using D1 screws.





D1X4 PC

Step 10

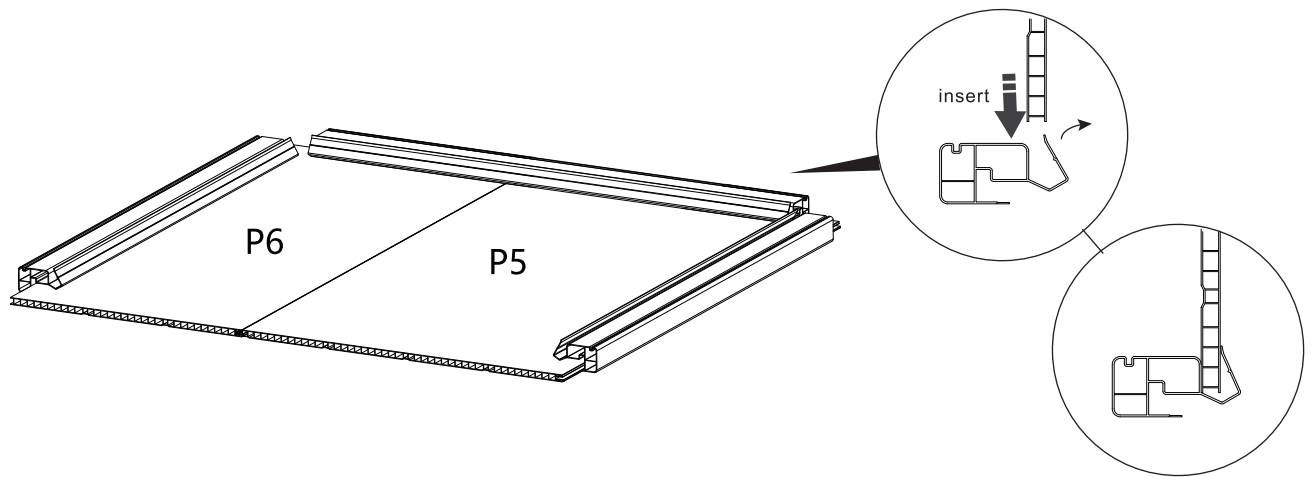



Flip over the P5 and P6 panels.
For easier assembly, firmly push outward on the slot where the next panel will be inserted to allow smooth installation.

Step 11

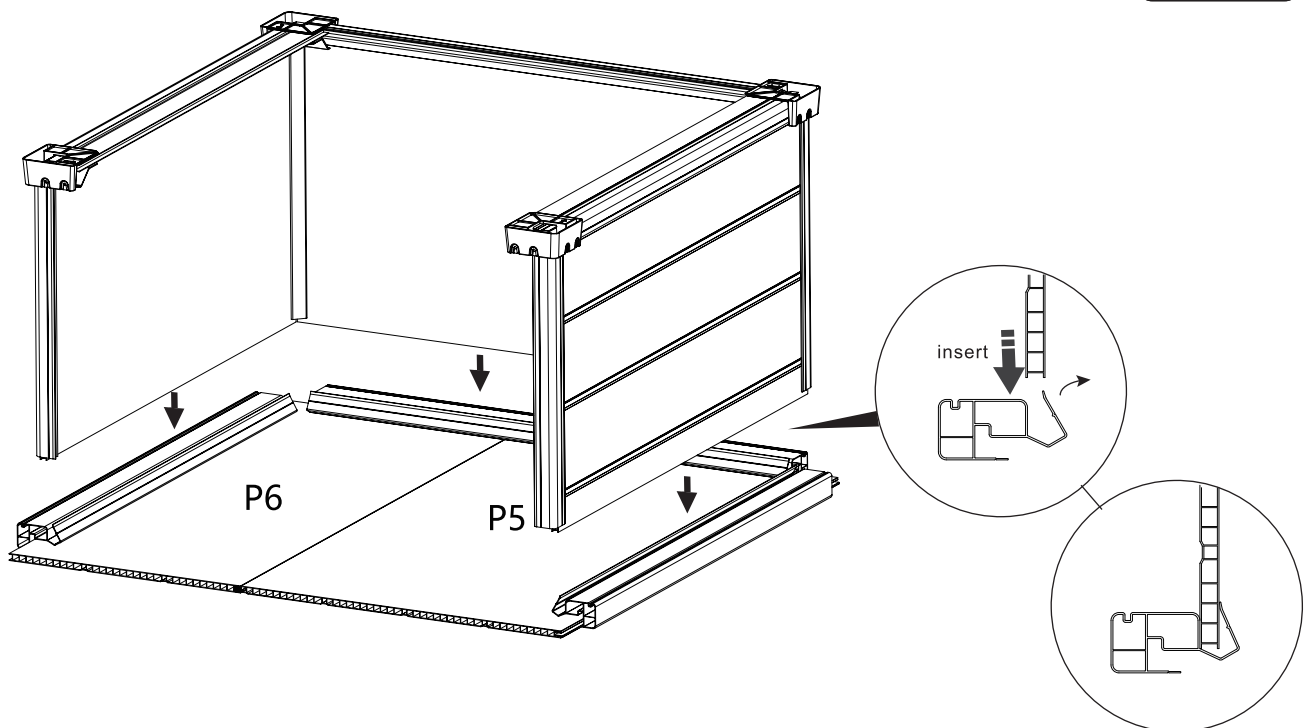
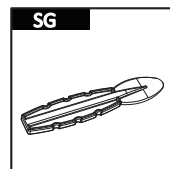


Insert the pre-assembled components into place.
If you still have difficulty assembling, repeat Step 10 and pry the connecting edges outward for easier insertion.

Step 12

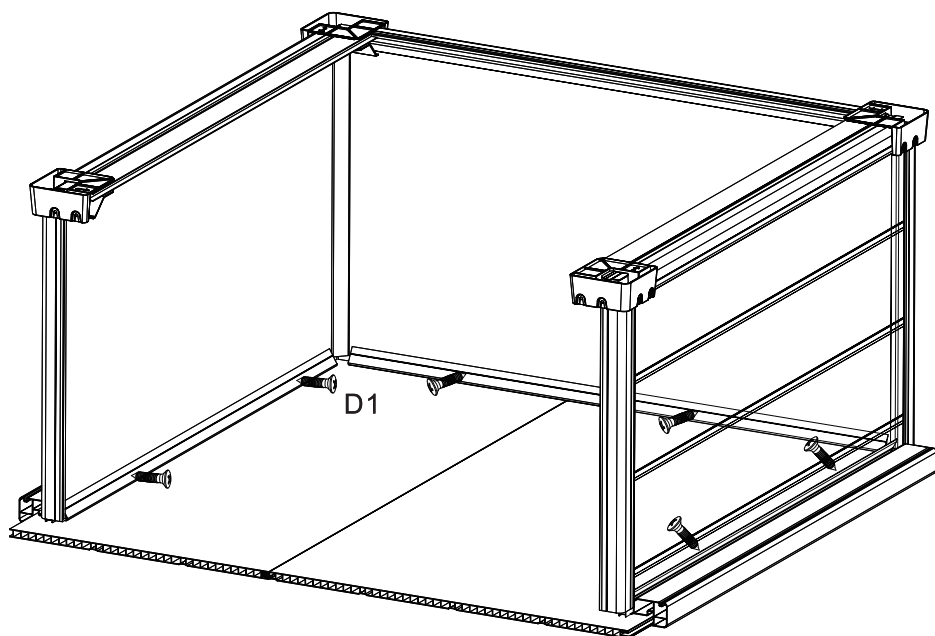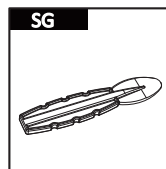


Step 13

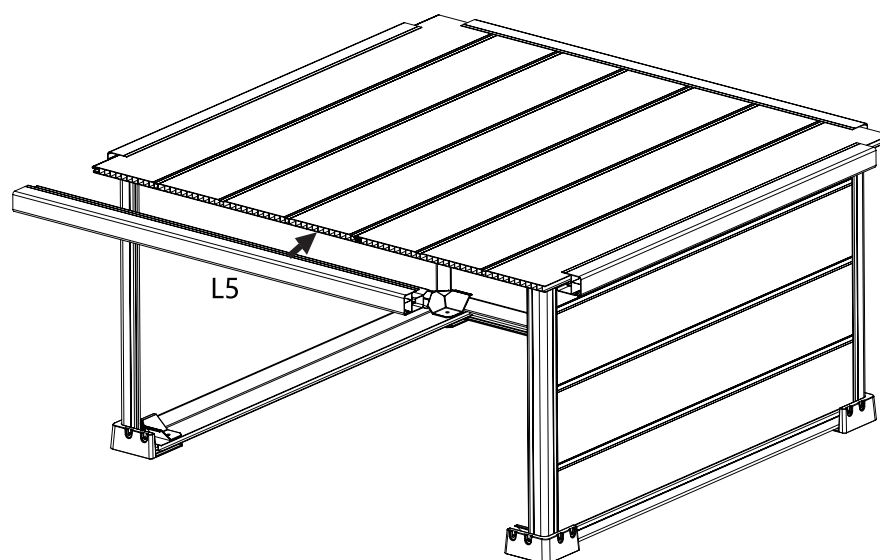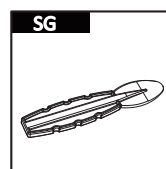


Connect L5 to the product, paying attention to the spacing between components.

Step 14

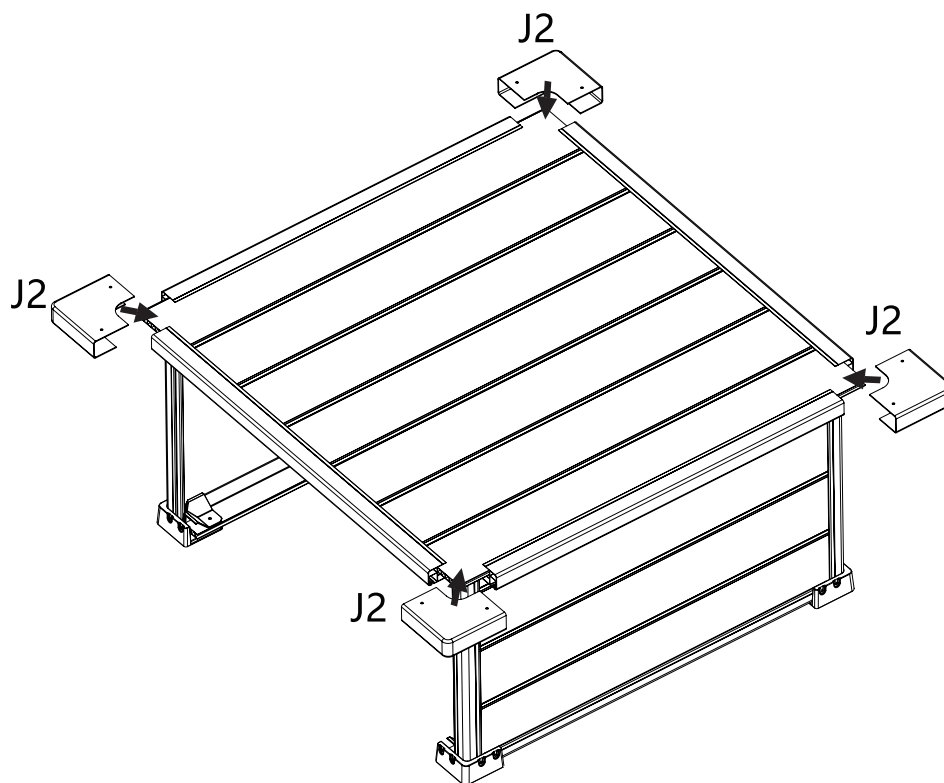

Place the 4 J2 at the four corners.

Step 15

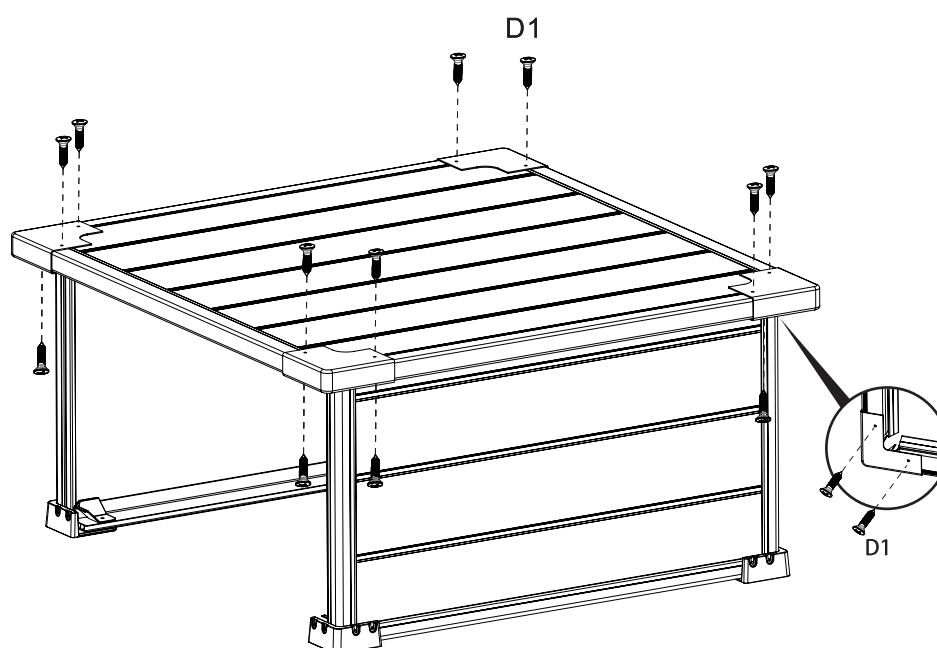


Secure with D1 screws.



D1X16 PC

Step 16

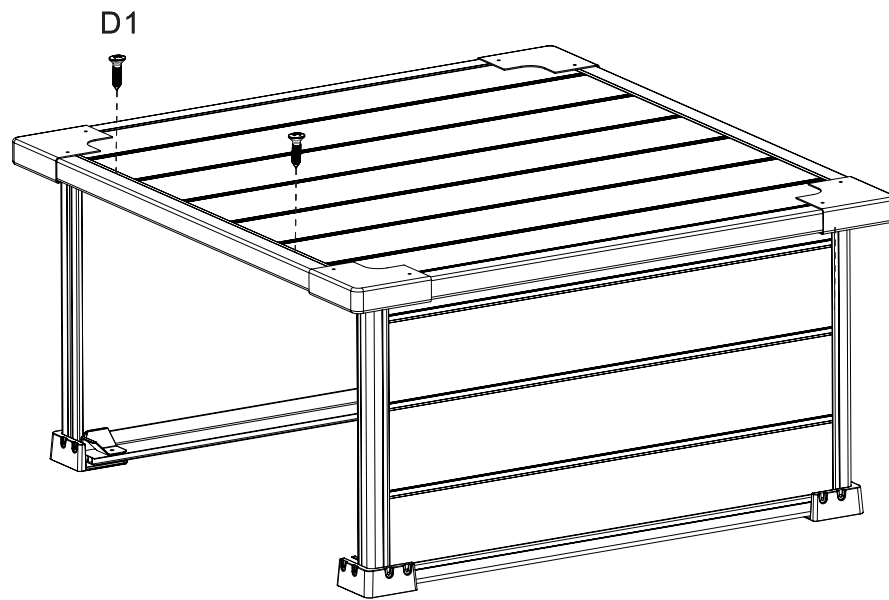


Secure the panel with D1 screws.



D1X2 PC

Step 17

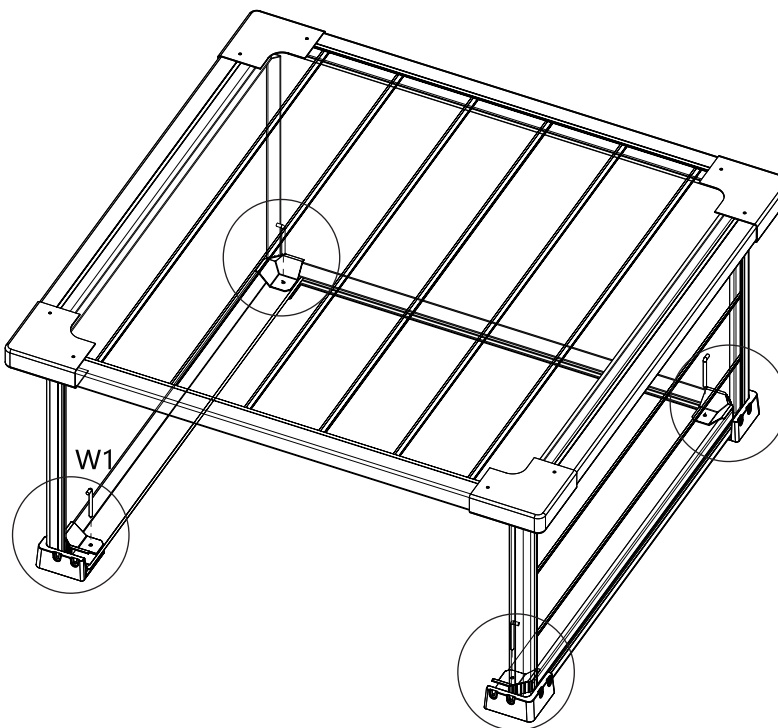

To prevent the product from moving, you can replace the D1 screws with W1 ground stakes to secure it firmly.



W1X4 PC