














Installation & Assembly






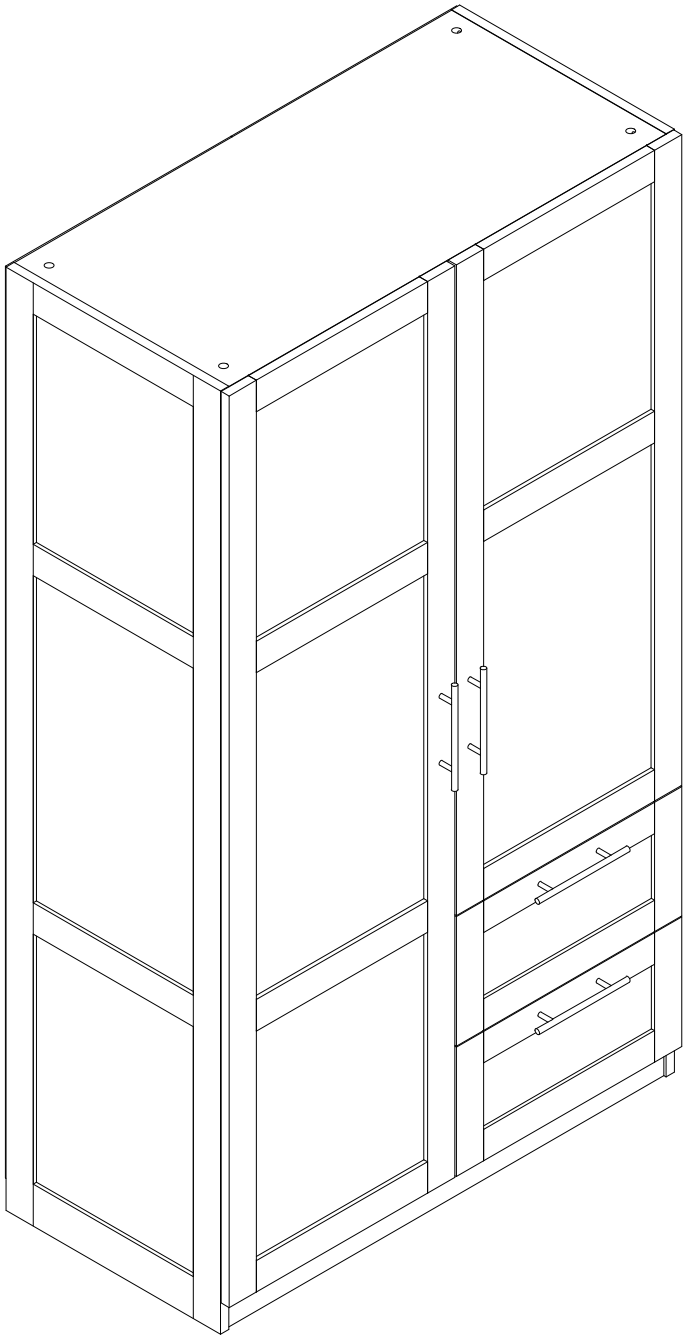
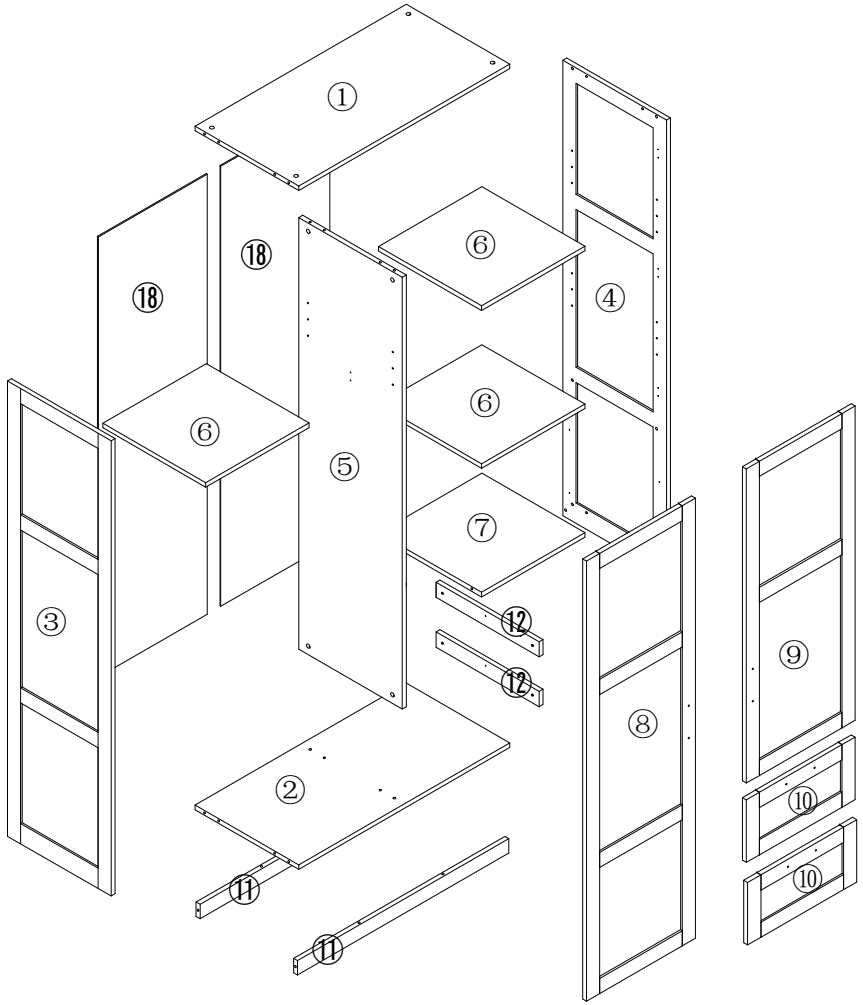
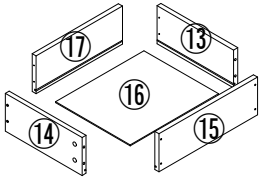
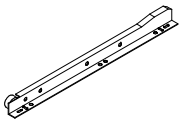




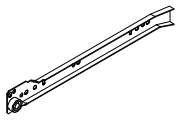
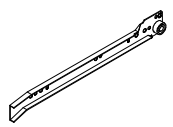







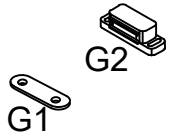

X2


U 350mm  2PCS	K  32PCS	L Ø3.5*14mm  64PCS	M Ø3.5*25mm  4PCS	N Ø3.5*35mm  8PCS	O  2PCS	P 466mm  1PCS	Q Ø6*25mm  8PCS	R 350mm  2PCS	S 350mm  2PCS	T 350mm  2PCS
A  32PCS	B  32PCS	C Ø8*40mm  12PCS	D  6PCS	E 128mm  4PCS	F Ø4*25mm  8PCS	G  2PCS	H  1PCS	I  40PCS	J  12PCS

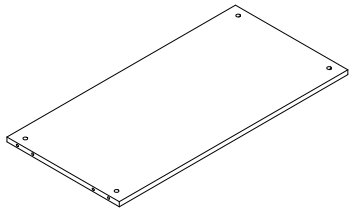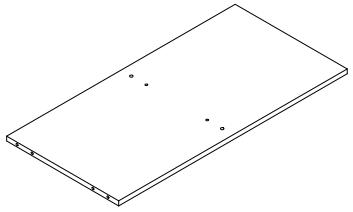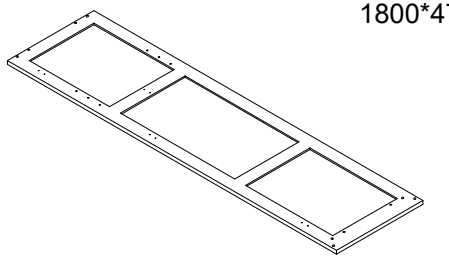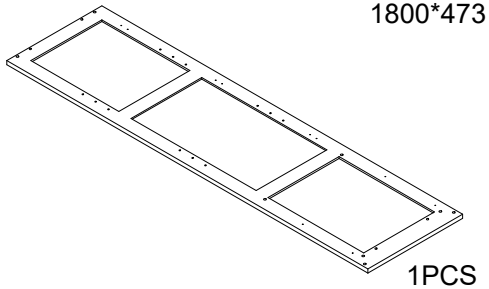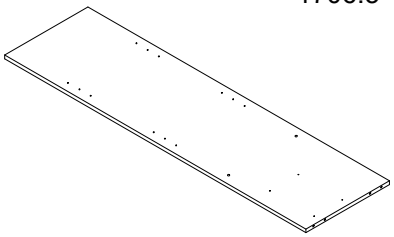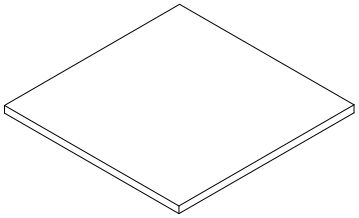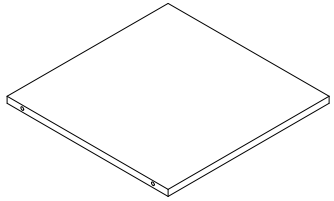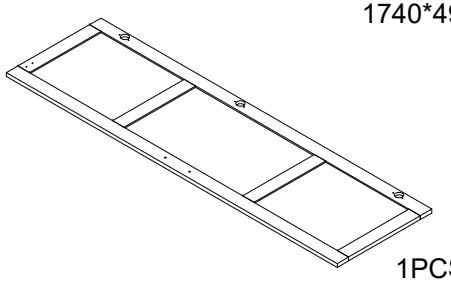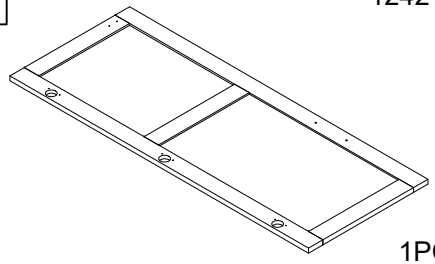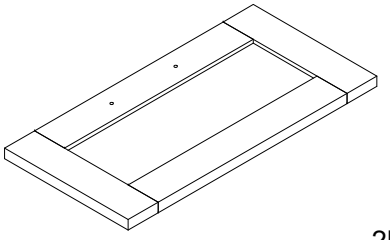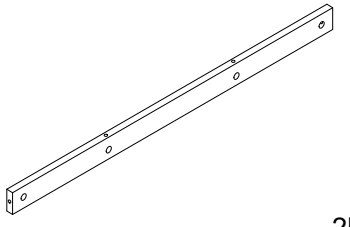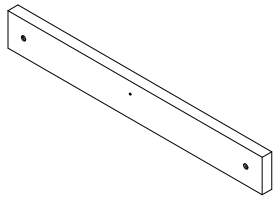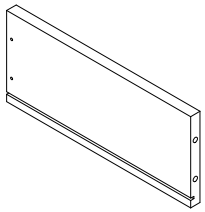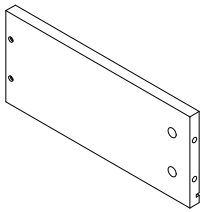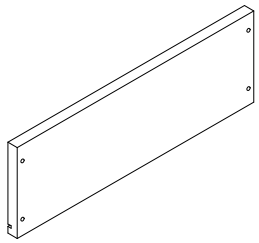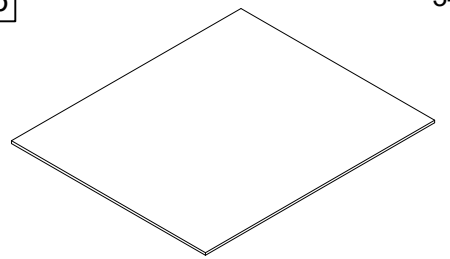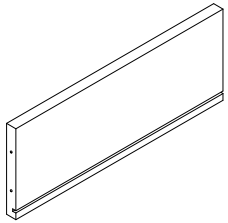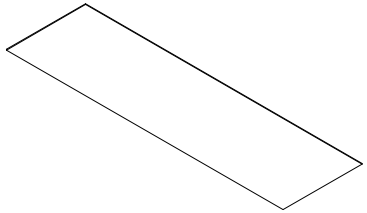1 964*473  1PCS	2 964*473  1PCS	3 1800*473  1PCS	4 1800*473  1PCS
5 1706.5*473  1PCS	6 472*470  3PCS	7 473*473  1PCS	8 1740*497  1PCS
9 1242*497  1PCS	10 247*497  2PCS	11 964*57  2PCS	12 471*60  2PCS
13 350*150  2PCS	14 350*150  2PCS	15 449*150  2PCS	16 341*404  2PCS
17 393*150  2PCS	18 1740*497  2PCS		


Hardware installation demonstration

NOTE:Please make sure "A"hardware tightened and can't be pulled out!


I

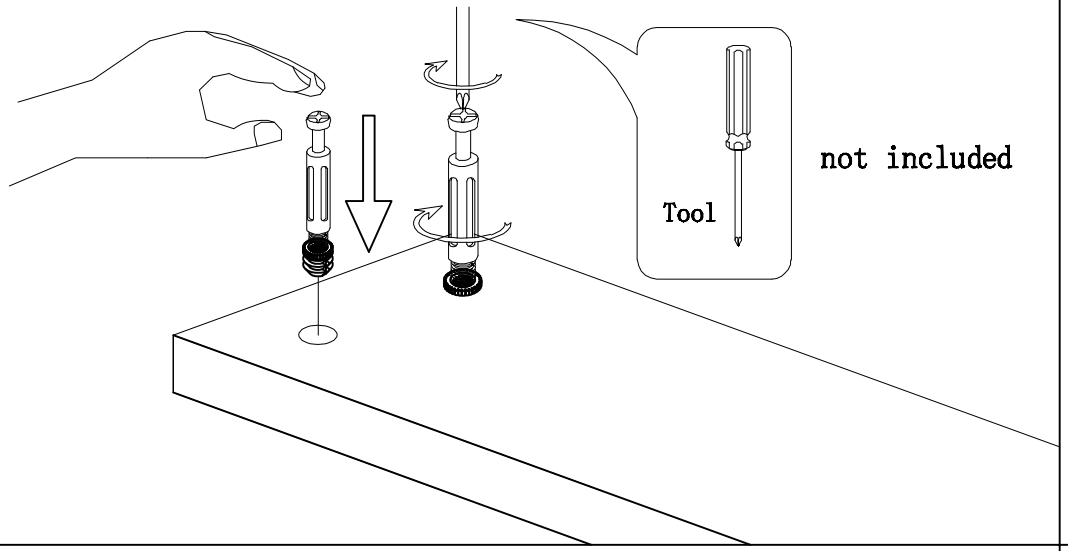


II

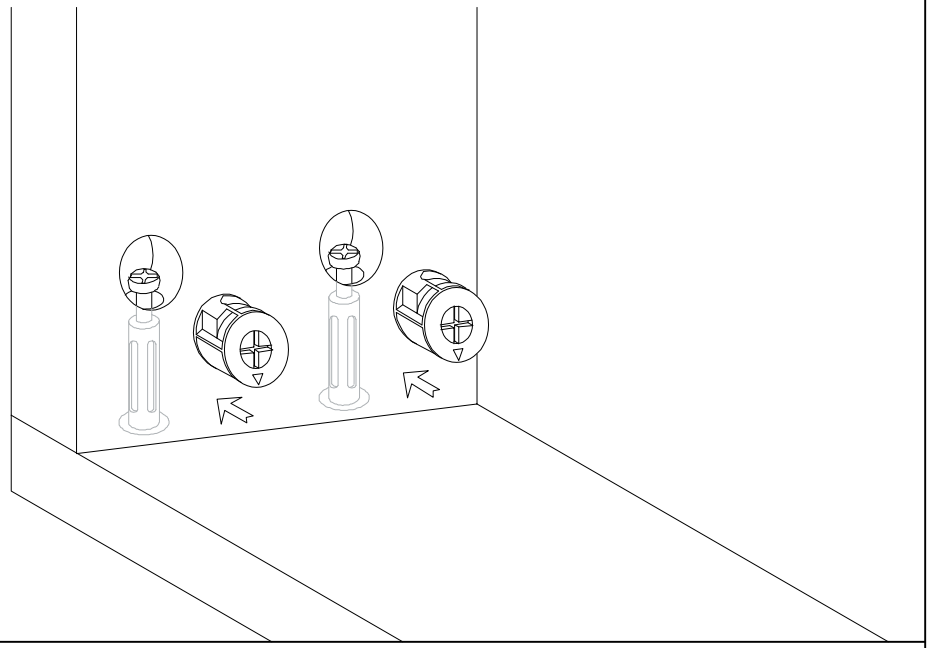

III

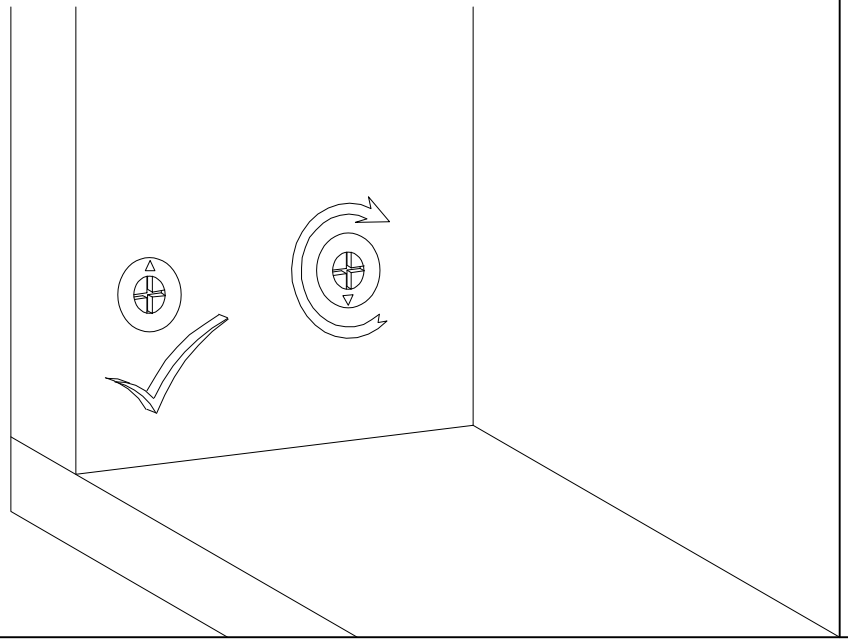


1

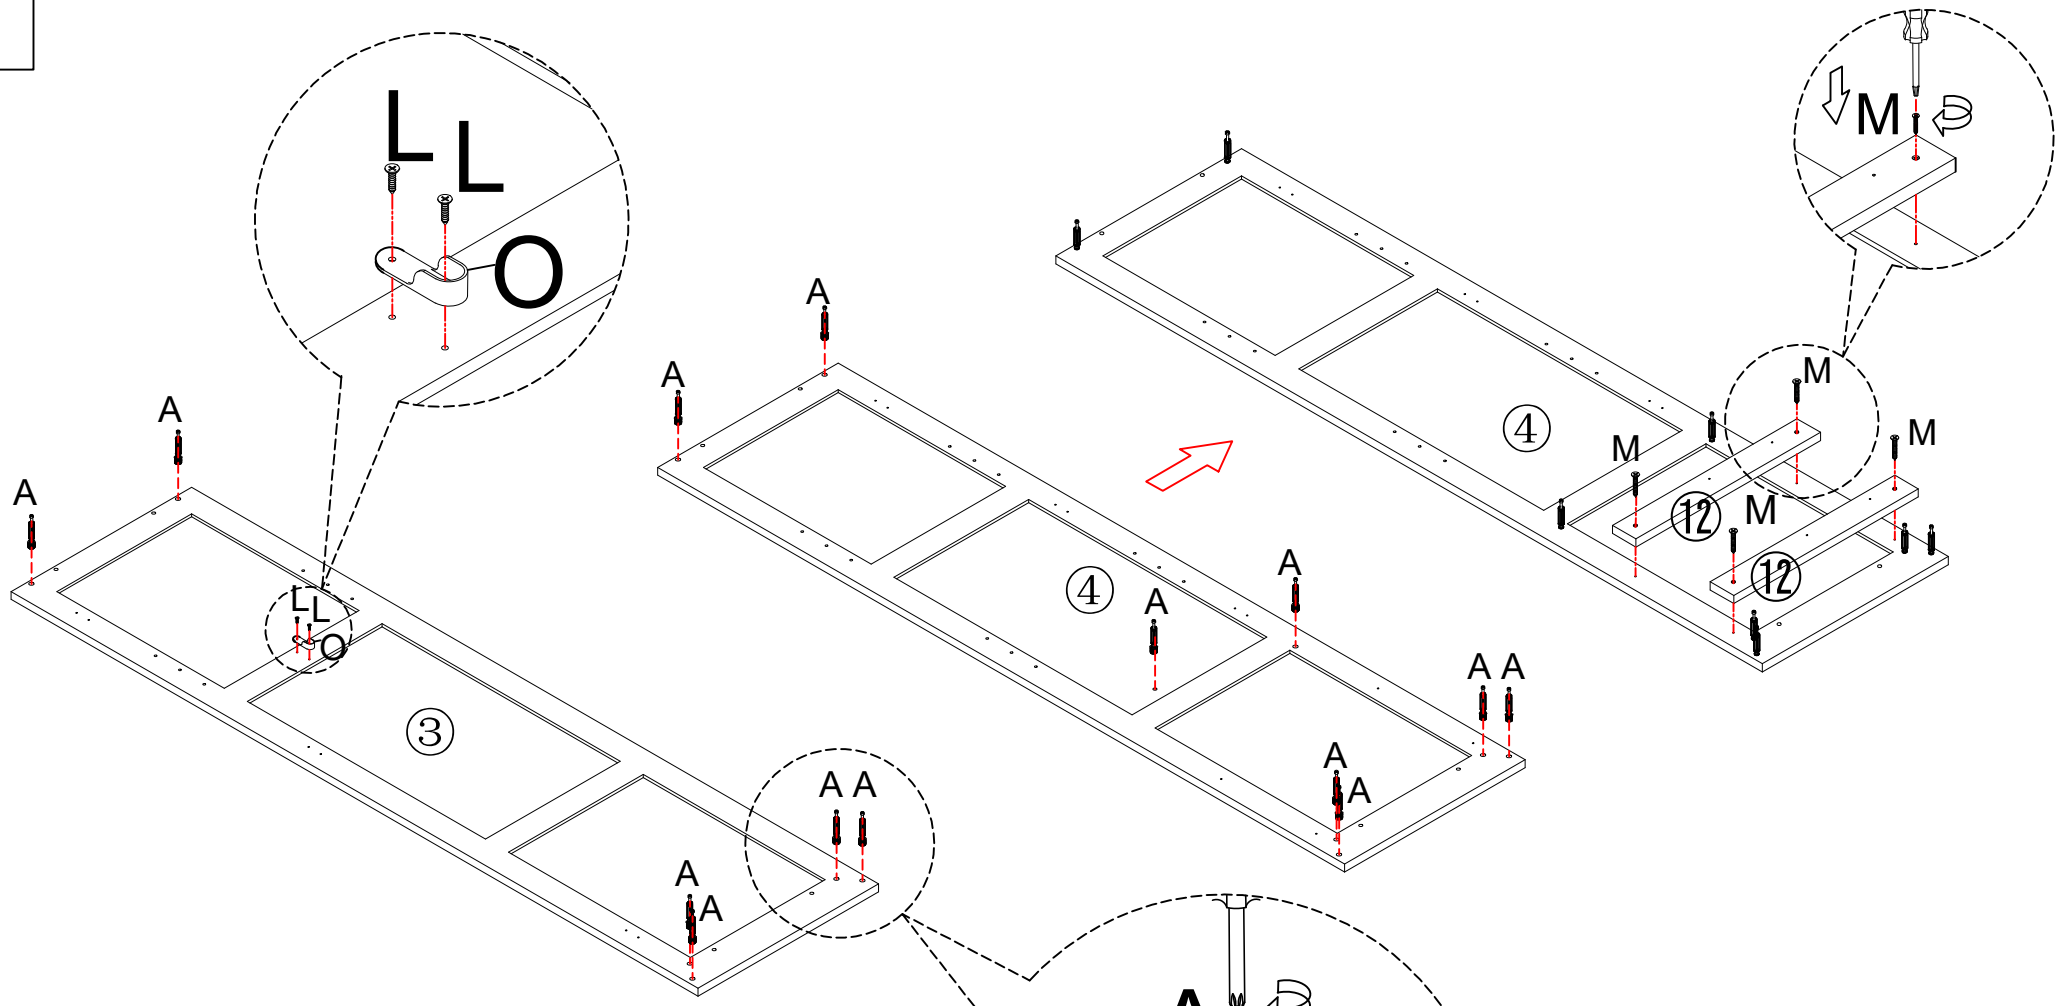




	A*14
	L*2
	M*4
	O*1

Put A on board ③④

2

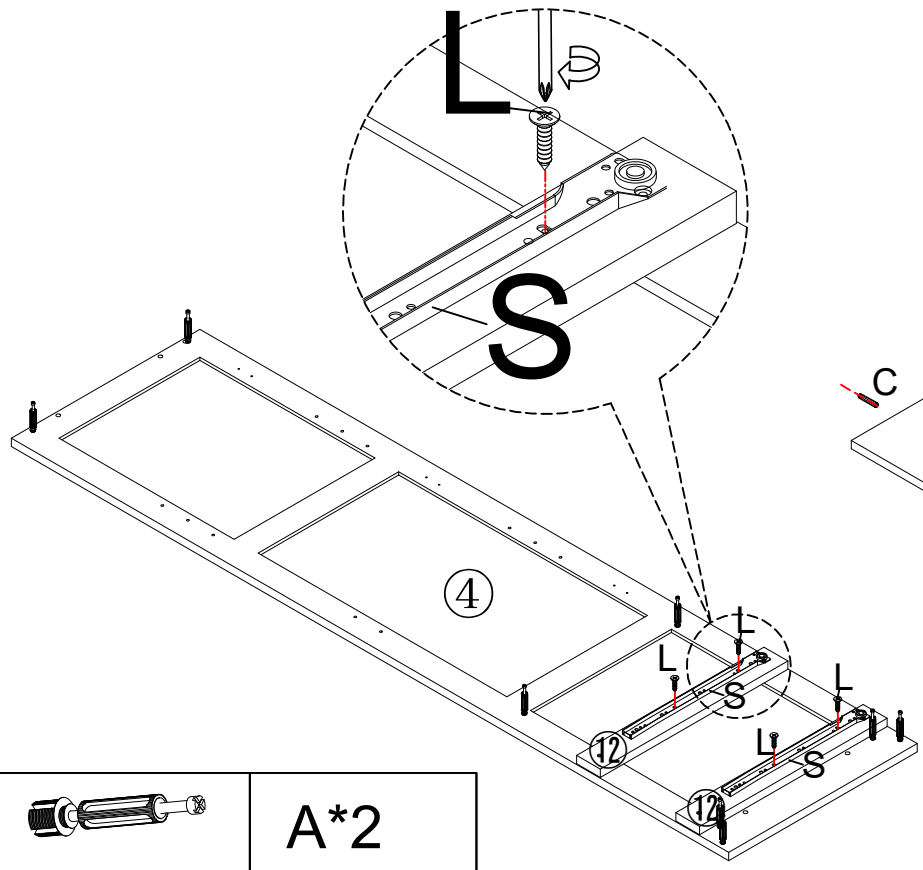

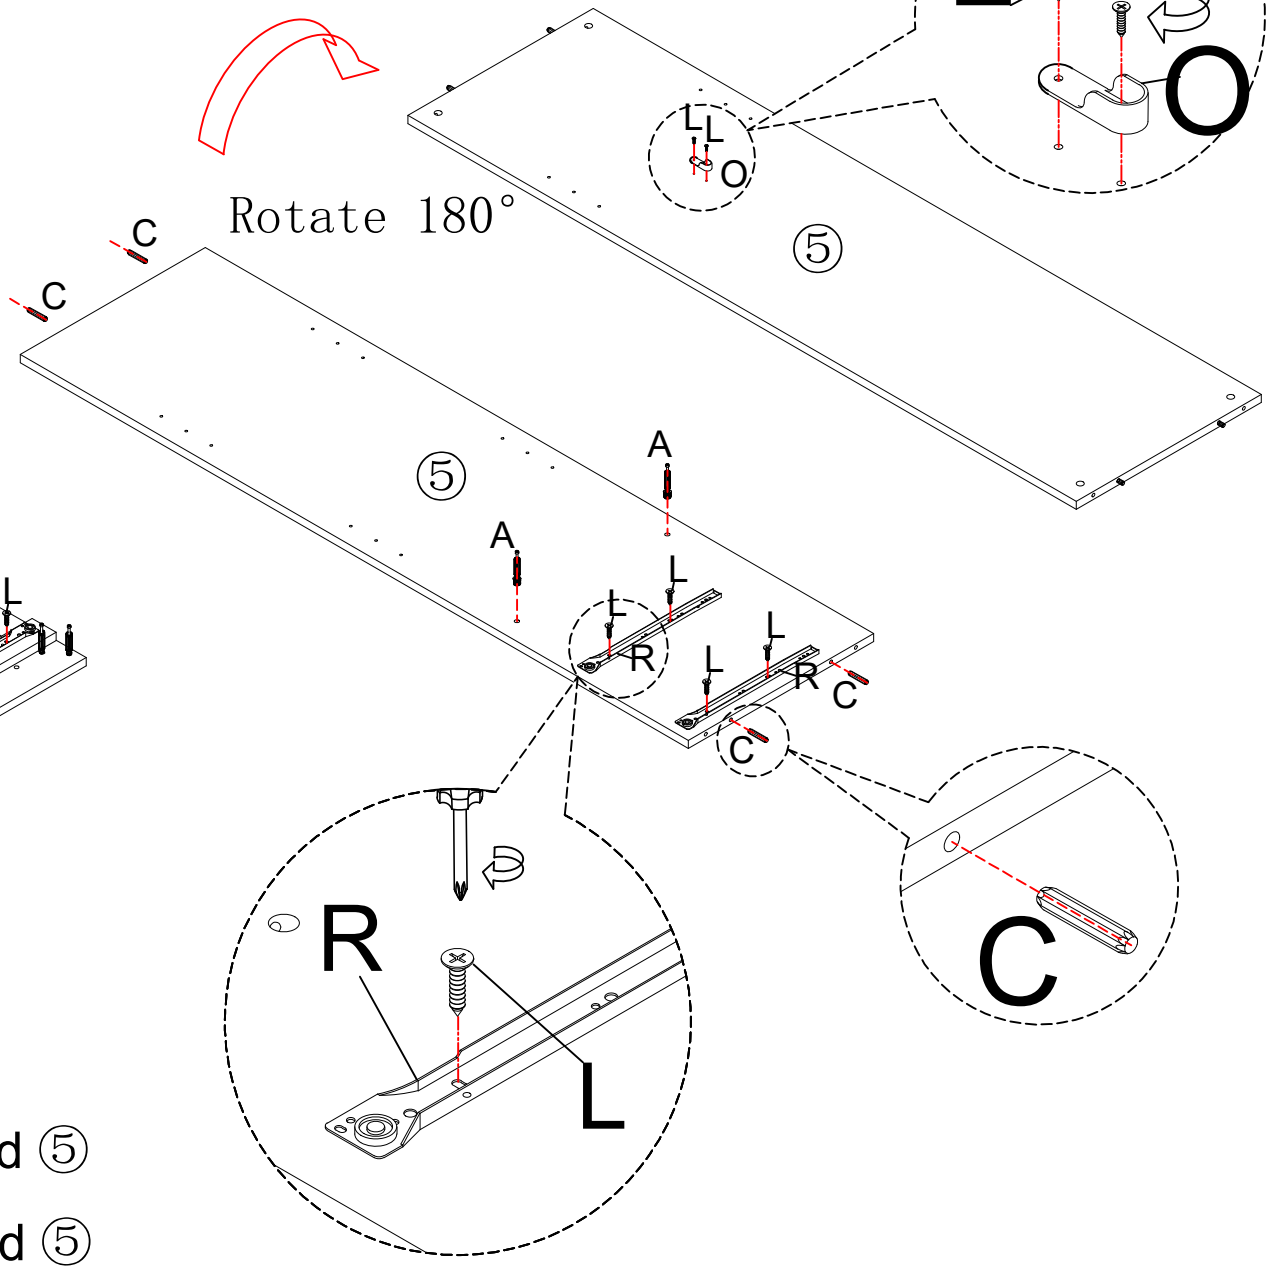


	A*2
	C*4
	L*10
	O*1
	R*2
	S*2

Put A on board ⑤

Put C on board ⑤


3

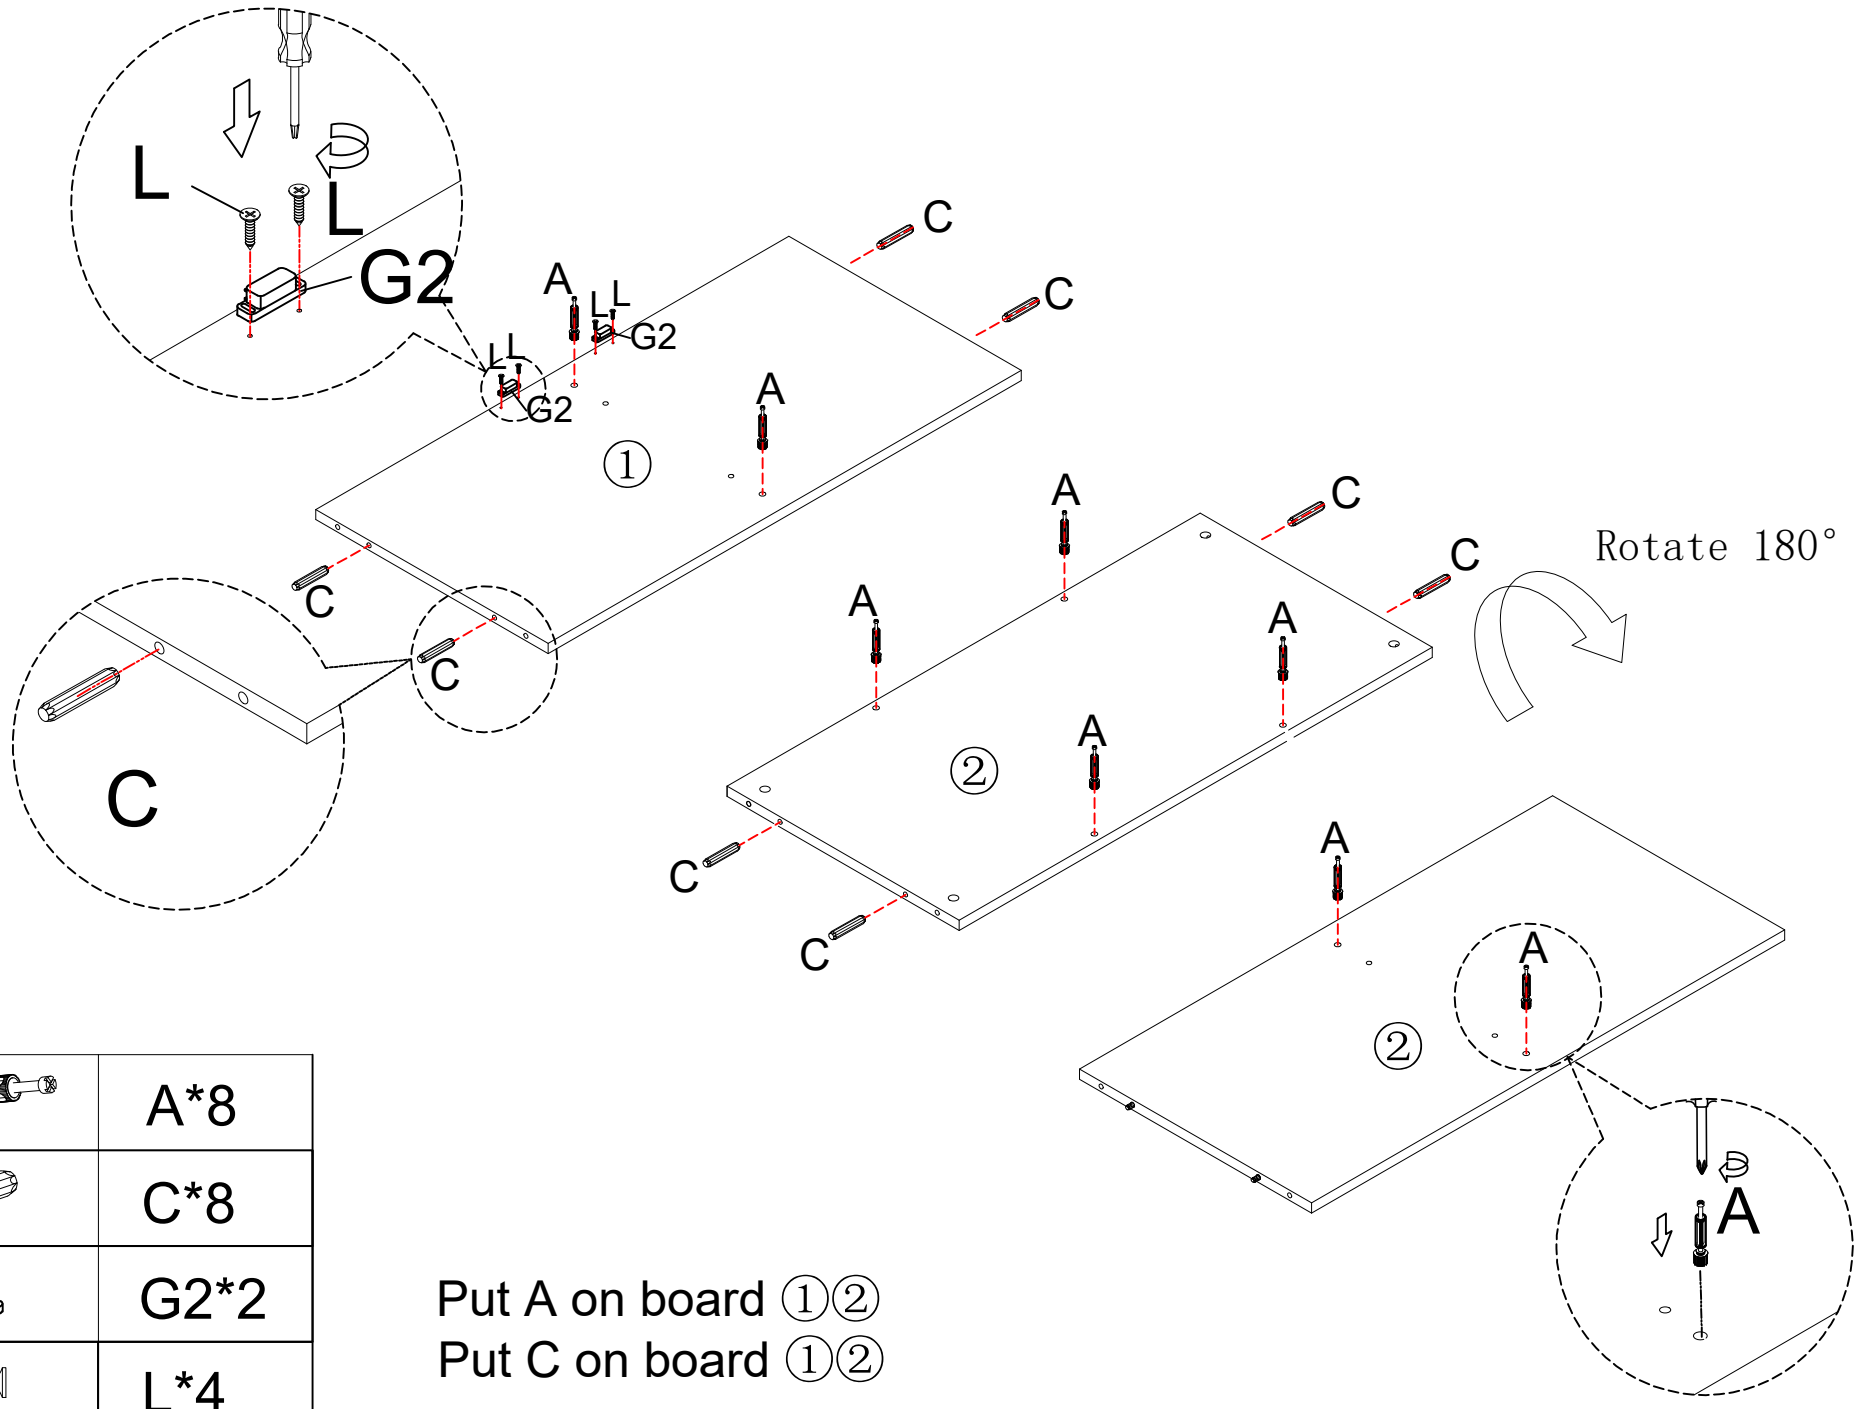

	A*8
	C*8
	G2*2
	L*4

Put A on board ①②
Put C on board ①②


4 Make sure the arrow on the screw align to the hole on the side

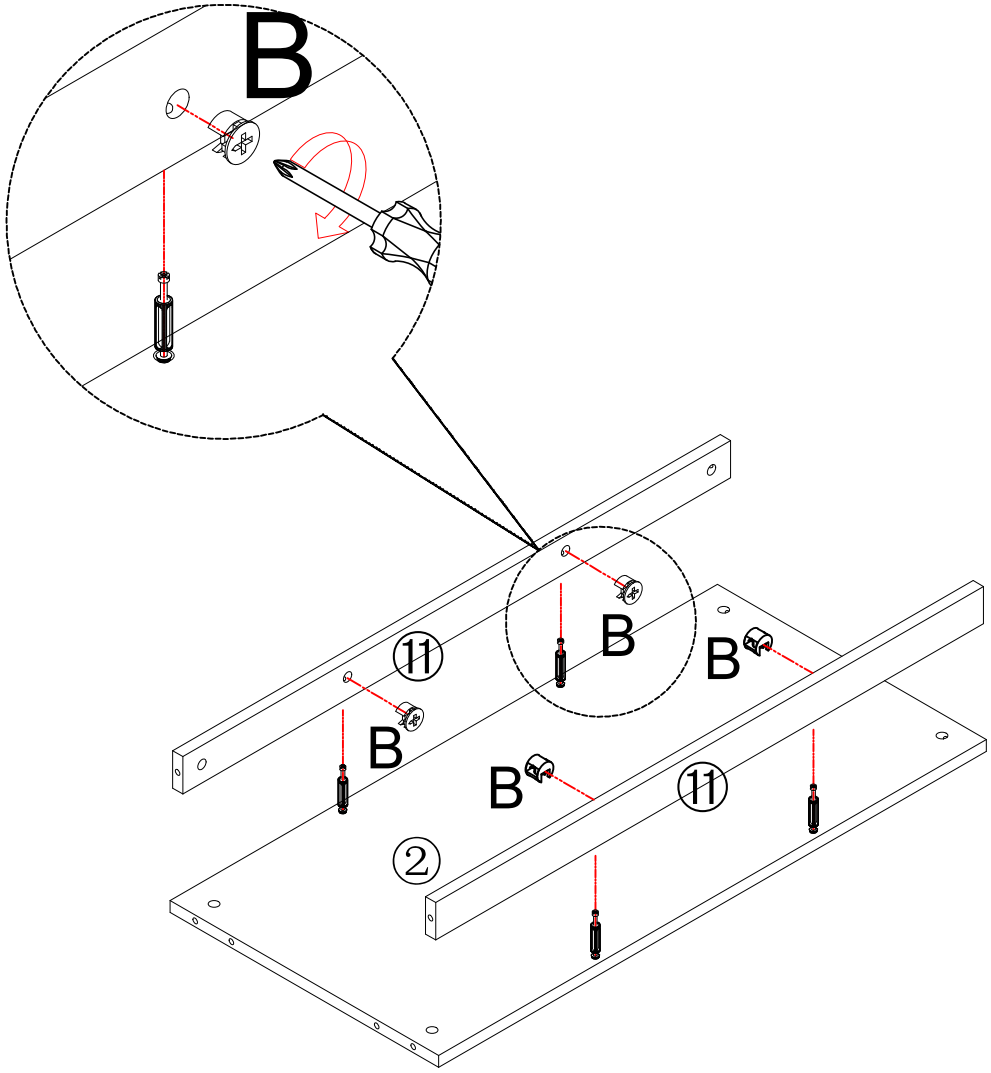

	B*4

Put B on board ⑪


5 Make sure the arrow on the screw align to the hole on the side

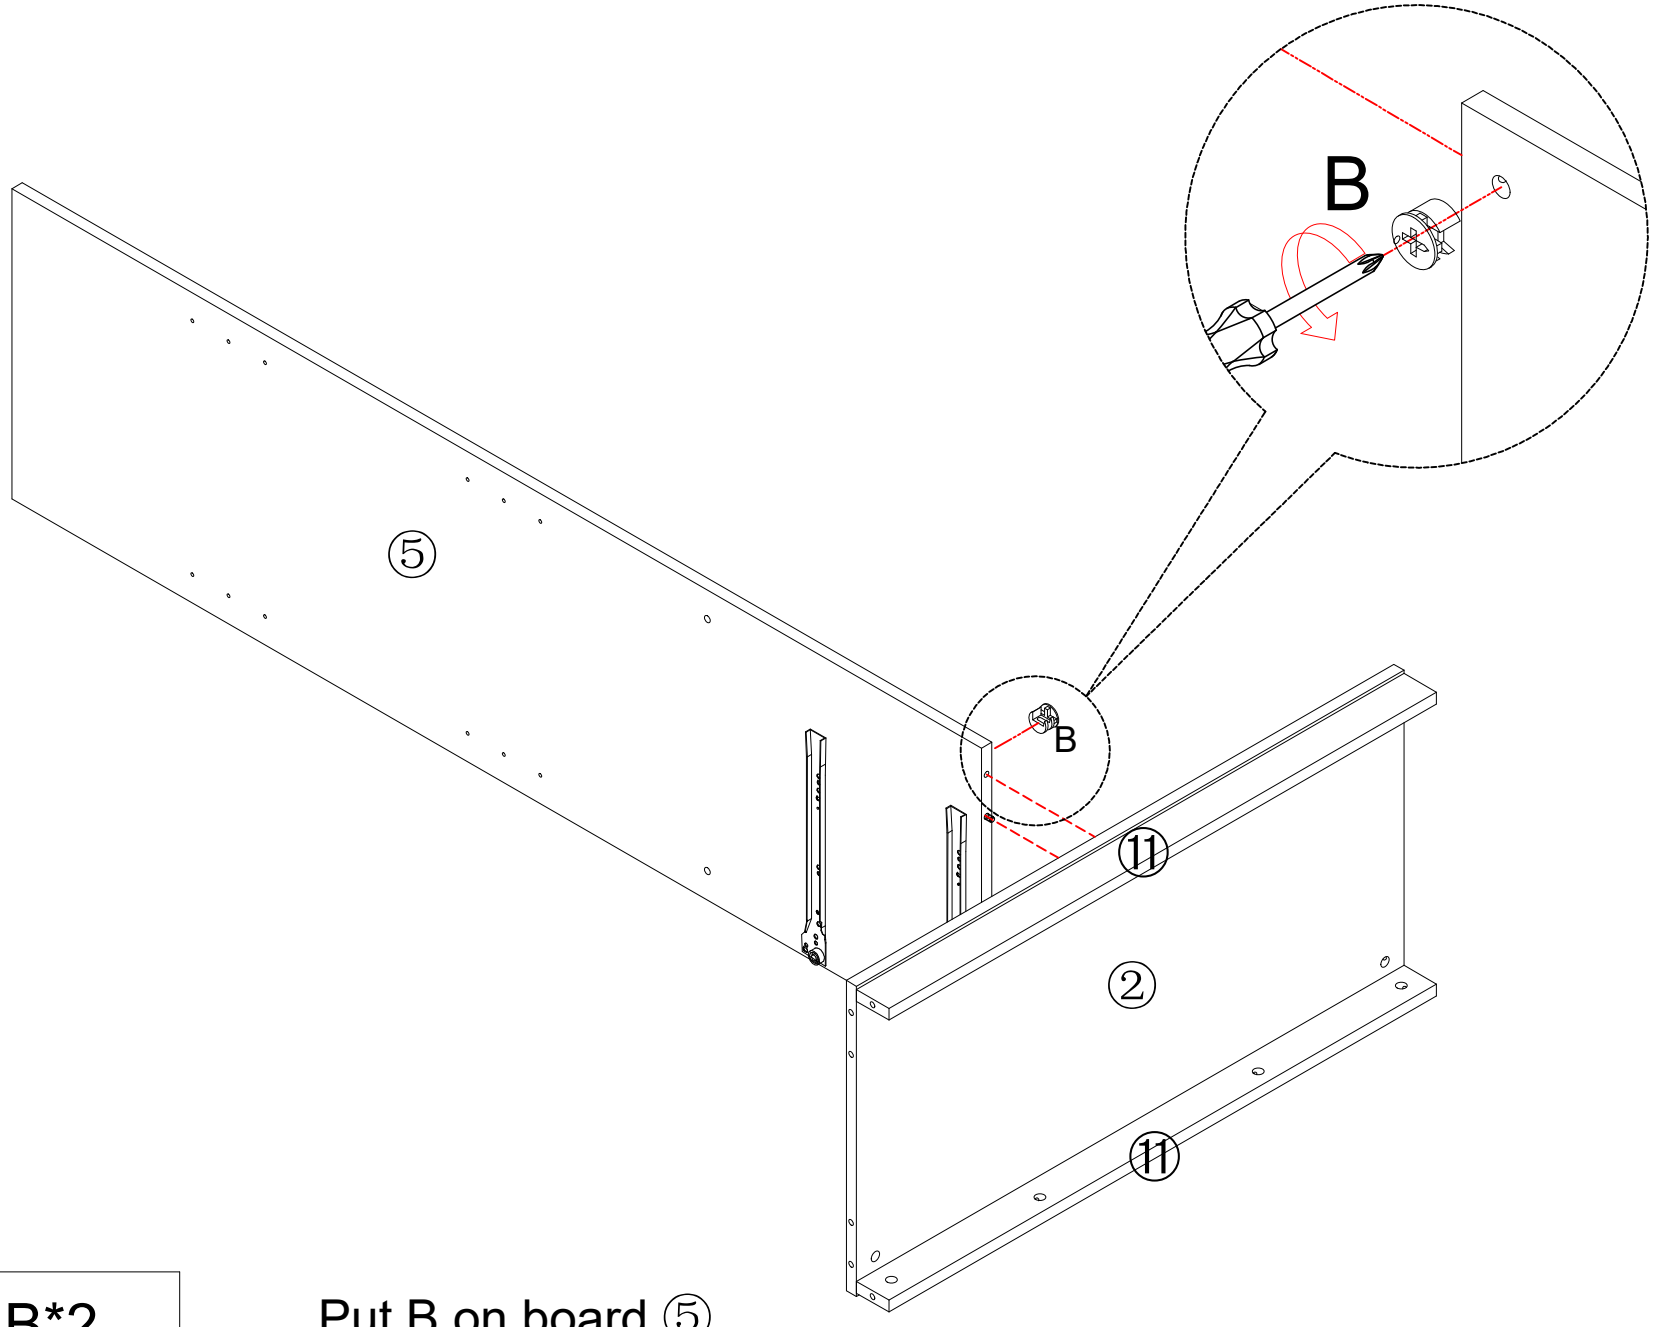

	B*2

Put B on board ⑤


6 Make sure the arrow on the screw align to the hole on the side

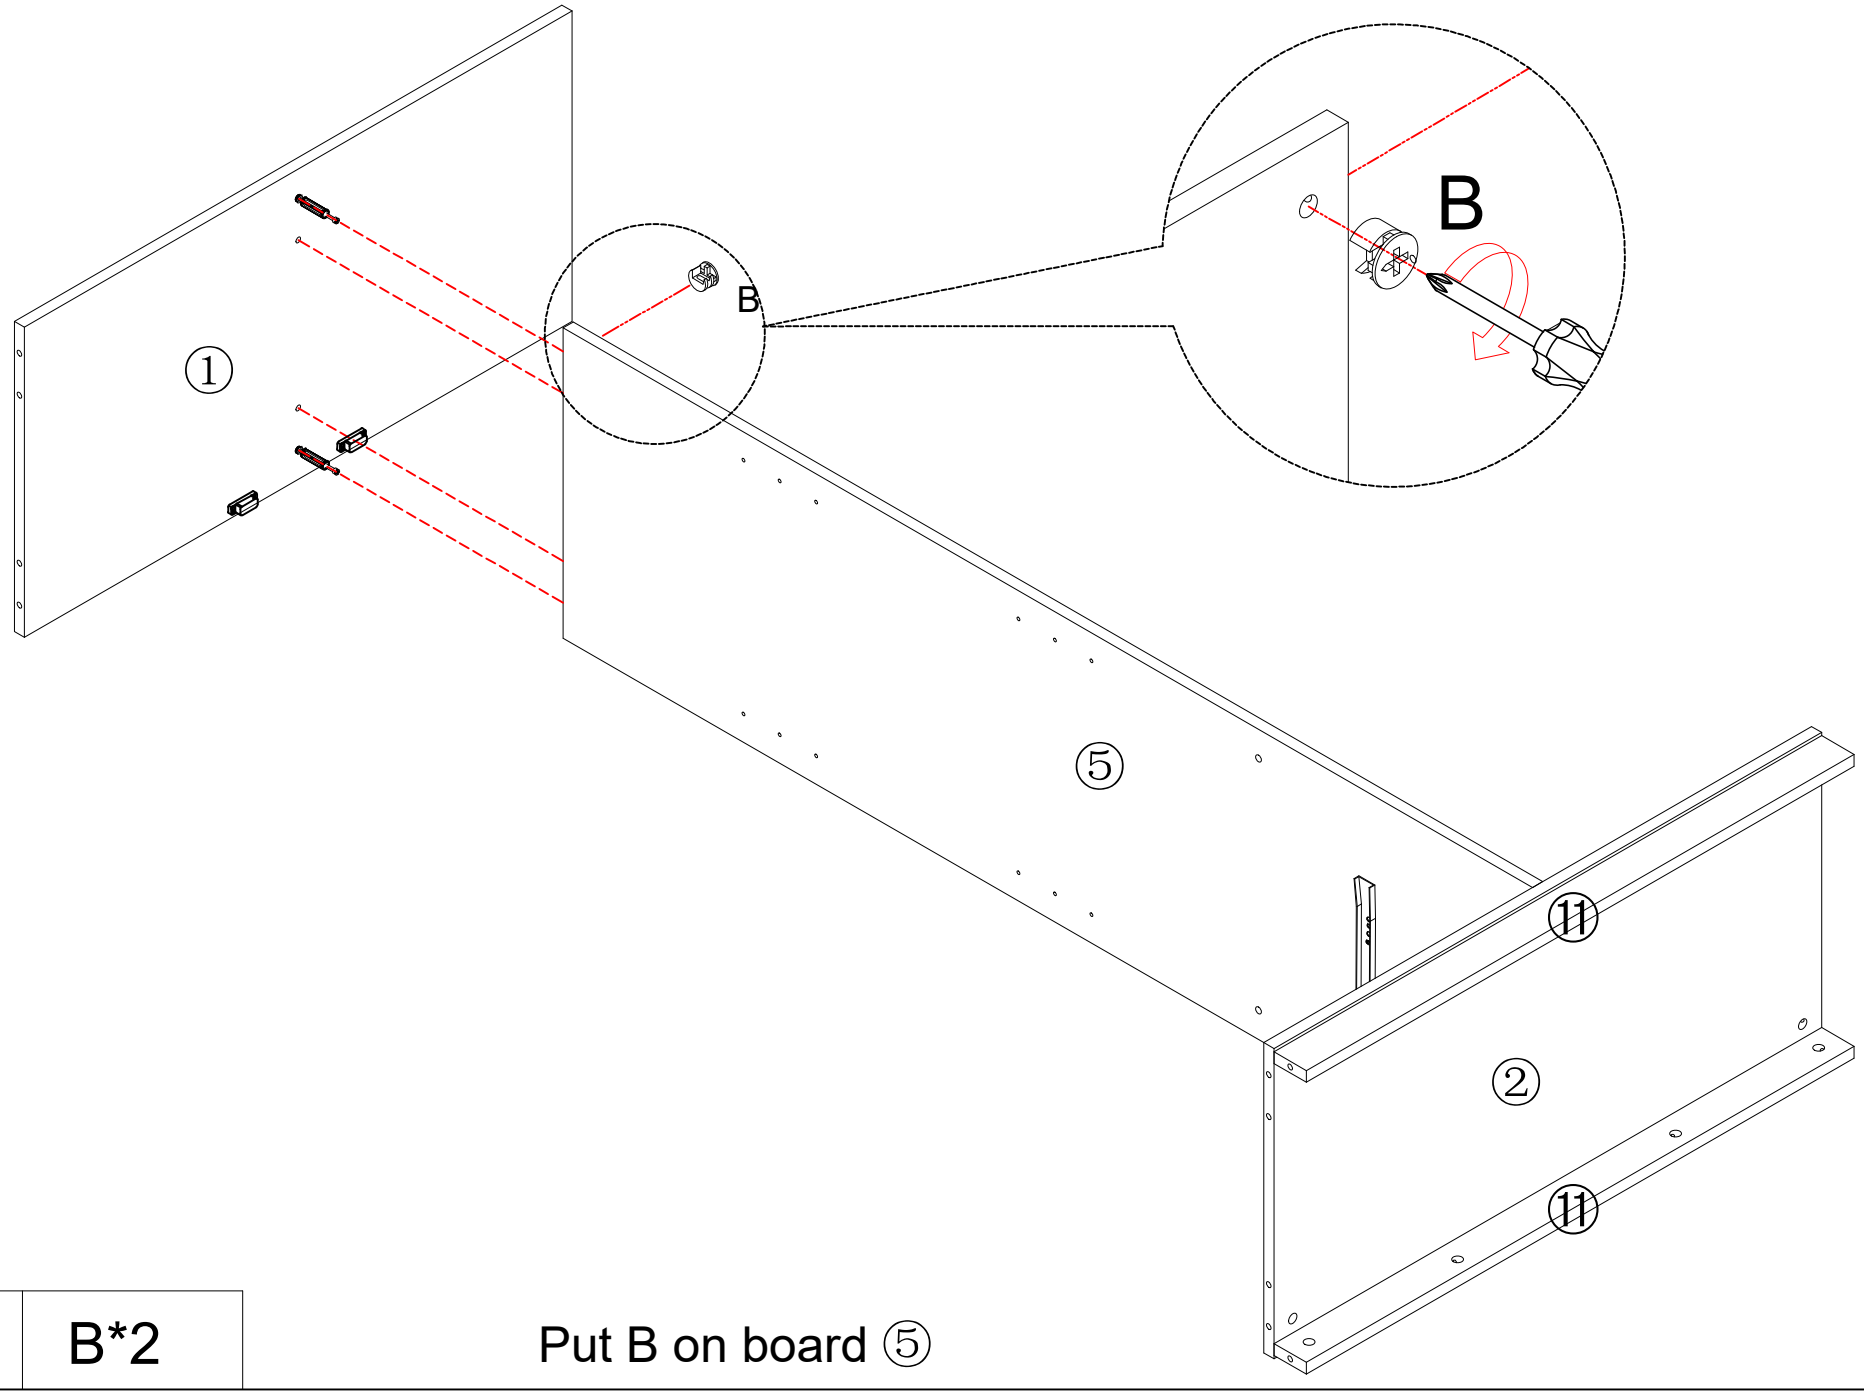

B*2

Put B on board ⑤


7 Make sure the arrow on the screw align to the hole on the side

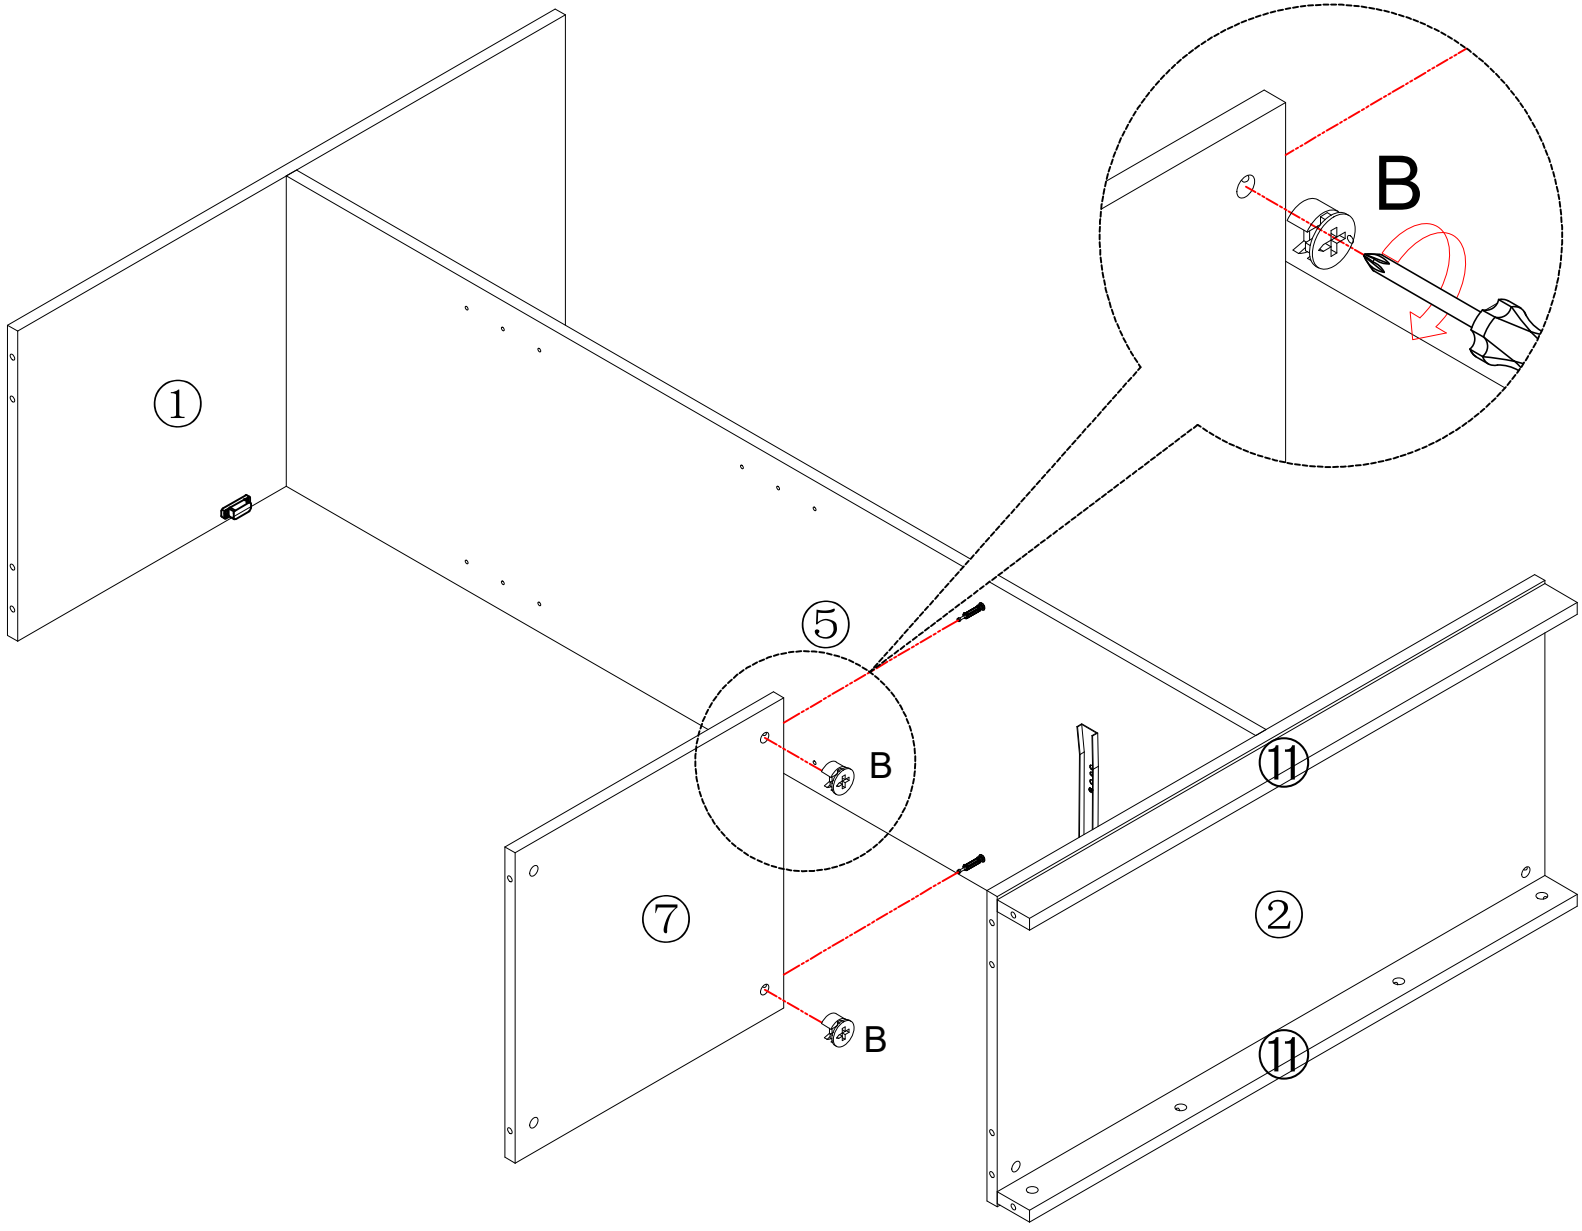

	B*2


Put B on board ⑦

8 Make sure the arrow on the screw align to the hole on the side

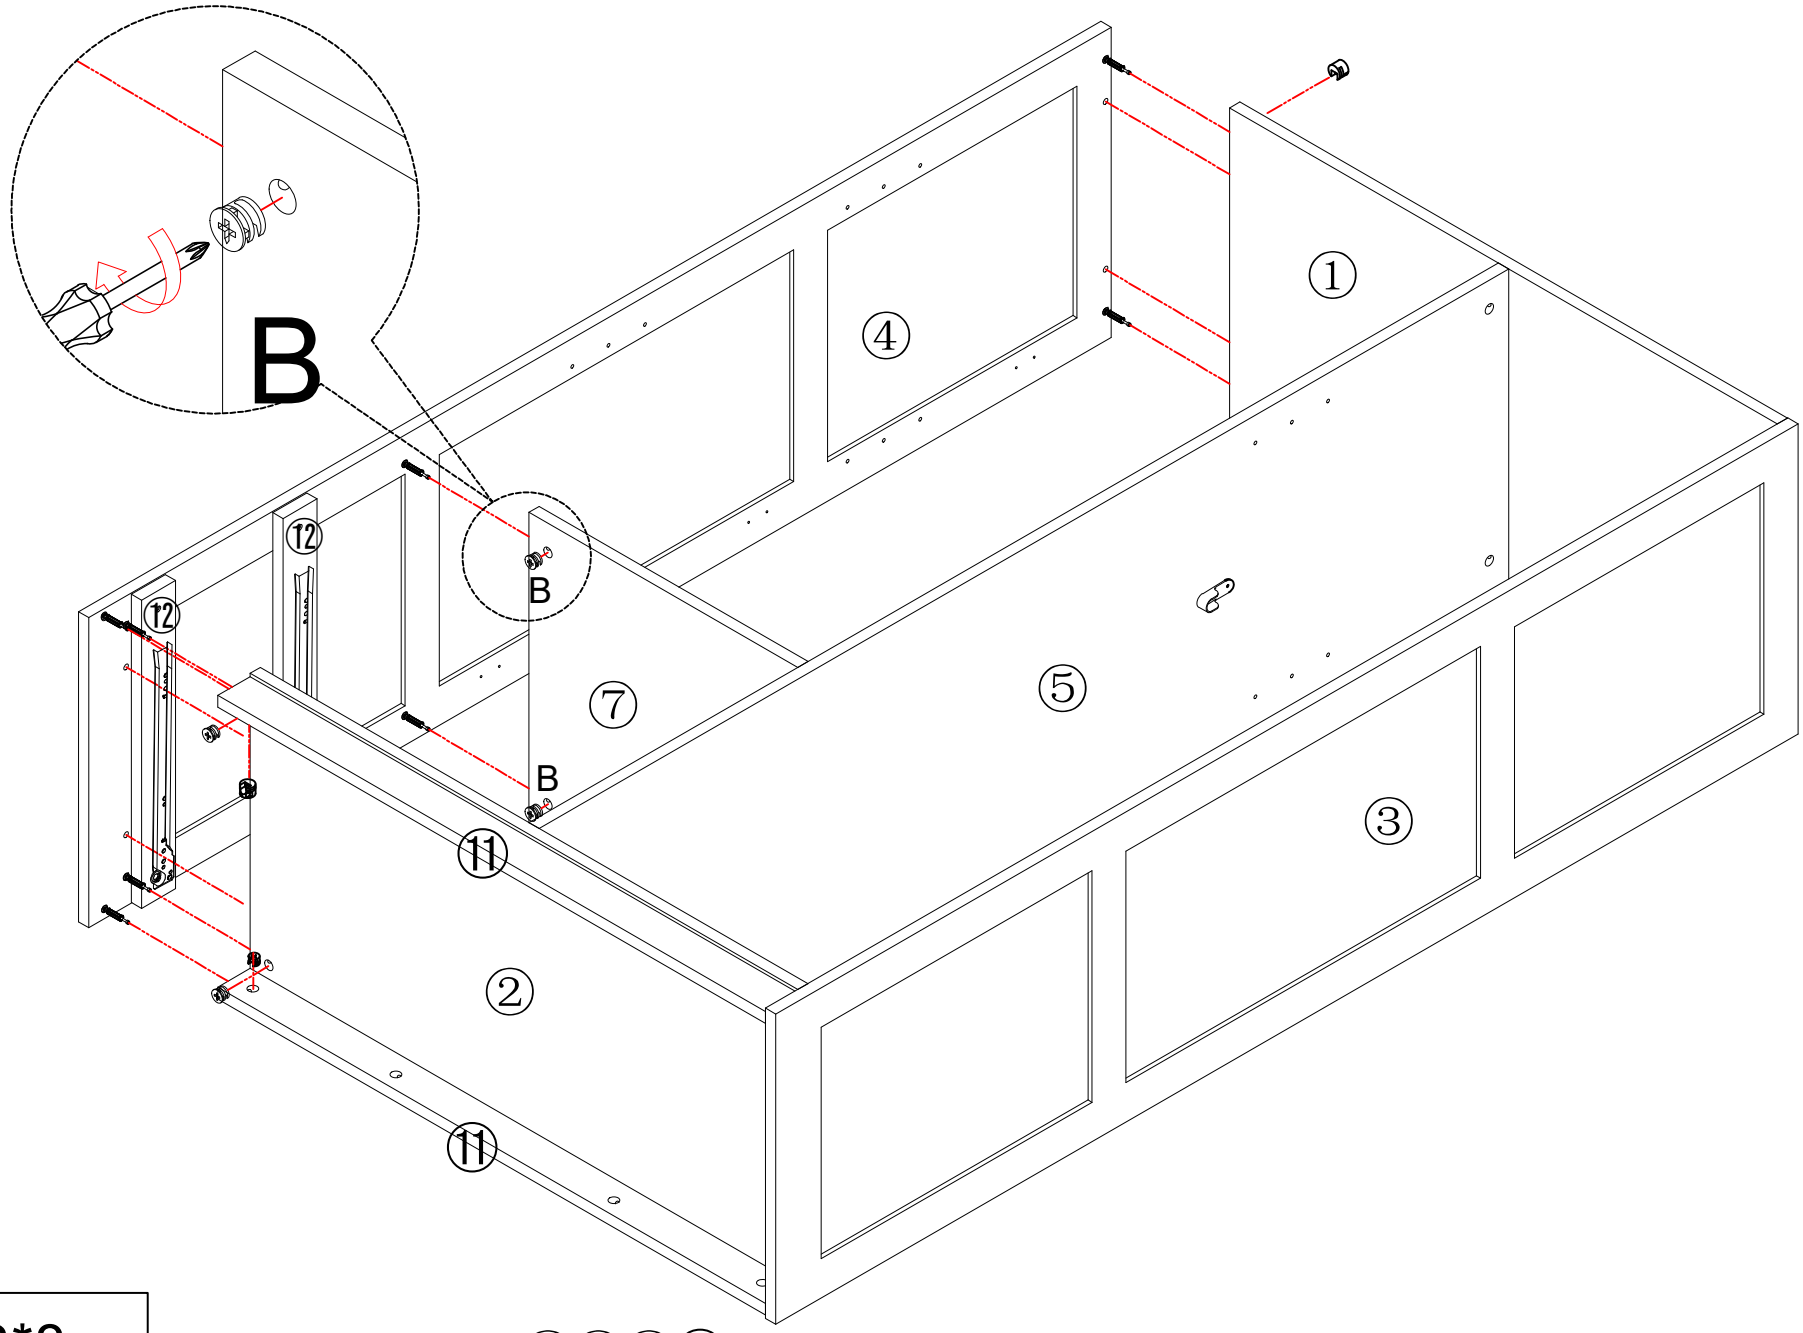


B*8	Put B on board①②⑦⑪

9

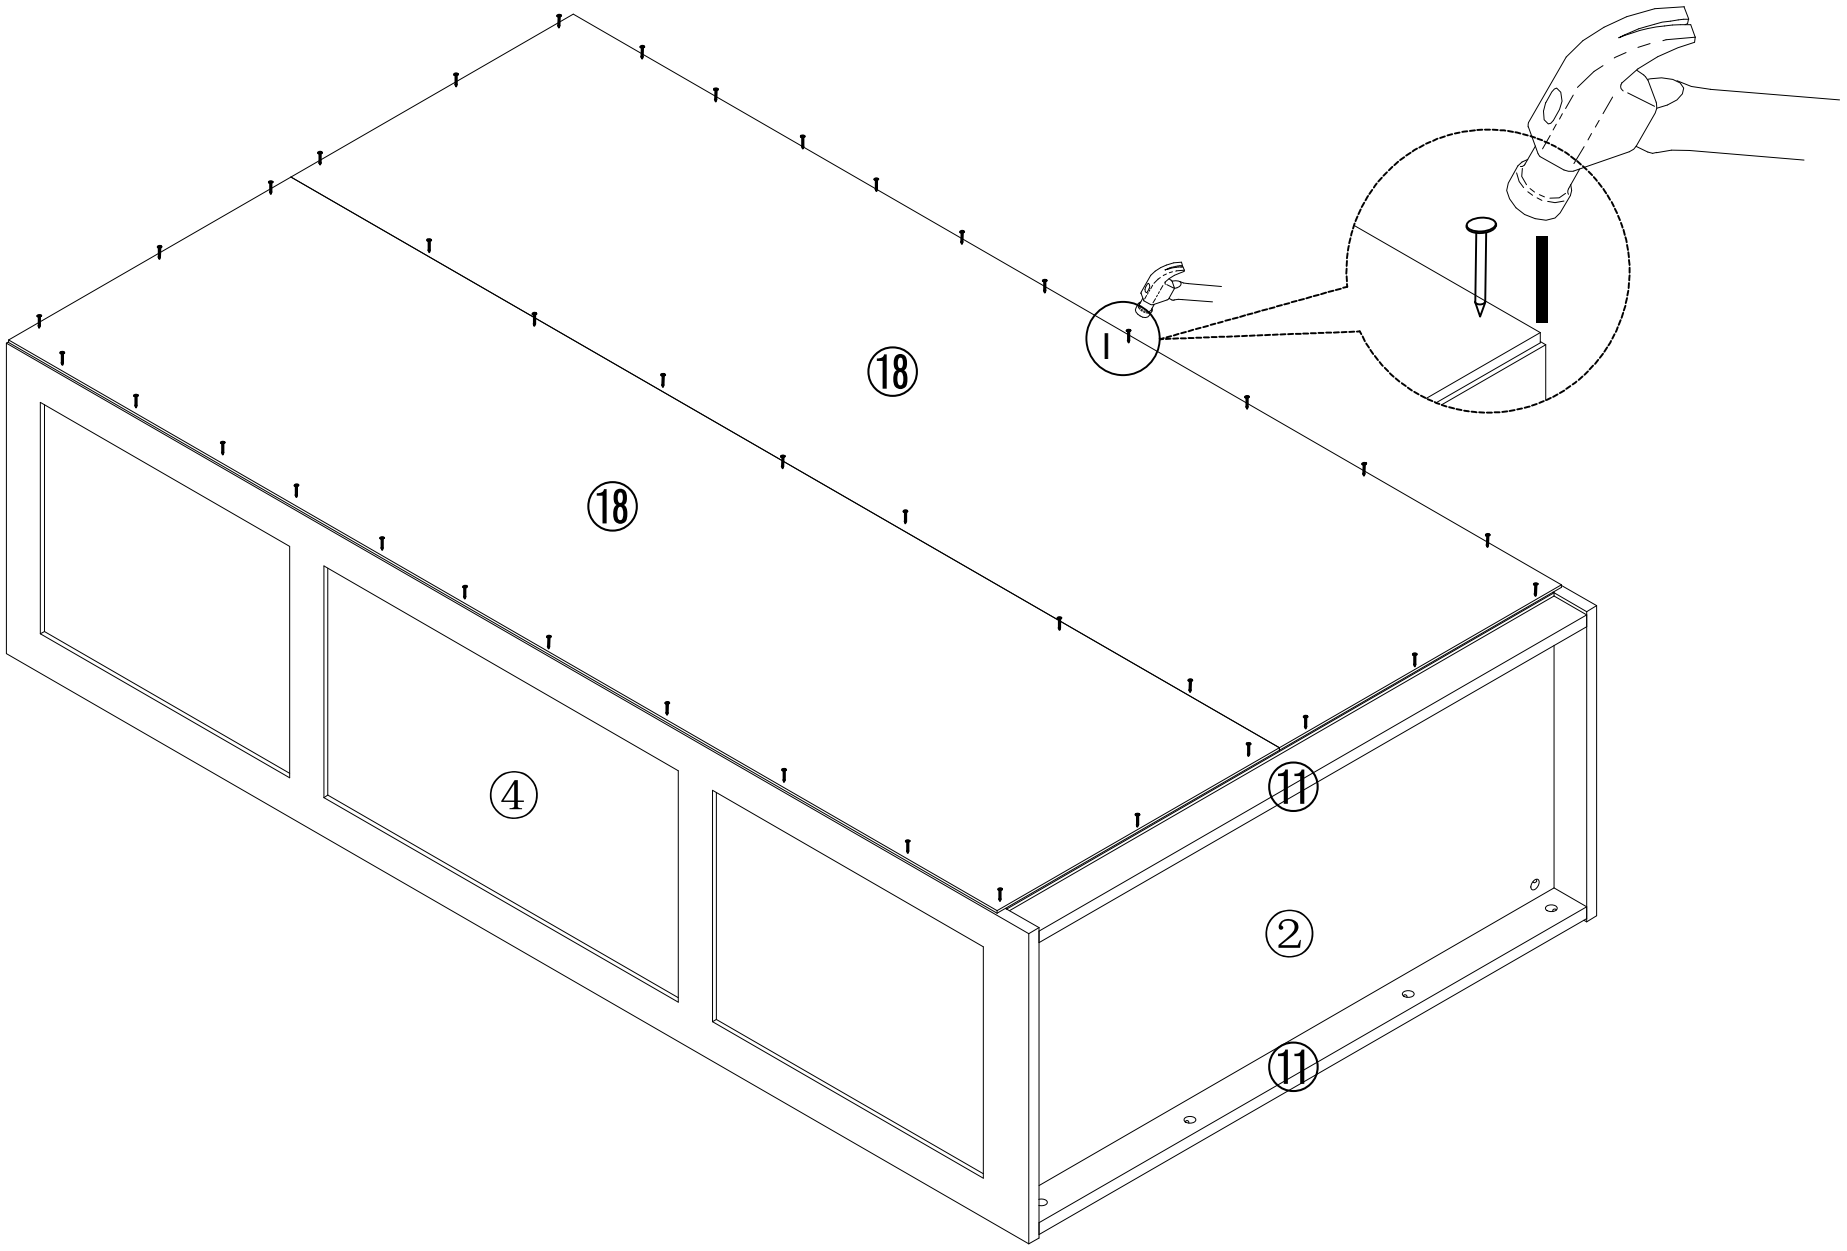

	I*40

10

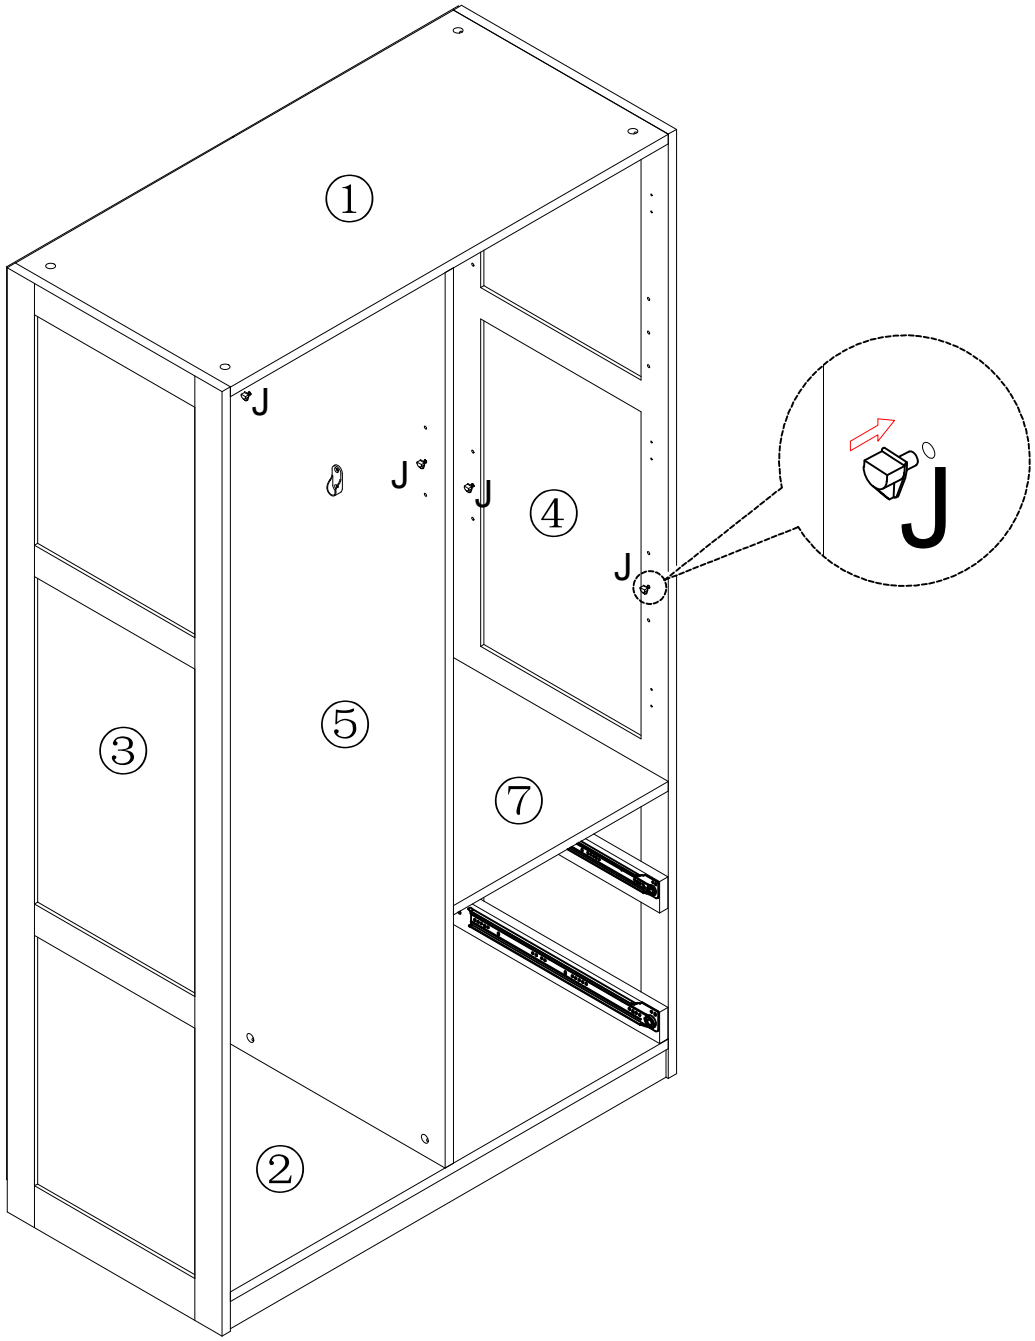





J*12


Put J on board ③④⑤


11

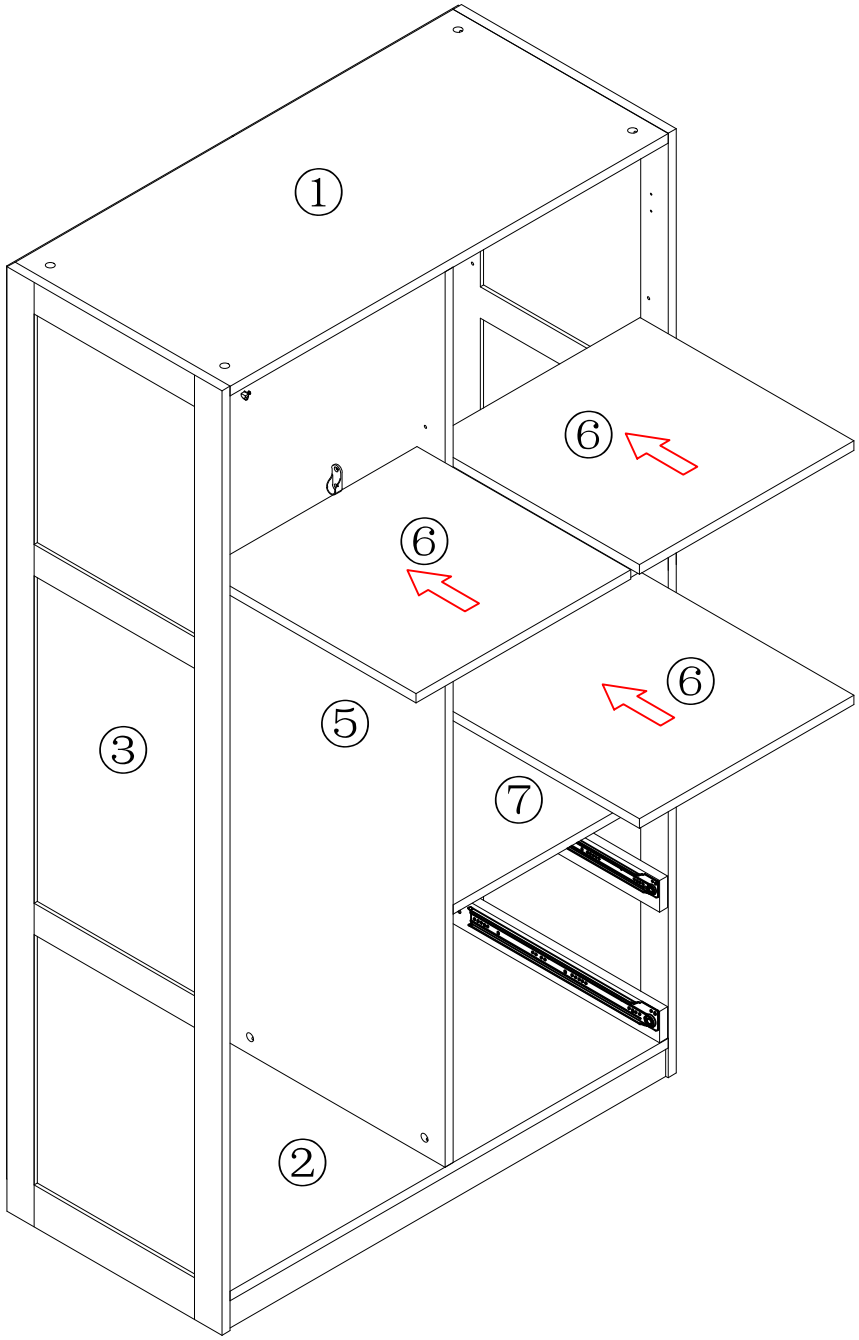


12

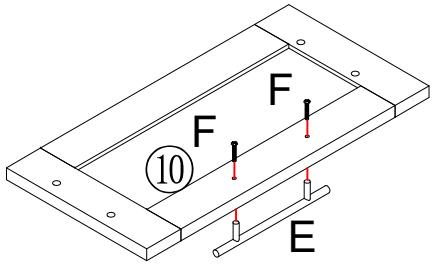


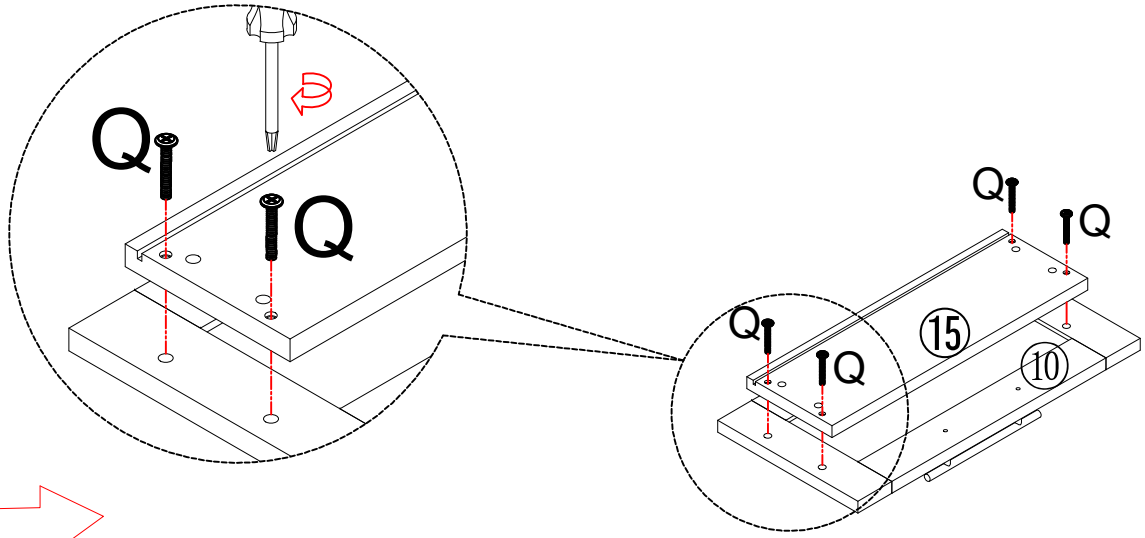

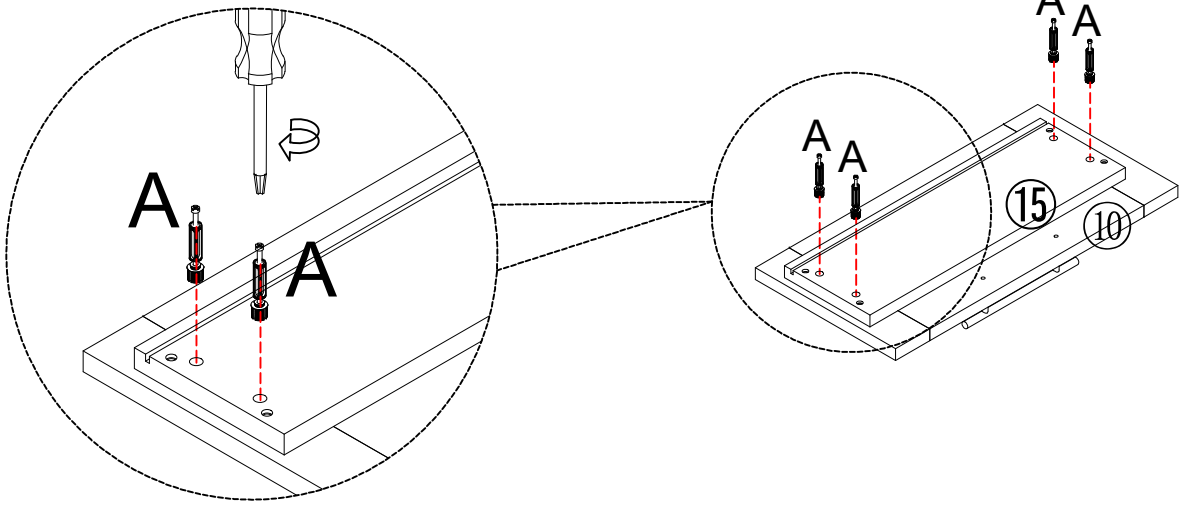

	F*4
	A*8
	E*2
	Q*8

13

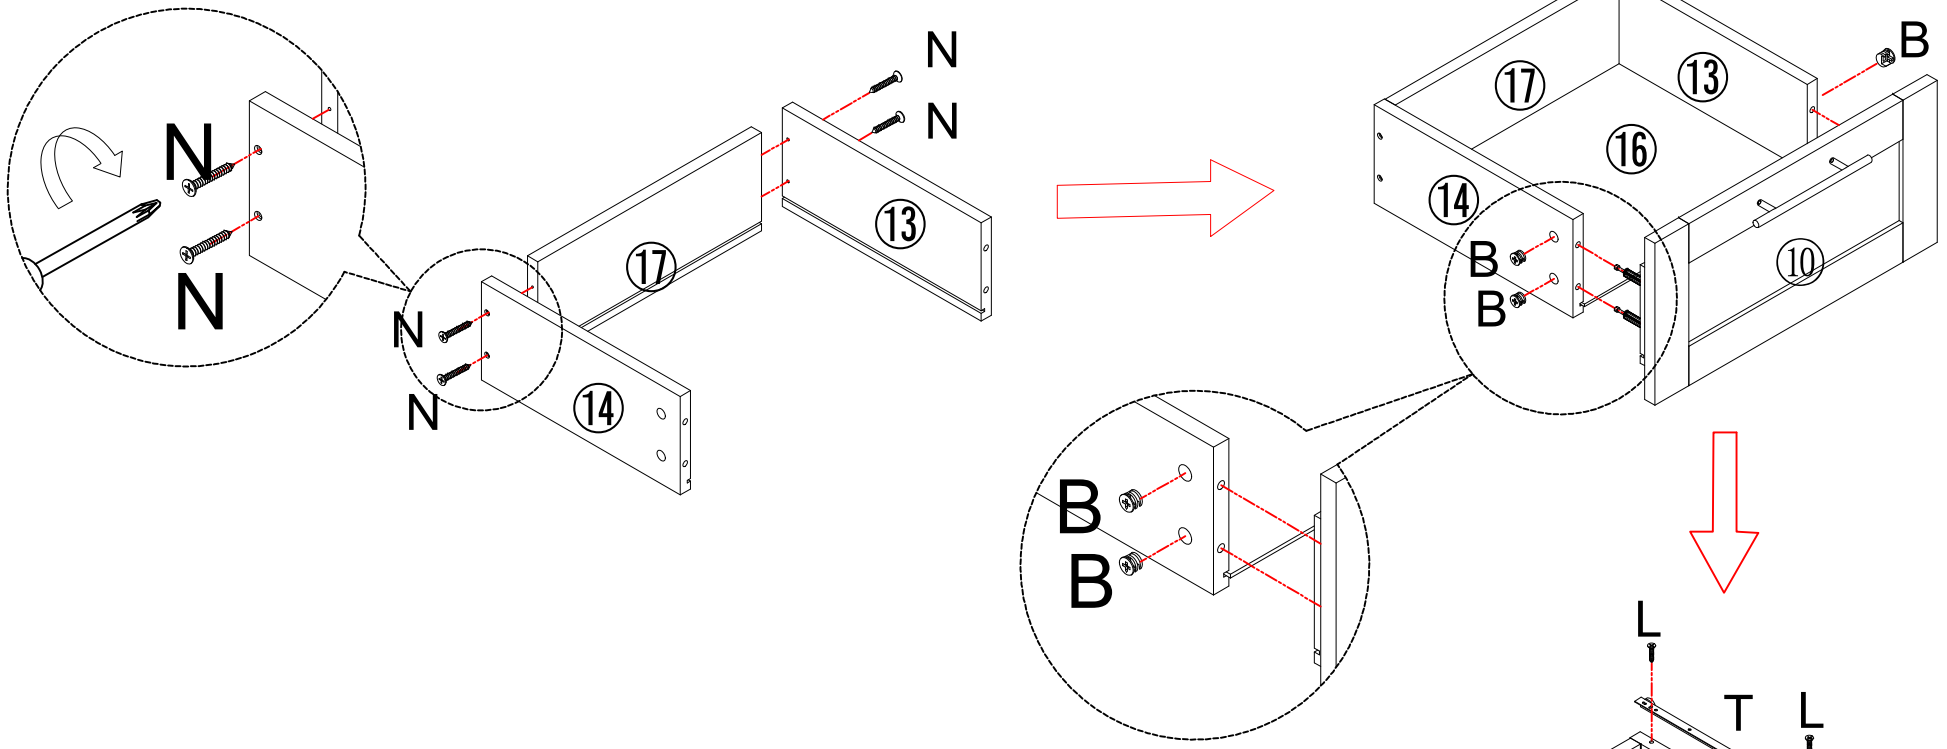



	B*8
	L*8
	N*8
	U*2
	T*2

Put B on board ⑬⑭


X2


14

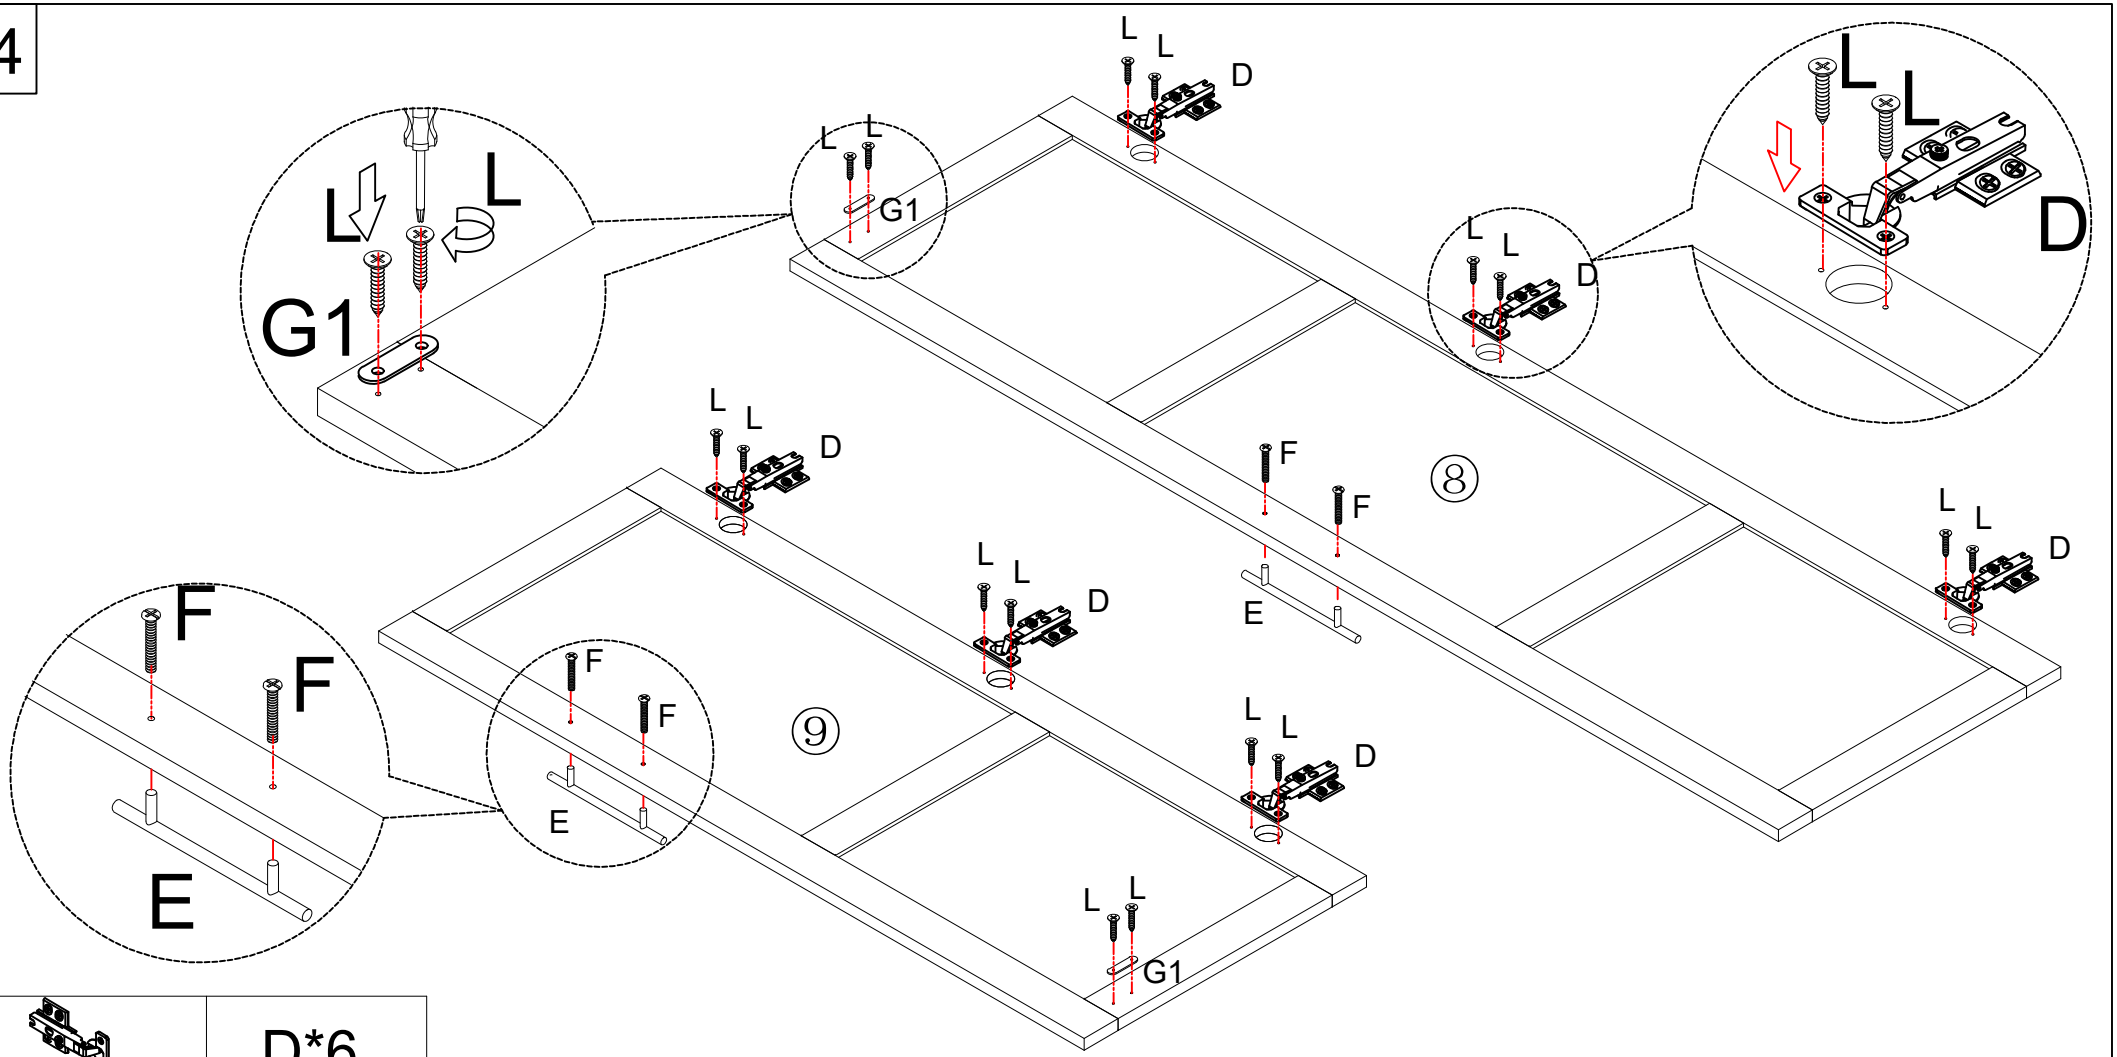


	D*6
	E*2
	F*4
	G1*2
	L*16

15

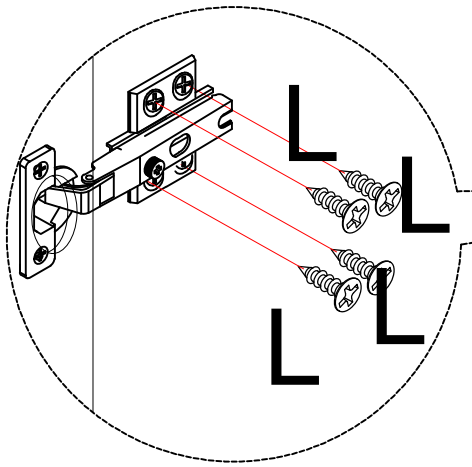


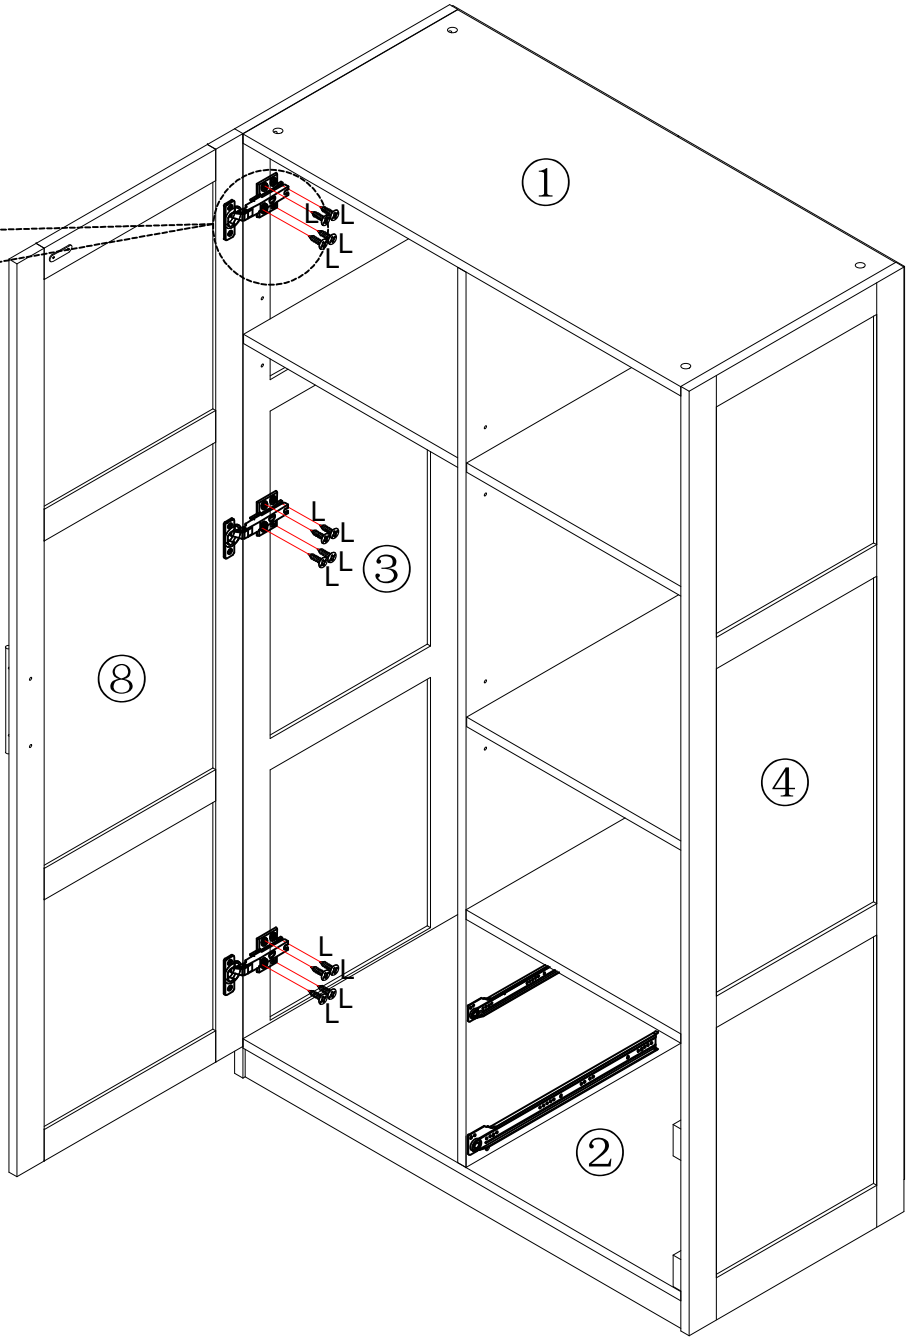


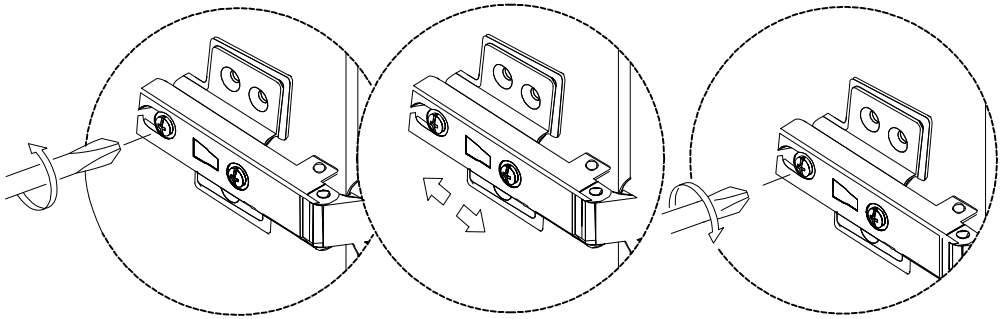


	L*12

16

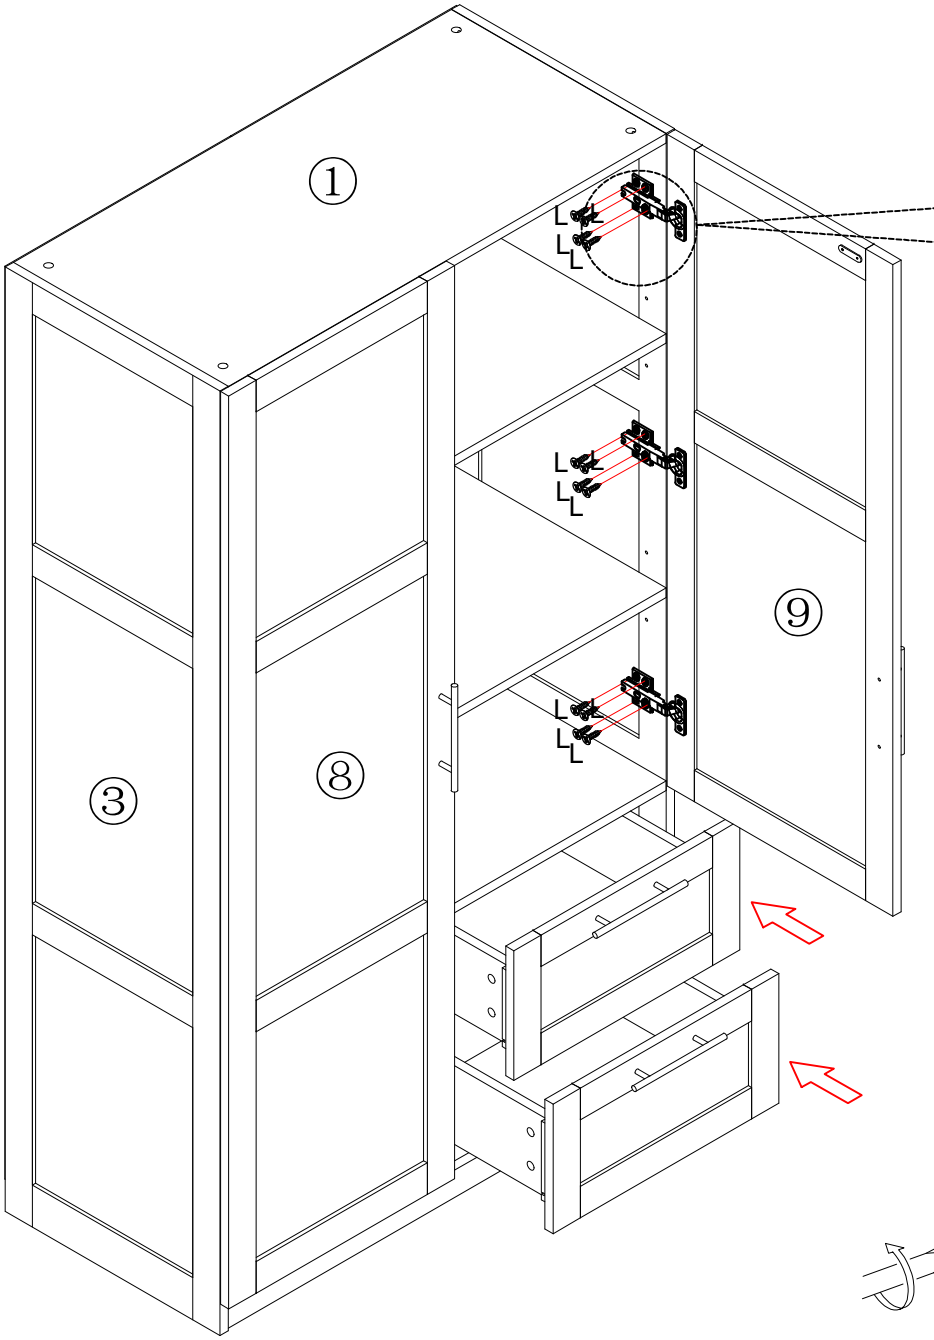


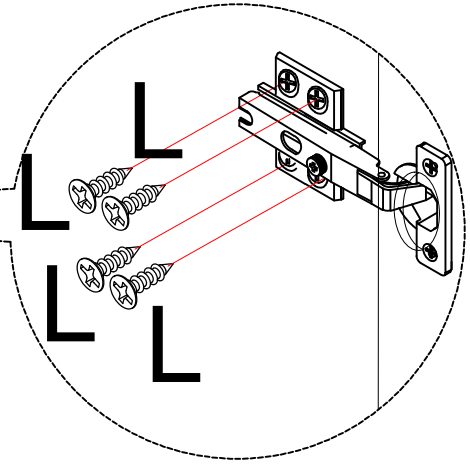


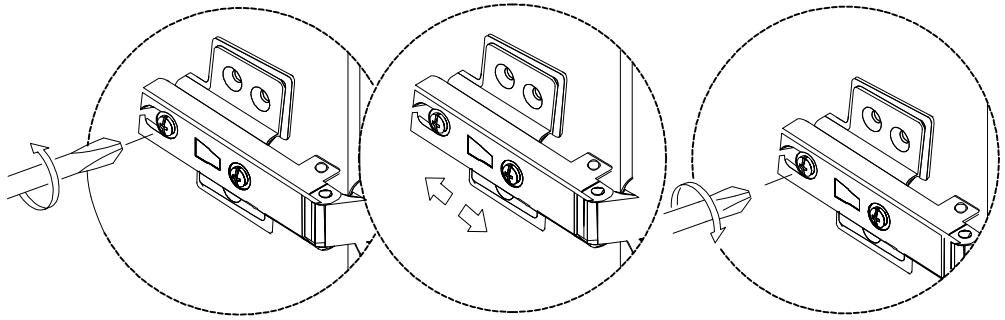



	L*12


17

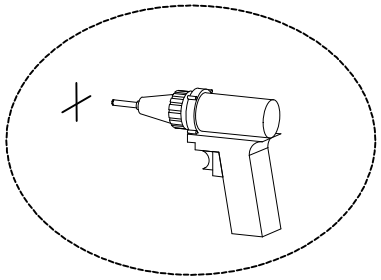


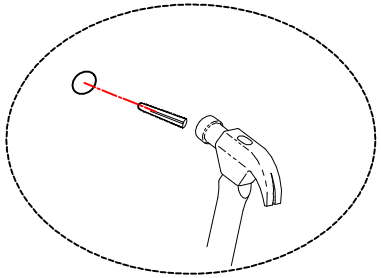

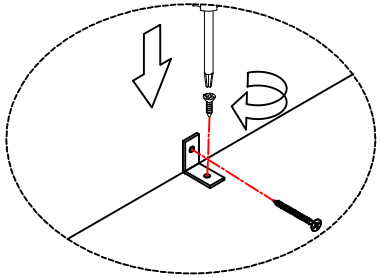

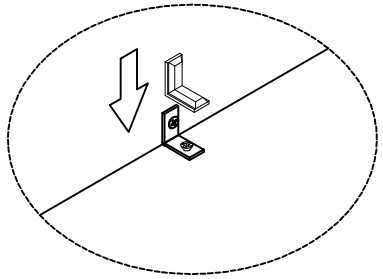

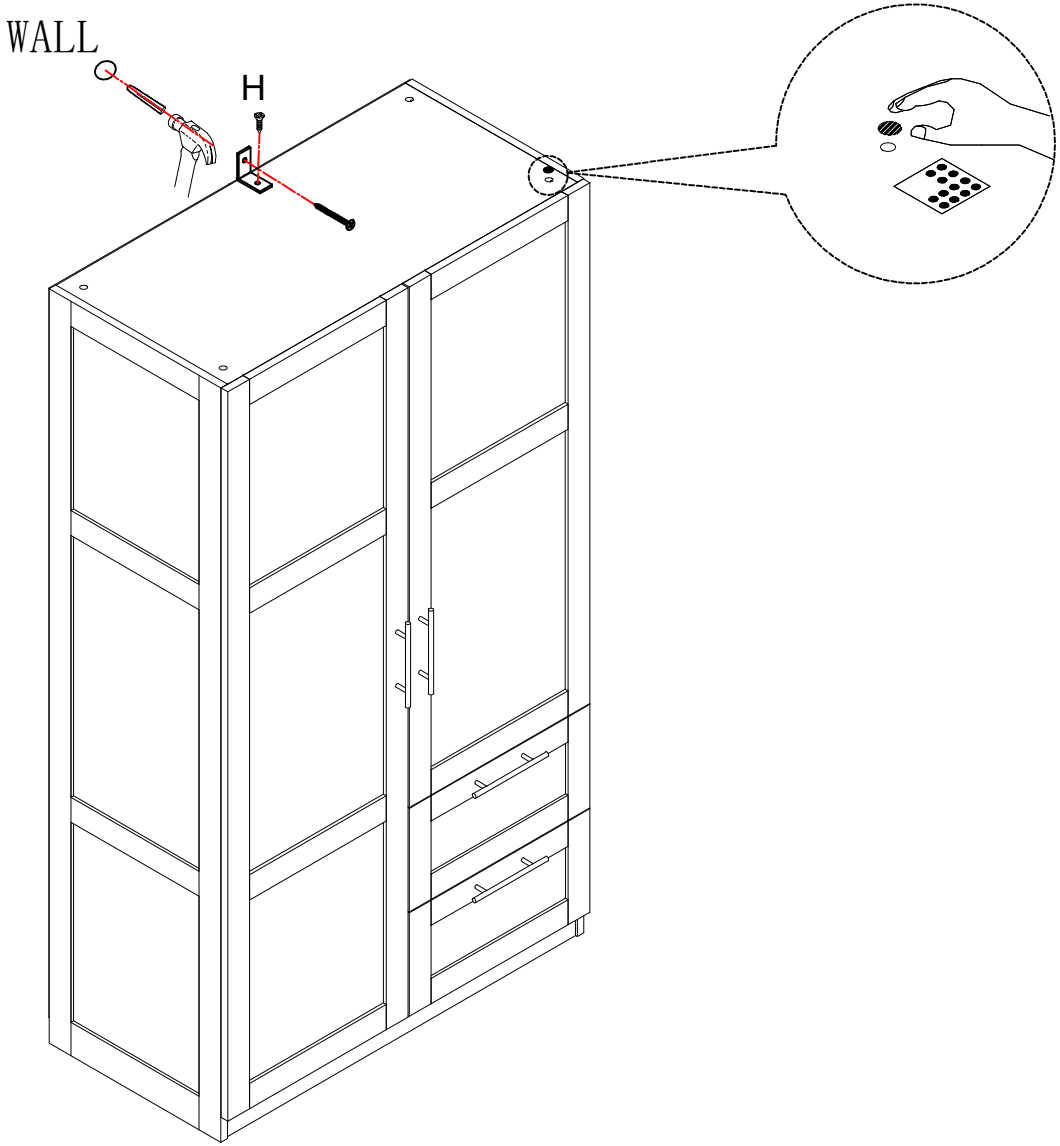

	H*1
	K*32

END