


Owner Manual

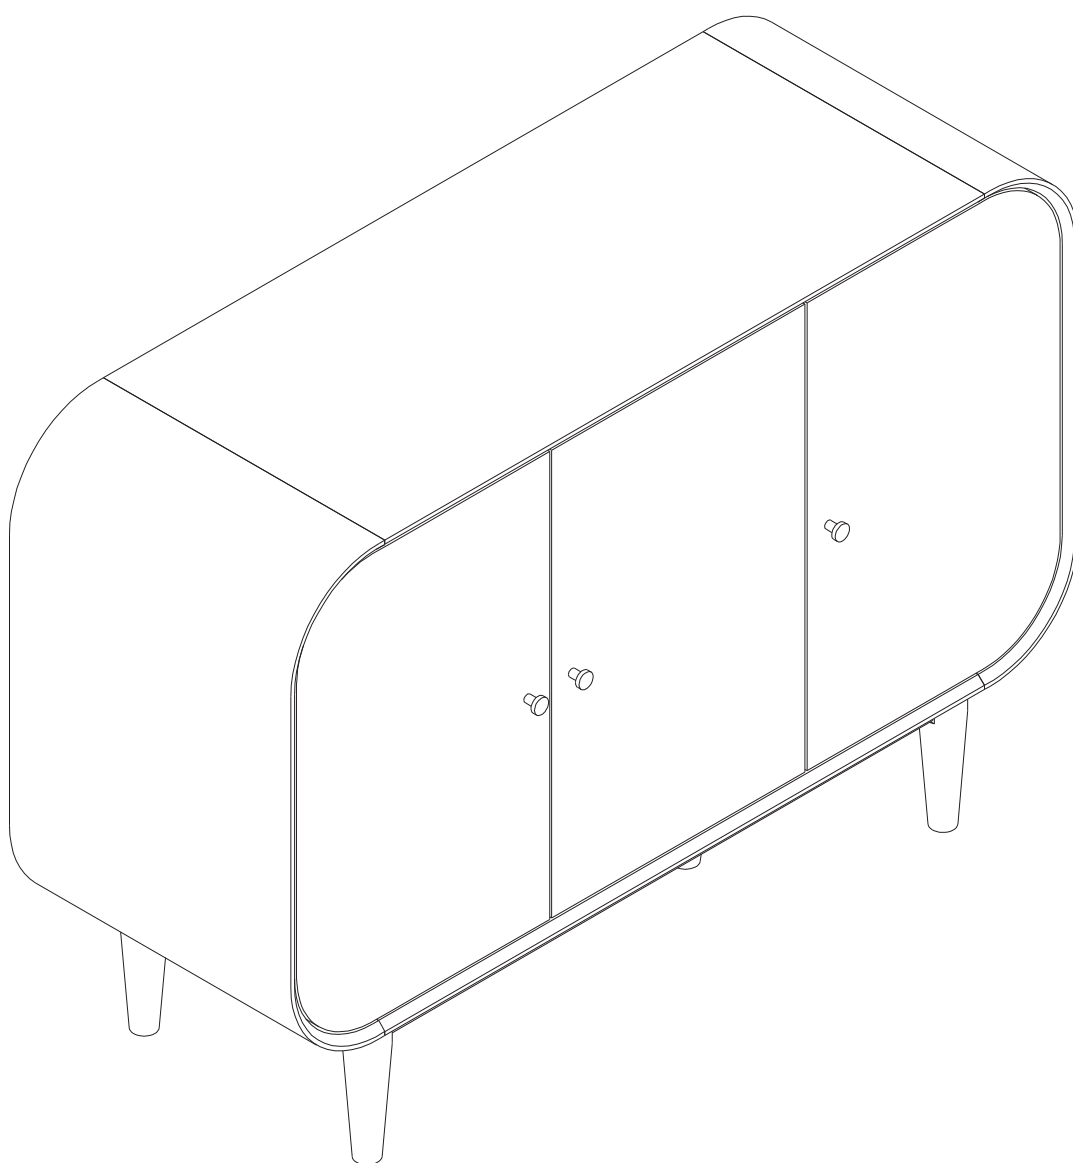

MAINTENANCE AND WARNINGS

Thank You For Choosing Our Furniture.


Please read the instructions and warnings carefully before use, to ensure safe and satisfactory operation of this product.

NOTE :

This brochure contains IMPORTANT safety info. Please read and keep it for future reference.



Weight Limitation
200 LBS

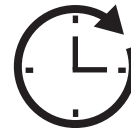

Installation:
60 minutes.



Two Person



Before You Start

Please follow the steps below:

-  Unbox the package and check if all parts and accessories are complete.
-  If you find something missing, stop assembly and contact your supplier immediately.
-  Please do not completely tighten all the hardware until the entire assembly is completed! Be sure to tighten all the hardware once the assembly completed.
-  NOTE: Should be assembled on soft surface to keep balance.

After-Sales Service

- If you encounter any issues or need technical support during use, please contact our after-sales team. We offer long-term maintenance and warranty services.



Warranty


-  We strive to offer high , quality products, and we also try our best to satisfy each and every customer that orders from us with product or service as needed. Each customer must provide a record of their order such as the order number, or item receipt for any items that are out of the warranty period you may also still receive replacement parts by purchasing them with our company if they are available.
-  Are you having difficulty with assembly? Missing parts? Please send email with your order number
-  For return, please check the return policy with the retailer or market place you bought from. Appreciate your purchasing from us. Pop up your life by our furniture piece!

Daily Maintenance

- Keep furniture away from heat.
- Do not use cleaning agents containing acids, alkalis, or corrosive substances, as they may damage the surface. It is recommended to use neutral cleaning agents or specialized furniture cleaners.
- Do not place furniture under direct sunlight, material will possibly fade over time.
- Do not use on site dry cleaning machine.
- Children should not climb or jump on the furniture.
- Do not write on furniture without a padded barrier to protect the surface.
- Not for commercial use, for residential use only.


Exploded Diagram

Please confirm that you have received all the parts in the box and start the installation.

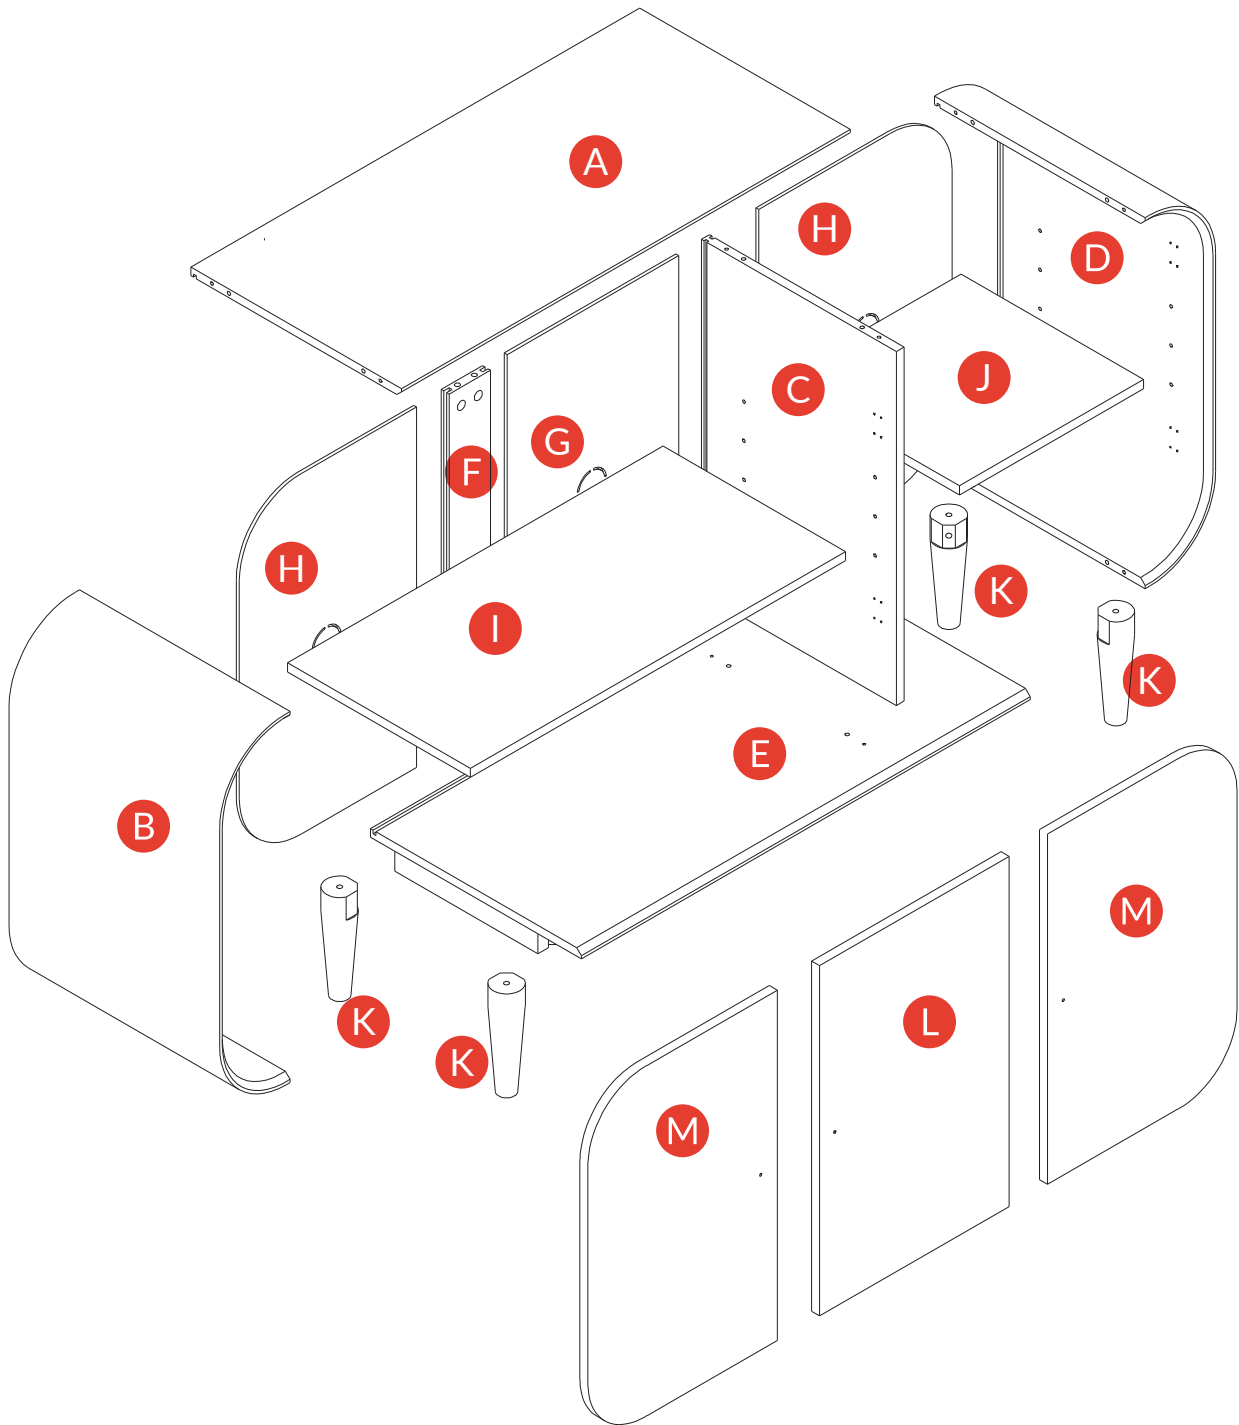

Parts List

A x1

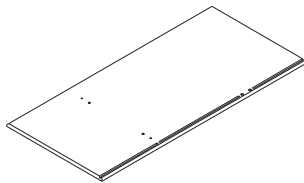

Panel

B x1




Left panel

C x1




Middle side panel

D x1



Right side panel

E x1

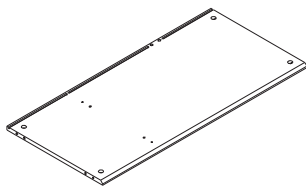


Baseplate

F x1




Pull strip

G x1




back panel

H x2




back panel

I x1

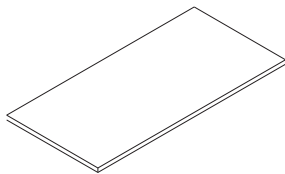

Baseplate

J x1

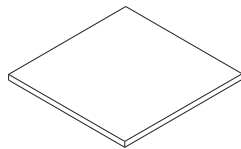


Baseplate

K x4




Legs

L x1



Middle door


M x2



Door


Hardware List

1 x4

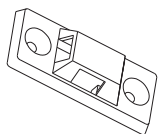


Anti-tip component

2 x4




Self-tapping screw
D4x20

3 x2

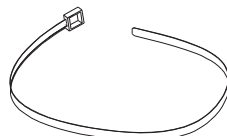


Hardware pack

4 x4




Expansion pipe
L30mm

5 x4



Self-tapping screw
D4*40

6 x1

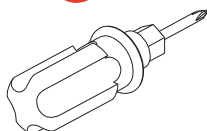


Screwdriver

7 x14+2




eccentric wheel

8 x14+2

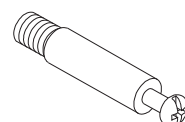

three in one
M6x35mm

9 x16+2



tree top
Ø8*30

10 x3




Hold hands

11 x3+1




Pull screw
M4*20

12 x2




door hinge
Ø35 nn

13 x4

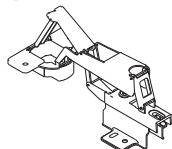


door hinge
Ø35 nn

14 x36+4




Self-tapping screw
D4x16mm

15 x8




Layer board support

16 x4




Iron sheet

17 x28+3



Self-tapping screw
D3*14mm

18 x2




Self-tapping screw
D4*30mm

19 x4+1




Gasket

20 x4




screw rod
M6x40mm

21 x1

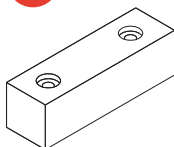


Door stopper

22 x2




Direct repair screw
Ø6.3x40mm

23 x1

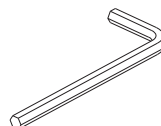

Hex wrench
M4

24 x20+1



Back plate buckle

25 x6+2




Huamei Patch

ASSEMBLY INSTRUCTIONS

Step 01

Insert screw (18) through door stopper (21) into the corresponding hole on panel (A) and tighten it with screwdriver (6). Insert the three-in-one screw (8) into the corresponding hole on panel (A) and the bottom plate (E), and tighten it with screwdriver (6).


8	 x 6	M6x35mm	6	 x 1	Screwdriver
18	 x 2	M4x30mm	21	 x 1	Door stopper

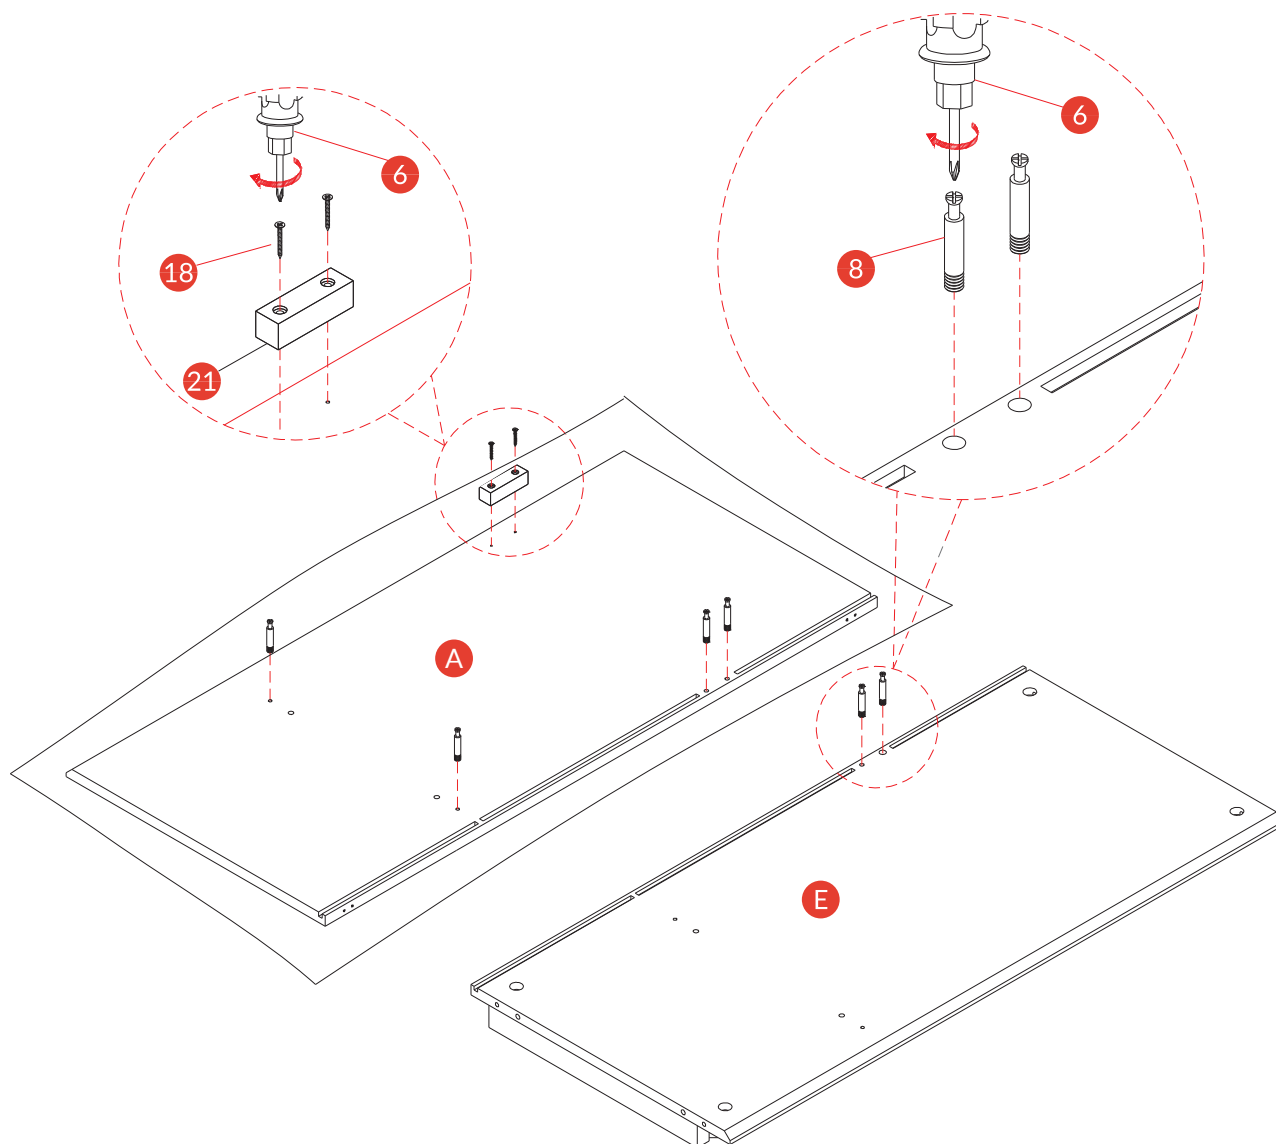

Step 02


Insert the 3-in-1 screw (8) into the corresponding hole on side panel (B/D) and tighten it with screwdriver (6).


8	 x 8	M6x35mm	6	 x 1	Screwdriver
---	---	---------	---	---	-------------

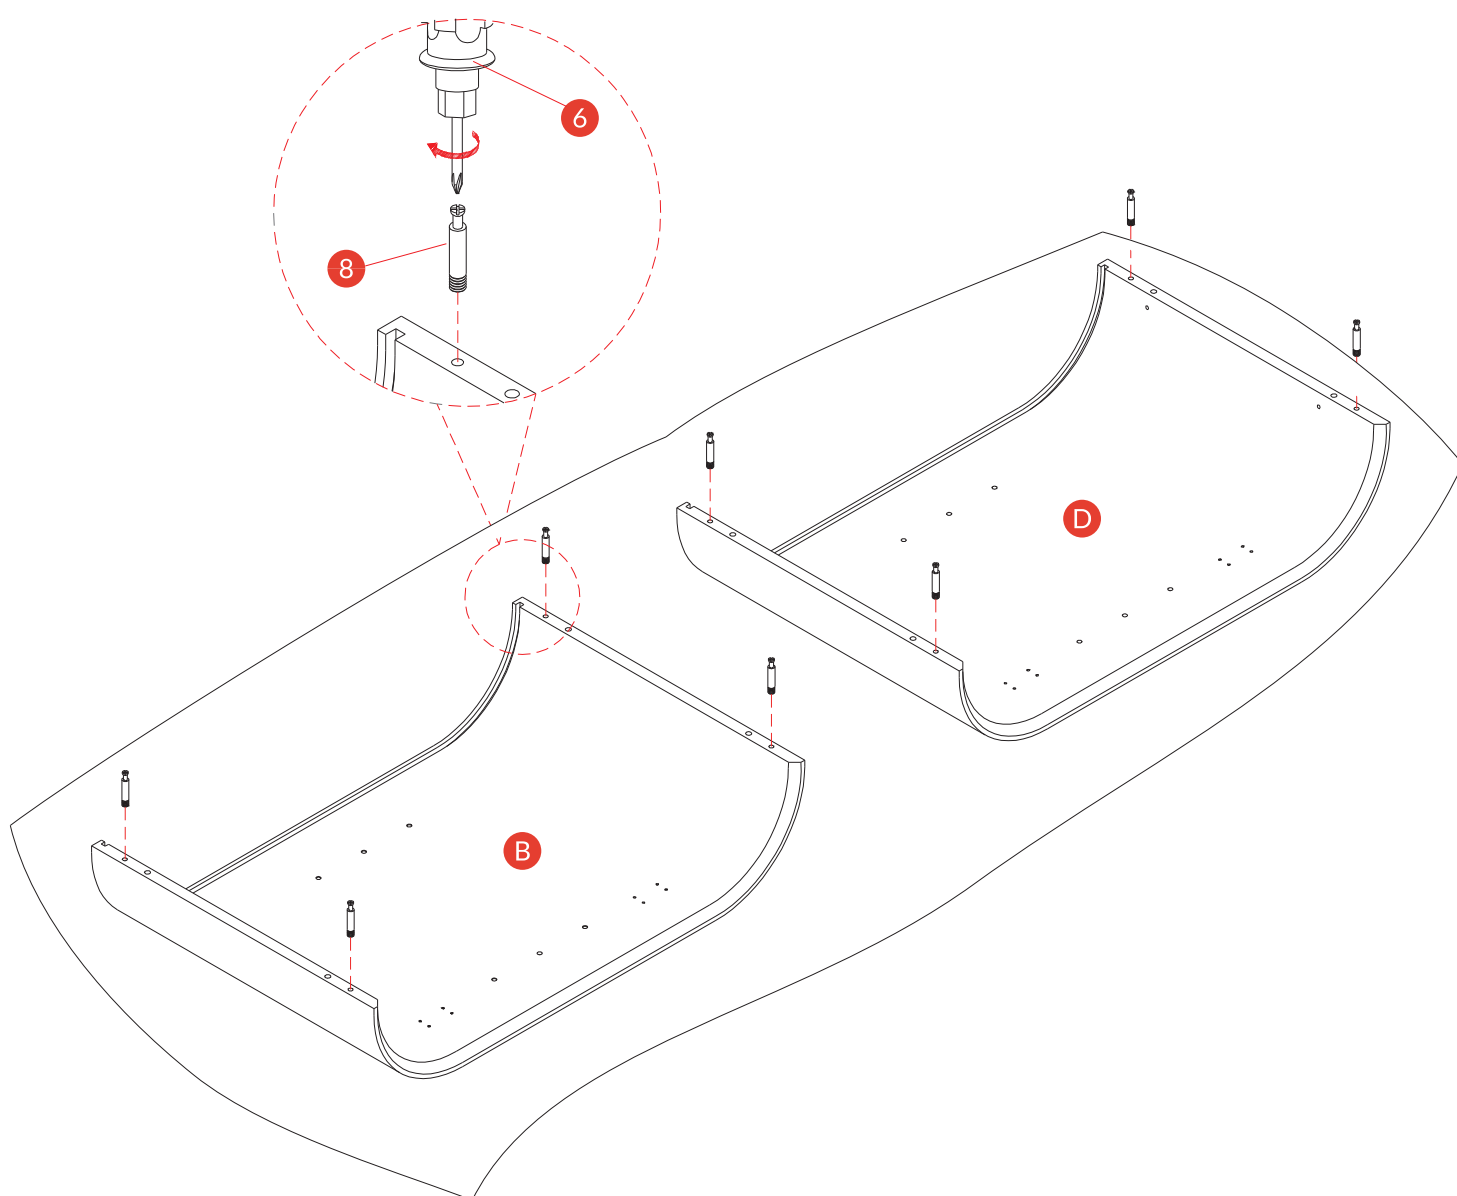

Step 03

Insert wooden pin (9) into side panel (C). Install side panel (C) and the back pull strip (F) into the corresponding position on panel (A). Insert eccentric wheel (7) into side panel (C) and pull strip (F), and tighten with screwdriver (6).


9	 x 2	Ø8x30mm
7	 x 4	eccentric wheel
6	 x 1	Screwdriver

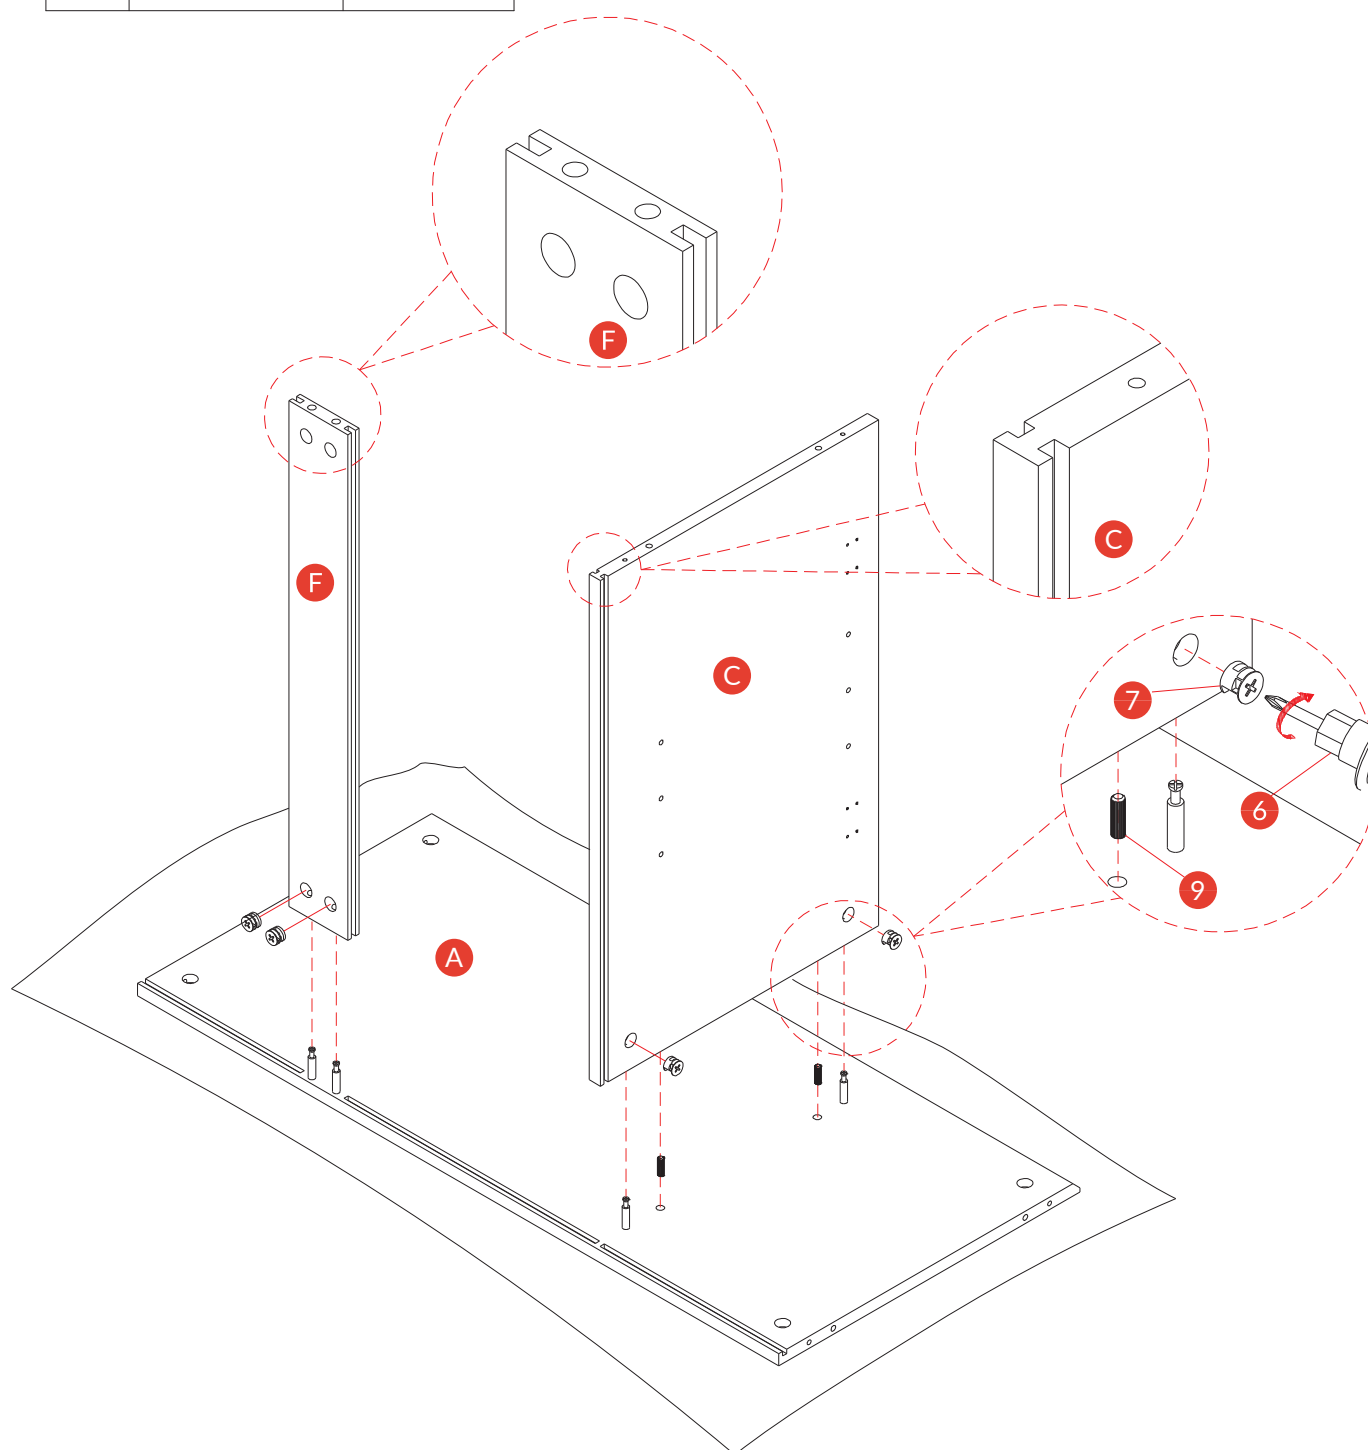

Step 04

Insert back panel (G) into the (C/F/A) back panel slot Place the Huanmei ssticker (25) on the cam .


25		x 2	Huamei Patch
----	---	-----	--------------

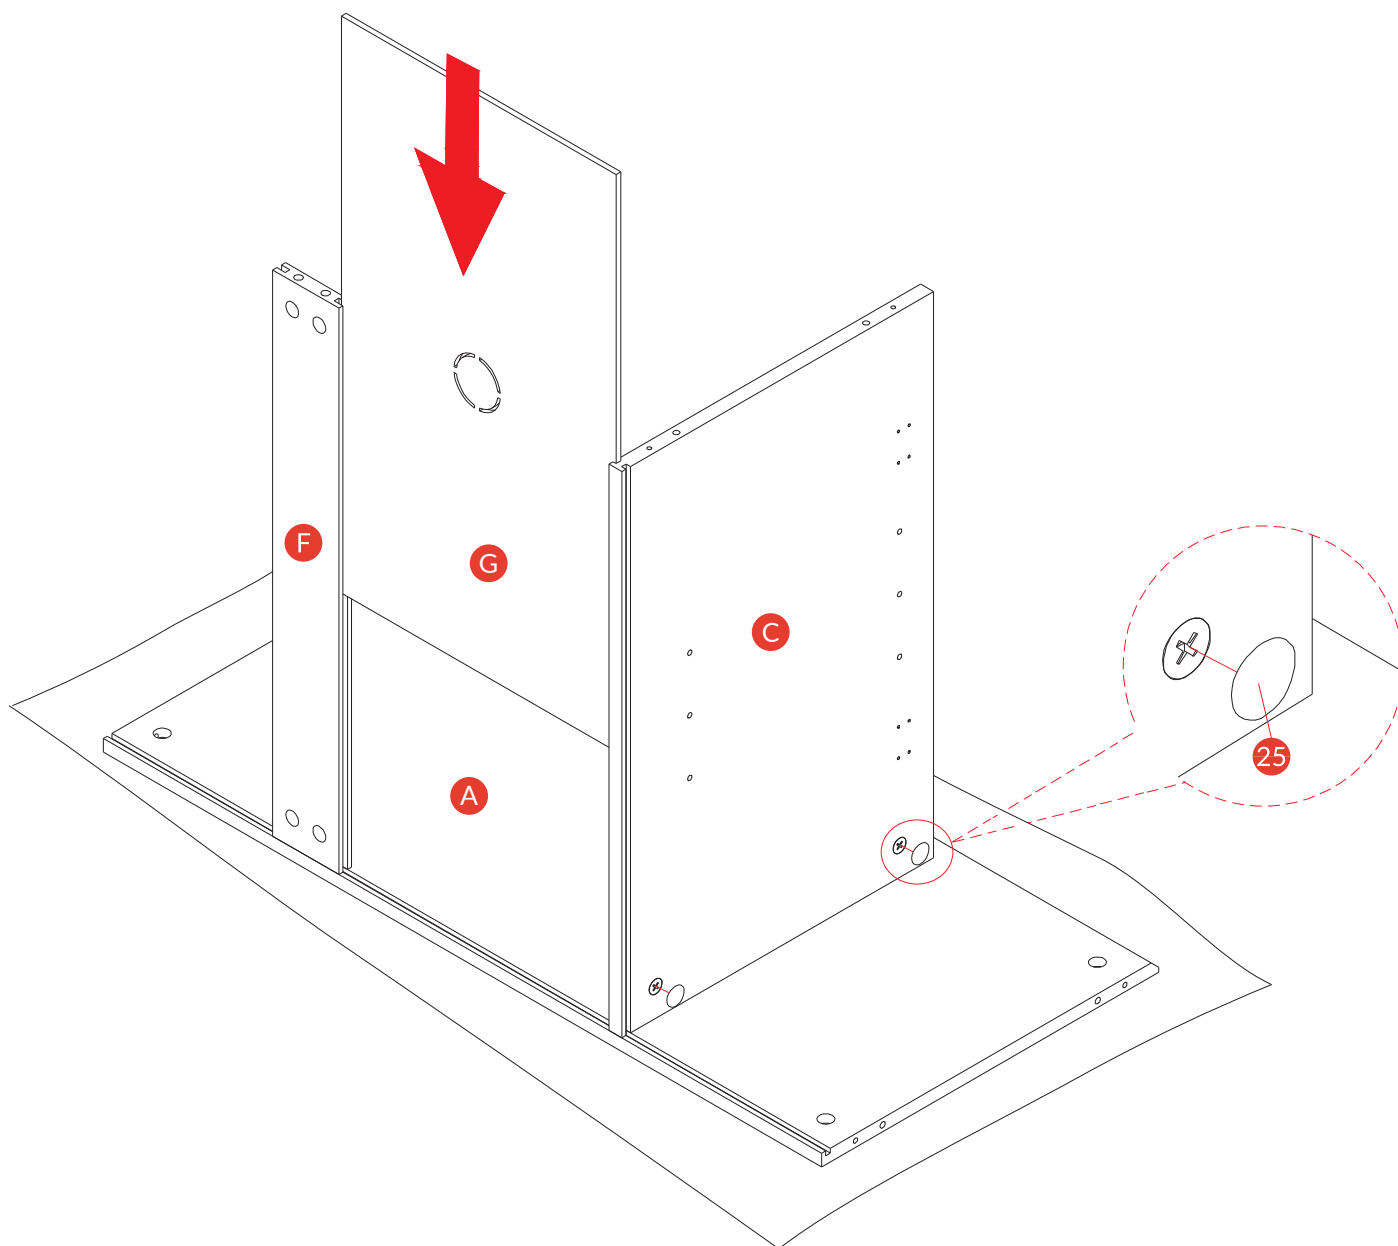

Step 05


Install wooden tip (9) into middle side panel (C). Insert screw (22) through base plate (E) and tighten with wrench (23). Install eccentric wheel (7) into pull rod (F) and secure with screwdriver (6).

7		x 2	eccentric wheel	9		x 2	Ø8x30mm	22		x 2	Ø6.3x40mm
6		x 1	Screwdriver	23		x 1	M4				

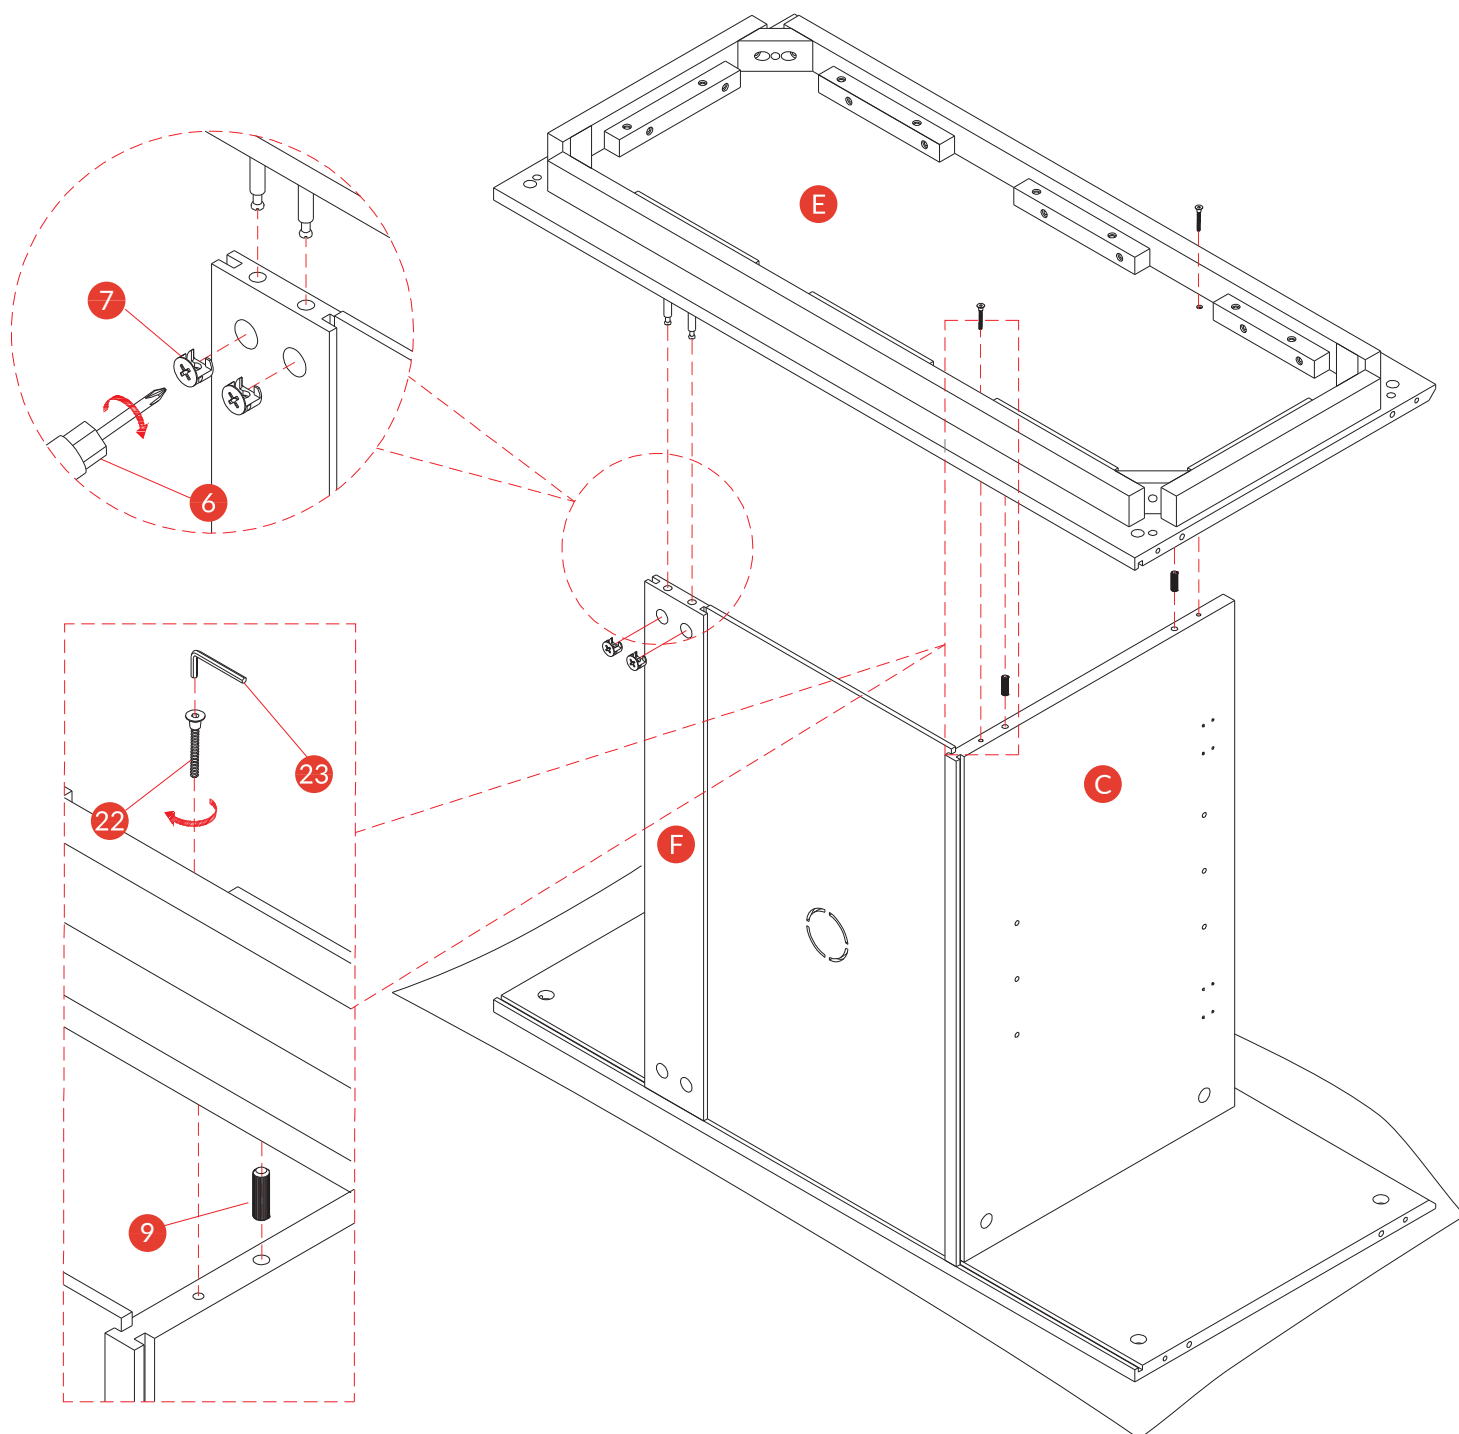

Step 06


Insert backplate (H) into the backplate slot

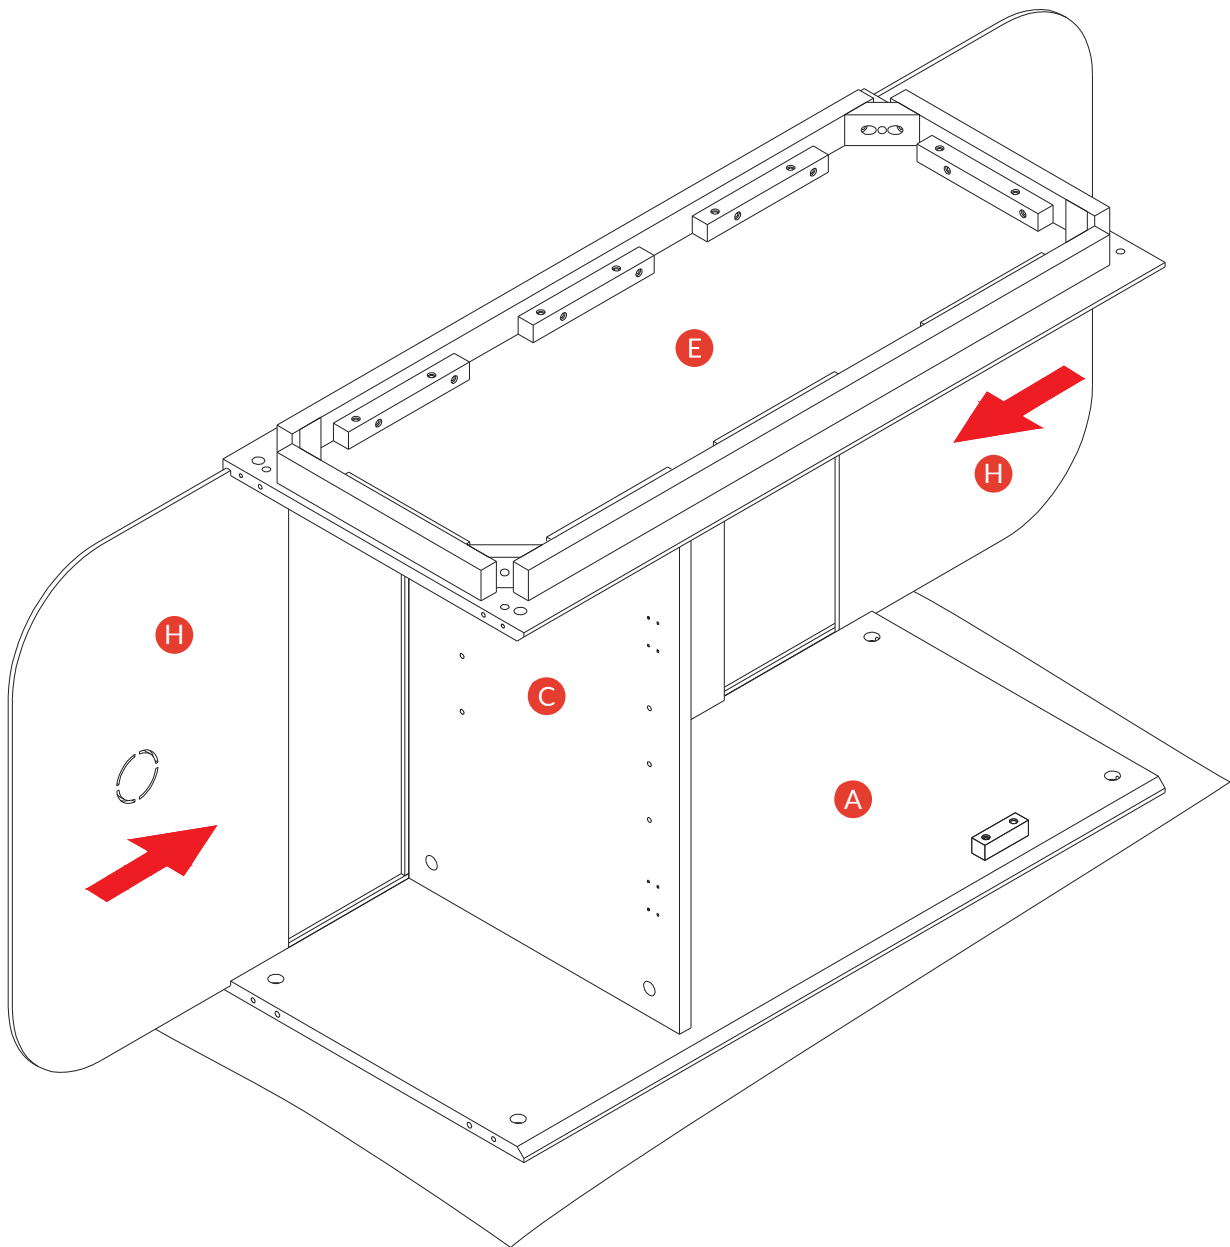

Step 07

Insert the wooden pin (9) into the corresponding holes of panel (A) and base(E). Install the eccentric wheel (7) into panel (A) and base (E), and tighten it with screwdriver (6). Place the Huanmei sticker (25) on the cam.


25	 x 2	Layer board support	7	 x 4	eccentric wheel
9	 x 4	Ø8x30mm	6	 x 1	Screwdriver

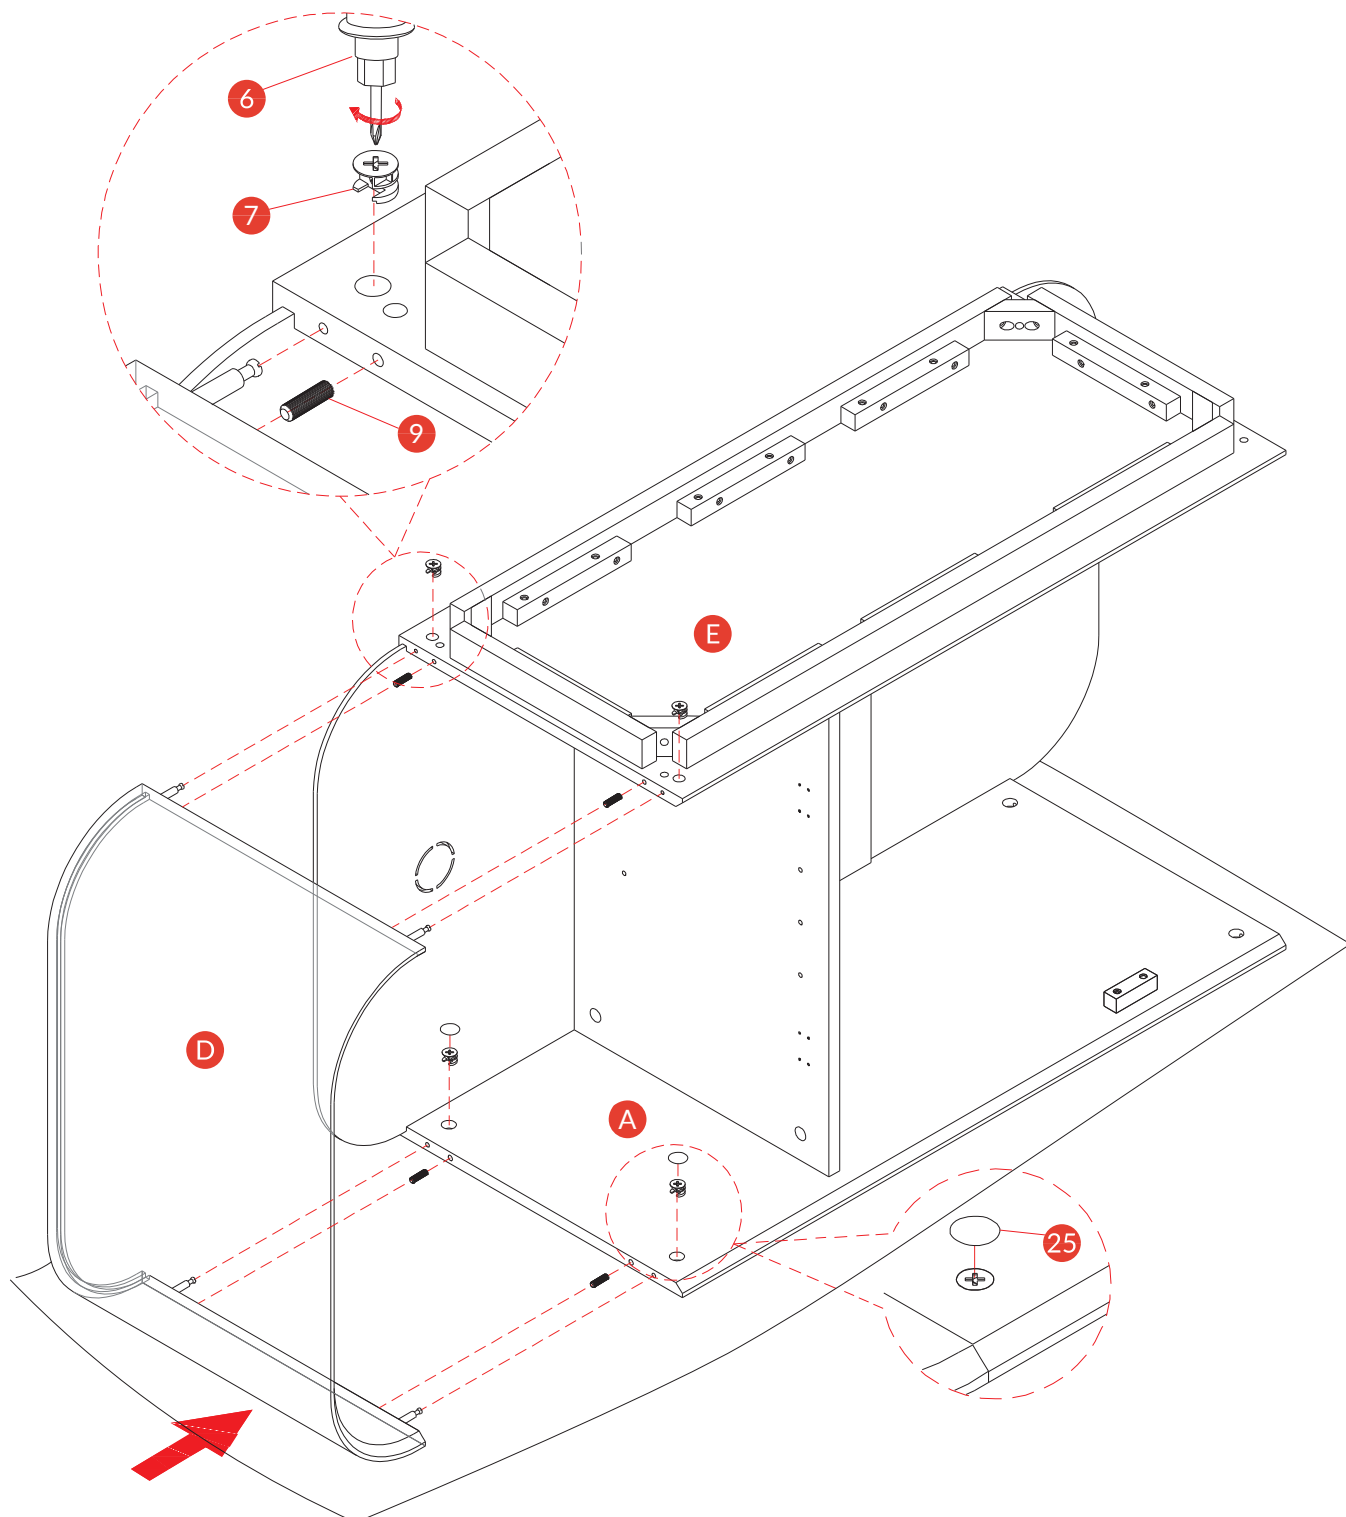

Step 08


Insert the wooden pin (9) into the corresponding holes of panel (A) and base (E). Install the eccentric wheel (7) into panel (A) and base (E), and tighten it with screwdriver (6). Place the Huanmei sticker (25) on the cam.


25		x 2	Layer board support	7		x 4	eccentric wheel
9		x 4	Ø8x30mm	6		x 1	Screwdriver

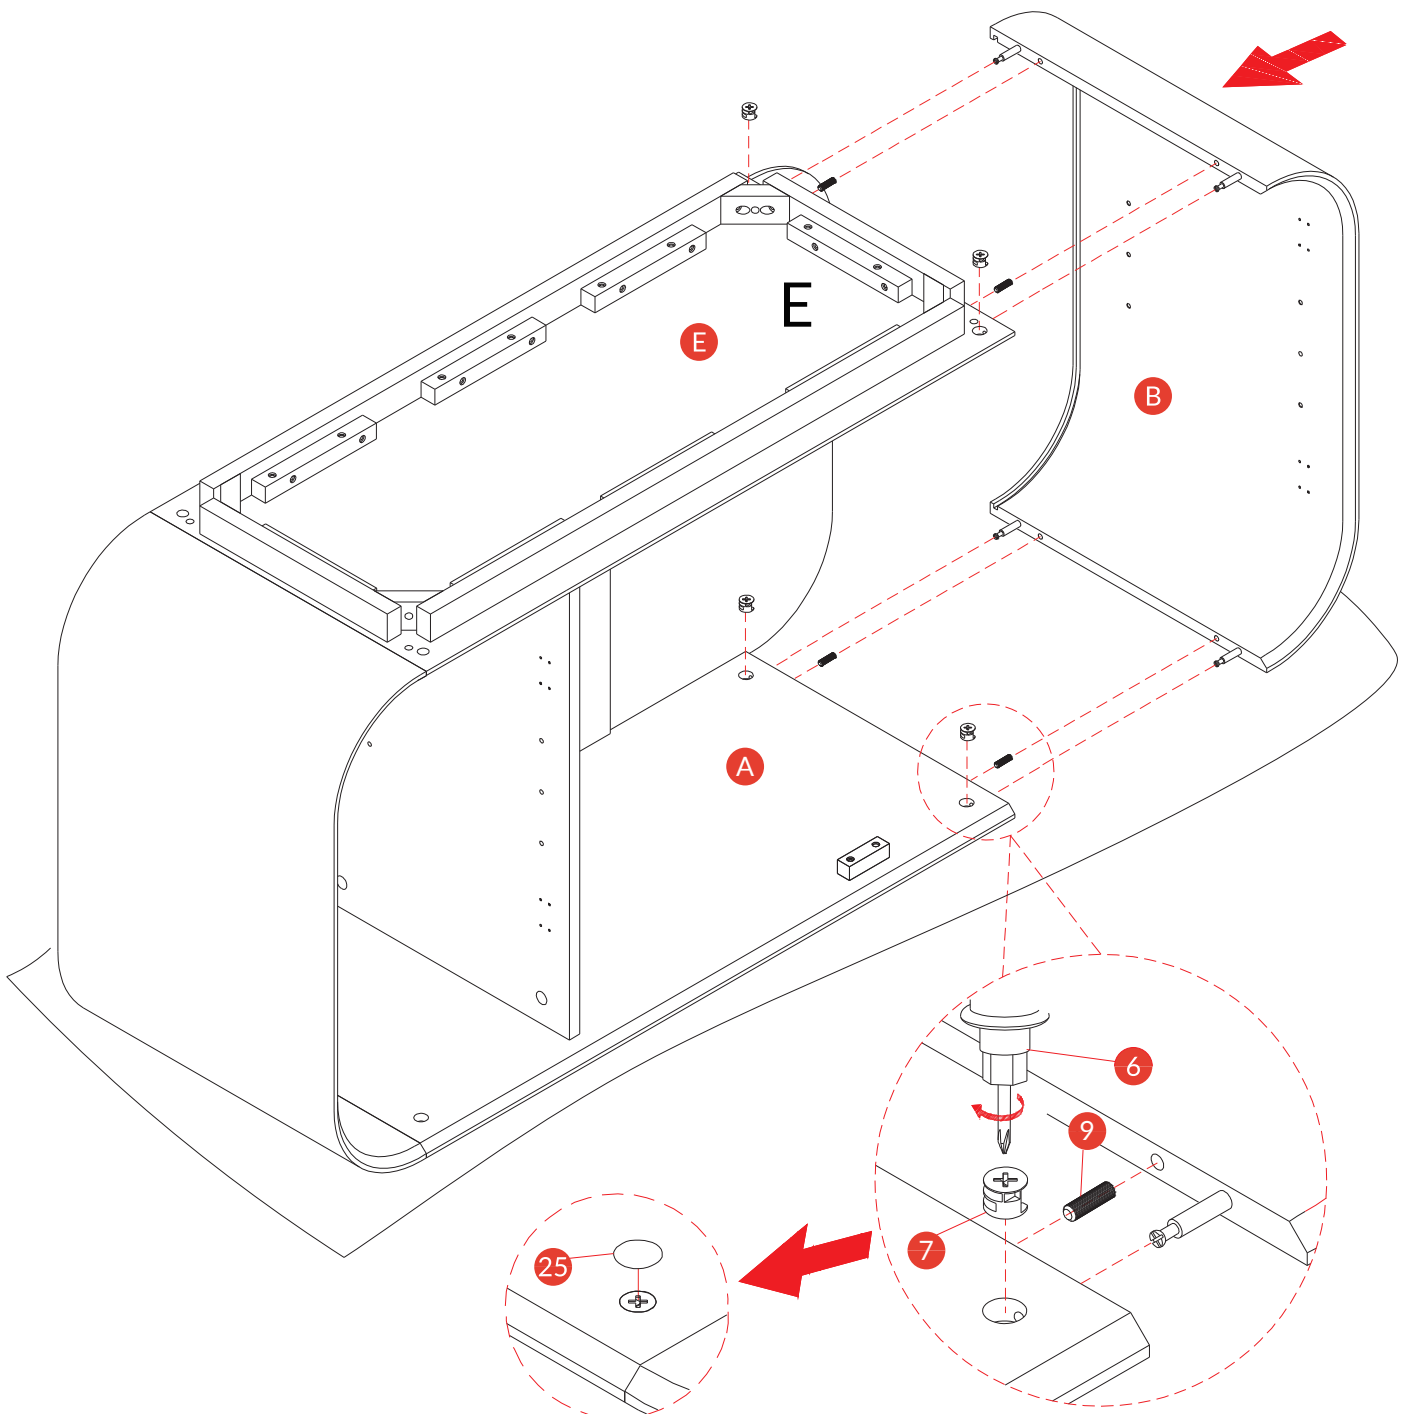

Step 09

Pass screw (17) through metal piece (16) and install it into panel (A) and side panel (B/D), then tighten with screwdriver (6).


17	 x 8	D3x14mm	16	 x 4	Screwdriver
6	 x 1	Screwdriver			

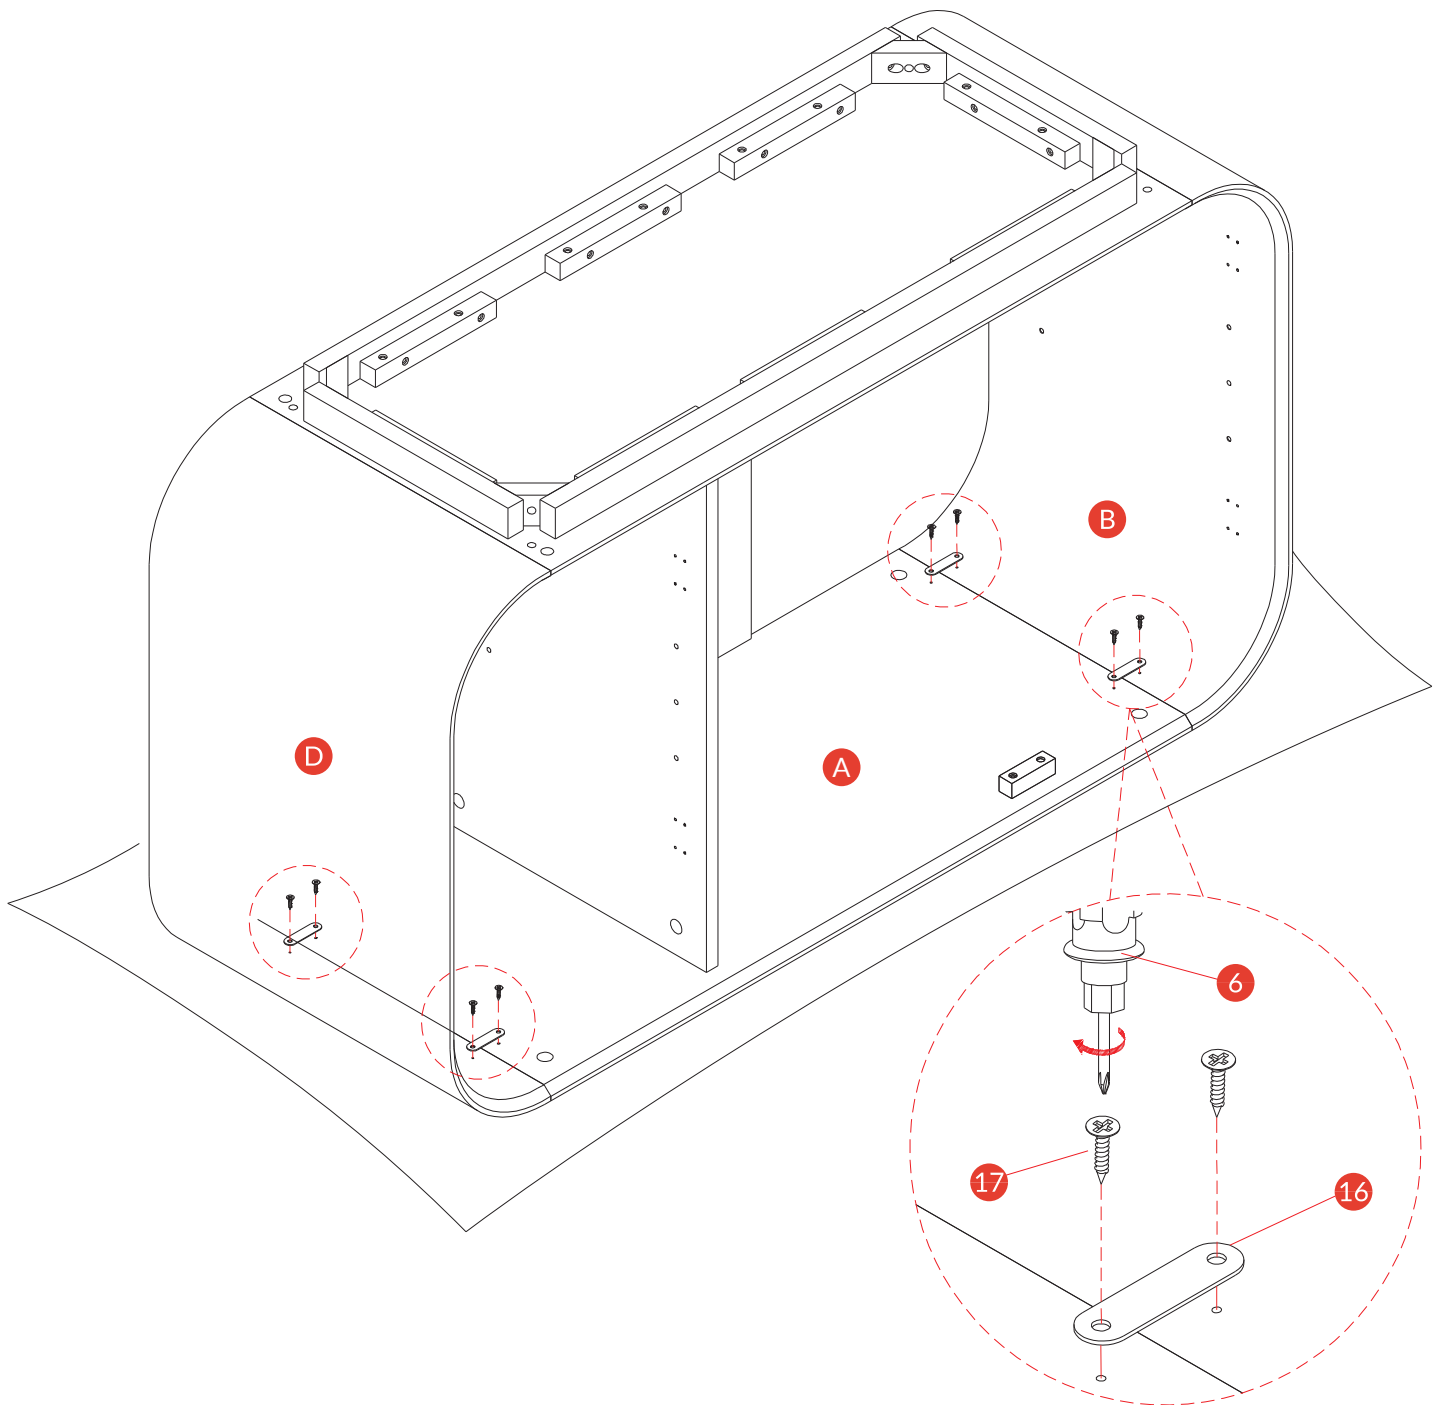

Step 10

Insert wooden peg (9) into baseboard (E), then attach leg (K) to the wooden peg position.


9	 x 4	Ø8x30mm
---	---	---------

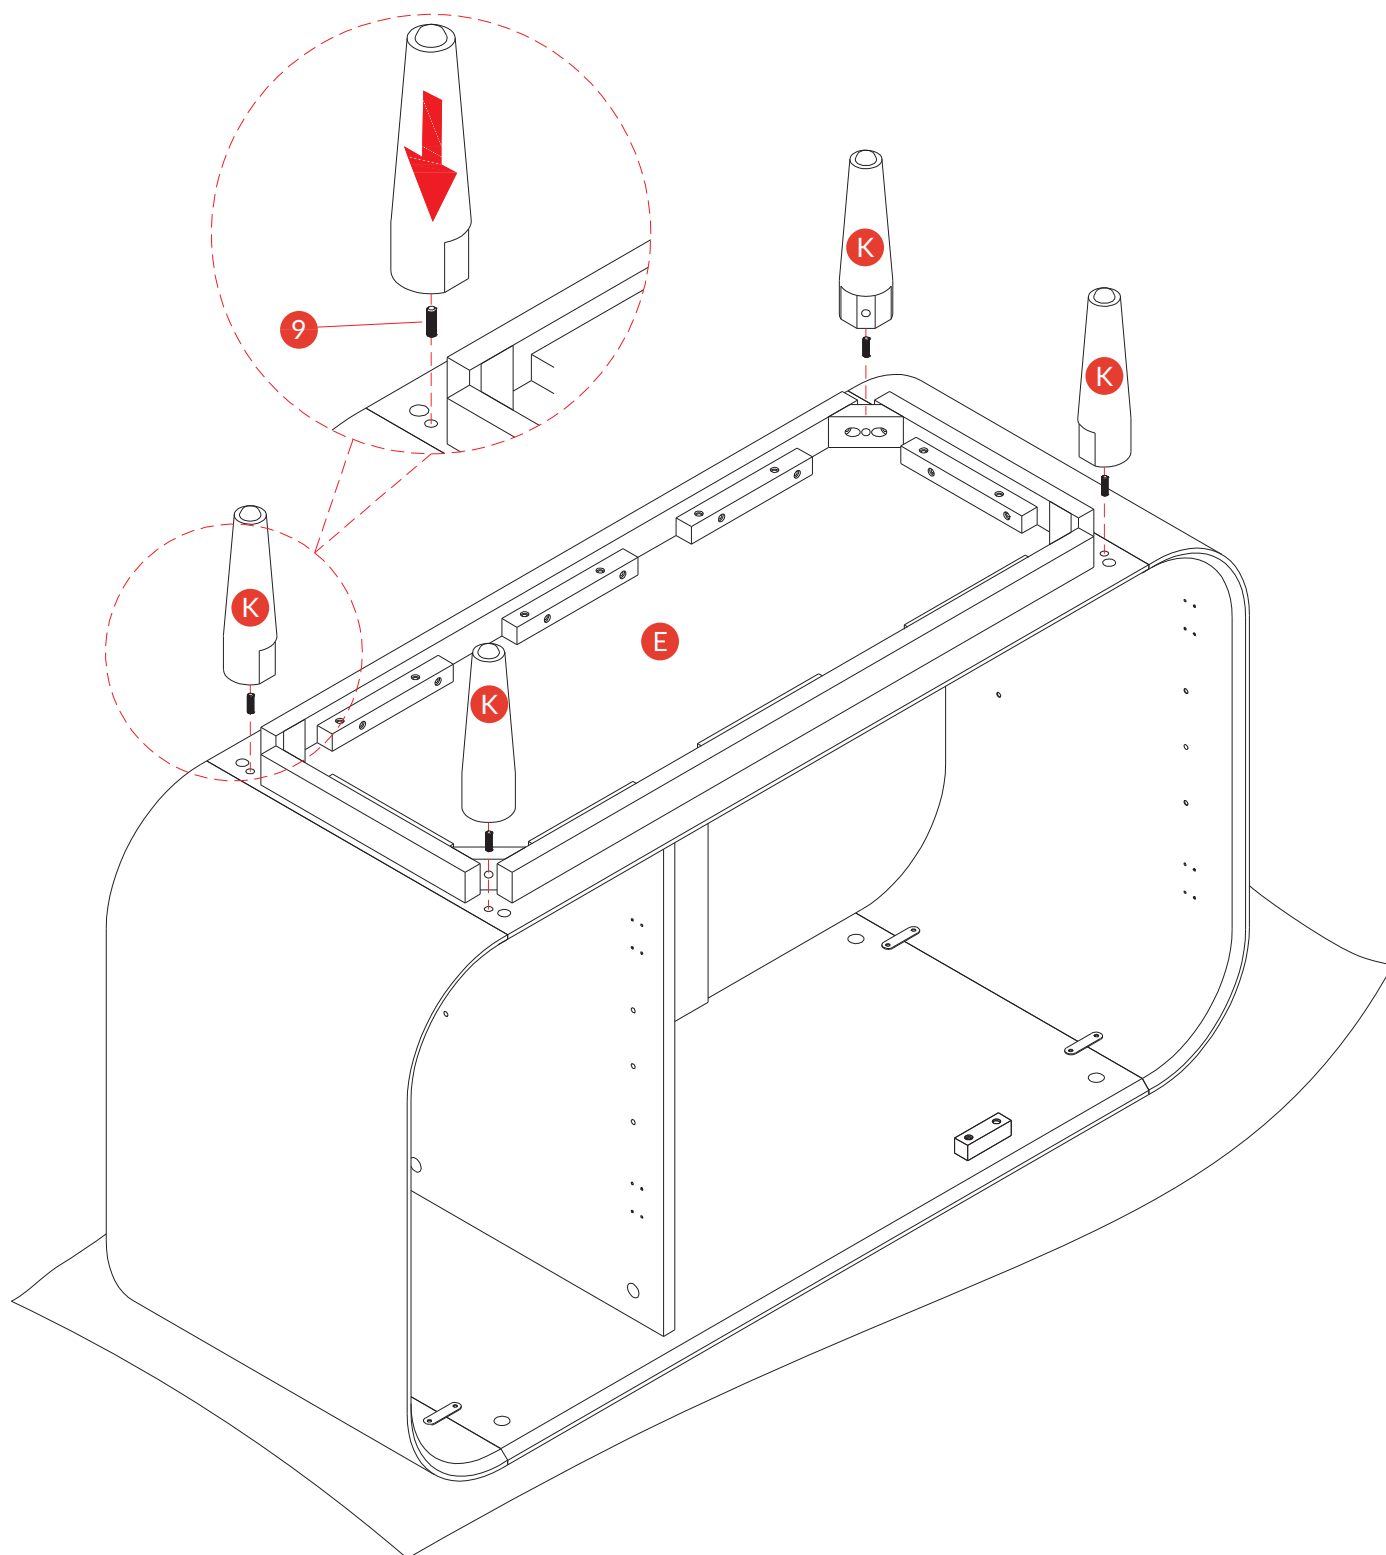

Step 11

Insert screw (20) through washer (19) and then through the foot hole on the base plate, aligning with the corresponding hole on leg (K). Tighten it with wrench (23).


19		x 4	Gasket	20		x 1	M6x40mm	23		x 1	M4
----	---	-----	--------	----	---	-----	---------	----	---	-----	----

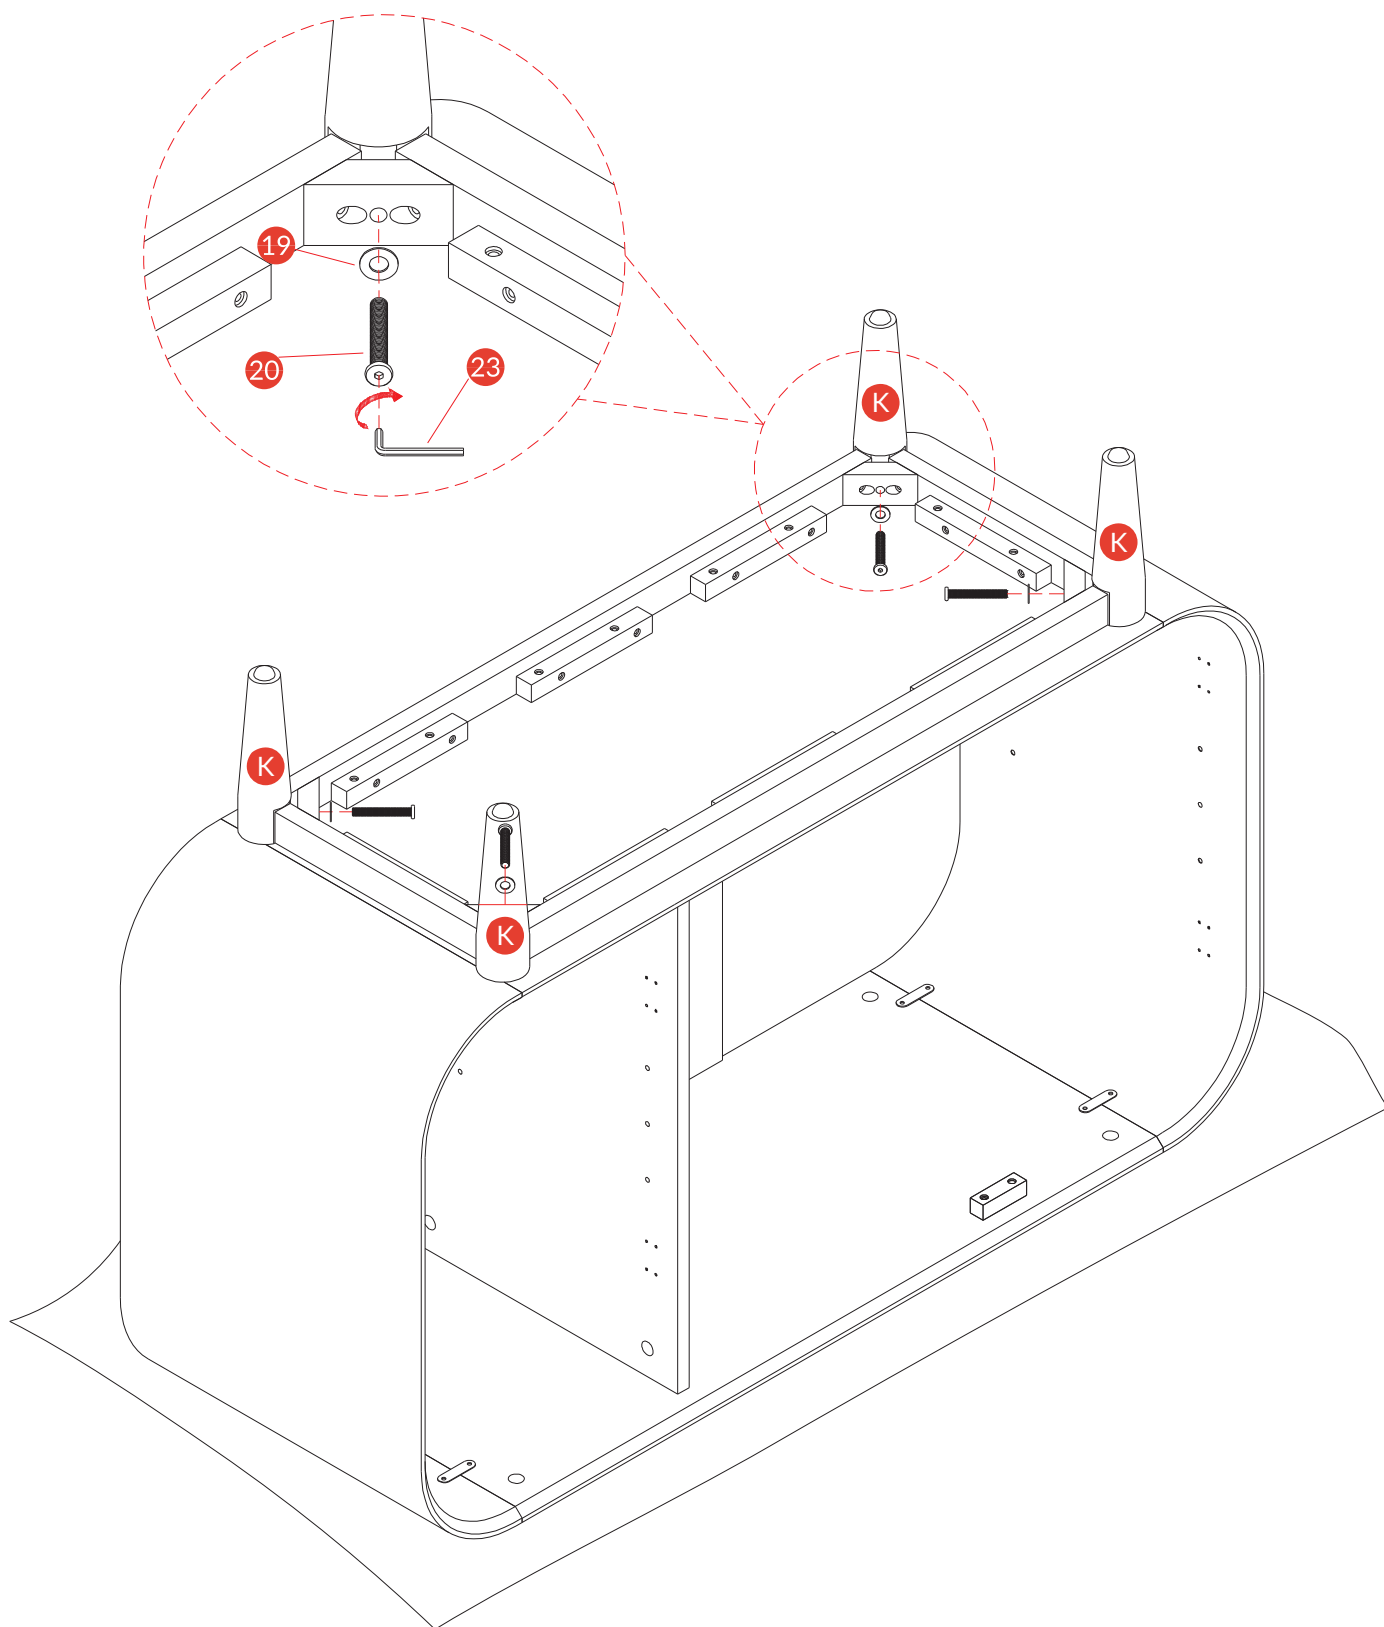




Step 12

Turn the adjustable feet to level the cabinet.

NOT PROVIDED

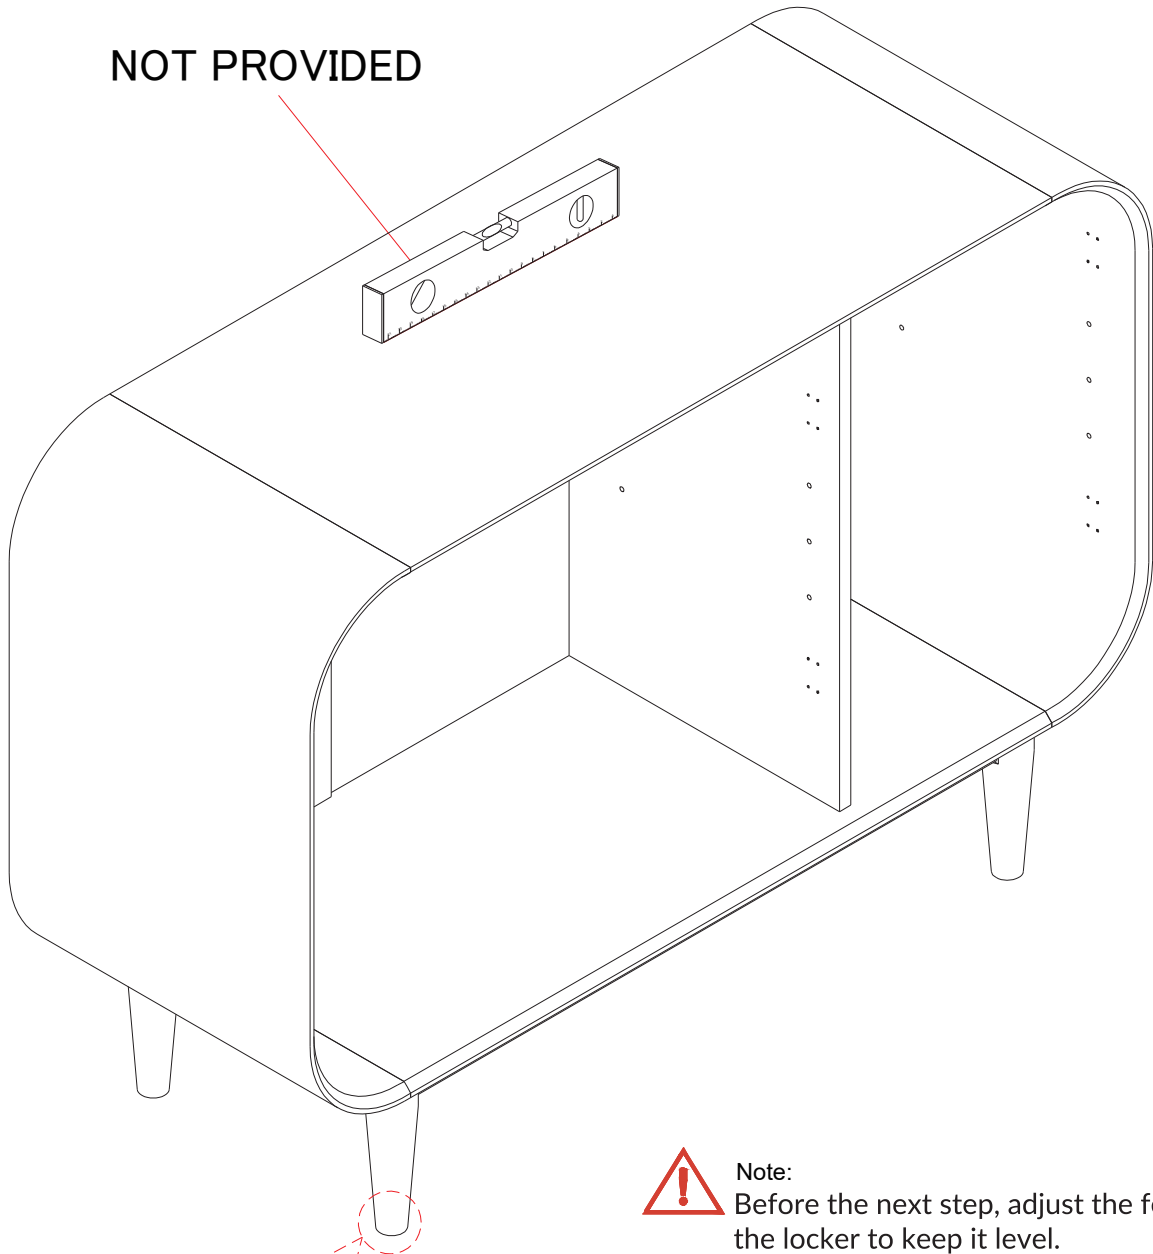



Note:
Before the next step, adjust the feet of
the locker to keep it level.

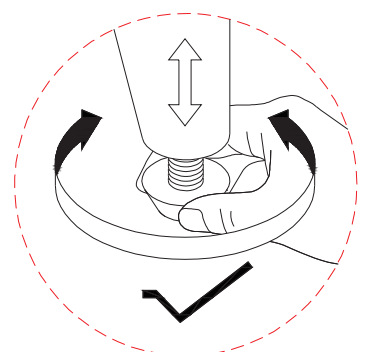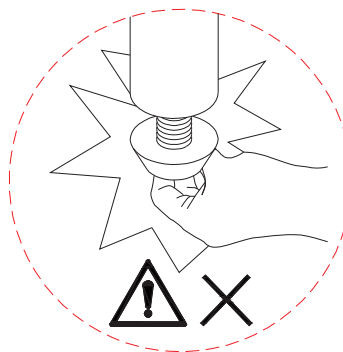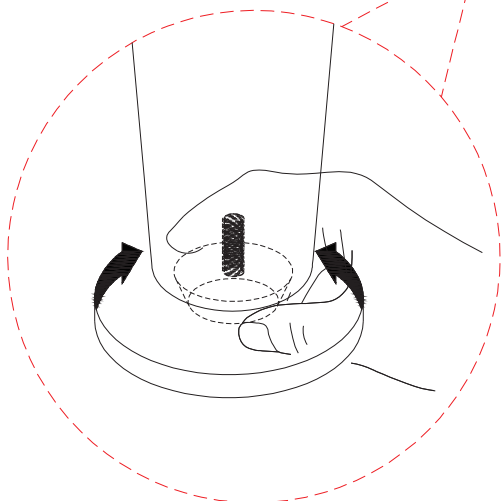

Step 13

Attach the back panel clip (24) into the back panel slot, then insert screw (17) and tighten with screwdriver (6).


24		x 20	Back plate buckle	17		x 20	D3x14mm	6		x 1	Screwdriver
----	---	------	-------------------	----	---	------	---------	---	---	-----	-------------

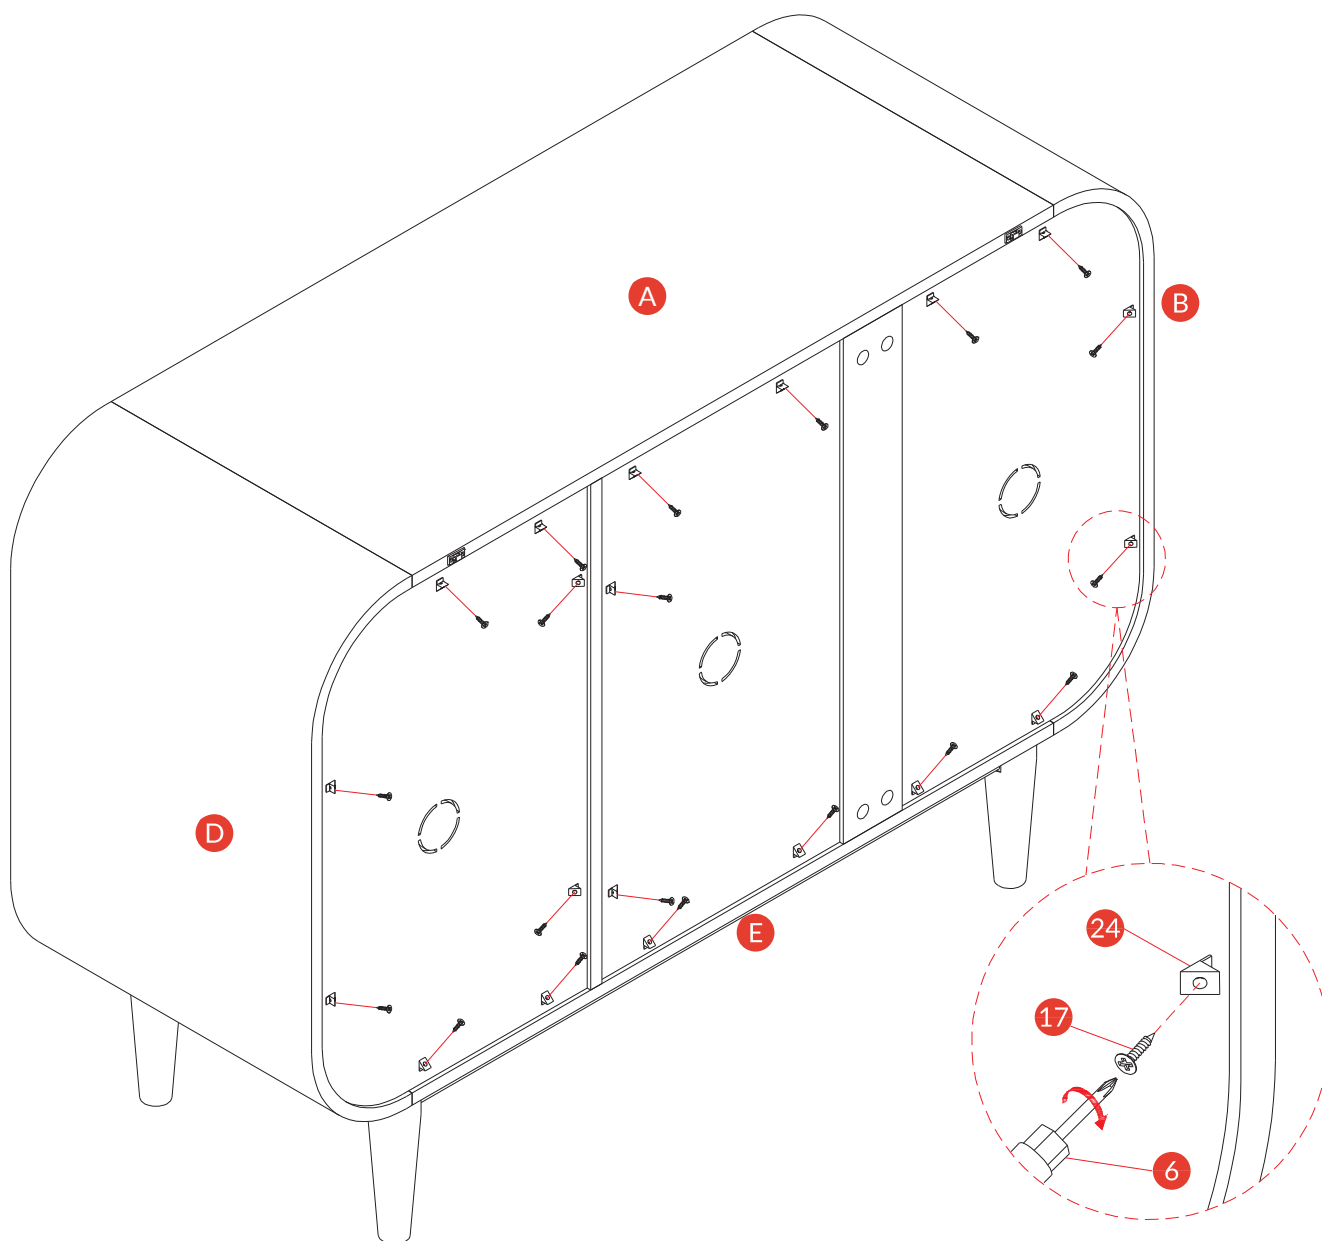

Step 14




Nail shelf (15) into the corresponding holes of side panels (B/C/D), then place shelves (I) and (J) into the cabinet and level them.


8		x 8	Layer board support
---	---	-----	---------------------

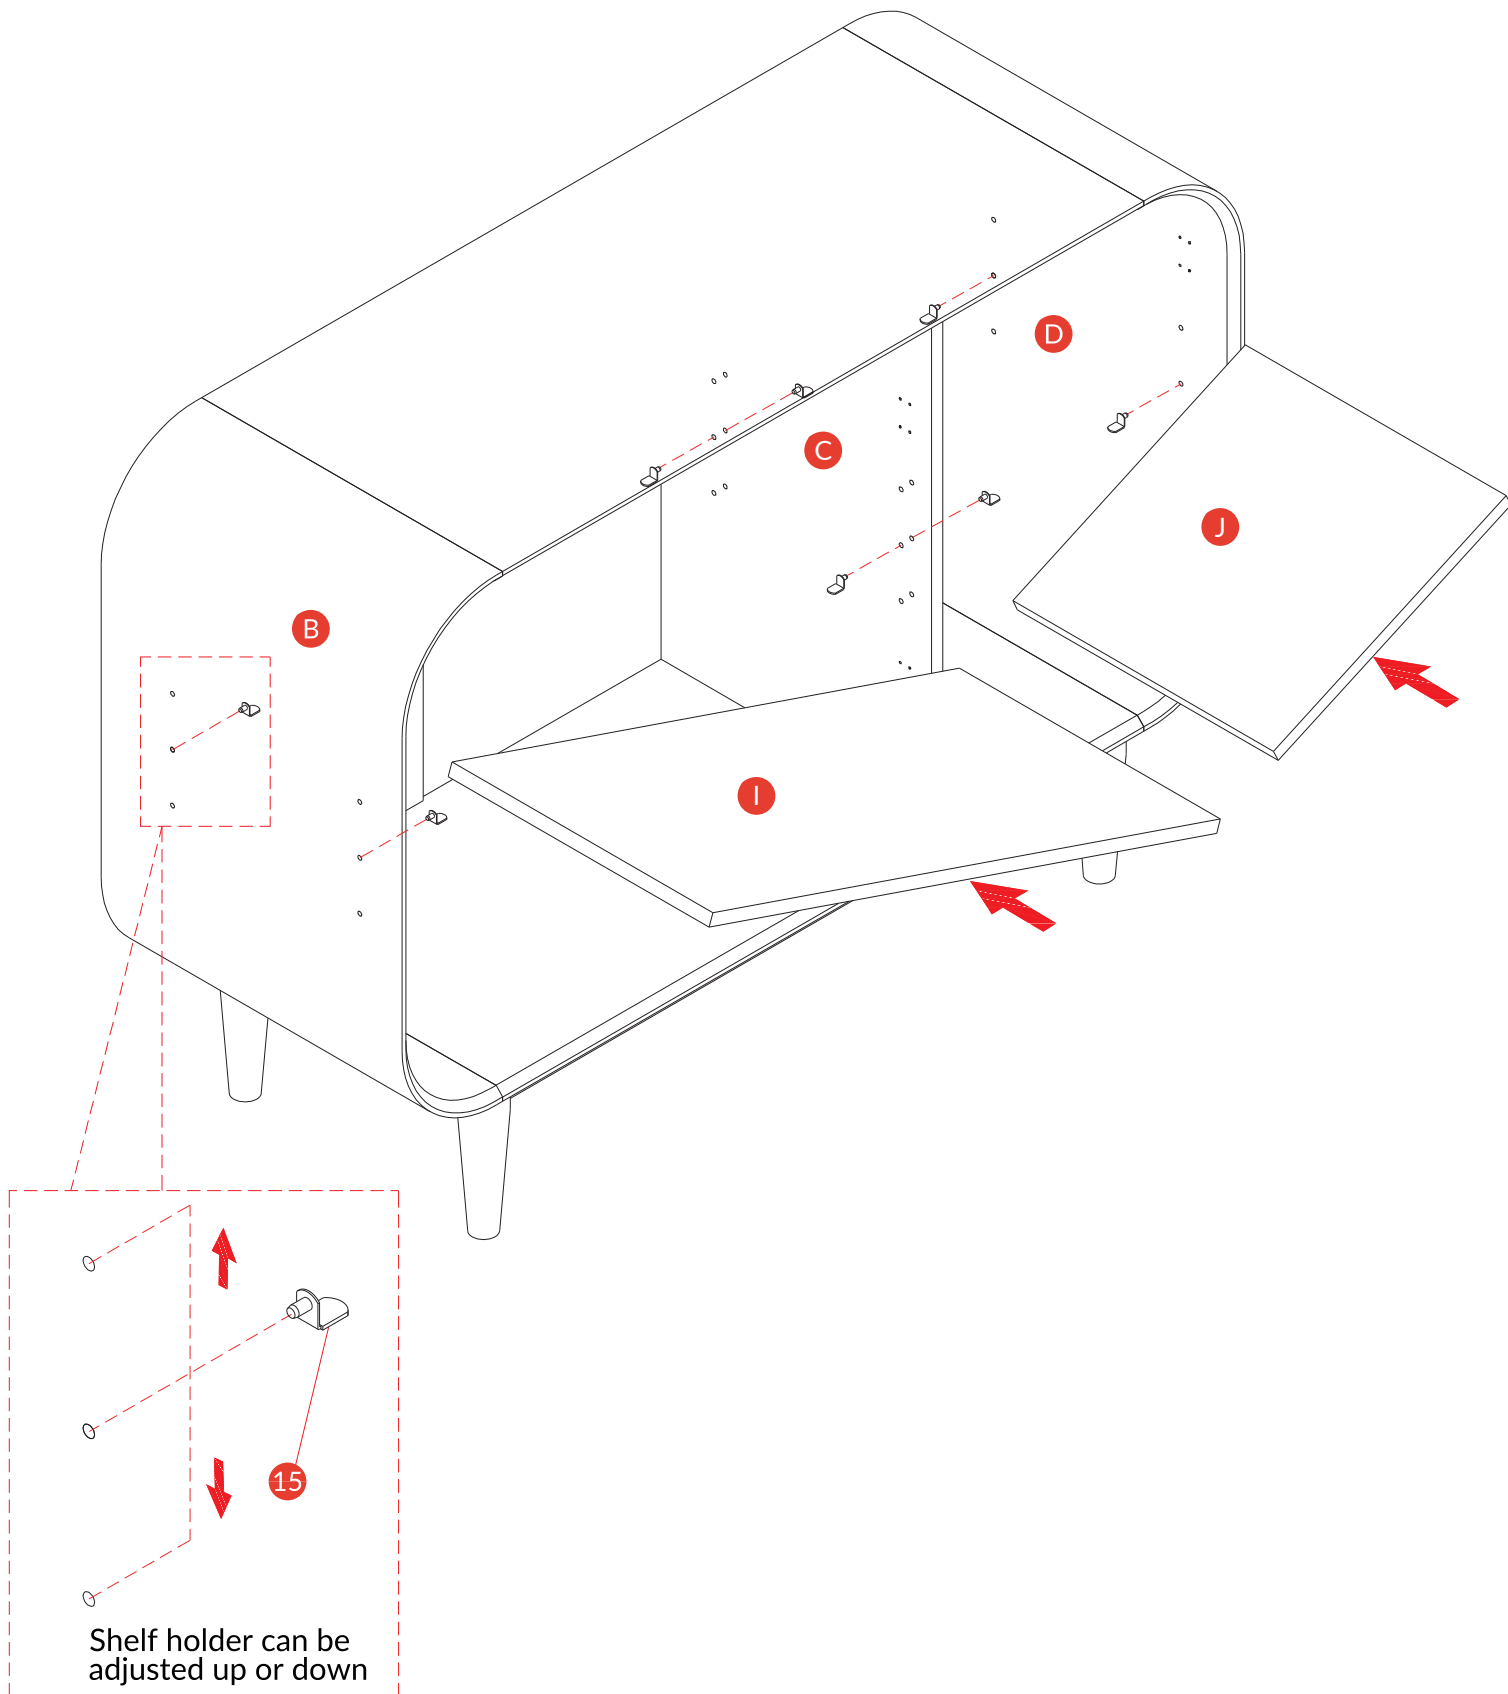

Step 15

Install hinge (12) into door panel (L), then insert screw (14), and tighten with screwdriver (6). Install hinge (13) onto door panel (M), then insert screw (14), and tighten with screwdriver (6). Pass handle screw (11) through door panel (L/M) and insert it into the corresponding handle hole, then tighten with screwdriver (6).

12	 x 2	Ø35 mm	14	 x 12	D4x16mm	11	 x 3	D4x18mm
13	 x 4	Ø35 mm	10	 x 3	Screwdriver	6	 x 1	Screwdriver

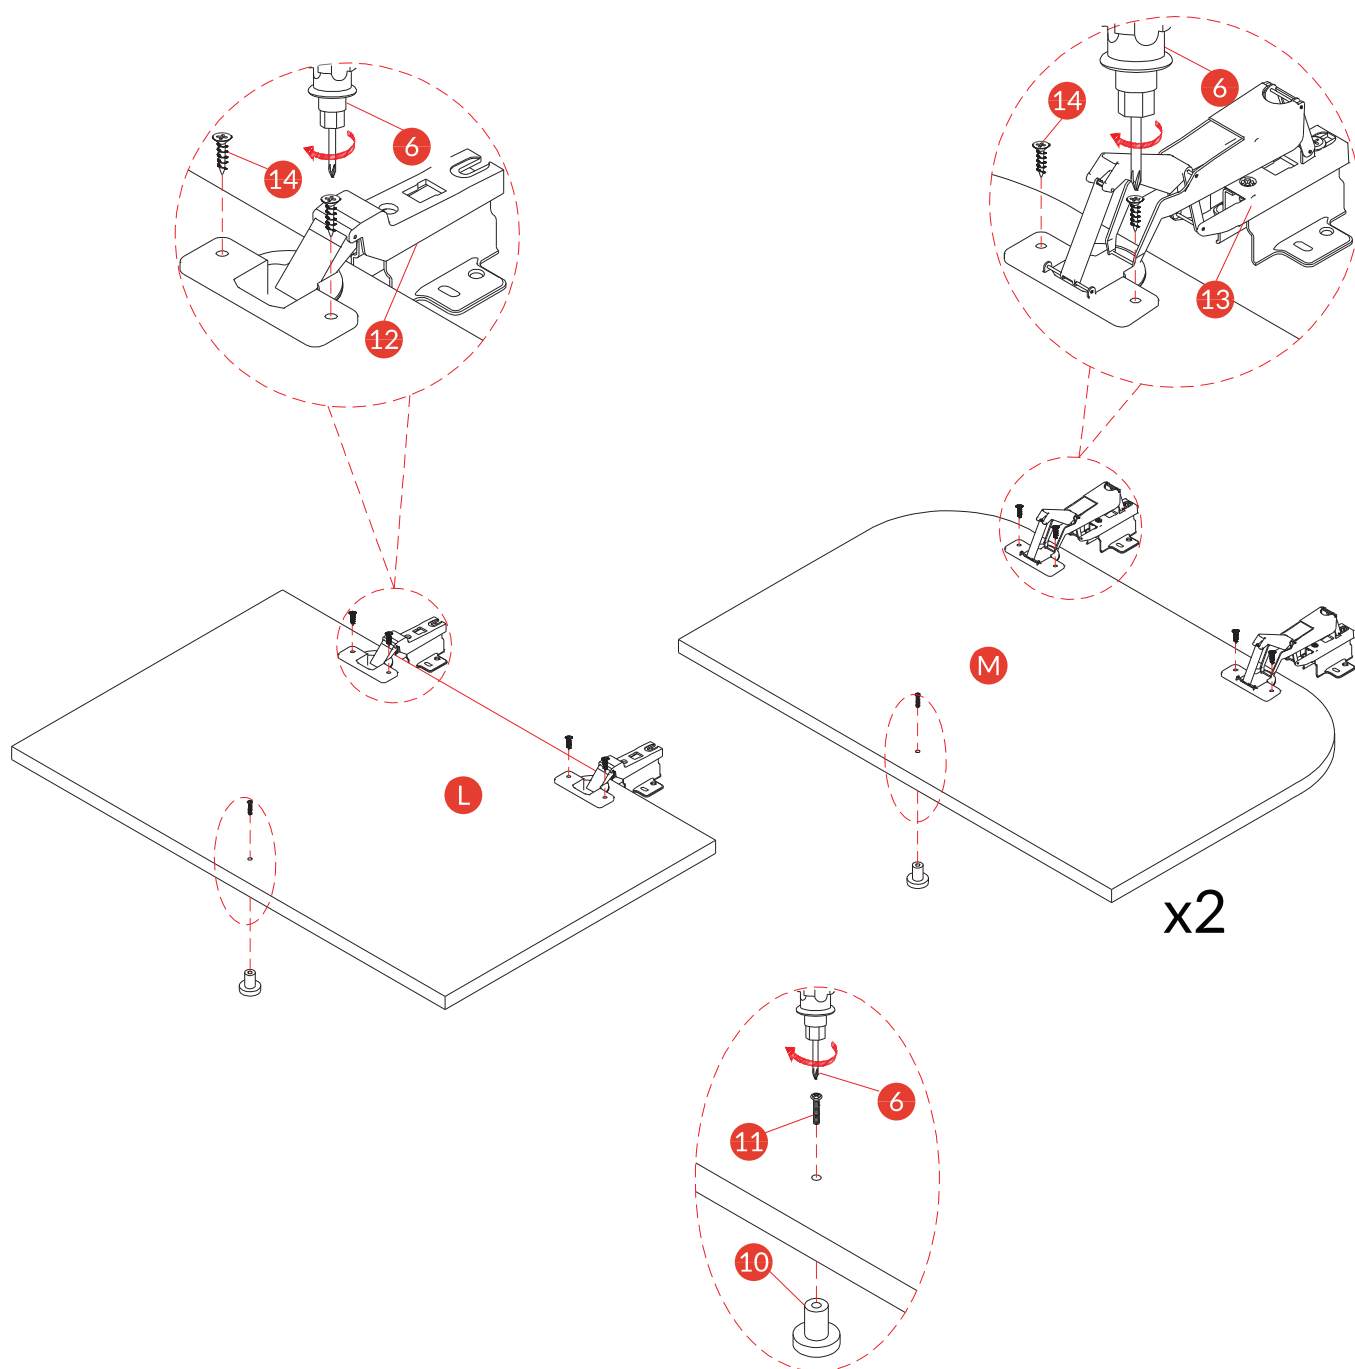


Step 16

Insert door panel (L) into the corresponding holes of side panel (C) and then screw in screw (14). Tighten with screwdriver (6)

Insert door panel (M) into the corresponding holes of side panel (D) and then screw in screw (14). Tighten with screwdriver (6).


14	 x 16	M4x16mm	6	 x 1	Screwdriver
----	--	---------	---	---	-------------

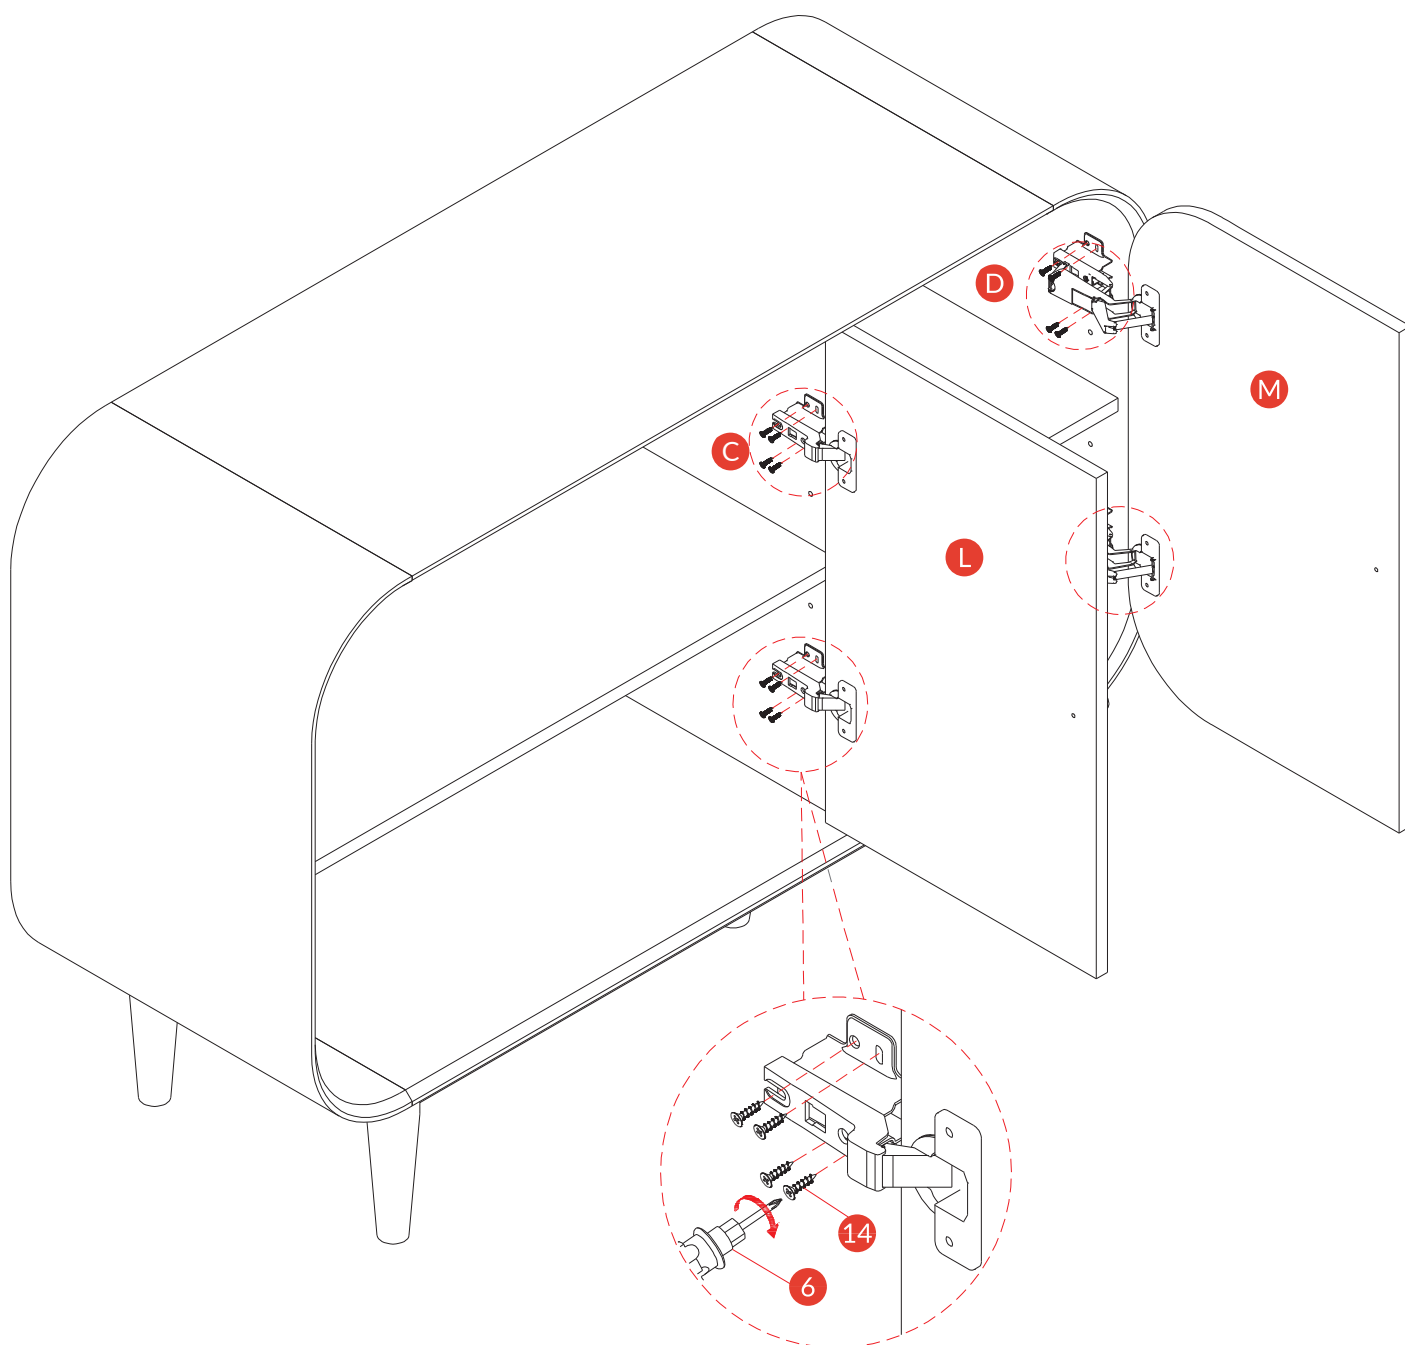

Step 17


Insert door panel (M) into the corresponding holes of side panel then screw in screw (14). Tighten with screwdriver (6).

14	 x 16	M4x16mm	6	 x 1	Screwdriver
----	--	---------	---	---	-------------

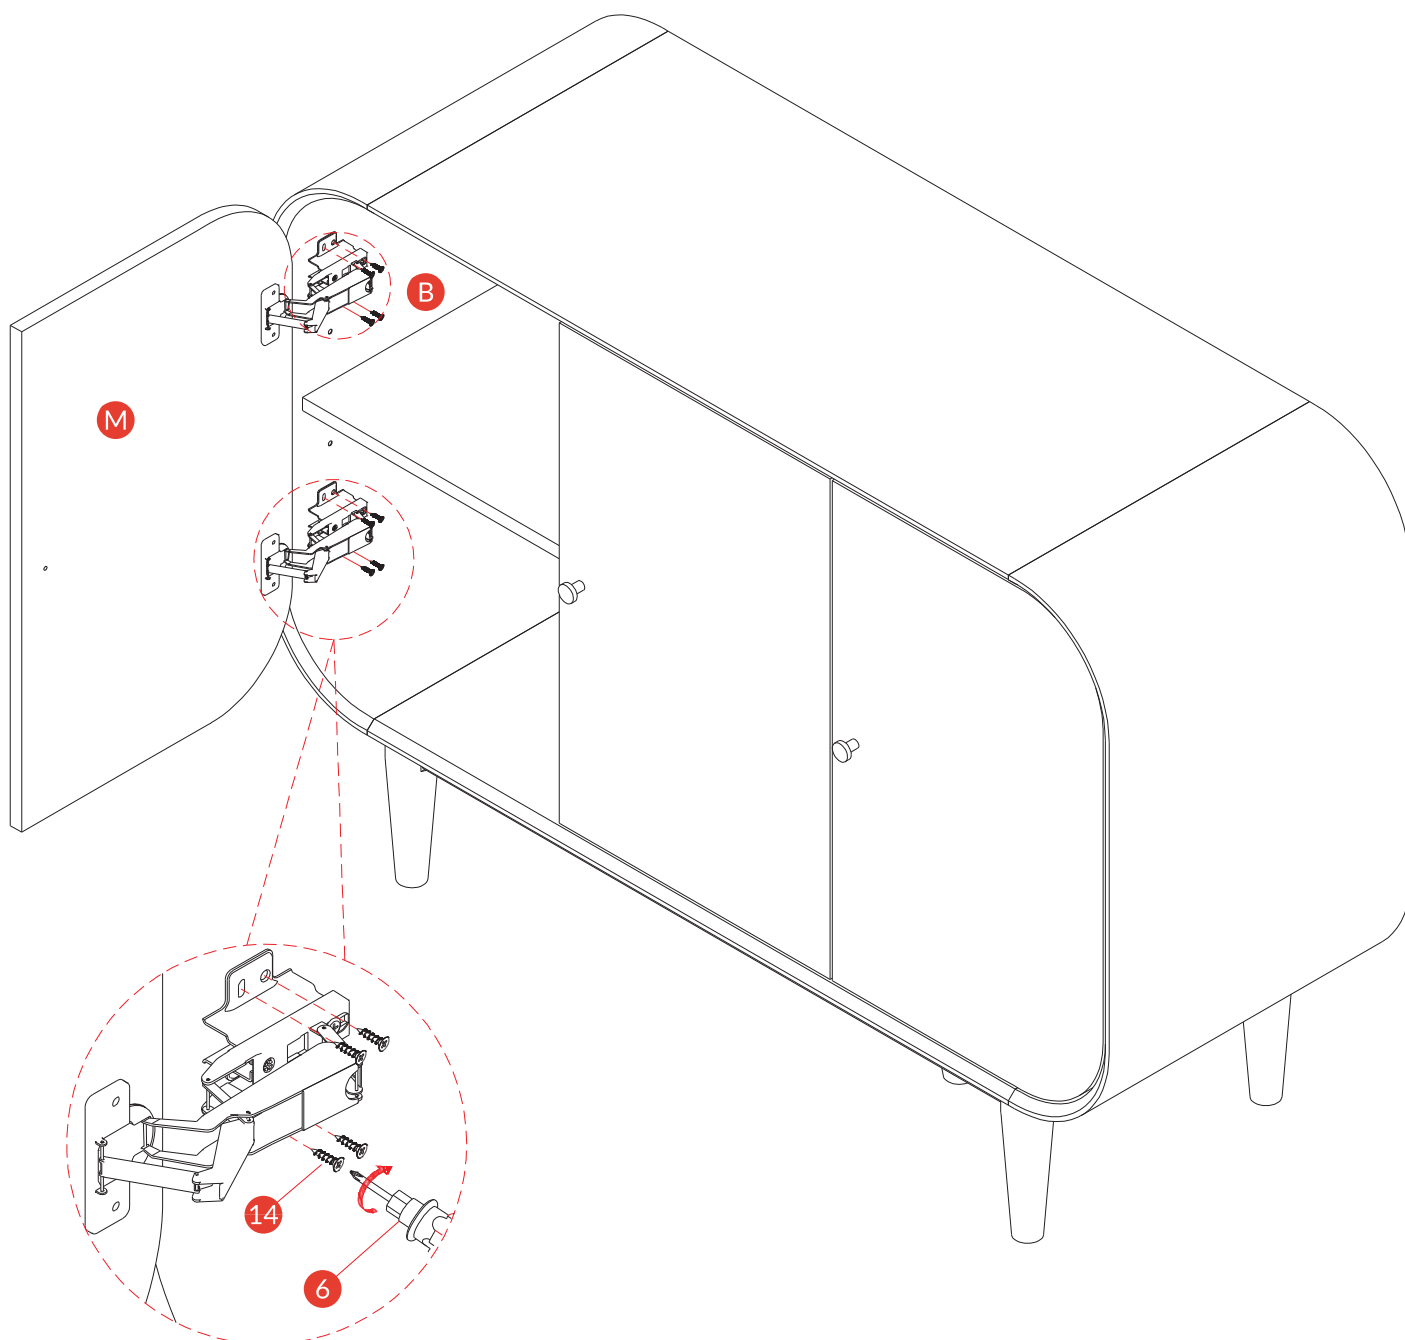


Door Hinge Adjustment Instructions


Concealed hinges are three-way adjustable.

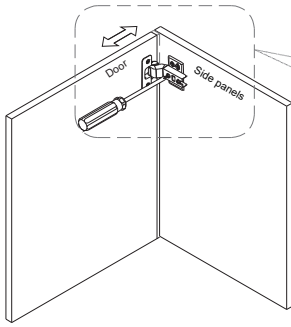


Horizontal by screw adjustment!

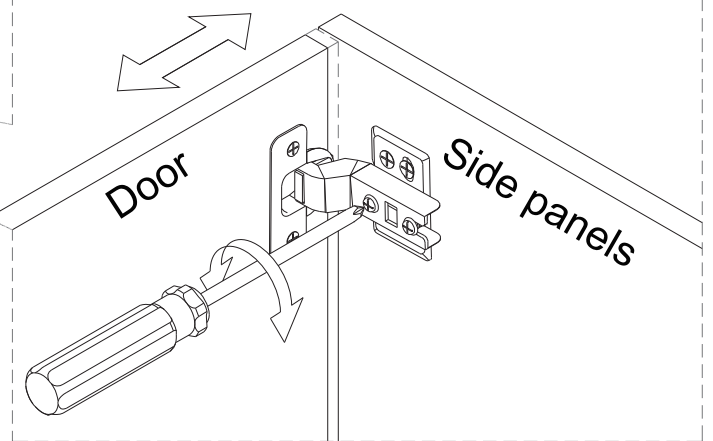


Concealed hinges are three-way adjustable.

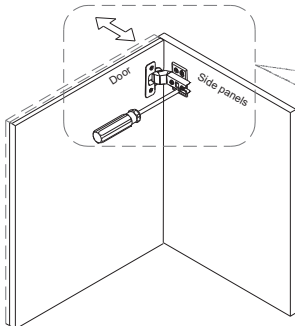


In-and-out by loosening the hinge arm mounting screw or via cam adjustment!

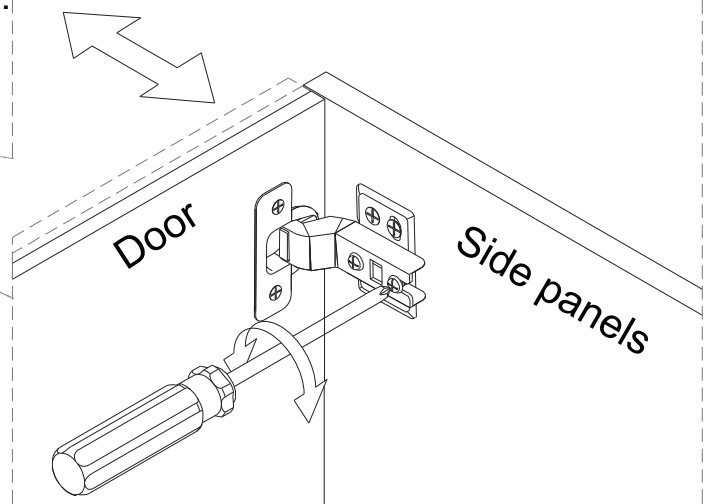

Concealed hinges are three-way adjustable.

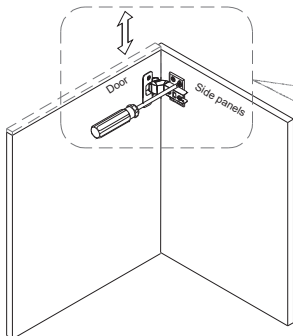


Vertical via slots in the mounting plate or via cam adjustment!

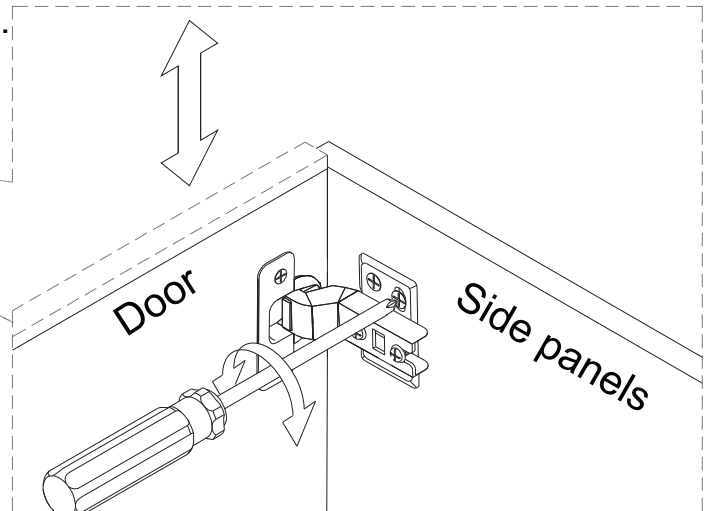

Step 18


Pass screw (2) through the anti-tilt part (1) and attach it to the corresponding position on the panel(A), then tighten it with screwdriver (6).



2	 x 4	D4x20mm
1	 x 2	Anti-tip componeng
6	 x 1	Screwdriver

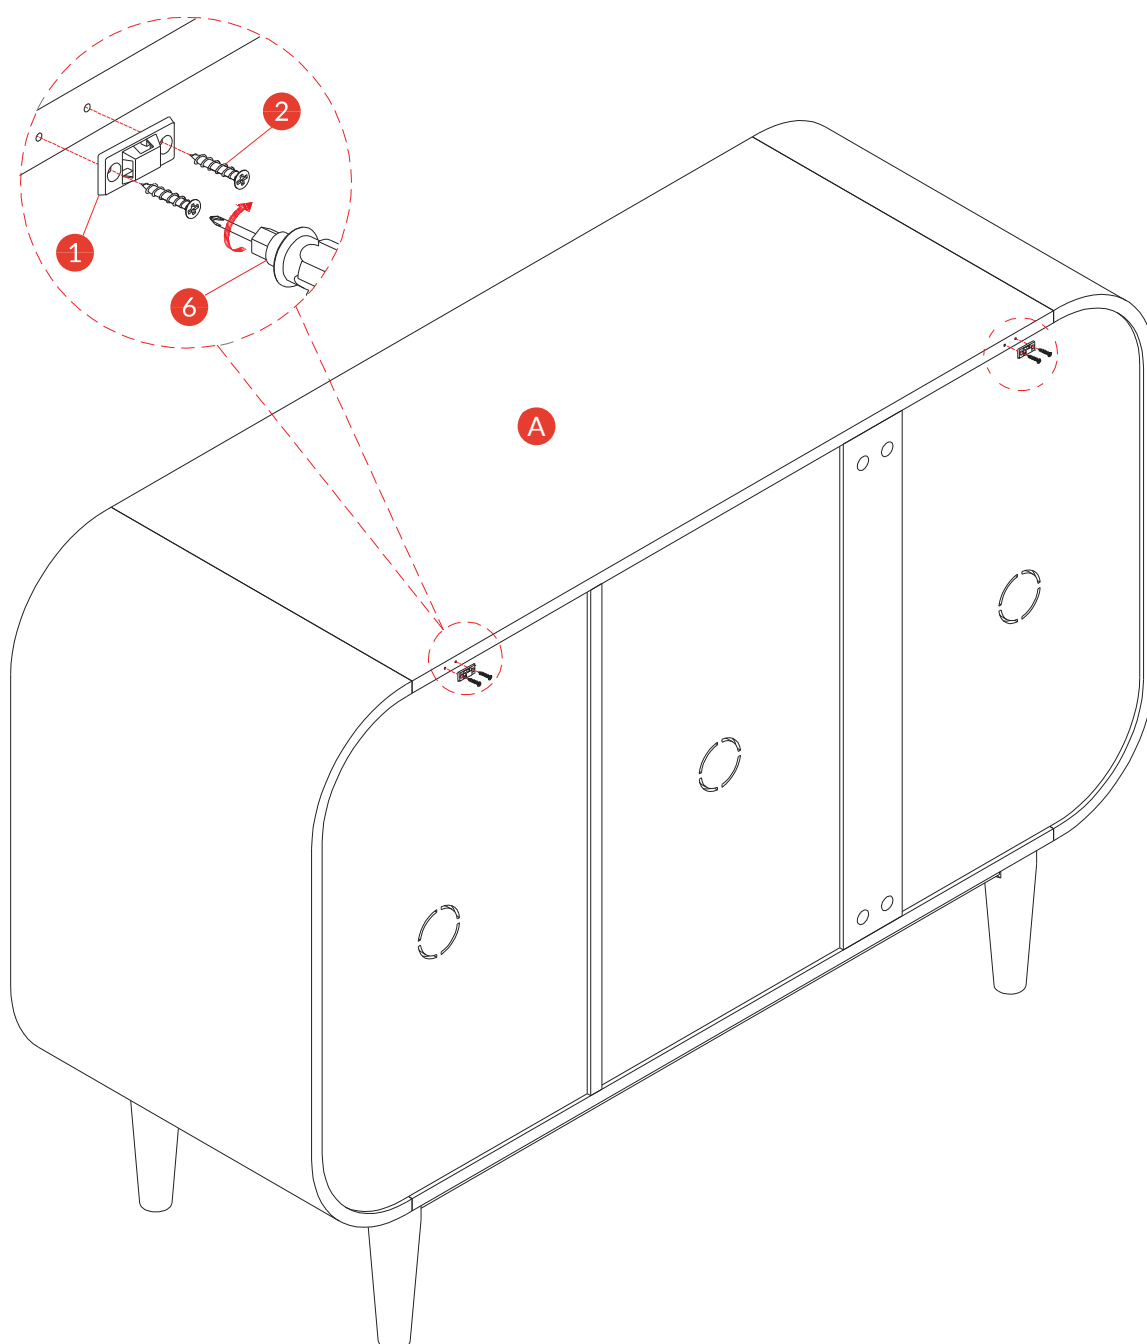


Step 19

Install Anti-tip device (1) to the wall in this step.


5		x 4	D4x40mm	1		x 2	Anti-tip componeng
4		x 4	L=30mm	6		x 1	Screwdriver

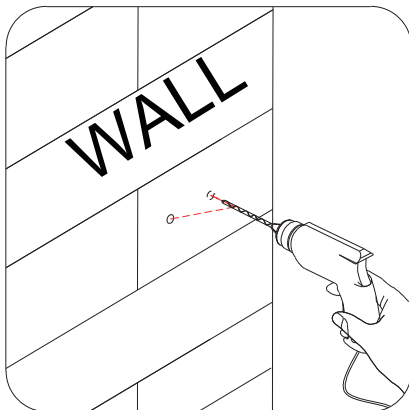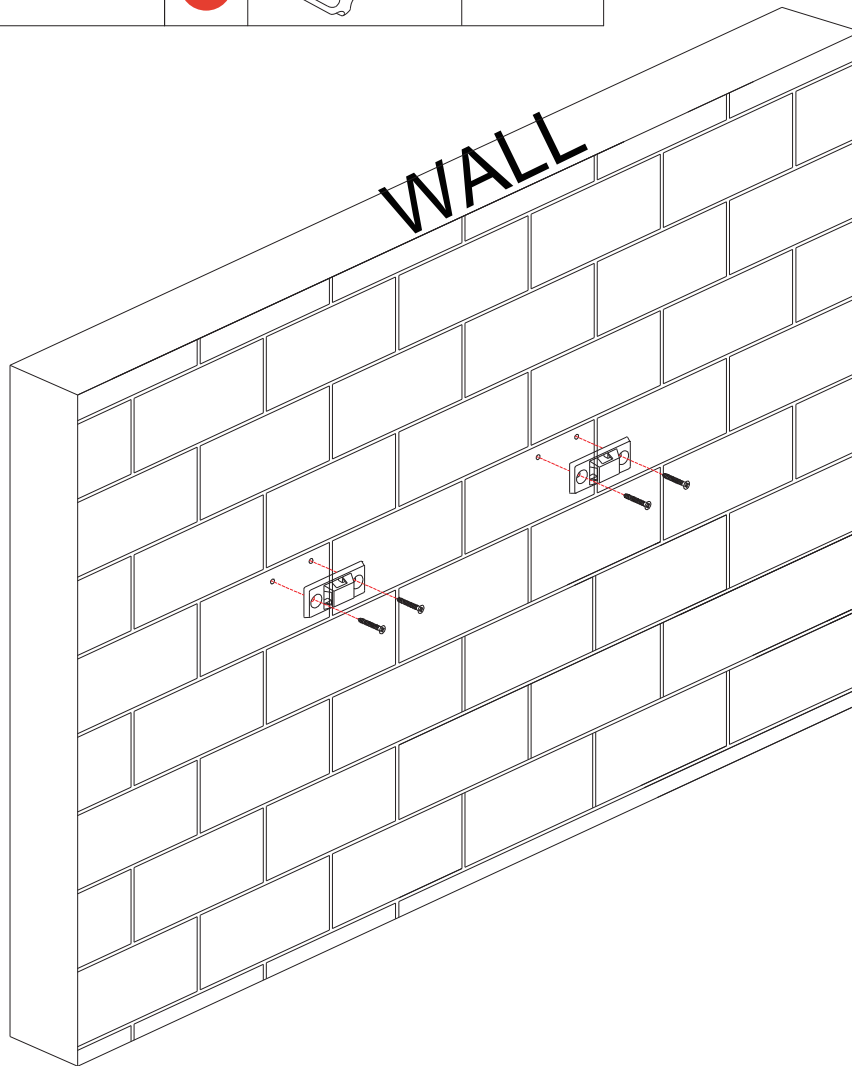

1. Drill a hole in the wall with an electric drill.

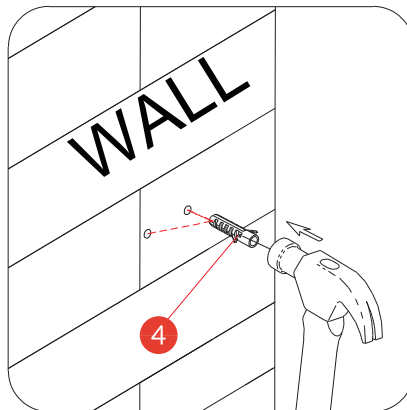

2. Tap the plastic wall anchor into the hole with a hammer.

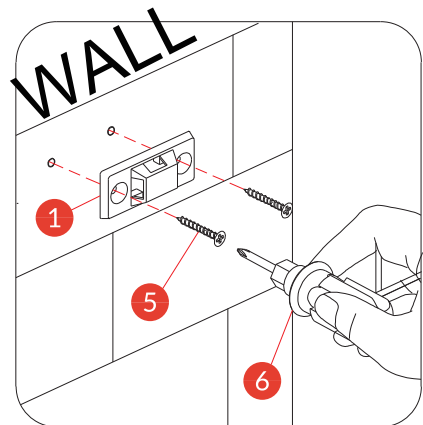

3. Secure the Anti-tip device 1 to the wall with screws 5.

Step 20

WARNING

Children have died from furniture tipover.

To reduce the risk of furniture tipover:

- ALWAYS install Anti-tip device provided.
- For use with televisions weighing 35 lb or less. Use with heavier televisions may result in instability causing tip-over resulting in death or serious injury.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heaviest items in the lowest drawers.

