
Galvanized Steel Arrow Carport

ASSEMBLY MANUAL

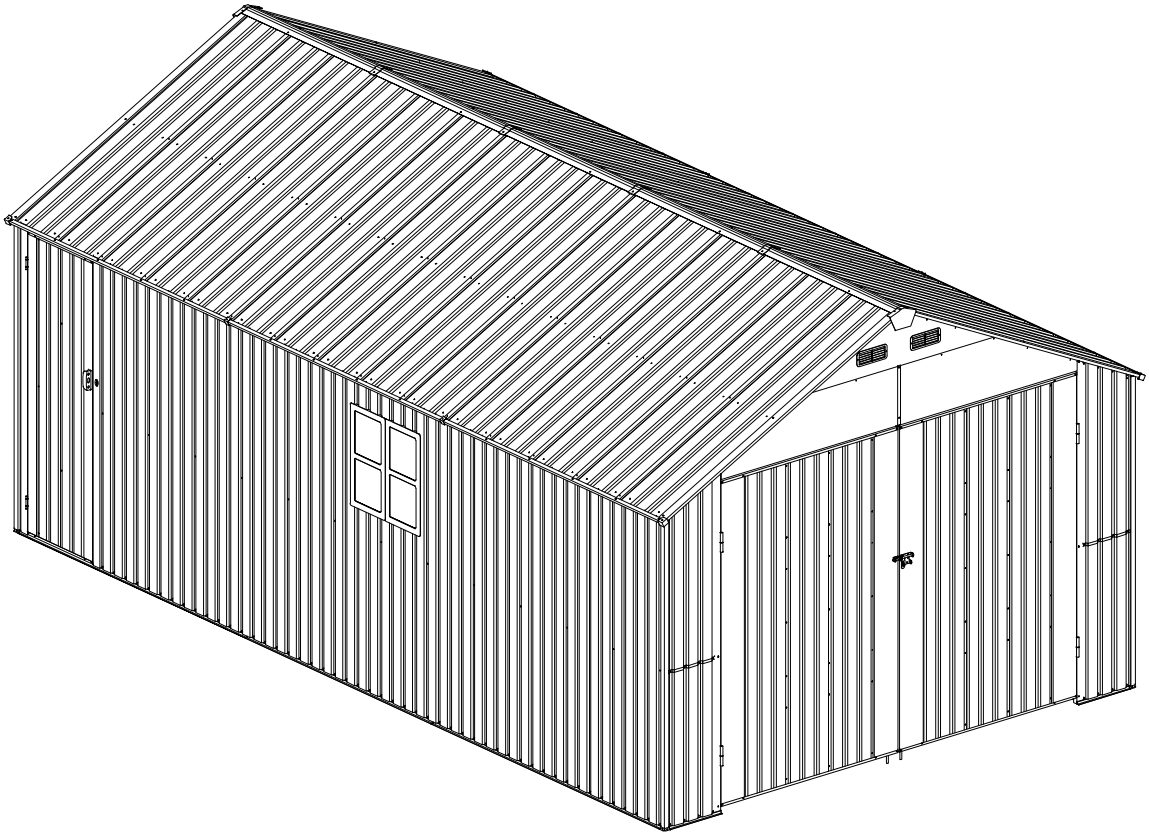

Anchoring the Shed:

* It is crucial to anchor the shed securely to prevent it from being damaged or overturned by wind or other forces.
* Use the provided anchors and follow the instructions carefully.
* Check the anchors periodically to ensure they are still secure.

Maintenance and Inspection:

* Regularly inspect the shed for any signs of damage or wear.
* Clean the shed as needed to prevent rust and corrosion.
* Lubricate moving parts to ensure smooth operation.

Emergency Situations:

* If an emergency occurs during assembly, stop immediately and seek medical attention if necessary.
* Contact the manufacturer or a qualified professional for assistance.

Additional Tips:

* Use a level to ensure that the shed is properly aligned.
* Tighten all bolts and screws securely, but do not overtighten.
* If you encounter any difficulties during assembly, refer to the instructions or contact the manufacturer.

Safety Guidelines

General Precautions:



















* Read and understand all instructions thoroughly before beginning assembly.
* Wear appropriate safety gear, including gloves, safety glasses, and closed-toe shoes.
* Assemble the shed on a level, stable surface.
* Ensure that the area is clear of obstacles and hazards.
* Do not attempt to assemble the shed alone. Enlist the help of at least one other person.












Handling Materials:











* Metal components can be sharp. Handle them with care to avoid cuts or punctures.
* Use proper lifting techniques when moving heavy parts.
* Do not overtighten bolts or screws.














Electrical Connections:













* If the shed requires electrical connections, ensure that they are made by a qualified electrician.
* Follow all electrical codes and regulations.
* Do not connect the shed to a power source until all components are fully assembled.












NO.	PART.	Qty.	NO.	PART.	Qty.
1L		1	7F		2
1R		1	7B		2
2L		2	7		2
2R		2	8L		1
2		2	8R		1
3L		1	9L		1
3R		1	9R		1
3		1	9		3
4		8	10		2
4B		6	10L		1
5		4	10R		1
6L		1	11L		1
6R		1	11R		1
6		1	12L		2








NO.	PART.	Qty.	NO.	PART.	Qty.
12R		2	19R		2
13		2	20L		2
14		1	20R		2
15		2	21		4
16		2	21X		2
16X		1	22		1
17L		1	22X		1
17R		1	23		1
18L		1	23X		1
18R		1	24		6
18		3	26		4
18F		2	27		6
19		2	28		8
19L		2	29		5

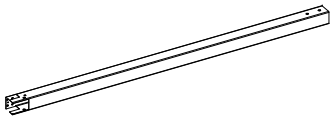

NO.	PART.	Qty.
30		4
31		4
32		2
34		4
35		1
36		2
37		1
38		1
38L		1
38R		1
40L		1
40R		1
41		4
41L		1

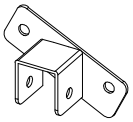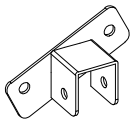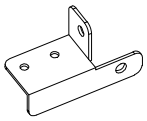



NO.	PART.	Qty.
41R		1
42L		2
42R		2
43		4
44		1
45L		1
45R		1
46		5
47		4
49		1
50L		2
50R		2
51A		2
52		1

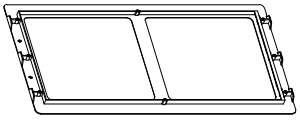NO.	PART.	Qty.	NO.	PART.	Qty.
53		2	C4		2
54		2	W1L		1
55		3	W1R		1
56		1	W2L		1
57		4	W2R		1
58		2	W3L		1
F12		4	W3R		1
F13		4	W4L		1
F14		4	W4R		1
W7		4	W5L		1
W2		2	W5R		1
W3		9	W6L		1
W5		23	W6R		1
C3		2	D4		30

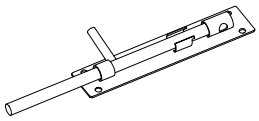NO.	PART.	Qty.
M1		6
M2		1
C		4
F		4
F6		2
Q1		4
Q2		2
Q3		4
Q4		4
Q33A		4
Q33B		4
Q34		4
Q35		1
Q35A		1

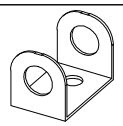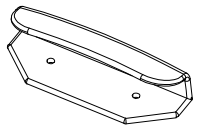NO.	PART.	Qty.
Q35B		1
Q35C		1
Q47A		1
Q47B		1
Q46		1
Q10 M4x10mm		657+20
Q13 M5x16mm		180+10
Q17 M6		107+10
Q18		566+20
Q19		180+10
Q20		100+10
Q32 M4x14mm		198+20
Q36 M6x50mm		55+5
Q37 M6x45mm		28+3

NO.	PART.	Qty.
Q38	 M4x10mm	24+3
Q39	 M4x10mm	32+5
Q40	 M4x15mm	2+2
Q41	 M4x25mm	32+5
Q42	 M4	69+5
Q43	 M4x25mm	1+1
Q44	 M6x10mm	8+2
Q45	 M6x30mm	16+3
Q49	 M4x35mm	20+3
Q54	 M4	44+5
Q21	 M8x50mm	12
Q22		2
Q23		1
Q24		1


NO.	PART.	Qty.
Q25		1
Q26		1
Q27		1
S15		1

PART LIST

PART LIST


W7
W1R
W2R
W3R
W4R
W5R
W5L
W4L
W3L
W2L
W1L
W3
W5
18L
18R
Q35C
Q35A
Q35B
C3
C4
41
F14
F12
F13
F6
38L
38R
W6L
W6R
W2
17L
17R


PART LIST

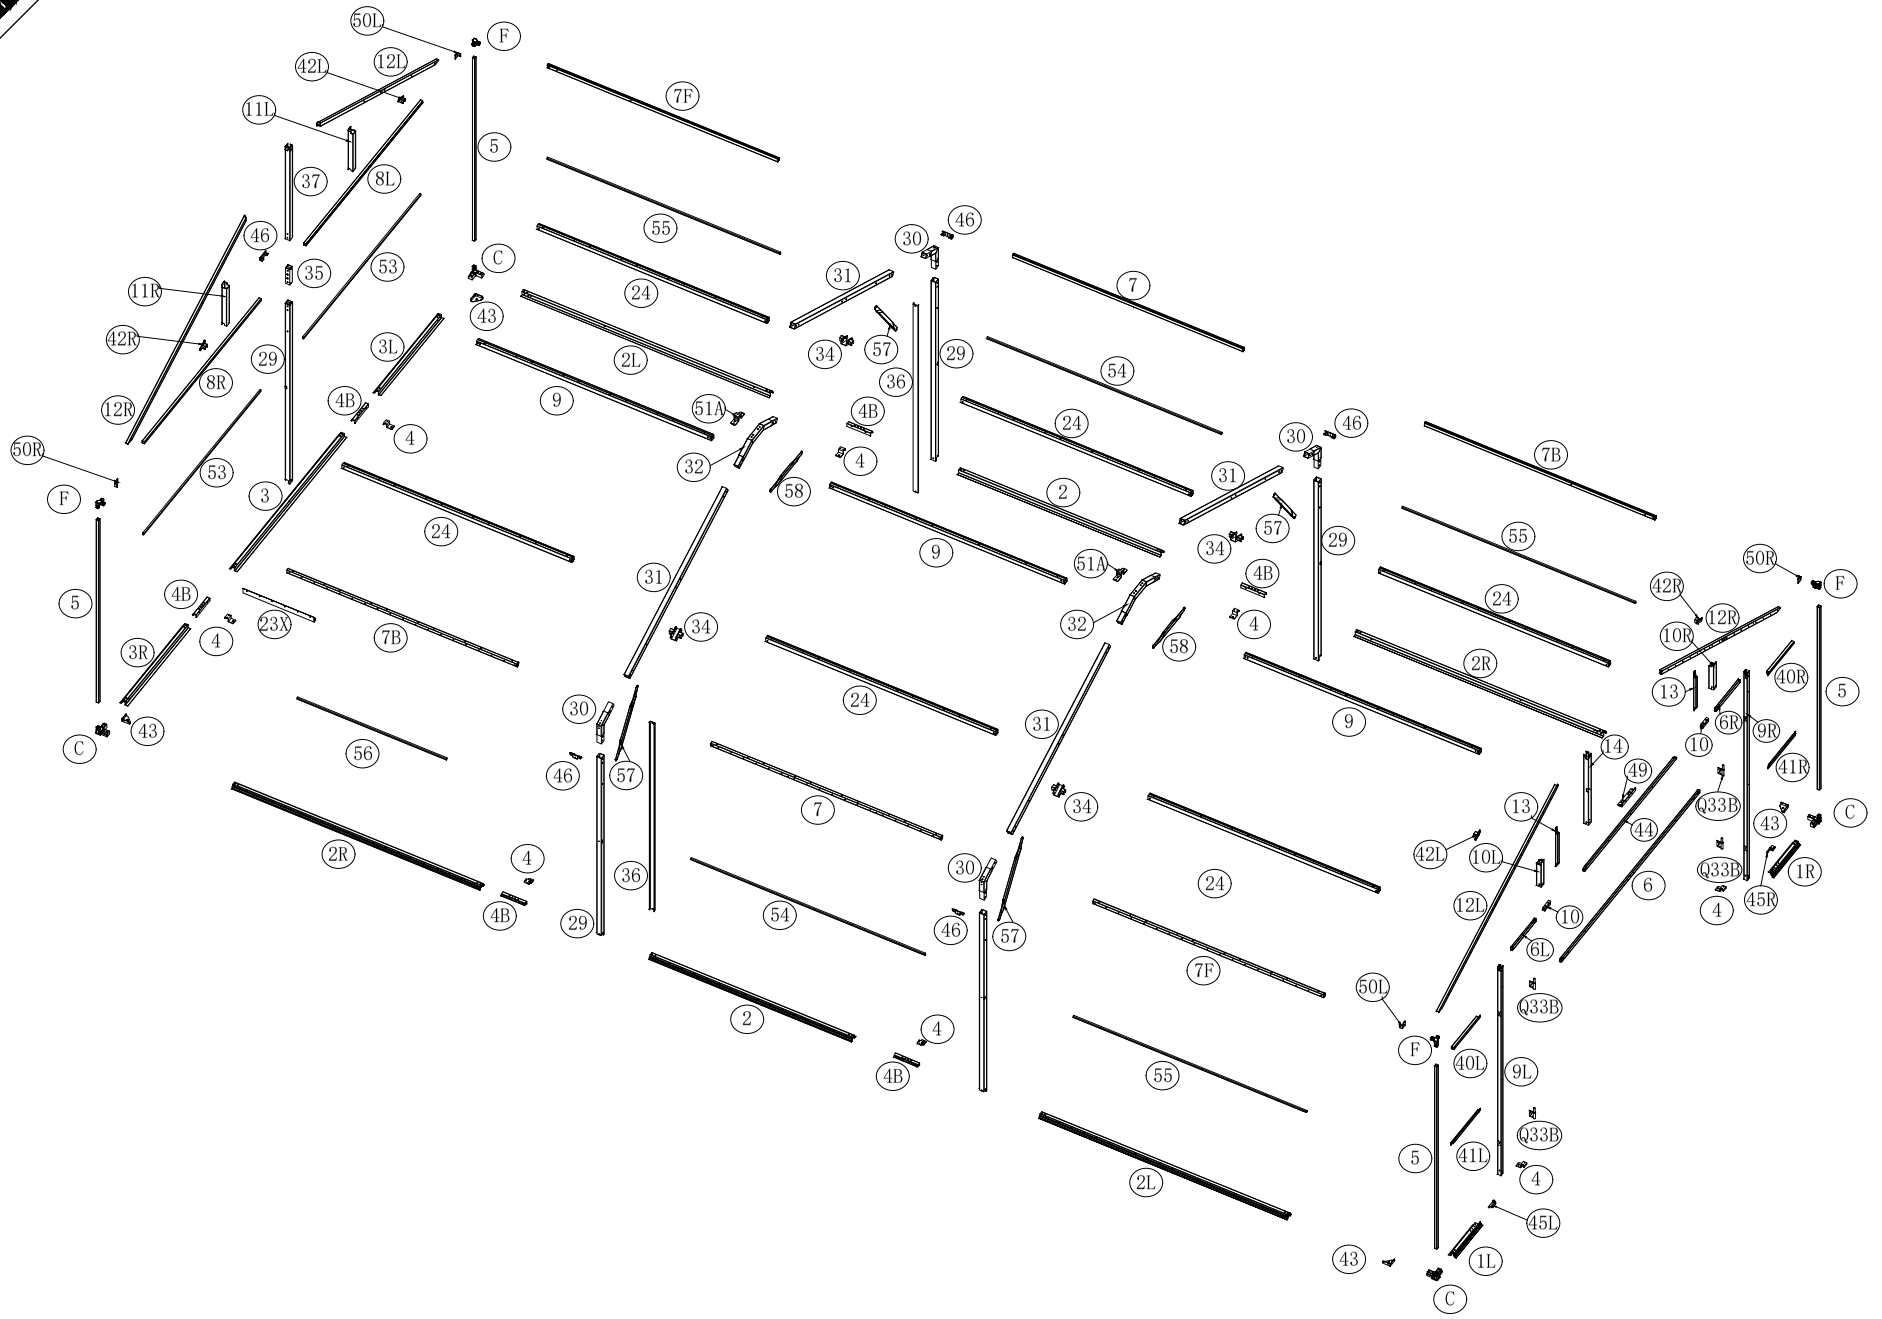
50L
F
42L
12L
11L
7F
5
37
8L
55
46
C
24
35
53
11R
31
30
46
43
3L
2L
42R
29
8R
34
57
29
7
54
12R
9
36
4B
51A
24
4
4B
50R
32
4
30
46
F
53
3
58
2
31
7B
57
24
9
34
29
55
5
4B
51A
42R
50R
F
31
4B
24
4
23X
32
58
12R
10R
3R
4
7B
2R
40R
5
13
24
6R
9R
9
14
10
49
41R
C
43
56
Q33B
13
44
43
30
31
34
42L
10L
C
46
57
2R
Q33B
1R
4
12L
6
45R
4
10
6L
36
54
24
30
29
46
57
7F
50L
4
Q33B
2
F
40L
9L
4B
55
5
41L
Q33B
4
2L
45L
43
1L
C

PART LIST


PART LIST


NO.	PART.	Qty.
2L		2
2R		2
2		2
4		4
4B		4
Q10	 M4x10mm	16


NO.	PART.	Qty.
3L		1
3R		1
3		1
4		2
4B		2
Q10	 M4x10mm	8


NO.	PART.	Qty.
1L		1
1R		1
4		2
43		4
C		4
Q10	 M4x10mm	36


NO.	PART.	Qty.
32		2
31		4
58		2
Q36	 M6x50mm	12
Q17	 M6	12
Q20		12

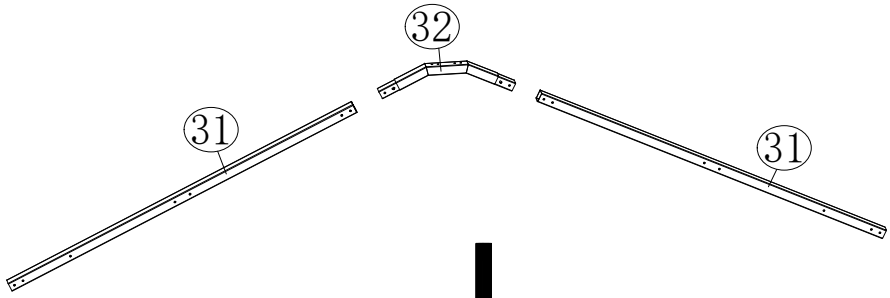

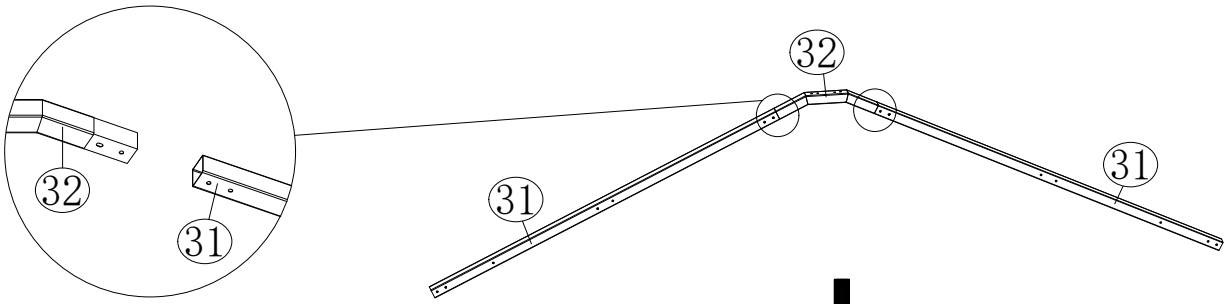


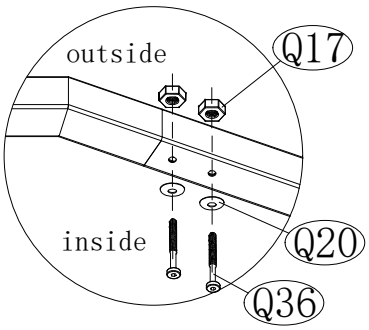

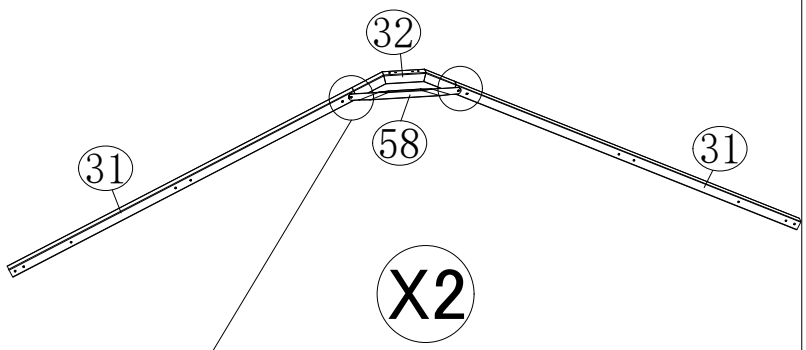


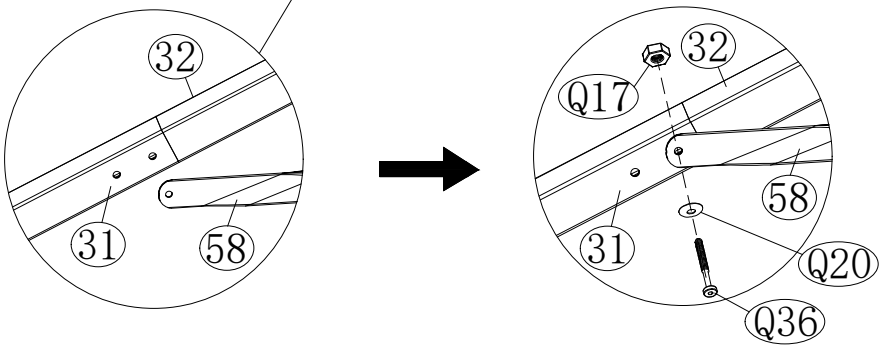


NO.	PART.	Qty.
29		4
30		4
46		4
Q10	M4x10mm	8
Q36	M6x50mm	8
Q17	M6	8
Q20		8

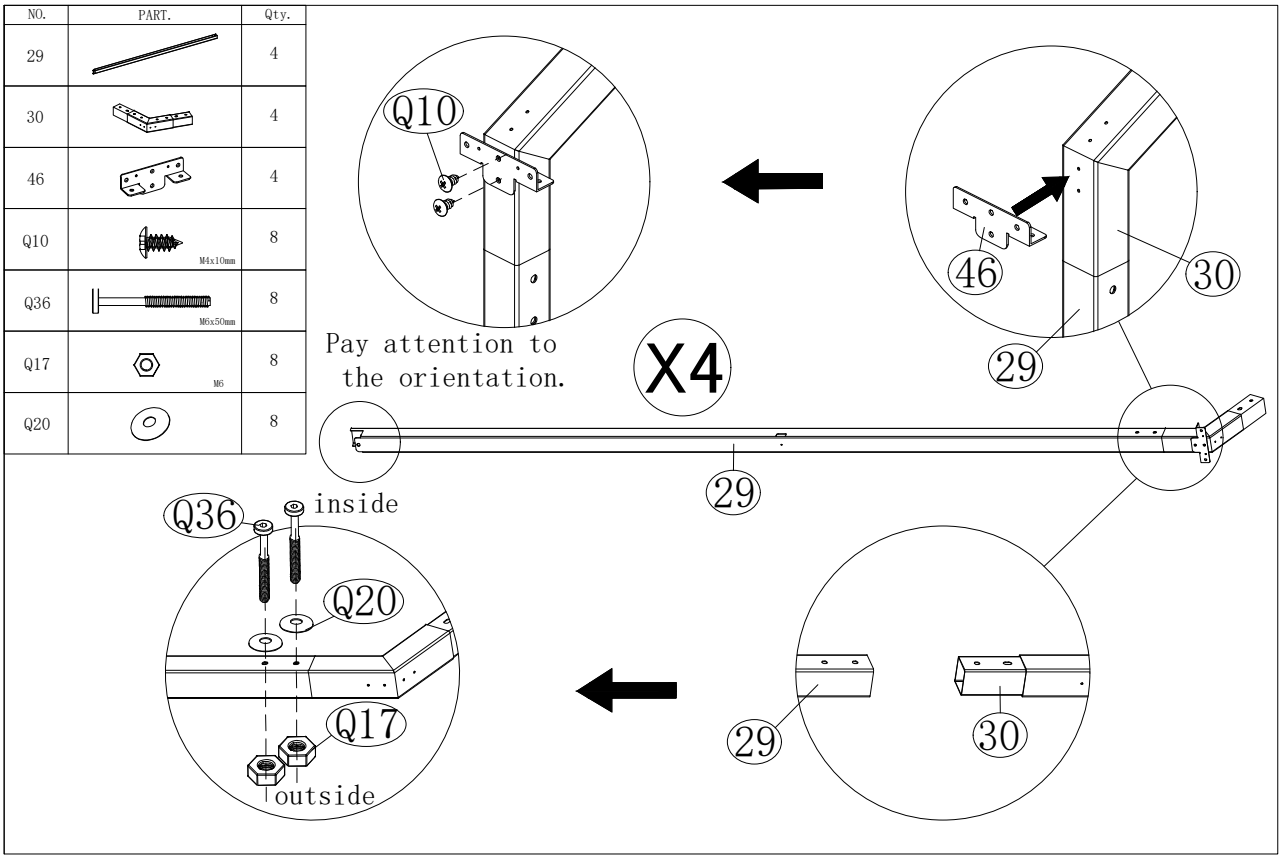


NO.	PART.	Qty.
57		4
Q36	M6x50mm	16
Q17	M6	16
Q20		16

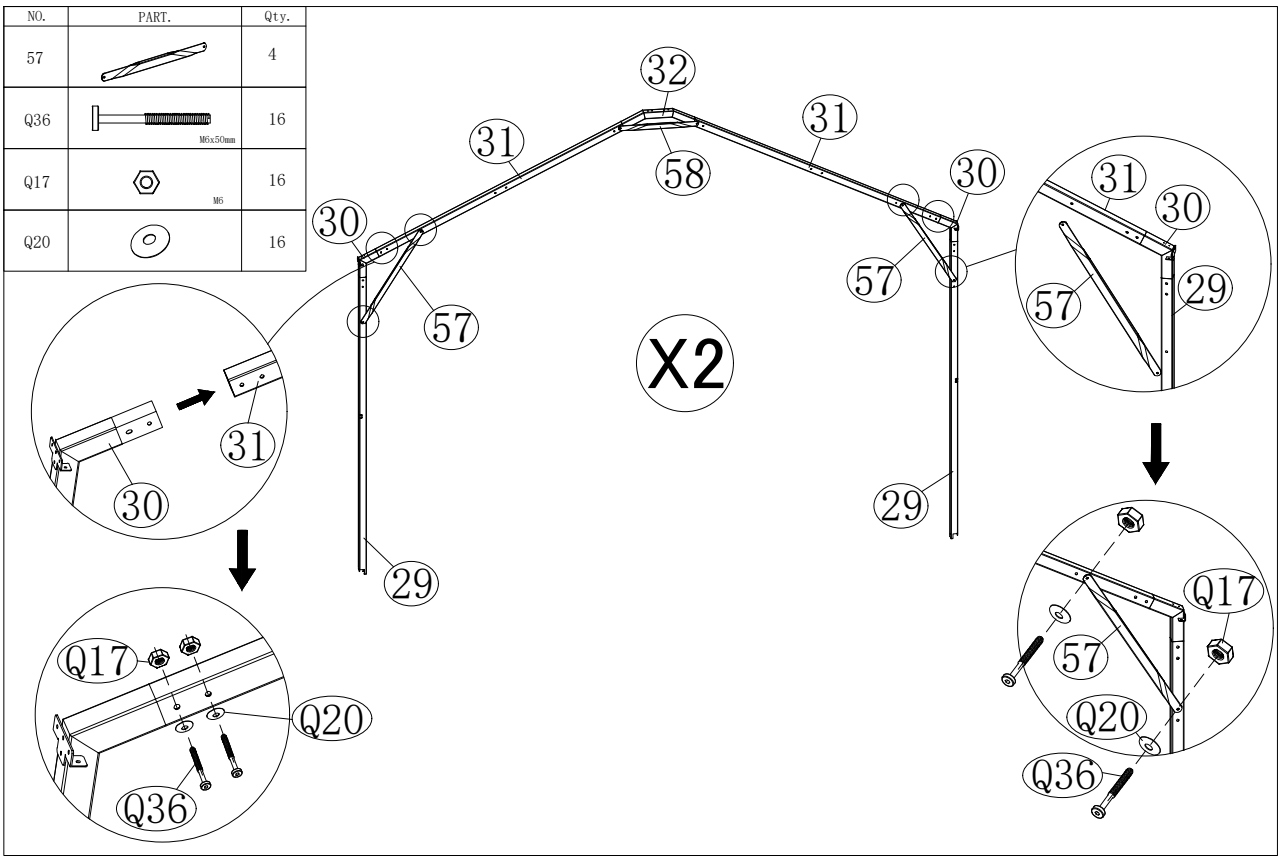


NO.	PART.	Qty.
Q36	M6x50mm	4
Q17	M6	4
Q20		4

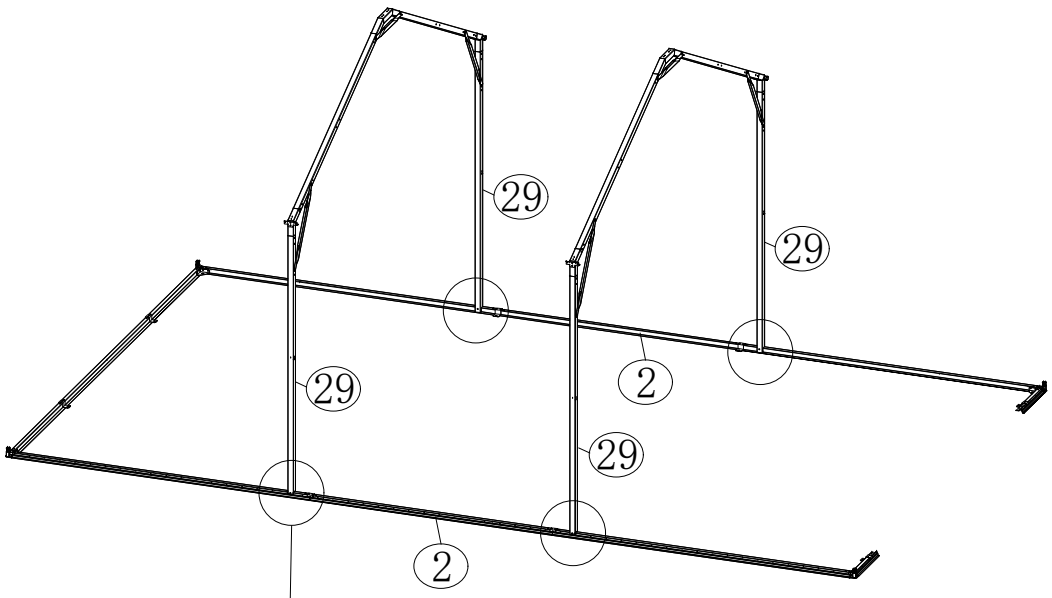

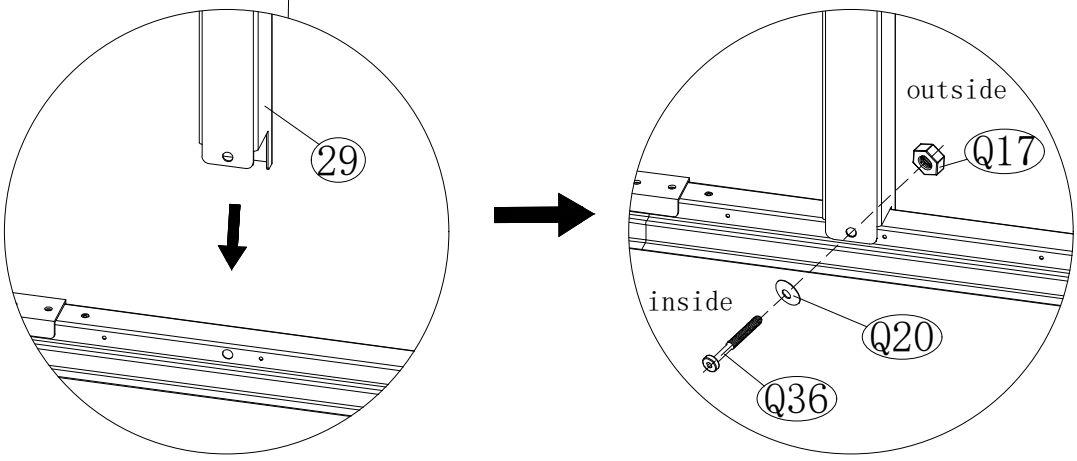


NO.	PART.	Qty.
7		2
24		2
34		4
Q10	 M4x10mm	8
Q37	 M6x45mm	12
Q17	 M6	12
Q20		12

NO.	PART.	Qty.
5		4
F		4
40L		1
40R		1

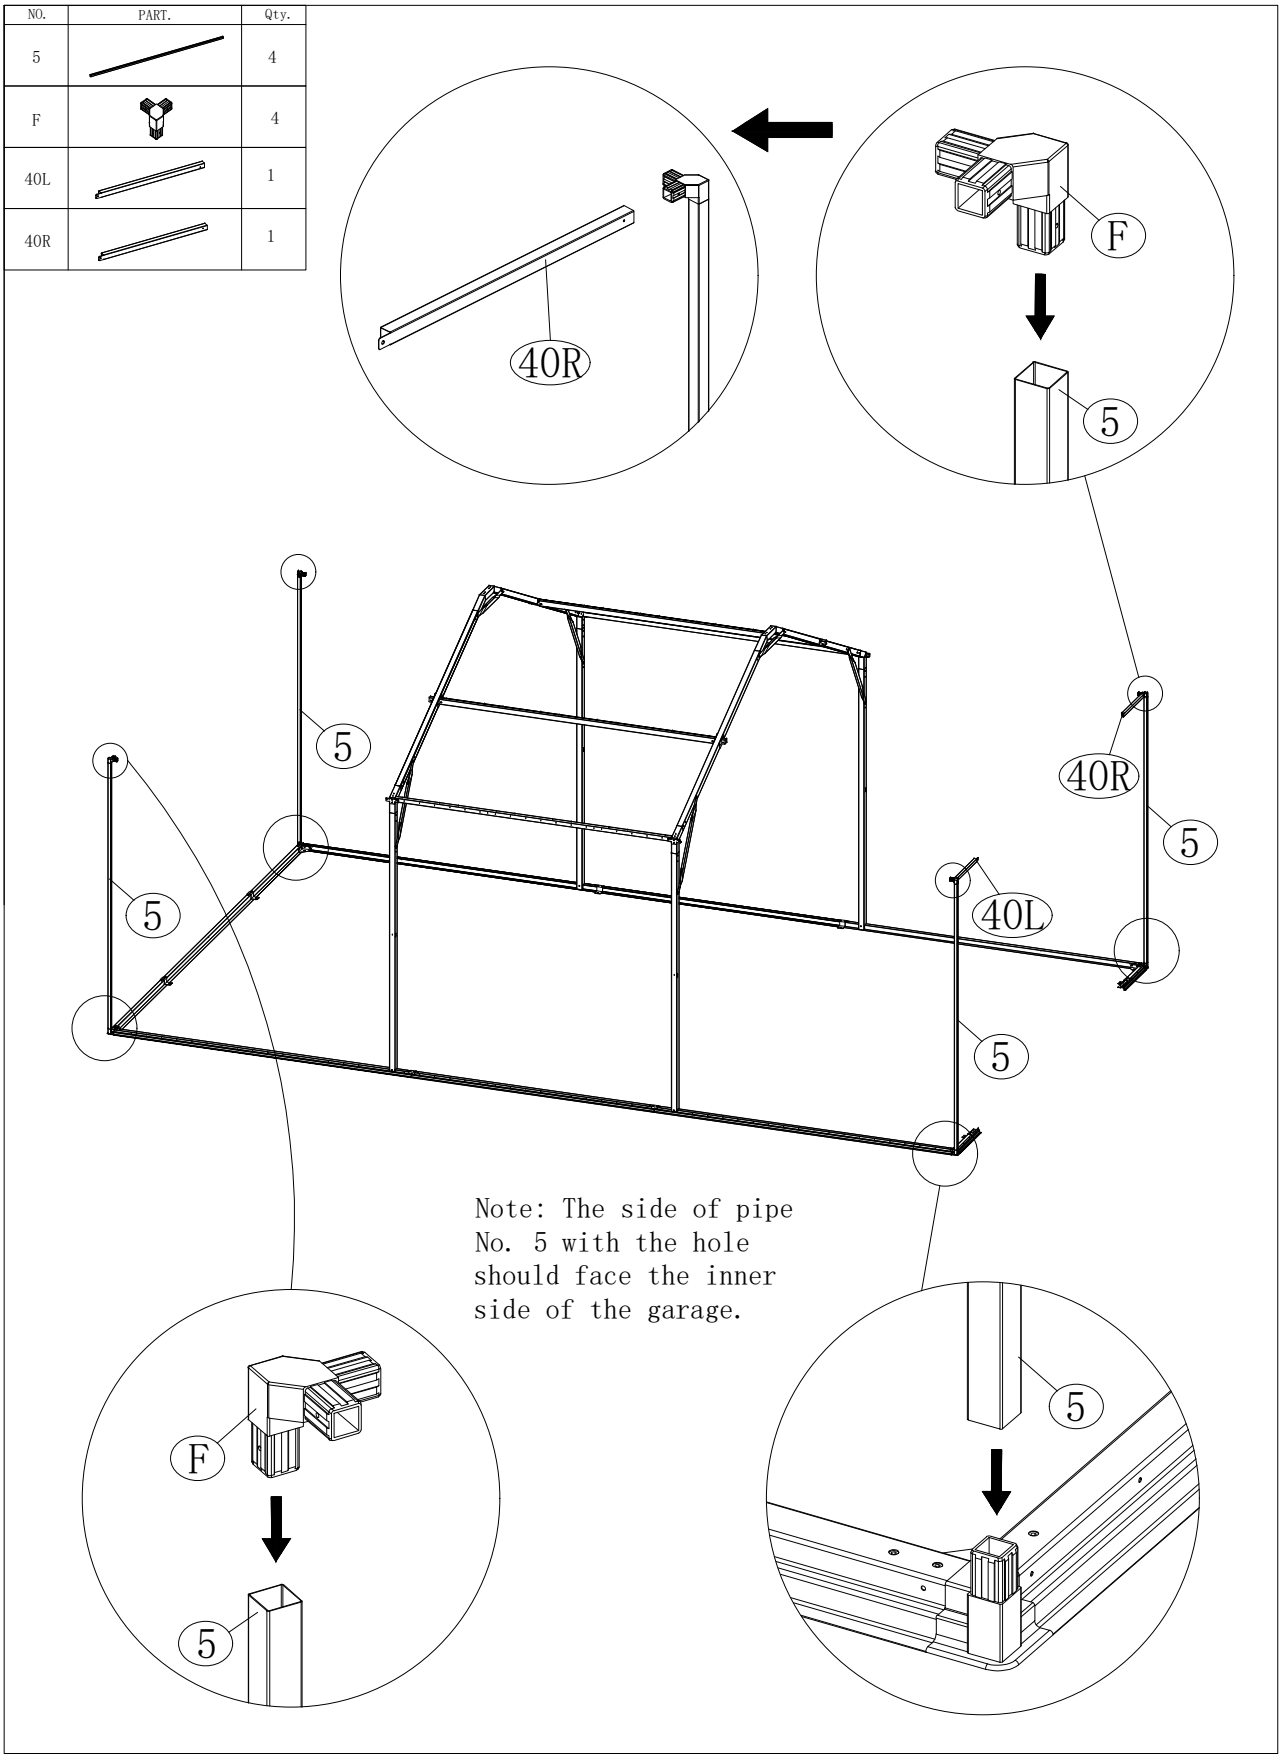


Note: The side of pipe No. 5 with the hole should face the inner side of the garage.


NO.	PART.	Qty.
7F		2
7B		2
Q10	M4x10mm	12

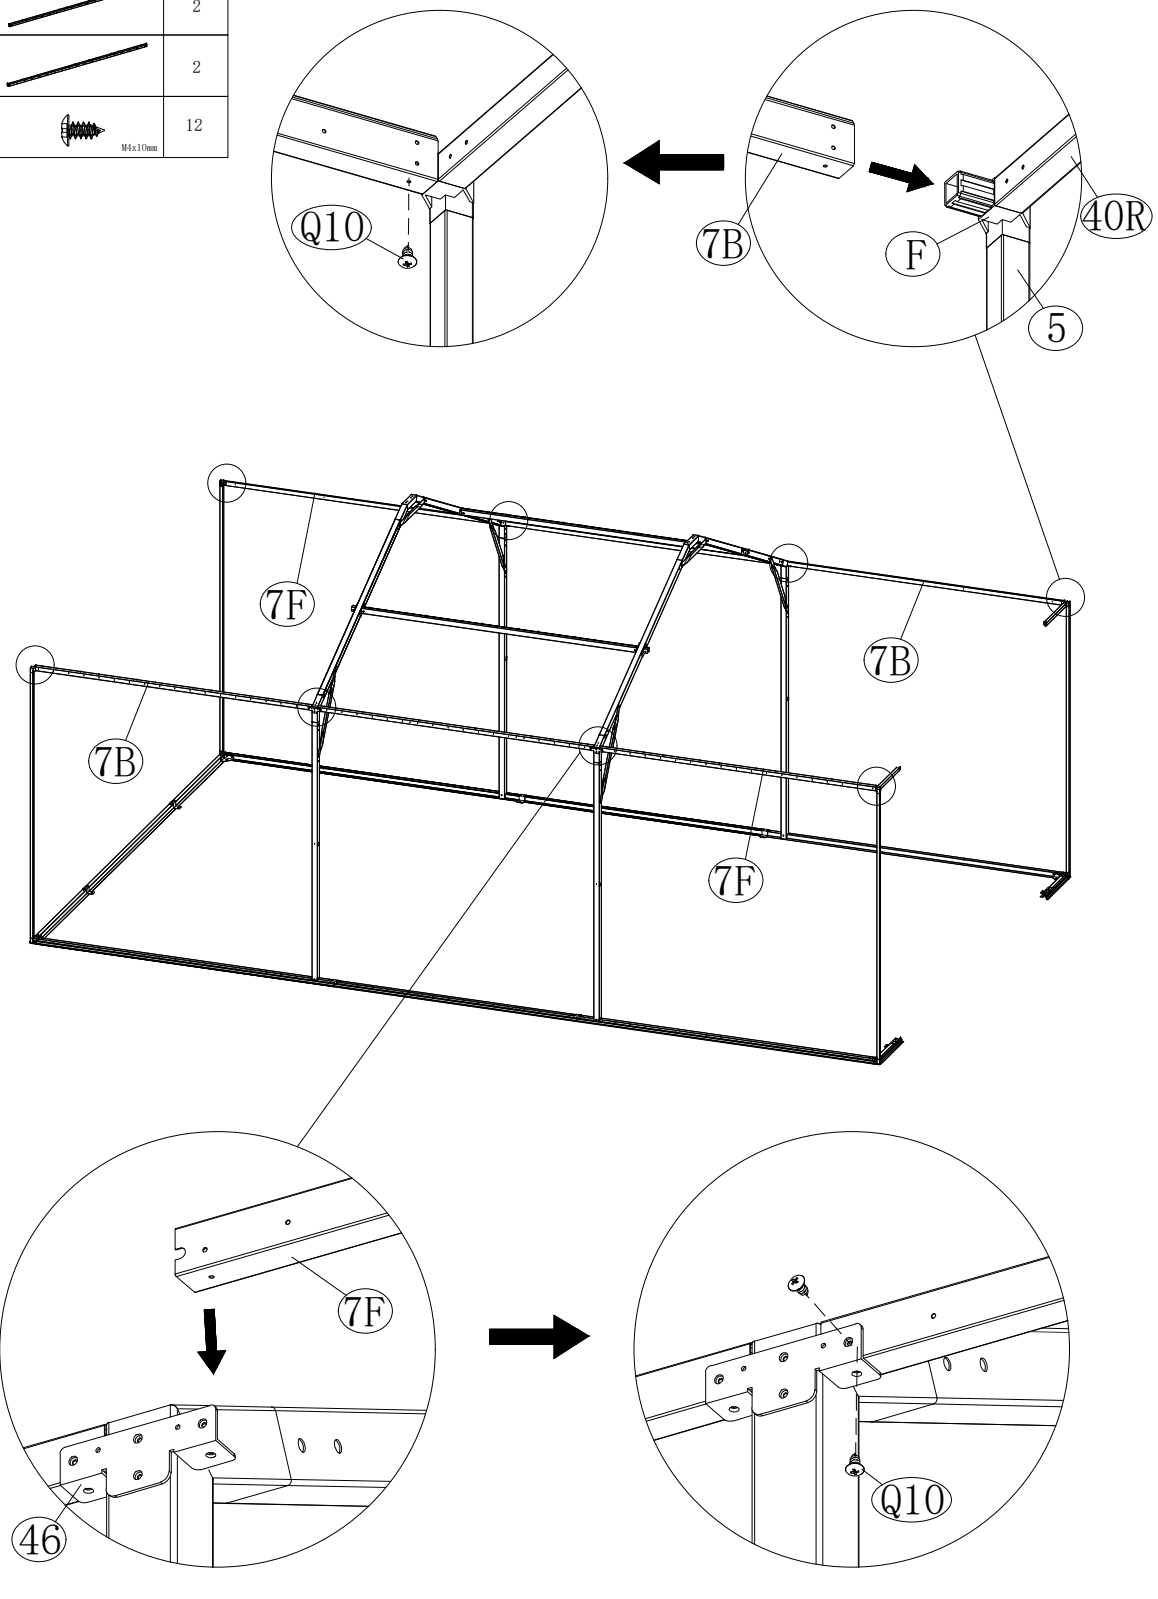


NO.	PART.	Qty.
6L		1
6R		1
6		1
10		2
49		1
Q10	M4x10mm	6
Q45	M6x30mm	8
Q17	M6	8
Q20		8

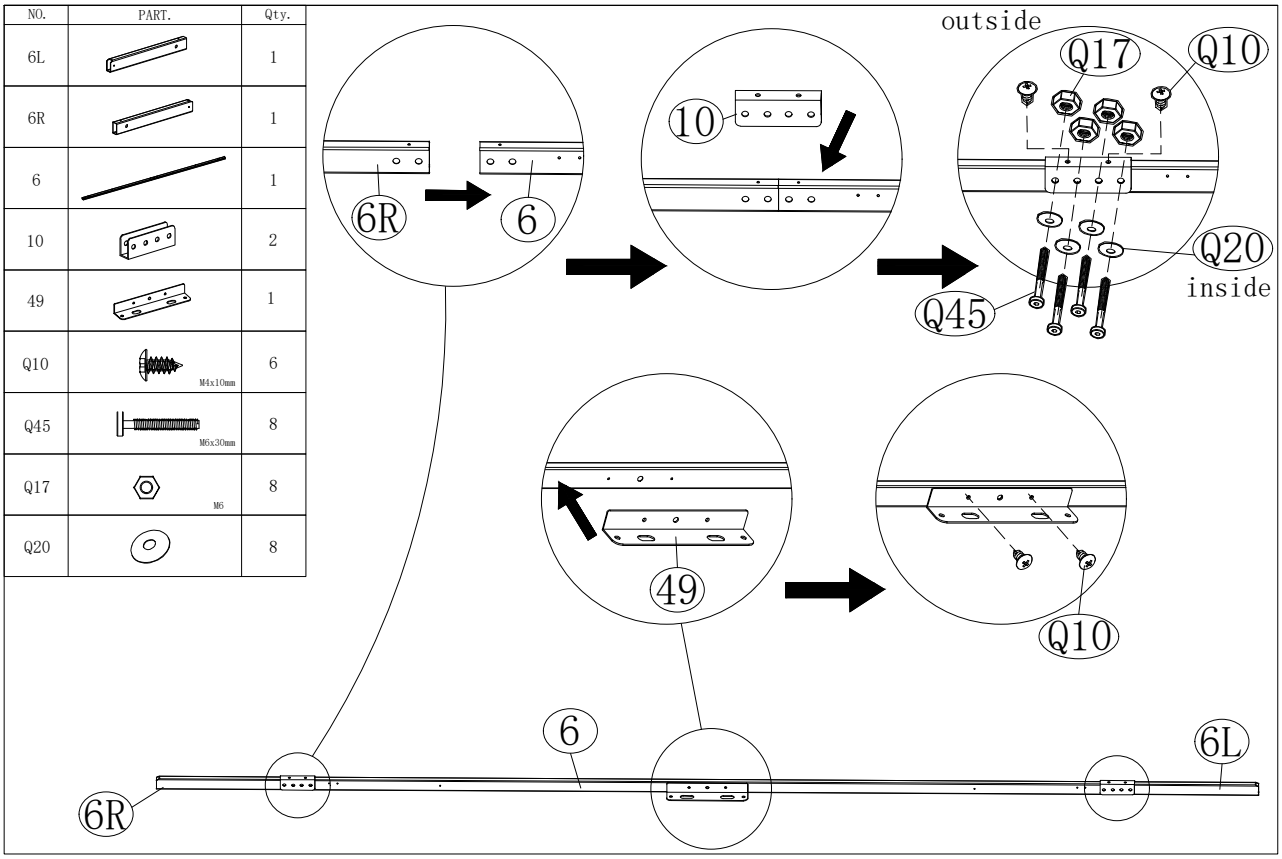


NO.	PART.	Qty.
14		1
44		1
Q10	M4x10mm	1

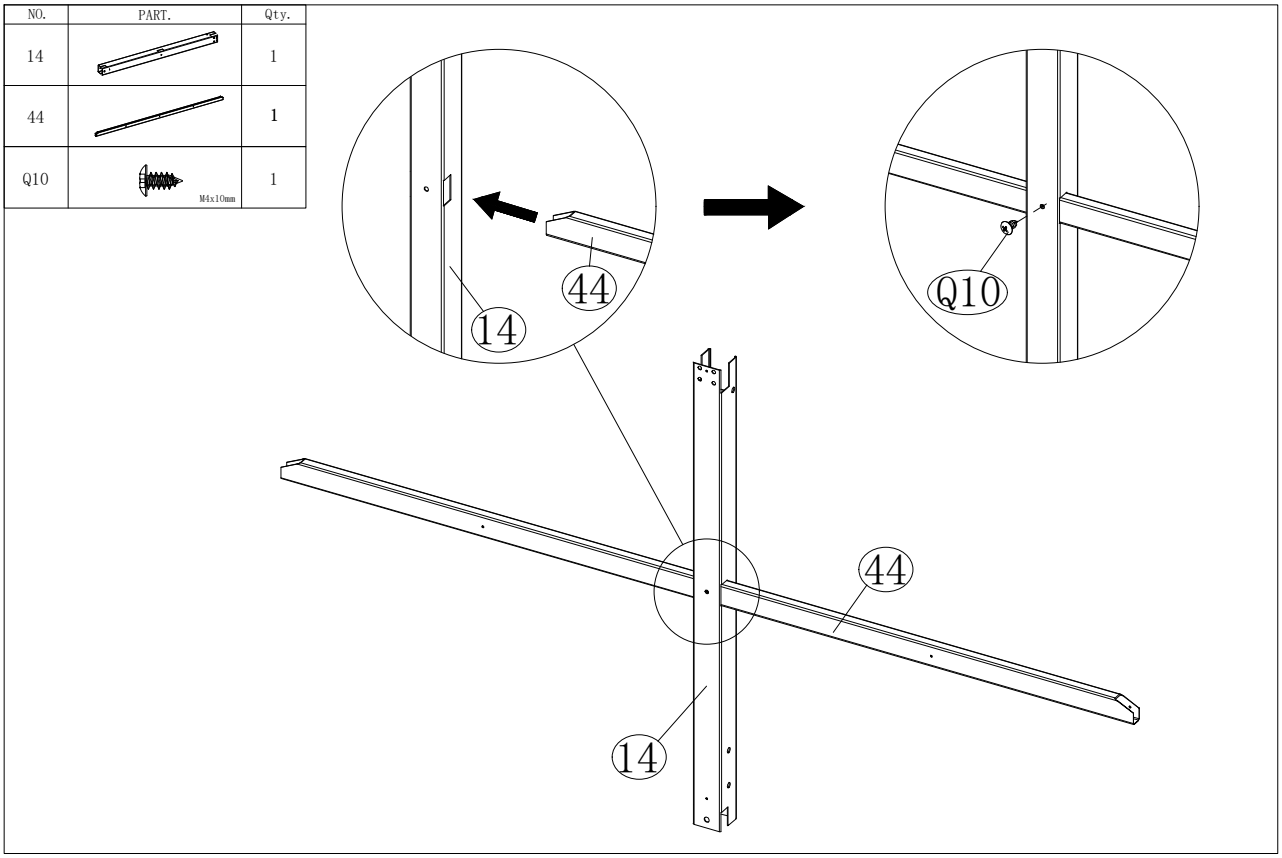


NO.	PART.	Qty.
12L		1
12R		1
9L		1
9R		1
Q10	M4x10mm	6
Q32	M4x14mm	2
Q36	M6x50mm	1
Q17	M6	1
Q20		1

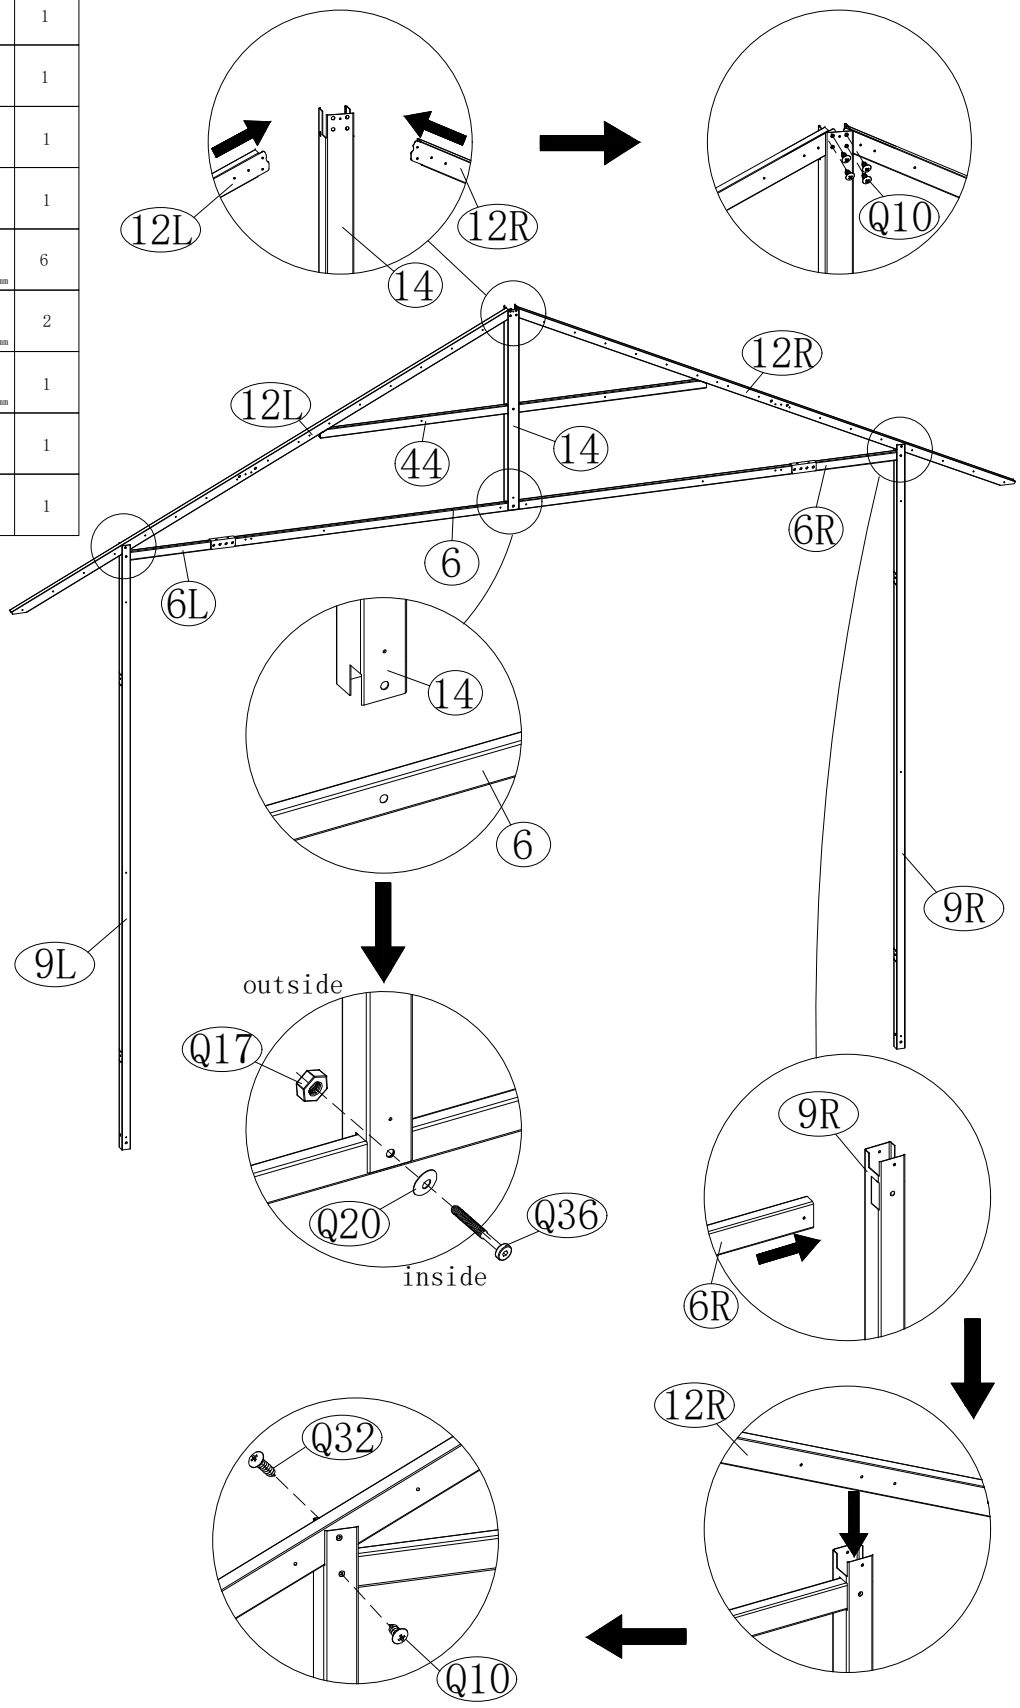



NO.	PART.	Qty.
13		2
42L		1
42R		1
10L		1
10R		1
Q10	 M4x10mm	14
Q45	 M6x30mm	4
Q17	 M6	4
Q20		4


NO.	PART.	Qty.
50L		1
50R		1
45L		1
45R		1
Q10	 M4x10mm	18
Q37	 M6x45mm	4
Q17	 M6	4
Q20		4


NO.	PART.	Qty.
41L		1
41R		1
Q10	 M4x10mm	4

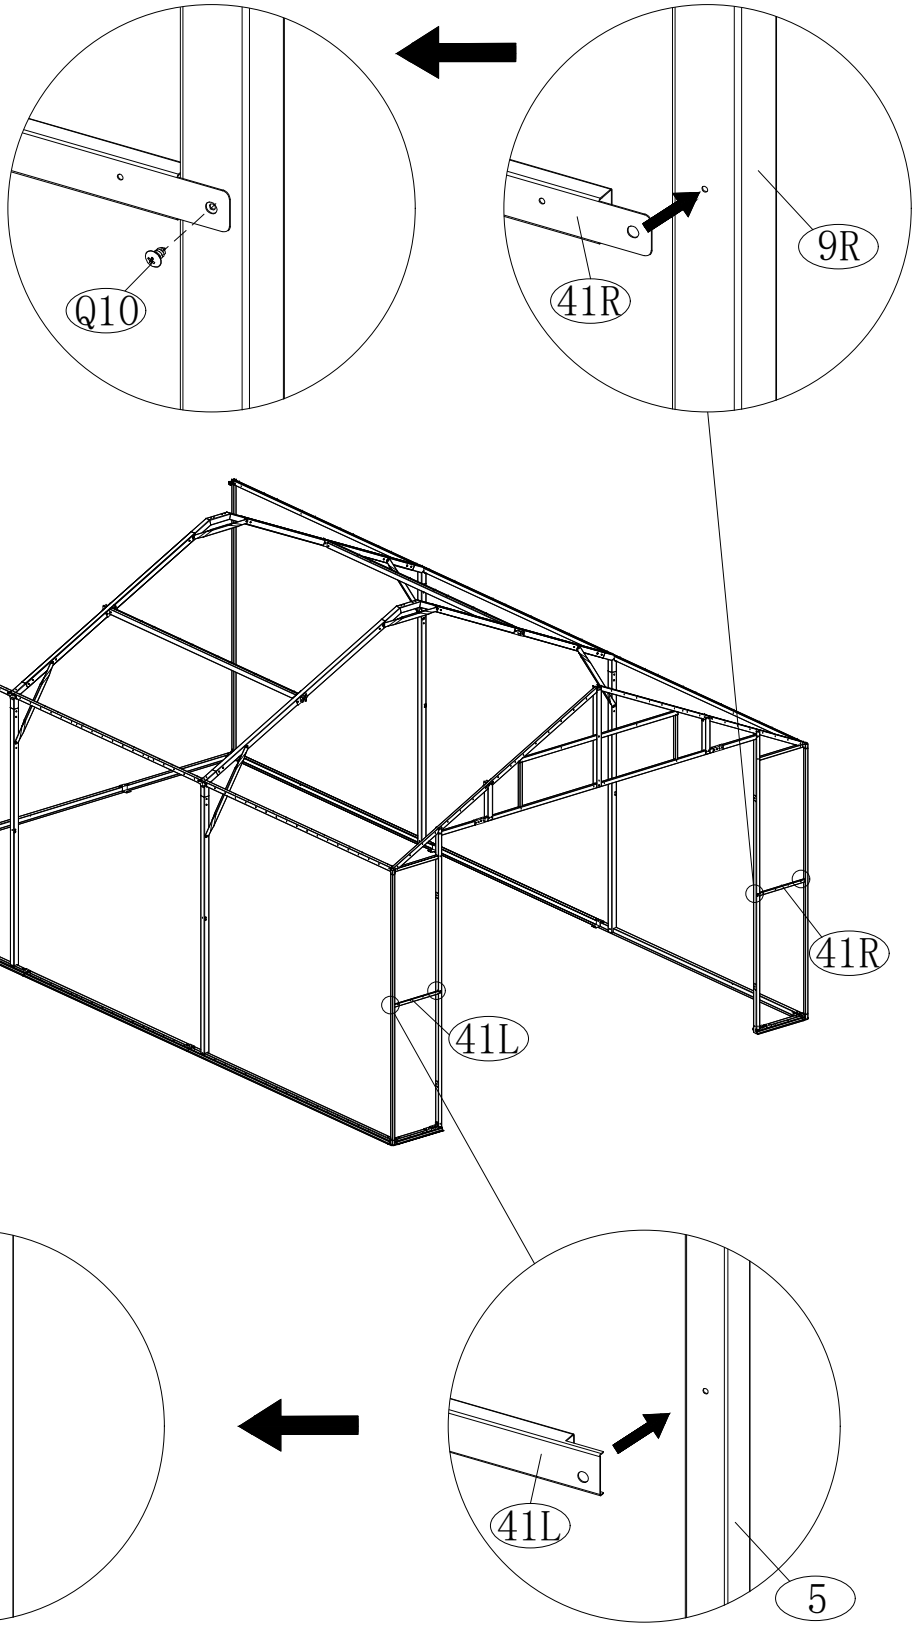


NO.	PART.	Qty.
29		1
35		1
37		1
46		1
Q10	 M4x10mm	2
Q36	 M6x50mm	4
Q17	 M6	4
Q20		4

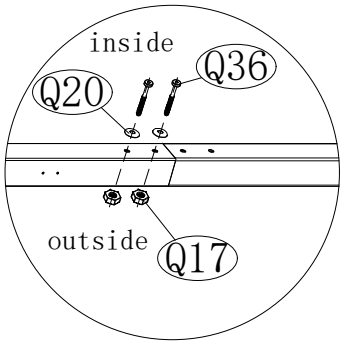

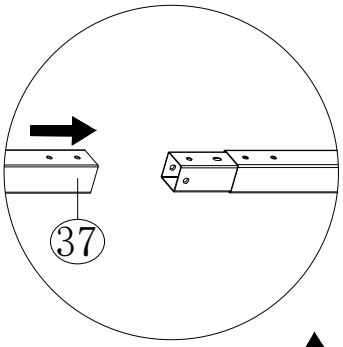

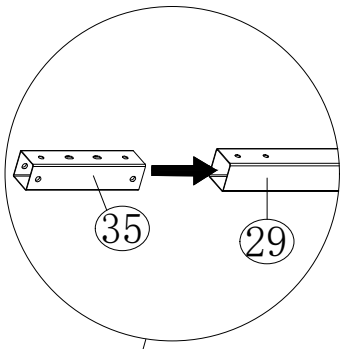


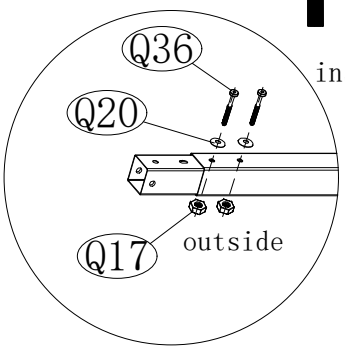


inside




Pay attention to the orientation.

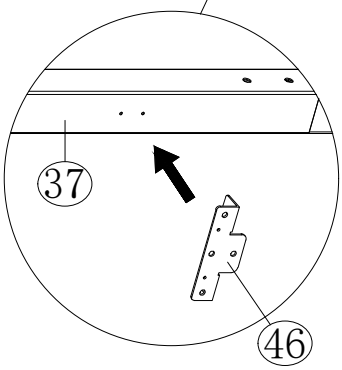


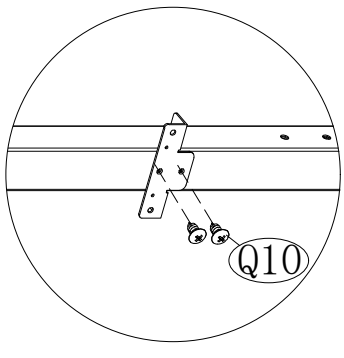



NO.	PART.	Qty.
8L		1
8R		1
50L		1
50R		1
Q10	M4x10mm	12
Q43	M4x25mm	1
Q20		1

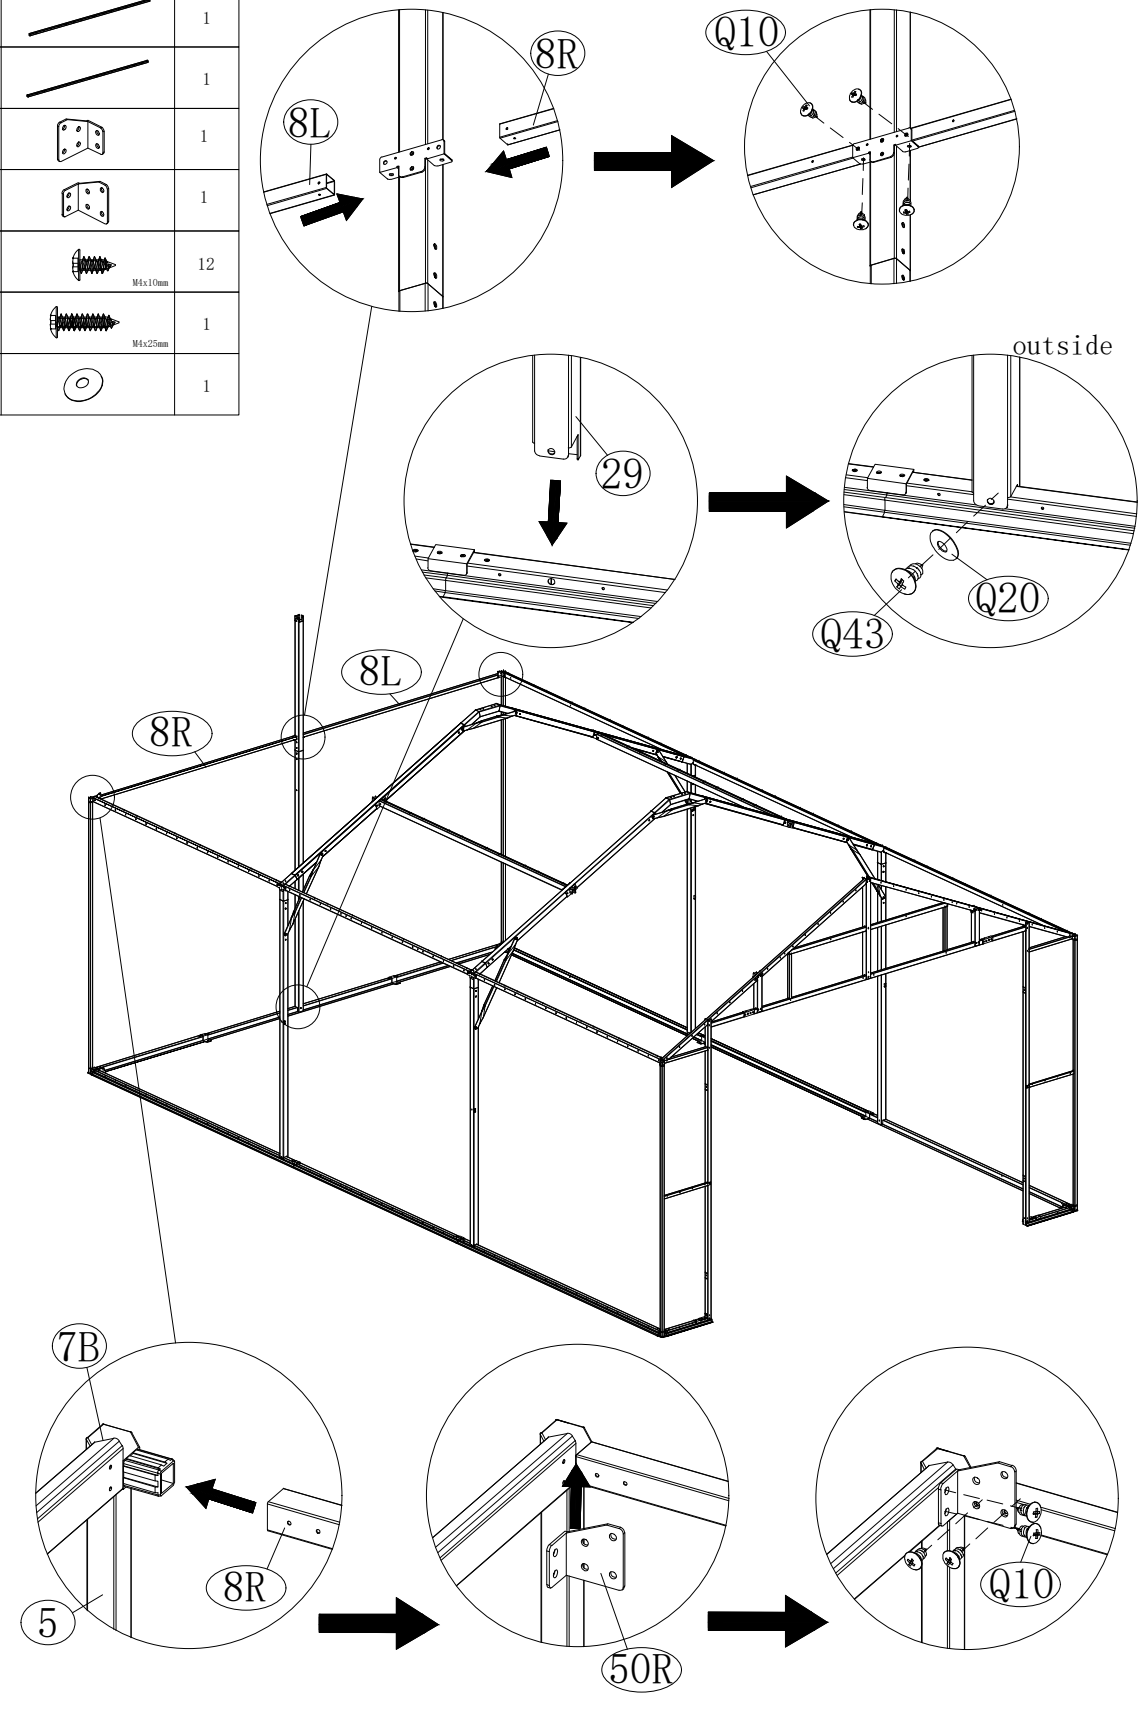


NO.	PART.	Qty.
12L		1
12R		1
Q10	 M4x10mm	8

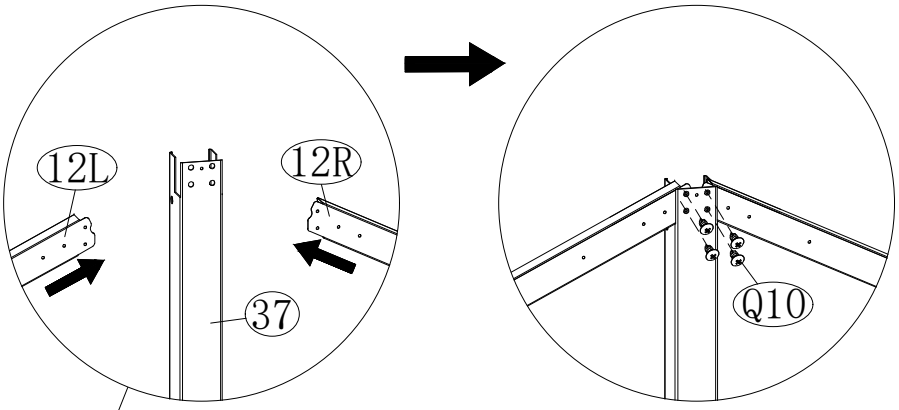


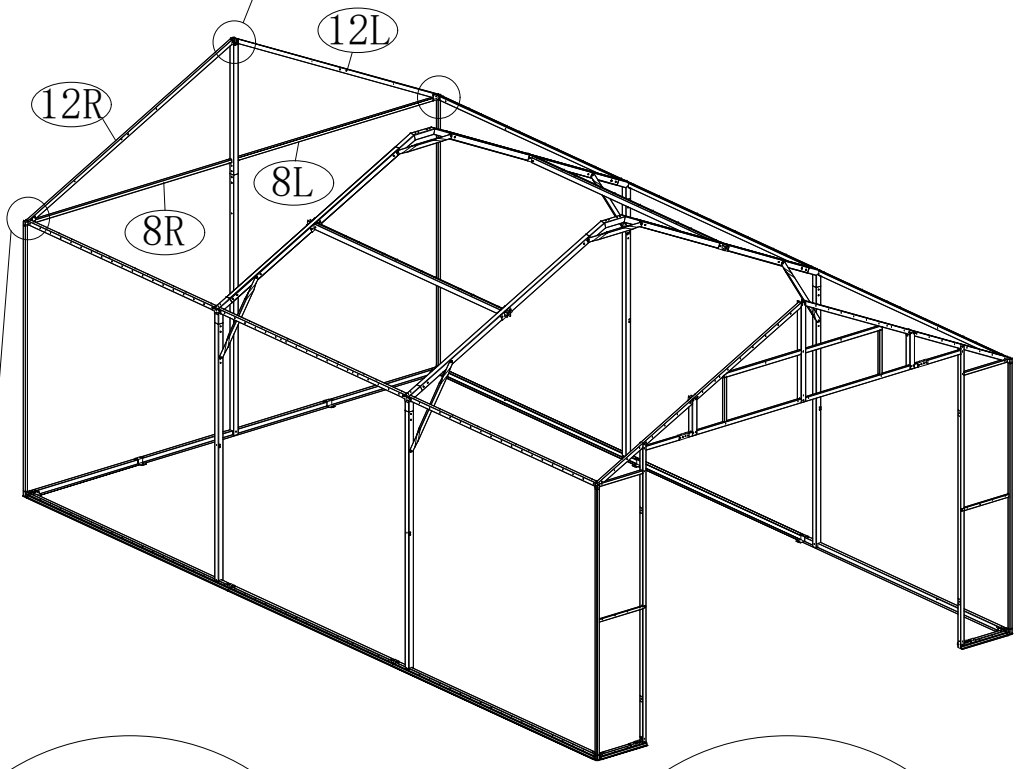

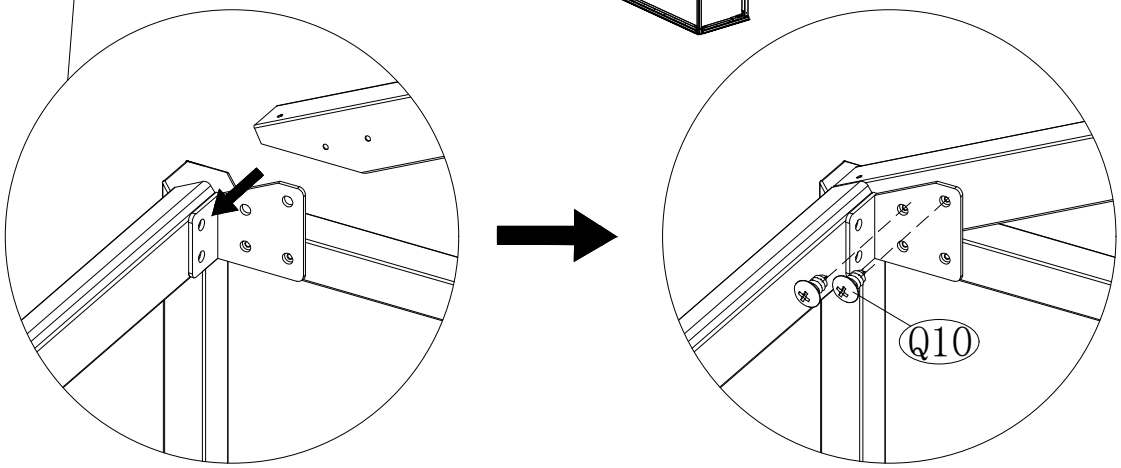



NO.	PART.	Qty.
11L		1
11R		1
42L		1
42R		1
Q10	 M4x10mm	8
Q45	 M6x30mm	4
Q17	 M6	4
Q20		4

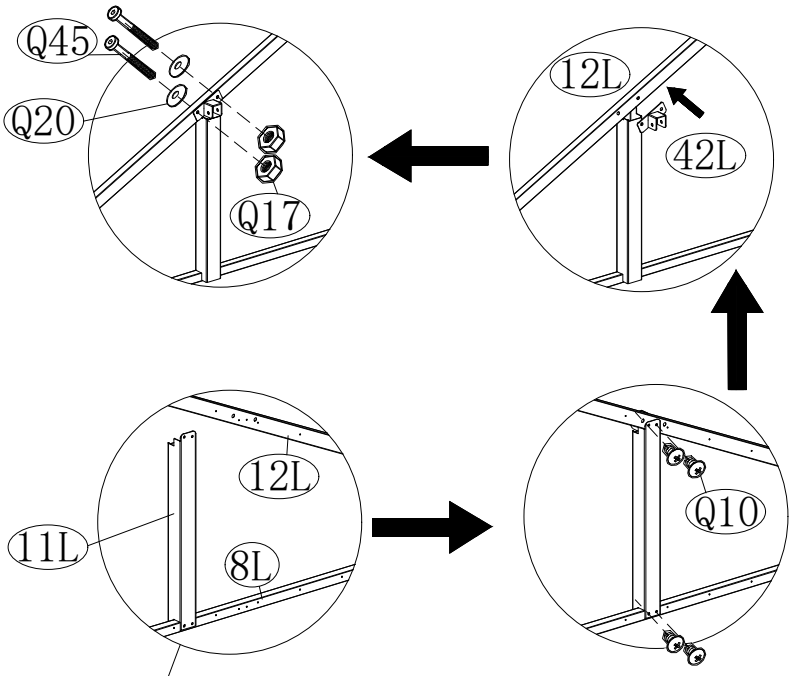


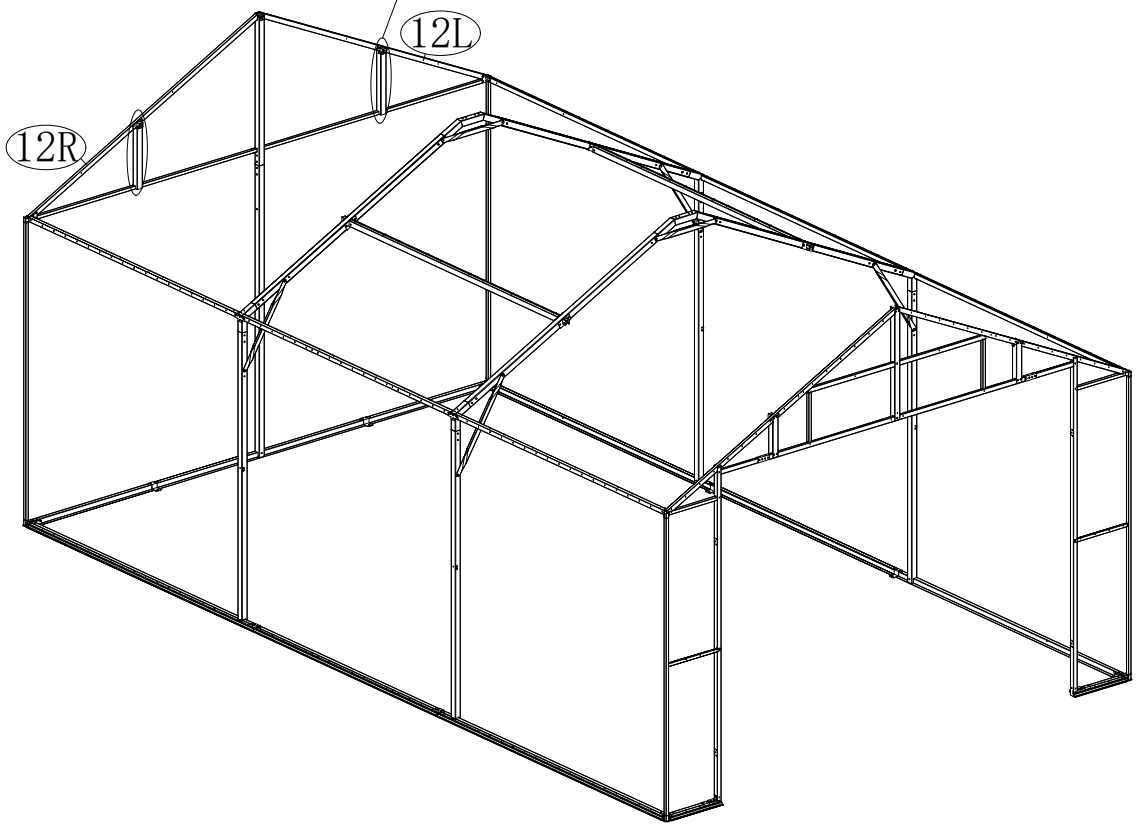


NO.	PART.	Qty.
24		6
Q37	M6x45mm	8
Q17	M6	8
Q20		8

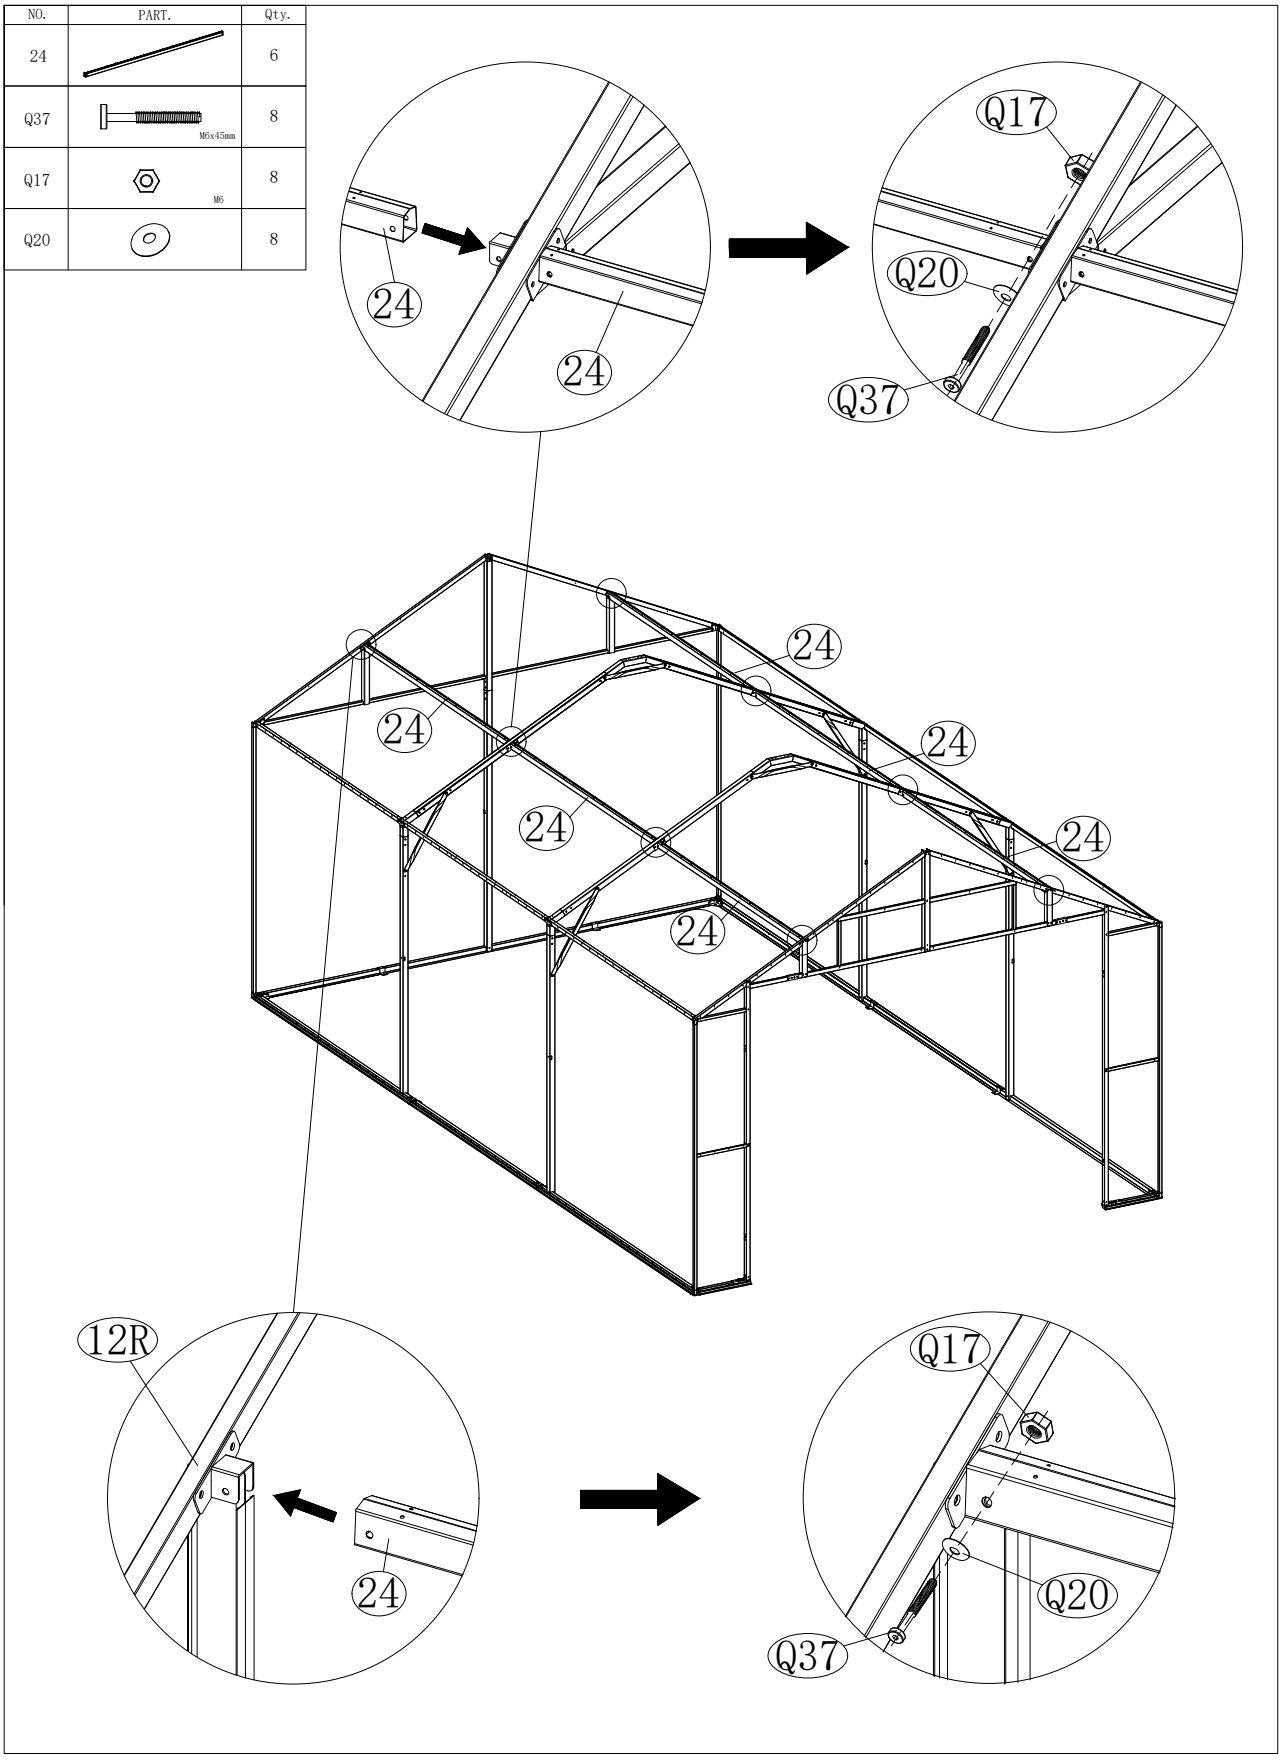



NO.	PART.	Qty.
9		3
51A		2
Q36	 M6x50mm	10
Q37	 M6x45mm	4
Q17	 M6	14
Q20		14

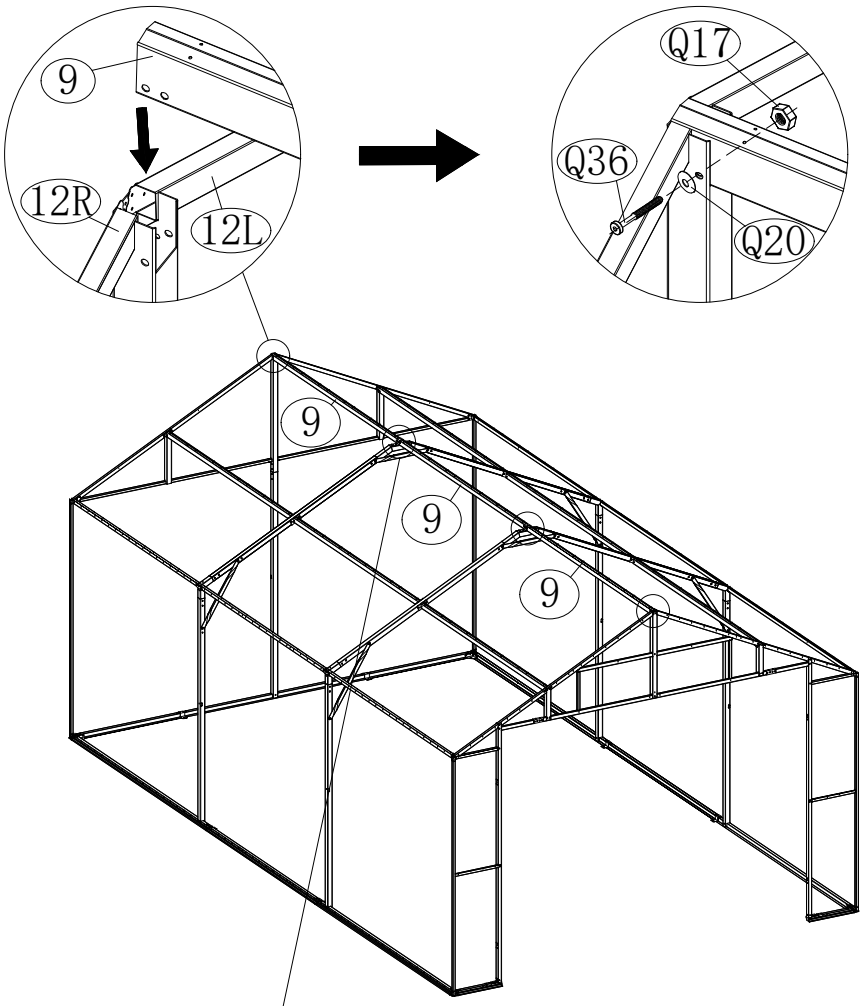

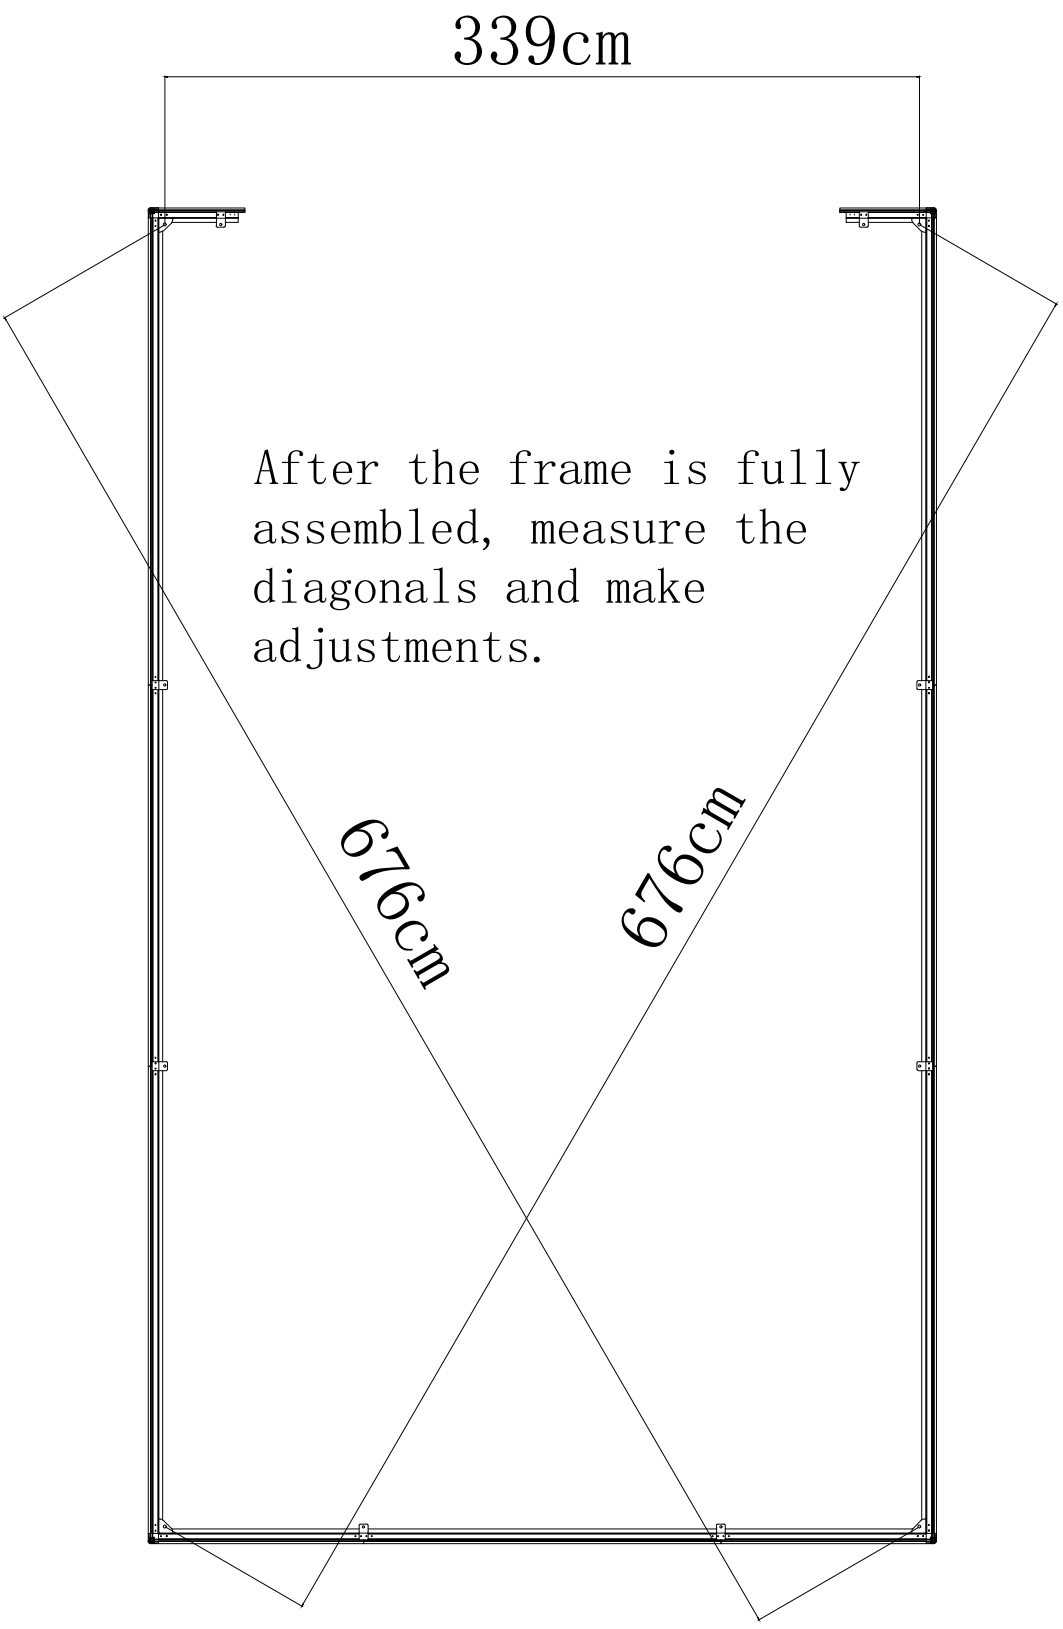

339cm
After the frame is fully assembled, measure the diagonals and make adjustments.
676cm
676cm


NO.	PART.	Qty.
W5		1
Q10	M4x10mm	6
Q18		6

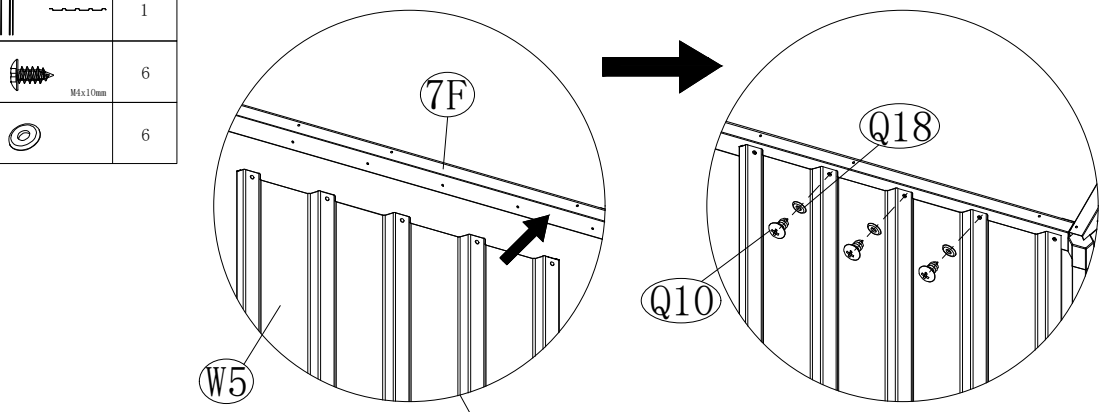

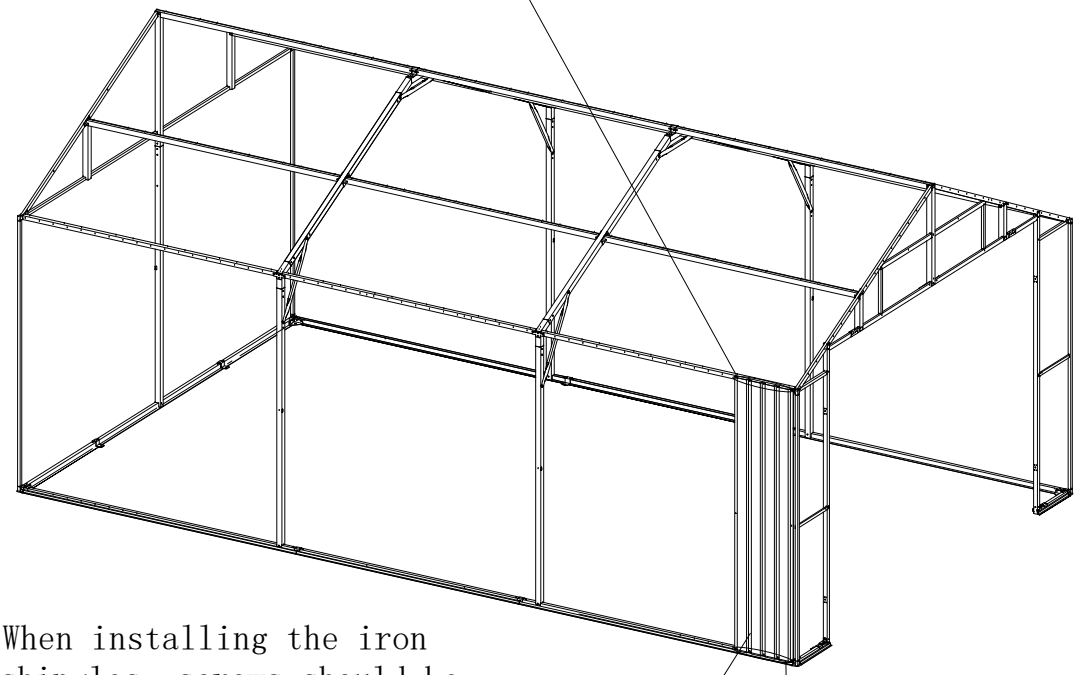



Note: When installing the iron sheet shingles, screws should be driven from the bottom upwards.

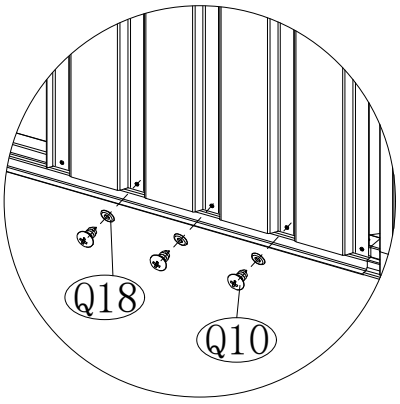


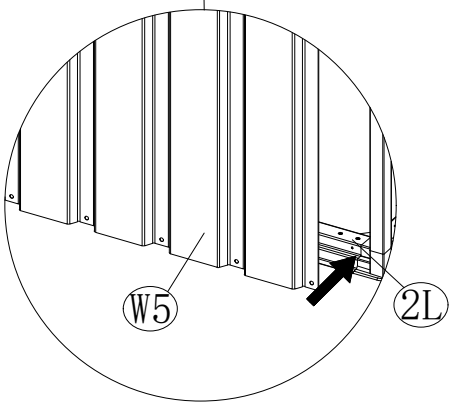


NO.	PART.	Qty.
W5		4
Q10	M4x10mm	32
Q18		32

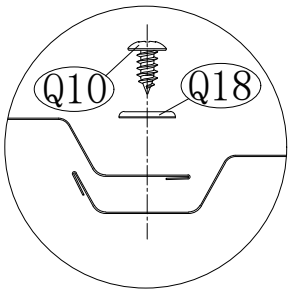


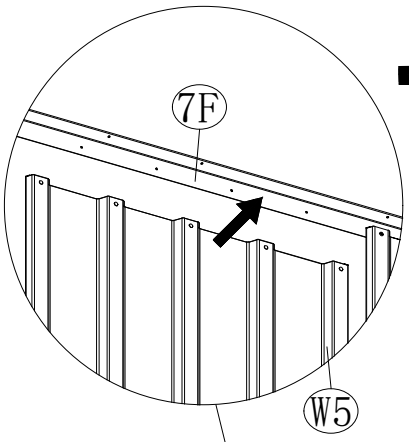


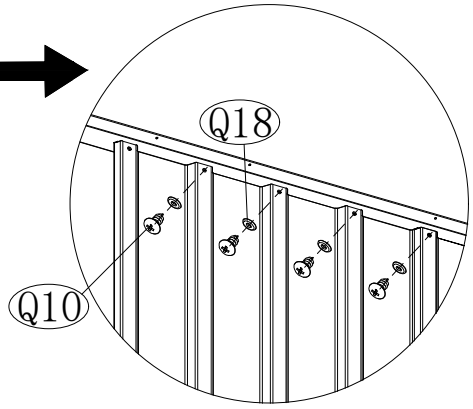

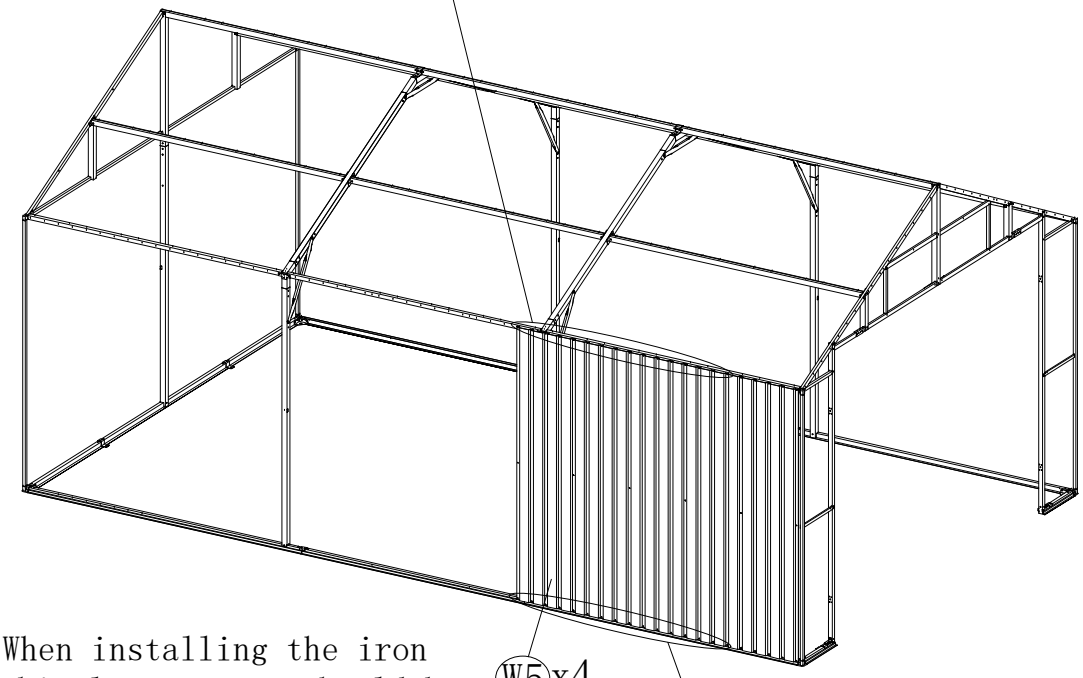


Note: When installing the iron sheet shingles, screws should be driven from the bottom upwards.

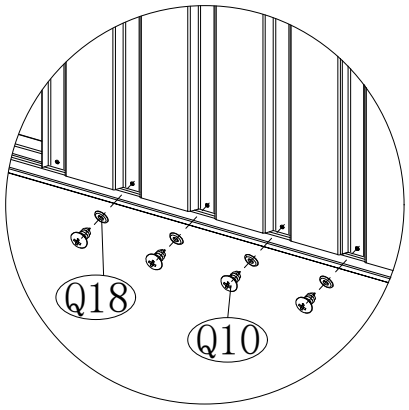

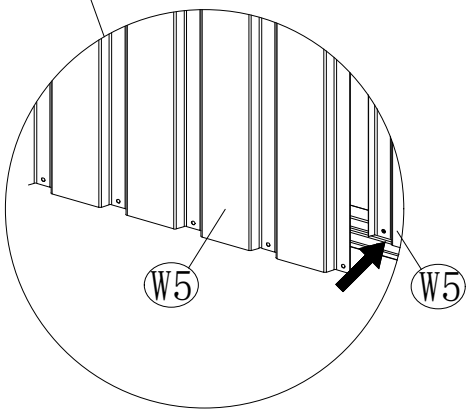


NO.	PART.	Qty.
36		2
Q10	 M4x10mm	4


NO.	PART.	Qty.
C3		1
C4		1
Q10	M4x10mm	16
Q18		16

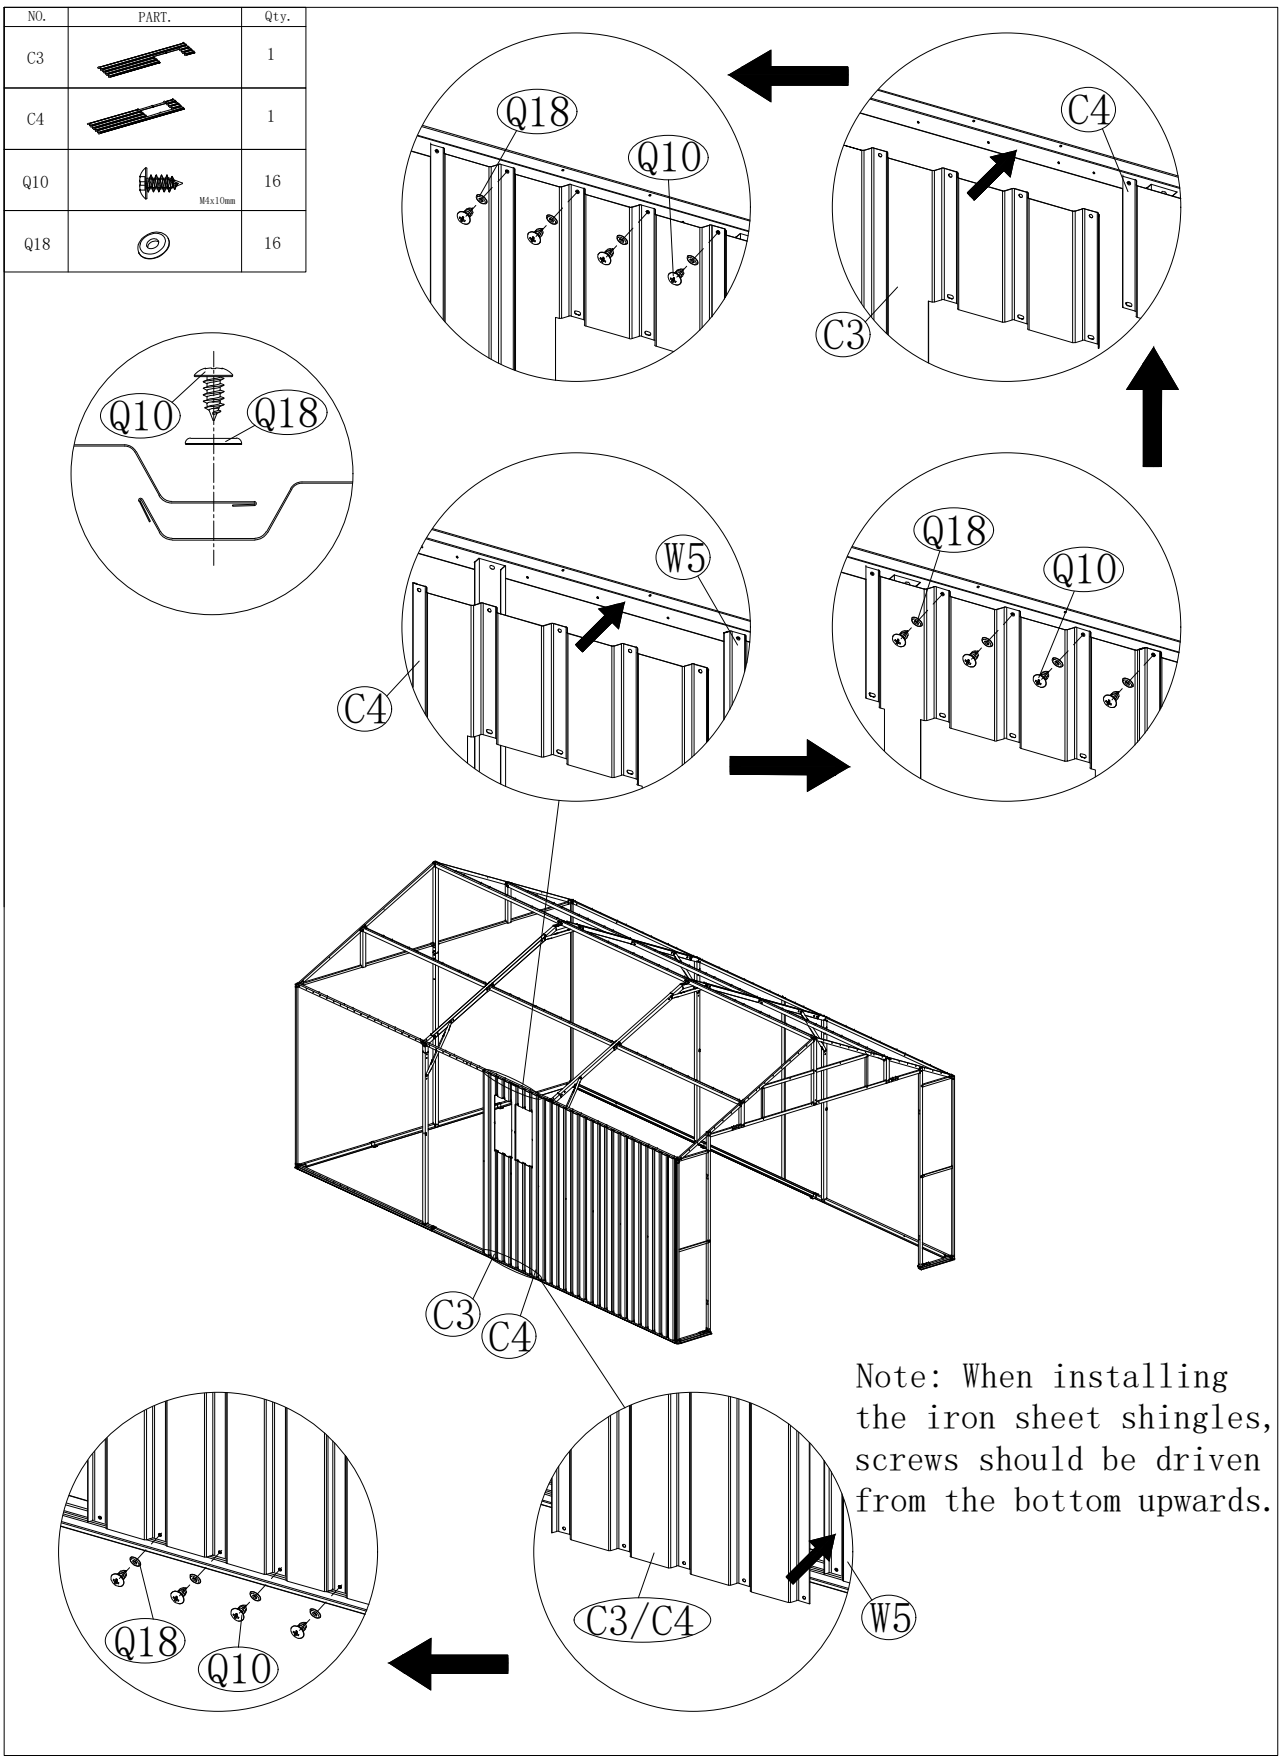



Note: When installing the iron sheet shingles, screws should be driven from the bottom upwards.


NO.	PART.	Qty.
W5		5
Q10	M4x10mm	40
Q18		40

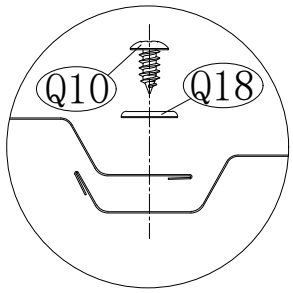

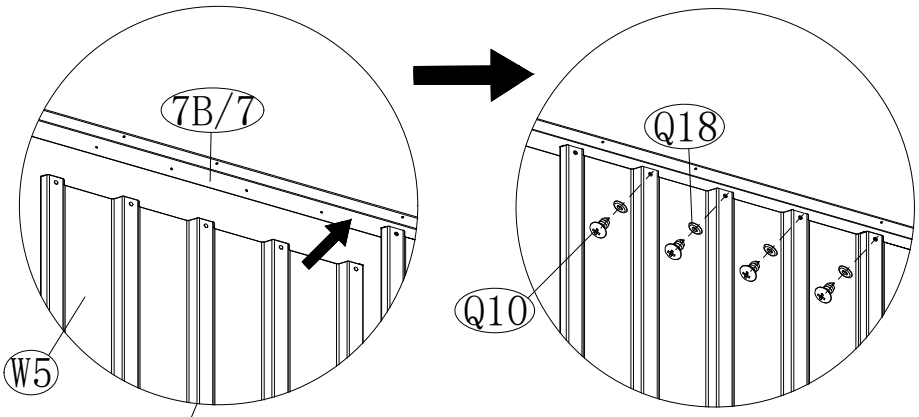

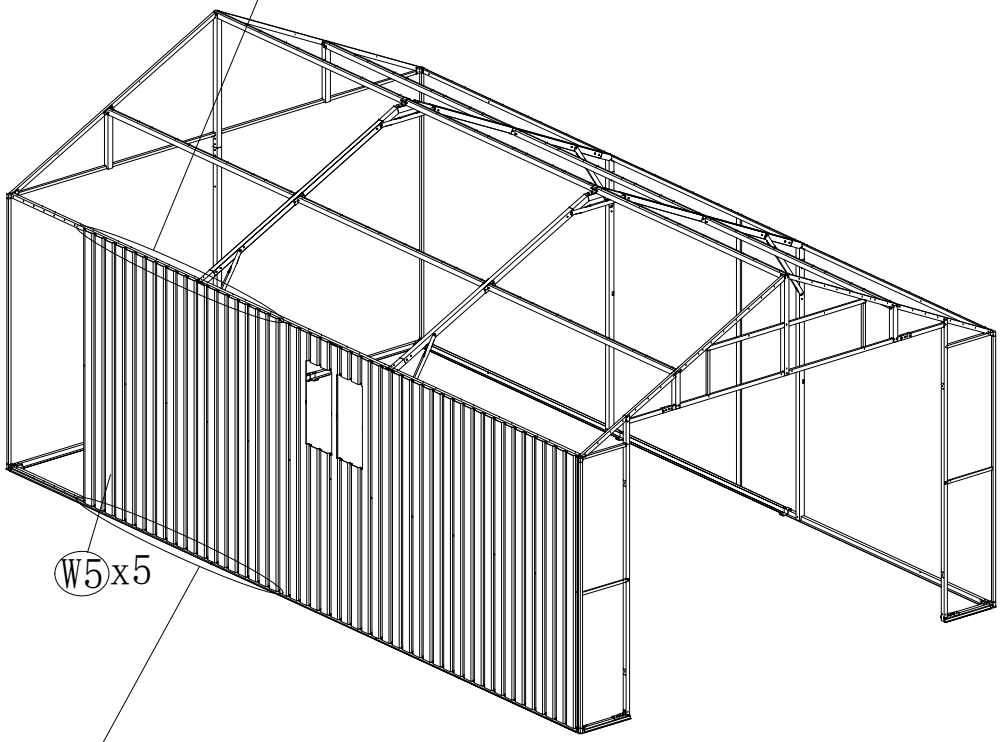


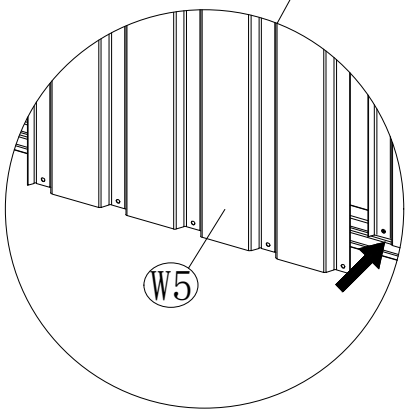

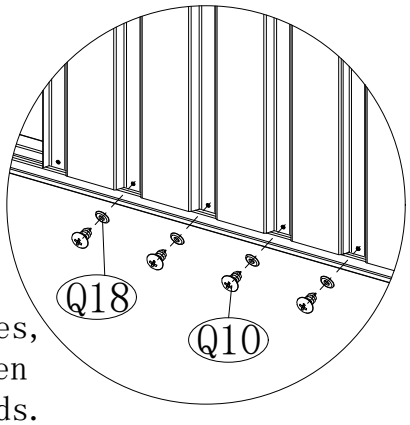


Note: When installing the iron sheet shingles, screws should be driven from the bottom upwards.


NO.	PART.	Qty.	NO.	PART.	Qty.
18R		1	Q35A		1
Q38	 M4x10mm	4	Q35B		1
Q54	 M4	4	Q35C		1

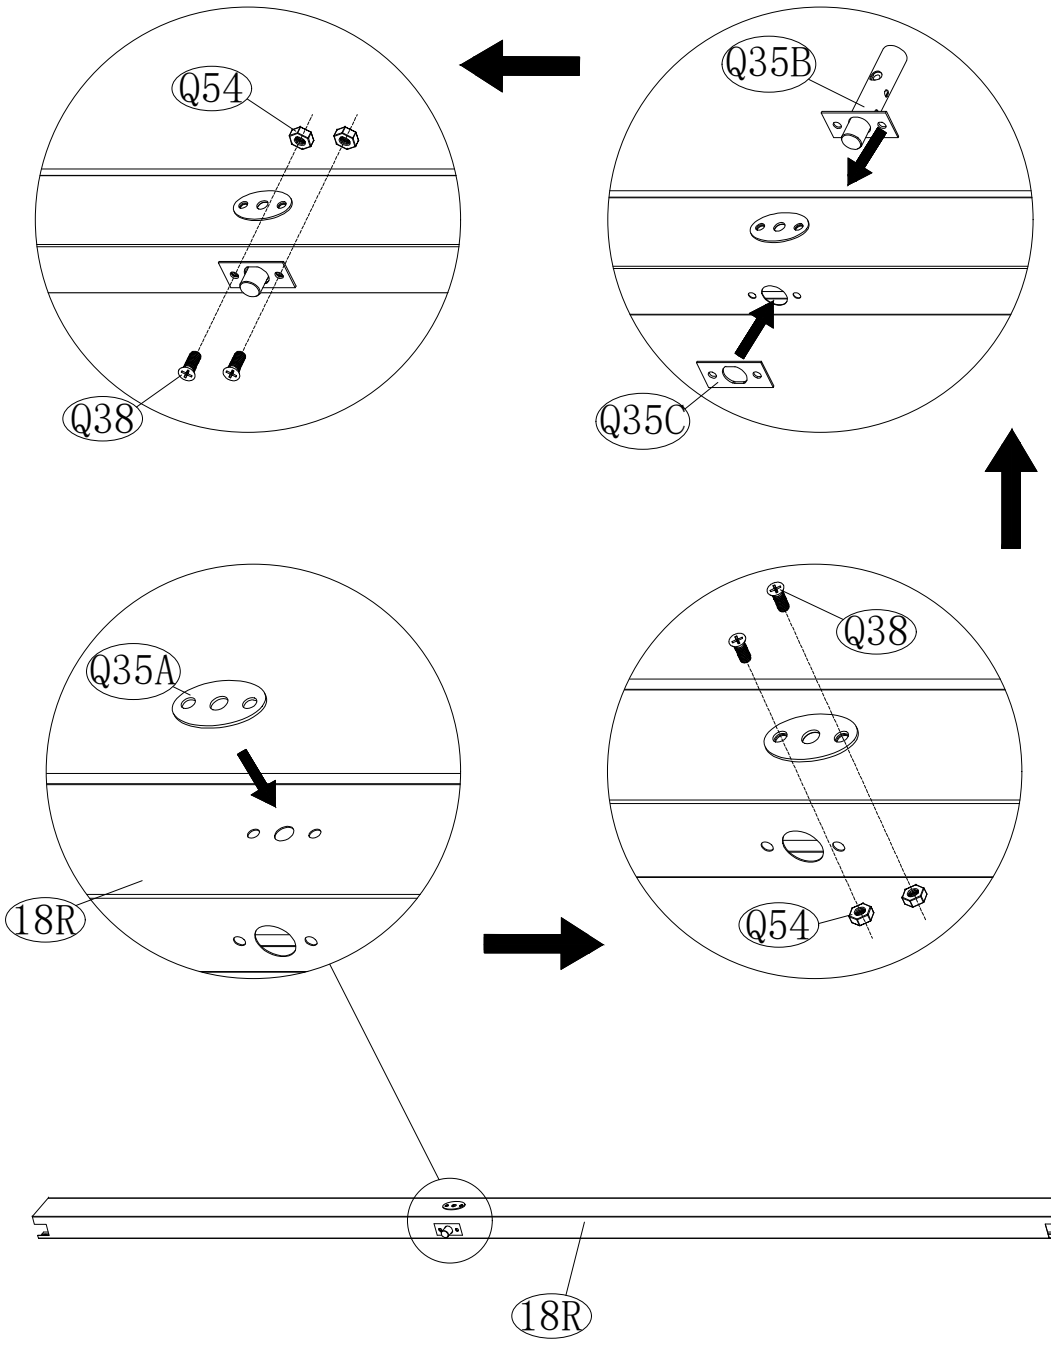


NO.	PART.	Qty.
Q10	M4x10mm	4
Q18		4

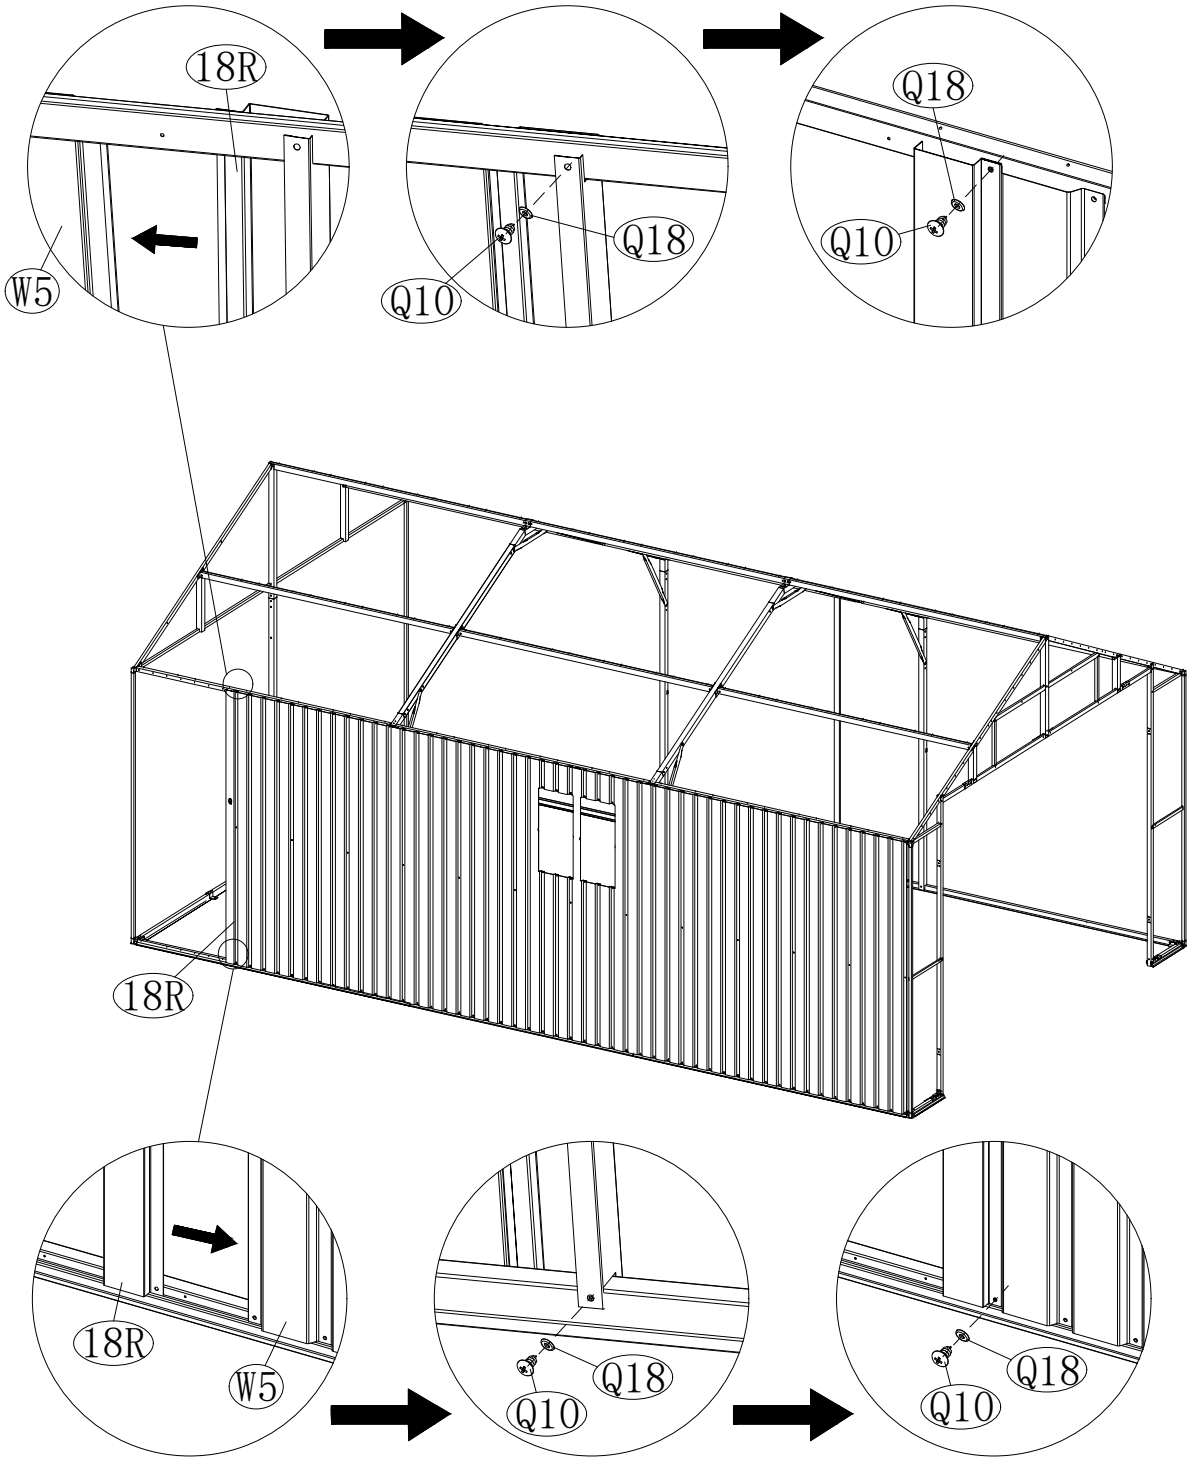



NO.	PART.	Qty.
18L		1
Q10	 M4x10mm	2

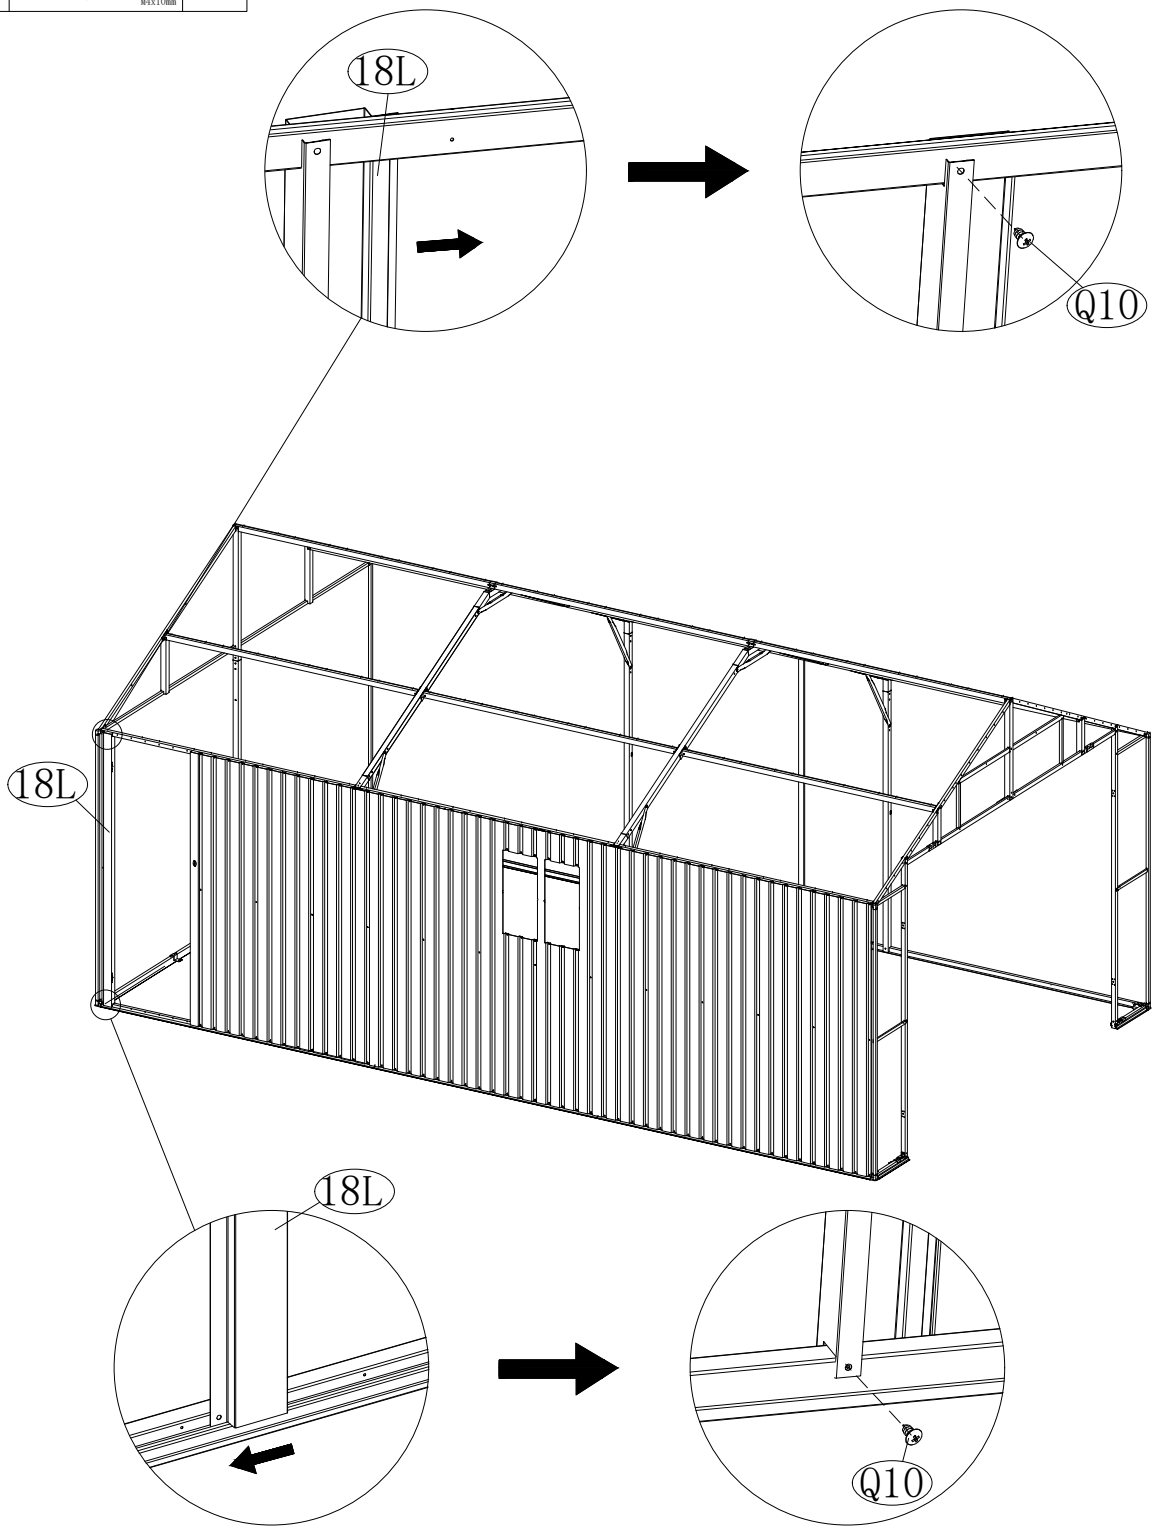


NO.	PART.	Qty.
W7		1
Q10	M4x10mm	2
Q18		2

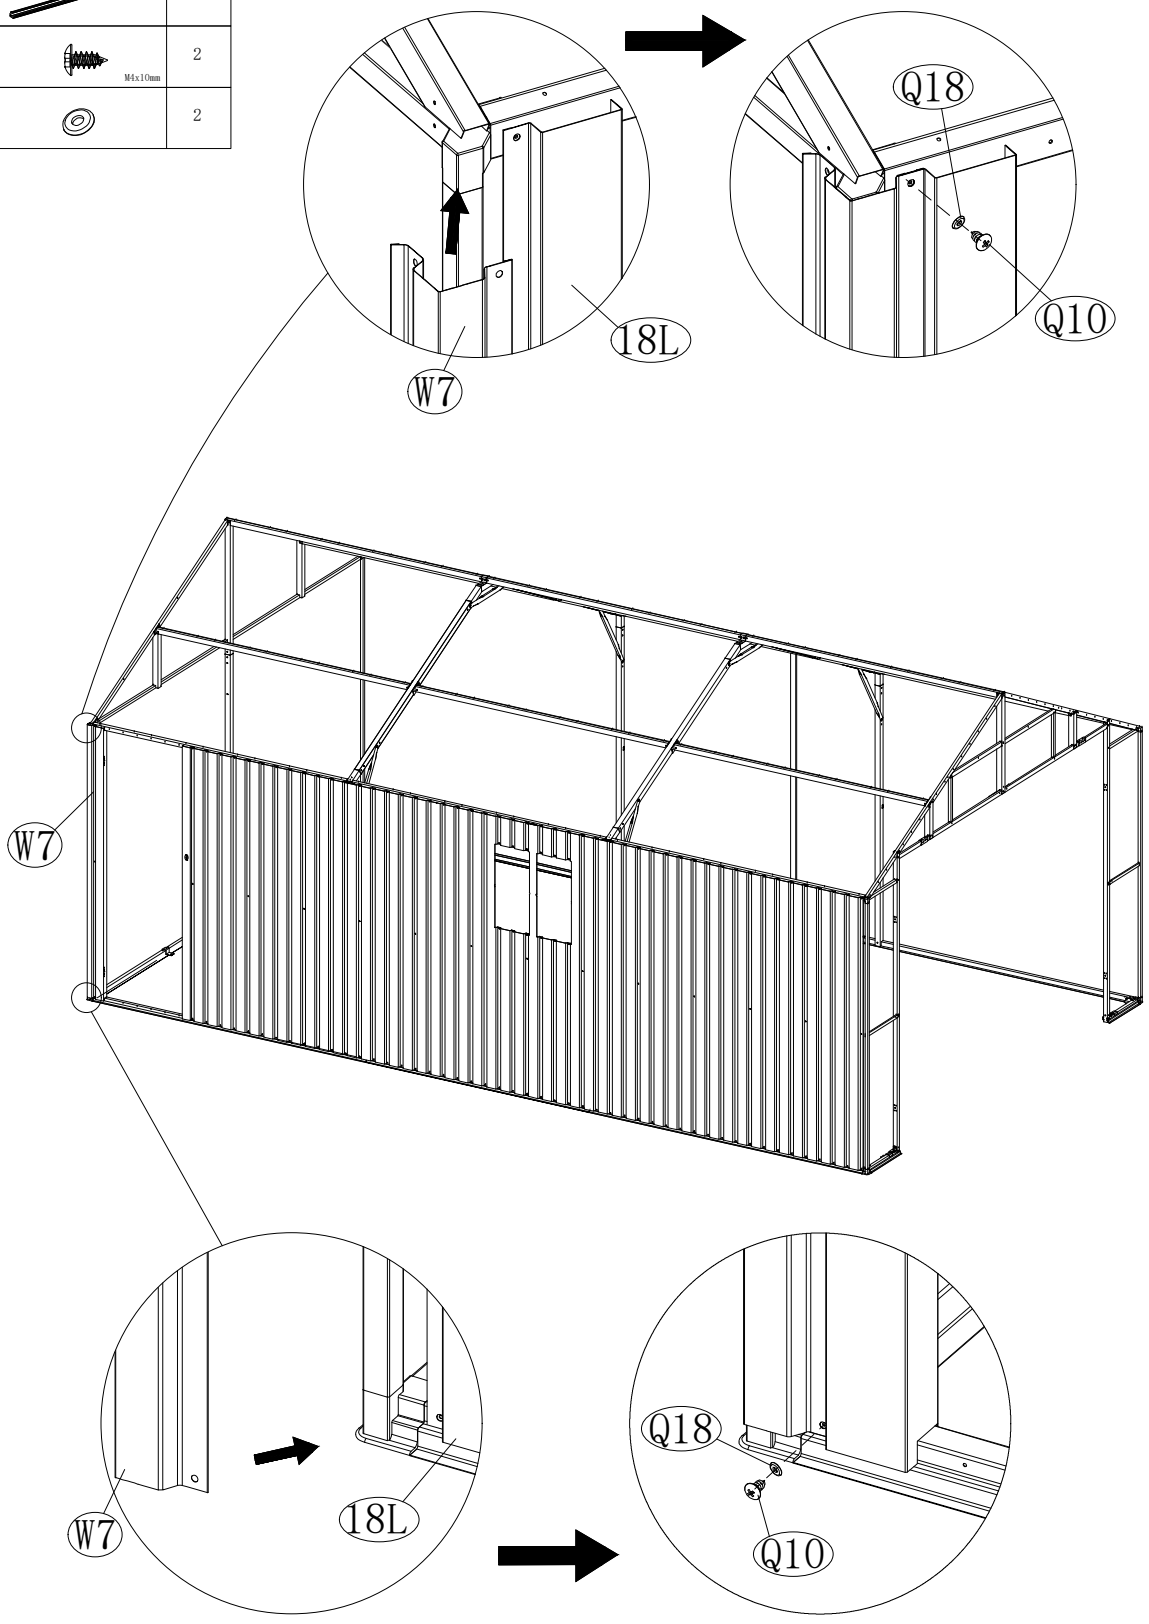

NO.	PART.	Qty.
23X		1
Q10	 M4x10mm	6

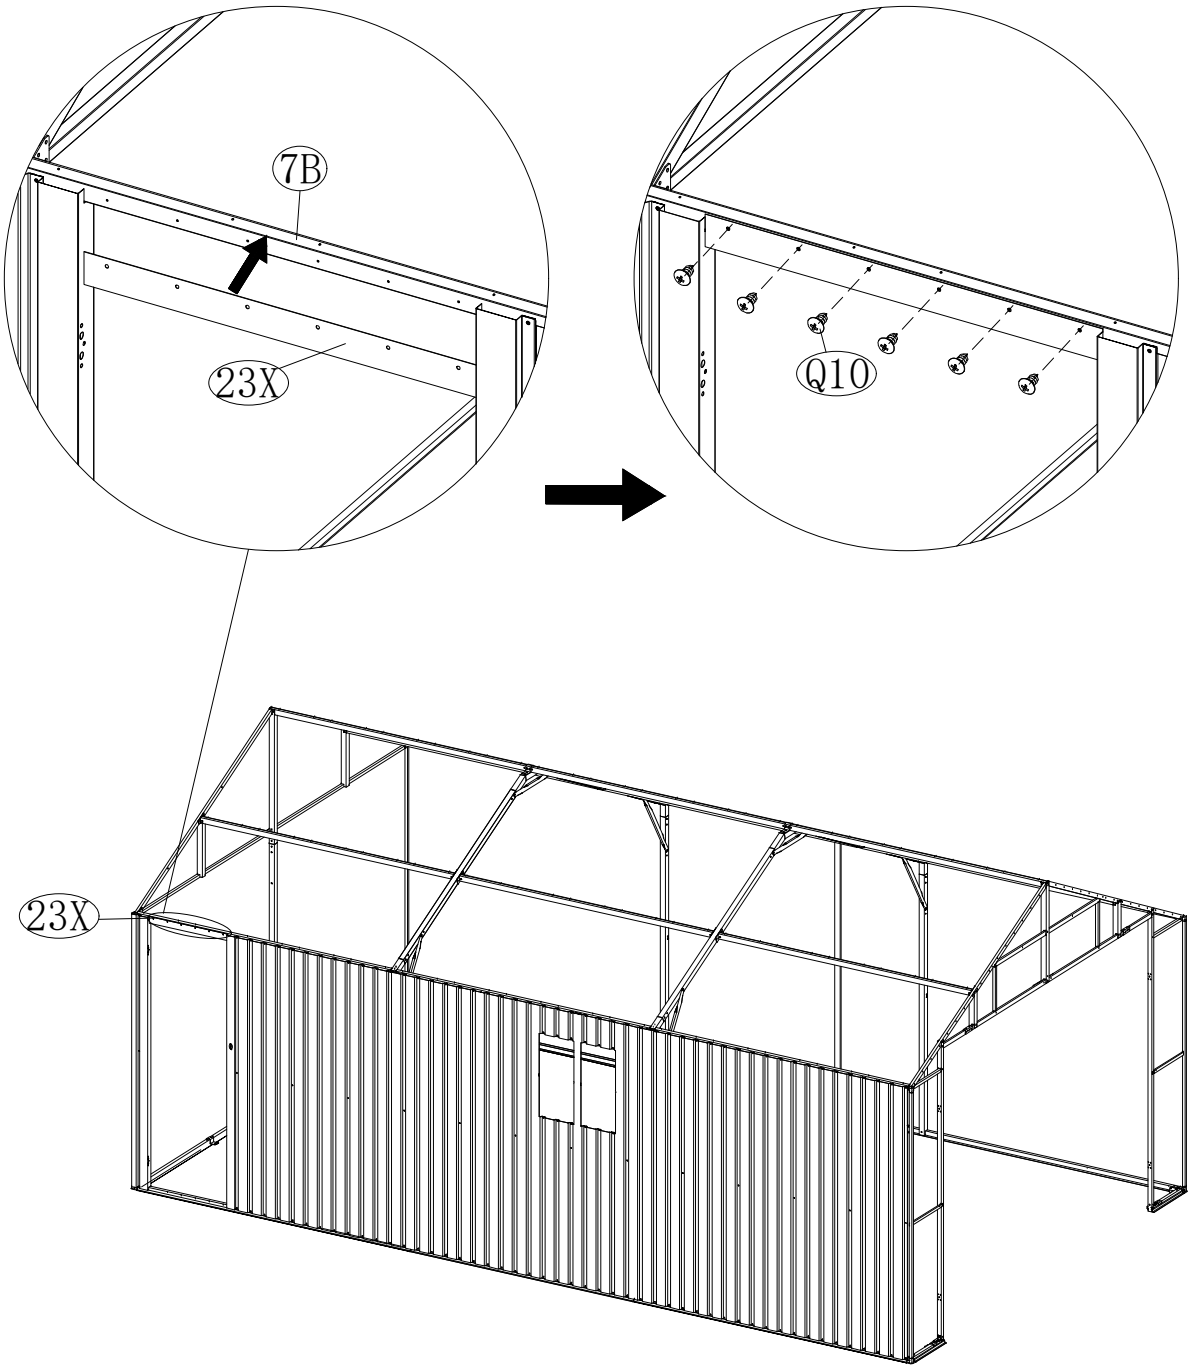



NO.	PART.	Qty.
W3		1
W1R		1
Q10	M4x10mm	9
Q18		9

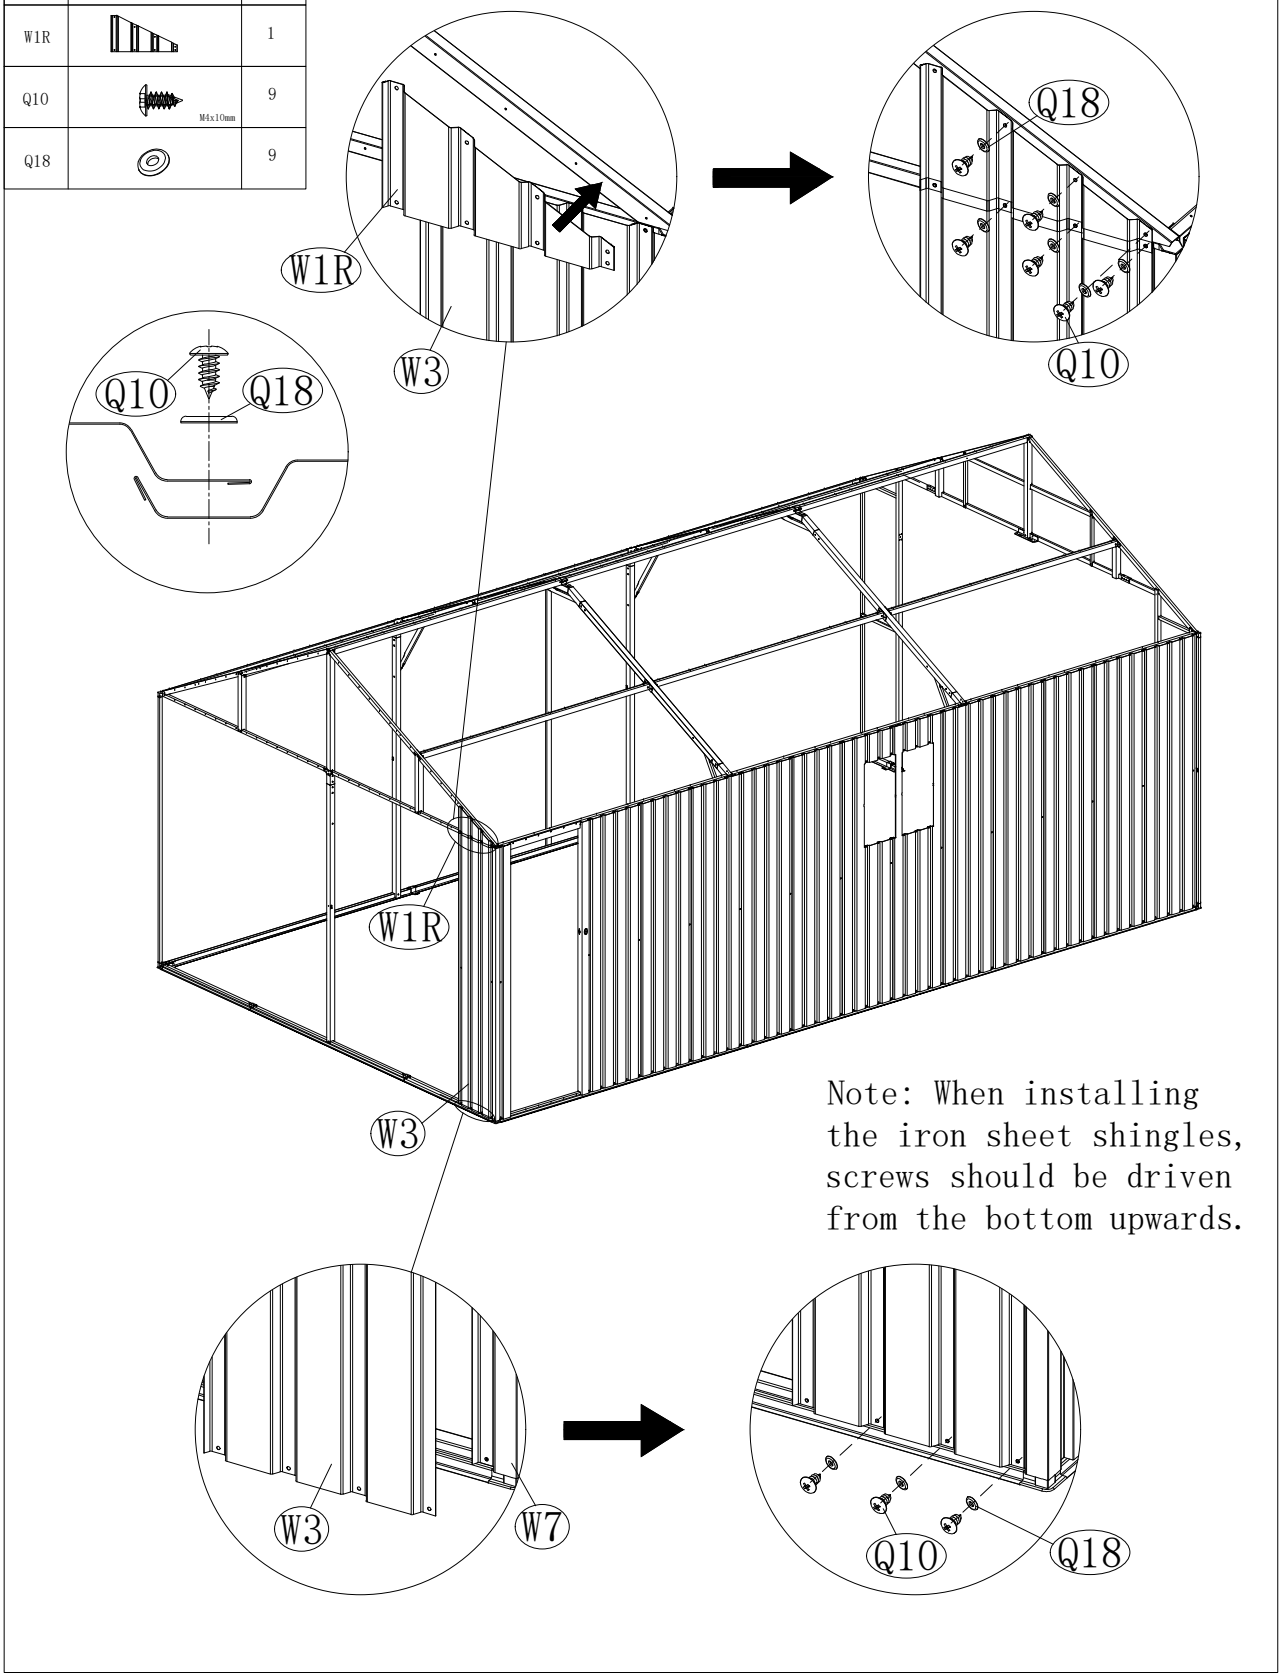



Note: When installing the iron sheet shingles, screws should be driven from the bottom upwards.

NO.	PART.	Qty.
W3		3
W2R		1
W3R		1
W4R		1
Q10	M4x10mm	27
Q18		27

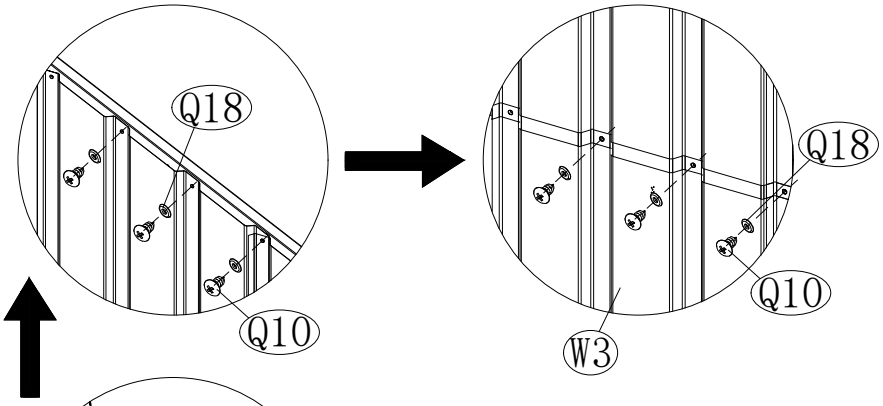

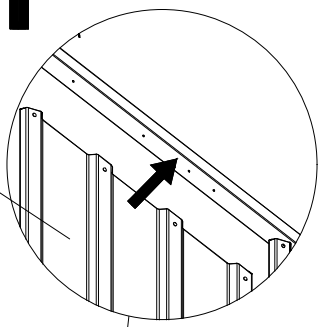


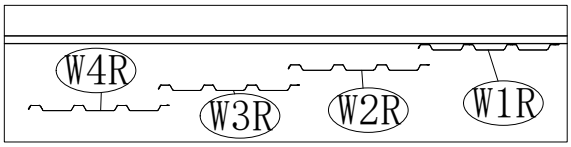


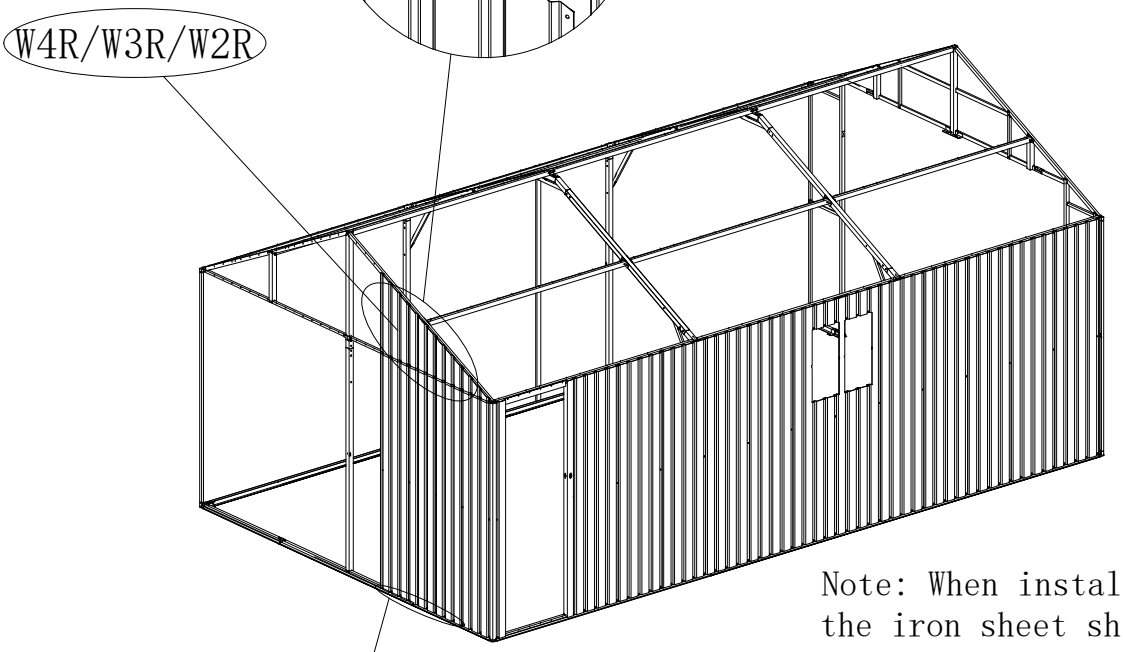


W3x3


Note: When installing the iron sheet shingles, screws should be driven from the bottom upwards.

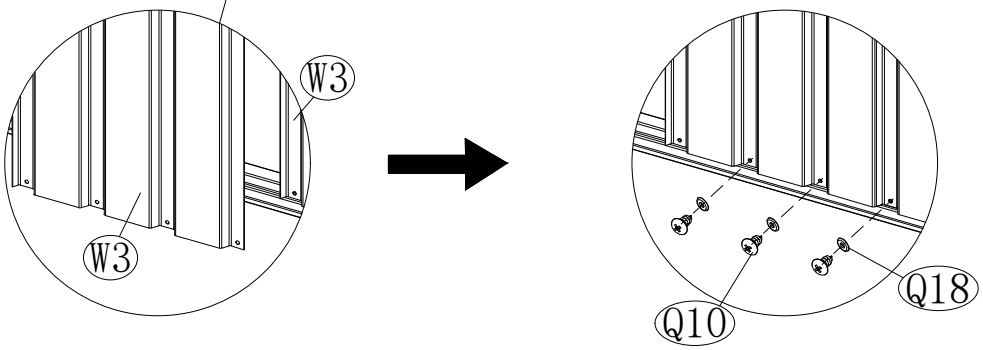



NO.	PART.	Qty.
W5		1
W5R		1
Q10	 M4x10mm	12
Q18		12

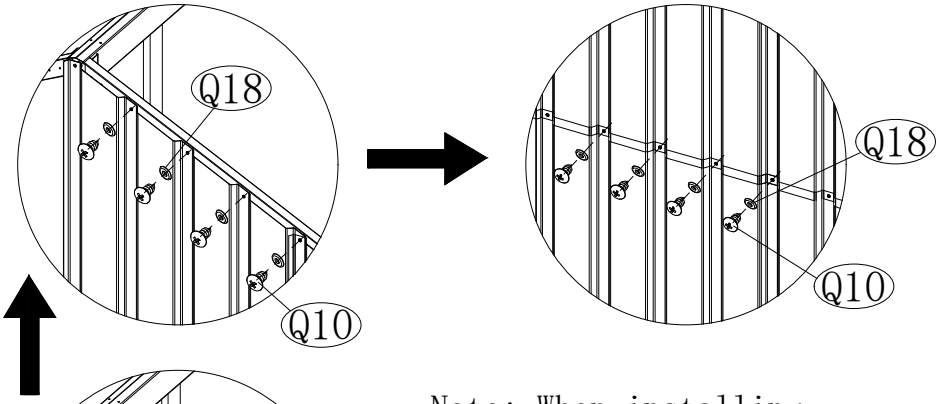



Note: When installing the iron sheet shingles, screws should be driven from the bottom upwards.

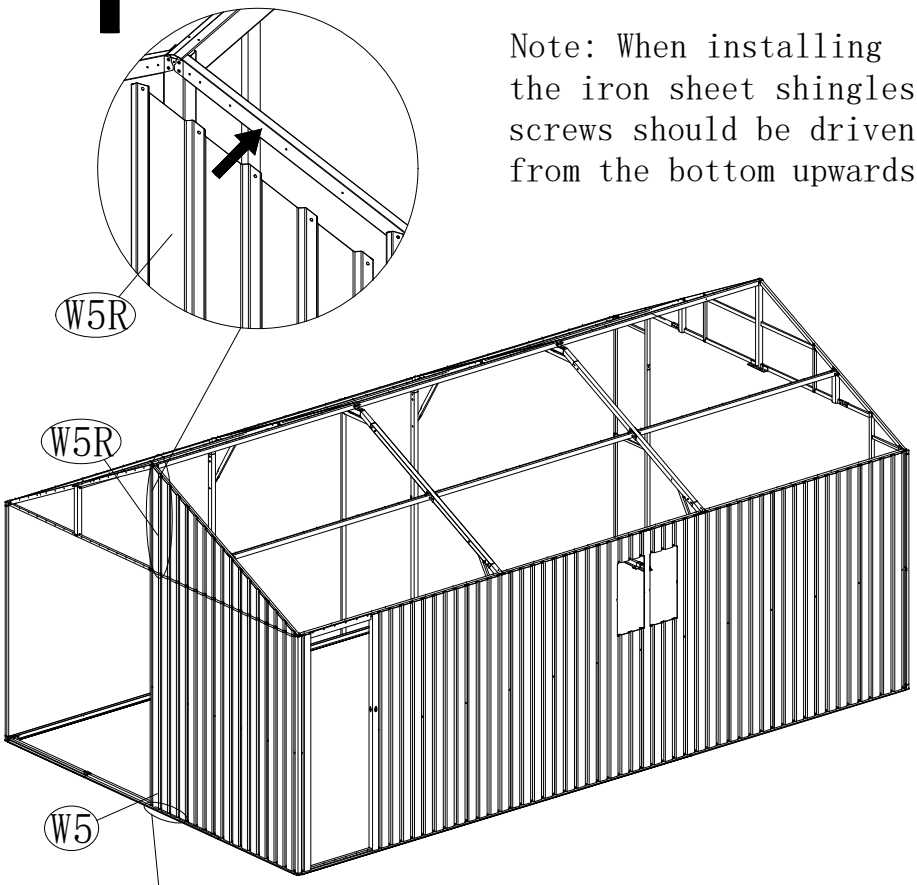


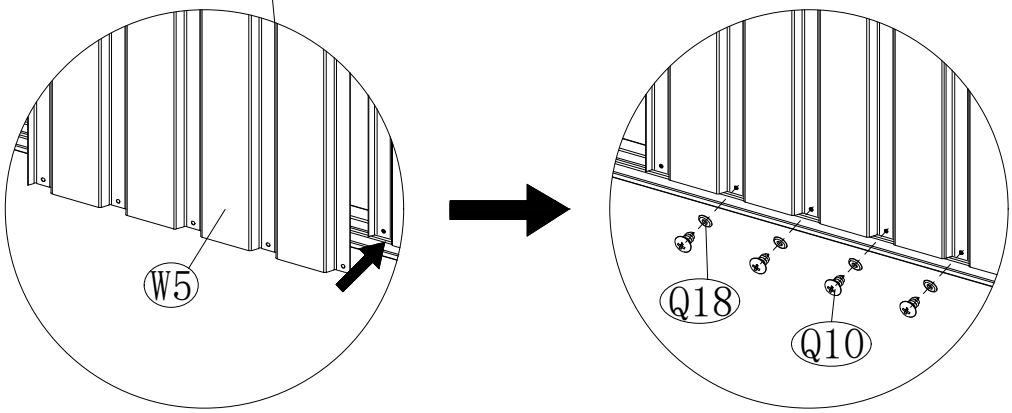


NO.	PART.	Qty.
W5		1
W5L		1
Q10	 M4x10mm	12
Q18		12

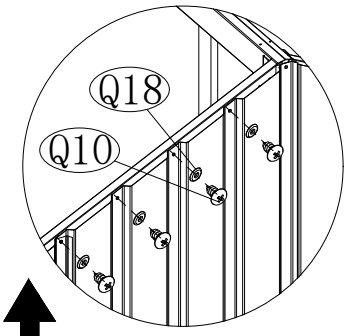


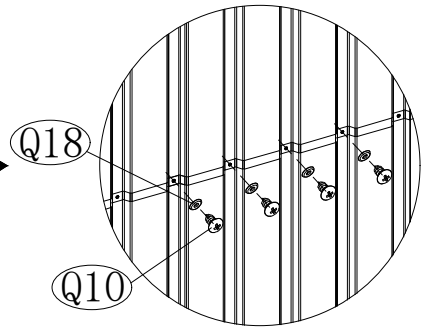


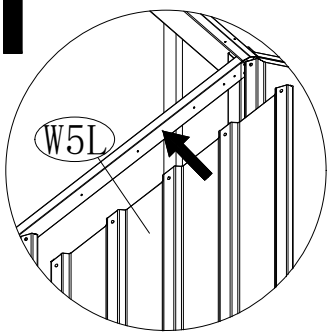


Note: When installing the iron sheet shingles, screws should be driven from the bottom upwards.

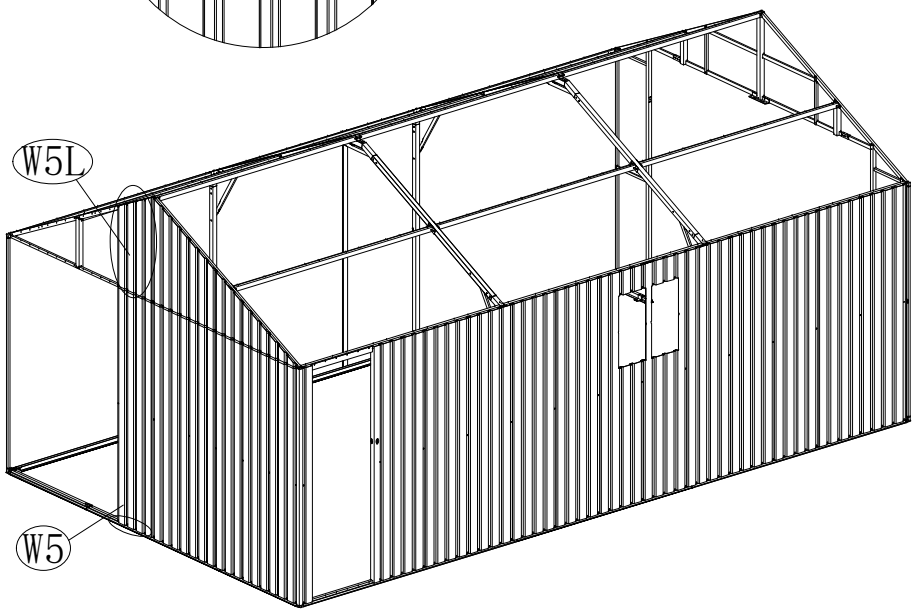


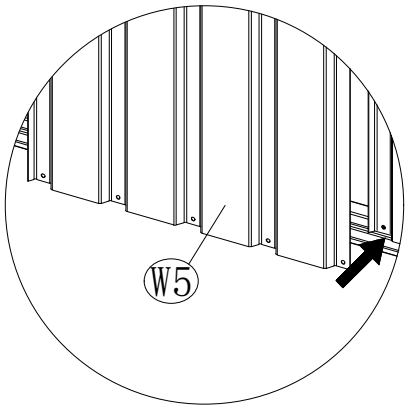

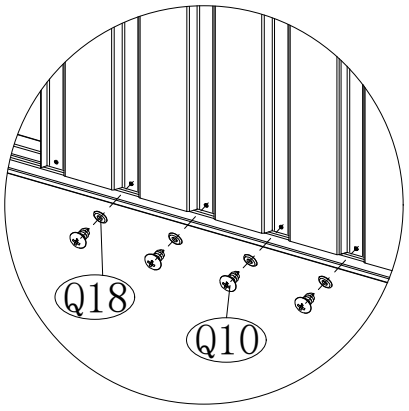



NO.	PART.	Qty.
W3		3
W2L		1
W3L		1
W4L		1
Q10	M4x10mm	27
Q18		27

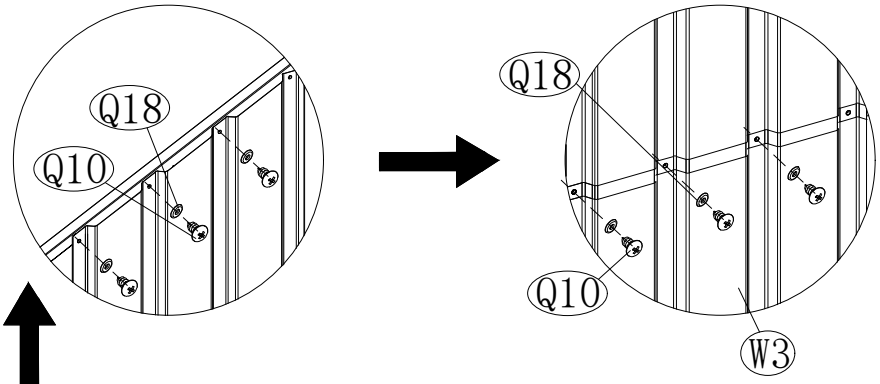

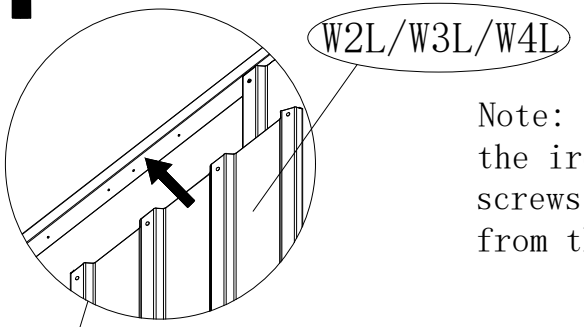



Note: When installing the iron sheet shingles, screws should be driven from the bottom upwards.

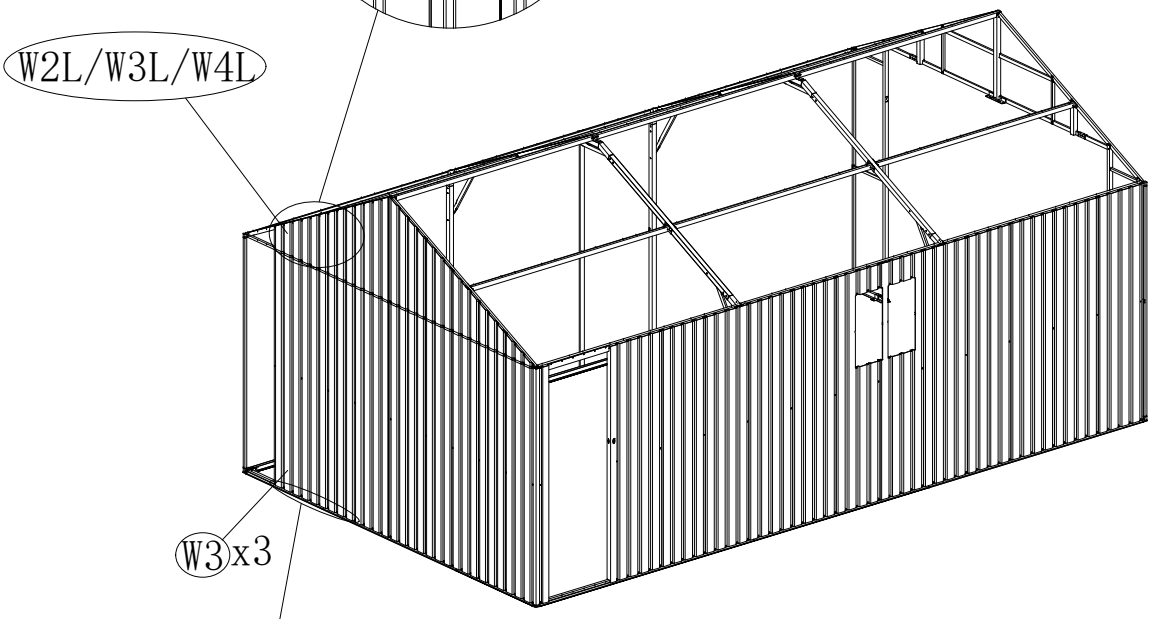


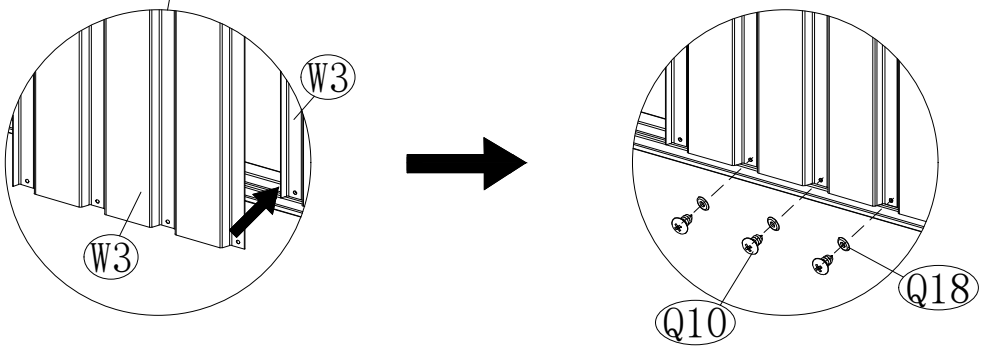


NO.	PART.	Qty.
W3		1
W1L		1
Q10	 M4x10mm	10
Q18		10

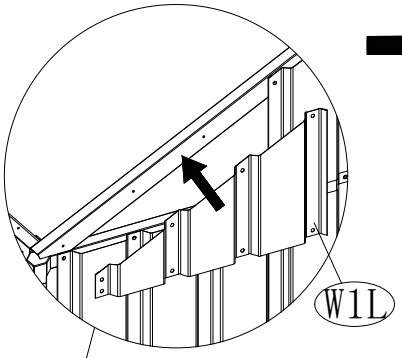


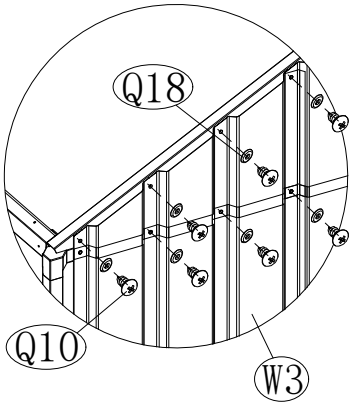

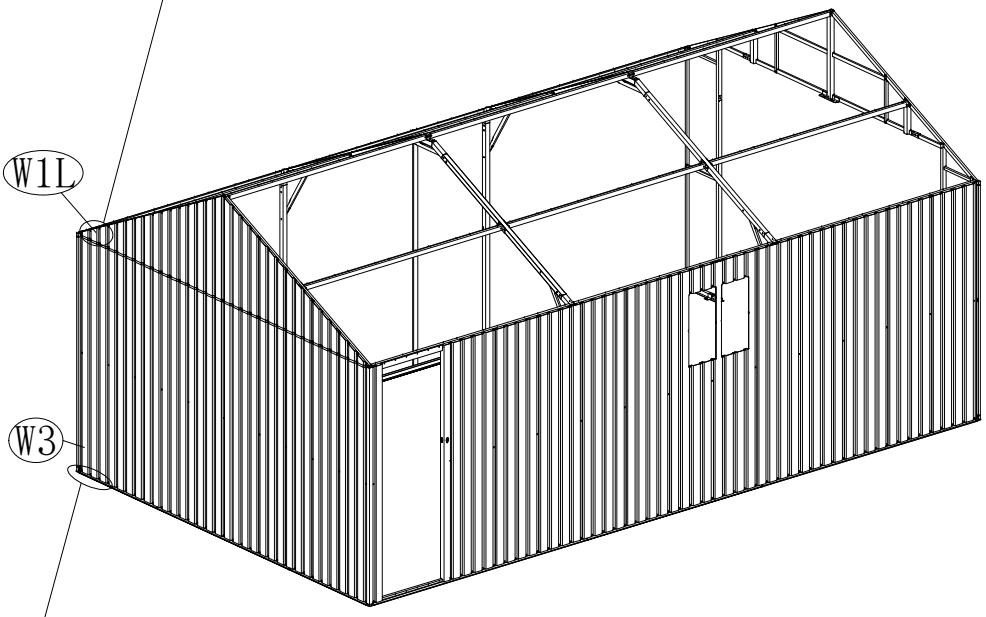


Note: When installing the iron sheet shingles, screws should be driven from the bottom upwards.

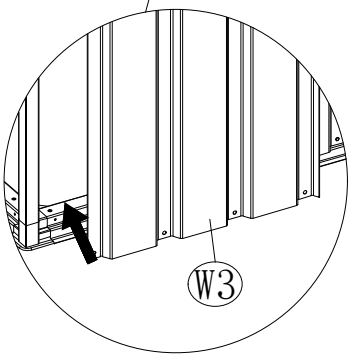


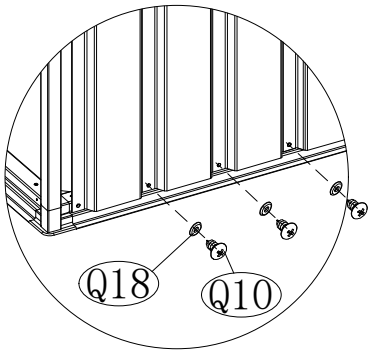


NO.	PART.	Qty.
W7		1
Q10	M4x10mm	2
Q18		2

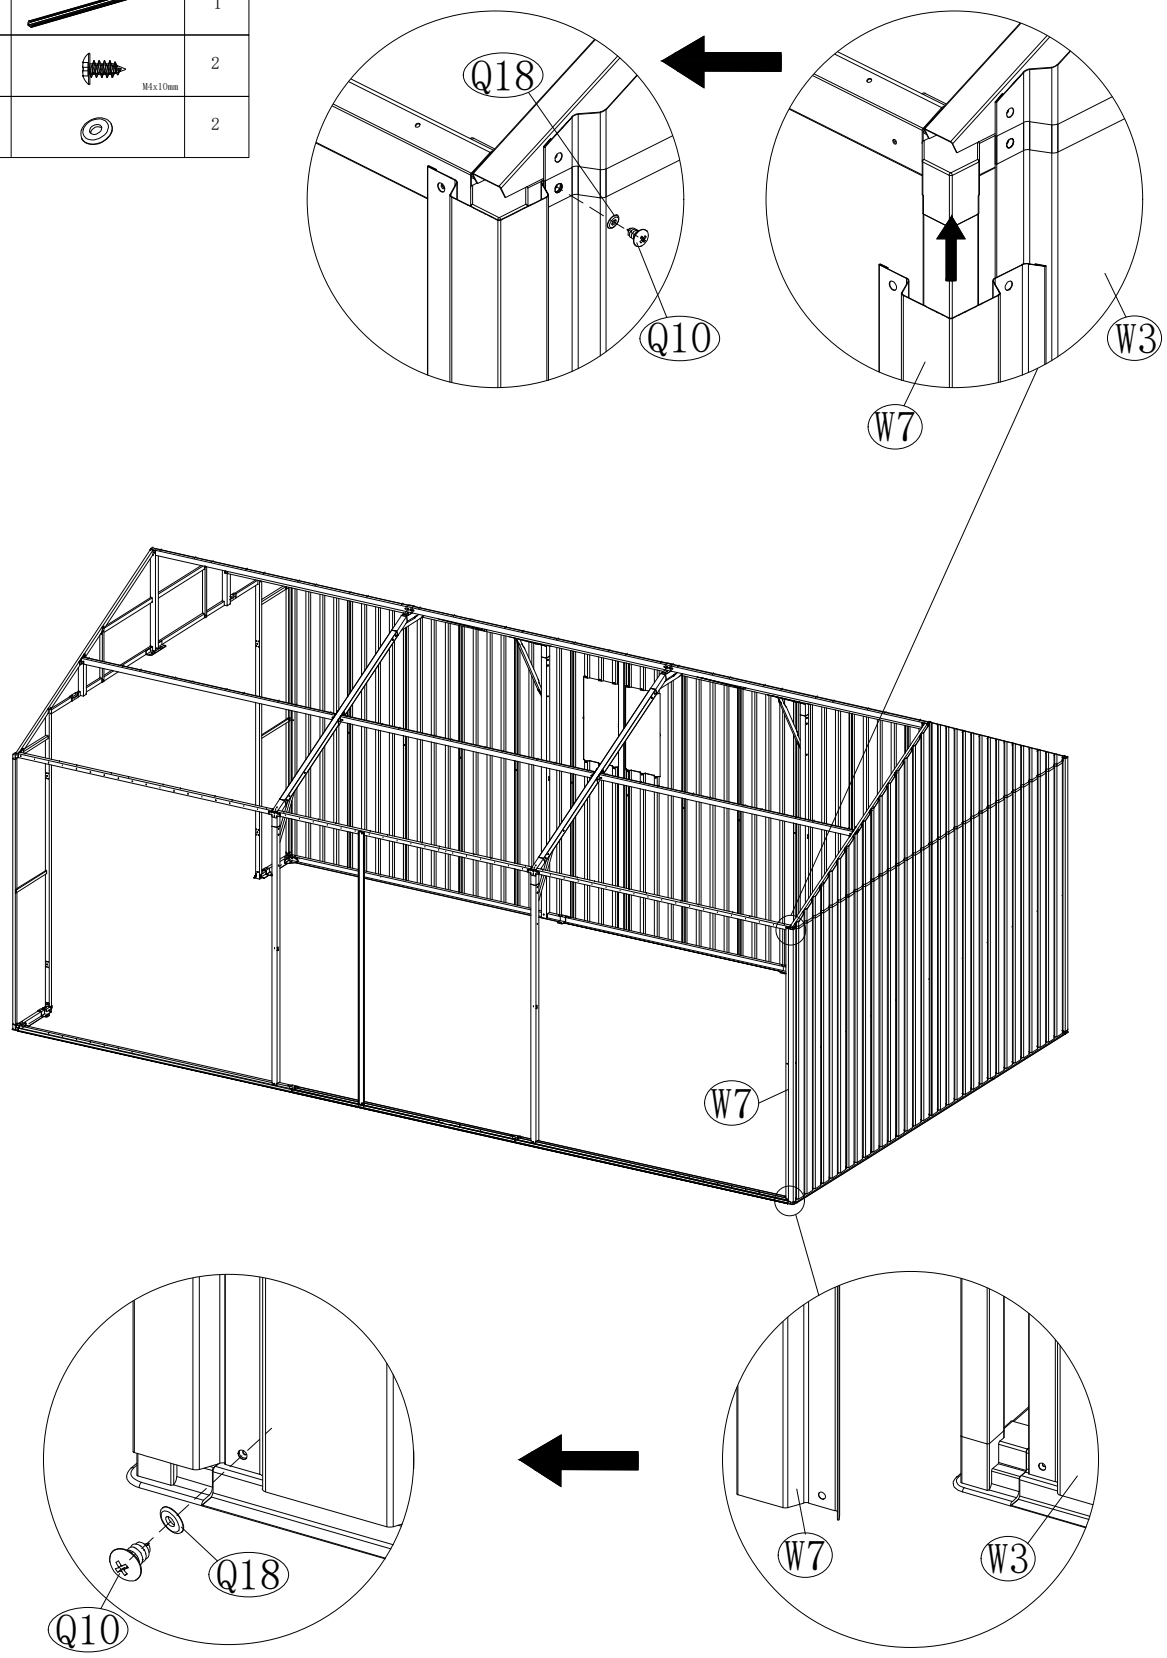



NO.	PART.	Qty.
W3		1
Q10	M4x10mm	6
Q18		6

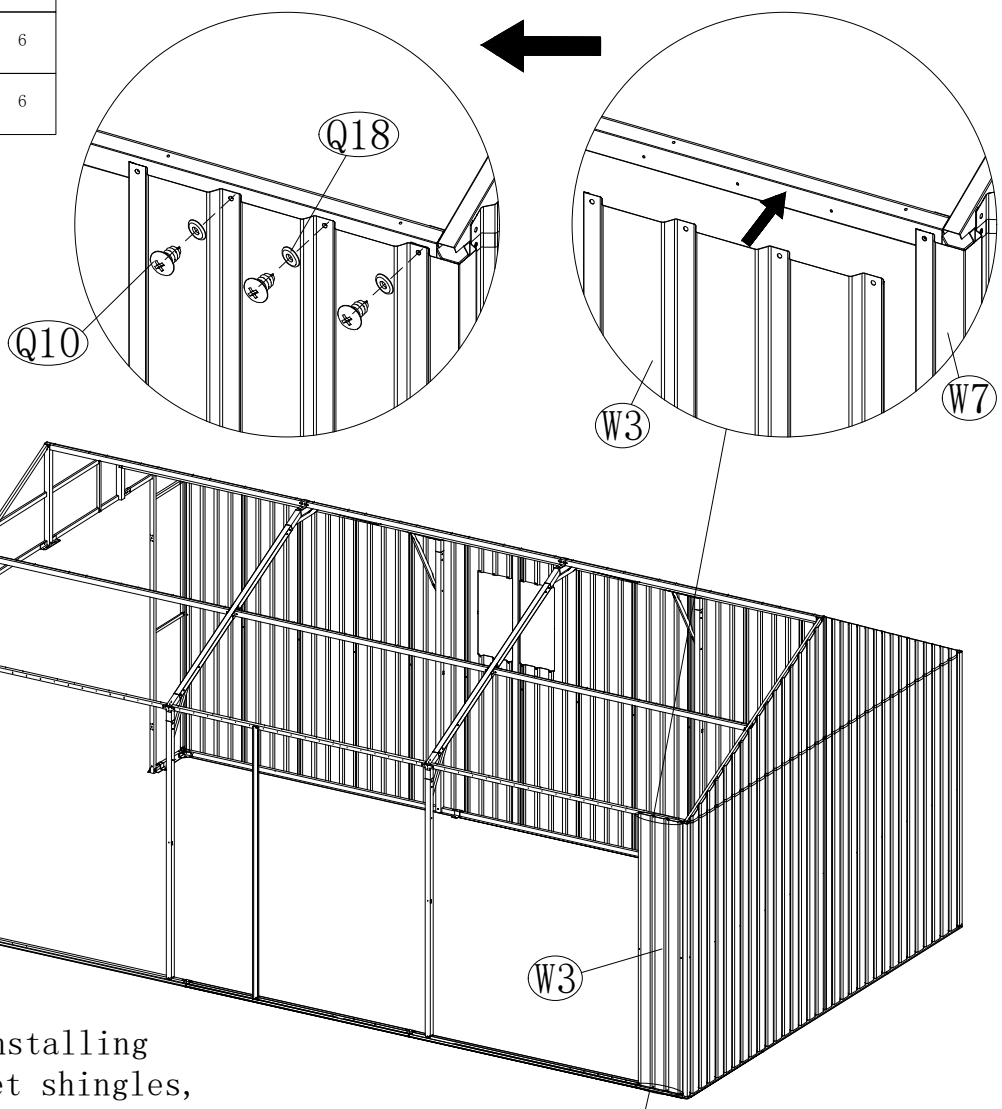


Note: When installing the iron sheet shingles, screws should be driven from the bottom upwards.

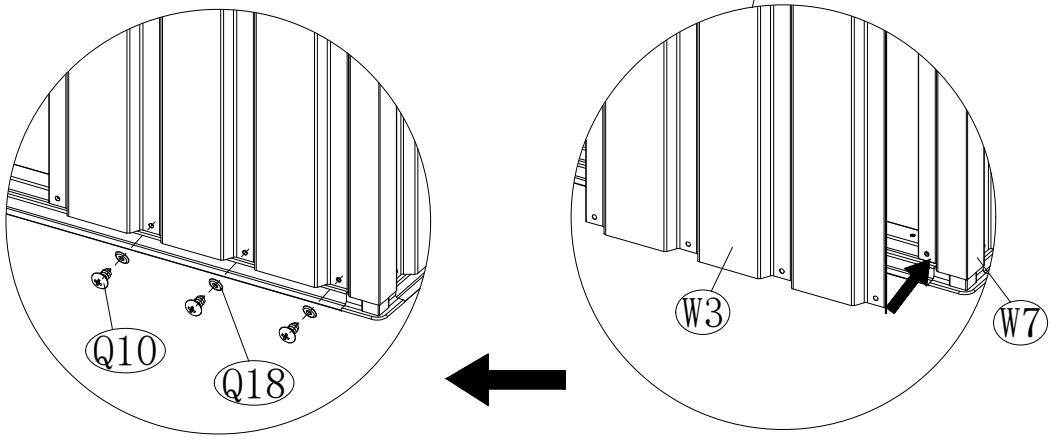


NO.	PART.	Qty.
W5		6
Q10	 M4x10mm	48
Q18		48

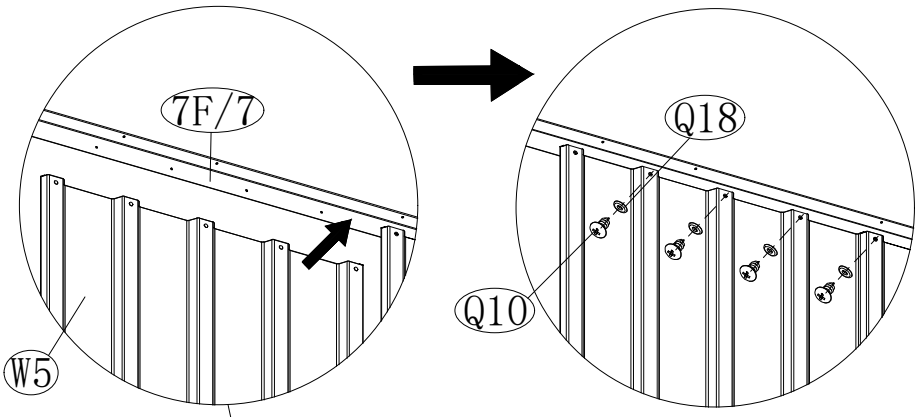

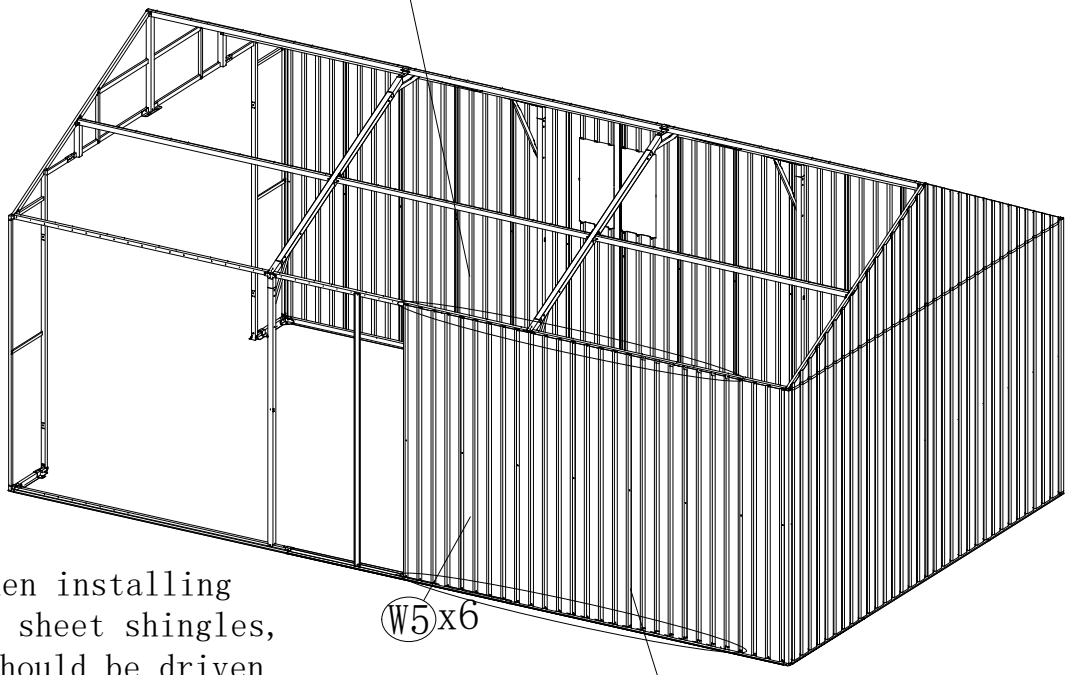



Note: When installing the iron sheet shingles, screws should be driven from the bottom upwards.

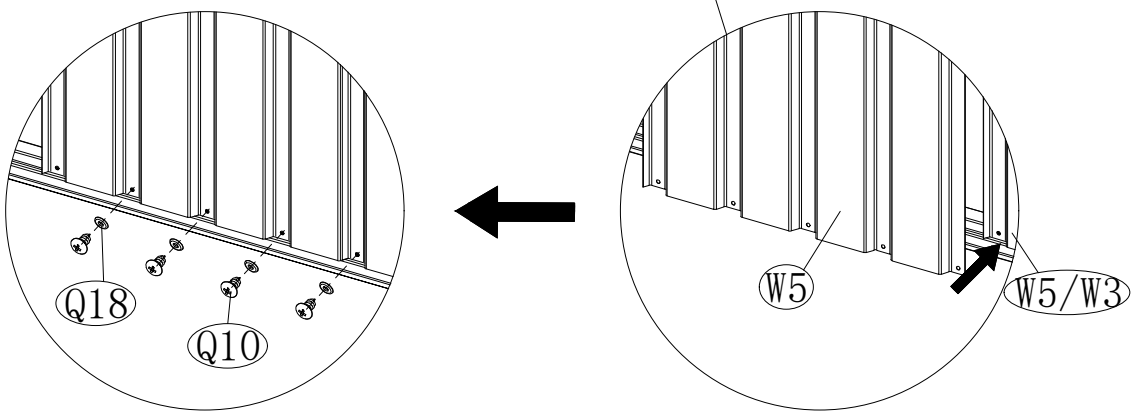



NO.	PART.	Qty.
C3		1
C4		1
Q10	 M4x10mm	16
Q18		16


Note: When installing the iron sheet shingles, screws should be driven from the bottom upwards.

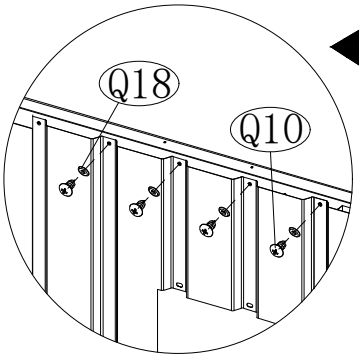


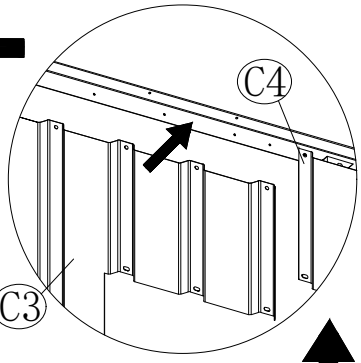


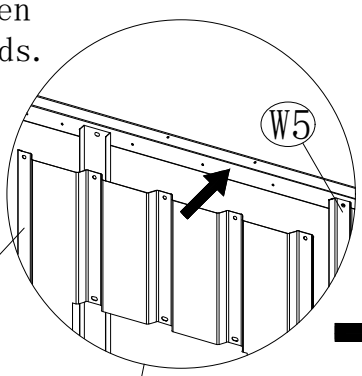

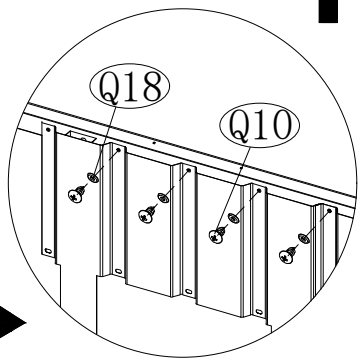


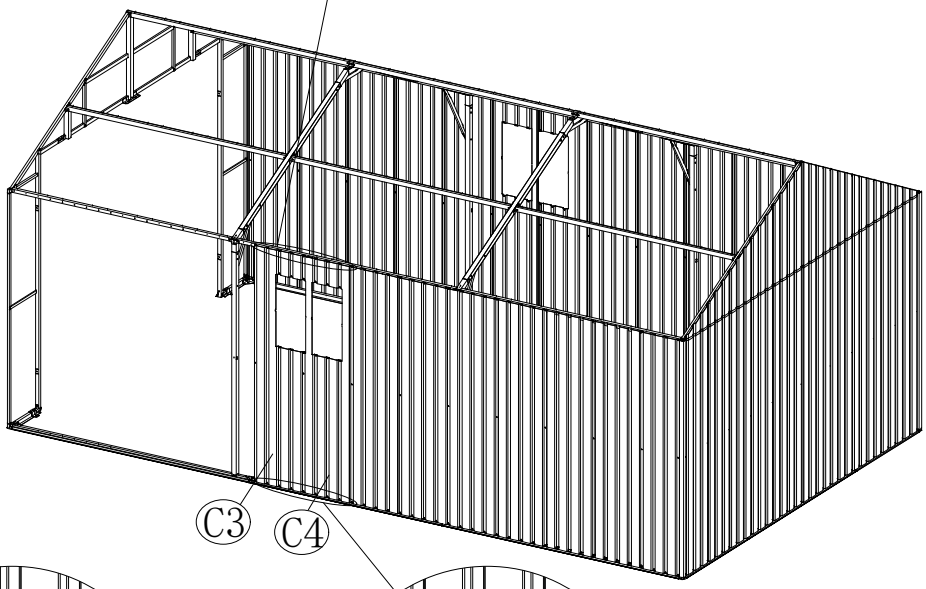

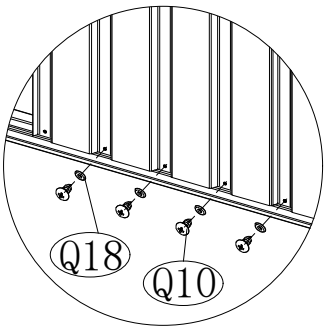


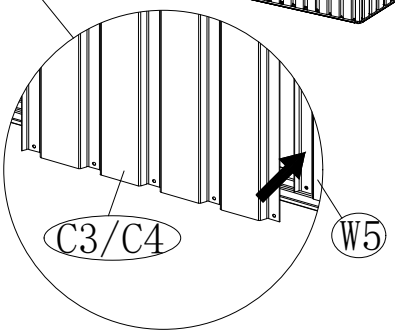



NO.	PART.	Qty.
W5		5
Q10	M4x10mm	40
Q18		40

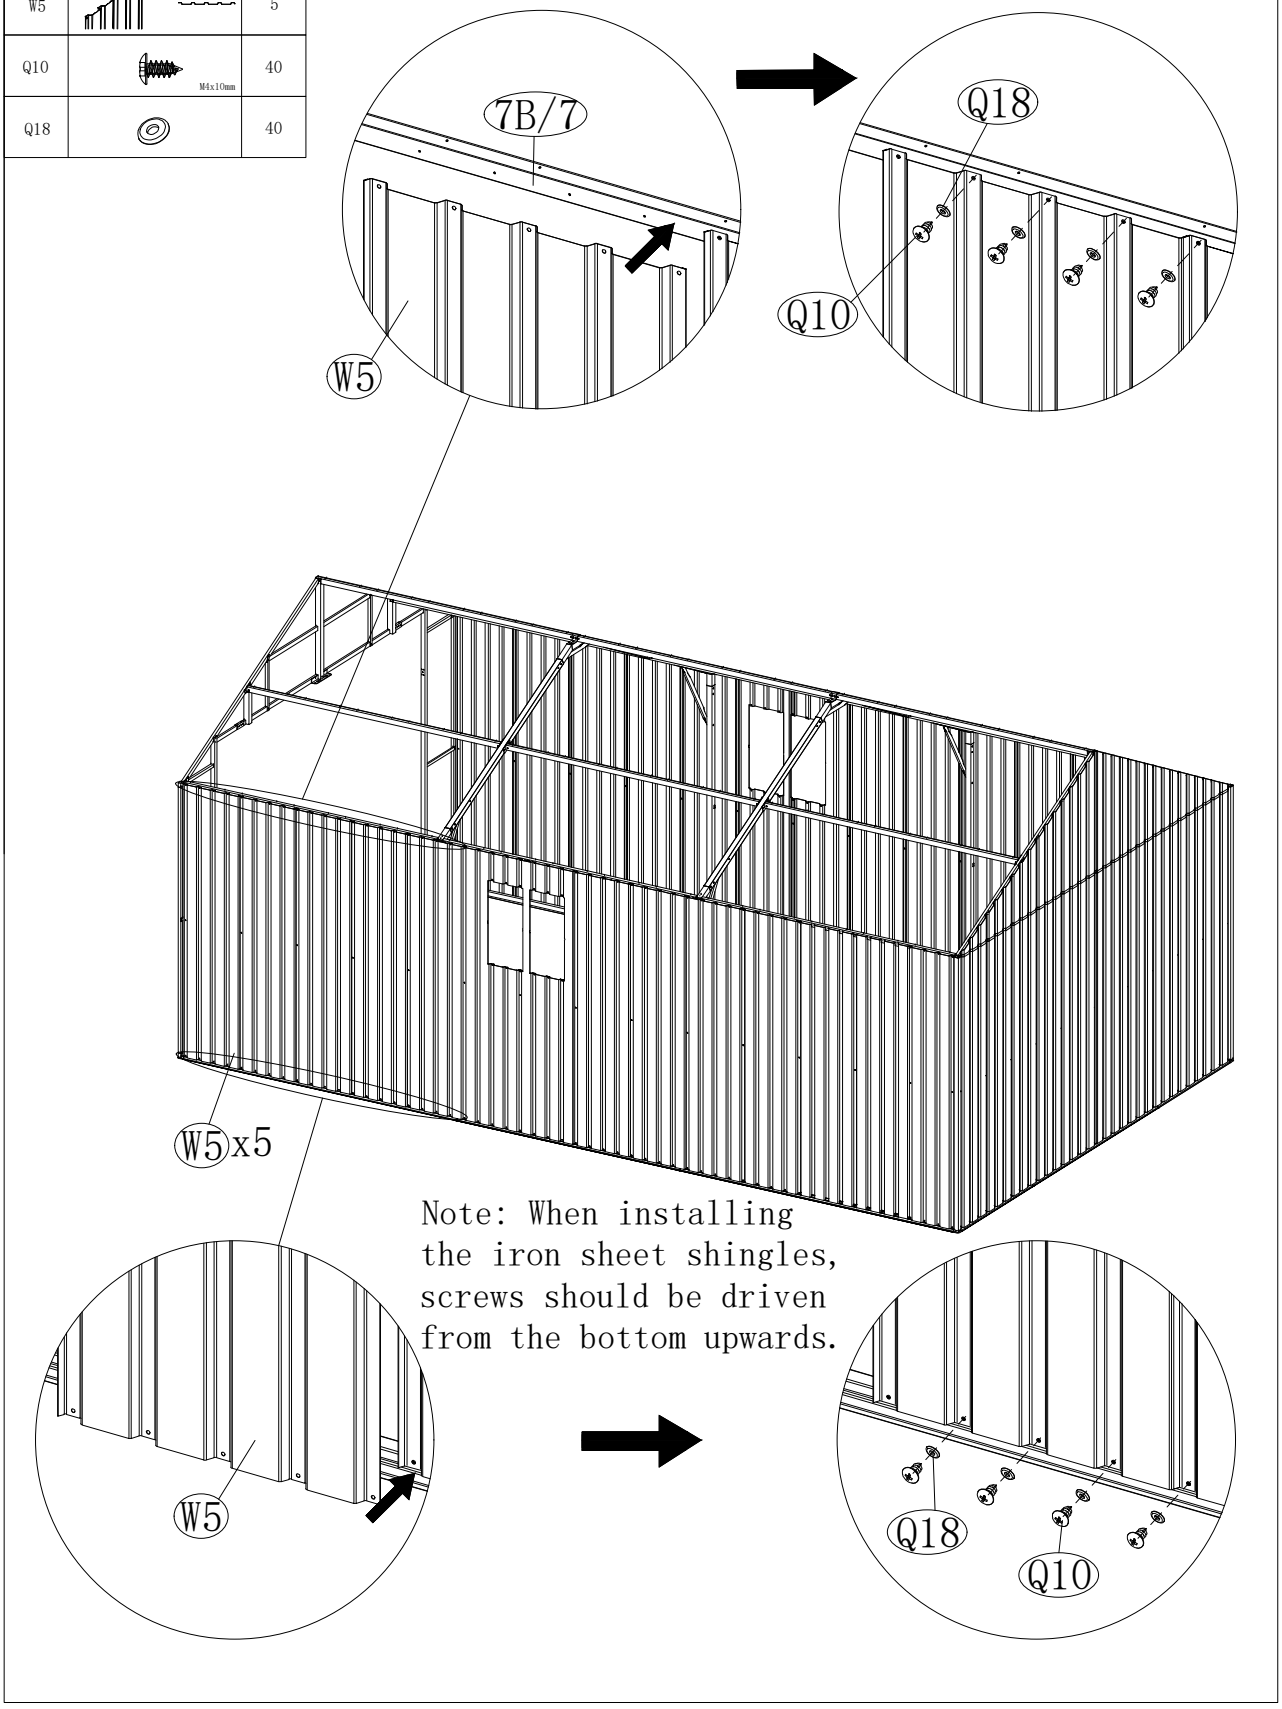


NO.	PART.	Qty.
W2		2
W6L		1
W6R		1
Q10	M4x10mm	14
Q18		14

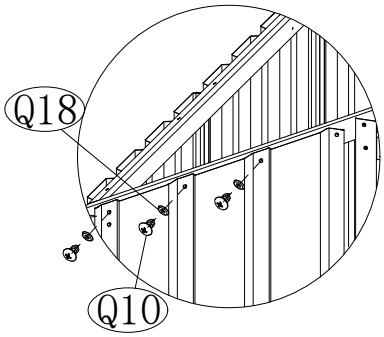


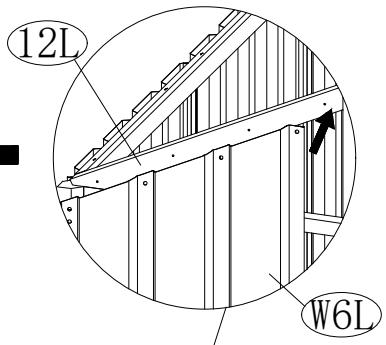


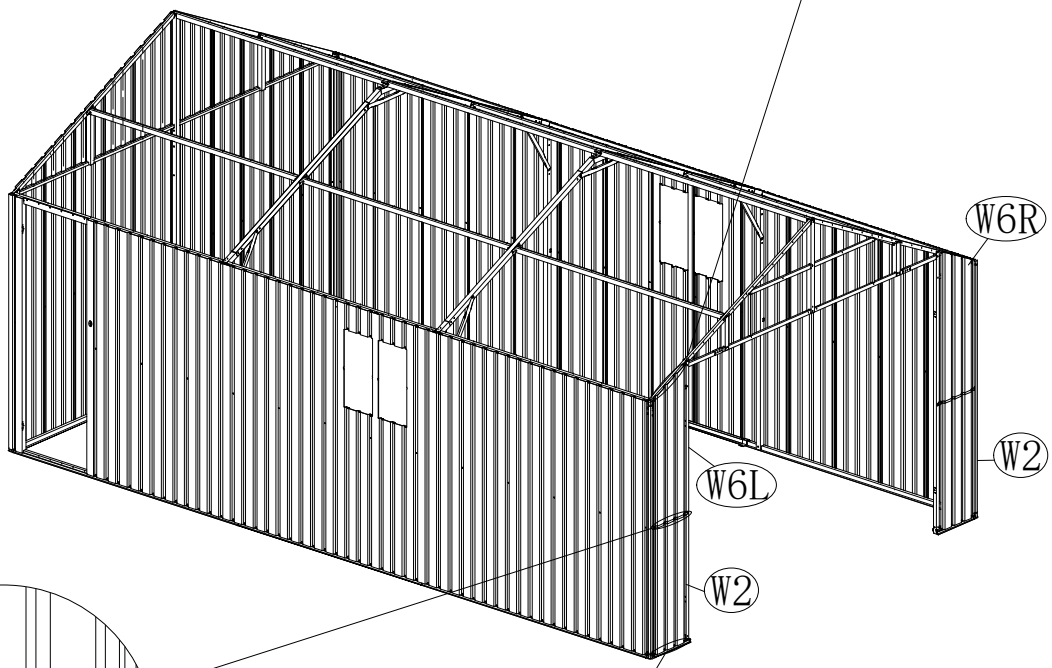


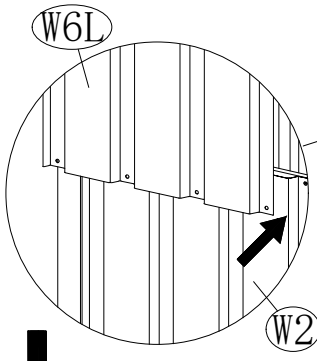


Note: When installing the iron sheet shingles, screws should be driven from the bottom upwards.

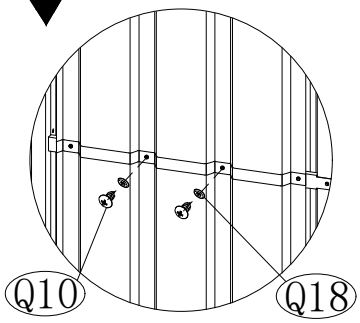

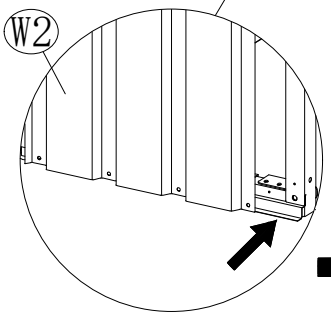


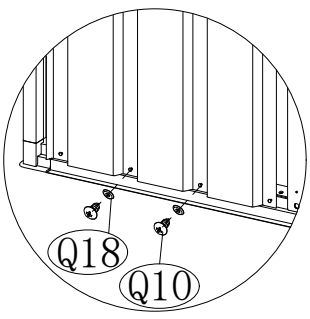


NO.	PART.	Qty.
17L		1
17R		1
Q10	M4x10mm	12
Q18		12

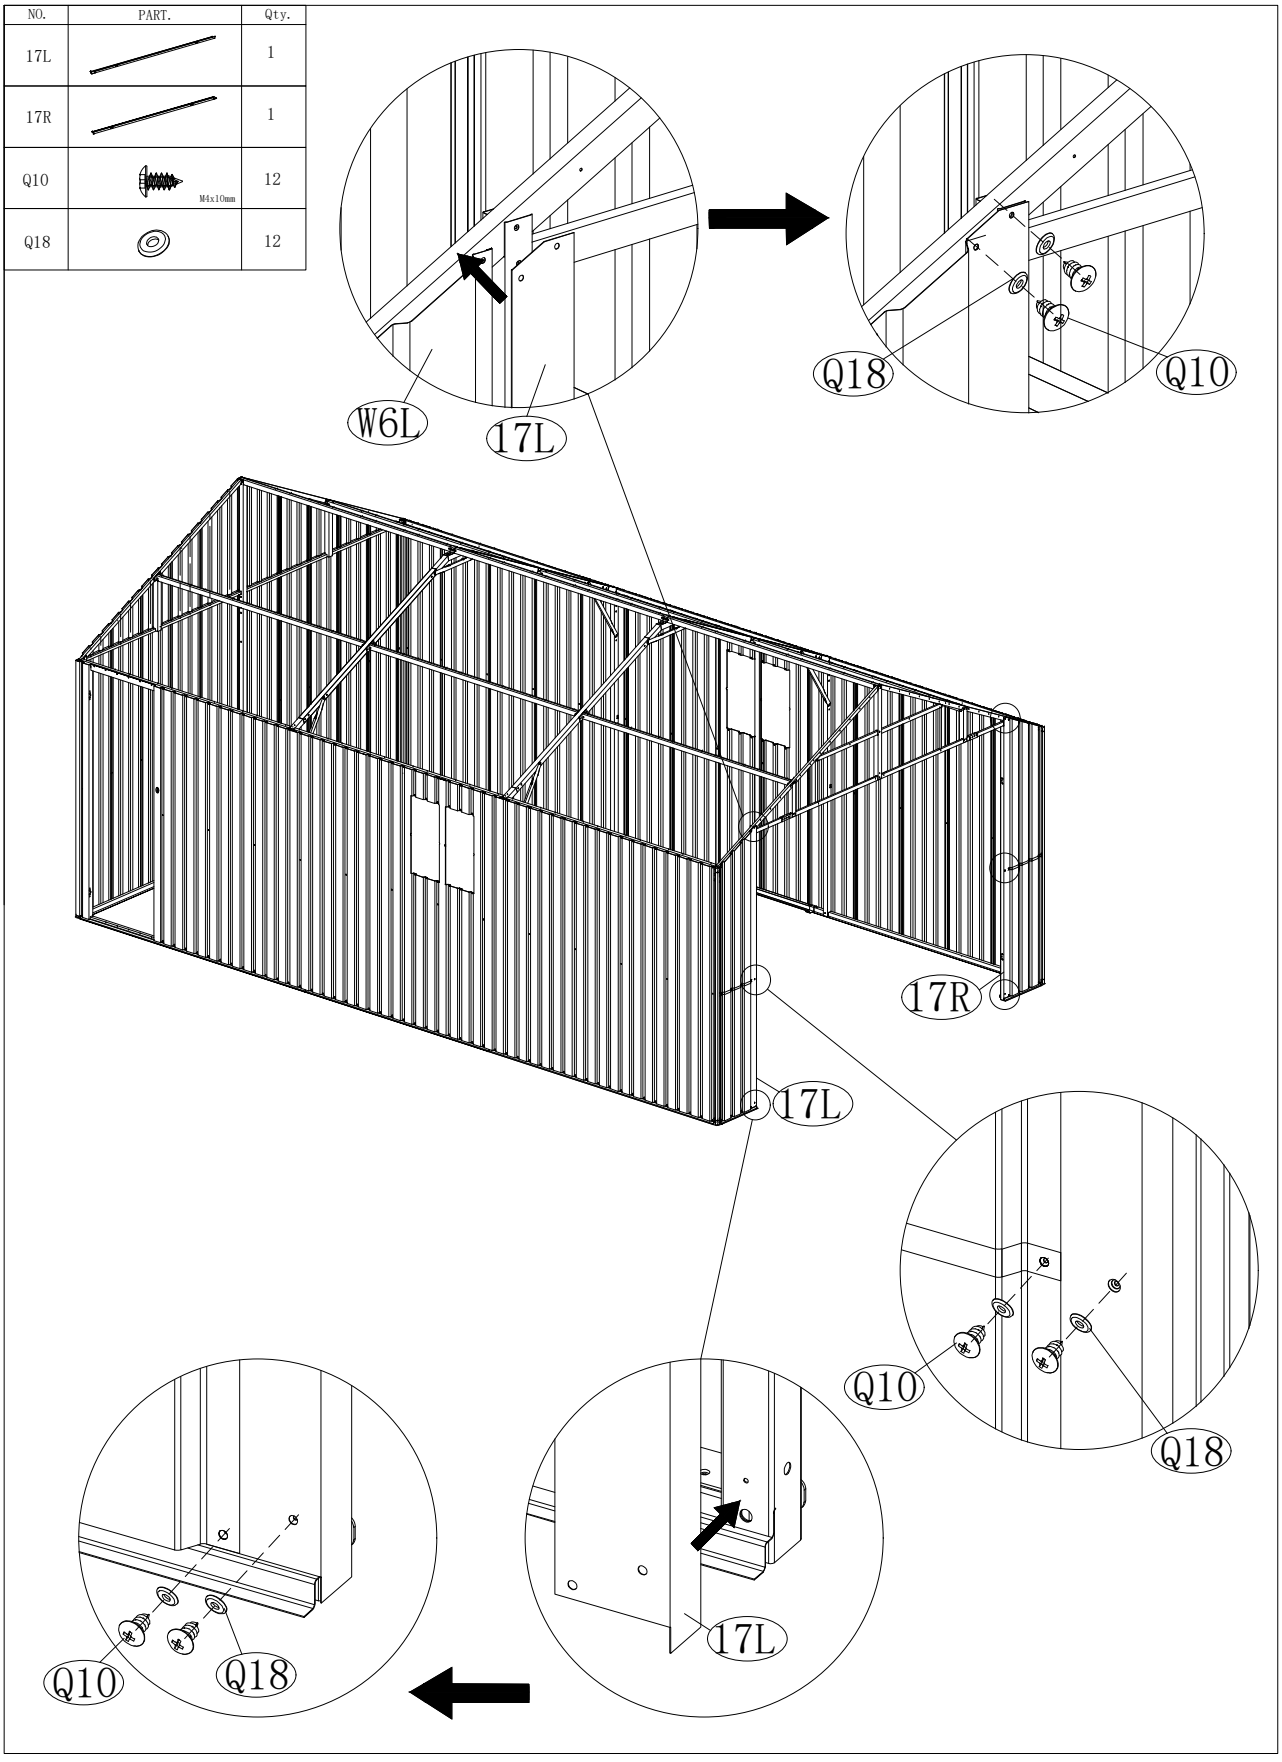


NO.	PART.	Qty.
W7		2
Q10	M4x10mm	8
Q18		8

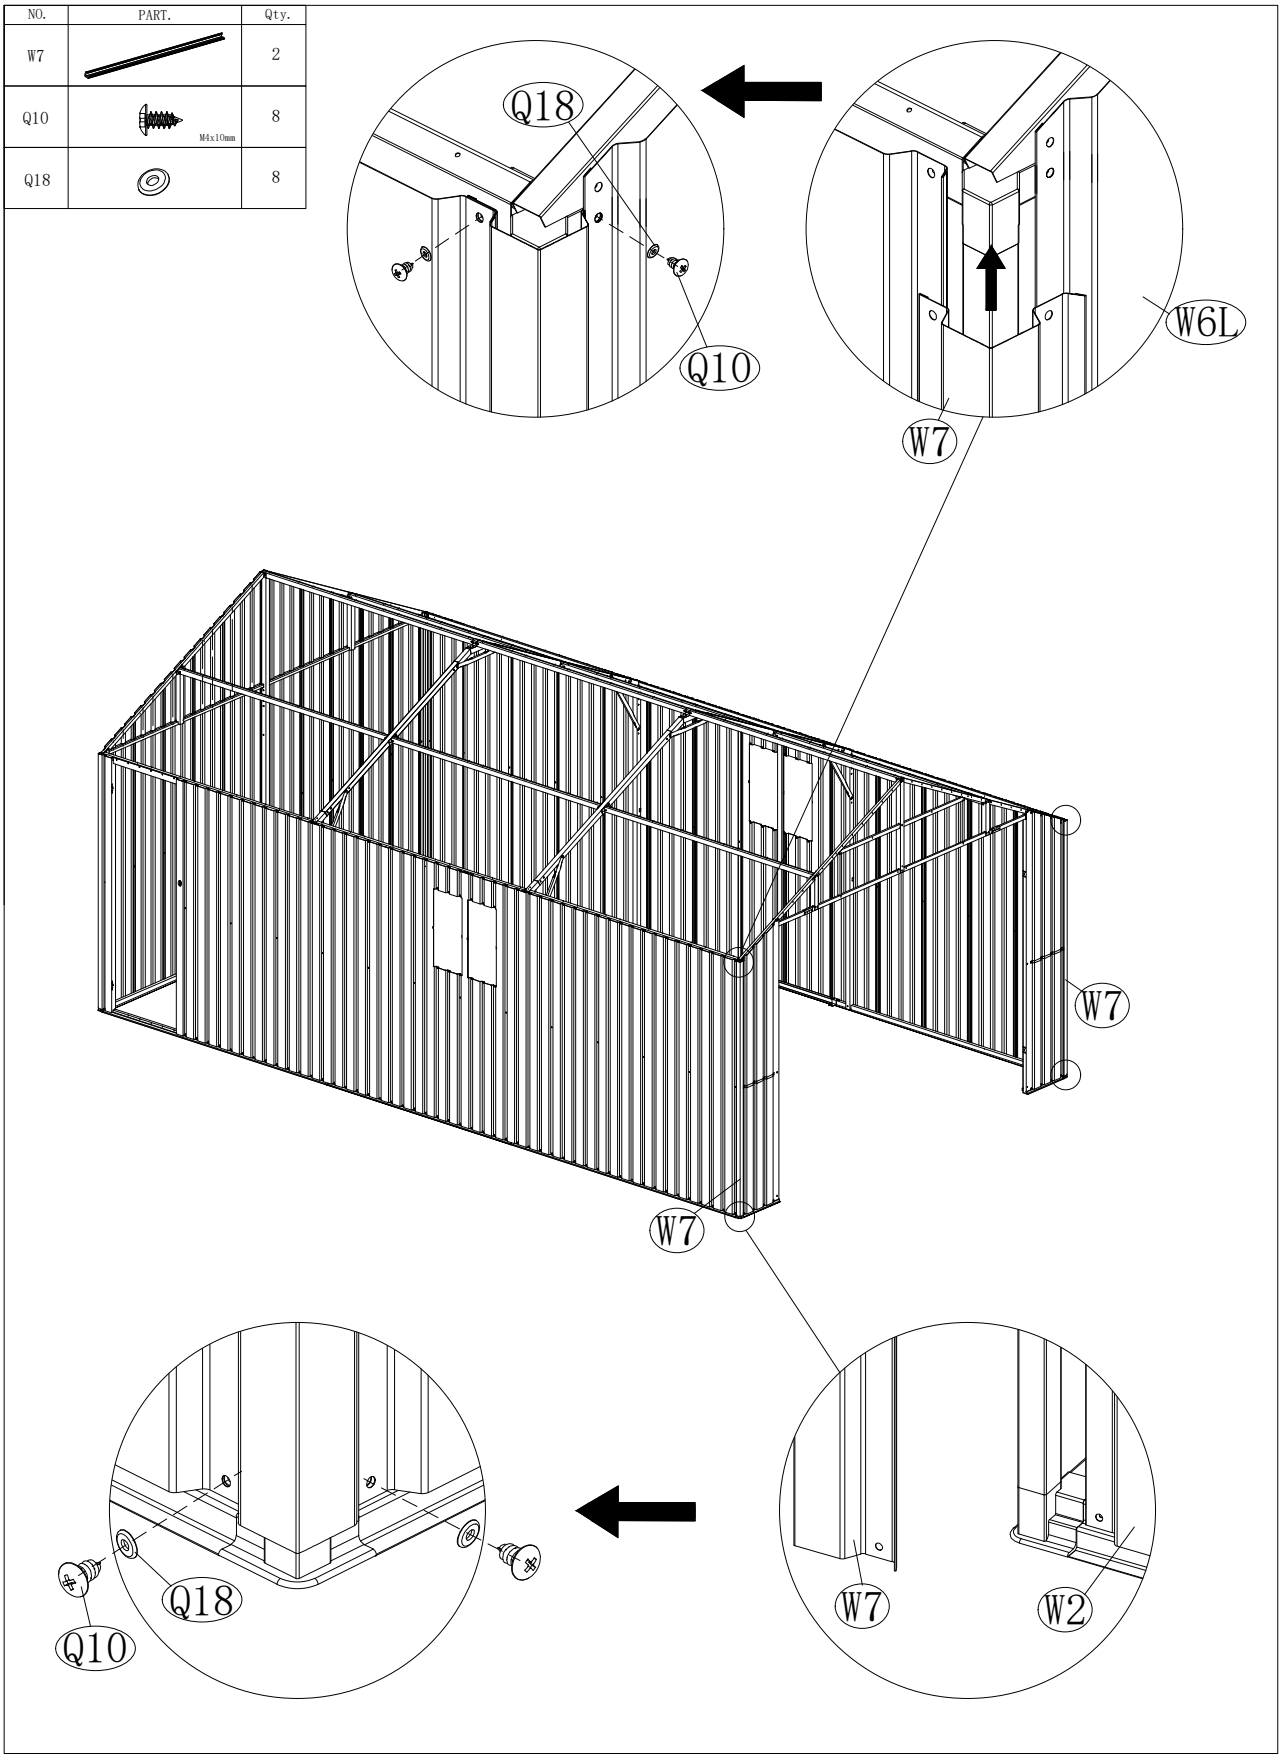


NO.	PART.	Qty.
38L		1
38R		1
Q10	M4x10mm	17
Q18		17

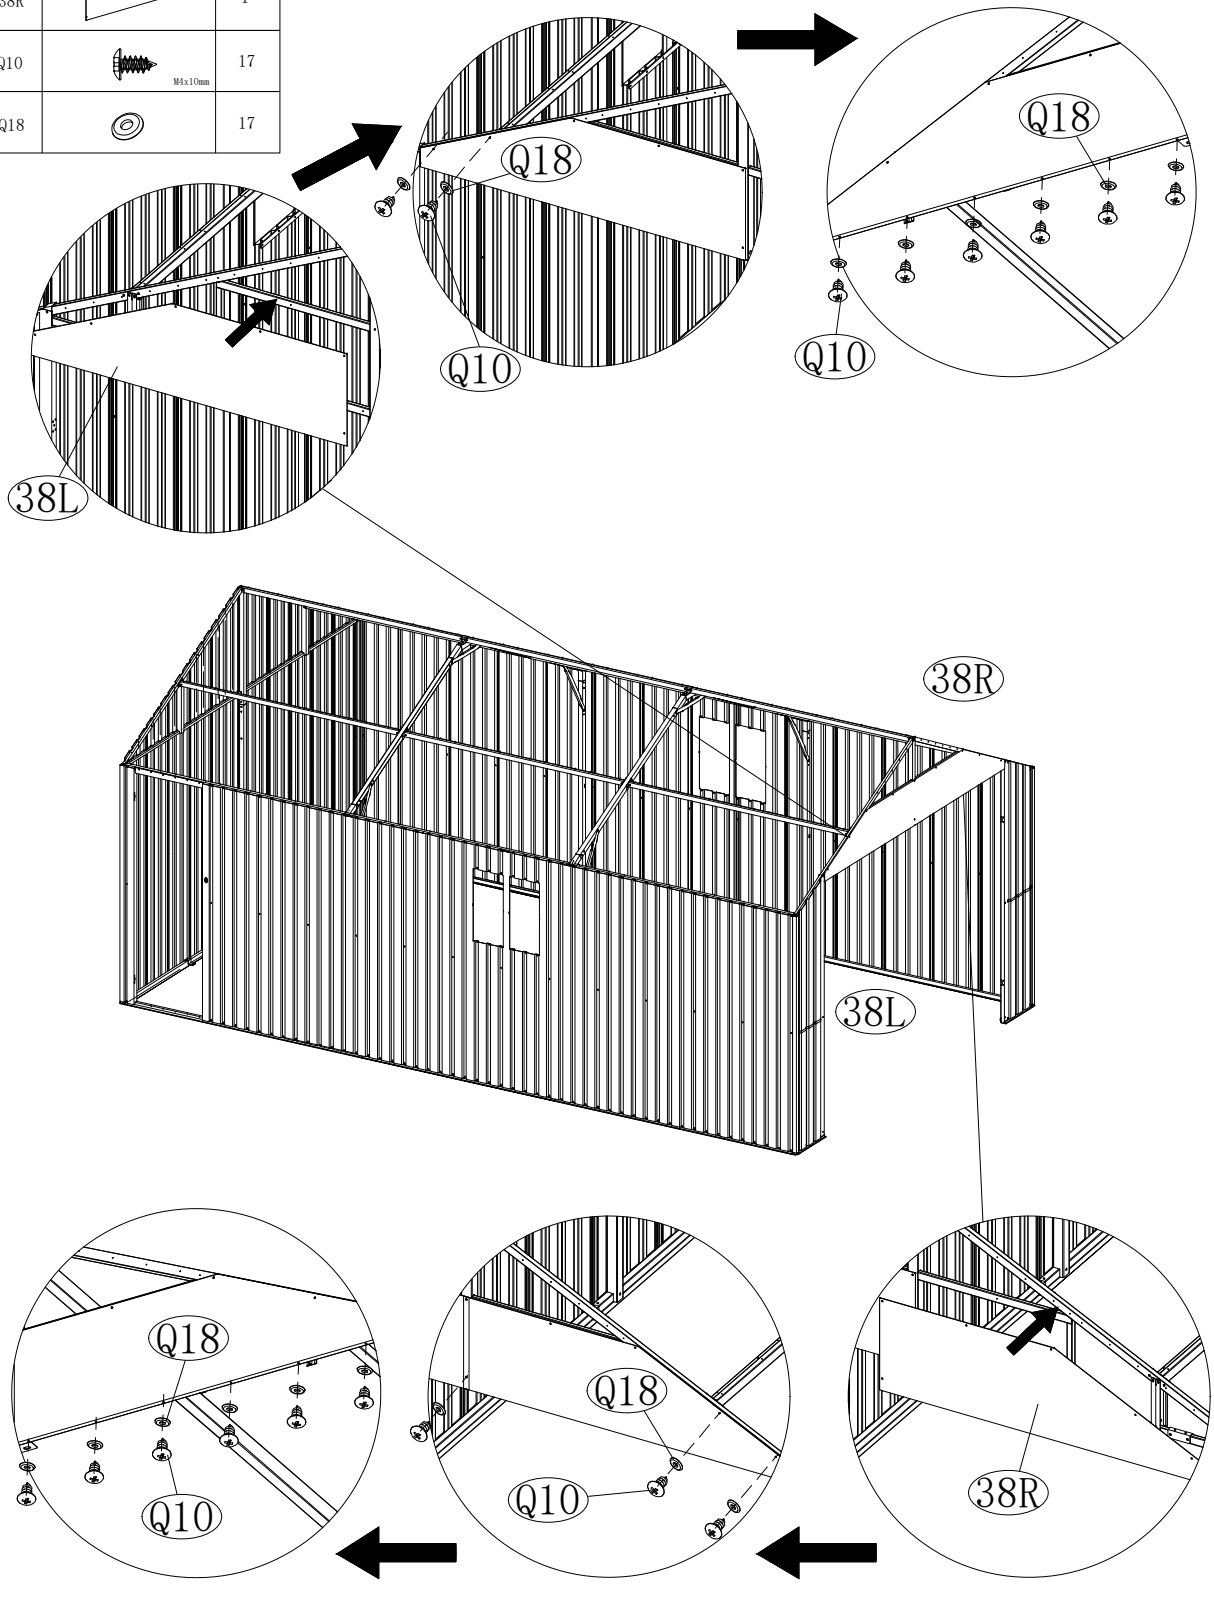



NO.	PART.	Qty.
38		1
F6		2
Q39	 M4x10mm	4
Q42	 M4	4

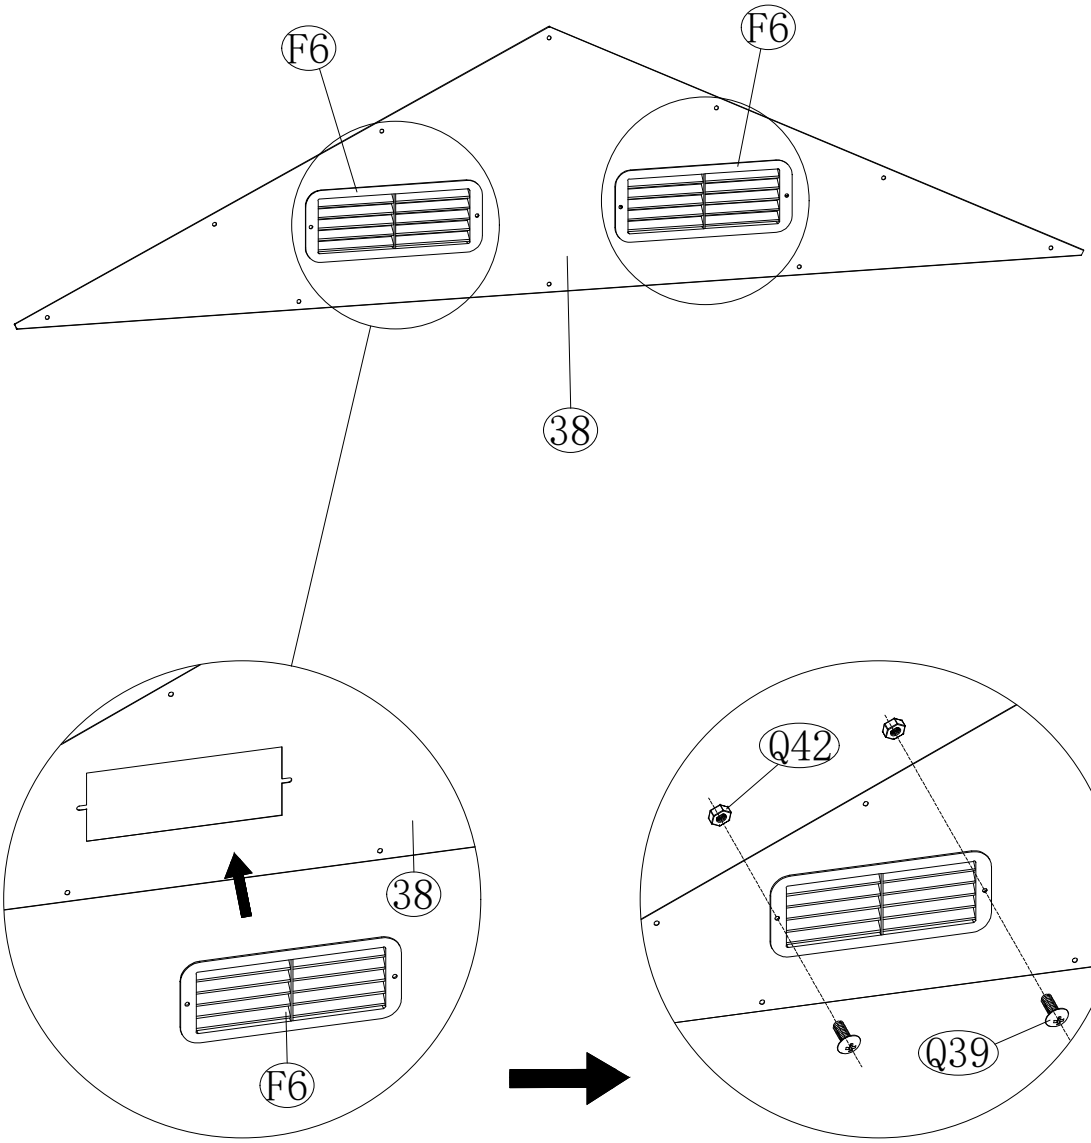


NO.	PART.	Qty.
Q10	M4x10mm	10
Q18		10

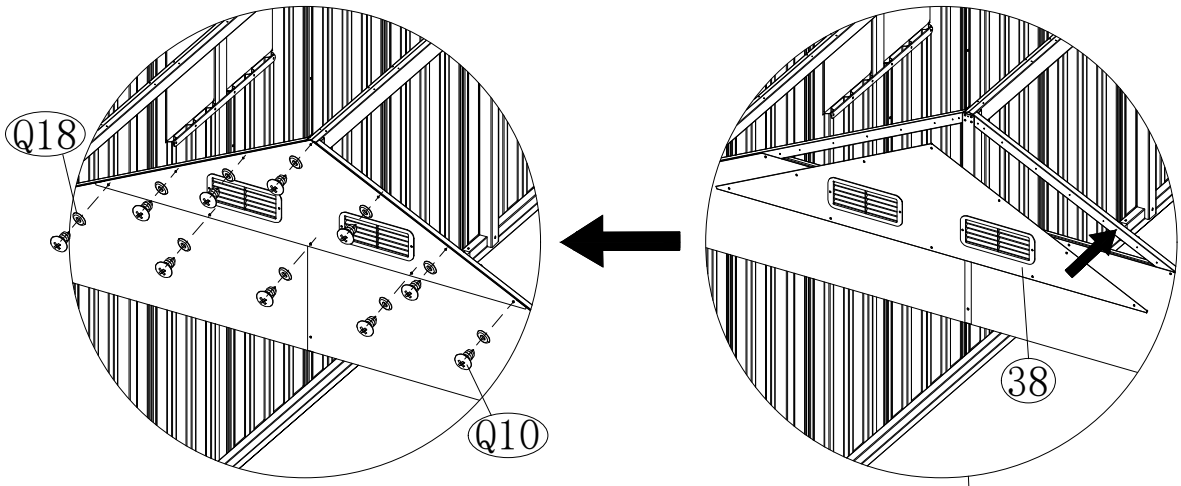

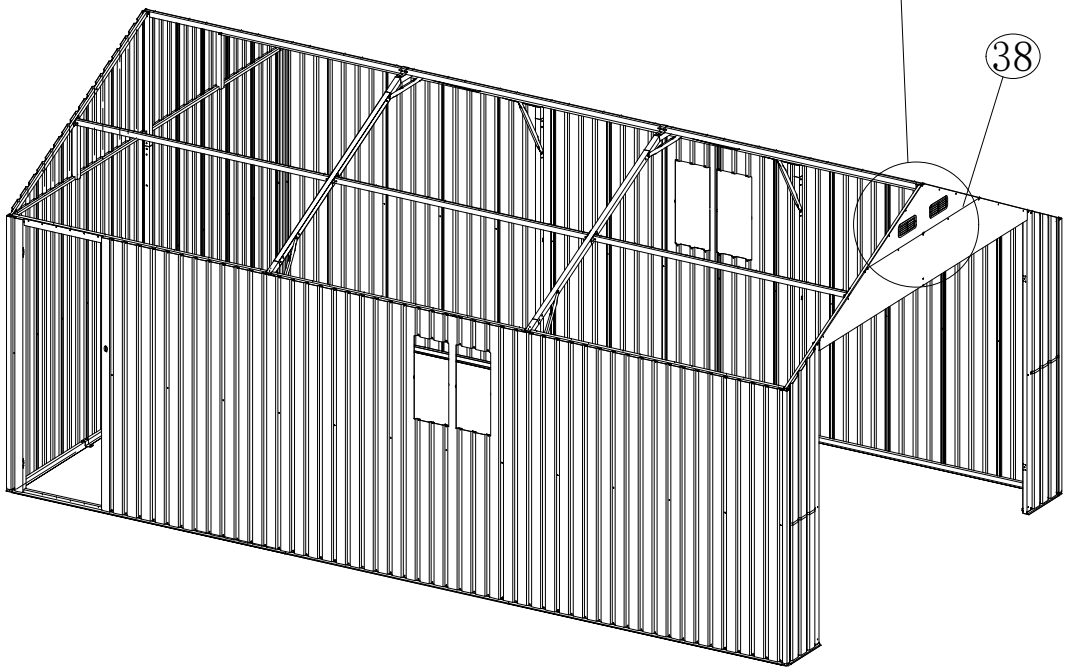


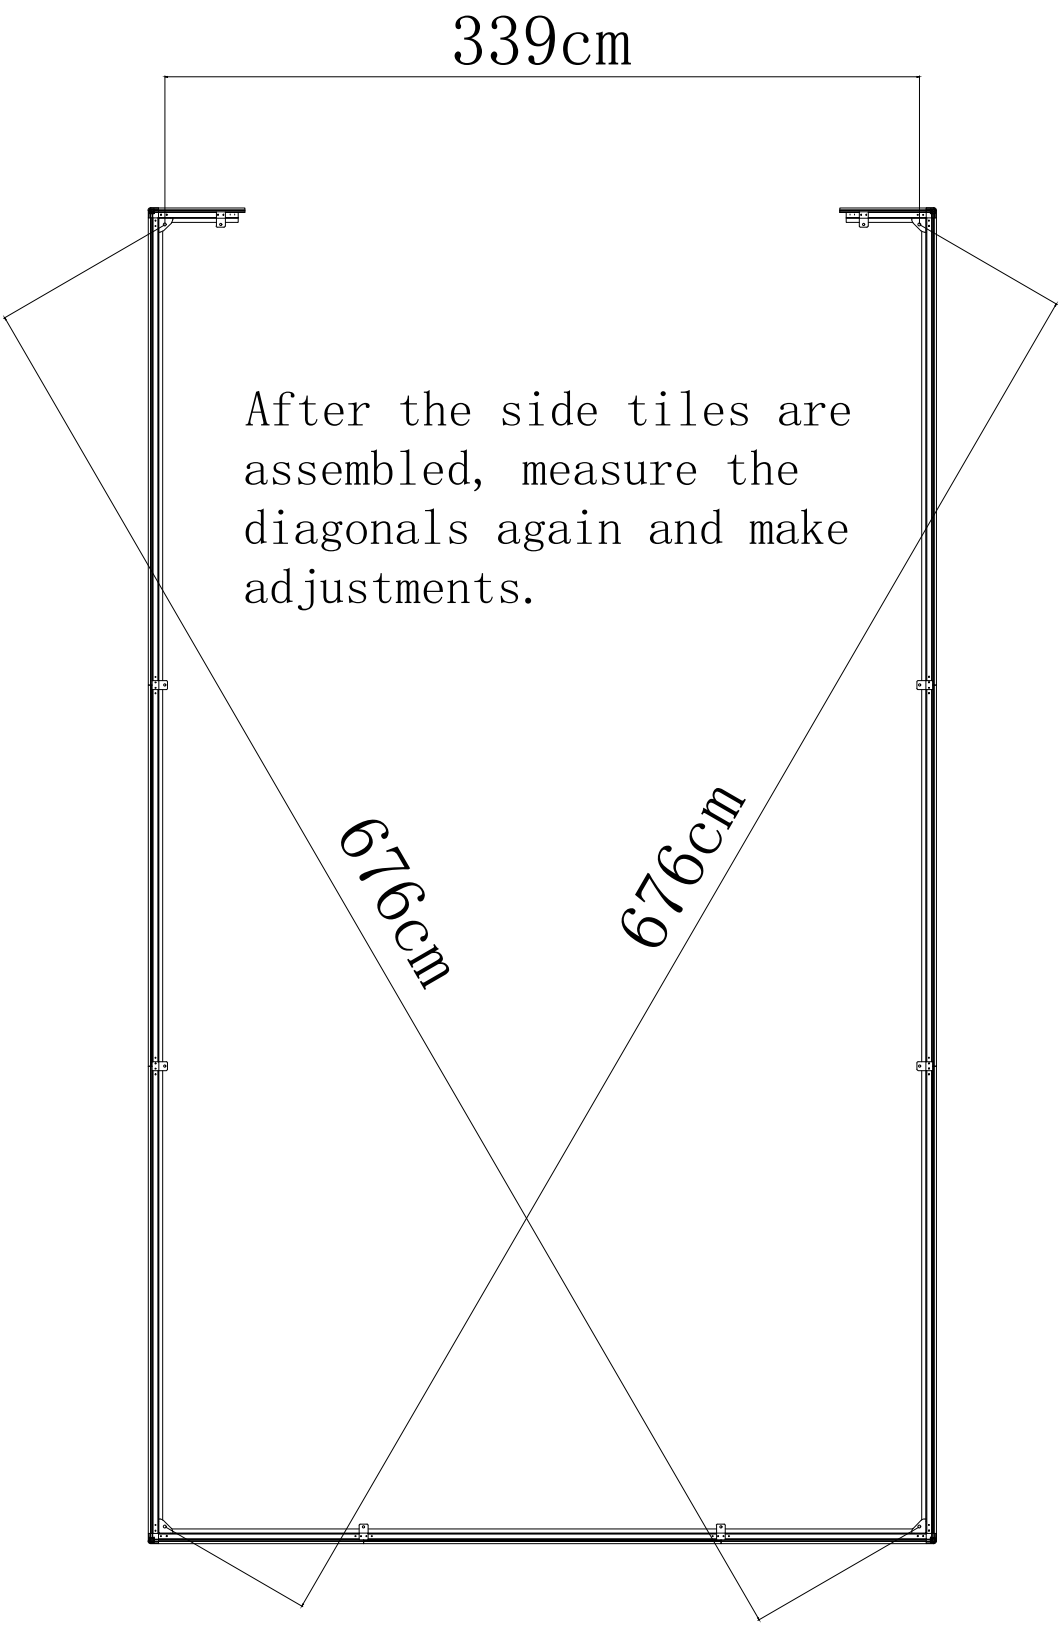
339cm
After the side tiles are assembled, measure the diagonals again and make adjustments.
676cm
676cm


NO.	PART.	Qty.
D4		2
Q13	M5x16mm	12
Q19		12

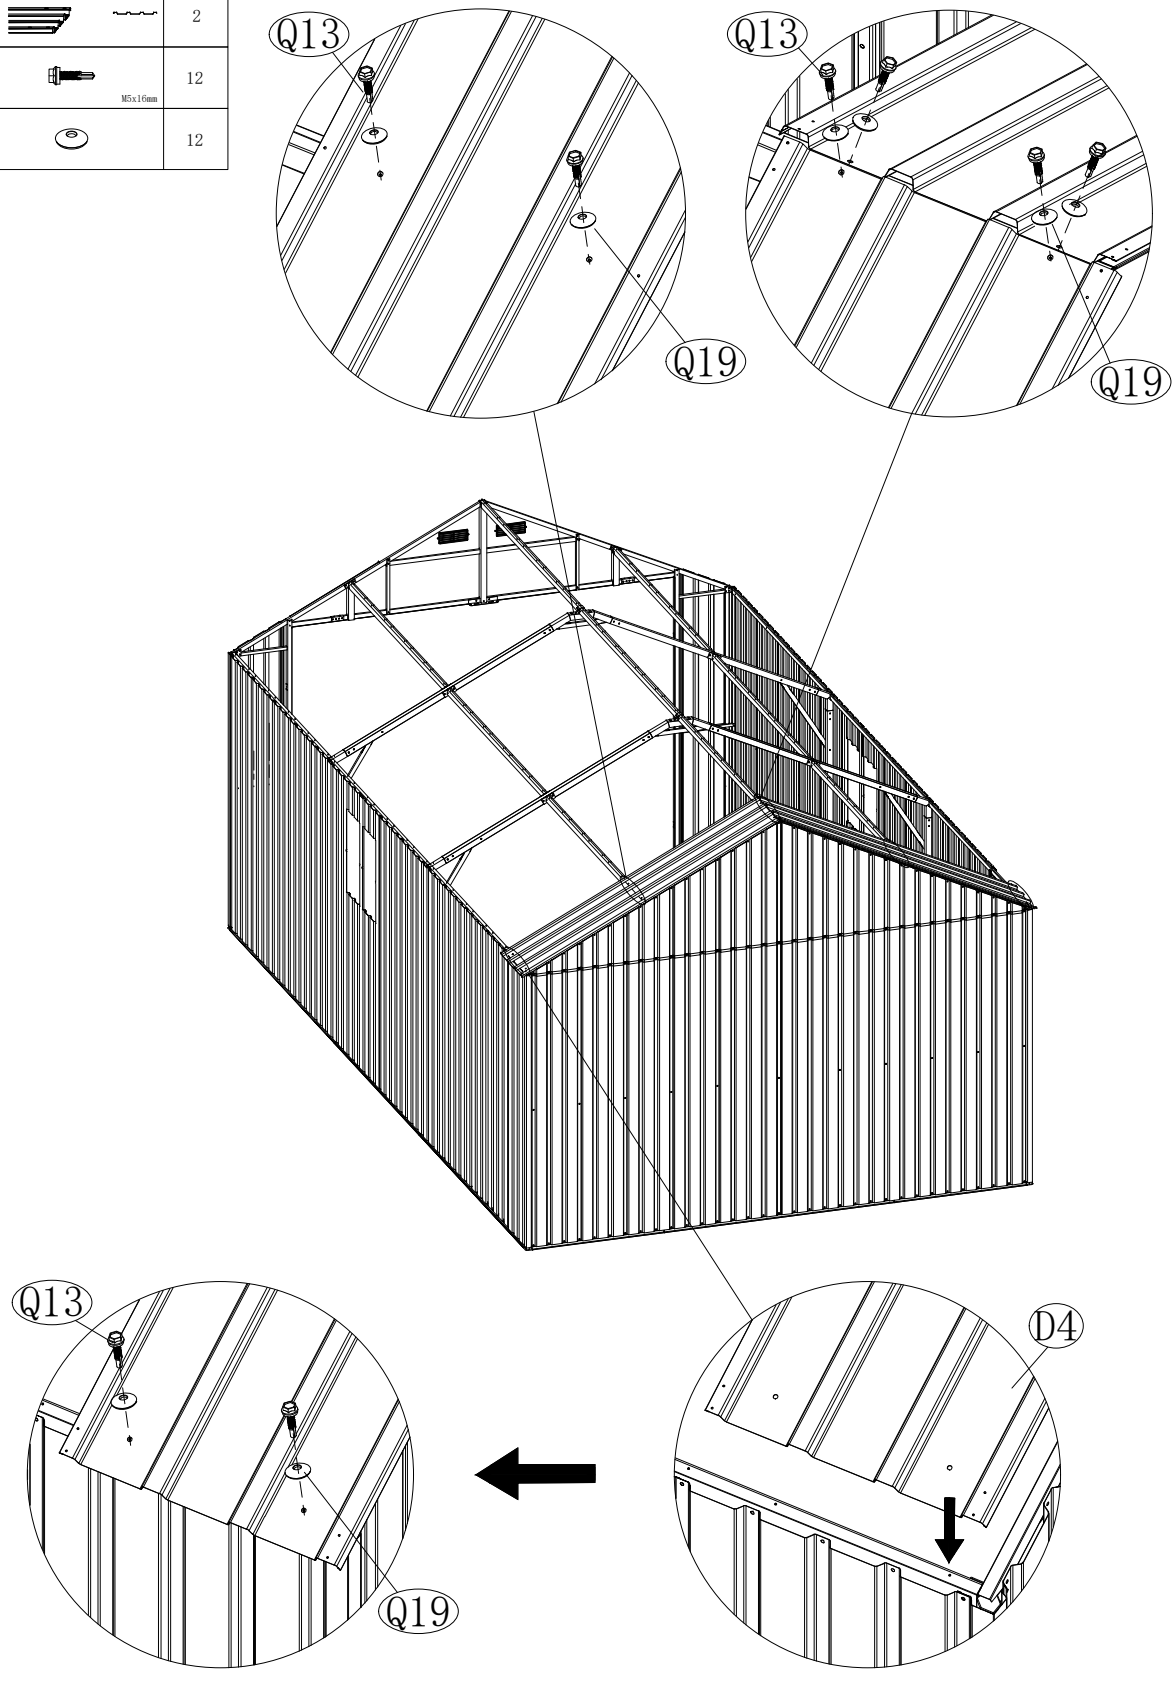


NO.	PART.	Qty.
D4		6
Q32	M4x14mm	20
Q13	M5x16mm	36
Q18		20
Q19		36

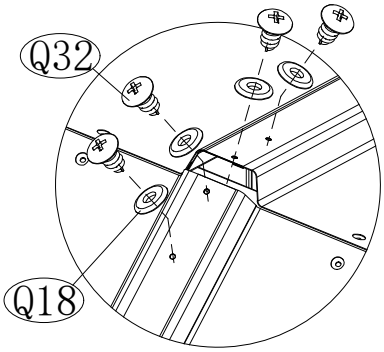


a1 x1

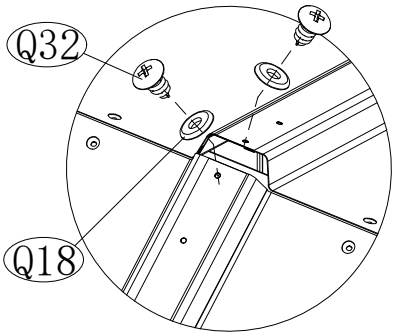


a2 x2

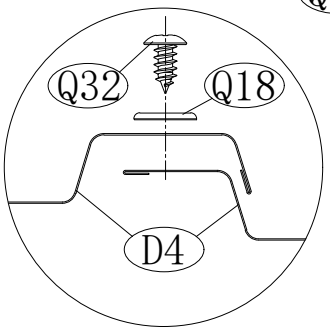


B x6

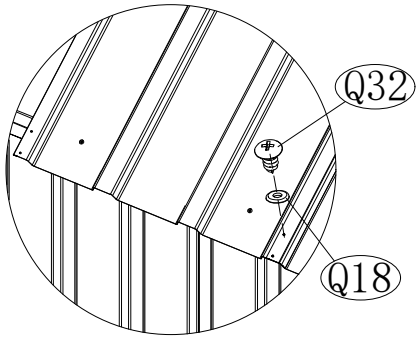


C x6

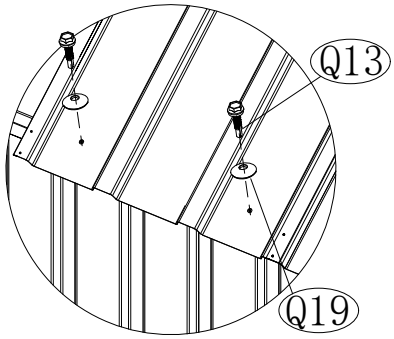

D x6

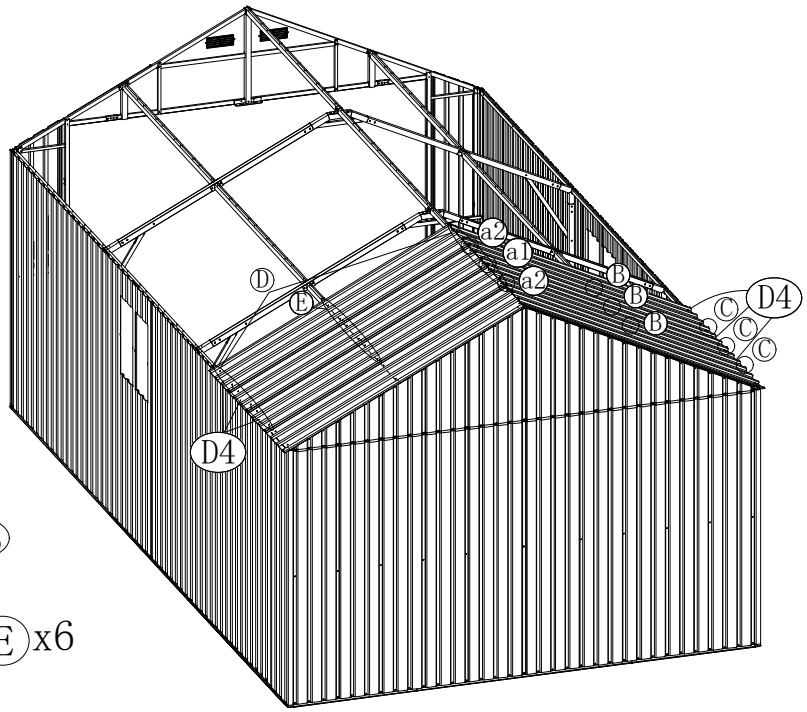


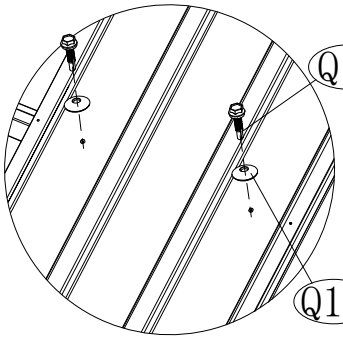


E x6

NO.	PART.	Qty.
Q4		1
Q32	 M4x14mm	2
Q18		2


Install plastic Q4 between the 3th and 4th pieces

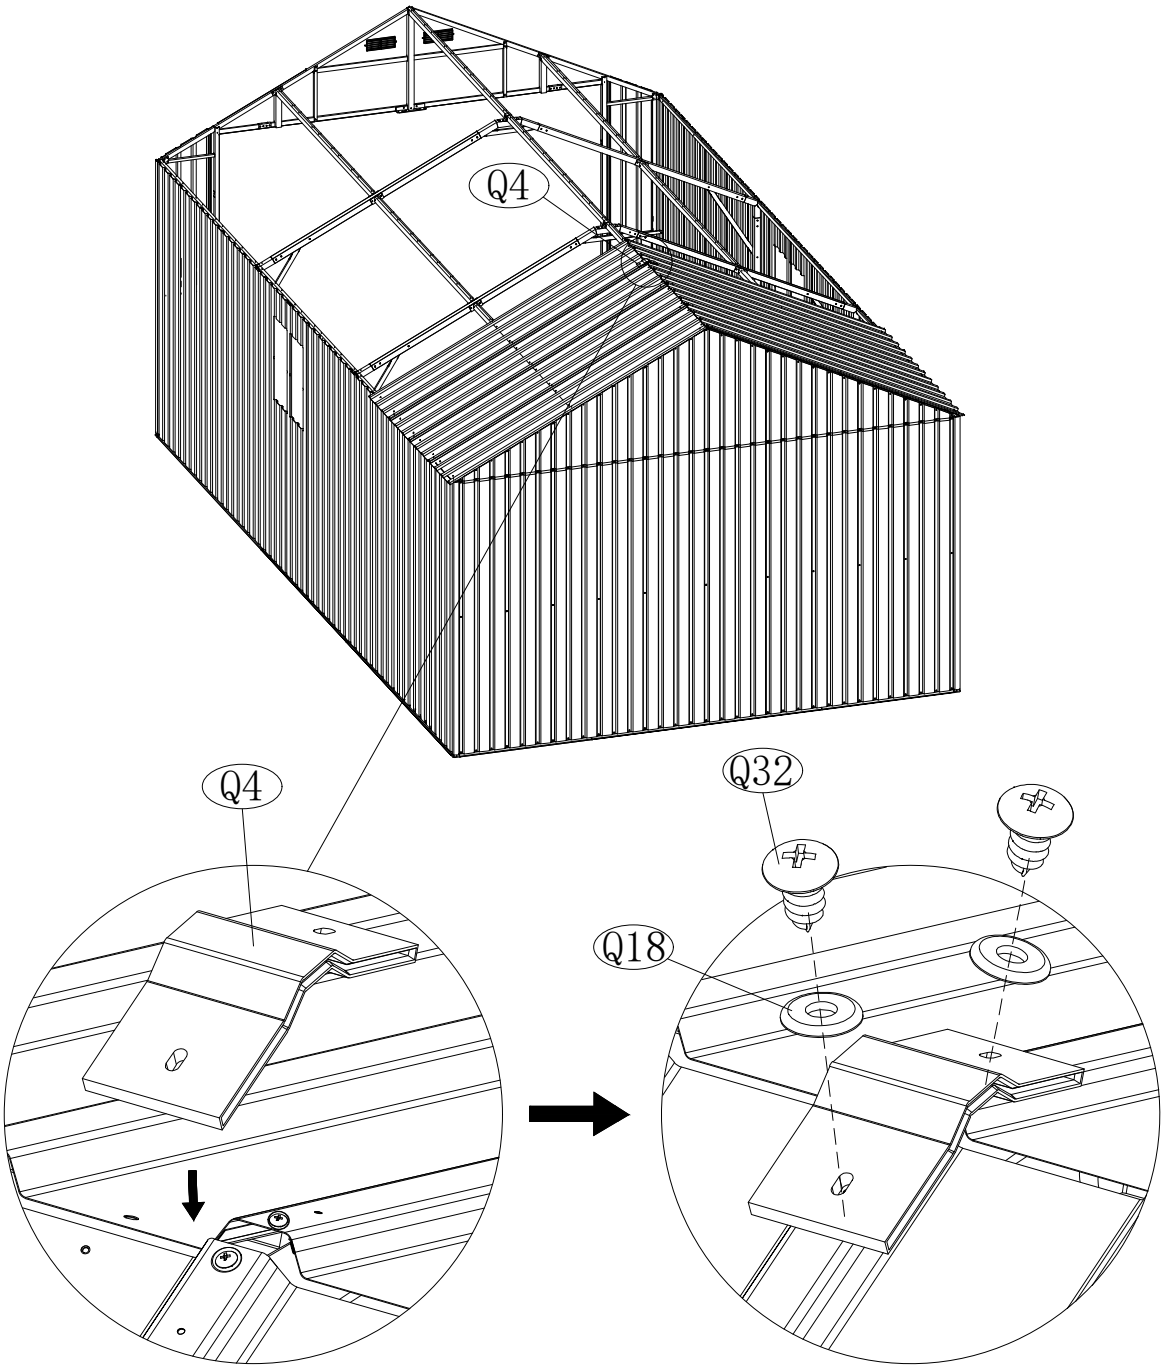


NO.	PART.	Qty.
D4		4
Q32	M4x14mm	14
Q13	M5x16mm	24
Q18		14
Q19		24

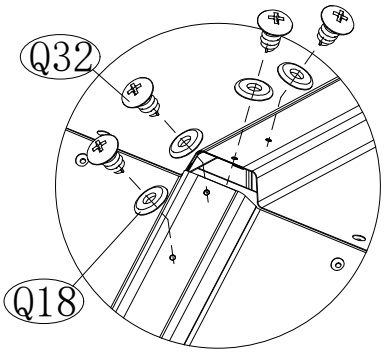


a1 x1

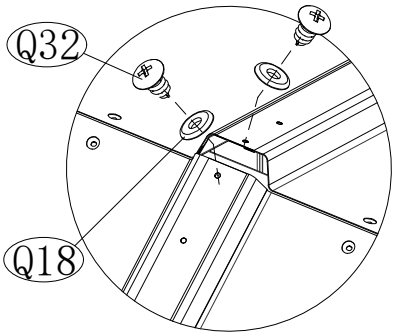


a2 x1

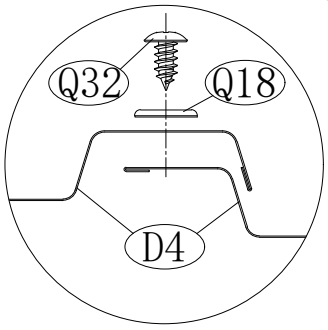


B x4

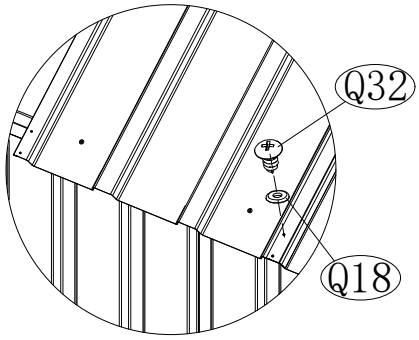


C x4

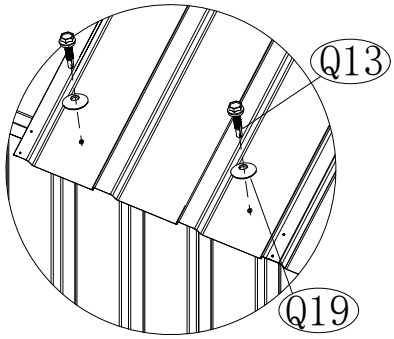


D x4

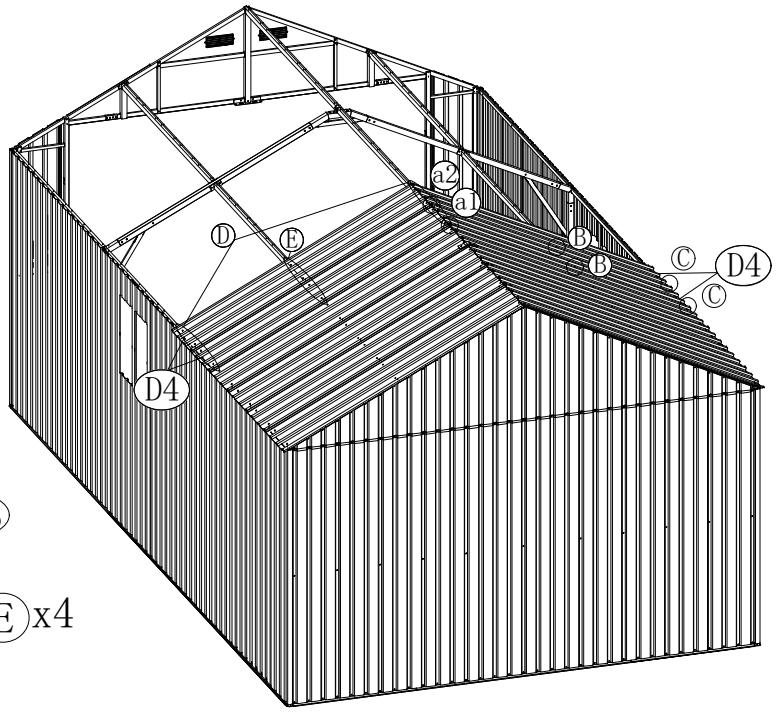

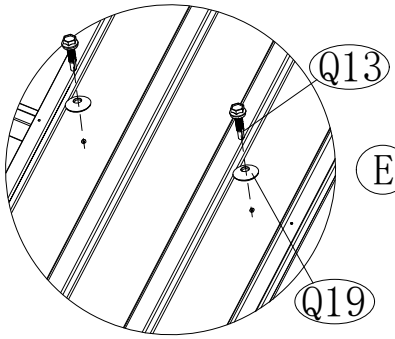


E x4


NO.	PART.	Qty.
18		1
Q32	 M4x14mm	2
Q18		2

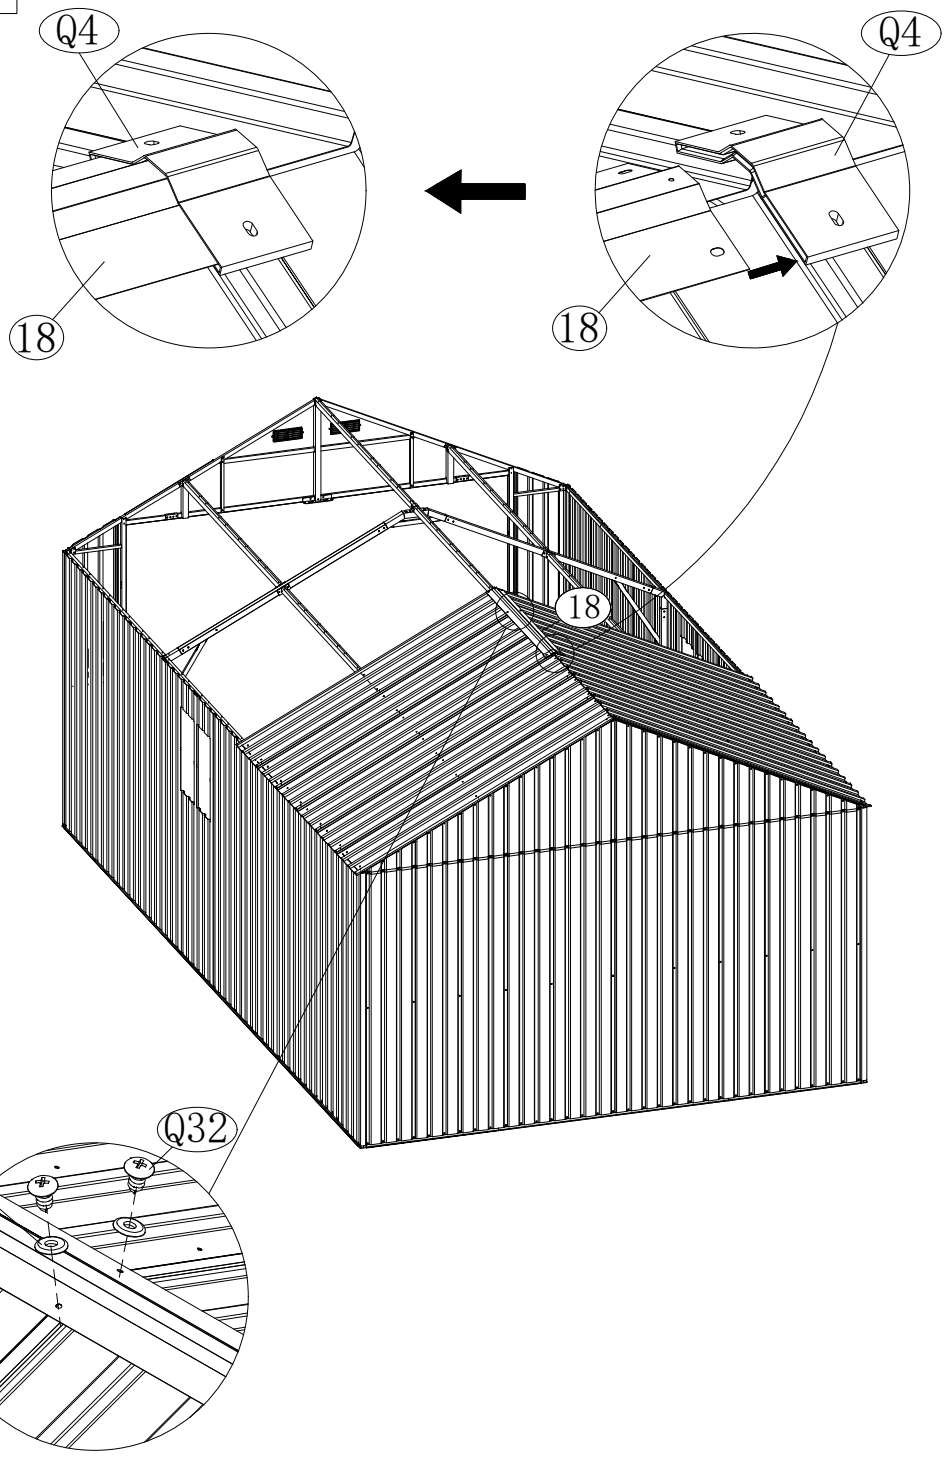


NO.	PART.	Qty.
D4	1994mm	2
Q32	M4x14mm	6
Q13	M5x16mm	12
Q18		6
Q19		12

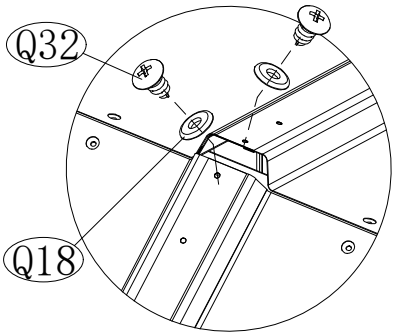


a2 x1

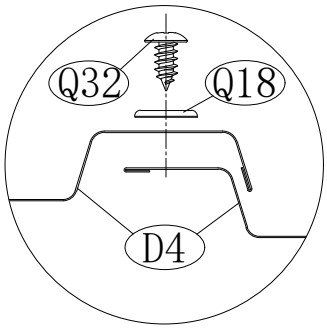


B x2

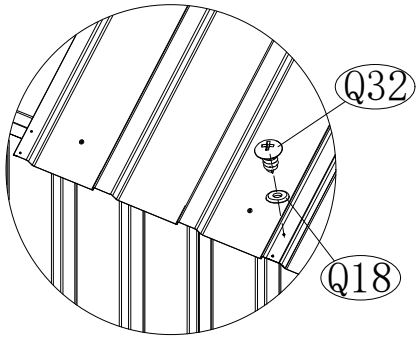


C x2

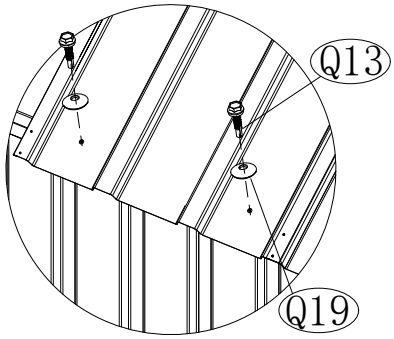

D x2

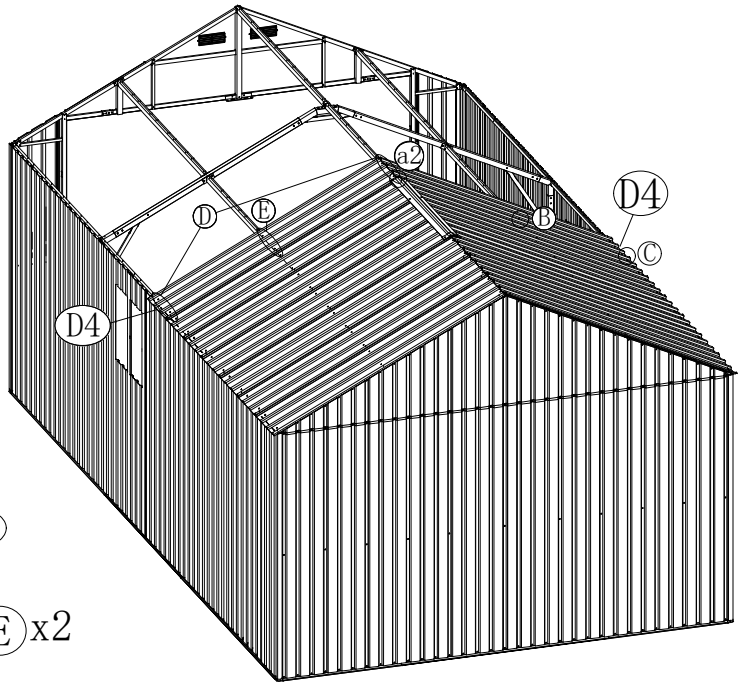


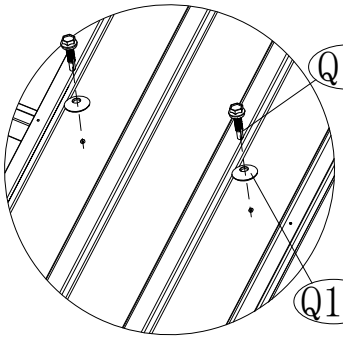


E x2

NO.	PART.	Qty.
Q4		1
Q32	 M4x14mm	2
Q18		2


Install plastic Q4 between the 6th and 7th pieces

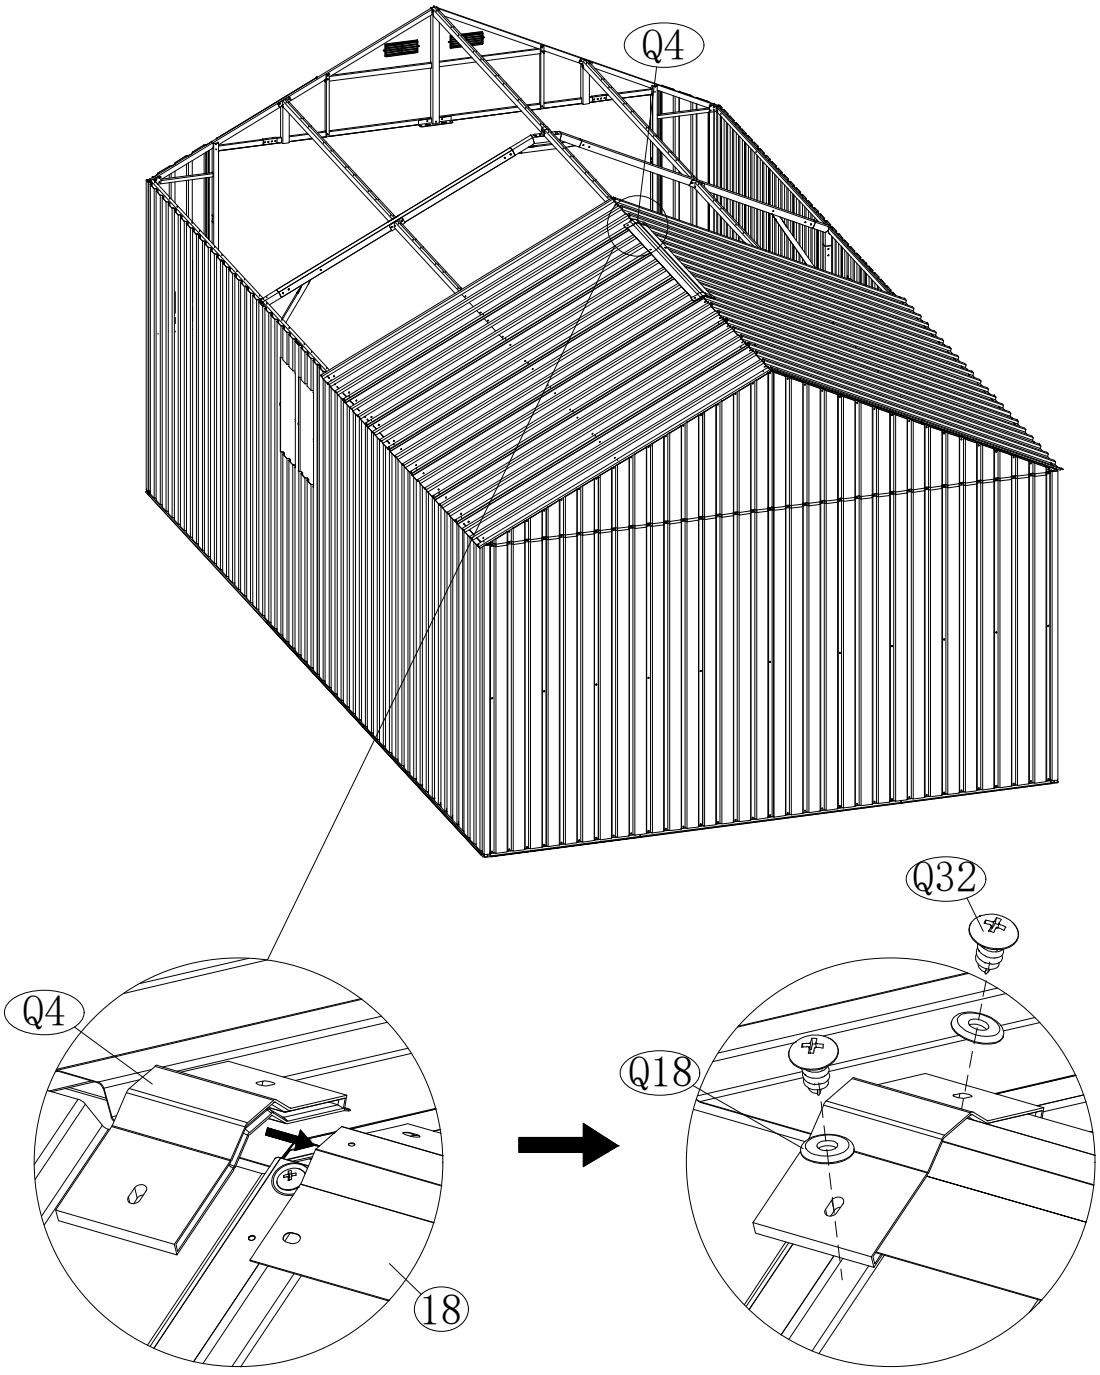


NO.	PART.	Qty.
D4		4
Q32	 M4x14mm	14
Q13	 M5x16mm	24
Q18		14
Q19		24

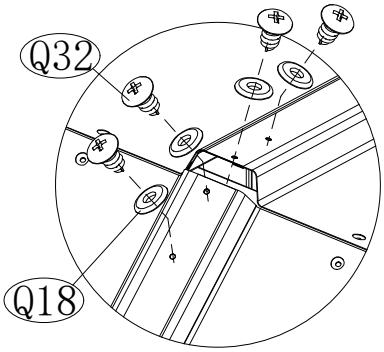


a1 x1

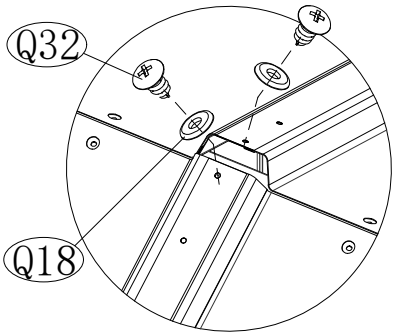


a2 x1

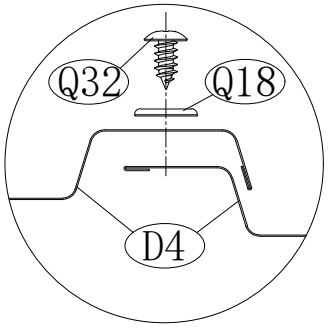


B x4

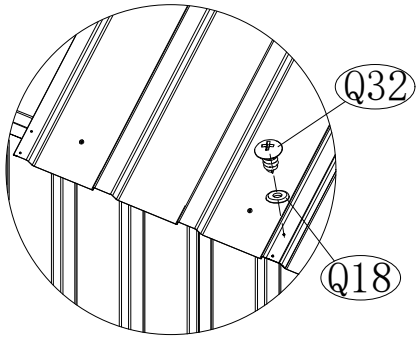


C x4

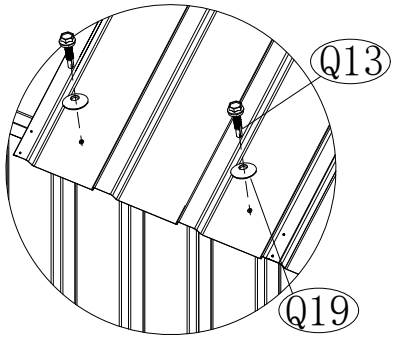


D x4

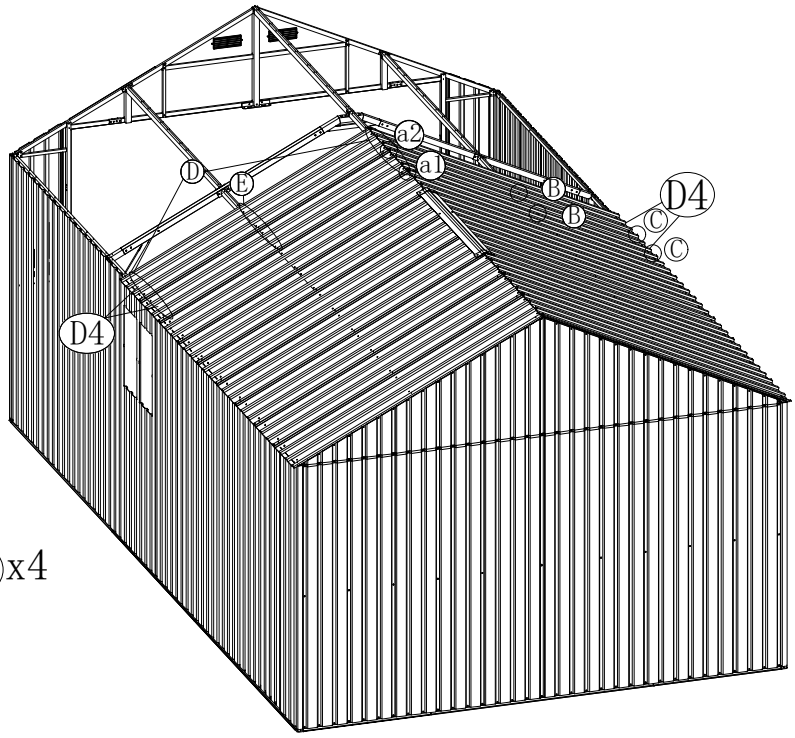

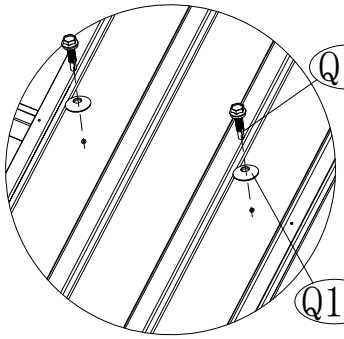


E x4


NO.	PART.	Qty.
18		1
Q32	 M4x14mm	2
Q18		2

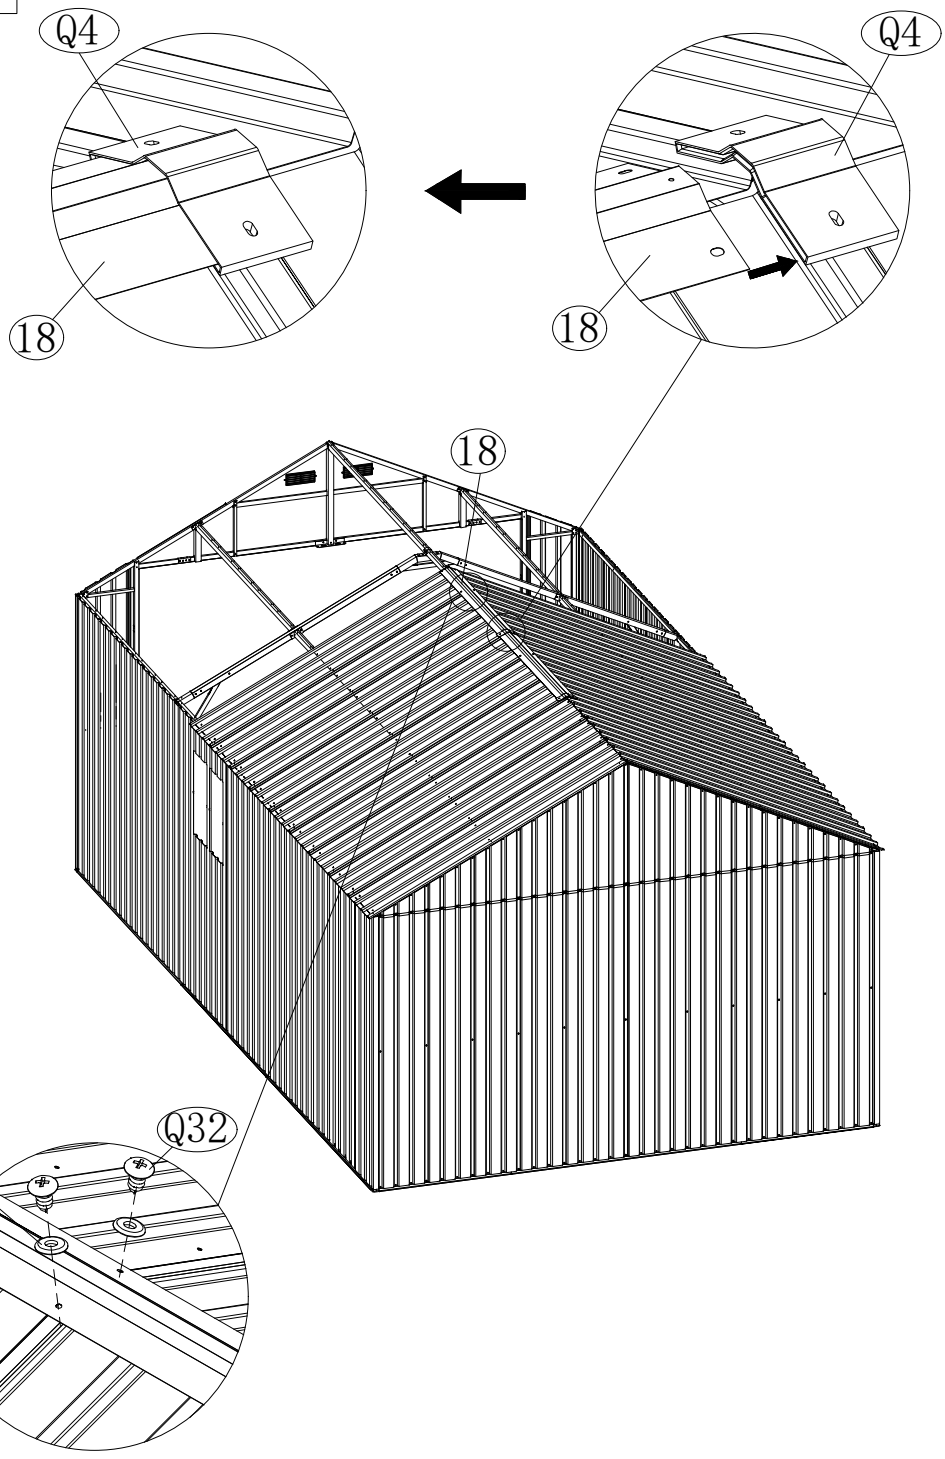


NO.	PART.	Qty.
D4		2
Q32	M4x14mm	6
Q13	M5x16mm	12
Q18		6
Q19		12

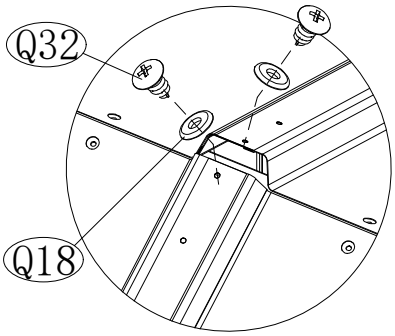


a2 x1

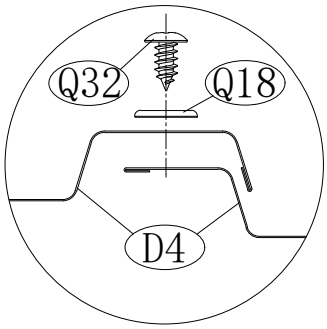


B x2

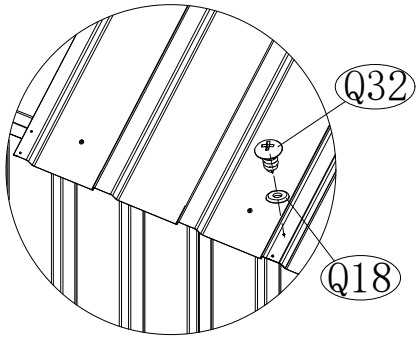


C x2

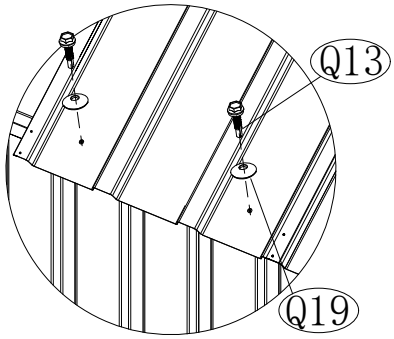

D x2

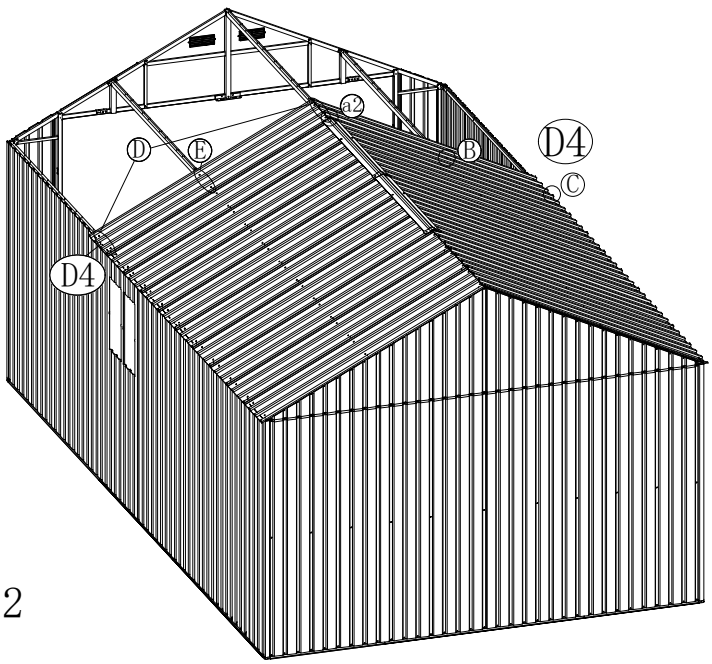


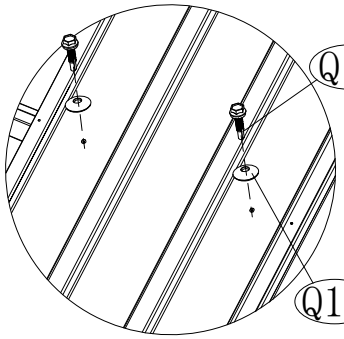


E x2

NO.	PART.	Qty.
Q4		1
Q32	 M4x14mm	2
Q18		2


Install plastic Q4 between the 9th and 10th pieces

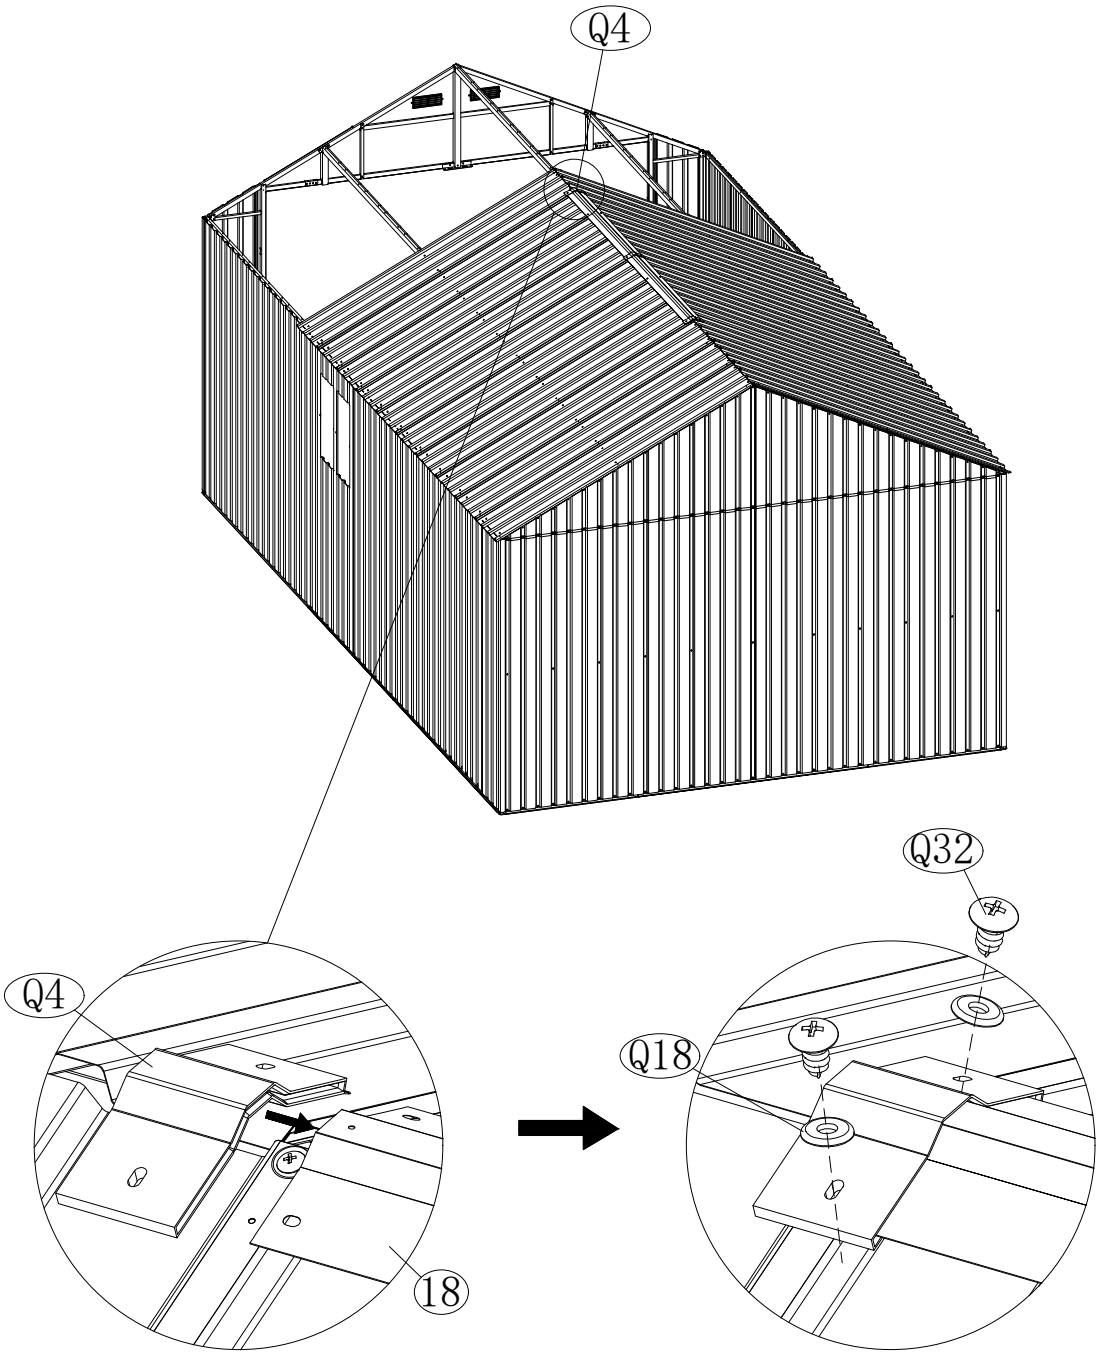


NO.	PART.	Qty.
D4		4
Q32	M4x14mm	14
Q13	M5x16mm	24
Q18		14
Q19		24

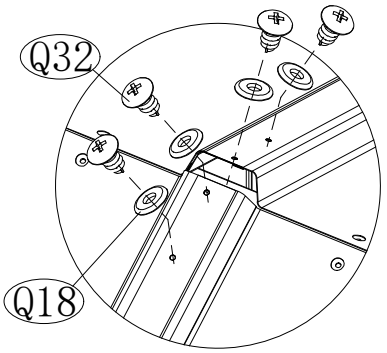


a1 x1

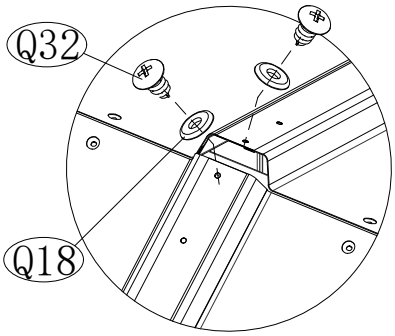


a2 x1

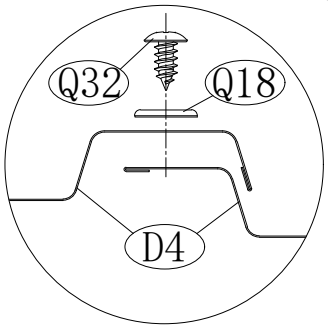


B x4

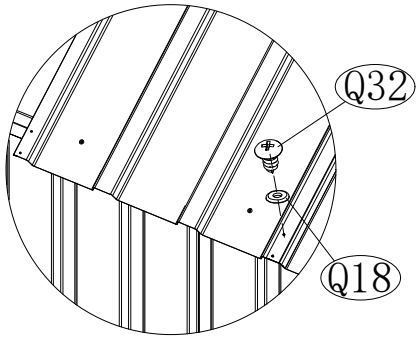


C x4

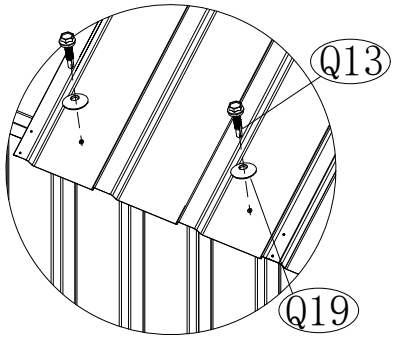


D x4

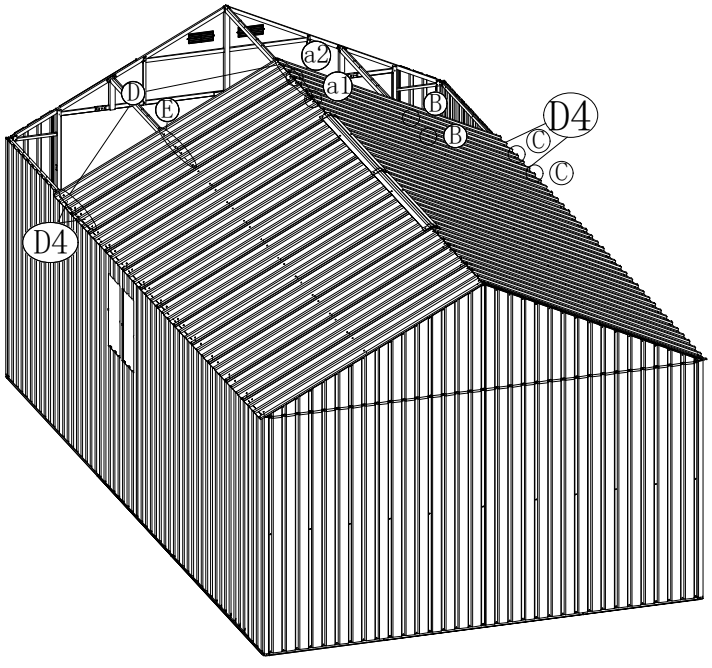

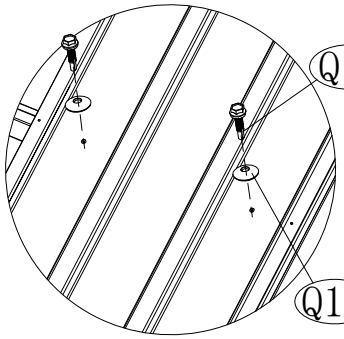


E x4


NO.	PART.	Qty.
18		1
Q32	 M4x14mm	2
Q18		2

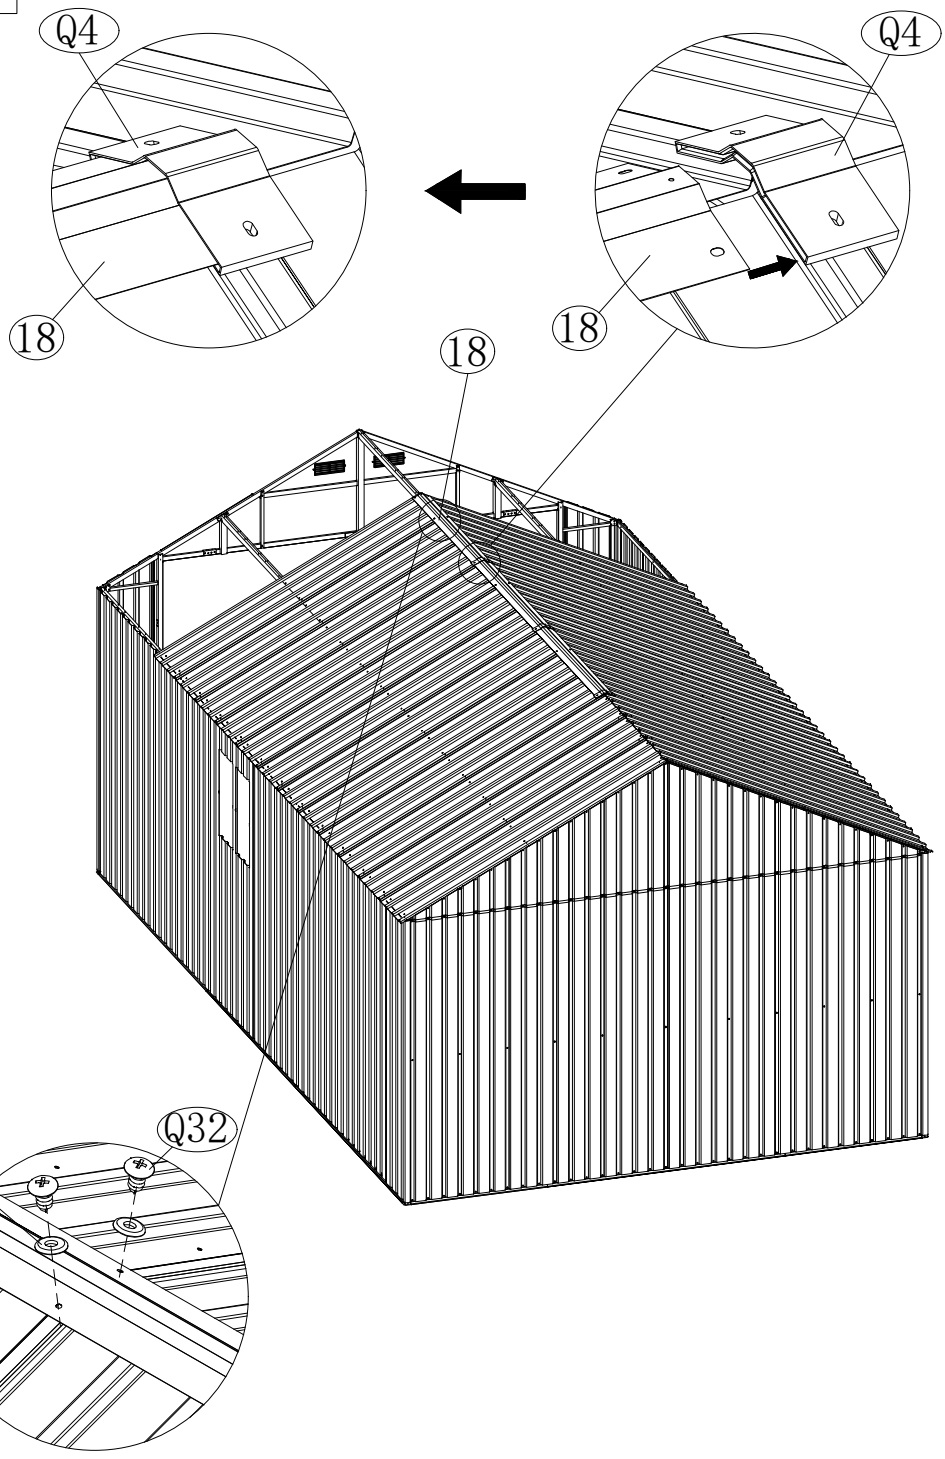


NO.	PART.	Qty.
D2		2
Q32	M4x14mm	6
Q13	M5x16mm	12
Q18		6
Q19		12

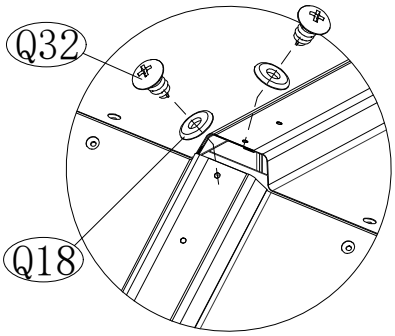


a2 x1

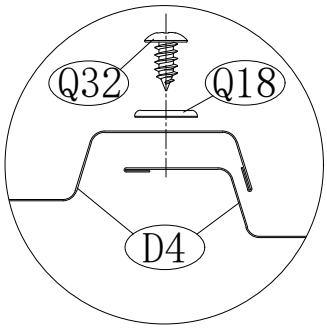


B x2

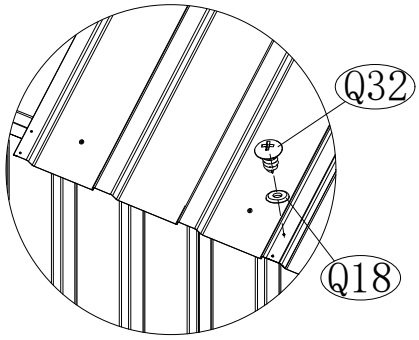


C x2

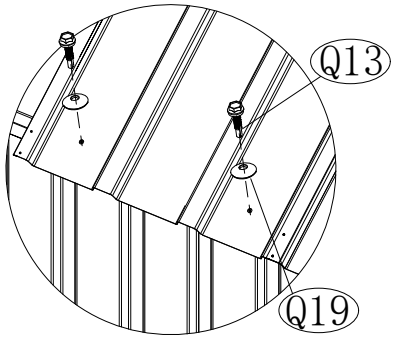

D x2

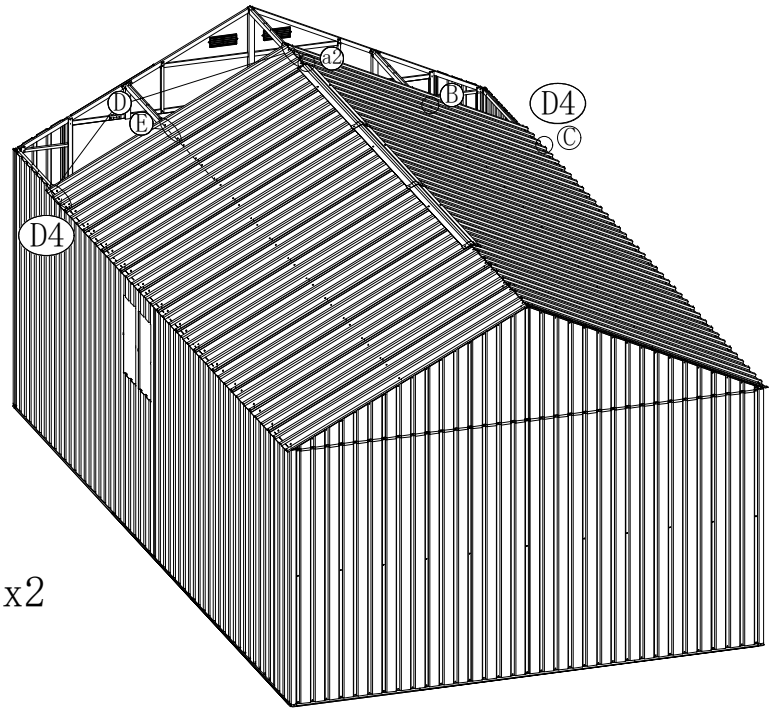

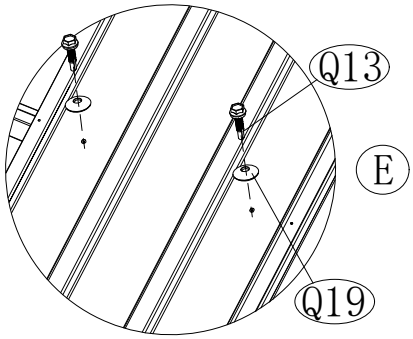


E x2


NO.	PART.	Qty.
Q4		1
Q32	 M4x14mm	2
Q18		2

Install plastic Q4 between the 12th and 13th pieces


NO.	PART.	Qty.
D4		2
Q32	 M4x14mm	8
Q13	 M5x16mm	12
Q18		8
Q19		12

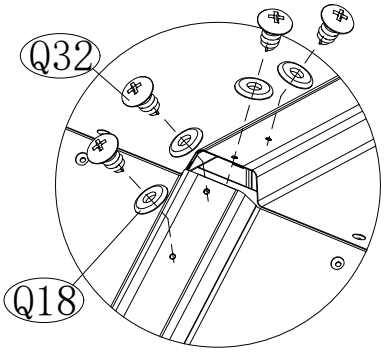


a1 x1

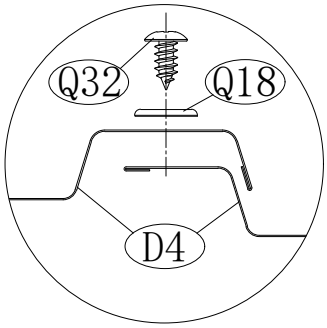


B x2

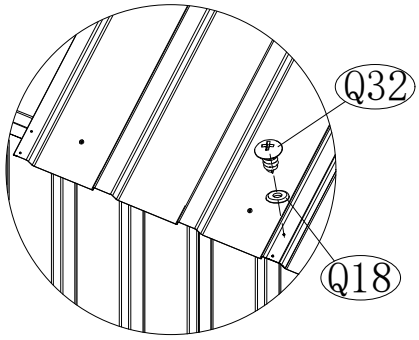


C x2

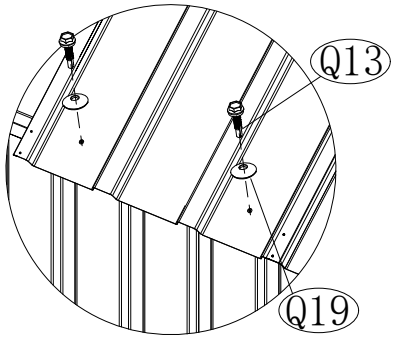


D x2

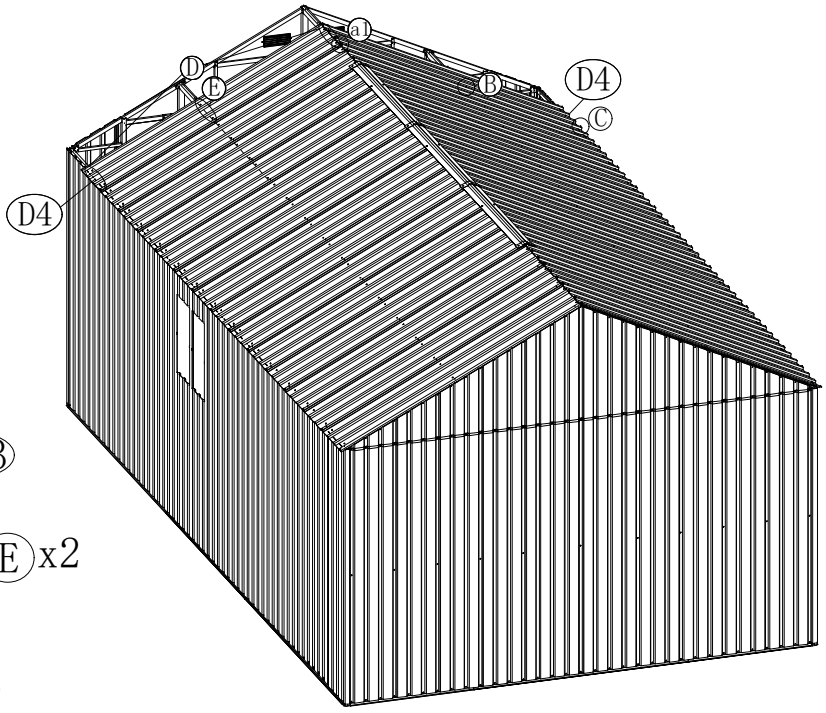

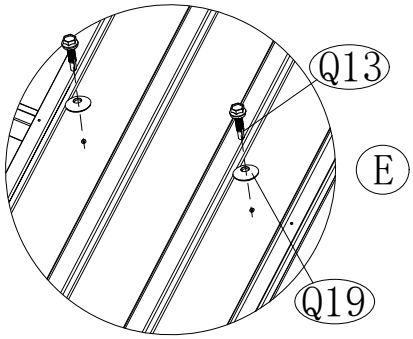


E x2


NO.	PART.	Qty.
D4		2
Q32	M4x14mm	6
Q13	M5x16mm	12
Q18		6
Q19		12

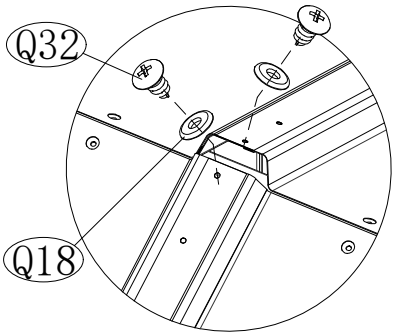


a2 x1

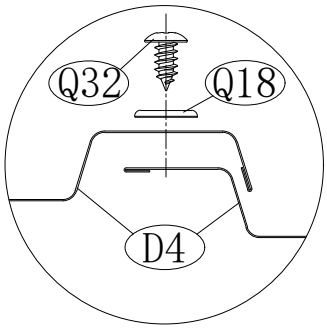


B x2

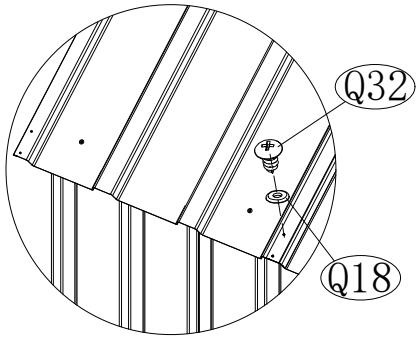


C x2

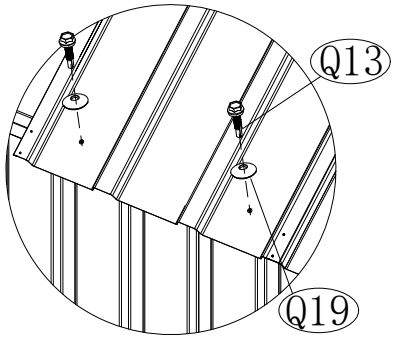


D x2

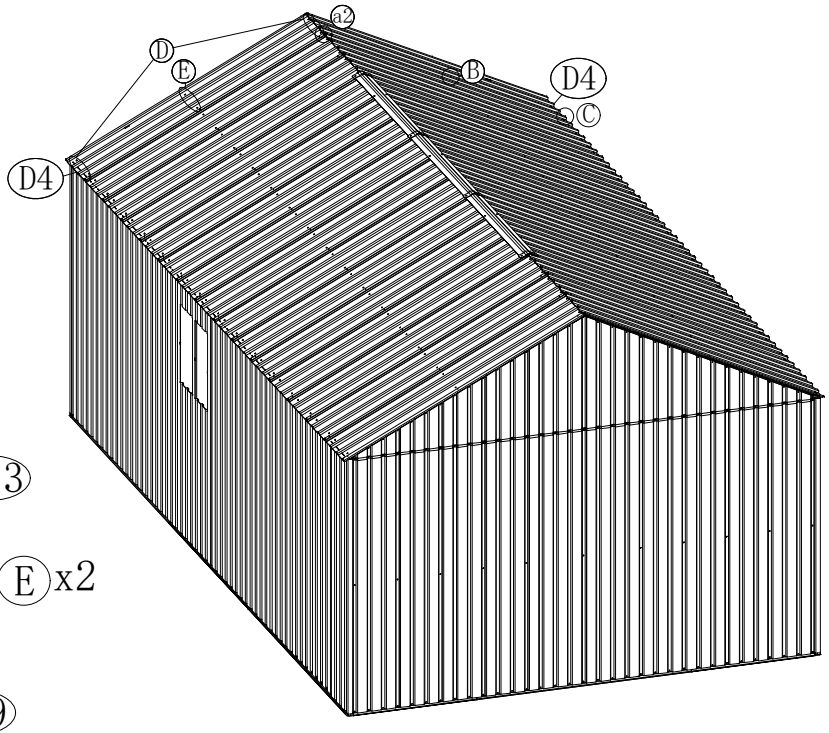

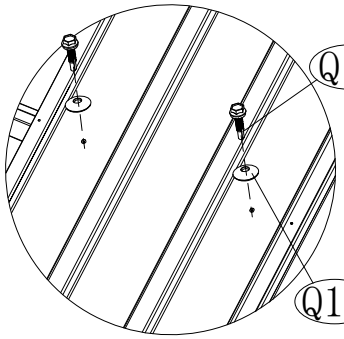


E x2

NO.	PART.	Qty.
20L		2
20R		2
Q32	M4x14mm	12
Q18		12

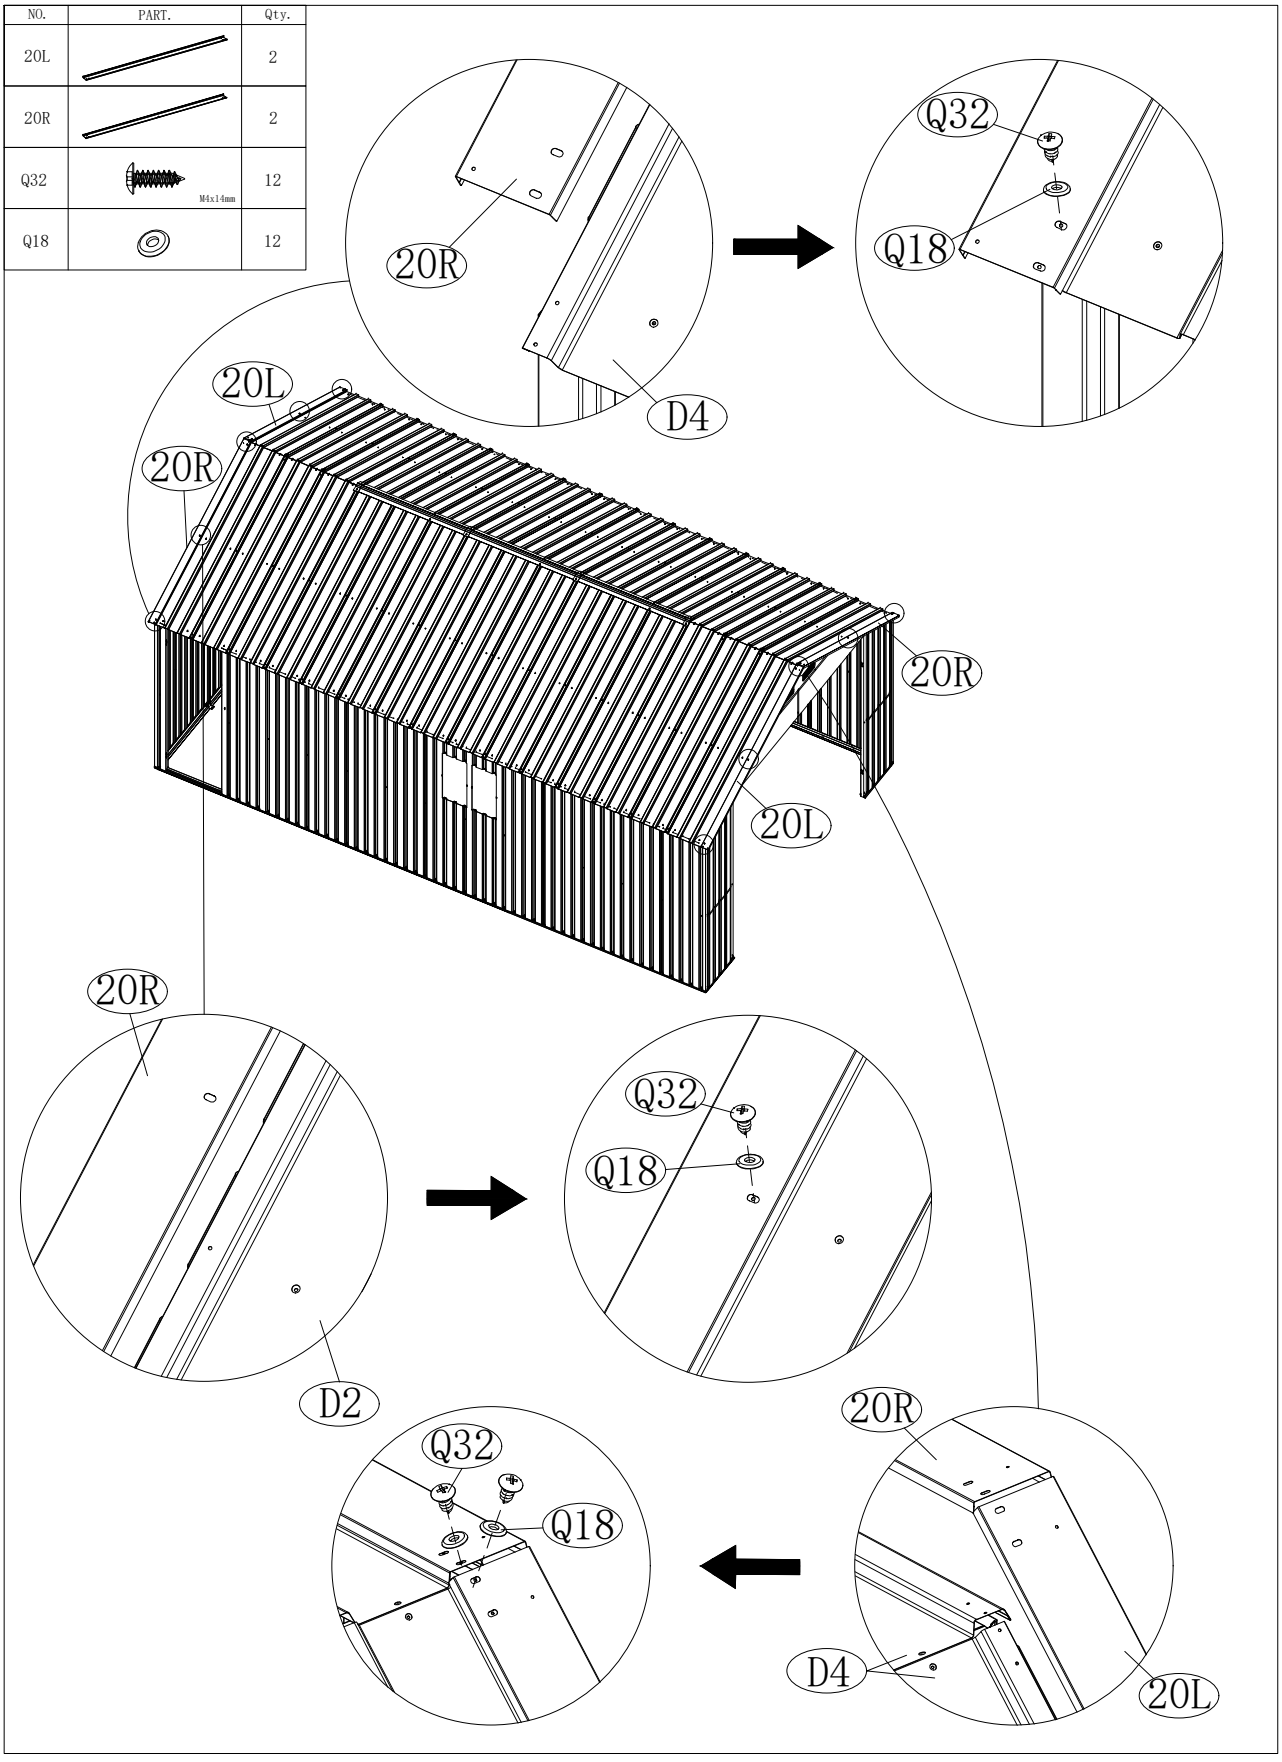


NO.	PART.	Qty.
18F		2
Q32	 M4x14mm	4
Q18		4


NO.	PART.	Qty.
Q2		2
Q32	 M4x14mm	4
Q18		4


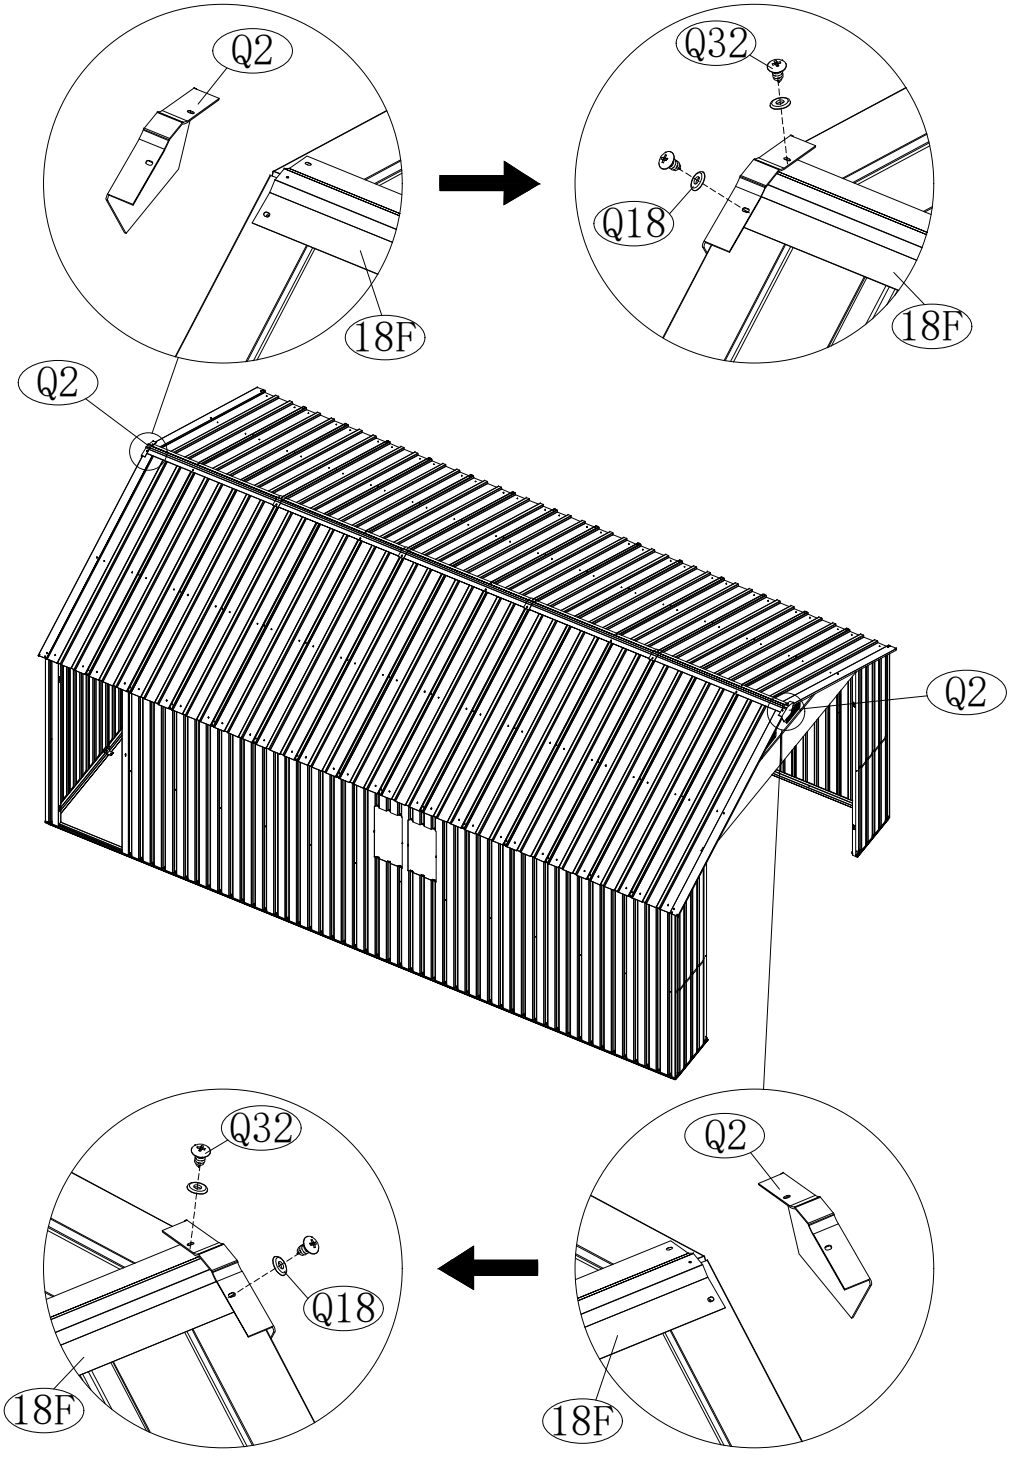



NO.	PART.	Qty.
19		2
Q3		4
Q32	M4x14mm	12
Q18		12

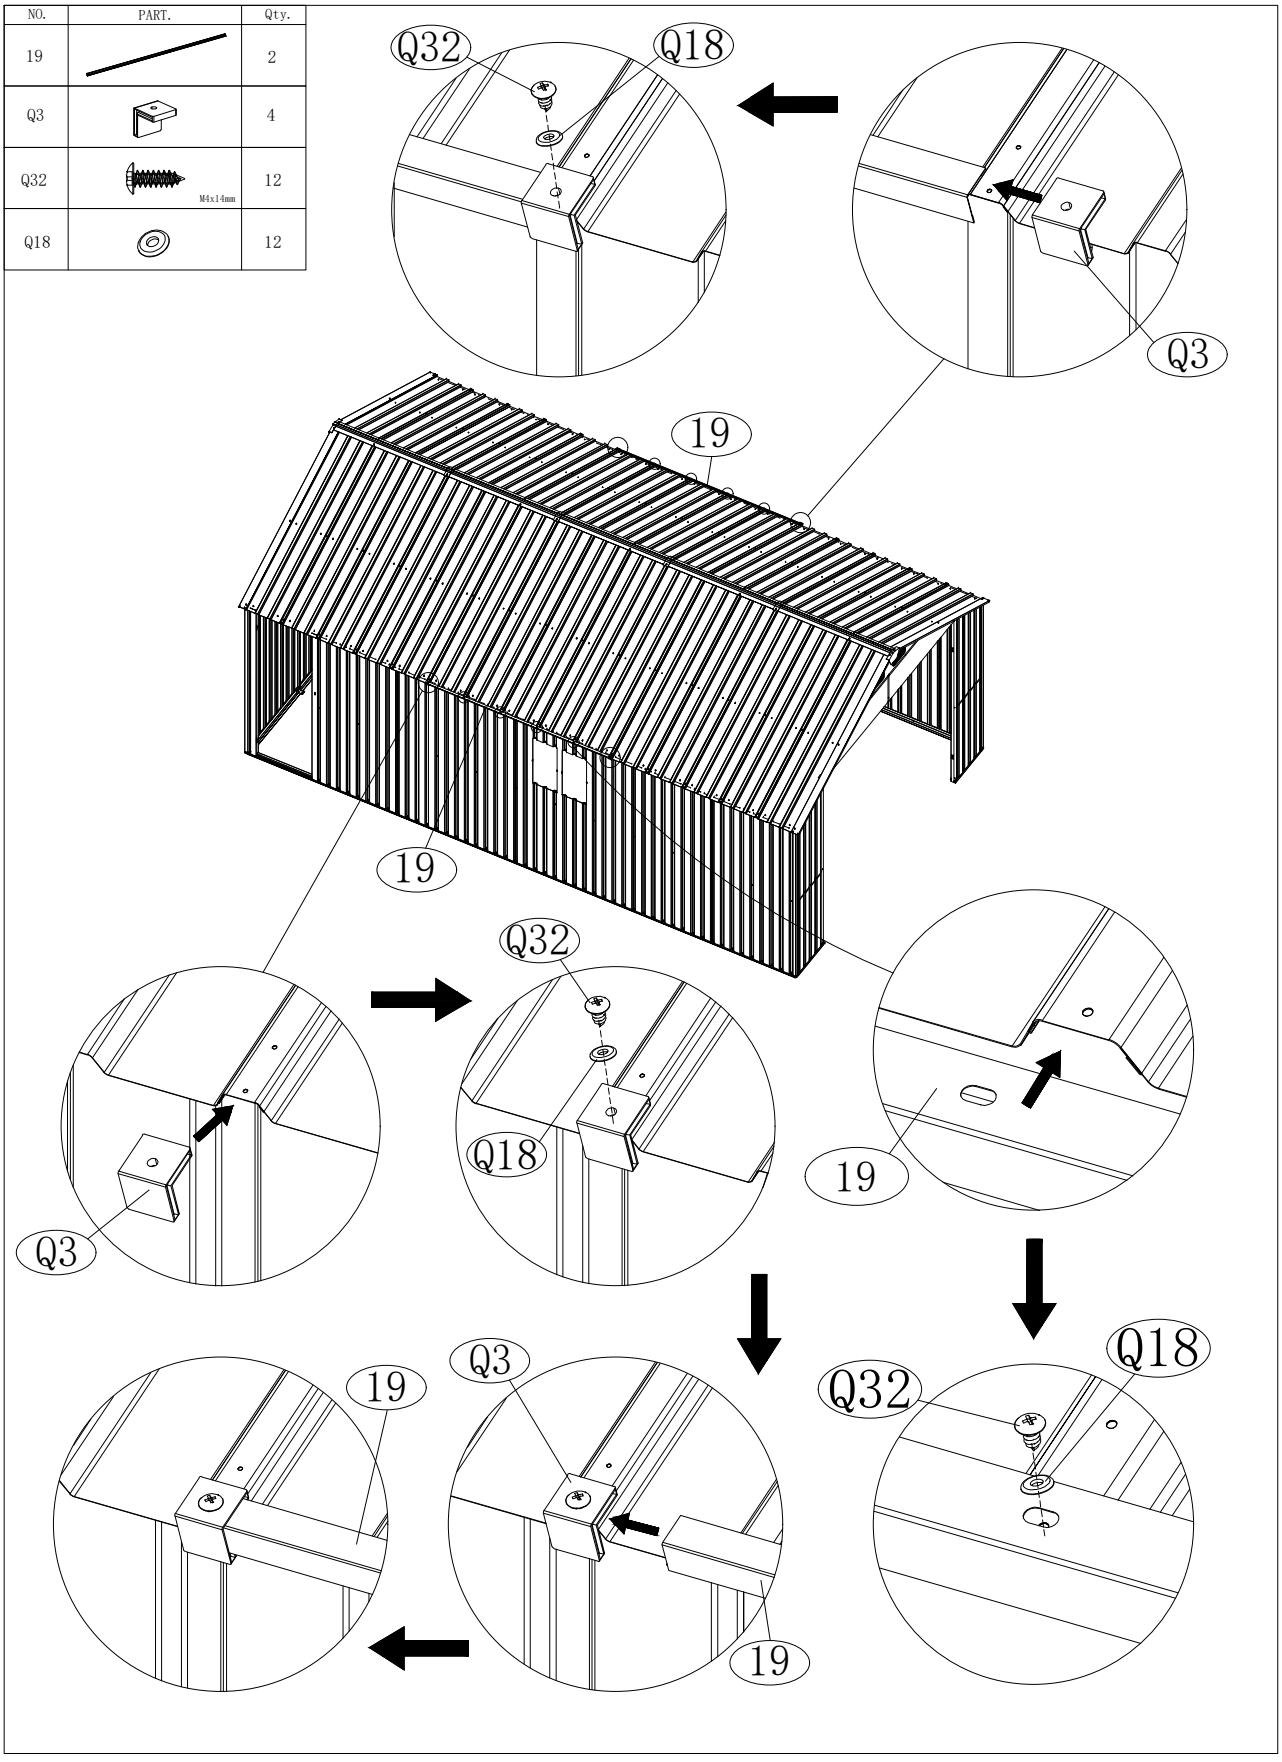


NO.	PART.	Qty.
19L		2
19R		2
Q1		4
Q32	M4x14mm	24
Q18		24

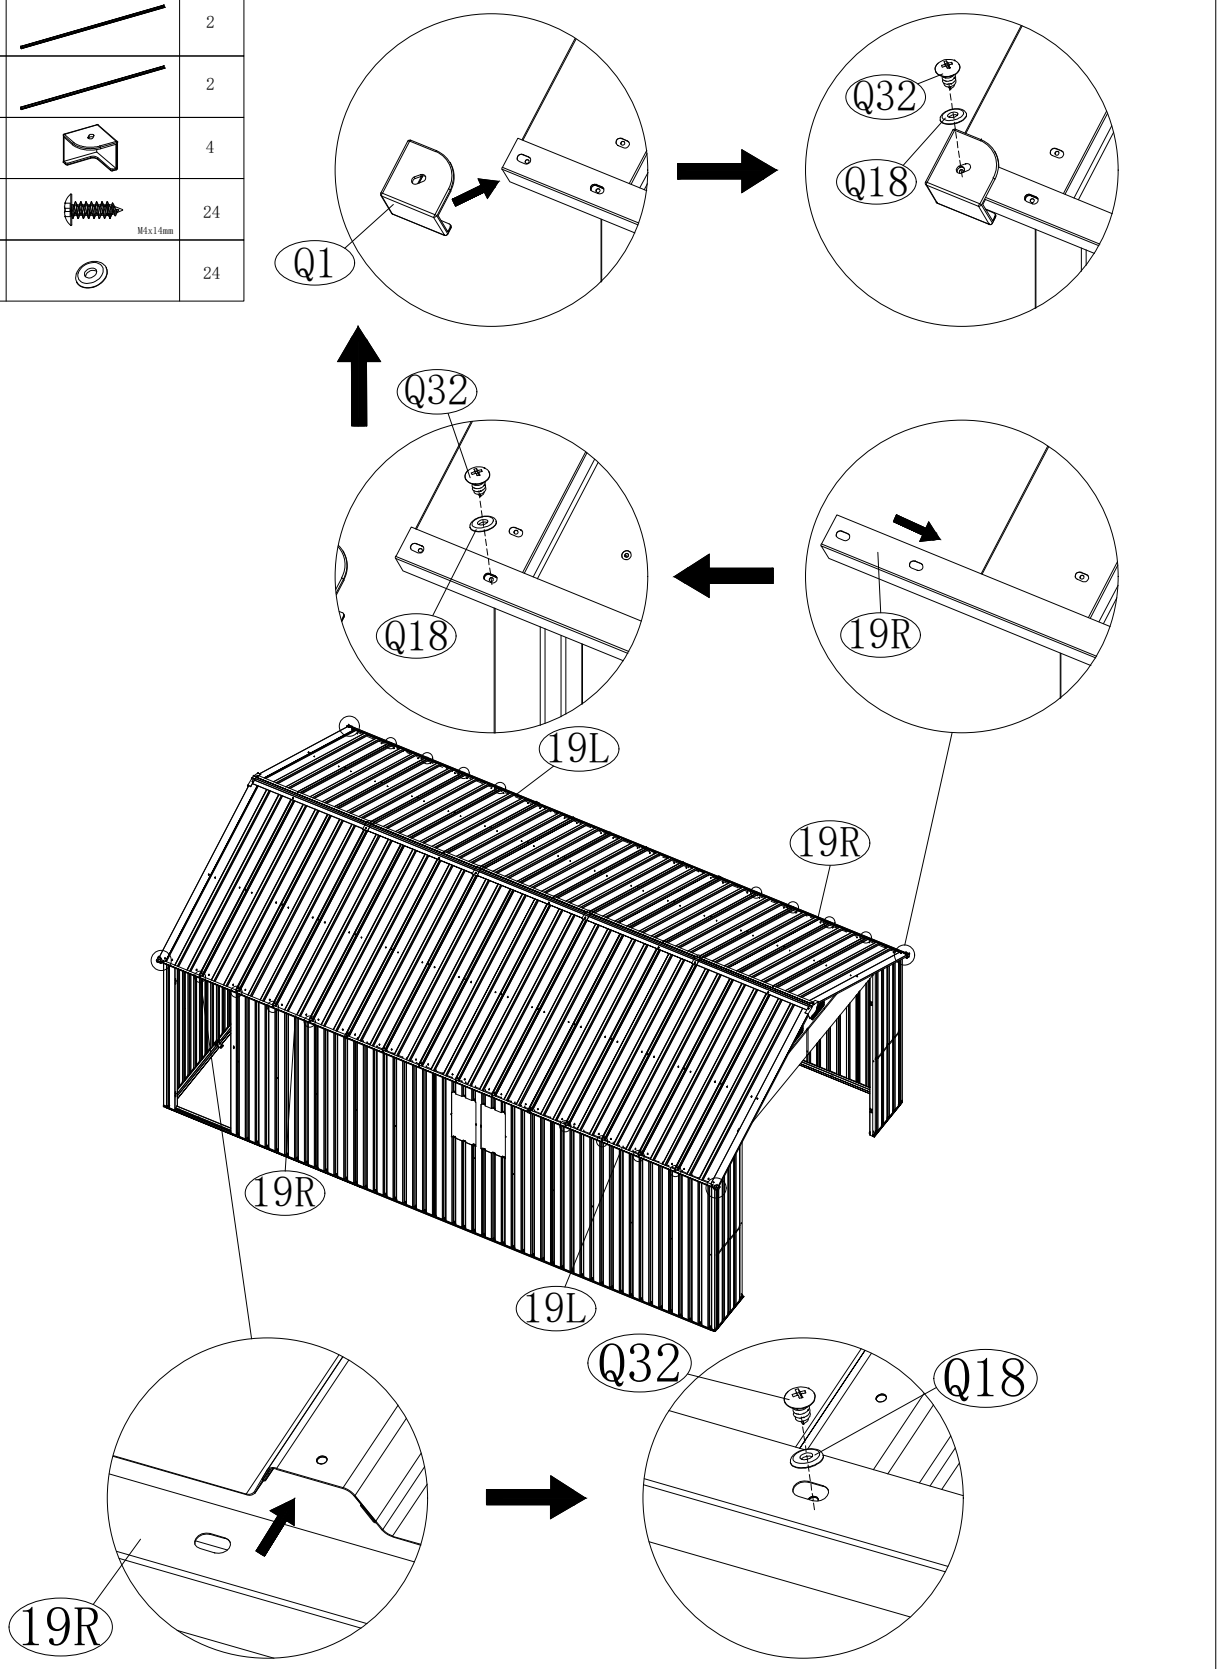


NO.	PART.	Qty.
F12		4
F13		4
F14		4
41		4
Q32	 M4x14mm	32
Q18		32

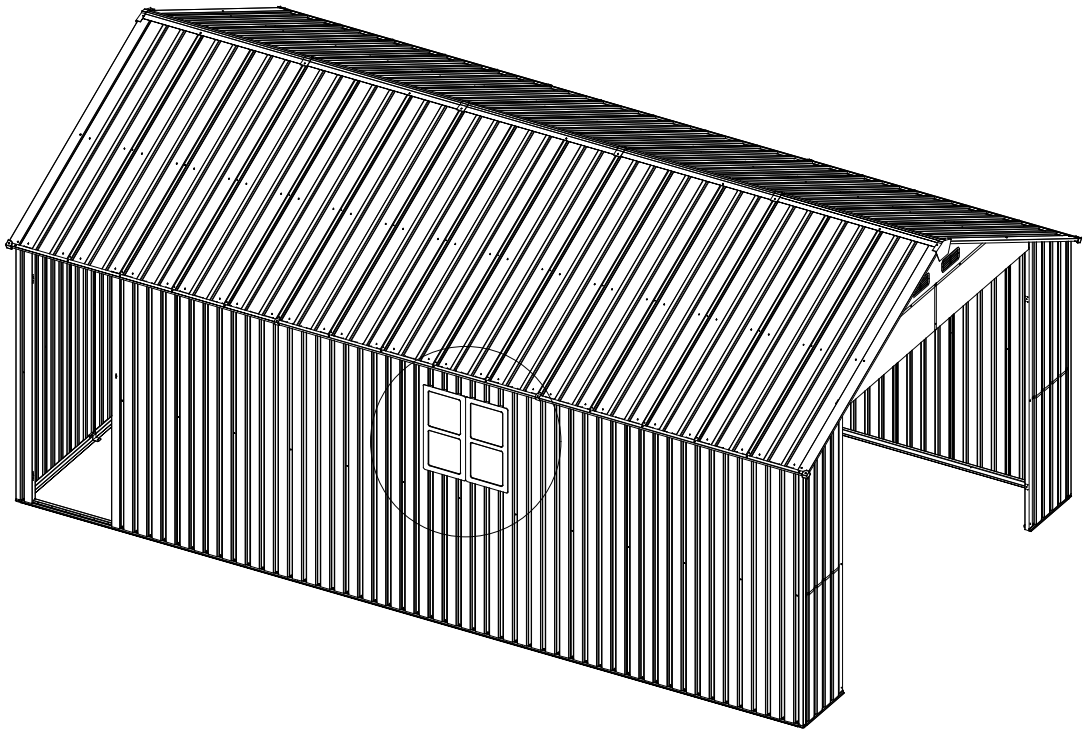


Detailed steps are on the next page.

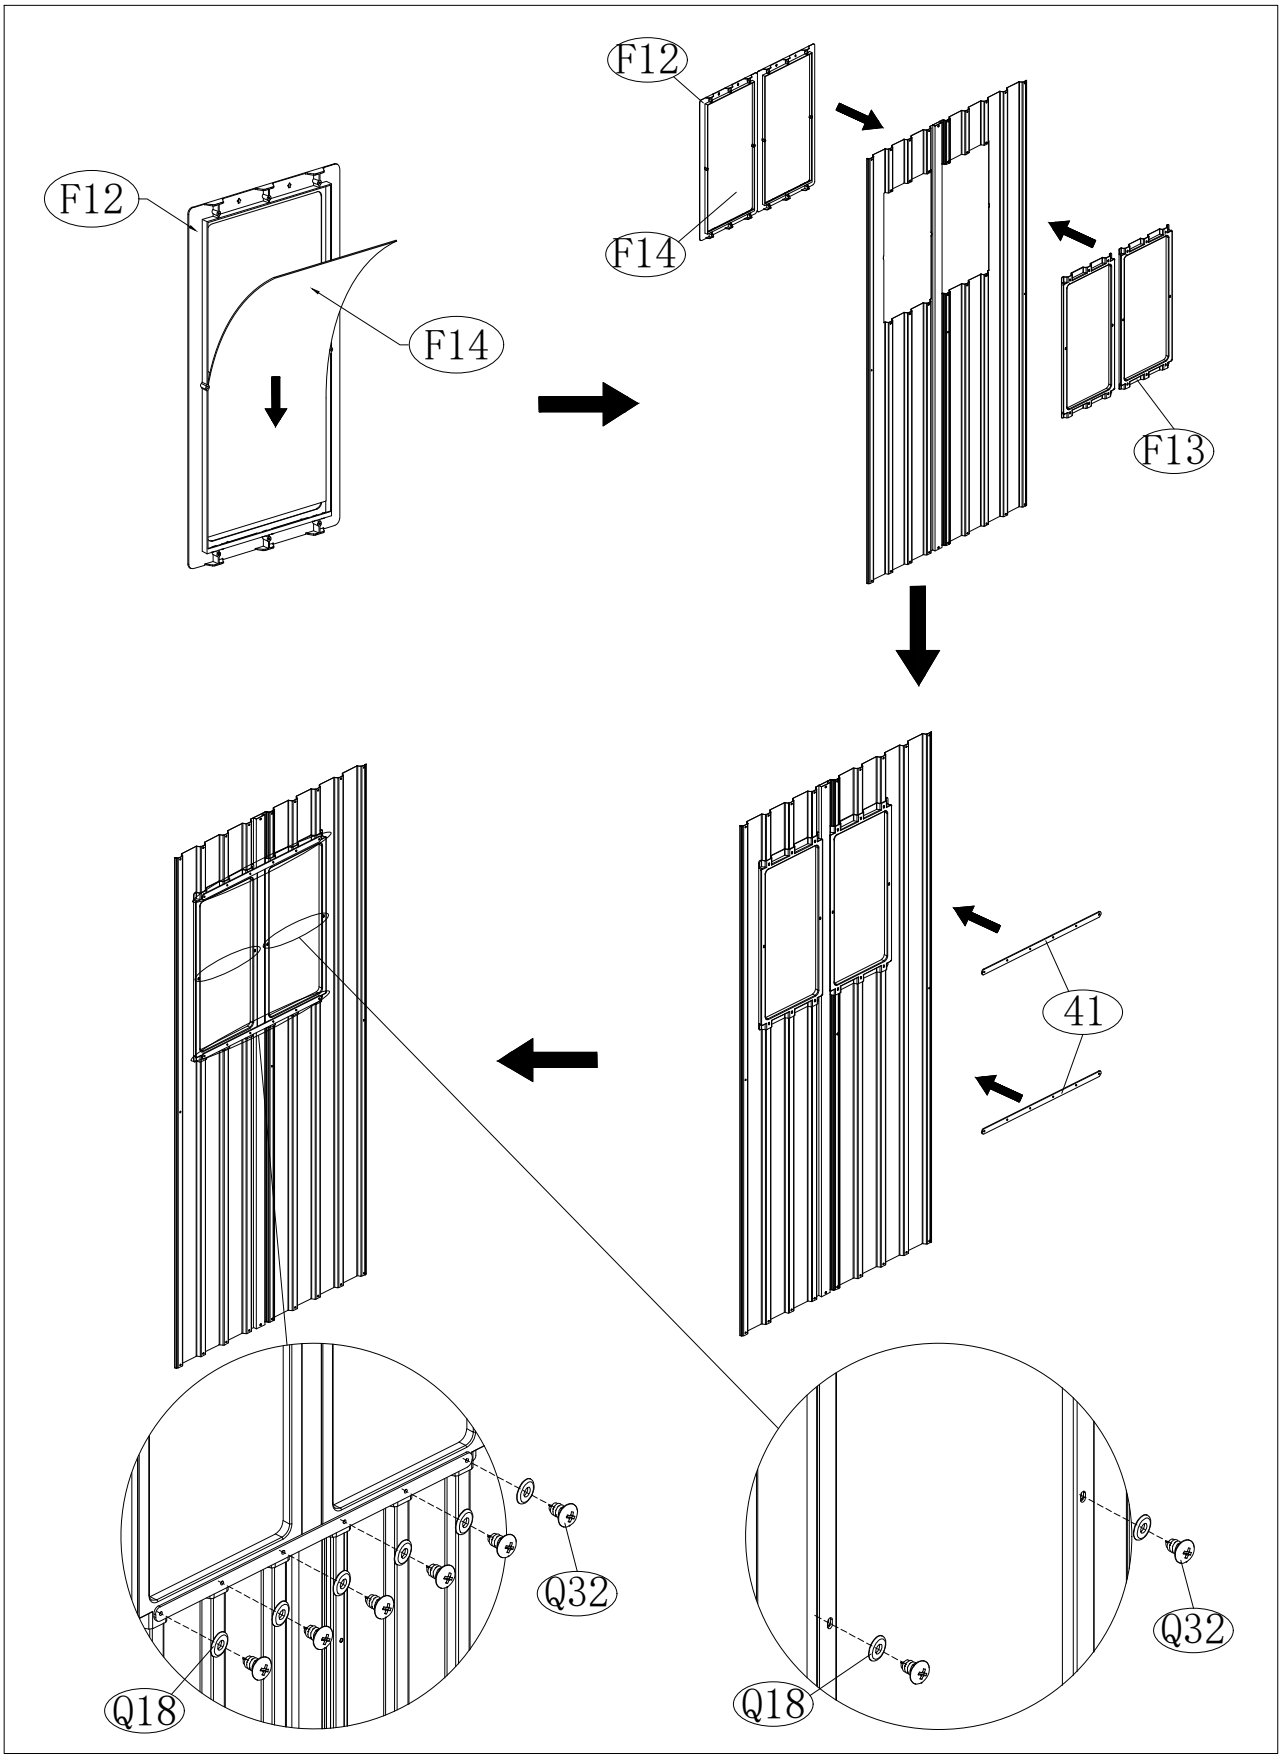

F12
F14
F12
F14
F13
41
Q32
Q18
Q32
Q18

NO.	PART.	Qty.
53		2
54		2
55		3
56		1
Q10	M4x10mm	38

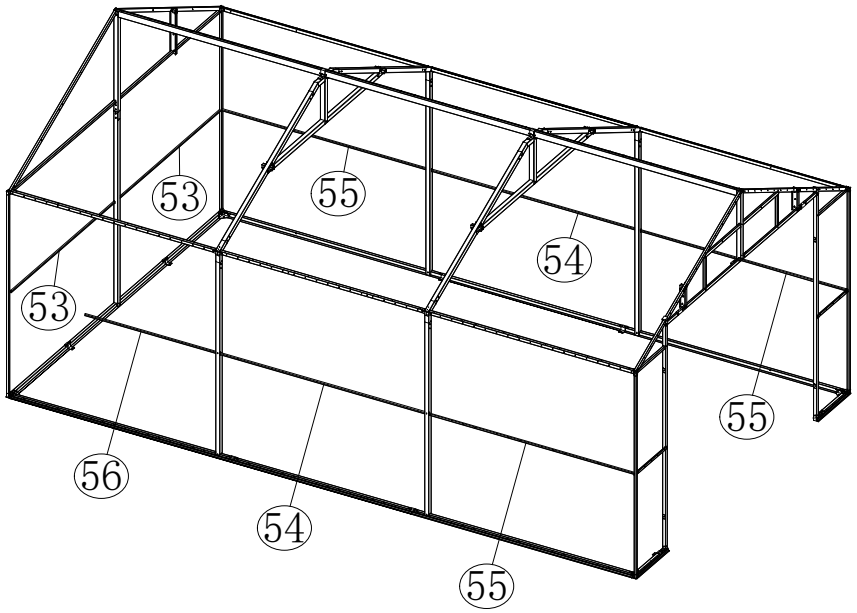


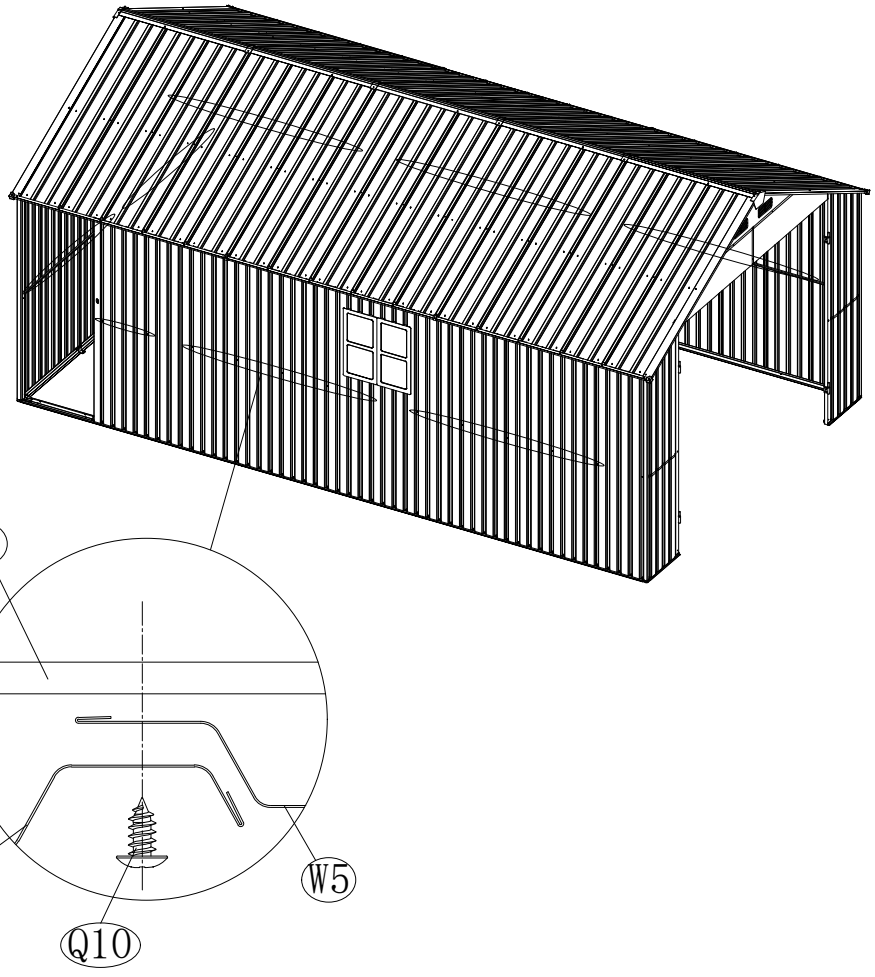


NO.	PART.	Qty.
16		1
47		2
Q33A		2
Q38	M4x10mm	10
Q54	M4	10

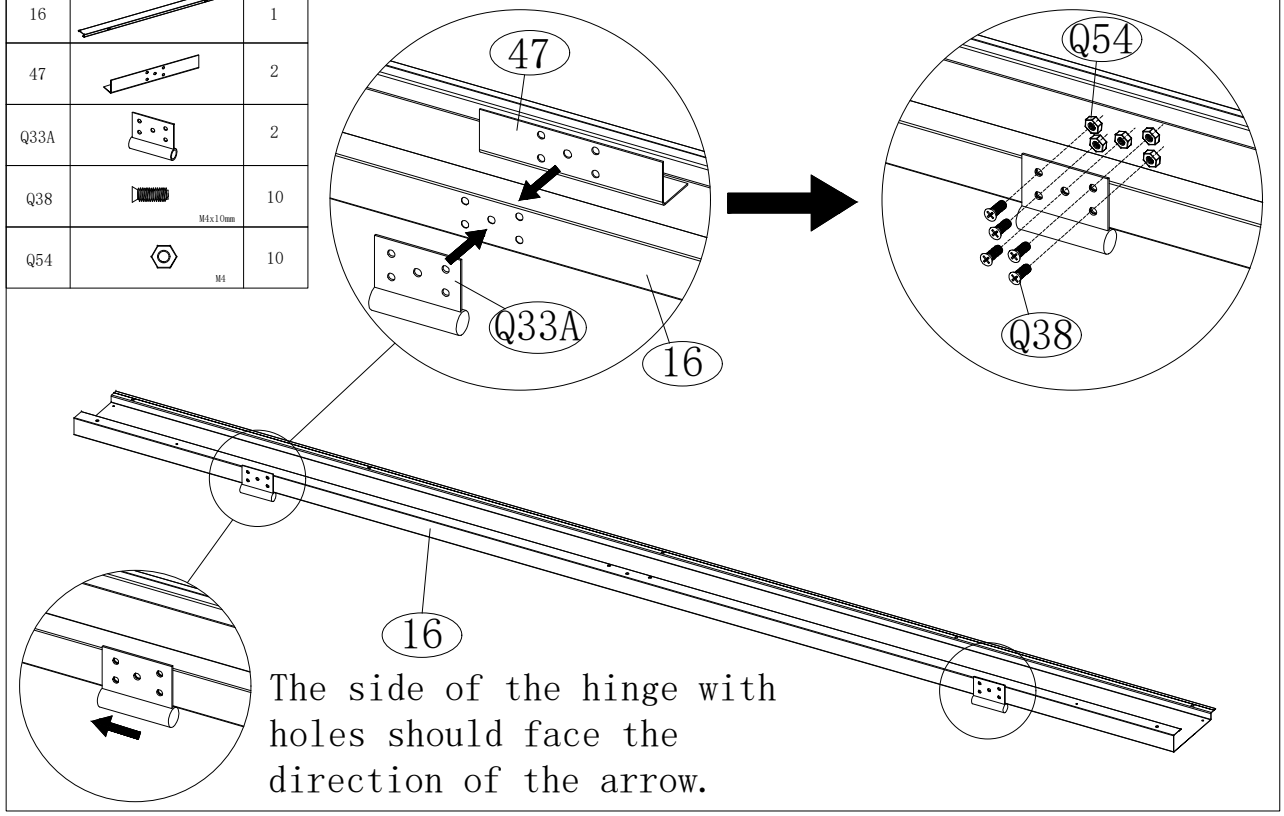

NO.	PART.	Qty.
16		1
47		2
Q33A		2
Q38	M4x10mm	10
Q54	M4	10

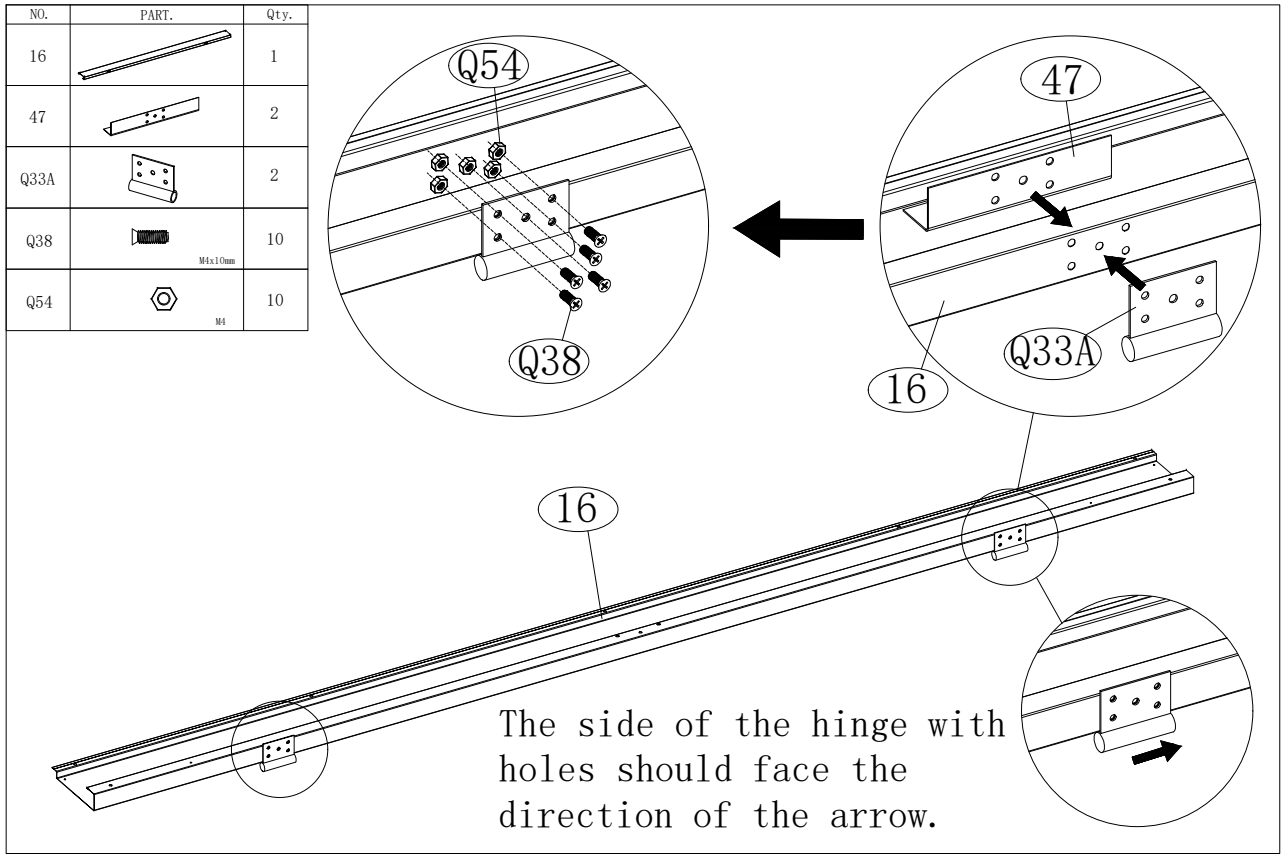



NO.	PART.	Qty.
22		1
M1		3

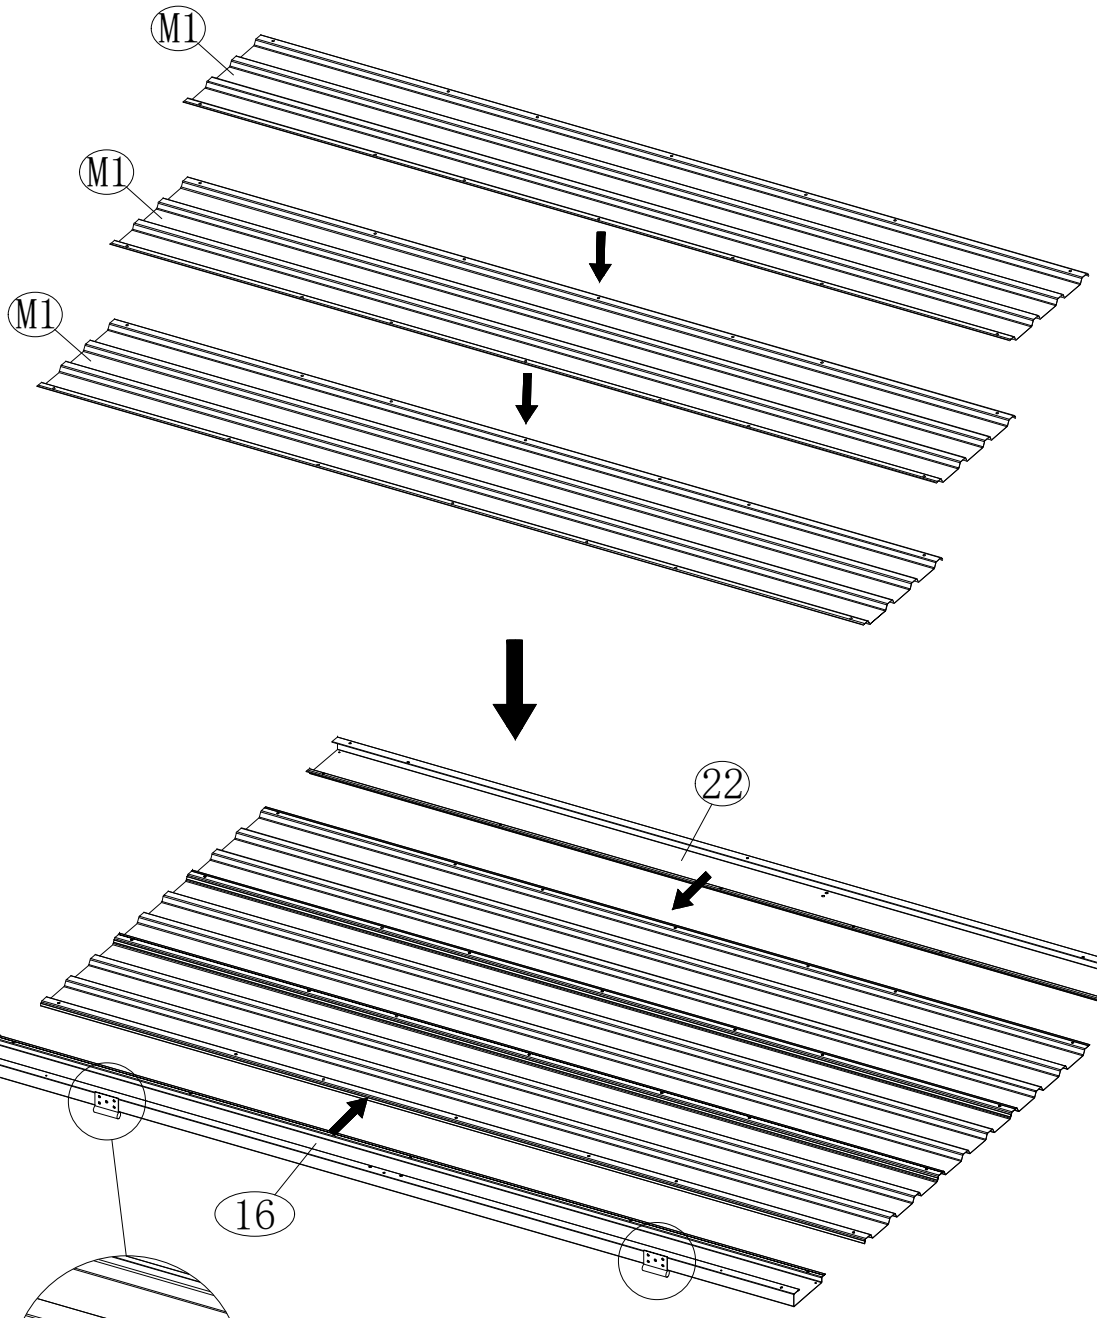


The side of the hinge with holes should face the direction of the arrow.

NO.	PART.	Qty.
21		2
27		2

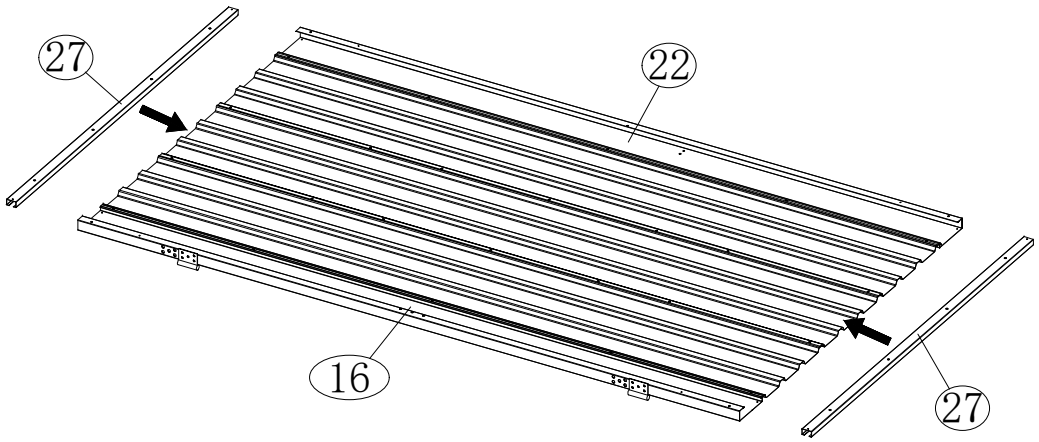


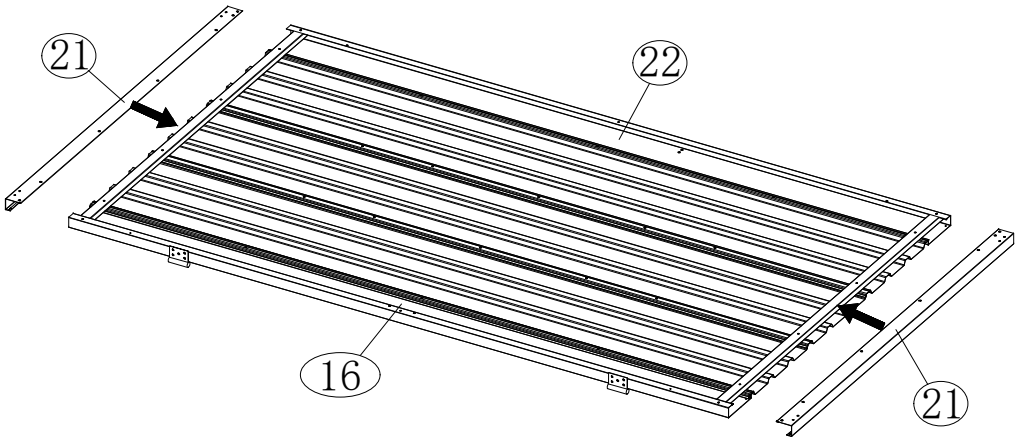

NO.	PART.	Qty.
28		4
Q34		2
Q10	 M4x10mm	14


Note: The latches should be in the same direction on the same door.

NO.	PART.	Qty.
27		1
Q10	 M4x10mm	2

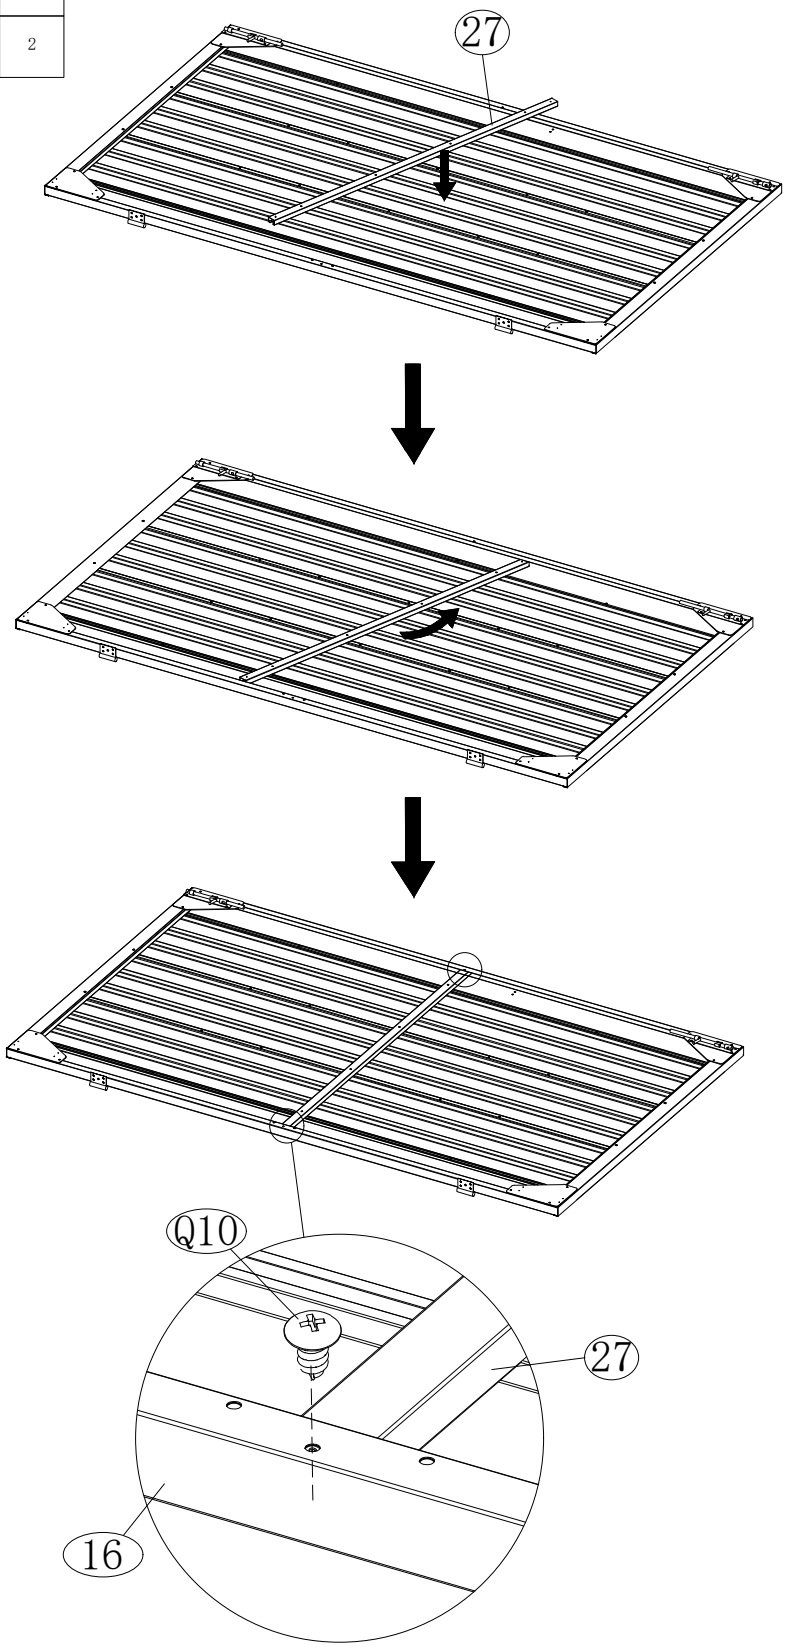



NO.	PART.	Qty.
26		2
Q10	 M4x10mm	4

NO.	PART.	Qty.
Q39	M4x10mm	8
Q41	M4x25mm	16
Q42	M4	24

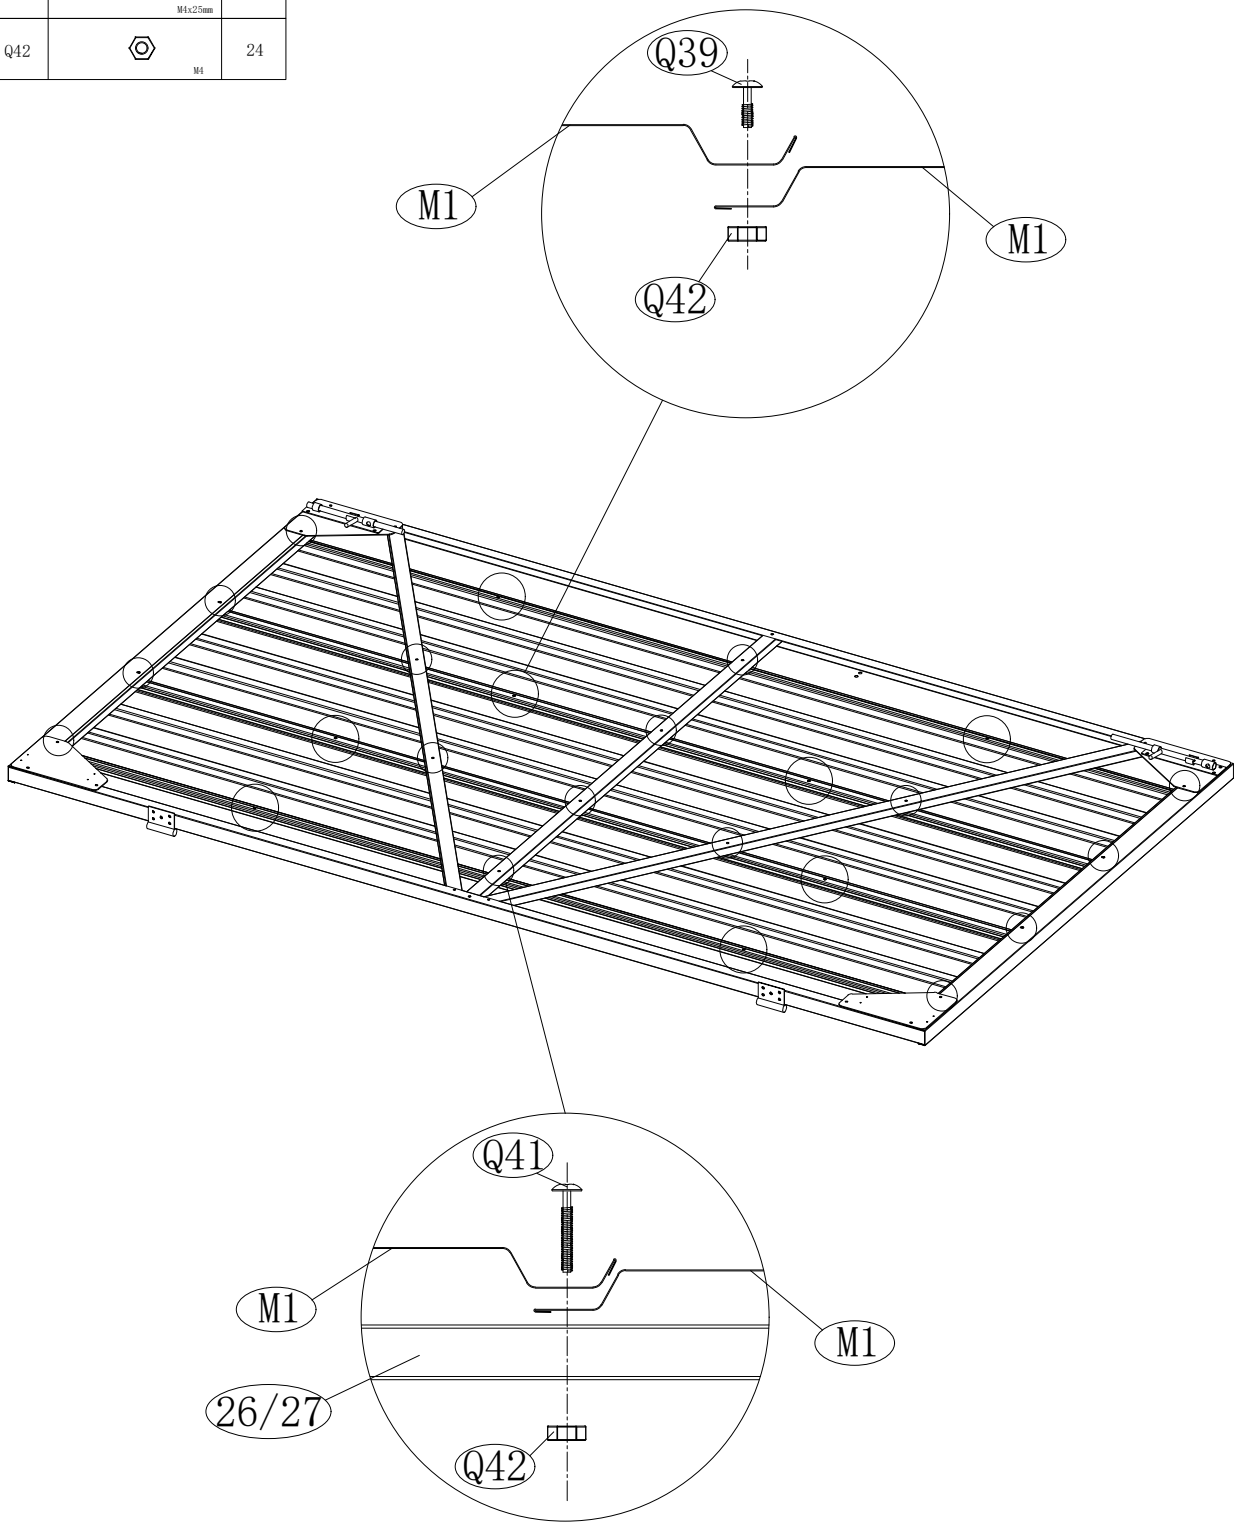


NO.	PART.	Qty.
Q47A		1
Q10	 M4x10mm	8
Q44	 M6x10mm	2
Q17	 M6	2


NO.	PART.	Qty.
23		1
M1		3

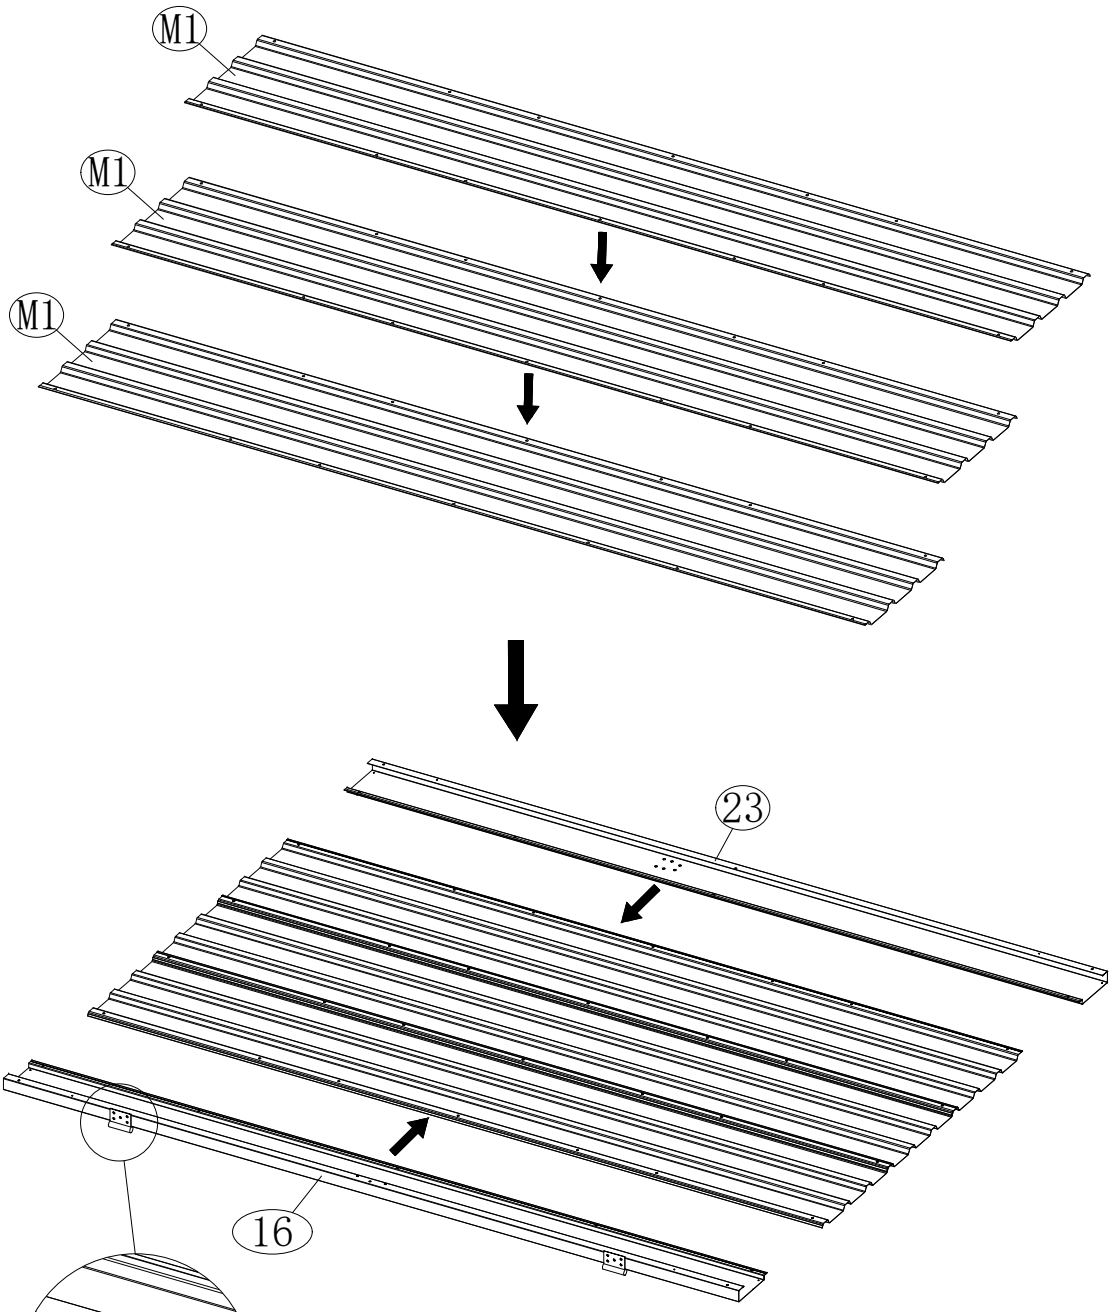


The side of the hinge with holes should face the direction of the arrow.

NO.	PART.	Qty.
21		2
27		2

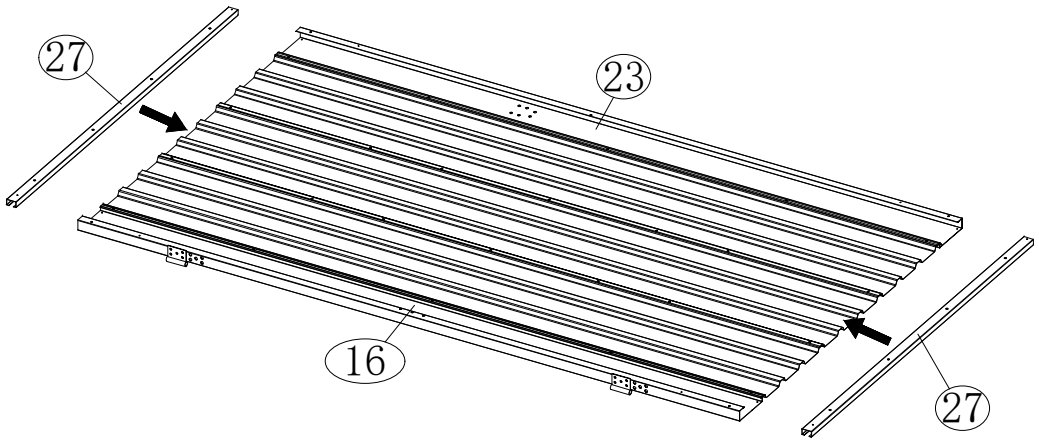


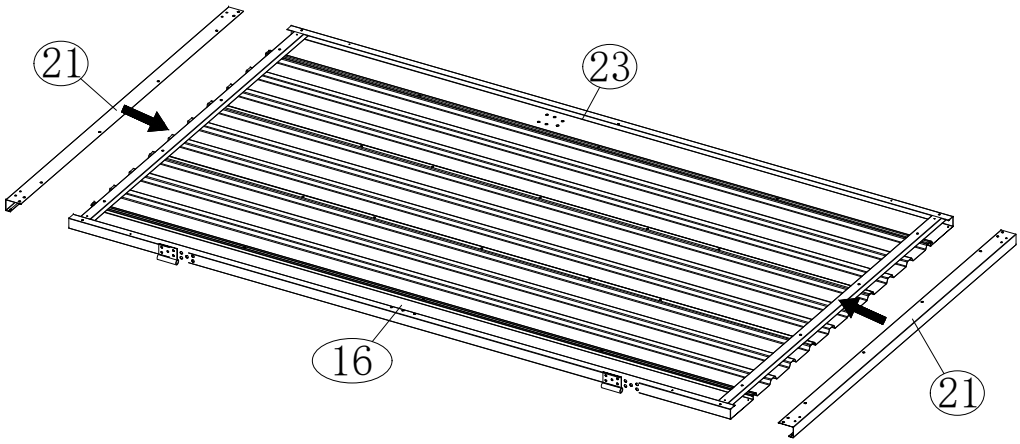


NO.	PART.	Qty.
28		4
Q34		2
Q10	 M4x10mm	14

Note: The latches should be in the same direction on the same door.


NO.	PART.	Qty.
27		1
Q10	 M4x10mm	2

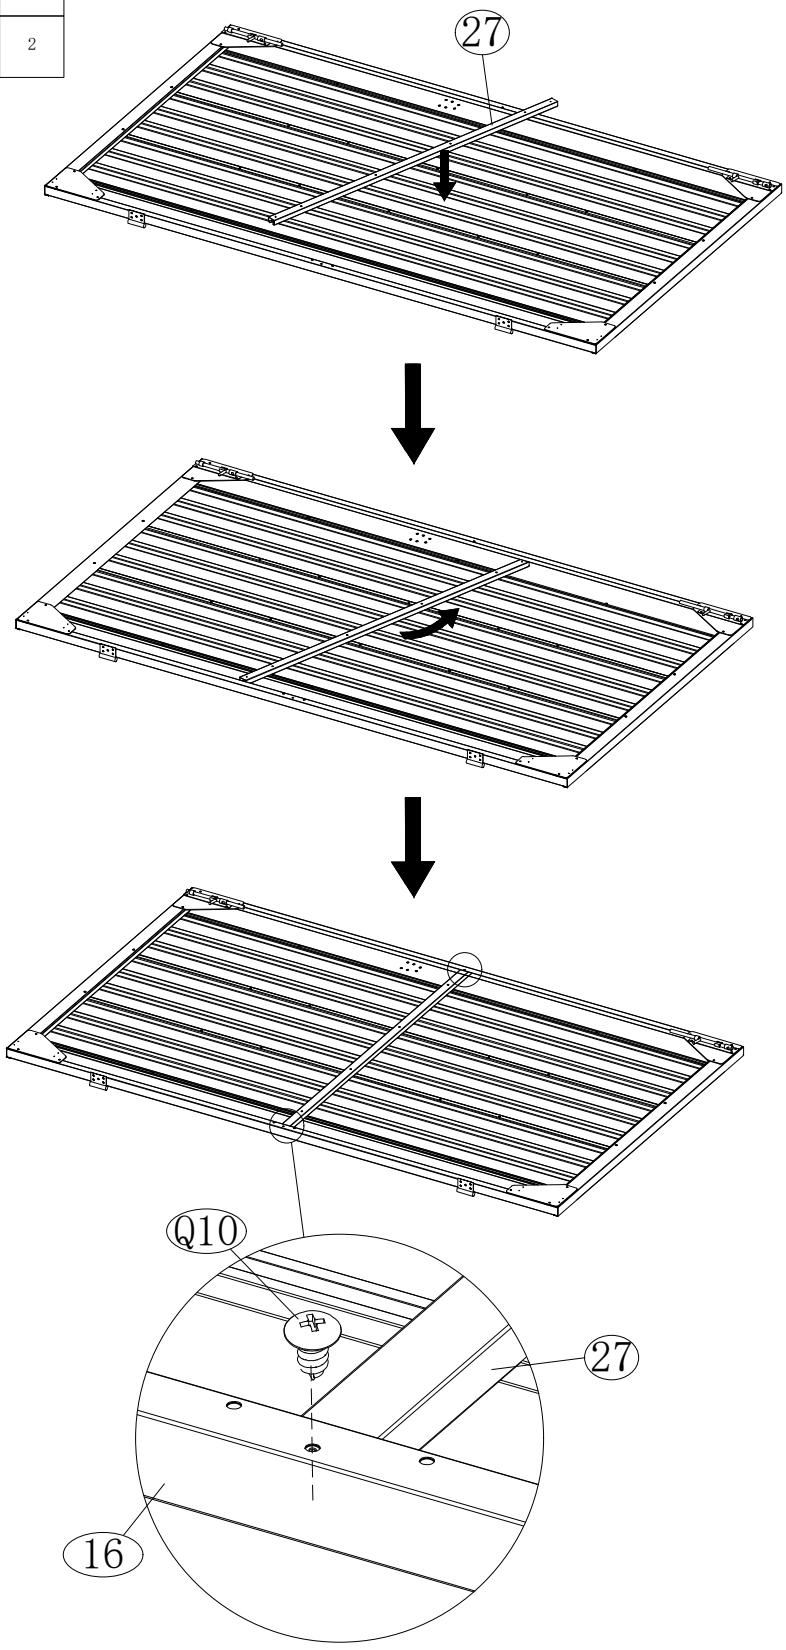



NO.	PART.	Qty.
26		2
Q10	 M4x10mm	4

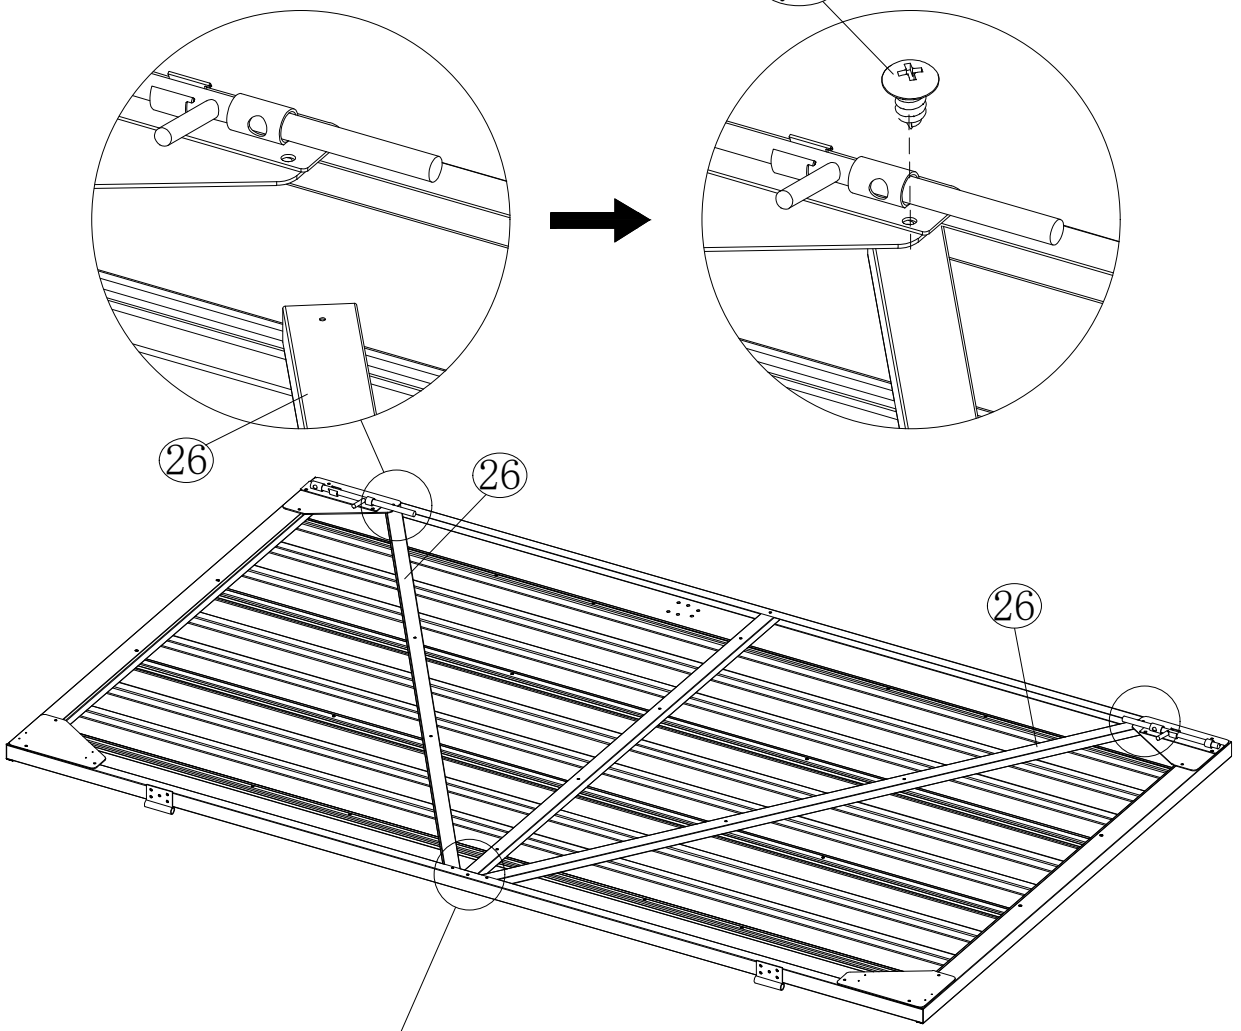


NO.	PART.	Qty.
Q39	M4x10mm	8
Q41	M4x25mm	16
Q42	M4	24

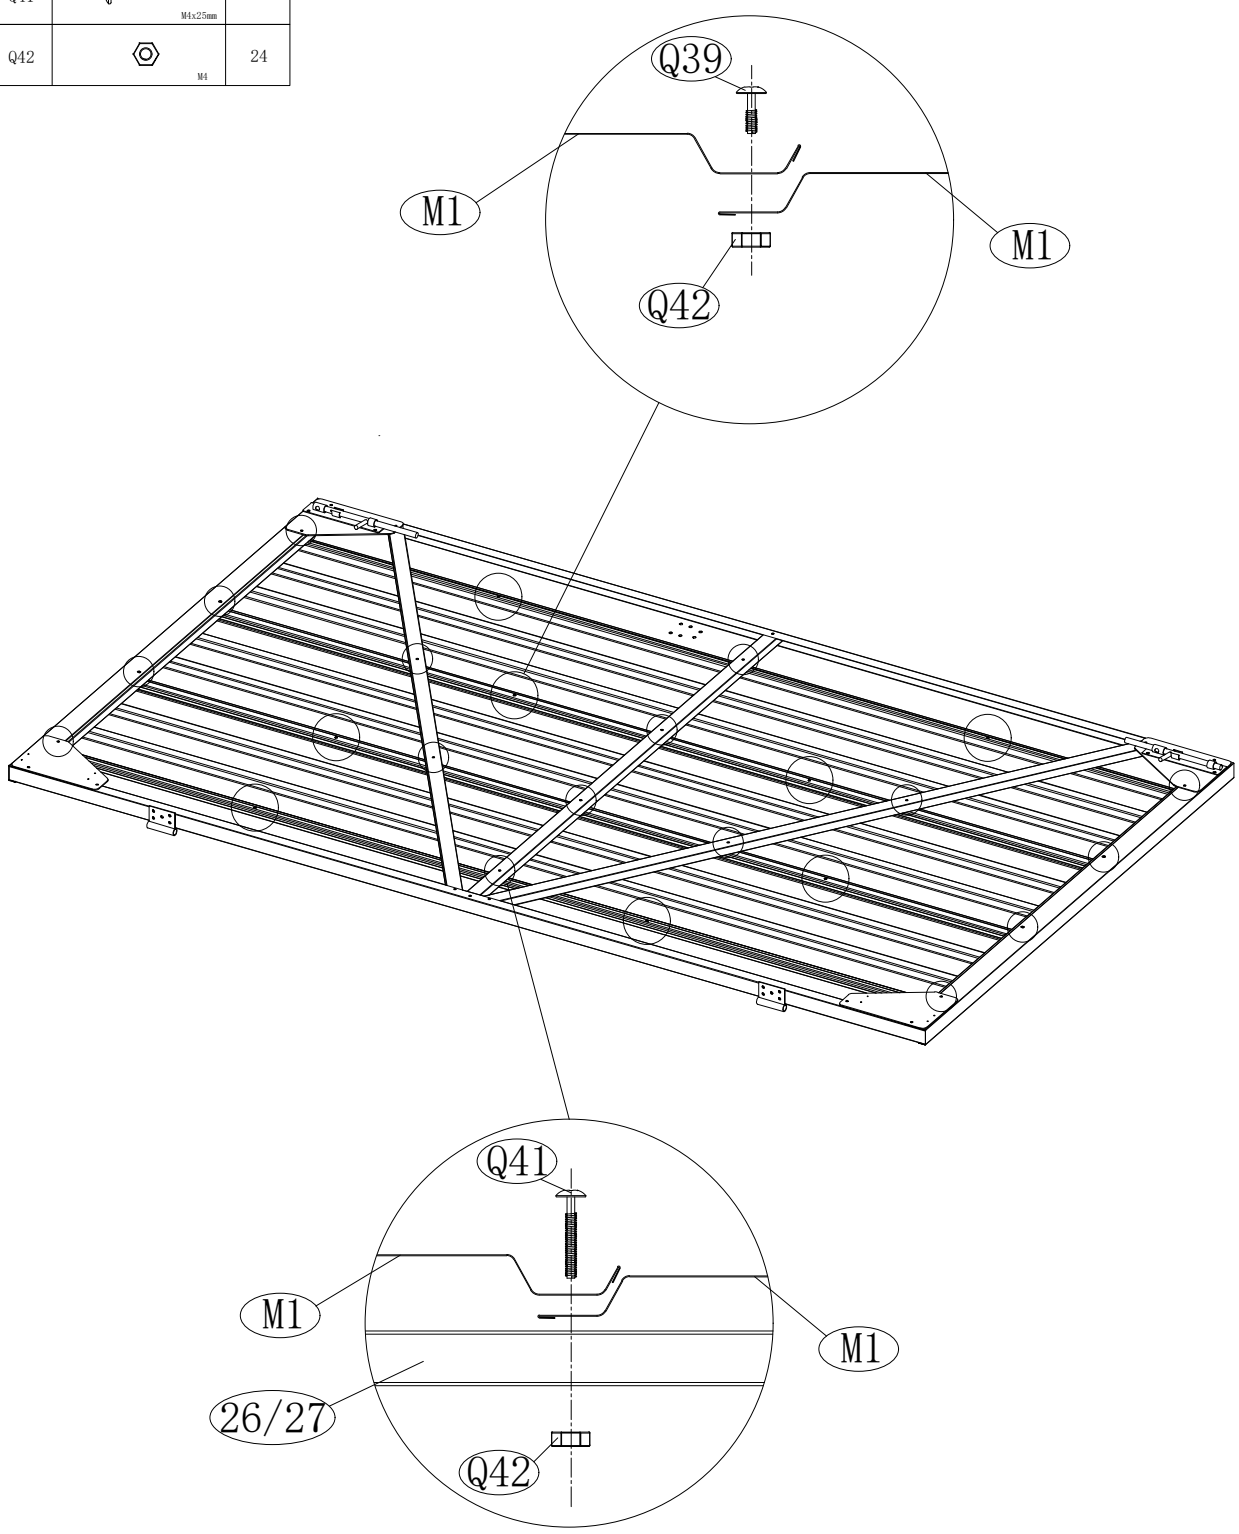



NO.	PART.	Qty.
Q47B		1
Q10	 M4x10mm	8
Q44	 M6x10mm	6
Q17	 M6	6

NO.	PART.	Qty.
16X		1
21X		2
22X		1
M2		1
Q10	 M4x10mm	4


NO.	PART.	Qty.
15		2
52		1
Q10	 M4x10mm	2
Q40	 M4x15mm	2
Q42	 M4	5

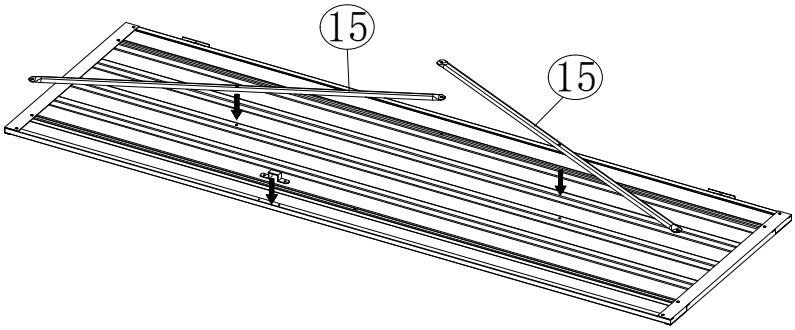


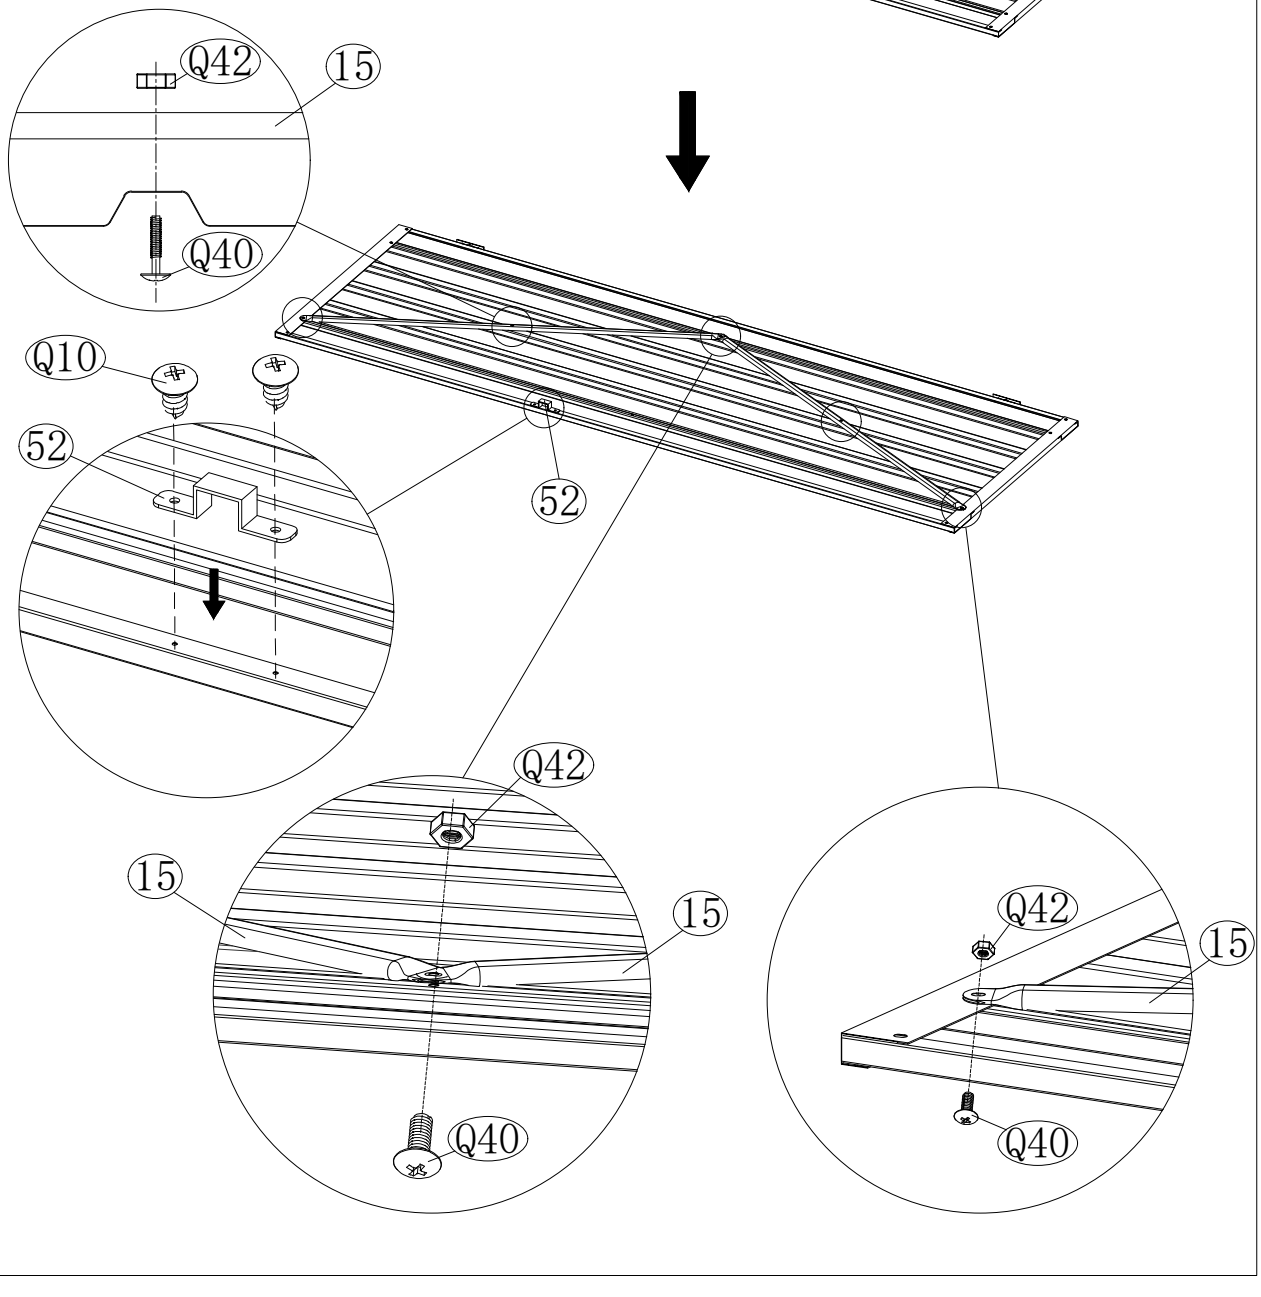

NO.	PART.	Qty.
Q46		1
Q10	 M4x10mm	8
Q39	 M4x10mm	6
Q42	 M4	6

NO.	PART.	Qty.
Q39	M4x10mm	6
Q42	M4	6

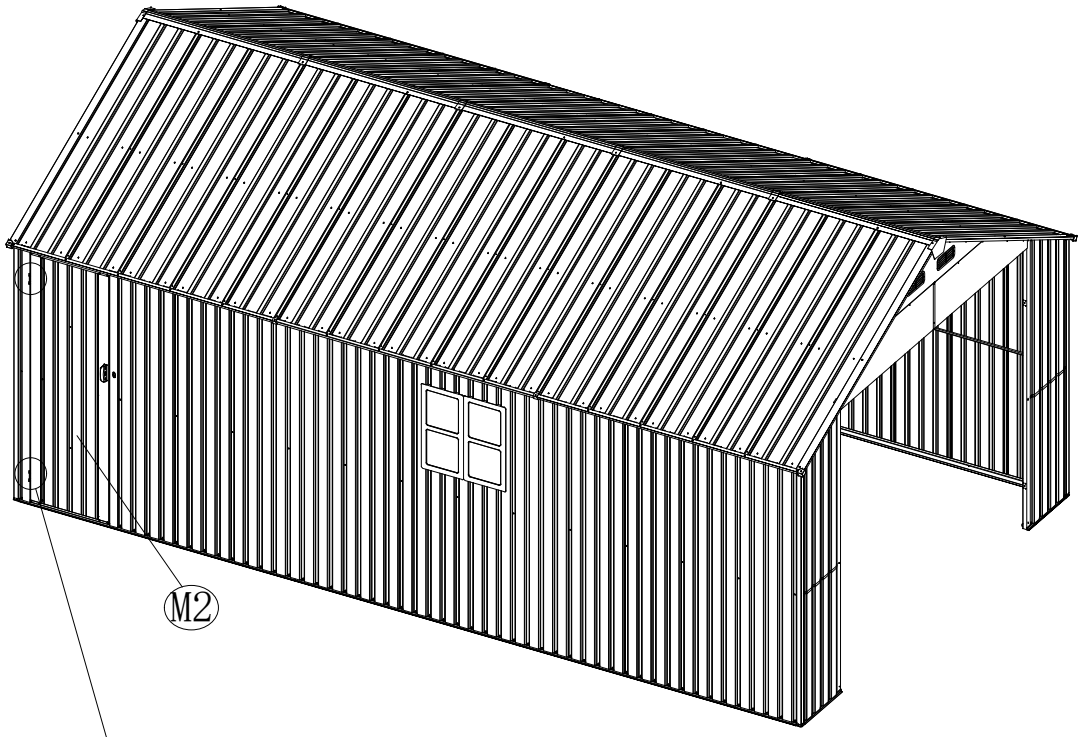

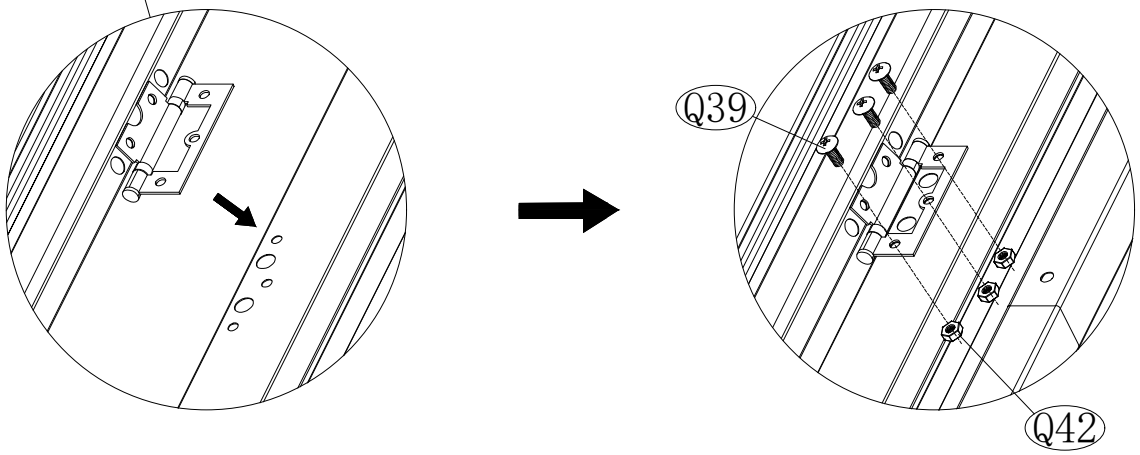




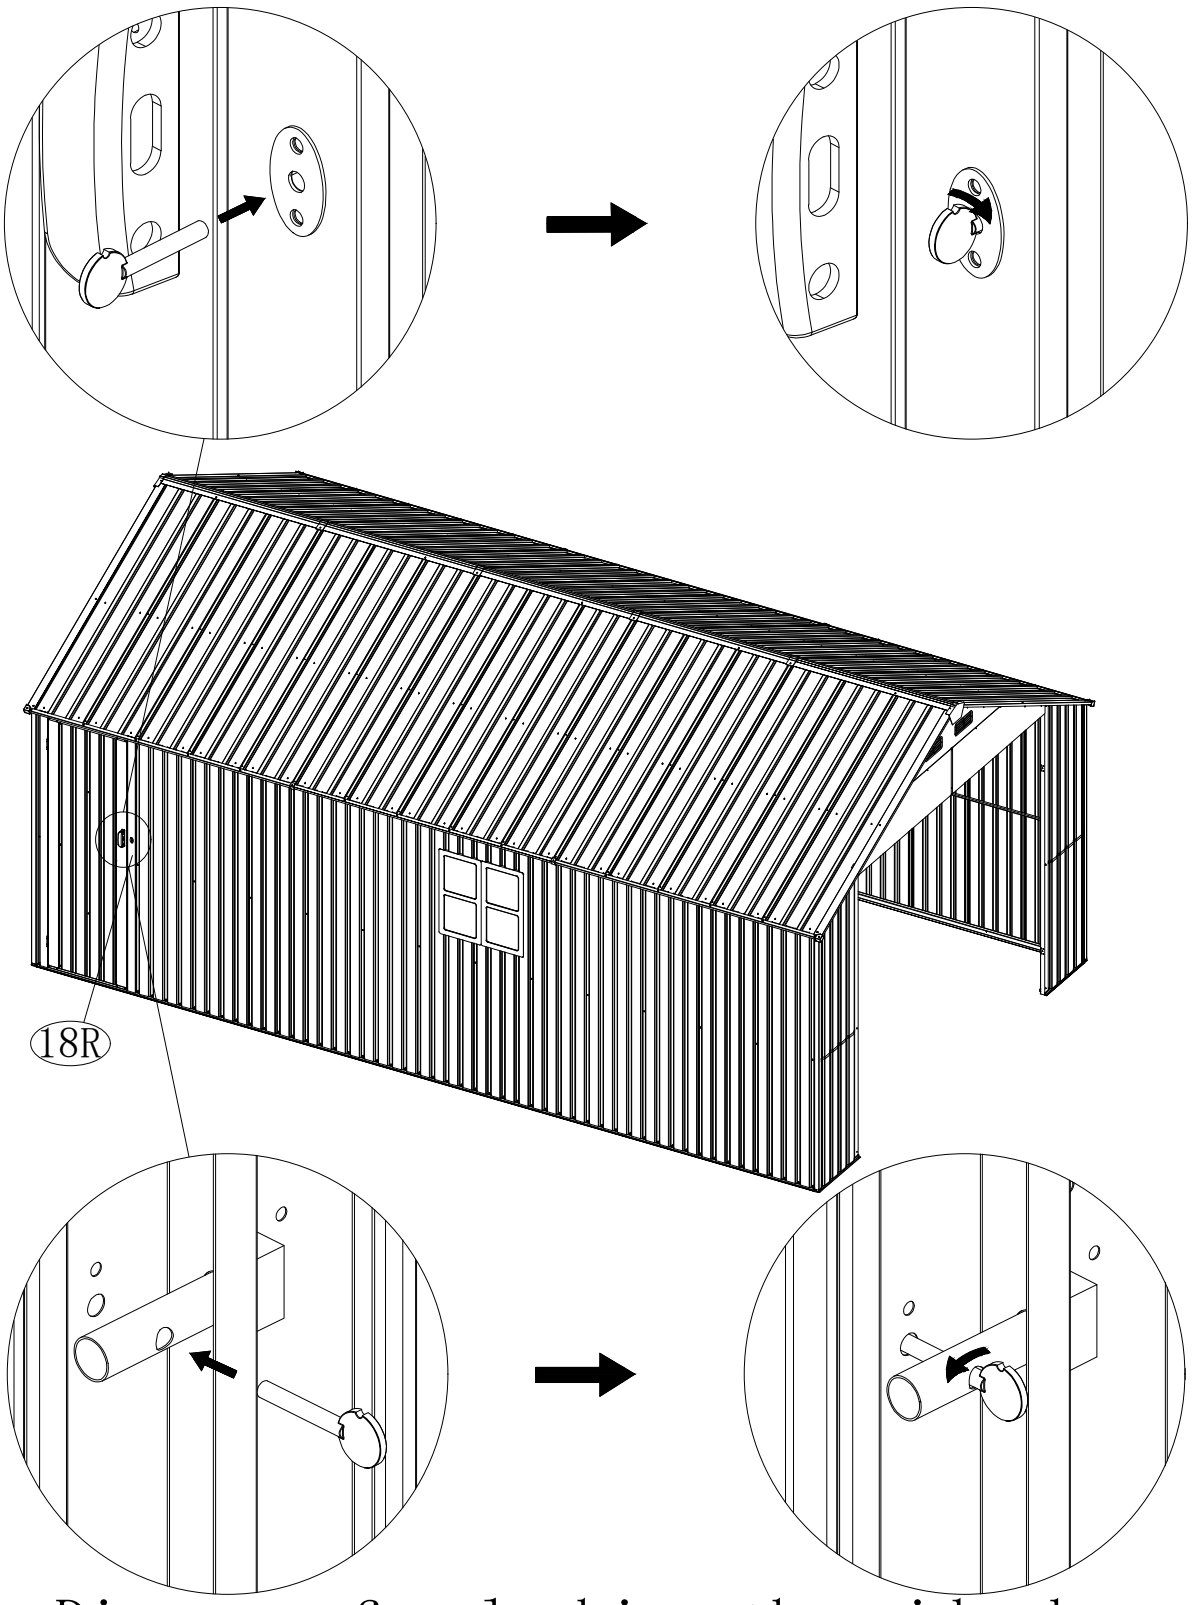


Diagram of unlocking the side door from both inside and outside.


NO.	PART.	Qty.
Q33B		4
Q49	 M4x35mm	20
Q54	 M4	20

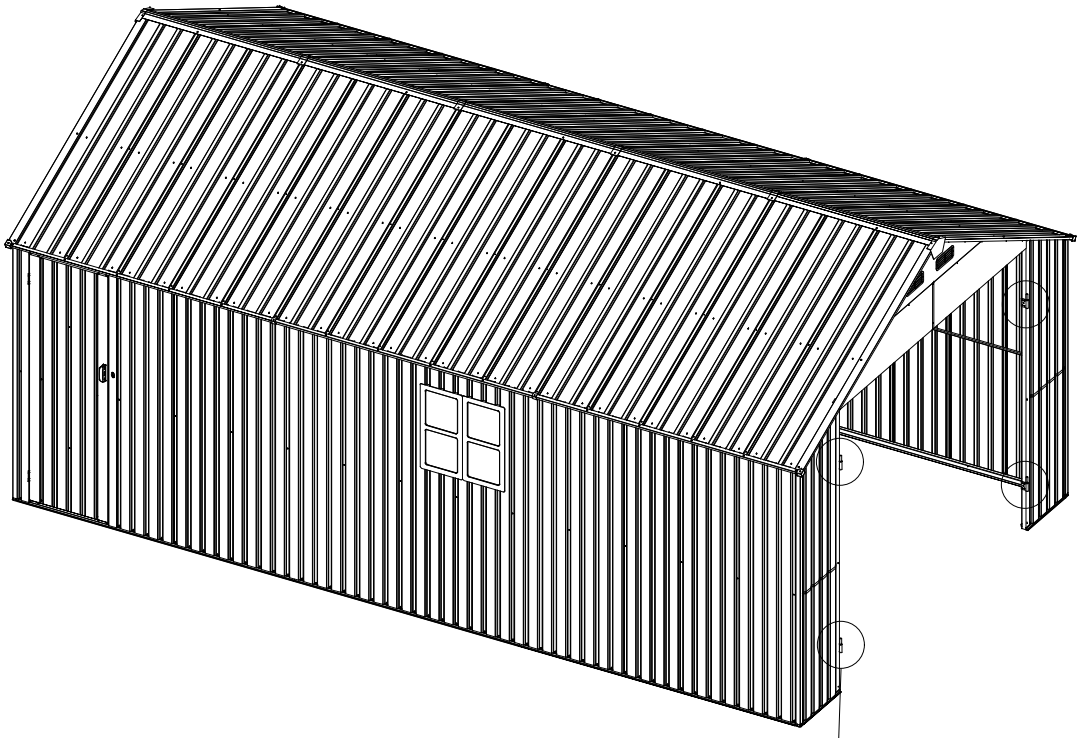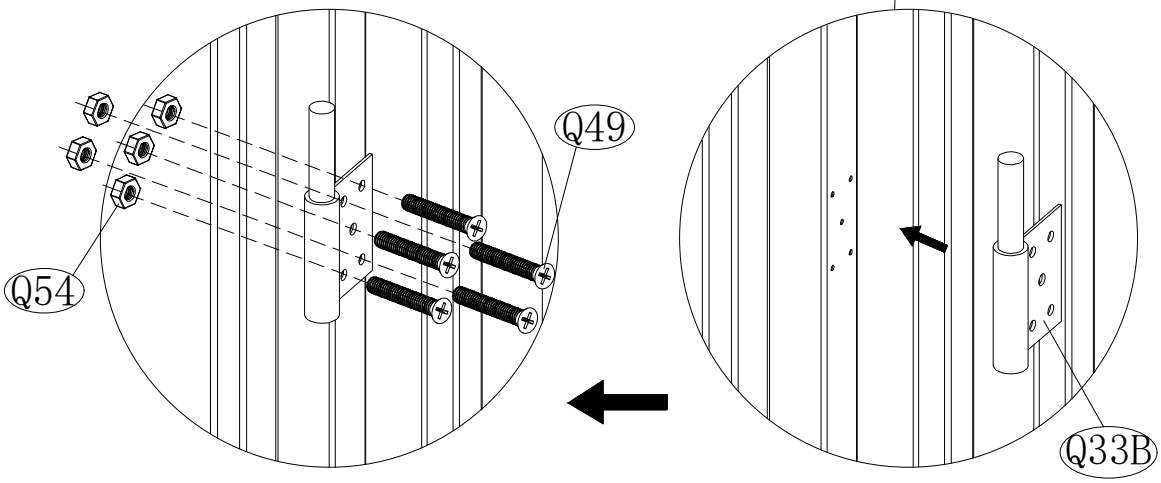


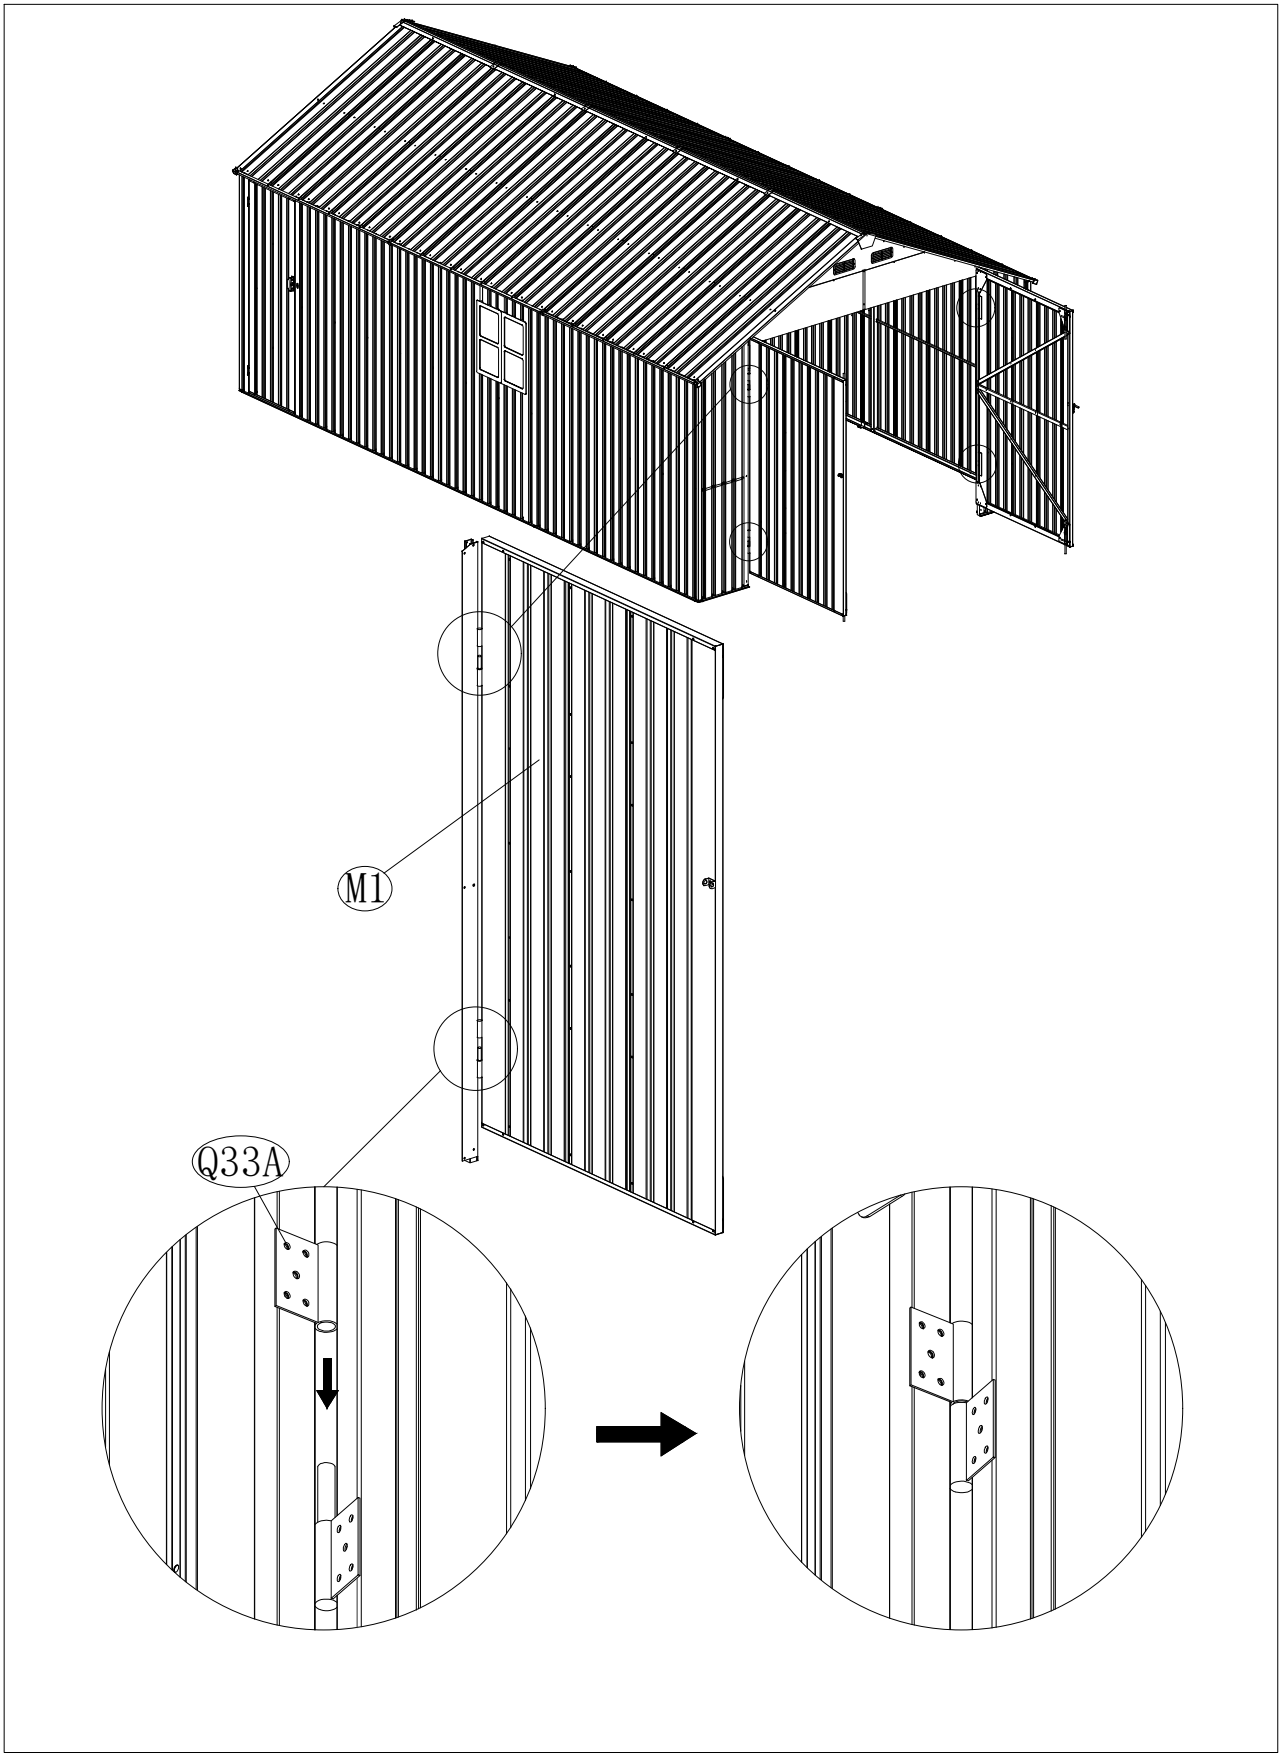




M1
Q33A


NO.	PART.	Qty.
Q21	 M8x50mm	12

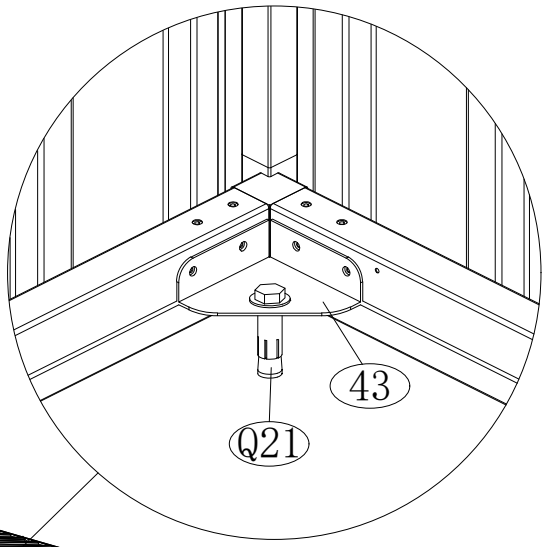


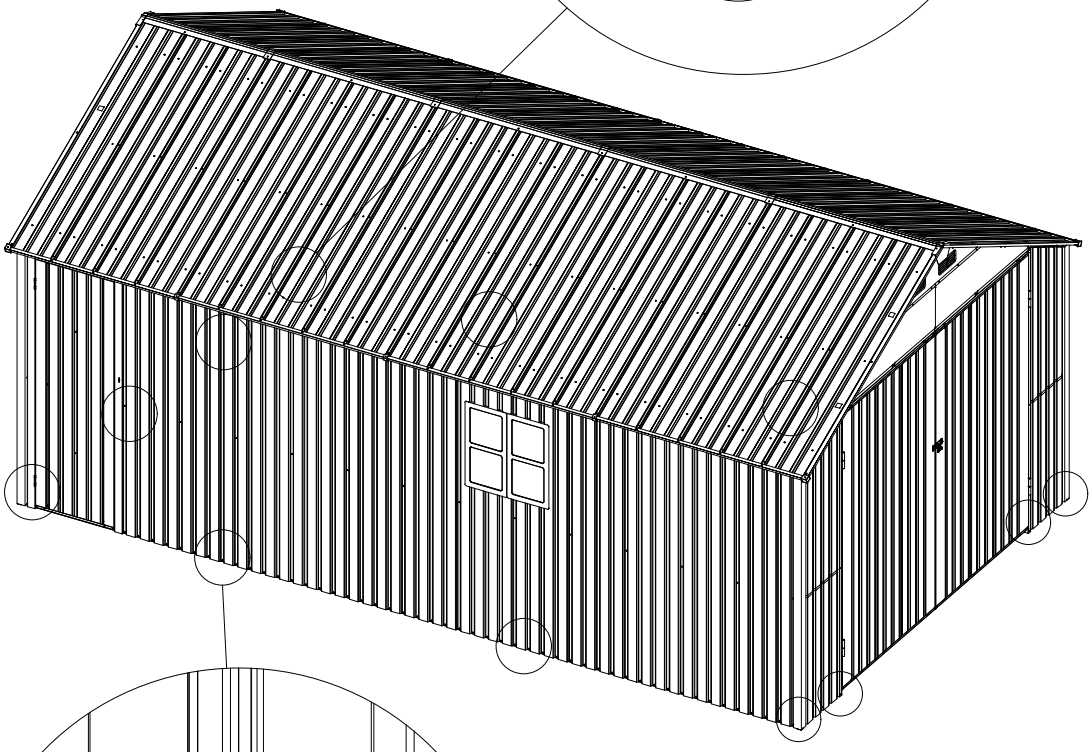

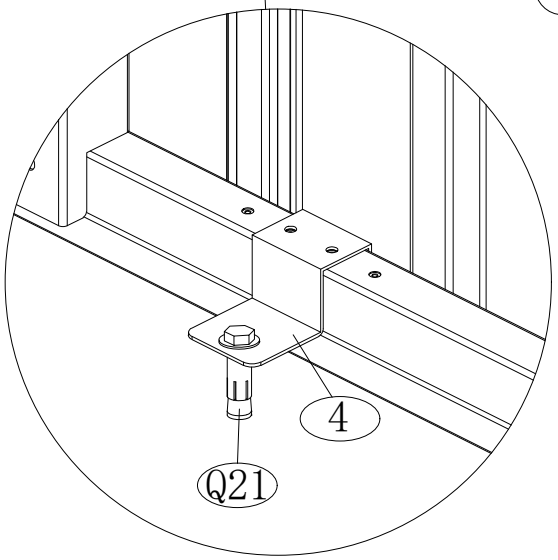


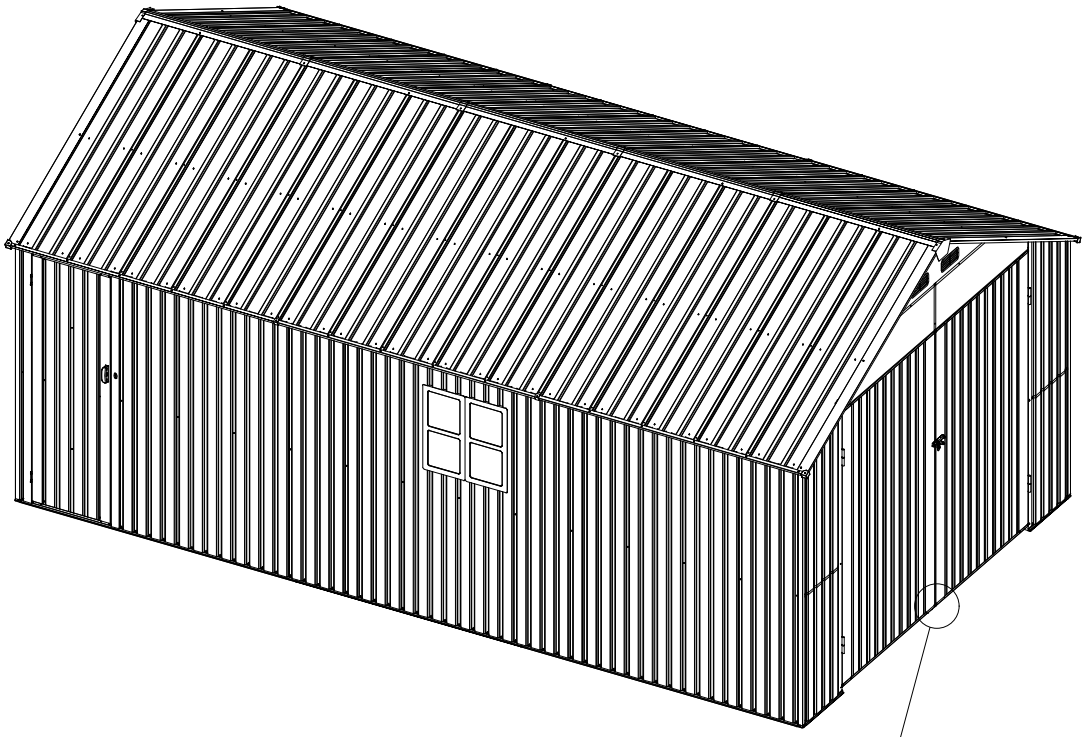

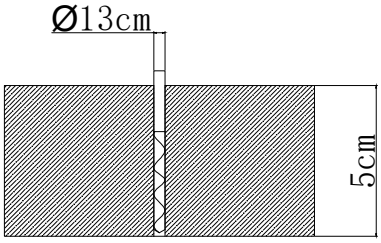

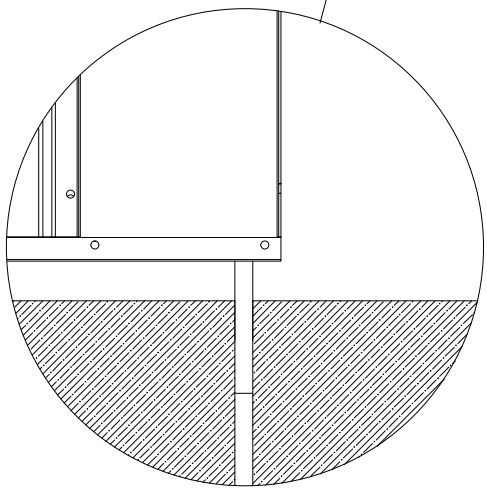

Note: At the positions where the gate opens and closes, holes with a diameter of 13 cm should be drilled on the ground to restrict the gate. This is to prevent unnecessary losses caused by strong winds.

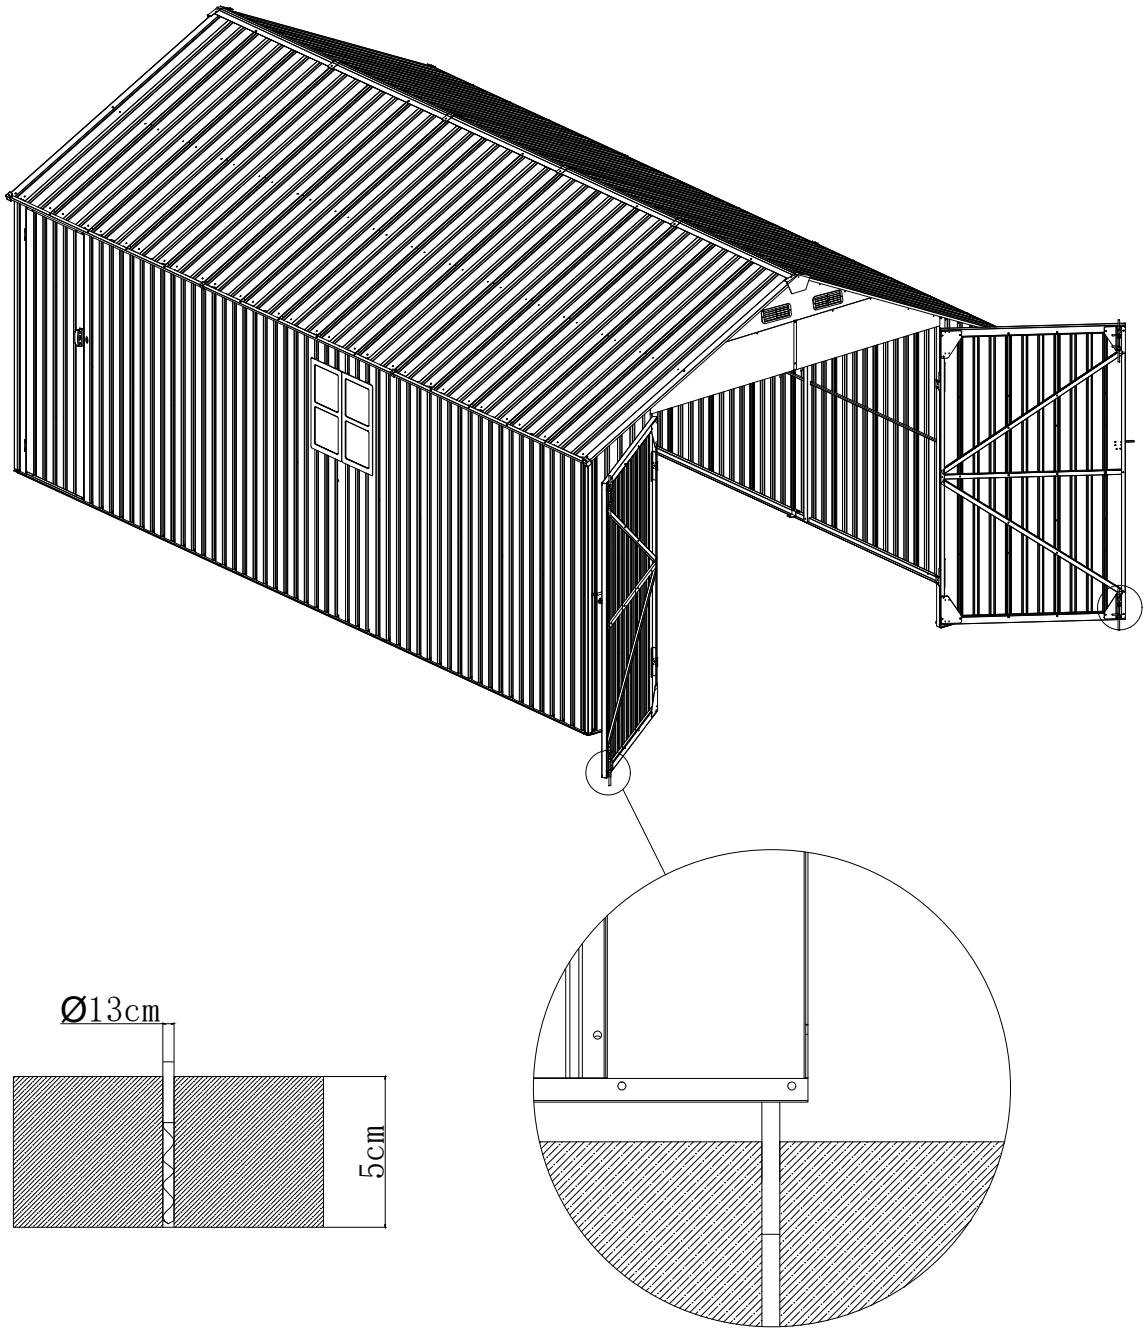

Note: At the positions where the gate opens and closes, holes with a diameter of 13 cm should be drilled on the ground to restrict the gate. This is to prevent unnecessary losses caused by strong winds.