


Assembly Instructions

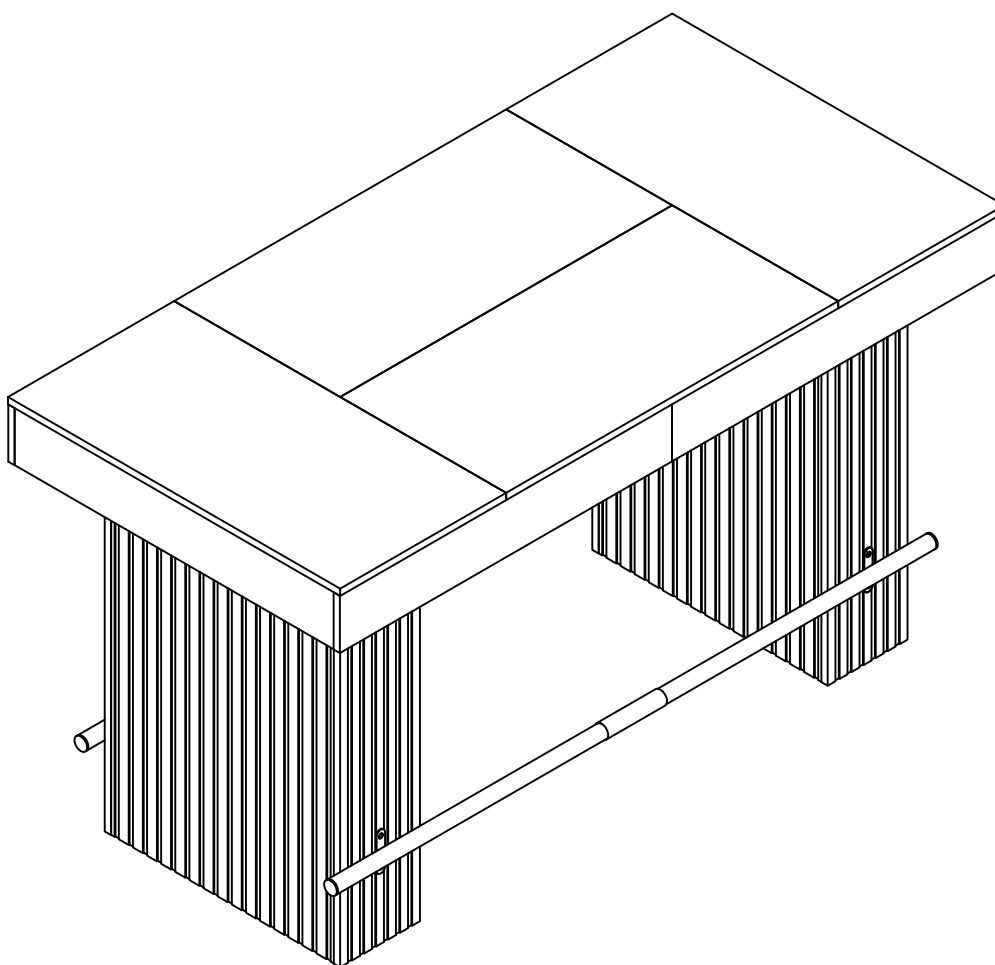

Bar Table

Model No.
HOGA-SL0037X
HOGA-SL0096X

Contact Us




We're here to help you.



Your satisfaction is our top priority. If you encounter any issues with this product, such as missing or damaged parts, we're here to help. Please retain the original packaging and take photos of the packaging and the product, then contact us as soon as possible.


Warm Tips

1. Carefully read these instructions and keep them for future reference.
2. Check the parts list and confirm everything's there before starting assembly.
3. When assembling, put all parts on a soft, smooth surface like a carpet to avoid scratches.
4. Don't fully tighten screws until all parts are confirmed in place to avoid misalignment.

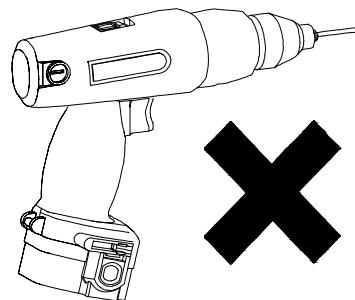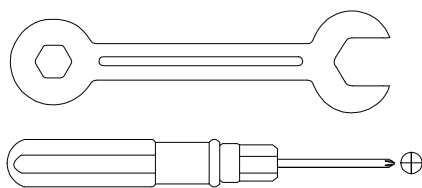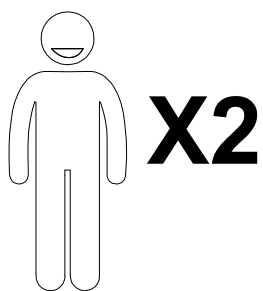



We recommend using hand tools for assembly.


If an electric screwdriver is used, reduce power and torque to avoid damage to the product.

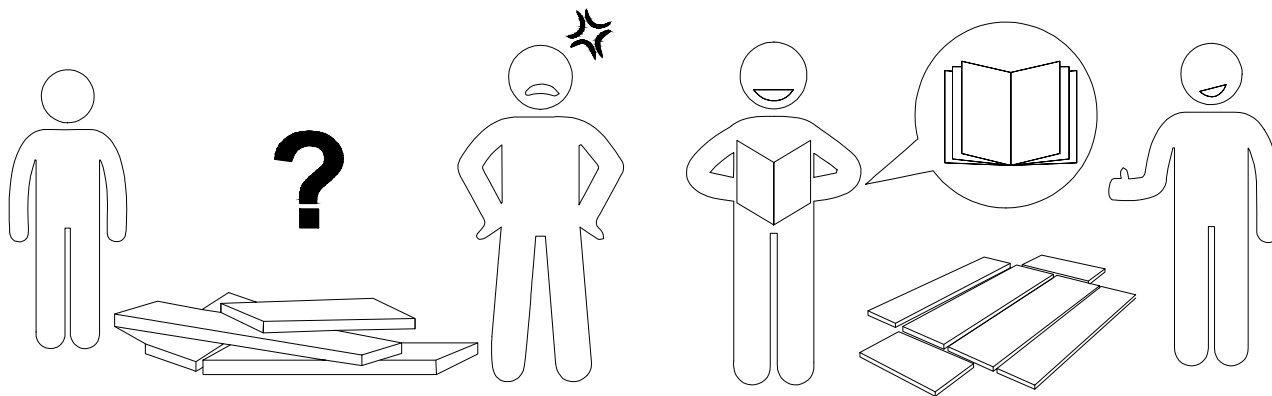

AVOID SCRATCHES

In order to avoid scratching, this furniture should be assembled on a soft surface, such as a rug.











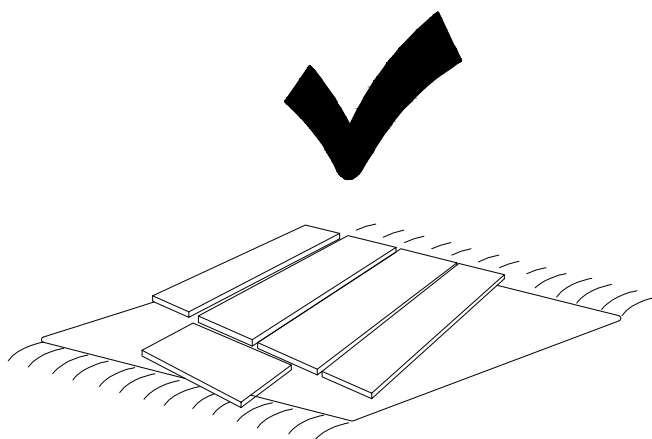
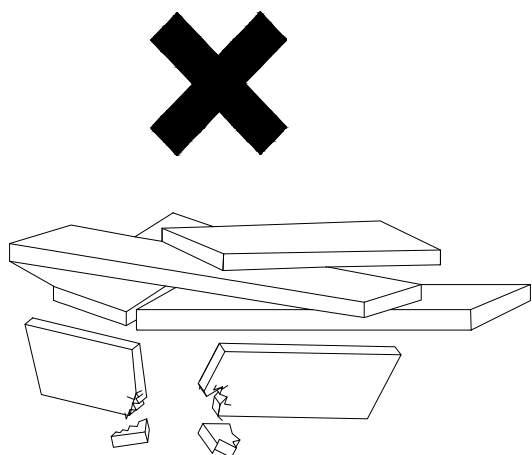


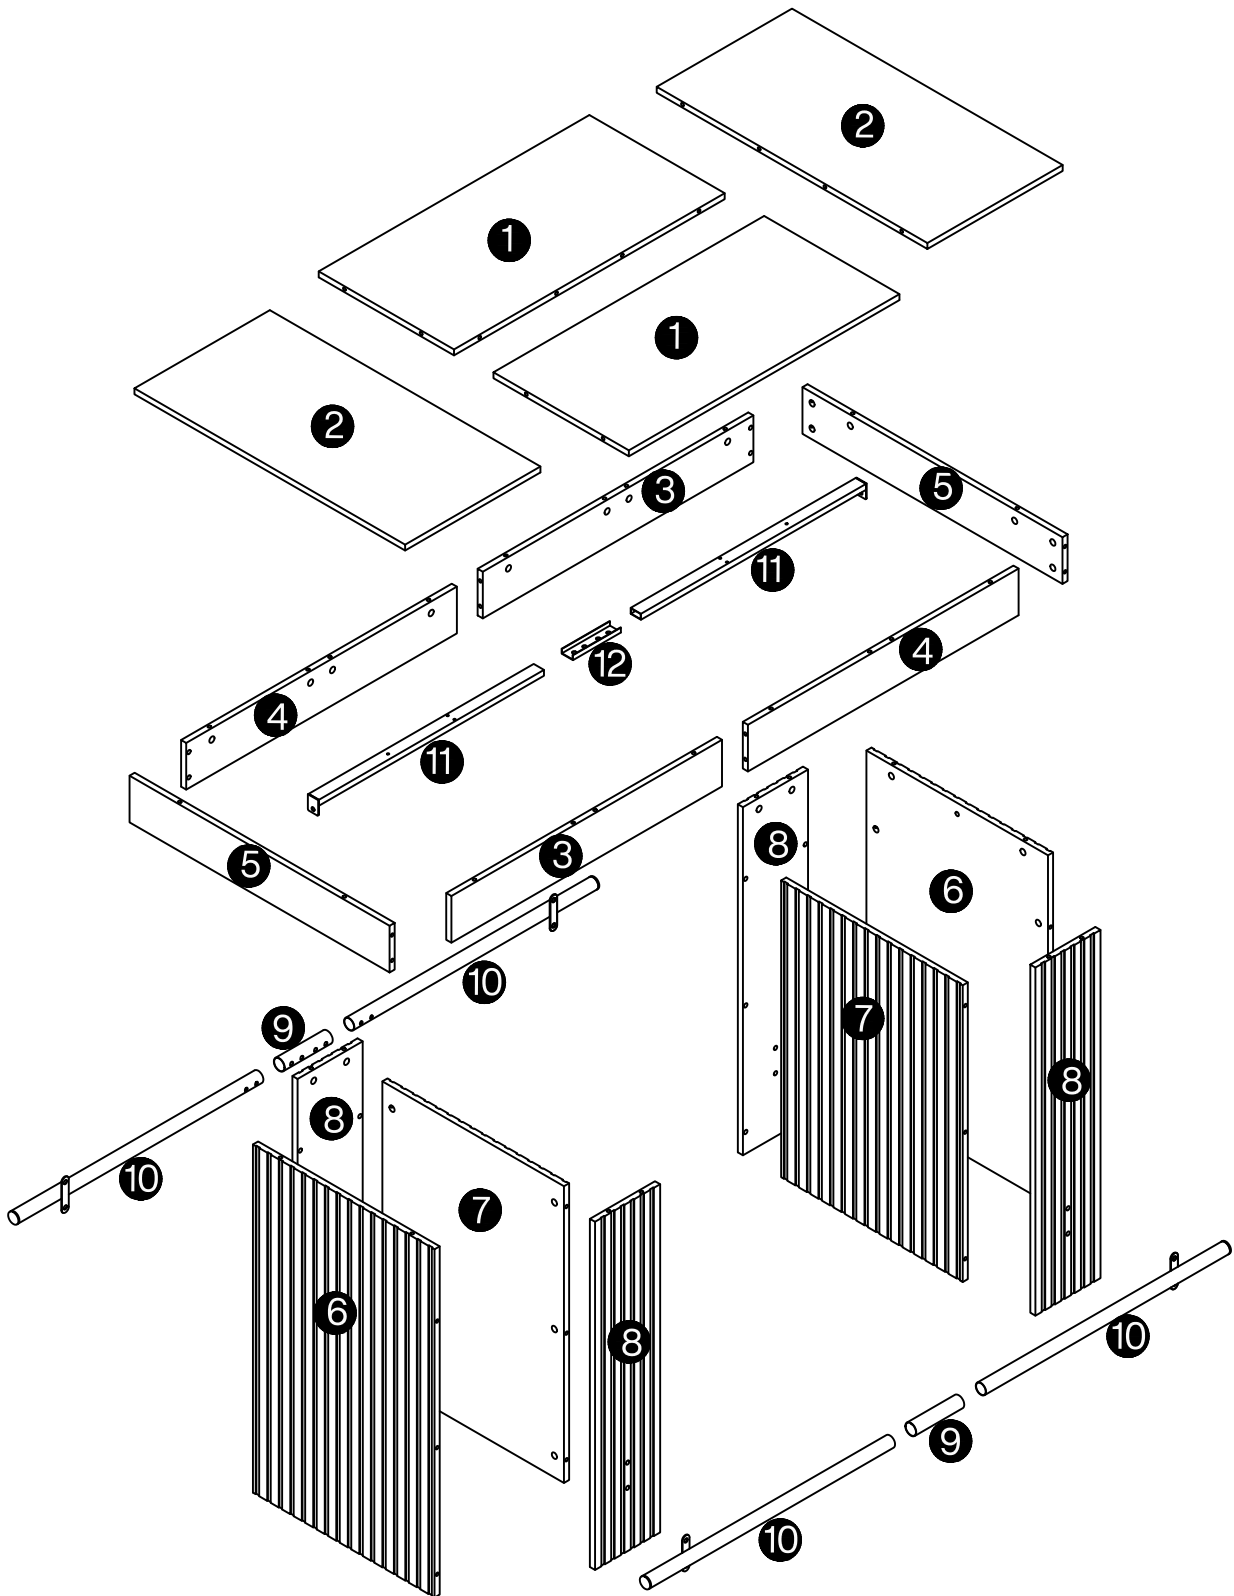






⚠ Caution


Make sure all parts are included. Most board parts are labeled or stamped on the raw edge. Contact us for a free replacement if you encounter any damaged or missing parts.


Parts List

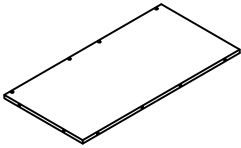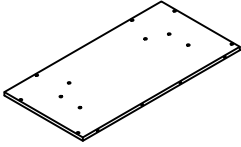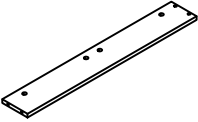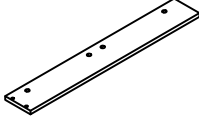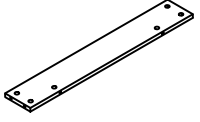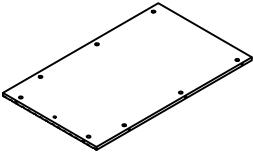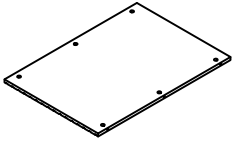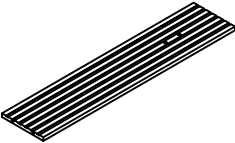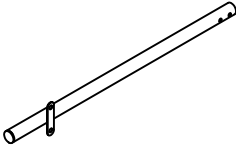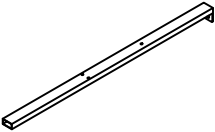1  2 pcs	2  2 pcs	3  2 pcs	4  2 pcs	5  2 pcs
6  2 pcs	7  2 pcs	8  4 pcs	9  2 pcs	10  4 pcs
11  2 pcs	12  1 pc			

Hardware List

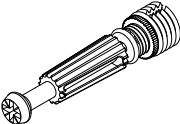
A	B	C	D	E	F
					
M6x35mm	Ø15x12mm	Ø8x30mm	Ø3.5x14mm	54x12mm	Ø3.5x25mm
64 pcs	64 pcs	16 pcs	14 pcs	6 pcs	6 pcs

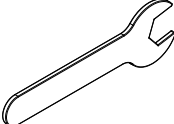G	H	I			
					
M6x12mm			M4	M6	
12 pcs	12 pcs	1 pc	1 pc	1 pc	

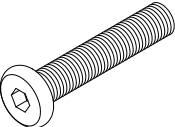
J					
J1	J2	J3			
					
M6x30mm	M6	M6			
8 pcs	8 pcs	8 pcs			

Installation of Cams and Pins


Step 1-2: Align the plastic part with the mounting hole and press it in. If you can't press it in, loosen the screw counter clockwise or completely remove the screw from the plastic part and try again.
Step 3-4: After pressing the plastic part into place, use a screwdriver to tighten the screw clockwise.

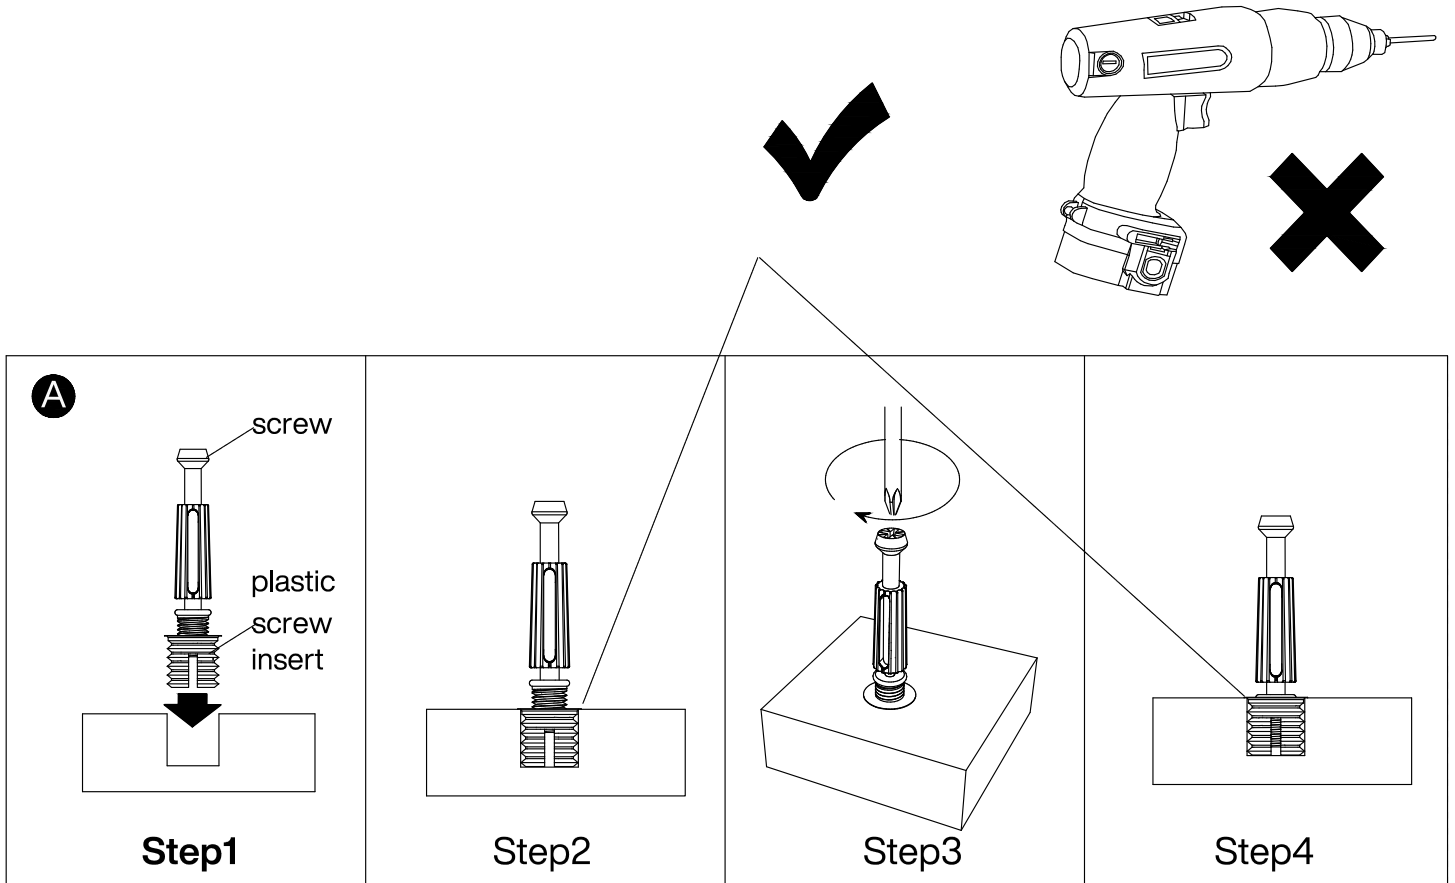

Screw the pin into the hole. Set the cams correctly by aligning the head of the cams with the lock pins. Lock the cam by turning the cam head with a screwdriver until it is tightened. Please do not use an electric screwdriver to assemble the unit.

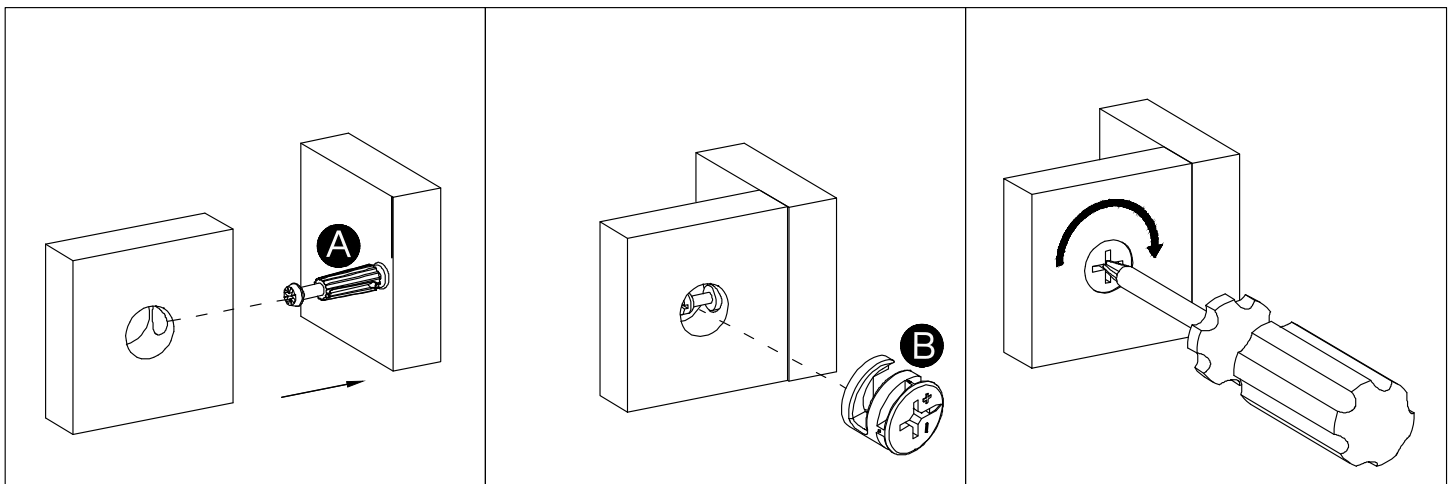


1

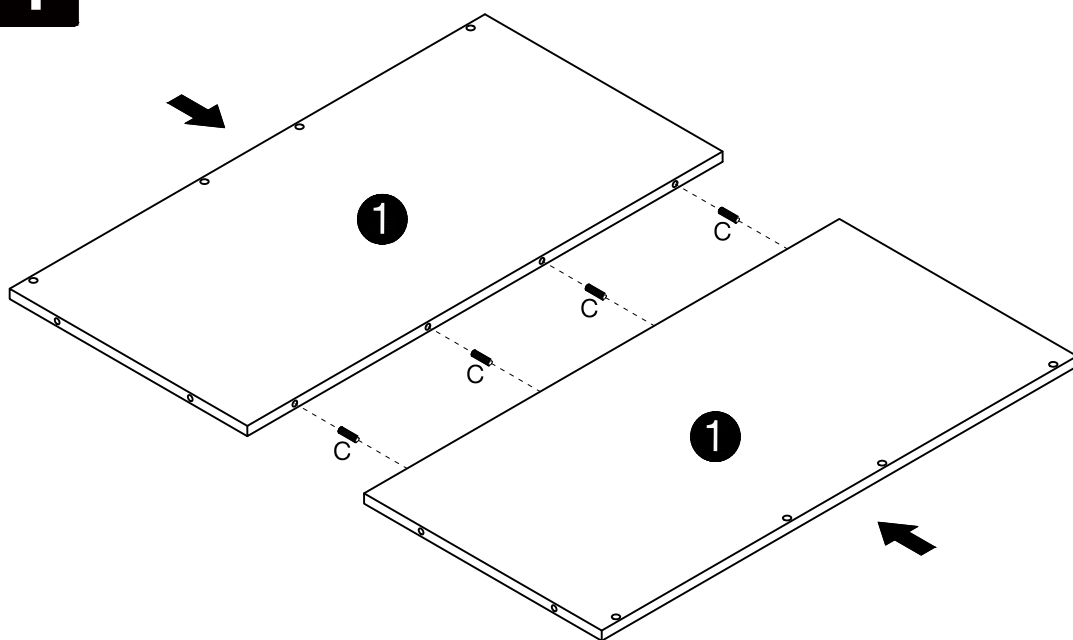


C

Ø8x30mm
4 pcs

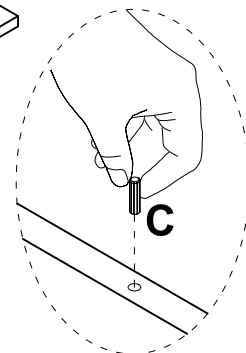


2

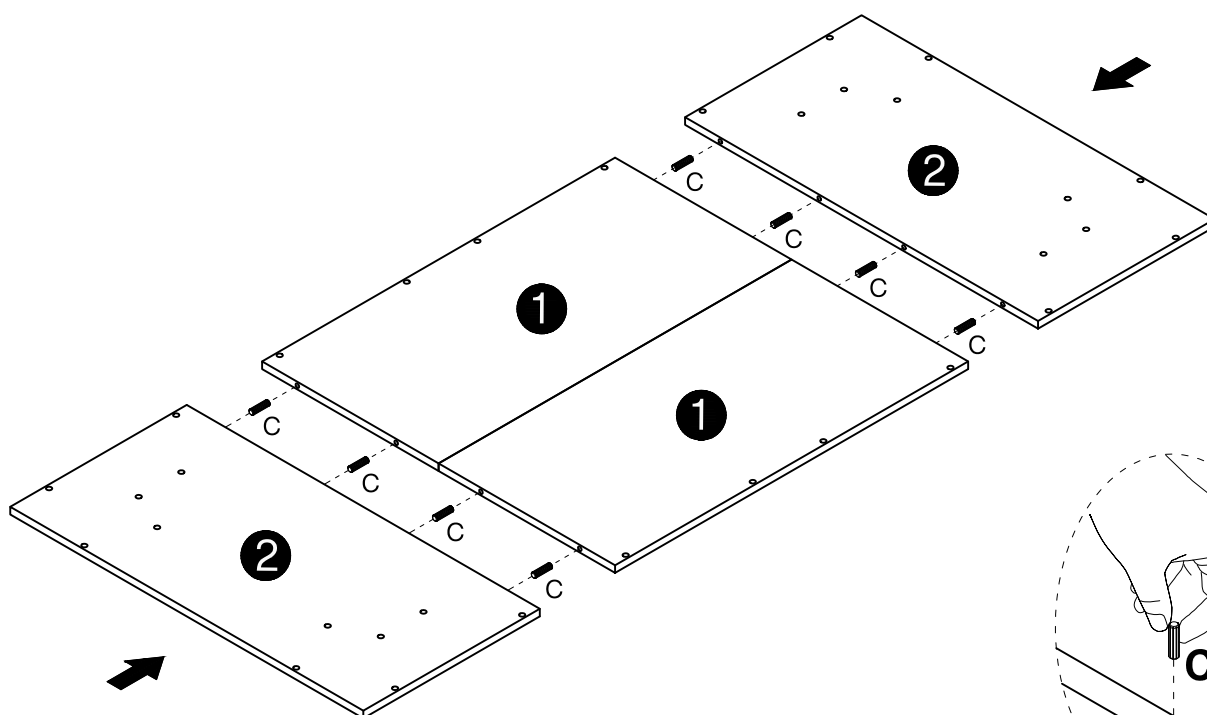


C

Ø8x30mm
8 pcs

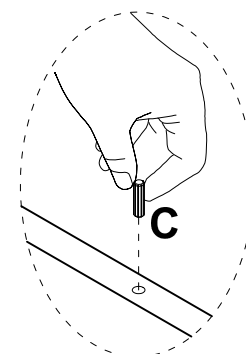

3


D	E
	
Ø3.5x14mm	54x12mm
8 pcs	4 pcs

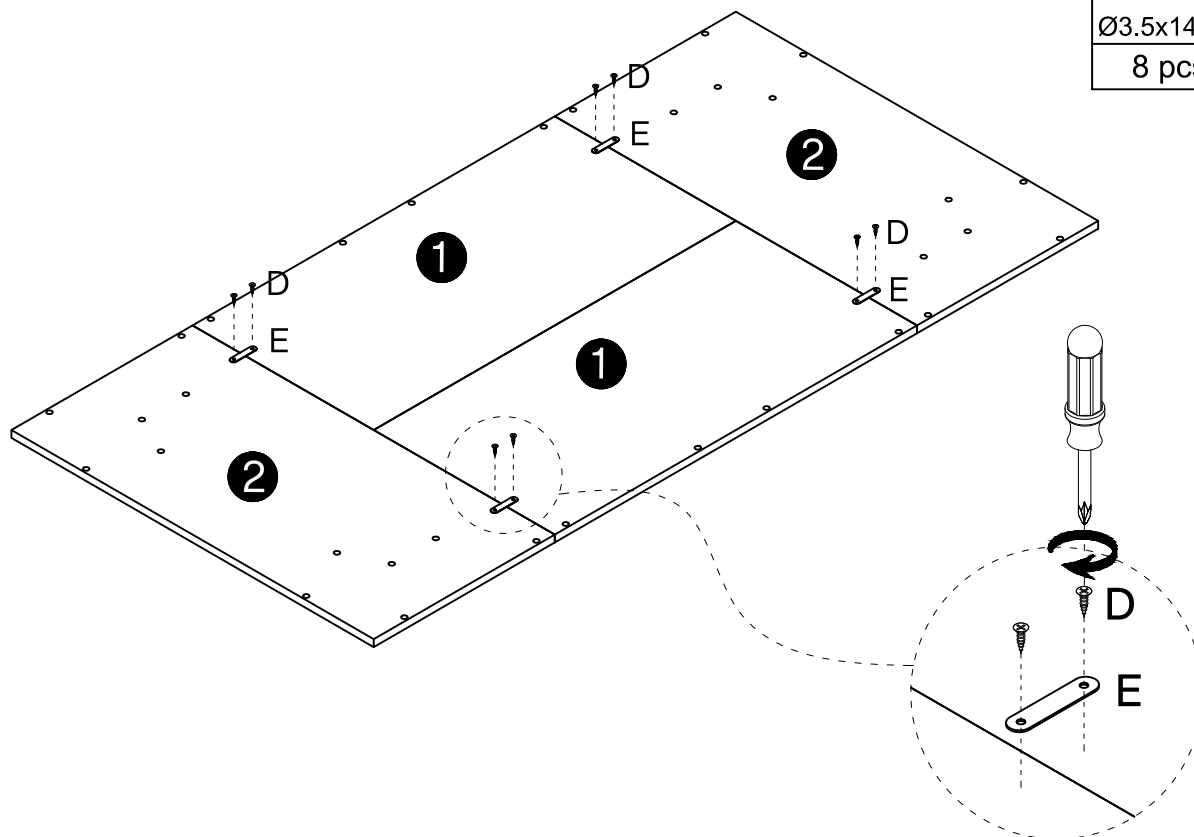

4


C

Ø8x30mm
4 pcs

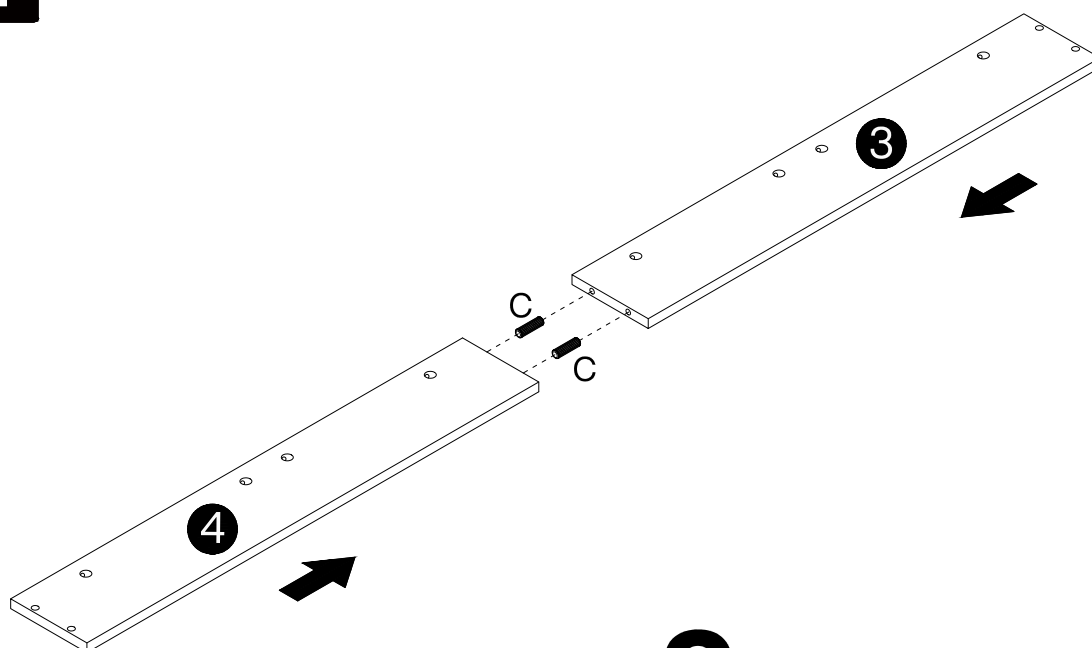


x2

5

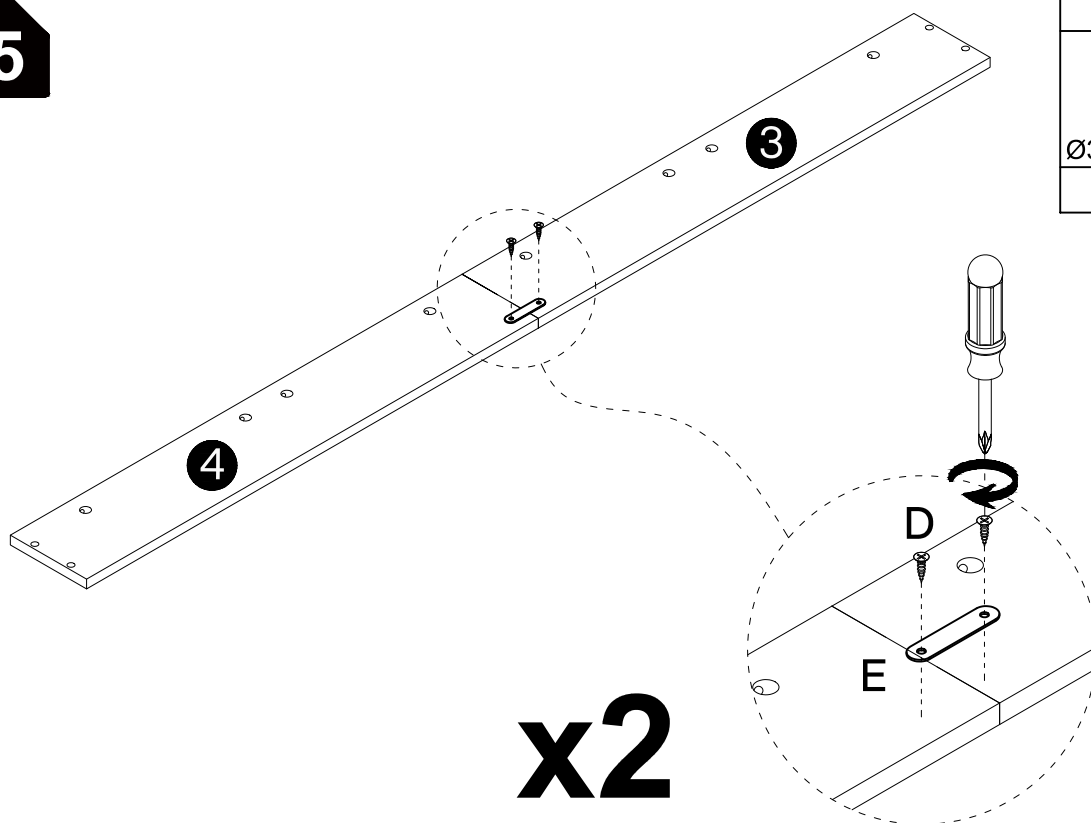

D	E
	
Ø3.5x14mm	54x12mm
4 pcs	2 pcs


6

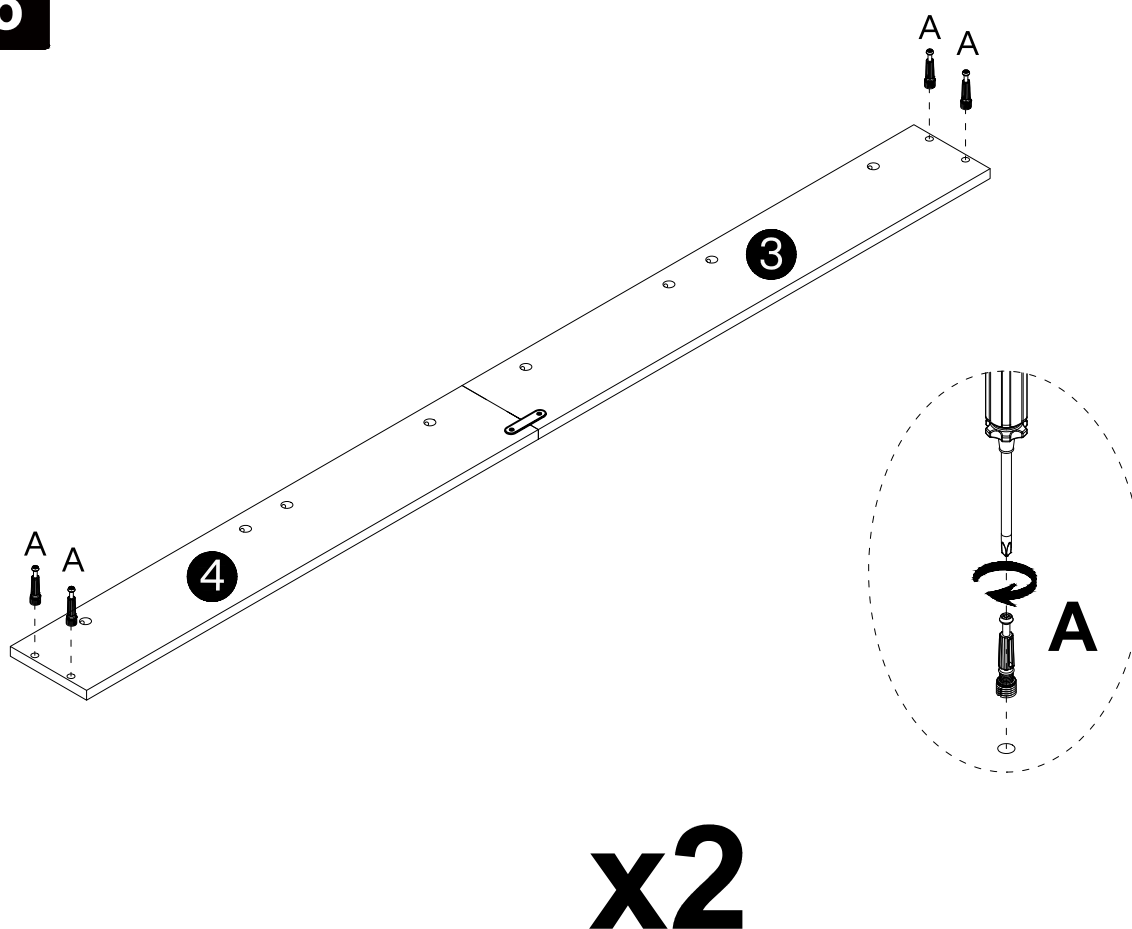


A

M6x35mm
8pcs


7

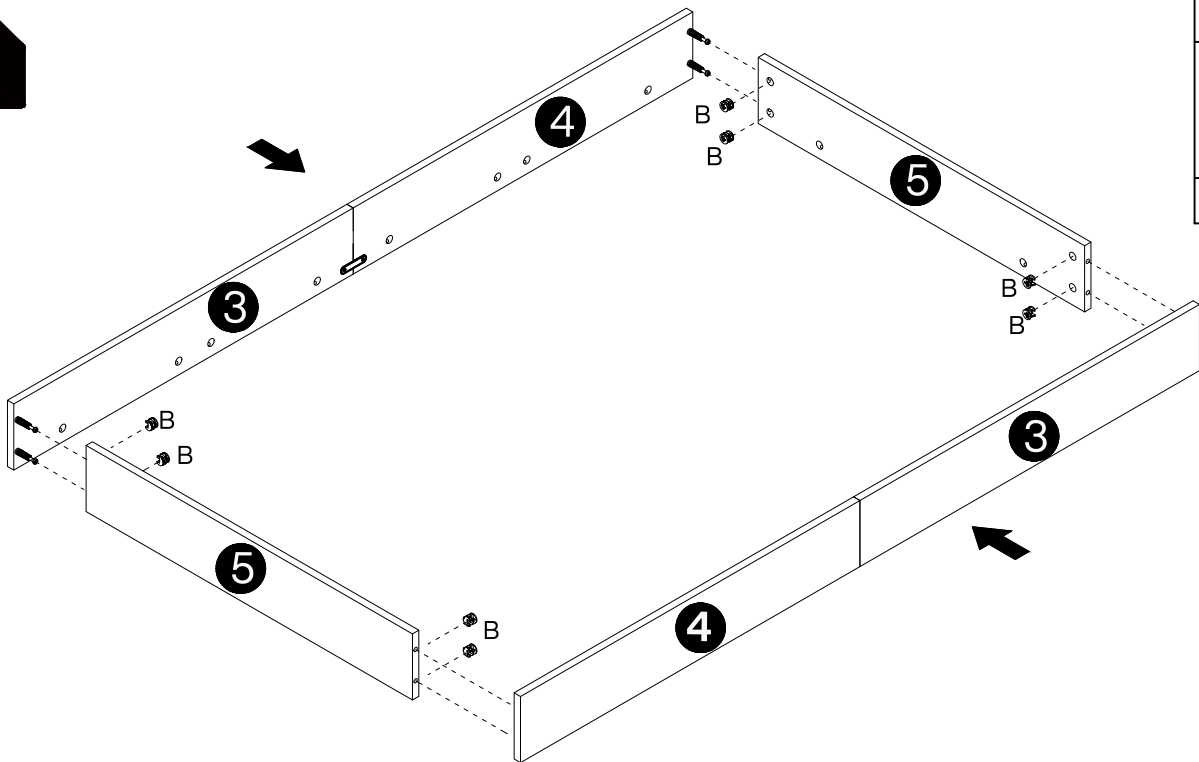


B
8 pcs

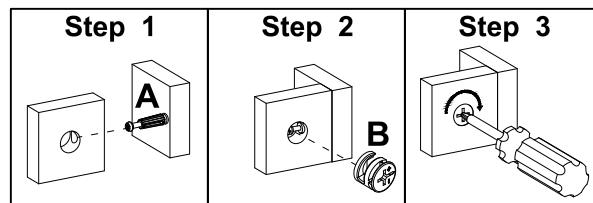


8

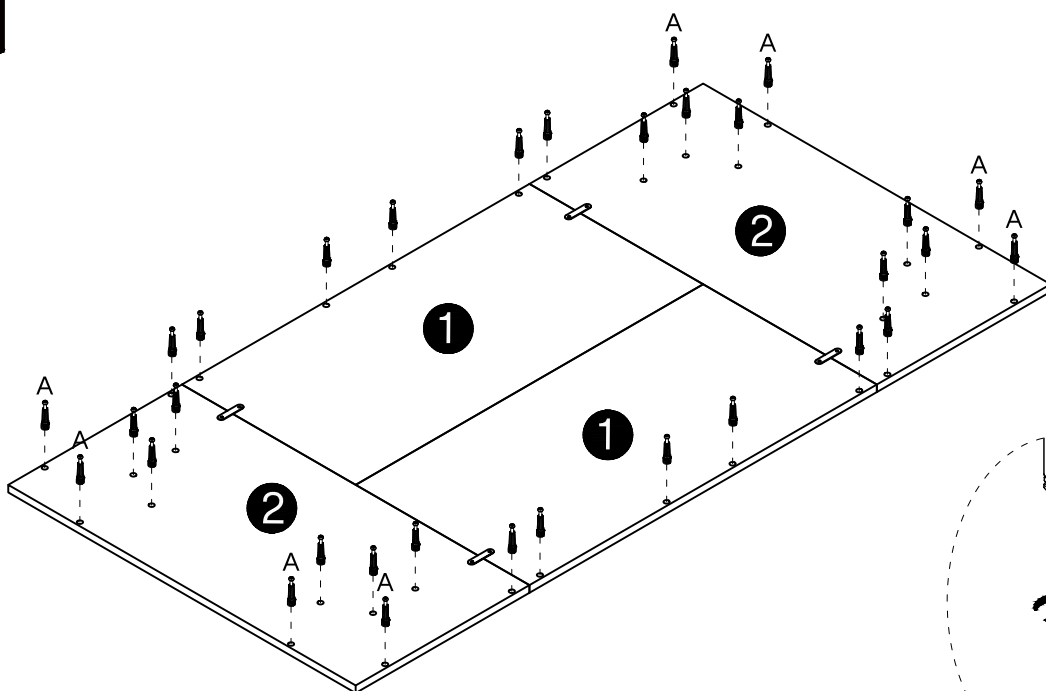

A
M6x35mm
32 pcs

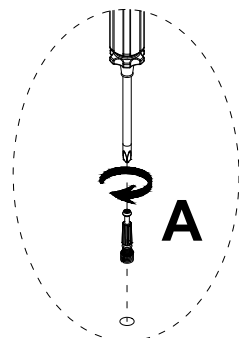


9

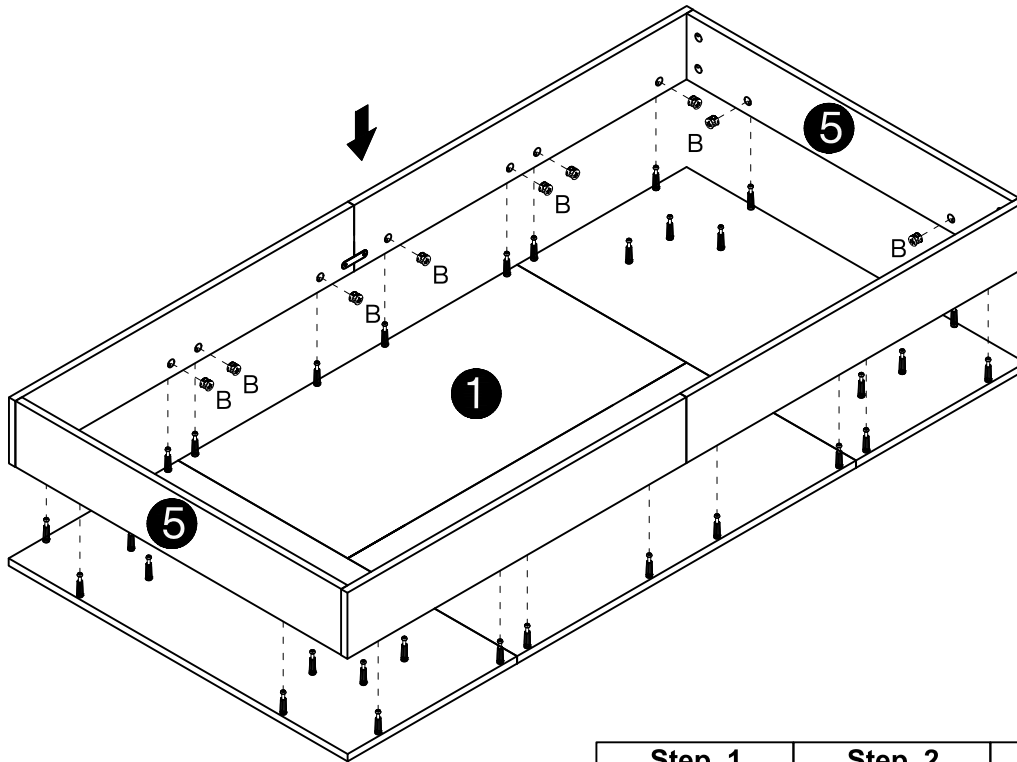


B

20 pcs

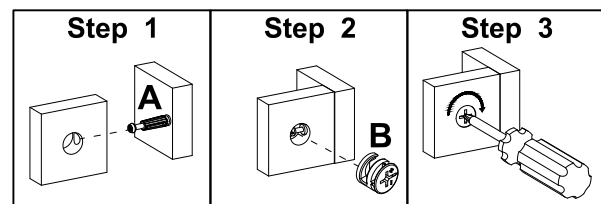


10

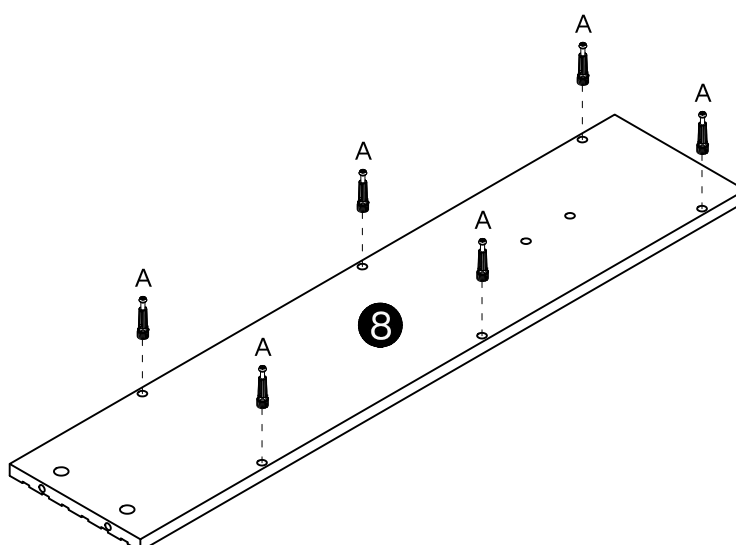



A

M6x35mm
24 pcs

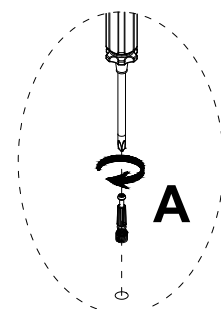

x4

11

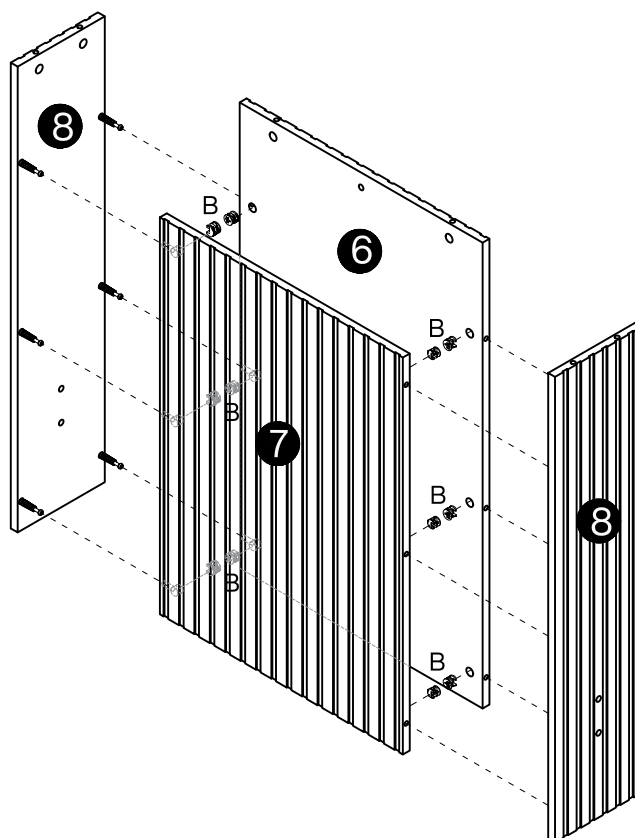
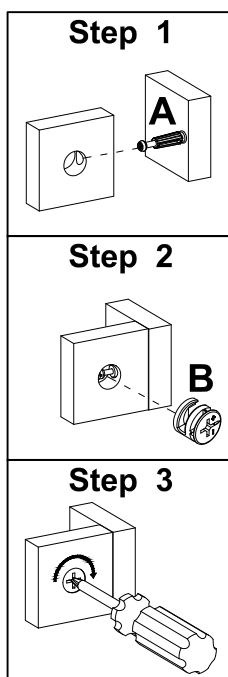


B

24 pcs

x2


12

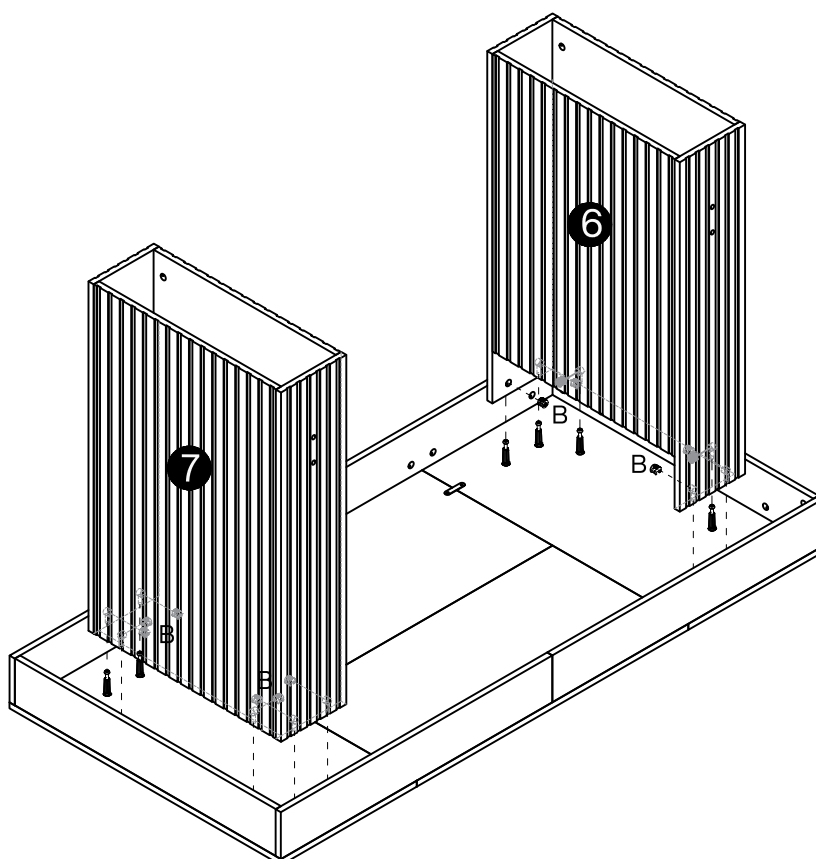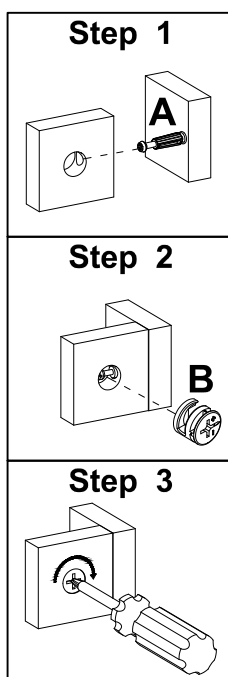

B


12 pcs

13

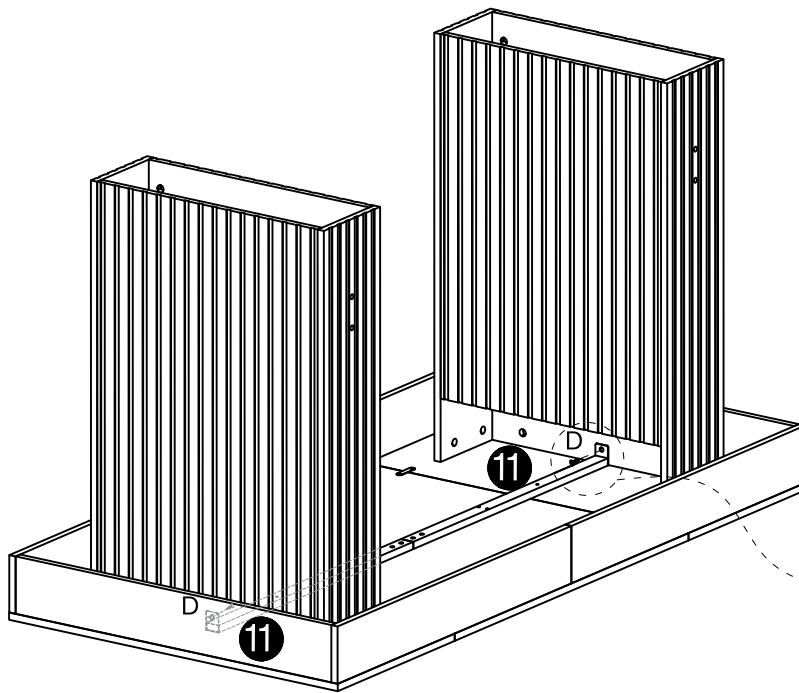


D

Ø3.5x14mm
2 pcs

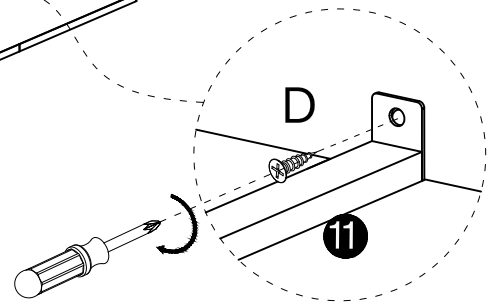


14

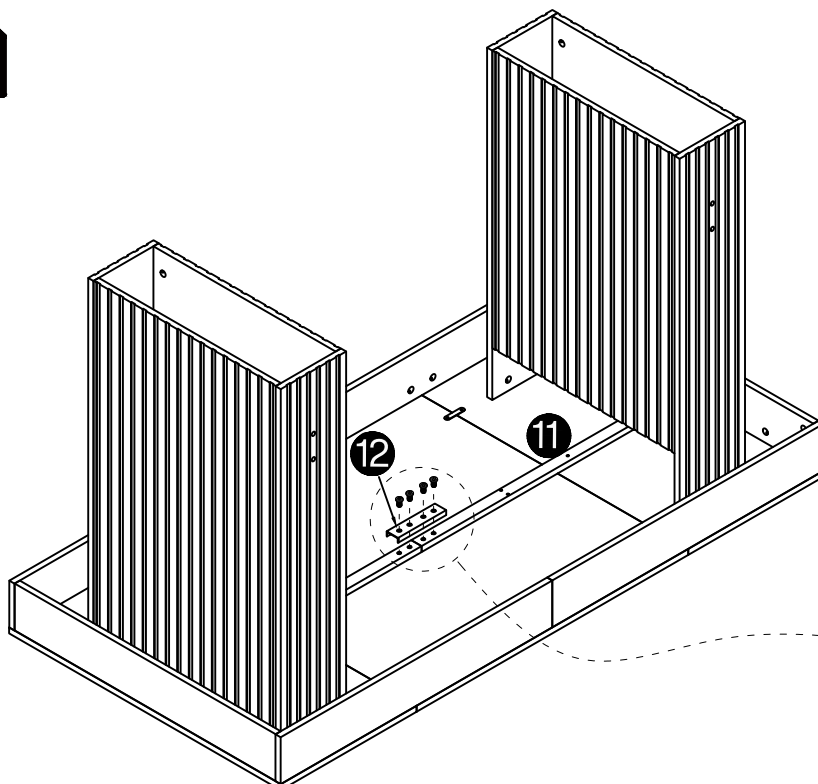


G

M6x12mm
4 pcs

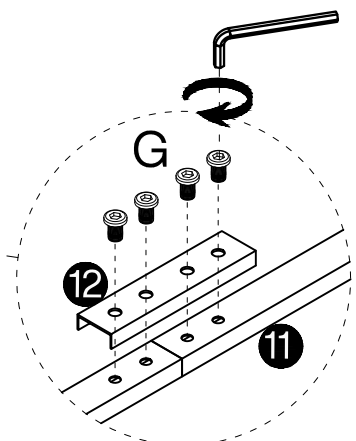


15

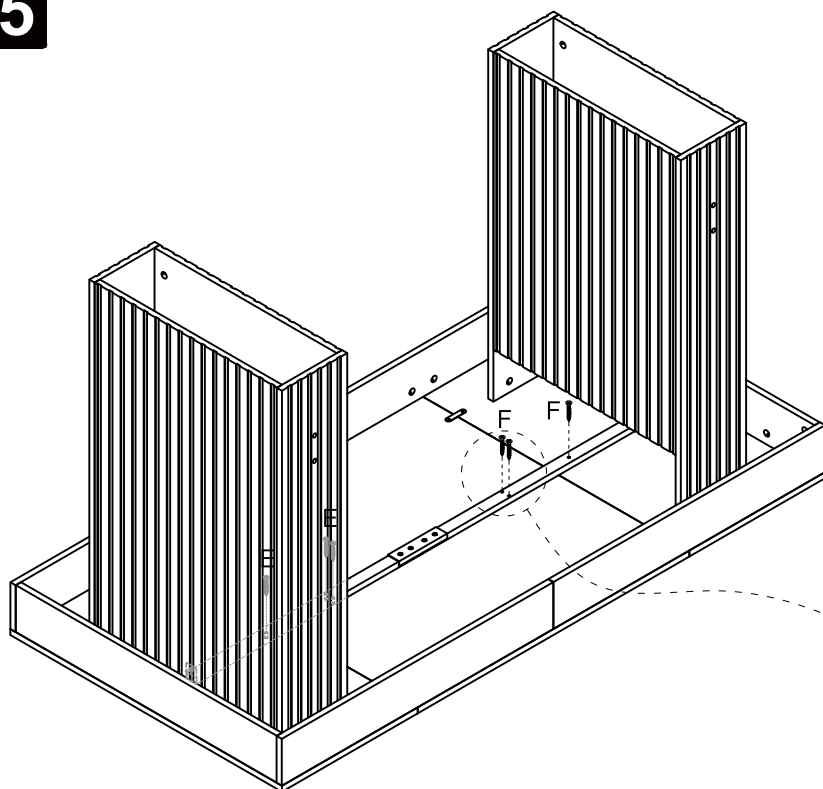


F

Ø3.5x25mm
6 pcs

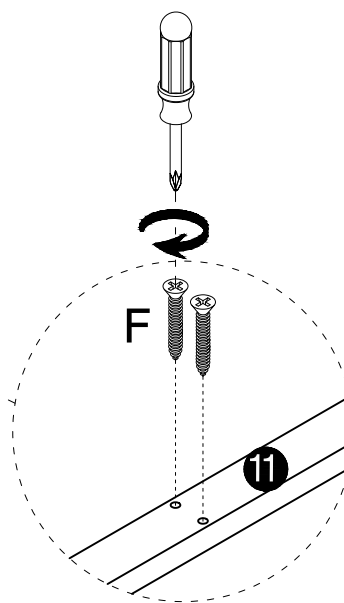


16

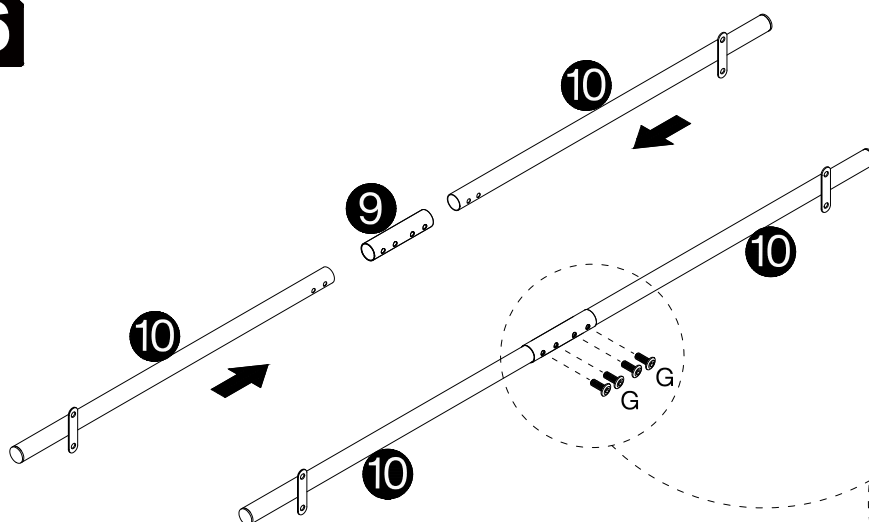


G


M6x12mm
8 pcs

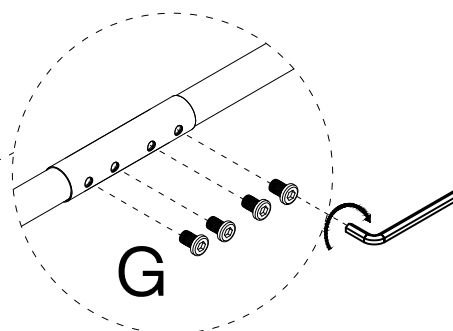


x2


17

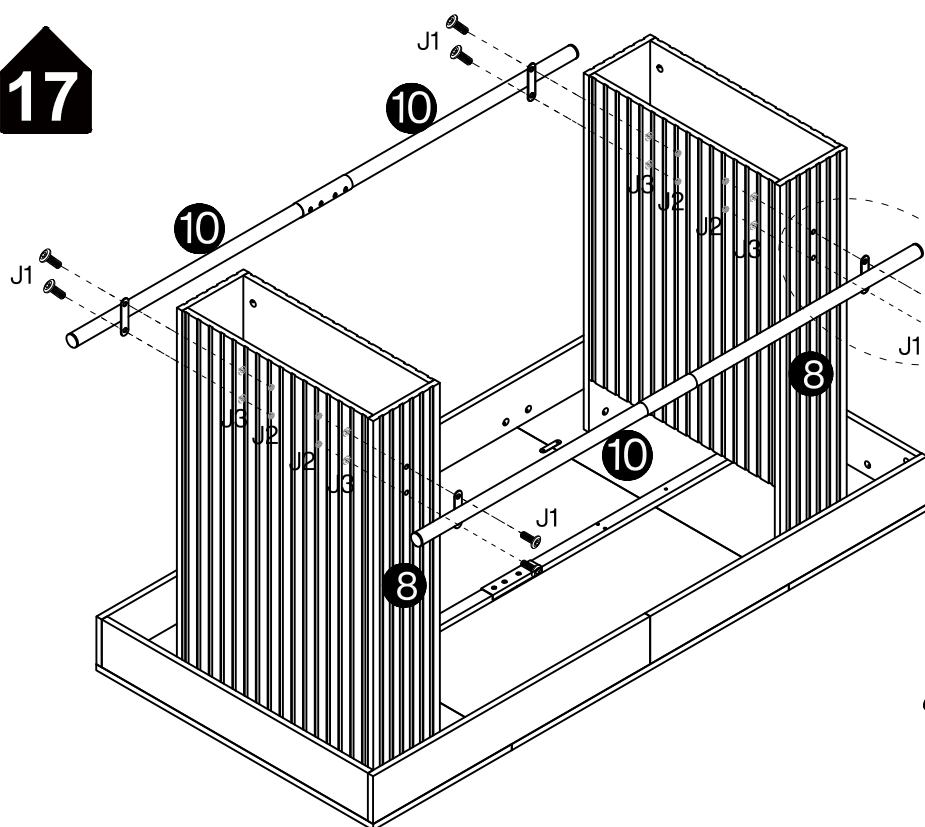

J1	J2	
		
M6x30mm	M6	
8 pcs	8 pcs	
<th>J3</th>		J3
		
M6		
8 pcs		

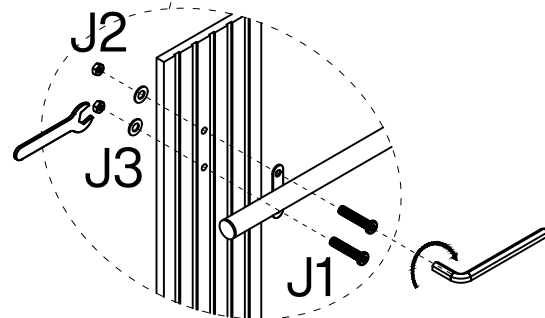


18

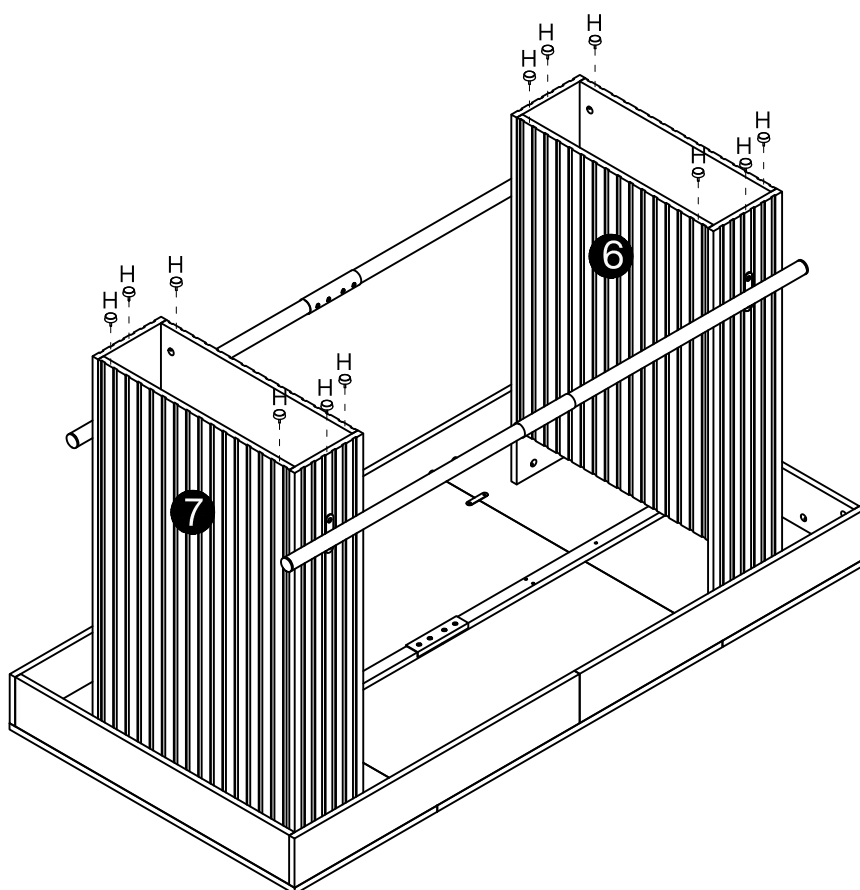

H

12 pcs

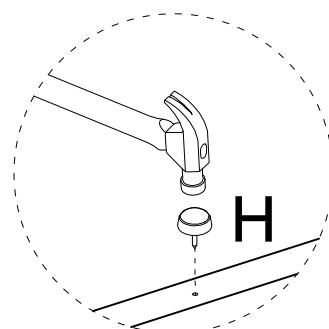

⚠ Caution! Tap lightly

Thank you for your support !

