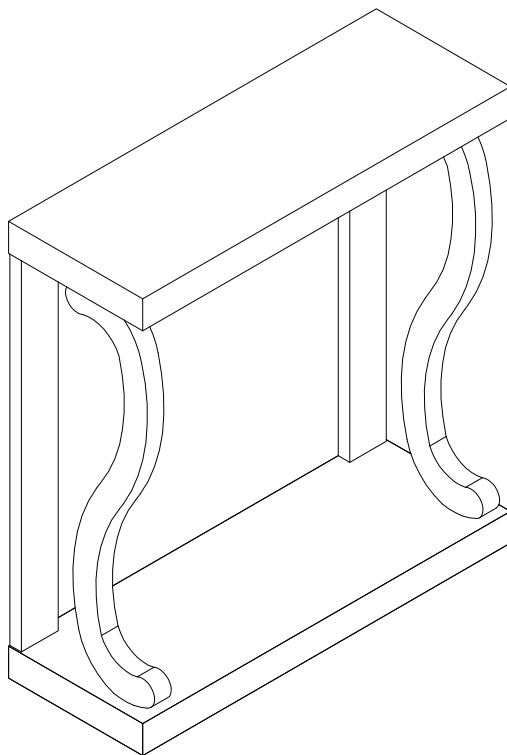


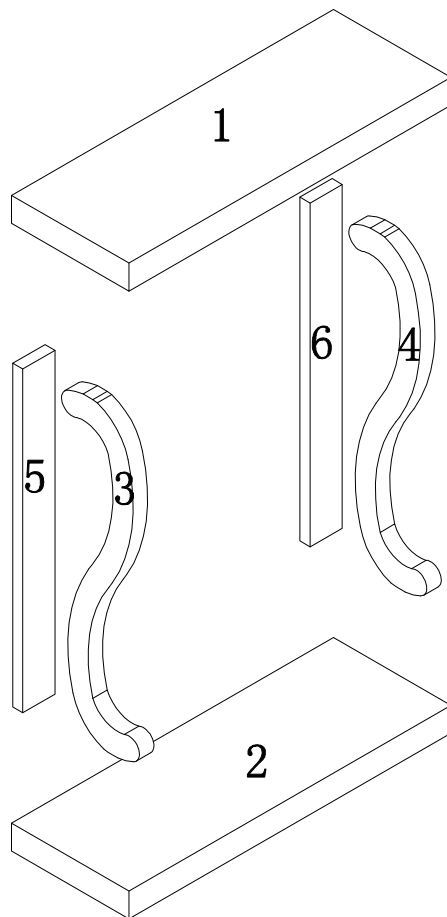
Console Table



Assembly instructions

We have designed our furniture with you, the customer in mind. Our clear space easy to follow, step by step instructions will guide you through the project from start to finish. Feel confident that this will be a fun and rewarding project. The final product will be a quality **piece** of furniture that will go together smoothly and give you years of enjoyment.

















PARTS IDENTIFICATION



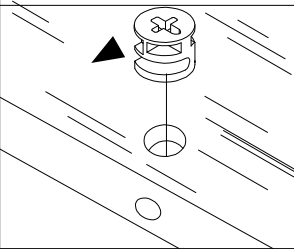
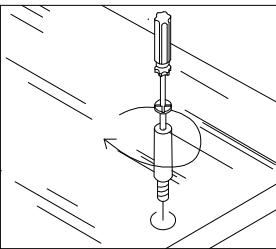
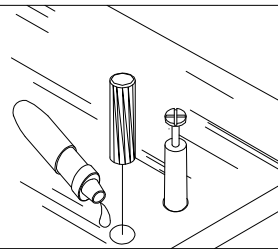
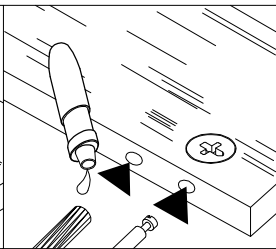
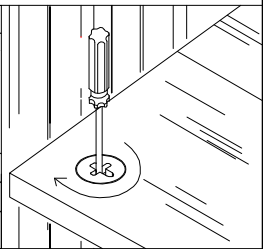
Please count and verify all parts before assembly

| | | | |
|------------------|-----|-------------------|-----|
| (1) Top Panel | 1pc | (5) Left Support | 1pc |
| (2) Bottom Panel | 1pc | (6) Right Support | 1pc |
| (3) Left Leg | 1pc | | |
| (4) Right Leg | 1pc | | |

HARDWARE IDENTIFICATION

| | | | | |
|----------|---|-----------------|---|------|
| A |  | Allen Wrench | M4 | 1pc |
| B |  | Allen Bolt | ø6x85 | 4pcs |
| C |  | Barrel Nut | ø10x15 | 4pcs |
| D |  | Full thread Rod | ø8x60 | 4pcs |
| E |  | Jam Washer | M8 | 4pcs |
| F |  | Nut and Washer | M8 | 4pcs |
| G |  | Dowel | ø8x25 | 8pcs |
| H |  | Wrench | M13 | 1pc |
| I |  | Bracket | | 1pc |
| J |  | Screw | ø4x25 | 1pcs |
| K |  | Wall Screw | ø5x40 | 1pc |
| L |  | Plastic Anchor | ø8x40 | 1pc |
| M |  | Small Sticker | ø20 | 4pcs |
| N |  | Large Sticker | ø45 | 4pcs |
| O |  | Foot Pin | | 4pcs |
| P |  | Glue | Glue: For securing please apply to wood dowel first before inserting into panel | 1pc |

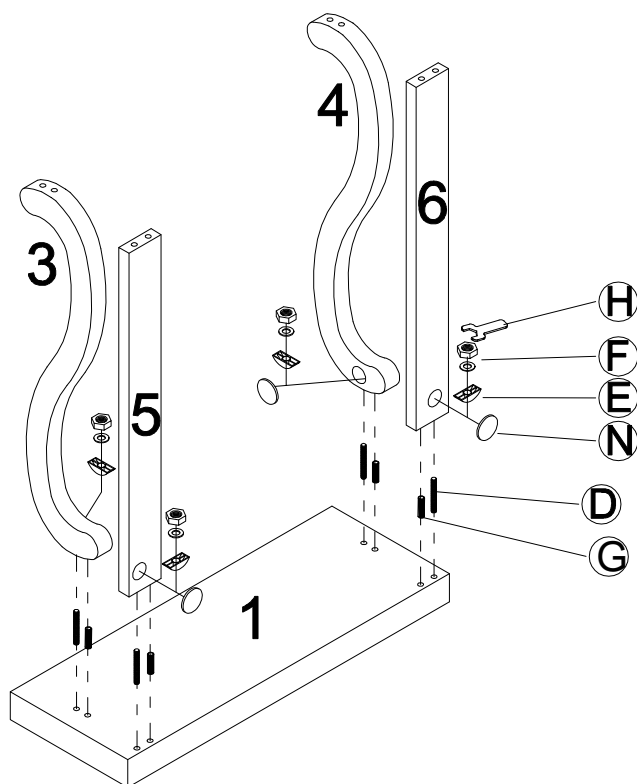
Assembling the unit with camlocks and wood dowels.

| | | | | |
|--|---|---|--|---|
|  |  |  |  |  |
| Insert camlock, camlock must face bolt hole | Gently screw cam dowel into the threaded anchor | lightly glue one end of wood dowel and tap into hole. | lightly glue dowel and connect to second panel by inserting dowels into holes | Gently screw the cam clockwise into locked position. Do not overtighten. |

Step1

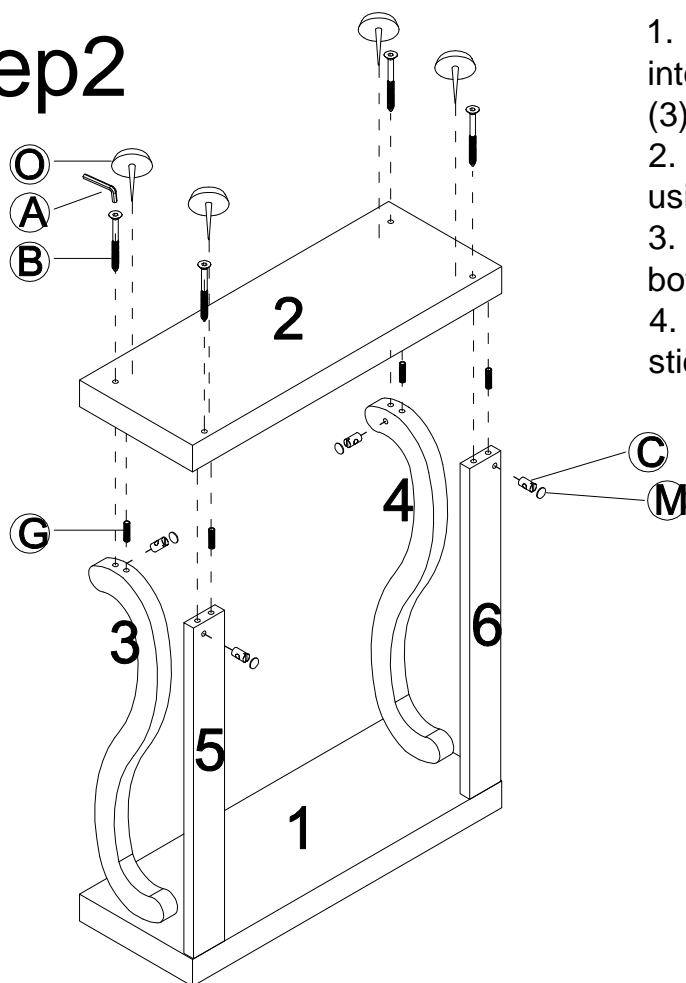
PAGE: 4 of 5

Note: * Place item on a soft surface such as carpet or a towel.



1. Insert dowels(G) and screw full threaded rod(D) into top panel(1).
2. Screw jam nut(E) and nut and washer(F) onto full threaded rod(D) using wrench(H). This will be done with left and right supports(5) and (6) along with left and right legs(3) and (4).
3. Cover holes with large stickers(N).

Step2



1. Insert barrel nuts(C) and dowels(G) into back supports(5) and (6), and legs (3) and (4) with thread facing holes.
2. Connect bottom panel(2) to assembly using allen bolt(B) and allen wrench(A).
3. Gently tap foot pins(O) into bottom of bottom panel(2).
4. Cover barrel nuts with small stickers(M).

Step3

PAGE: 5 of 5

*Optional: Recommended mark hole before screwing into wall to ensure proper placement

1. Attach bracket (I) to top panel (1) using screws (J) as shown.
2. Place unit against wall and mark bracket hole location. Drill hole and tap in anchor (L).
3. Attach wall screw (K) through bracket (I) into plastic anchor (L).

Enjoy your console table!

