

ASSEMBLY INSTRUCTIONS

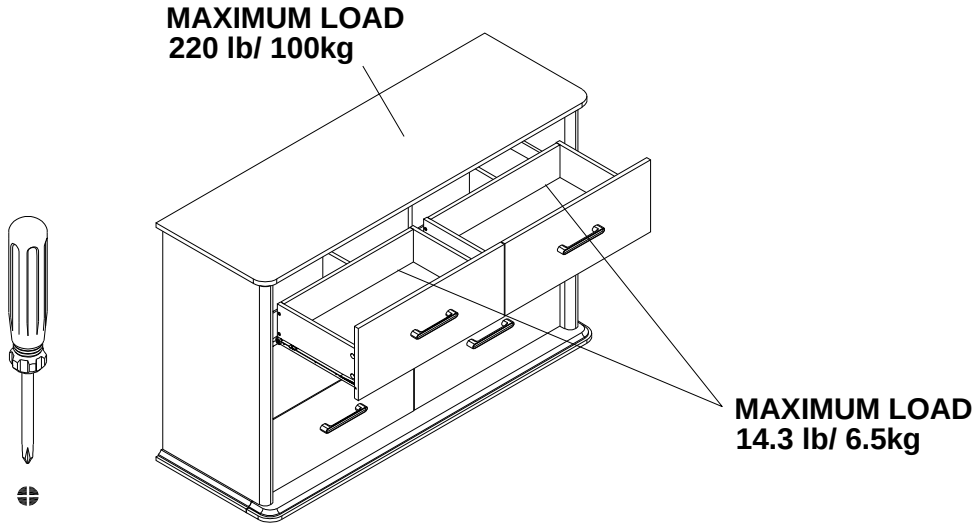


WARNING !



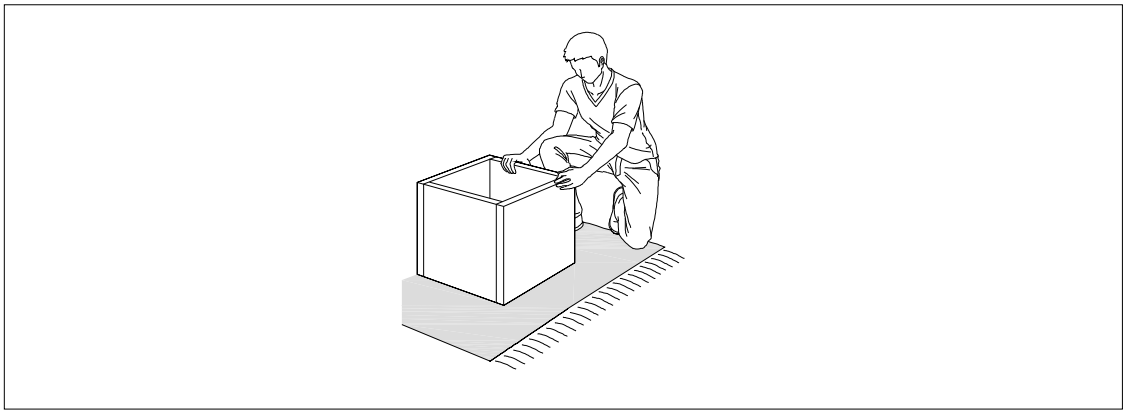

Assembly the furniture on empty carton, carpet, or rug to prevent scratches or damage.

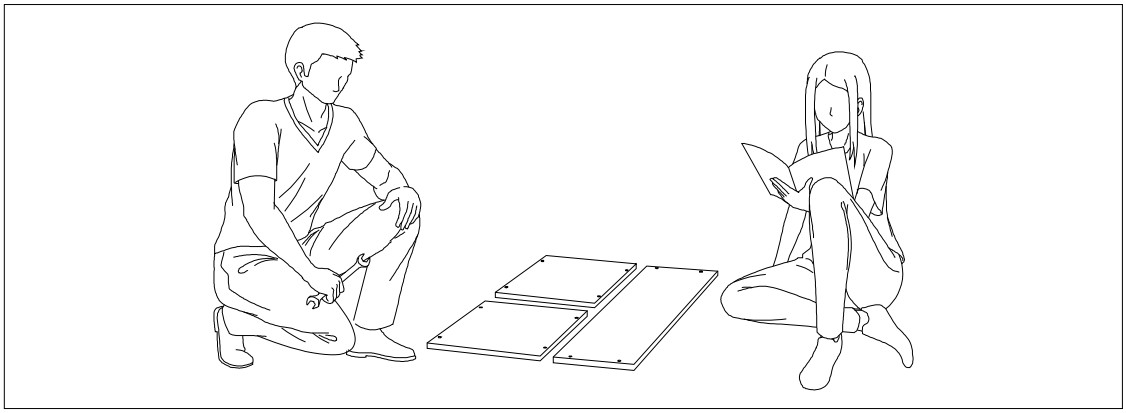


This furniture requires 2 people to assembly.

Make sure no parts are missing or damaged before assembly.


Board Identification

Not actual size

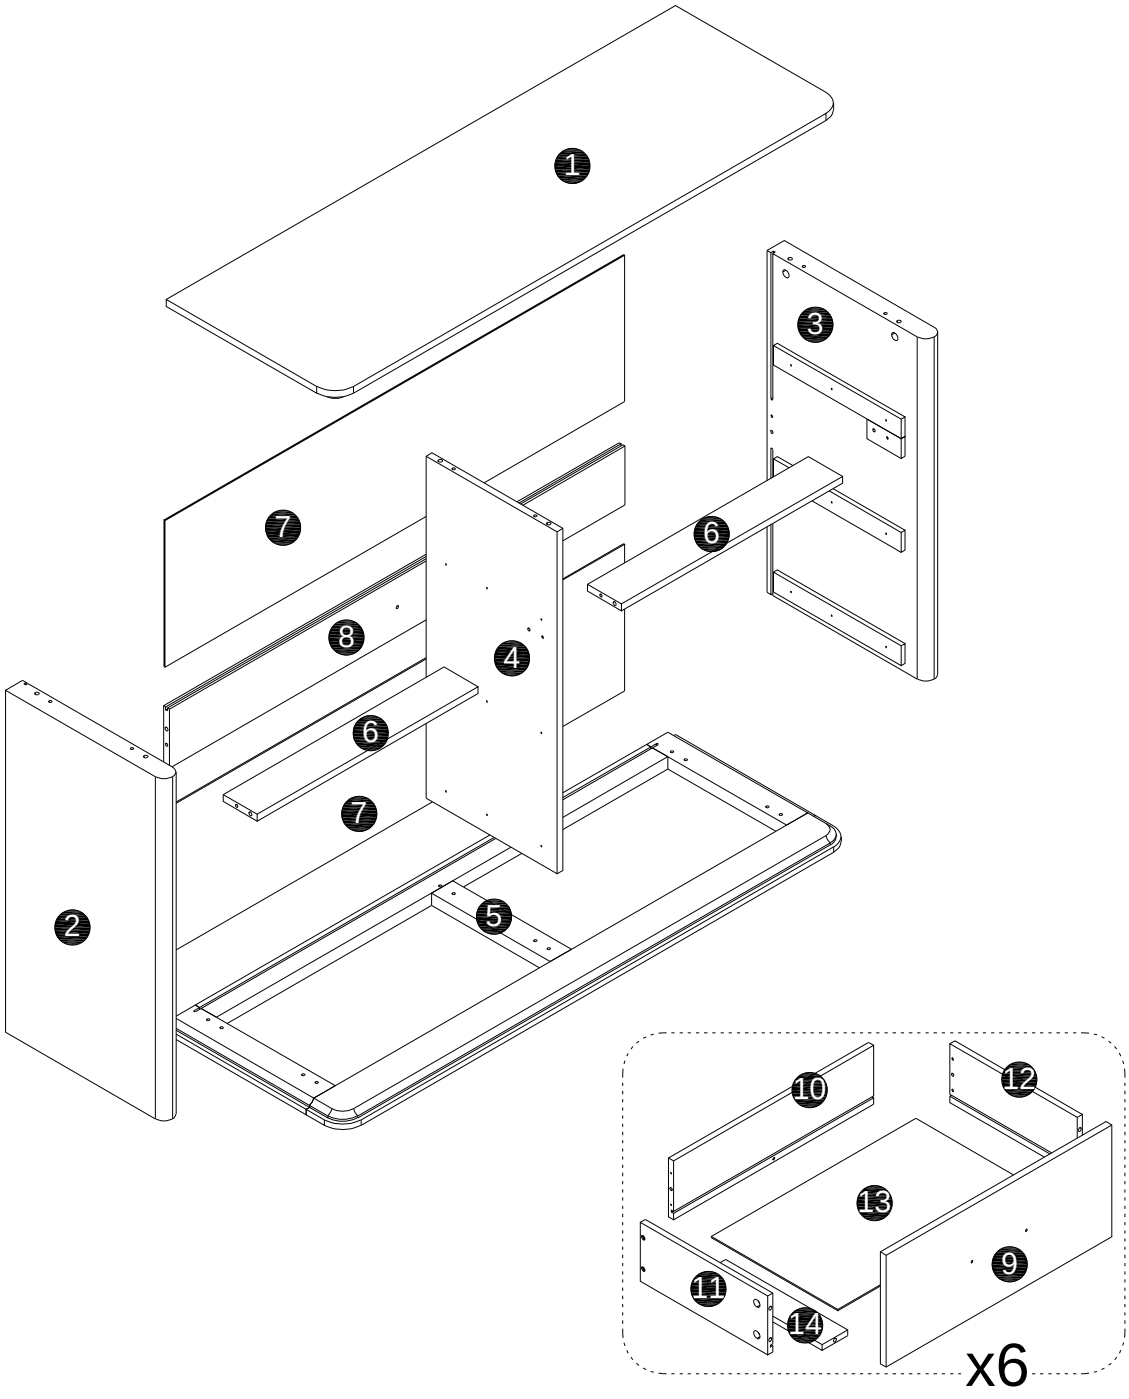


BOARD IDENTIFICATION


Not actual size

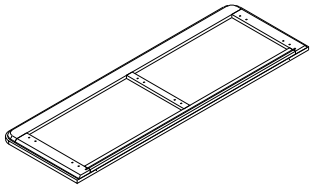


① x 1

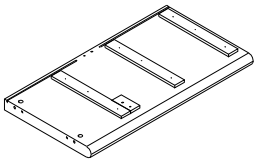


② x 1

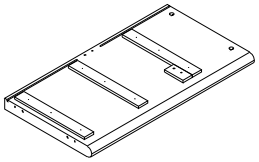


③ x 1

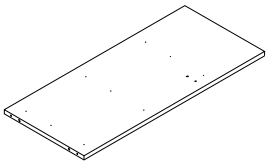


④ x 1

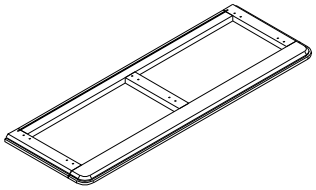


⑤ x 1

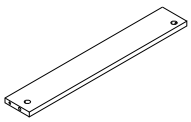


⑥ x 2

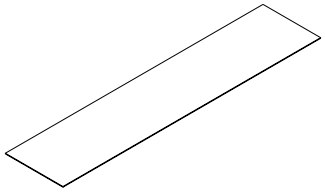


⑦ x 2

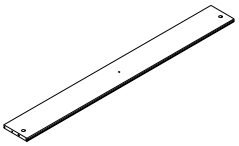


⑧ x 1

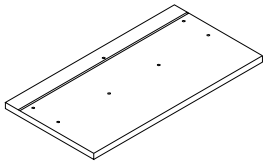


⑨ x 6

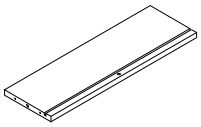


⑩ x 6




⑪ x 6



⑫ x 6

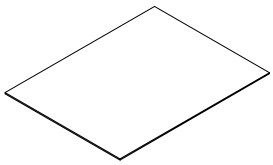


⑬ x 6



⑭ x 6

HARDWARE LIST




Ø6x33.5mm

A	X42+4




Ø15x9.5mm

B	X42+4



Ø6x30mm

C	X30+3




Ø5x50mm

D	X 7+1



Ø3.5x12mm

E	X69+6




Ø3x15mm

F	X 8+1




Ø4x38mm

G	X30+3



H	X 6



M4x20mm

I	X 12

J1x2



140X19MM

J2x4



Ø16xØ6.5x1mm

J3x2



Ø4x16mm


J	X 1SET

K1x2




Ø6x30mm

K2x2




Ø4x35mm


K	1SET




L	X 1




M	X 6

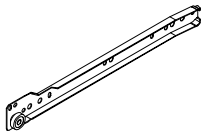


CL	X 6

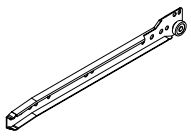

CR	X 6

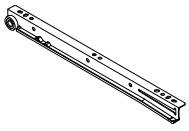

DR	X 6

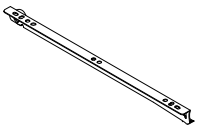


DL	X 6


Cam Lock Fastening System

Insert the cam bolt into the hole first, then insert the cam lock and lock it.


1

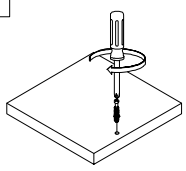

2

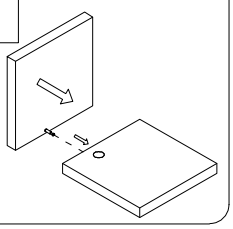


3

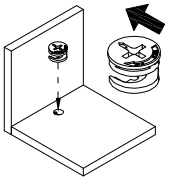


The opening must point toward the edge of the board

4

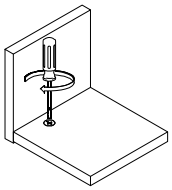

STEP 1

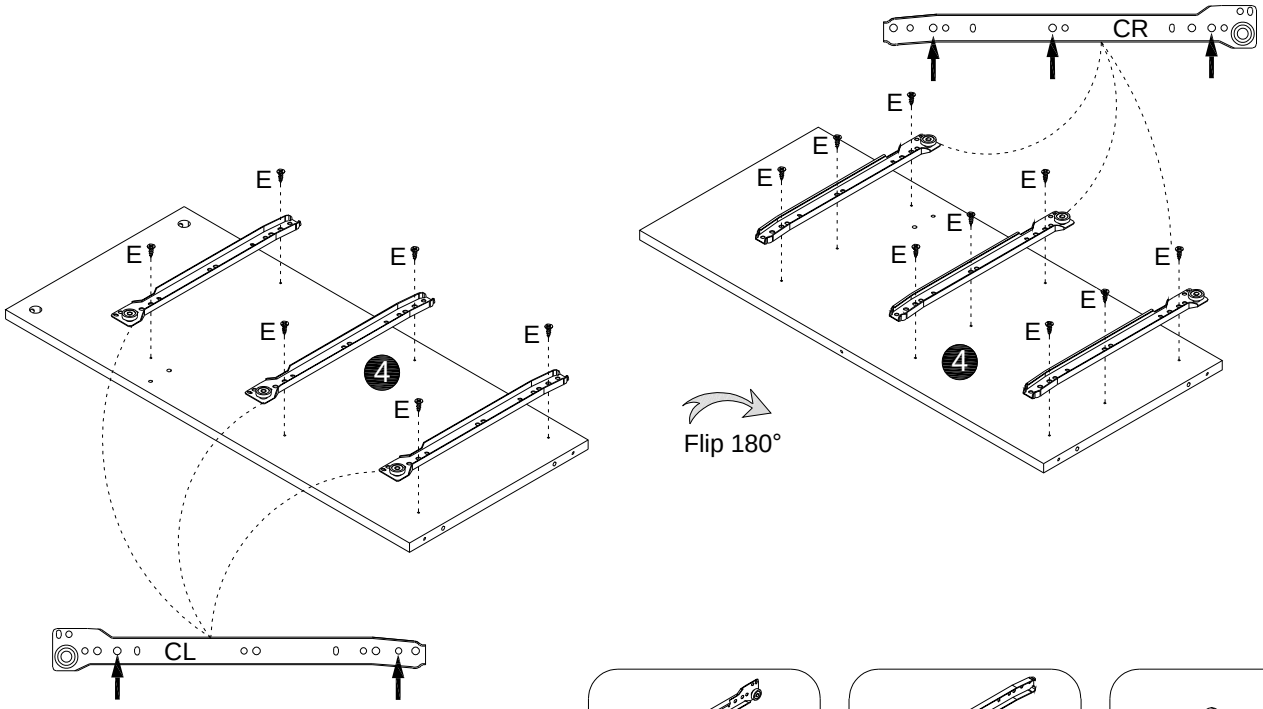


CR	x 3


CL	x 3

Ø3.5X12mm

E	x 15

STEP 2

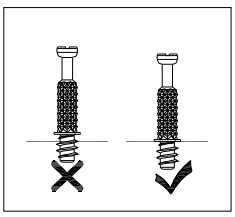


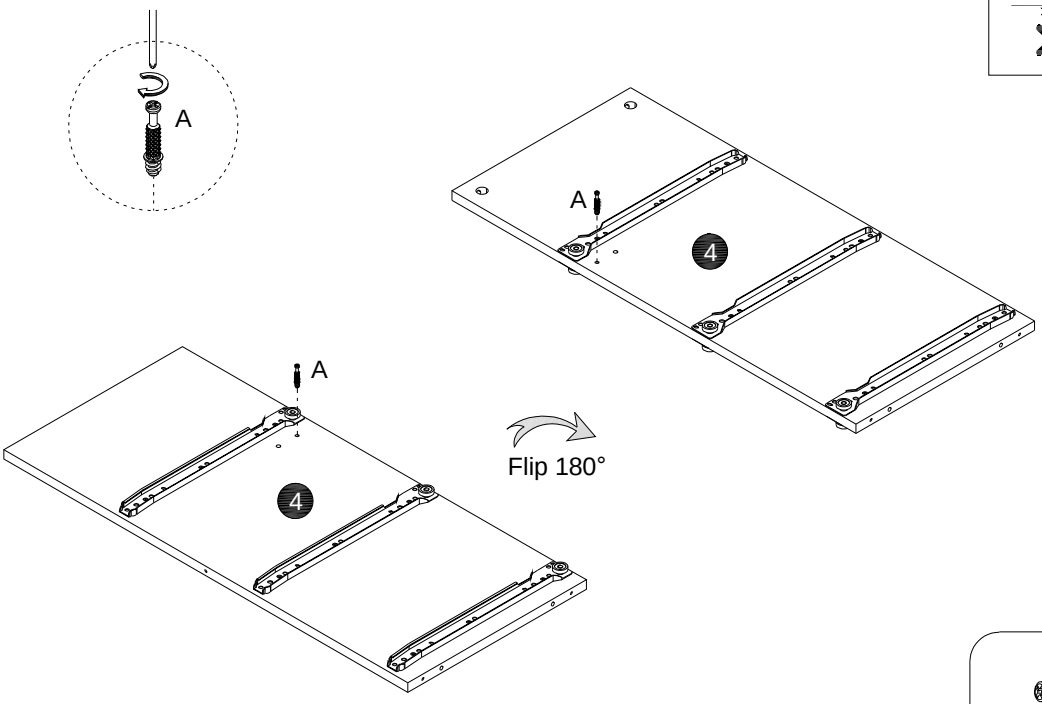


Ø6X33.5mm


A	x 2

STEP 3

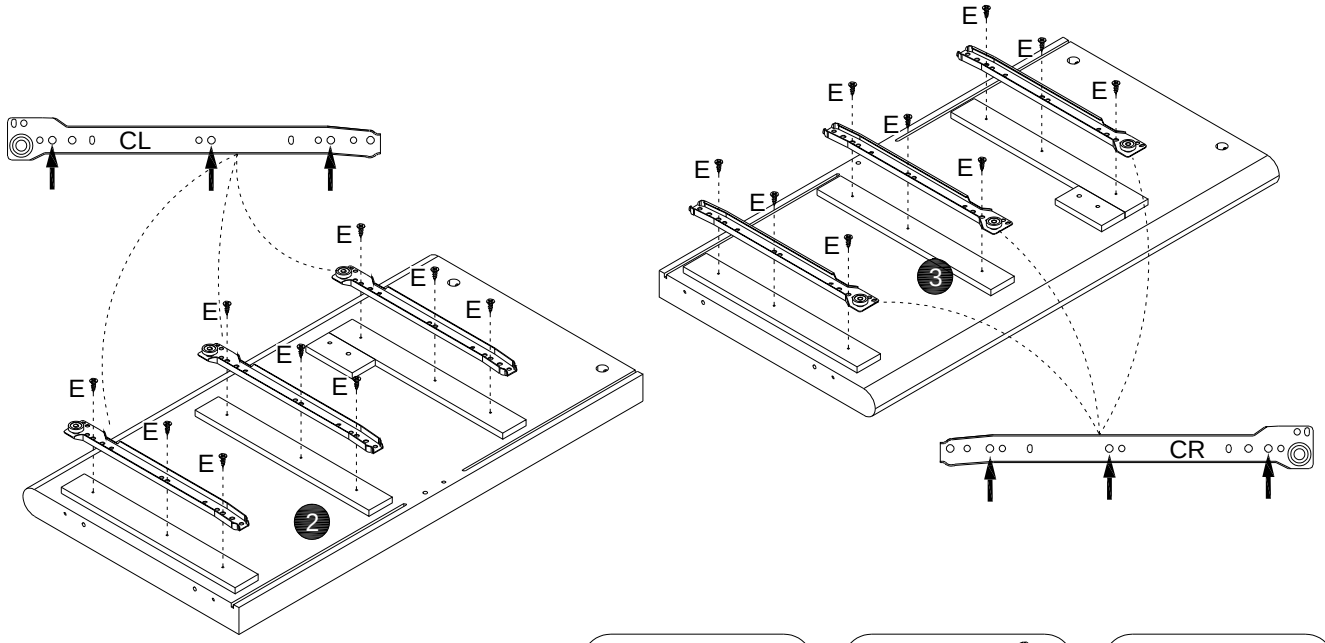




CR	X 3




CL	X 3





Ø3.5X12mm


E	X 18


STEP 4

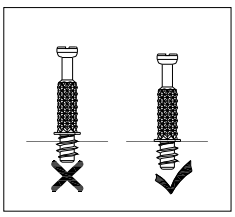

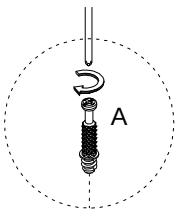

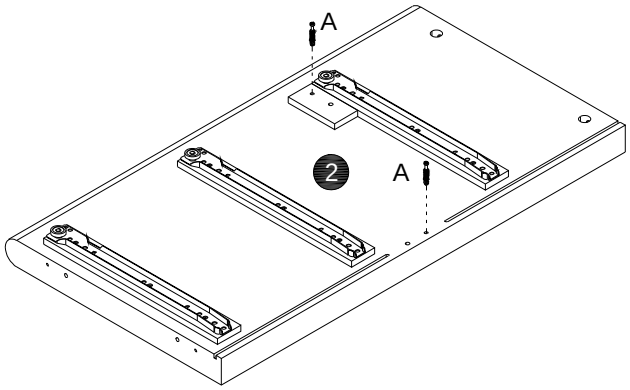

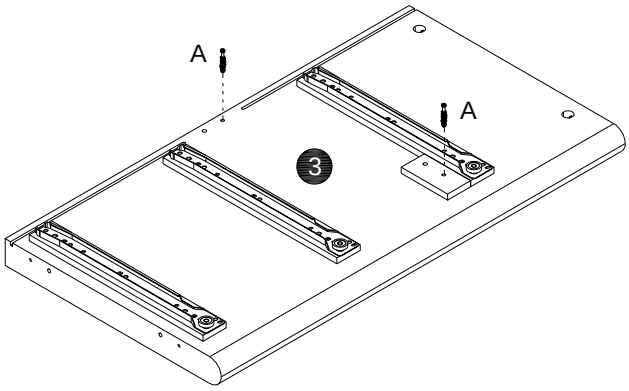





Ø6X33.5mm


A	X 4

STEP 5

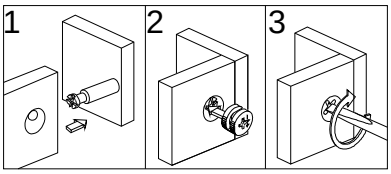

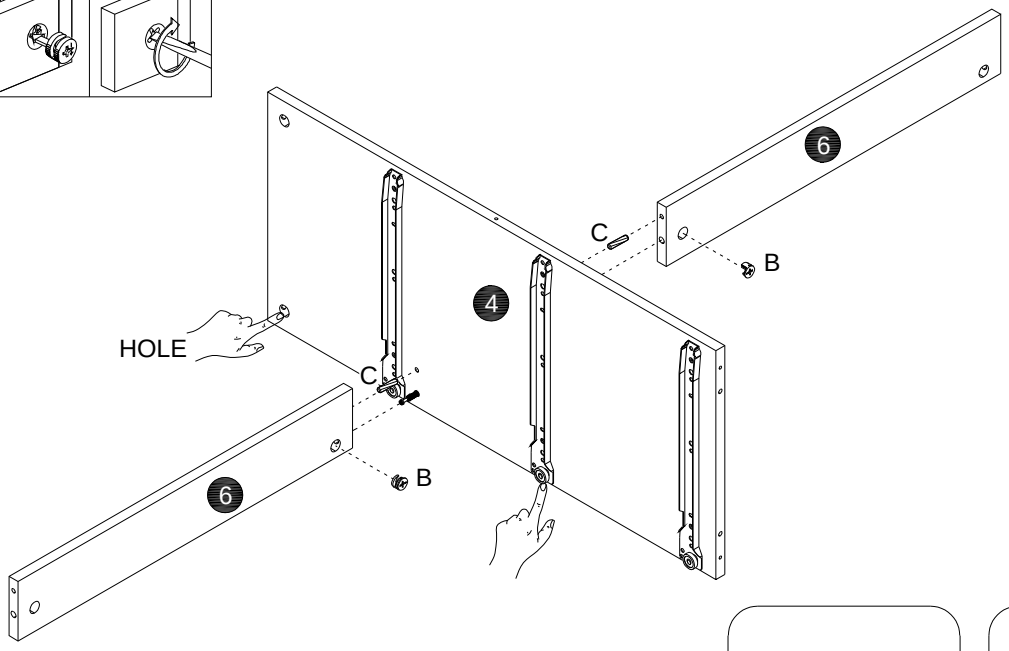


C | X 2



B | X 2

STEP 6

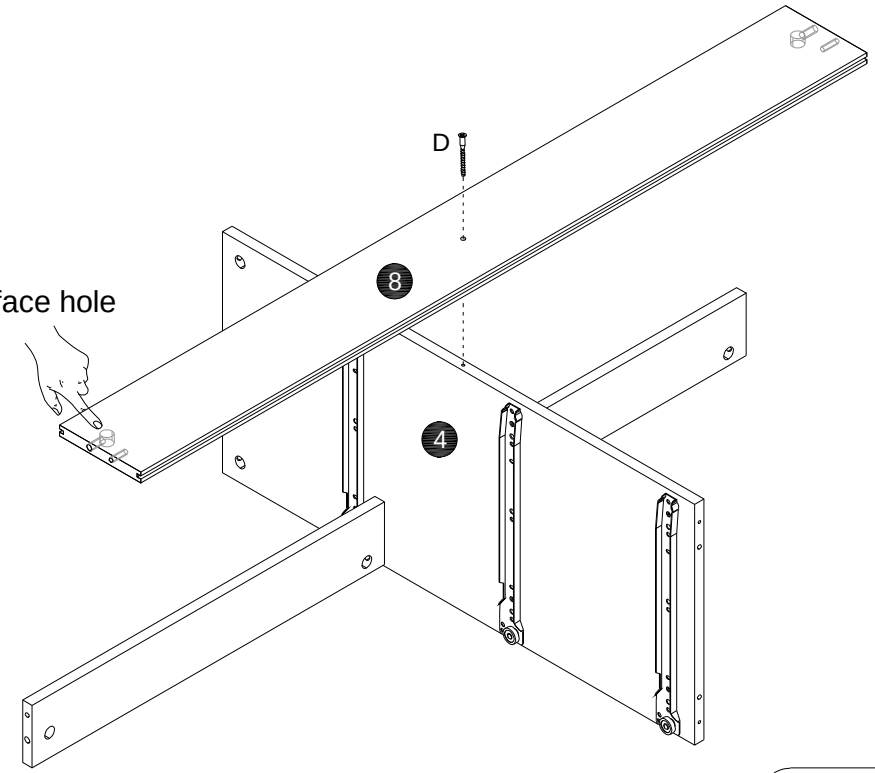


Lower face hole




After this step is assembled,
flip it 180 degrees(to next step)





D | X 1


STEP 7

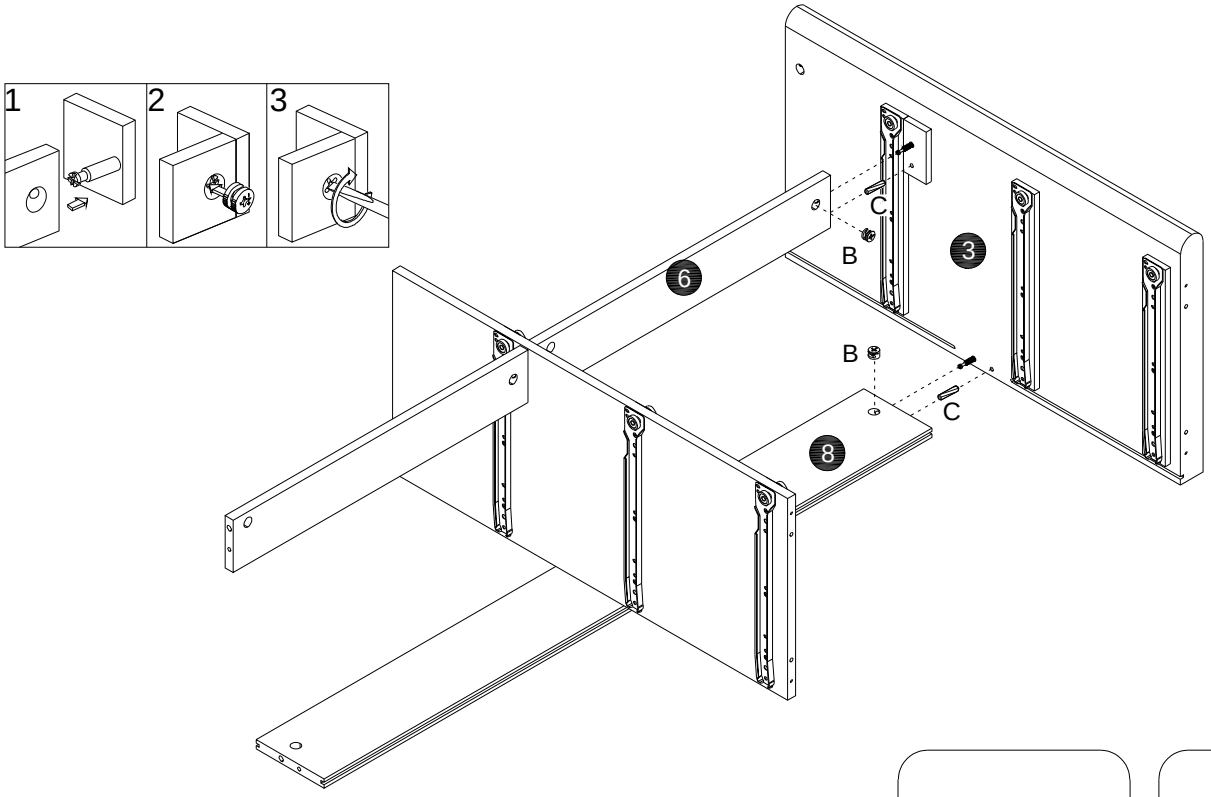


Ø6X30mm	
C	X 2

Ø15X9.5mm	
B	X 2

STEP 8

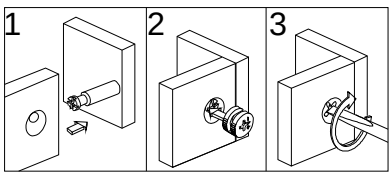

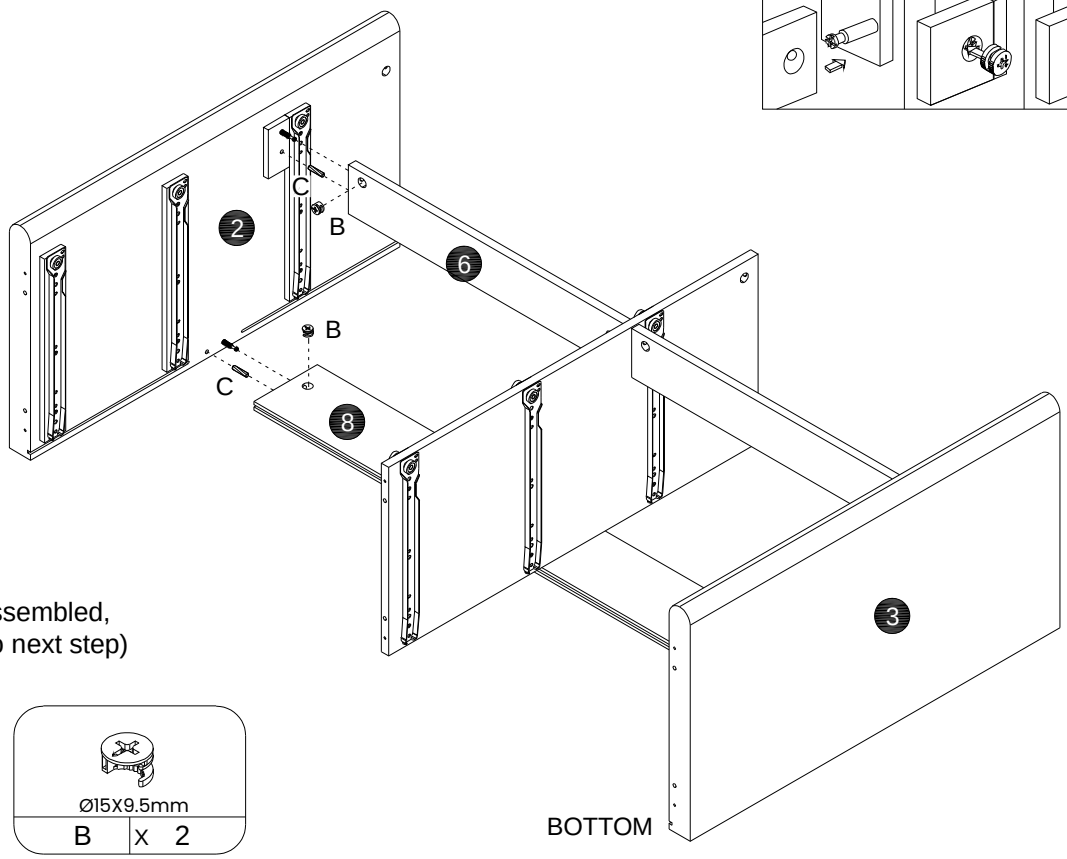



After this step is assembled,
flip it 90 degrees(to next step)

Ø6X30mm	
C	X 2


Ø15X9.5mm	
B	X 2

STEP 9

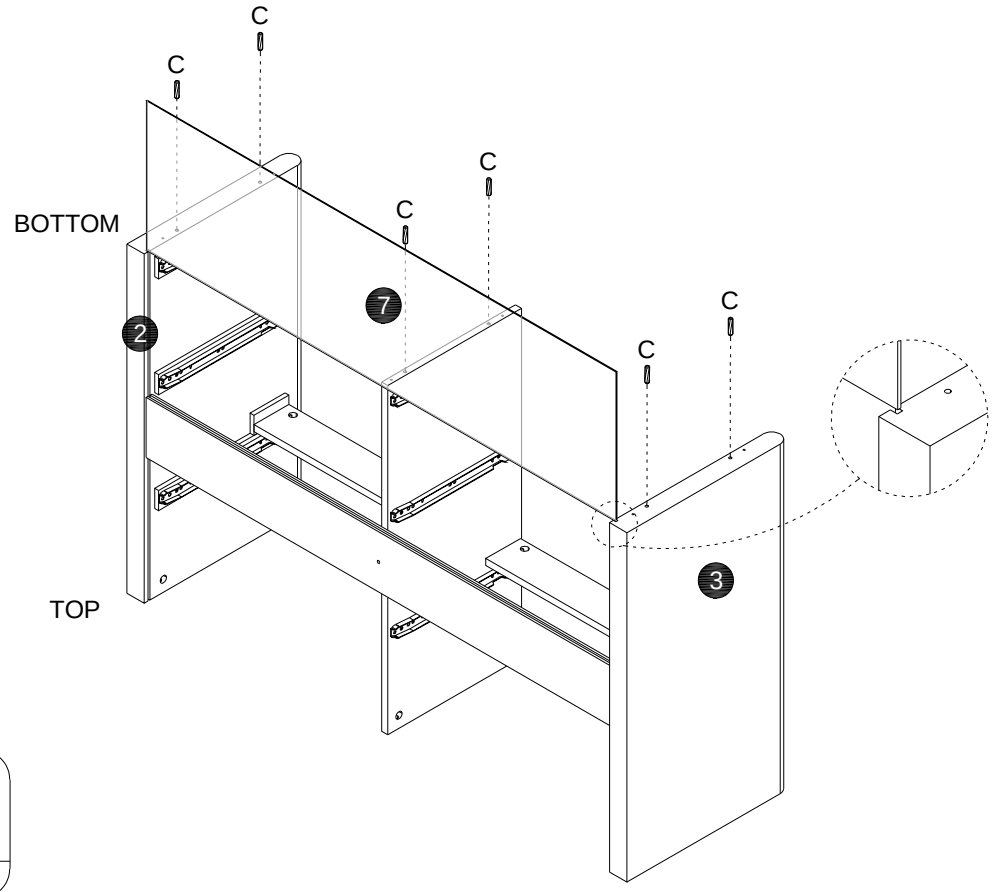





STEP 10

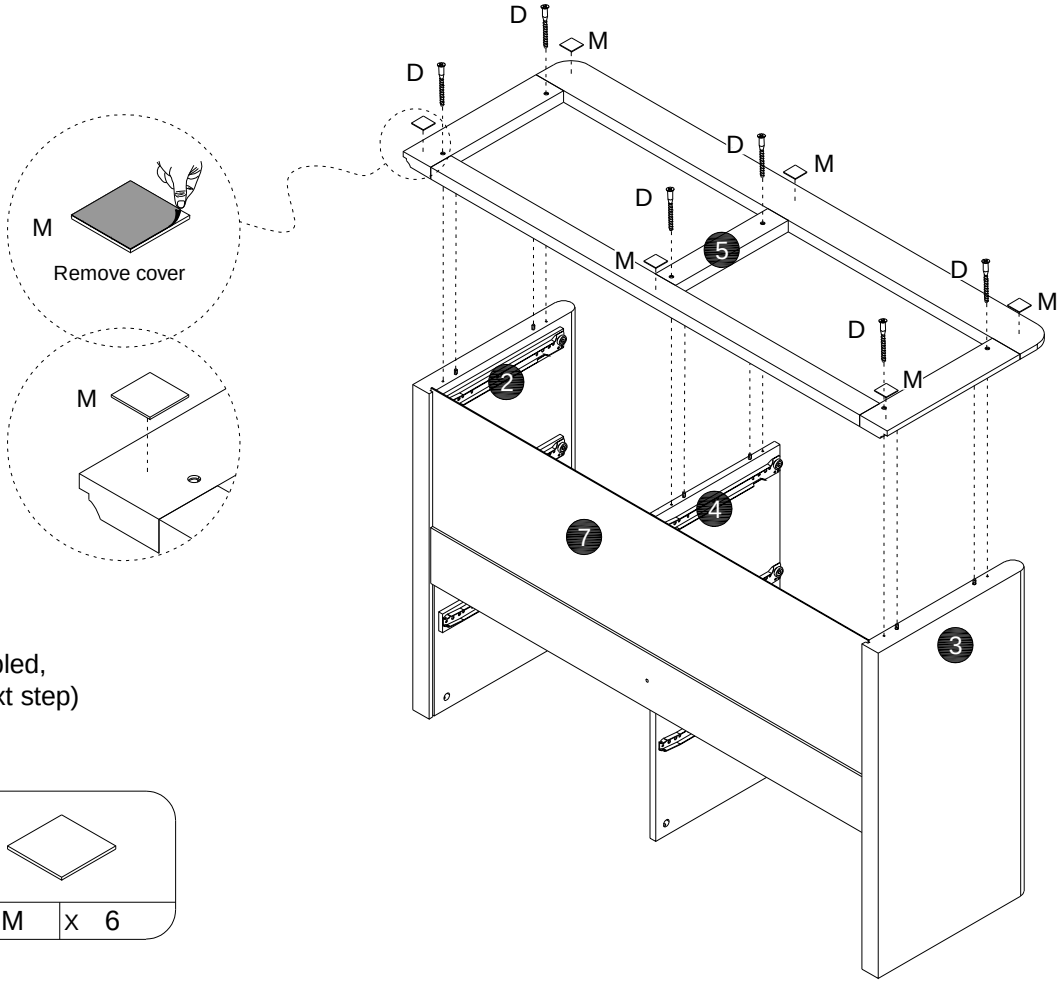


After this step is assembled,
flip it 180 degrees(to next step)

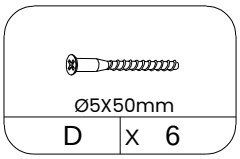



STEP 11

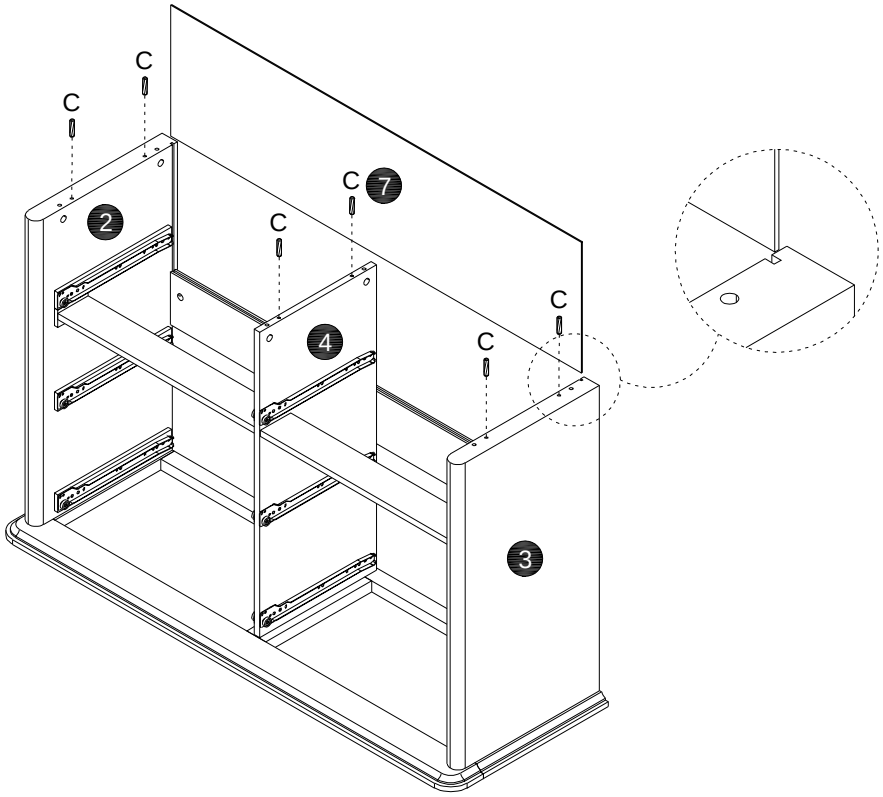


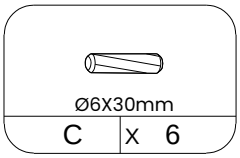


STEP 12

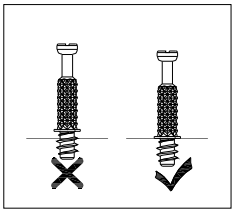


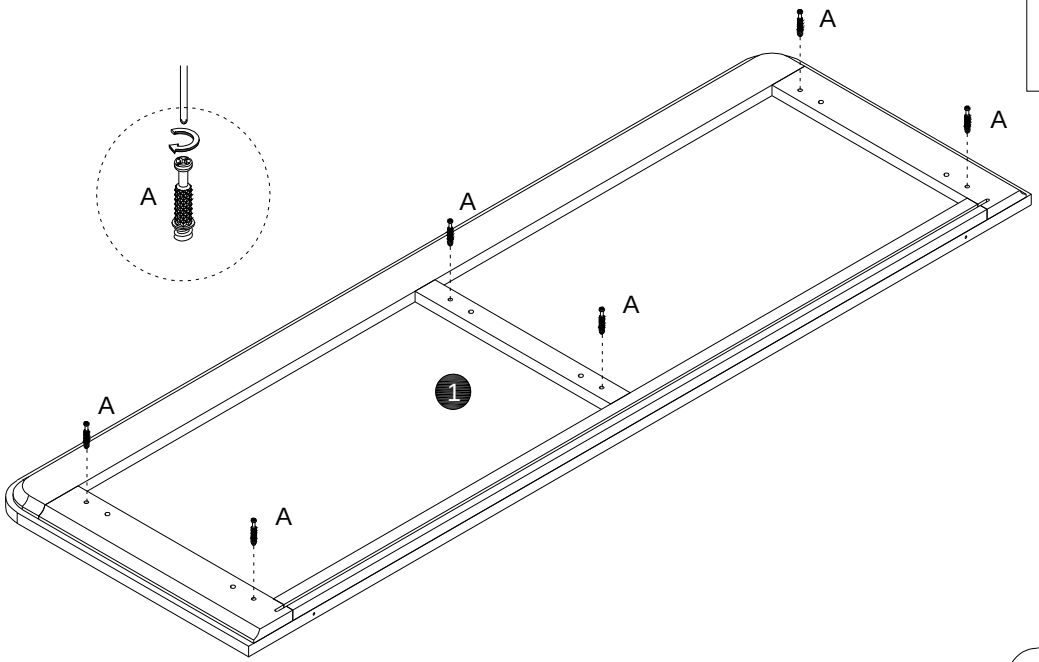

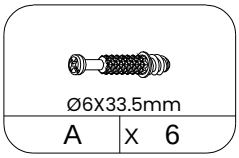

STEP 13

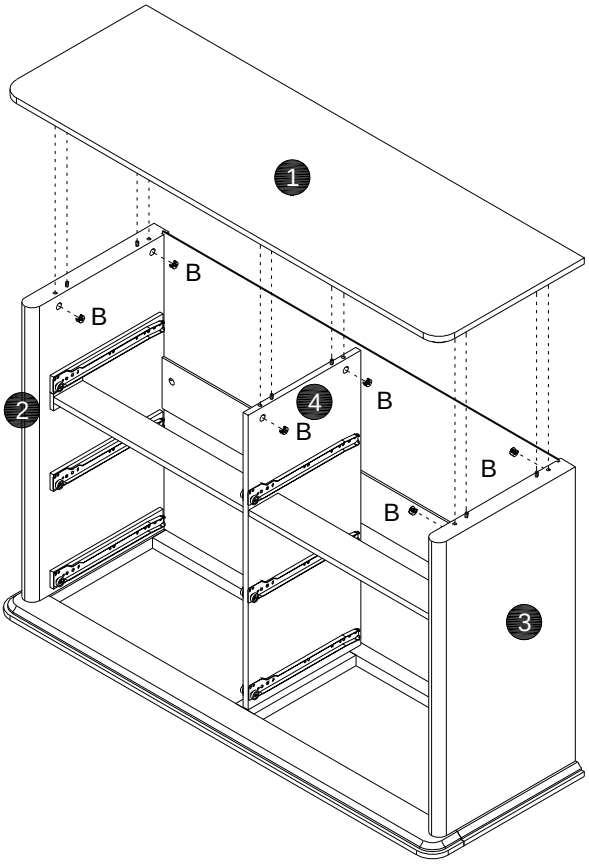


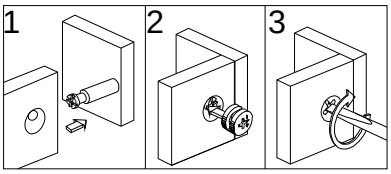



Ø15X9.5mm	
B	X 6


STEP 14

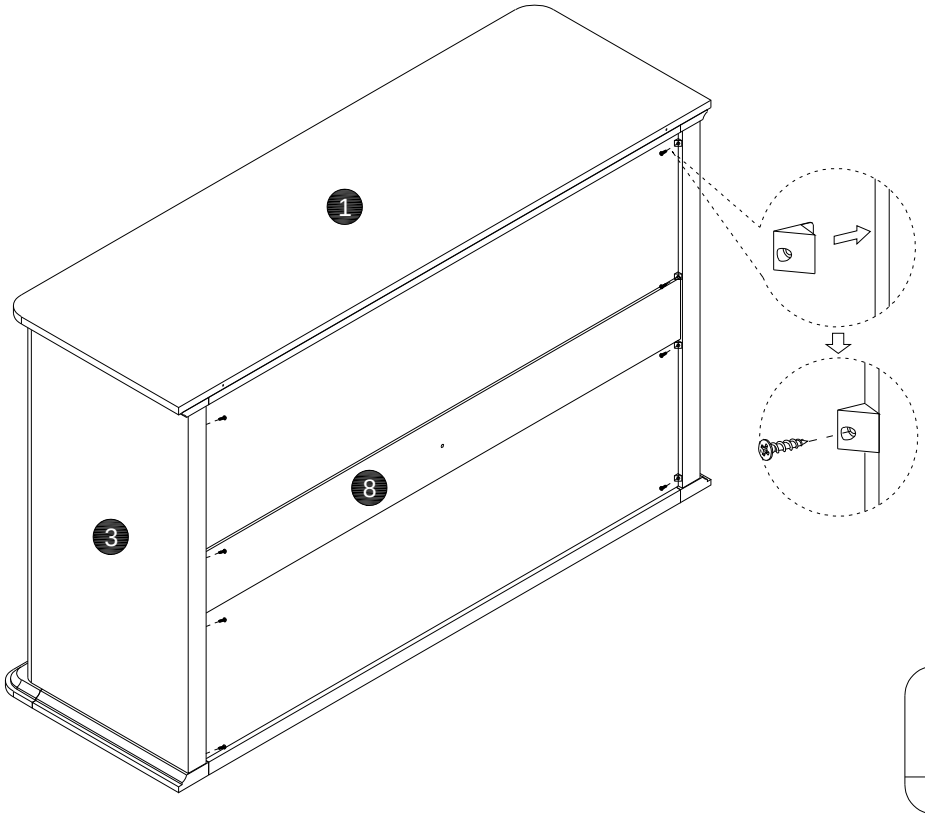





Ø3x15mm	
F	X 8


STEP 15

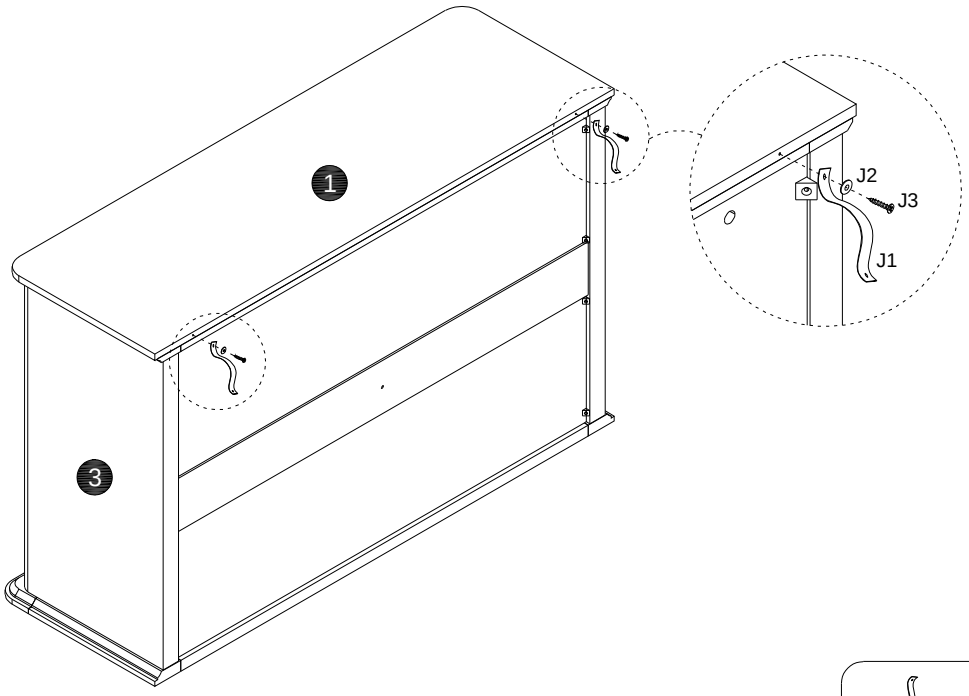

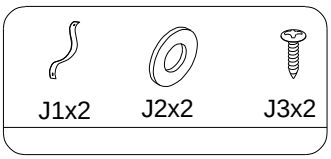


STEP 16

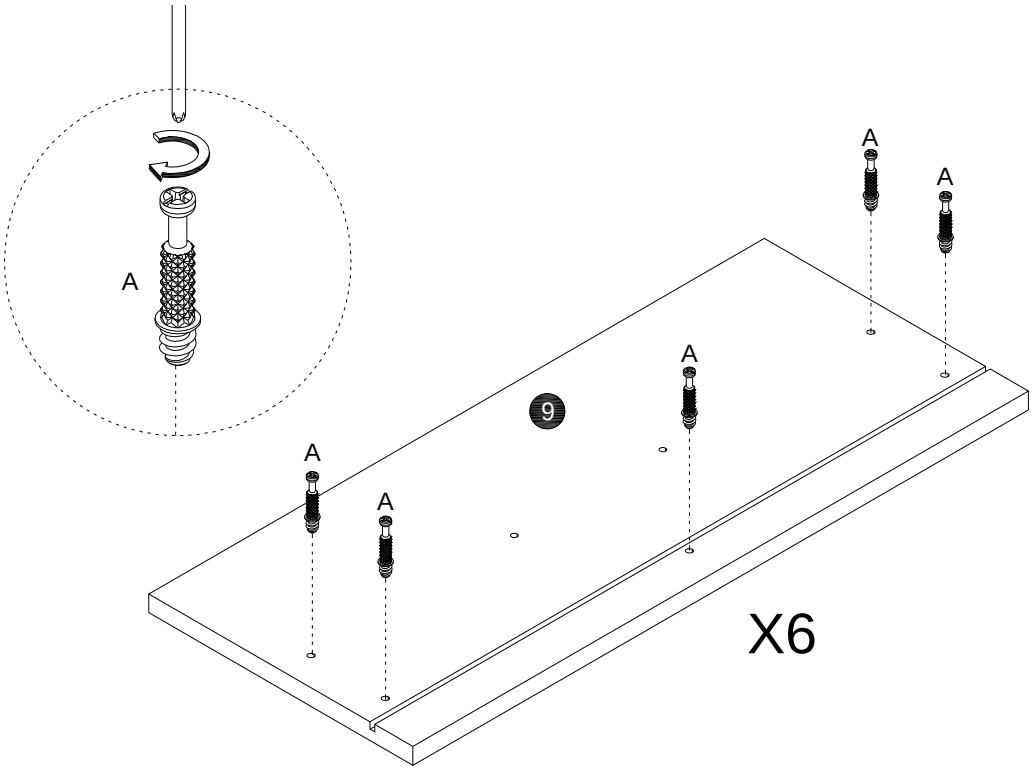

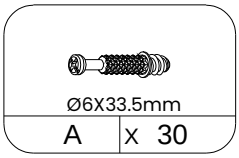


STEP 17

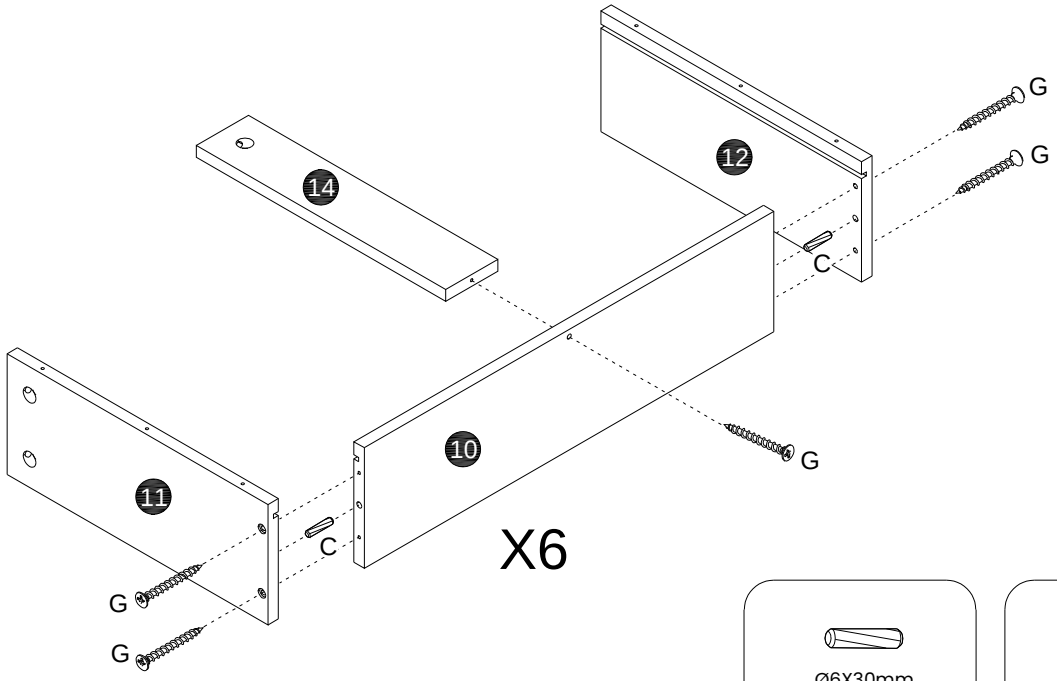



Ø6X30mm	Ø4X38mm
C x 12	G x 30


STEP 18

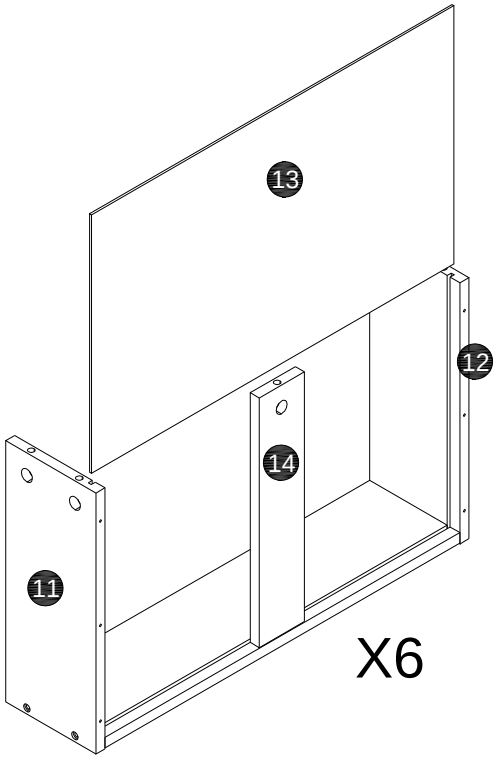


STEP 19

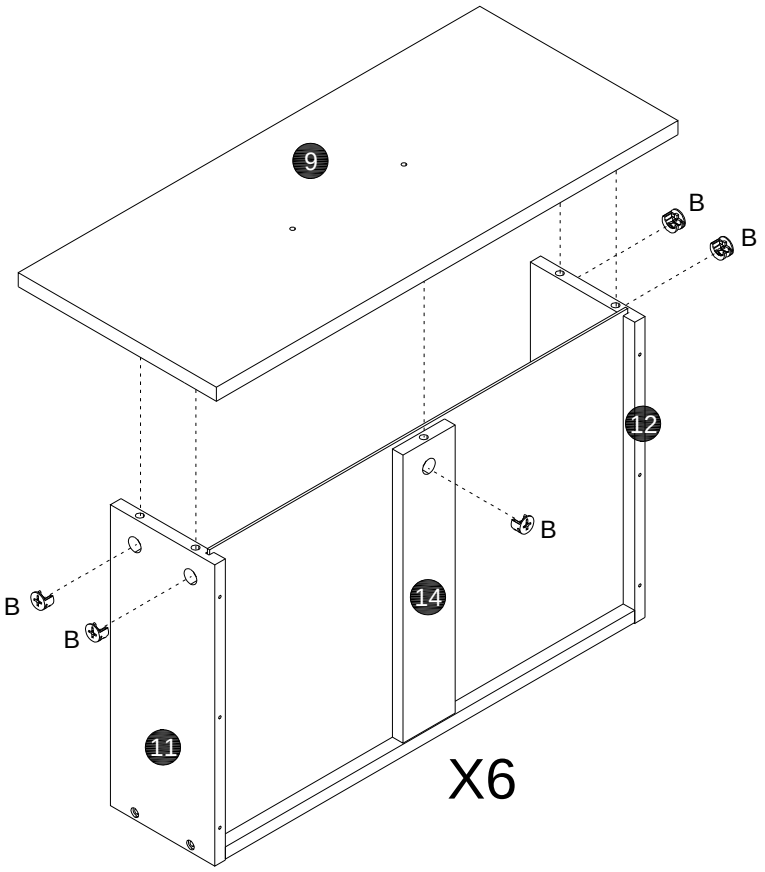


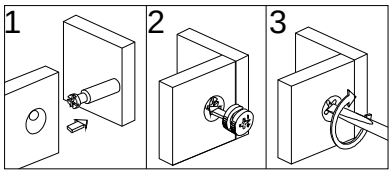


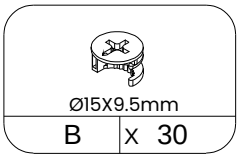


STEP 20

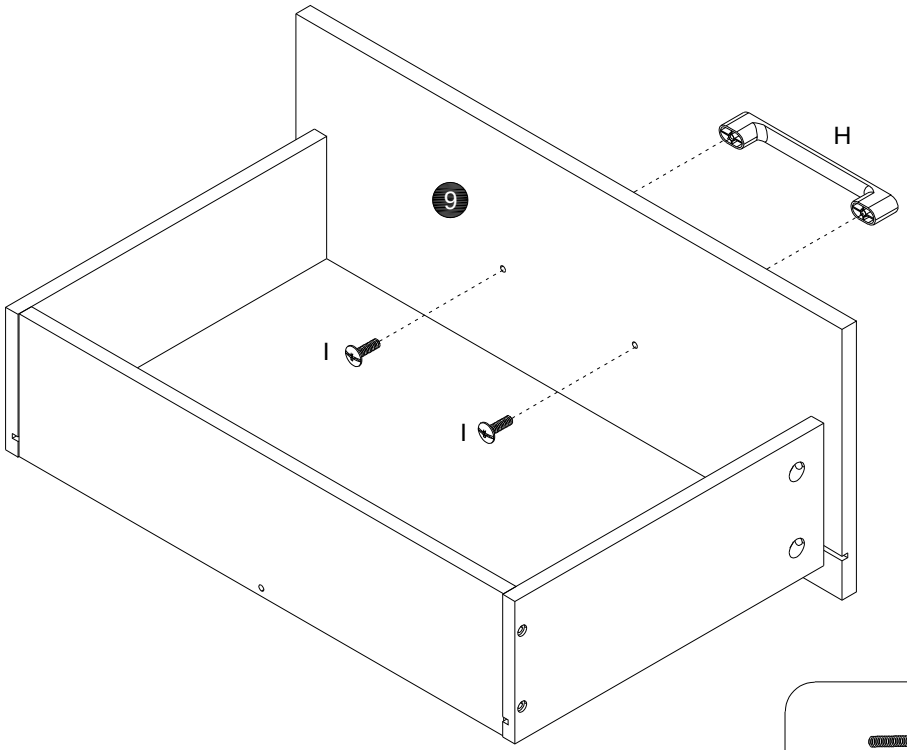

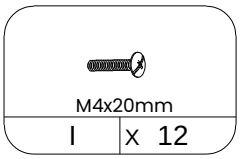

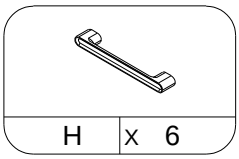

STEP 21

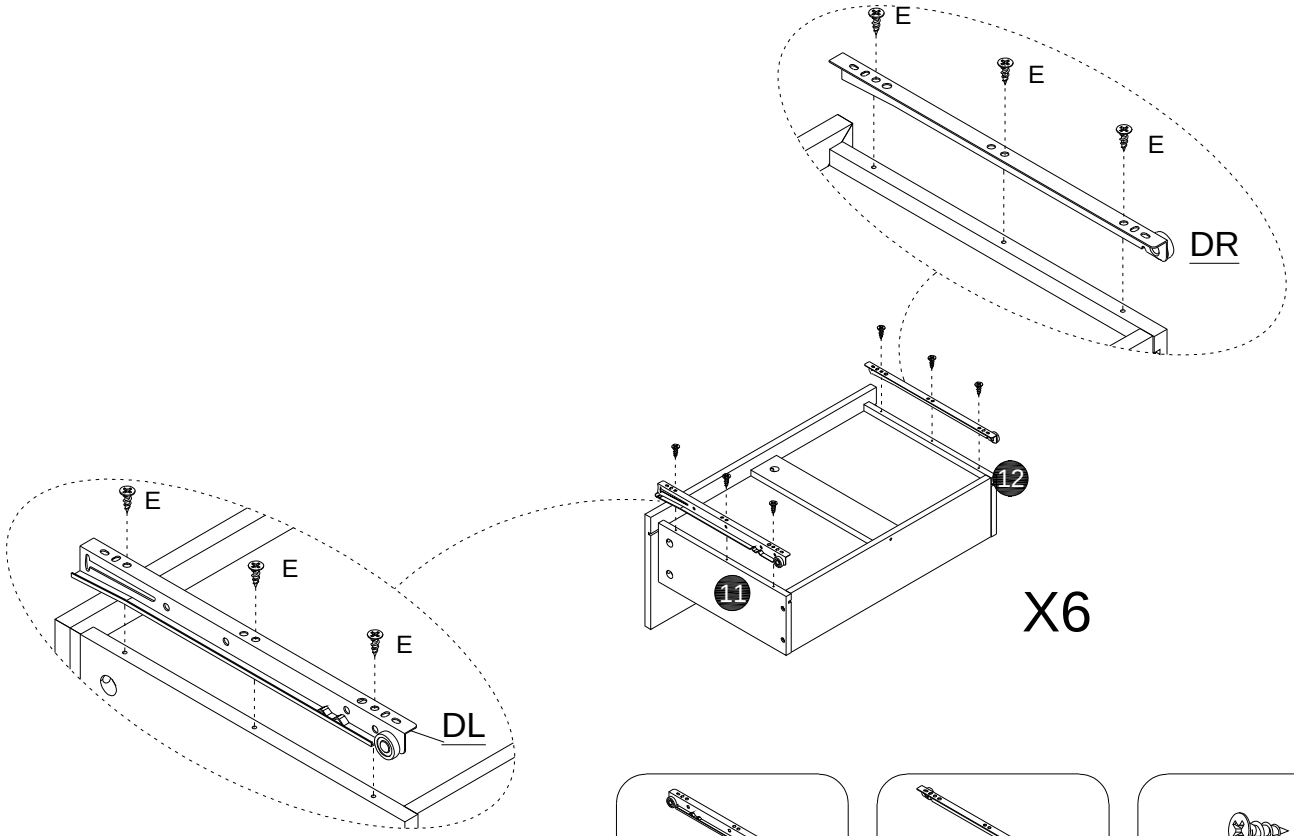


DR | X 6


DL | X 6

Ø3.5X12mm

E | X 36

STEP 22

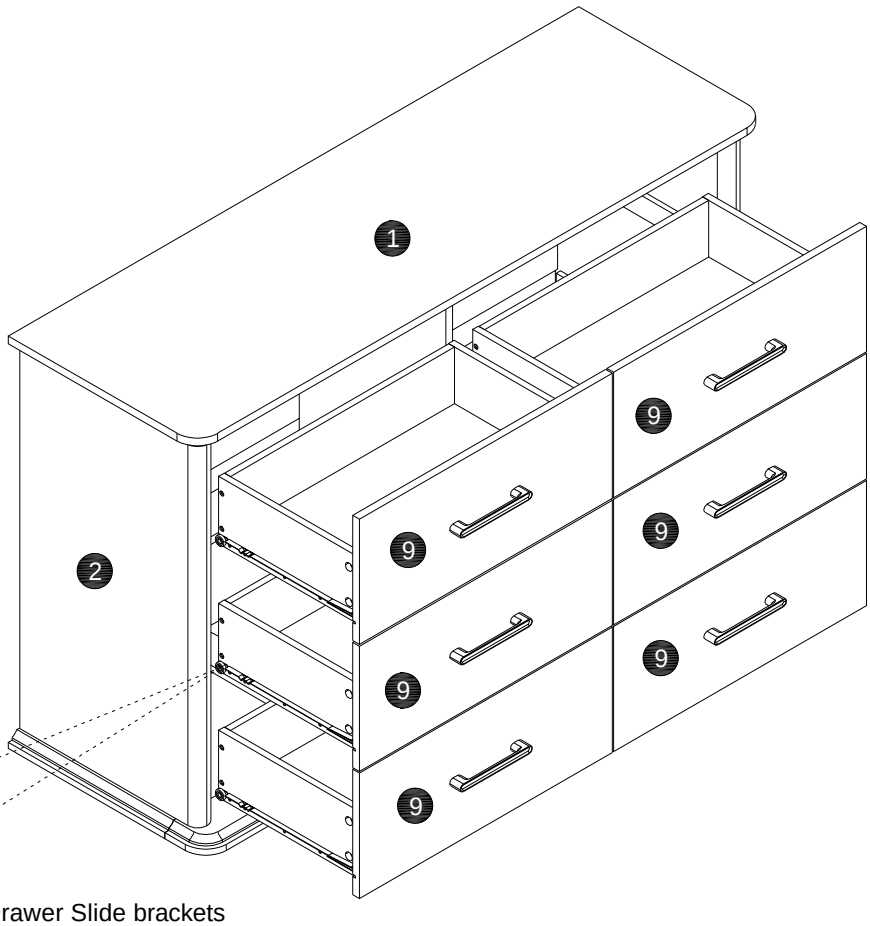


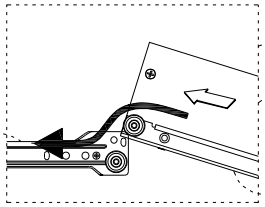


Cabinet Slide arms


Drawer Slide brackets


STEP 23

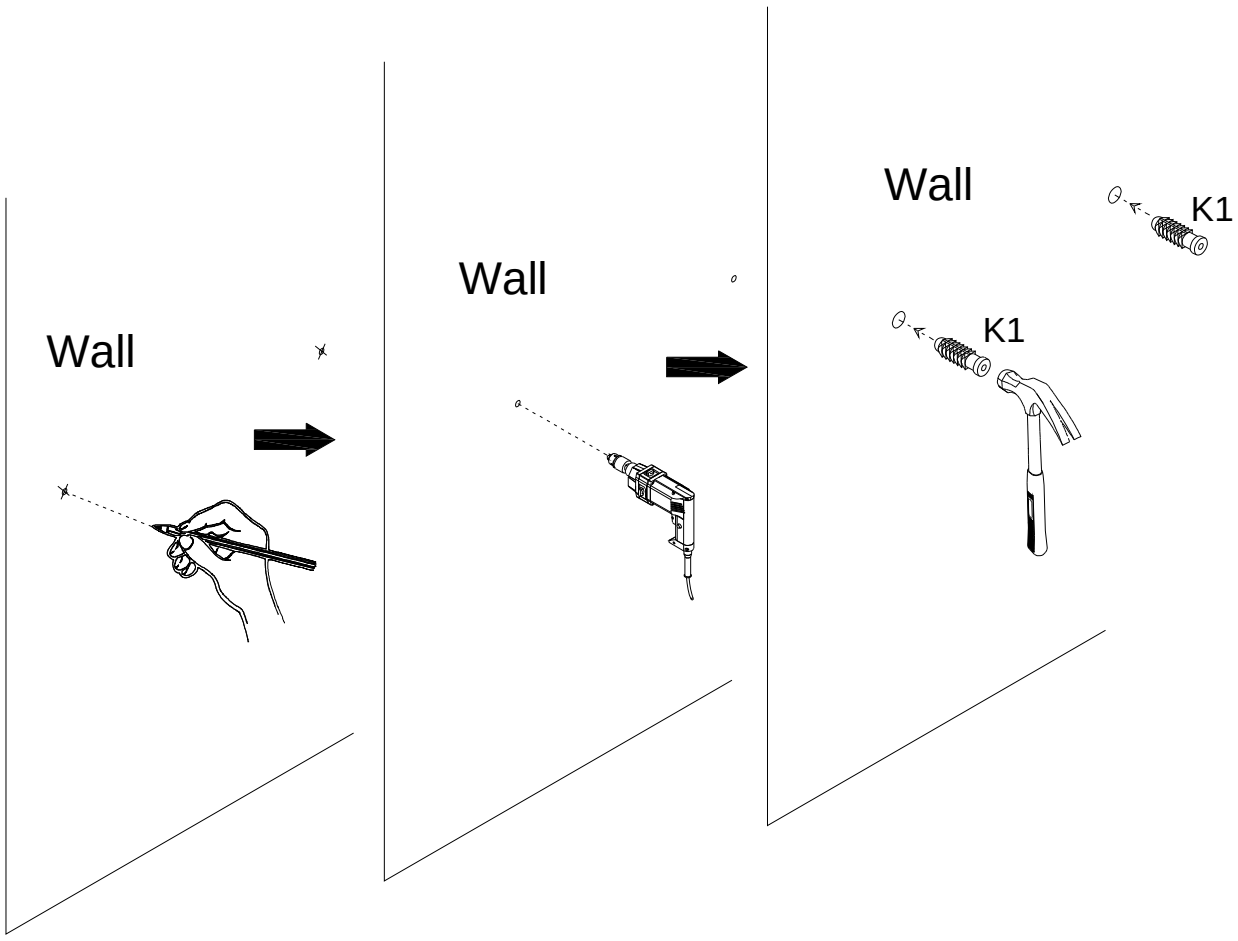

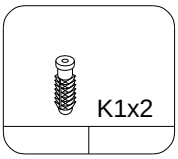

STEP 24

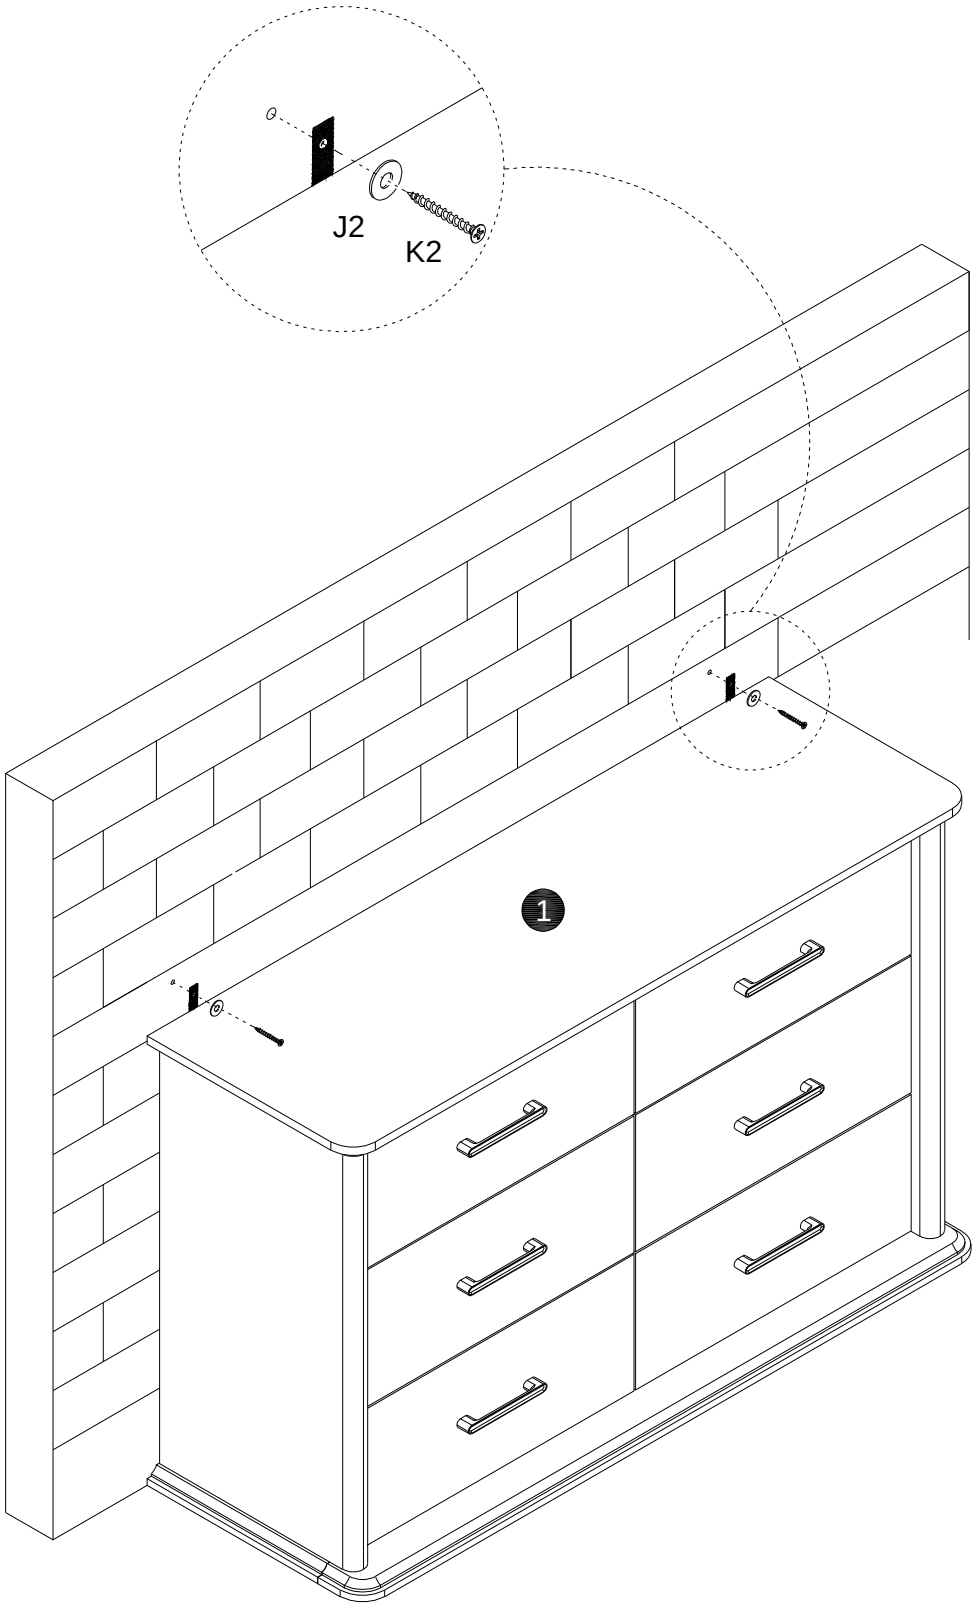

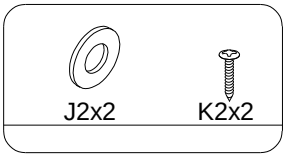

FURNITURE CARE AND MAINTENANCE

Medium - Density Fiberboard and Particle board

Thank you for your purchase. We want your item to last as long as possible. To ensure the product gives you years of service, please refer to this care and maintenance guide.



MAINTENANCE

· Tighten all bolts and screws again within the first 2 weeks of assembly
· Check the tightness of all bolts every 2 months, tighten them if necessary



CLEANING

· Clean the surface of the MDF (medium - density fiberboard) or PB (particle board) with a lightly dampened cloth.
· Small amount of mild soap can be used if necessary
- **Dry the surface immediately after cleaning.**

⚠ DO NOT use bleach or alcohol detergent to clean the surface.
⚠ DO NOT apply wood treatment on parts made with MDF and PB.
Medium - density fiberboard and Particle board will swell and distort when suffer from water damage.
Make sure to dry the furniture immediately after cleaning