

13691 - 6 Ft TEAK TREE BENCH

HARDWARE :

A. BACKREST 2 PCS



B. SEATREST 2 PCS




C. FRONT APRRONT 2 PCS



D. CENTER LEG 1 PC



E. END LEG 2 PCS



HARDWARE :

F. WOODEN DOWELS

24 PCS

G. WOODEN SCREW

12 PCS


H. WOODEN SCREW

4 PCS




NOTE : Use a soft mallet hammer (not included) to prevent marking or denting wood when inserting wood dowels. Do not use excessive force to insert dowels. After inserting wood dowels, minimal sanding may be necessary to make dowel ends flush with surface.


1

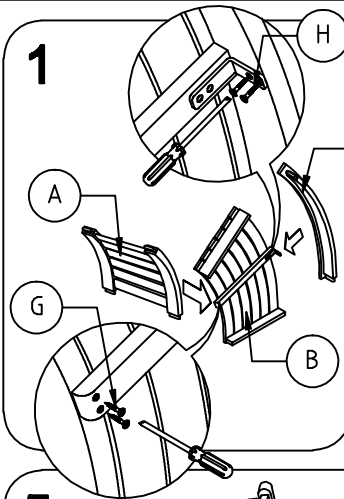


2

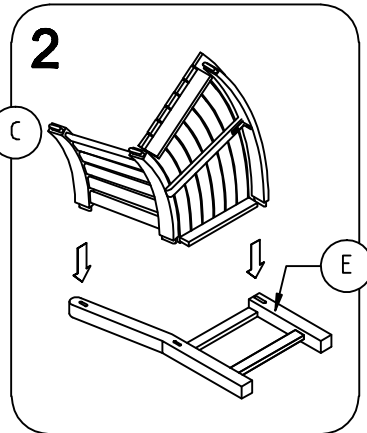


3

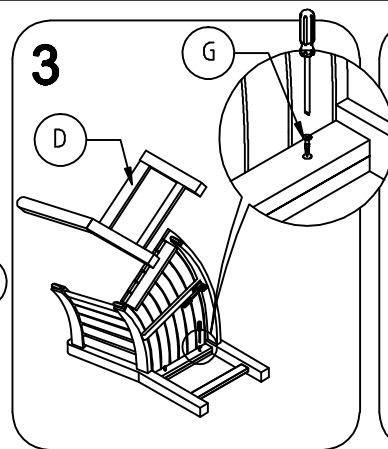

4

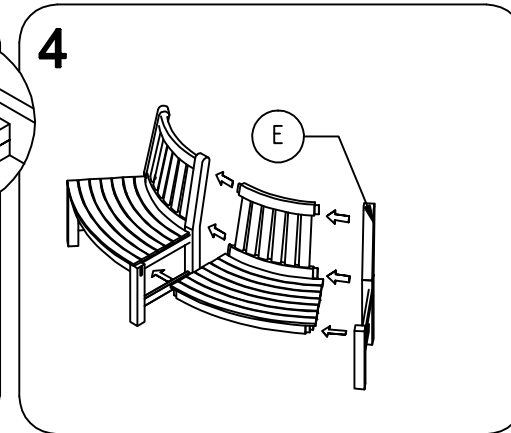

5

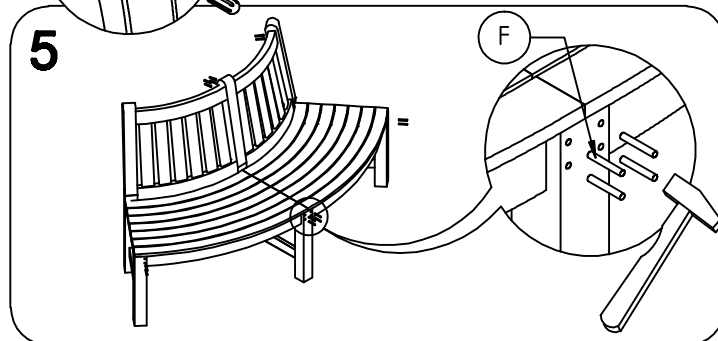

6

