
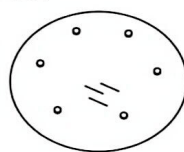

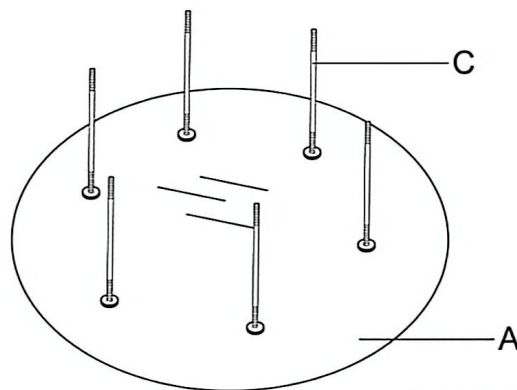
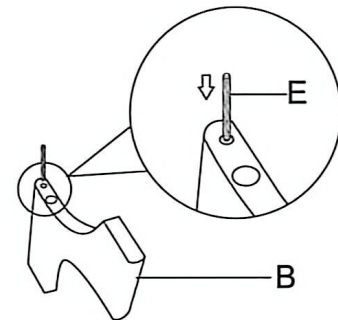

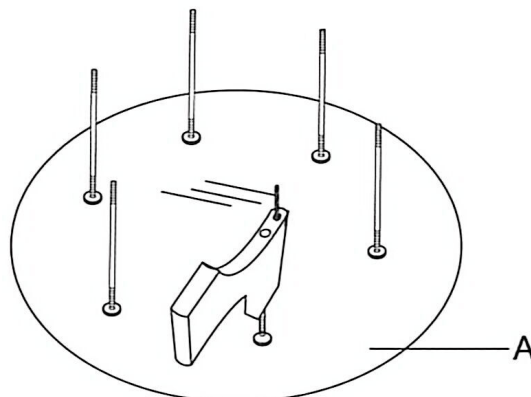
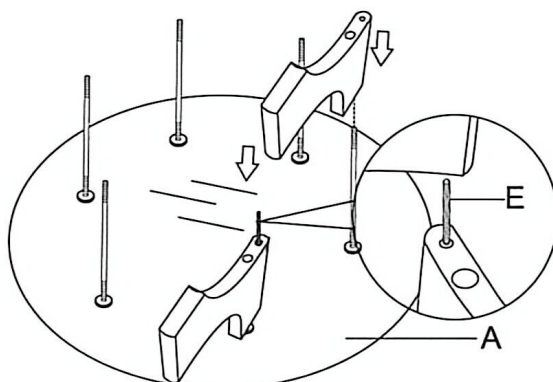
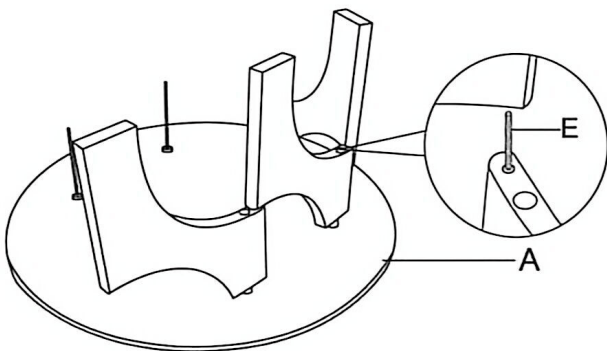



ASSEMBLY INSTRUCTION

Ax1 	Bx6 	Cx6  M8x155mm	1.  Cx6  M8x155mm	2.  x6 Ex6  M10x40mm
Dx6 SPARE 1 	Ex6 SPARE 1  M10x40mm	Fx1 		
Gx6 SPARE 1  M8x18mm	Hx6 SPARE 1 			
3.  A	4.  A	5.  A		


6.

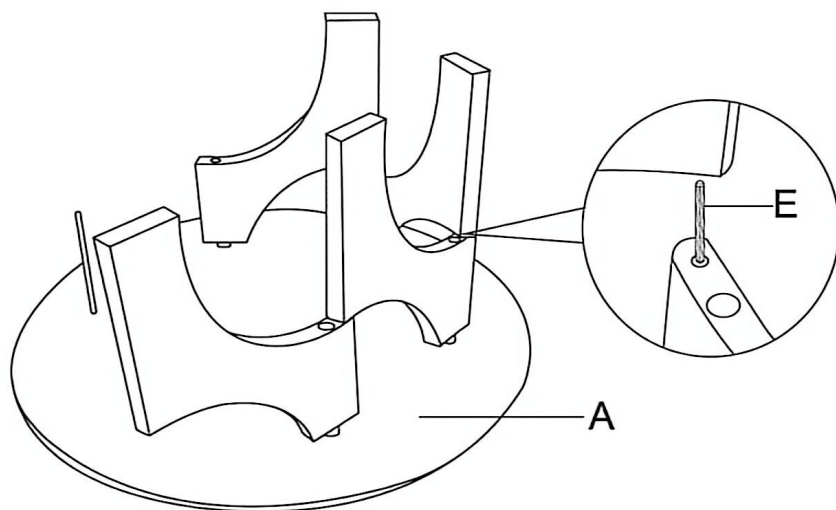


7.

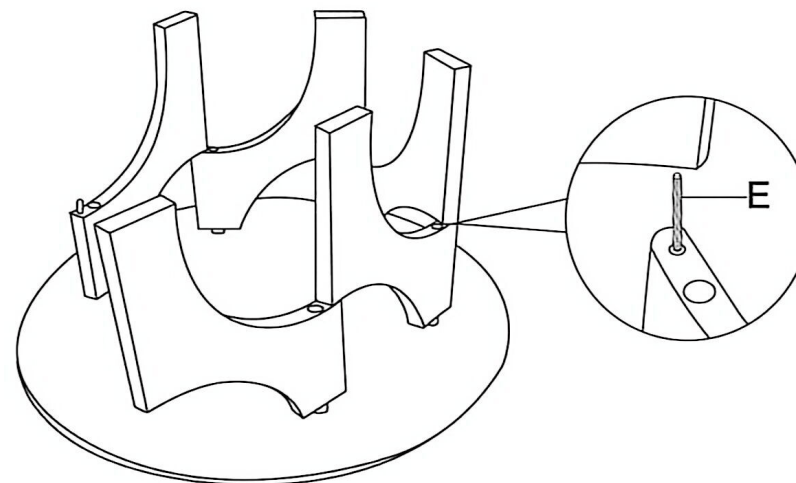

8.

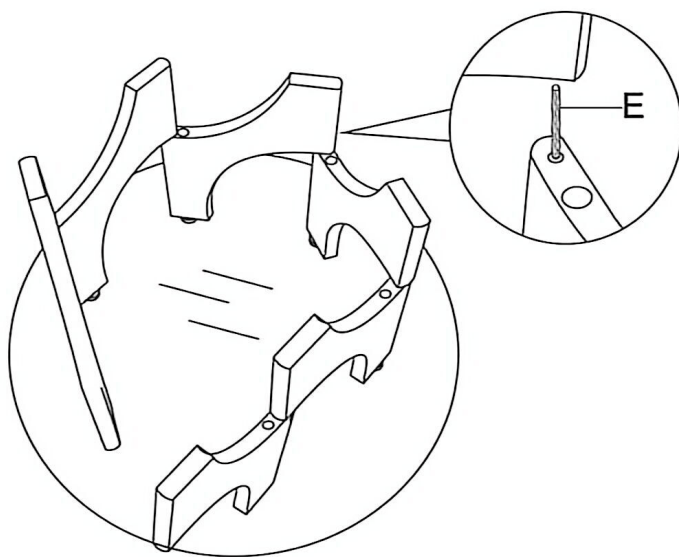


9.

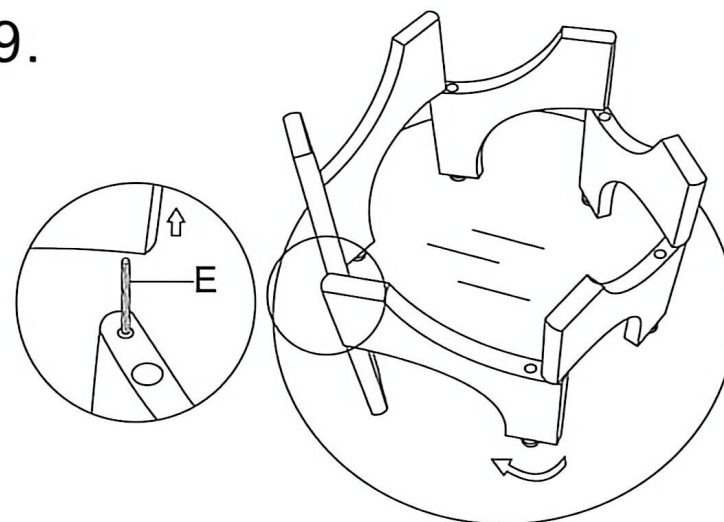


Please lift up a little bit to make the last one leg assemble to the first leg, and fit the leg into the wood connecting stick

10.

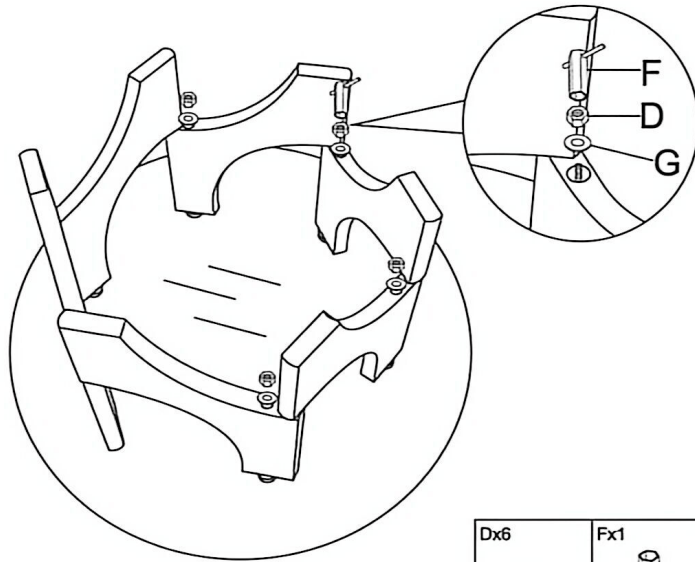

Dx6	Fx1	Gx6
		
		M8x18mm

11.

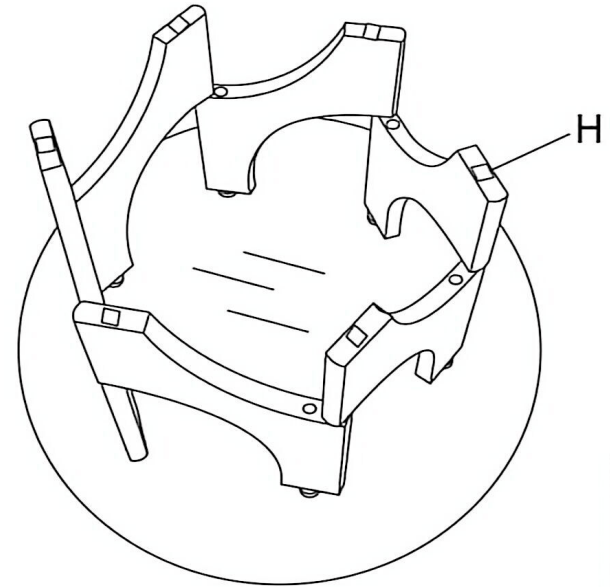

Hx6


12.

