


ASSEMBLY INSTRUCTIONS

DRESSER & MIRROR

Questions? Contact our Customer Experience Team at Toll Free

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts that may have come loose inside the carton during shipment.

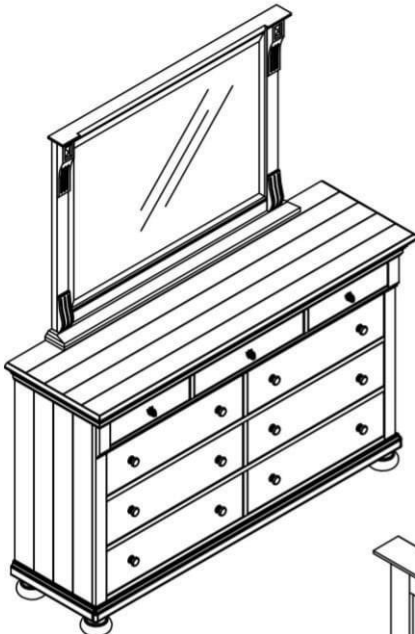


COMPLETE ASSEMBLY

PLACE WOOD PARTS ON A
CLEAN NON-ABRASIVE SURFACE

| PARTS LIST | | | |
|------------|----------------|--------|-------|
| NO | DESCRIPTION | SKETCH | QTY |
| 1 | MIRROR | | 1 PC |
| 2 | DRESSER | | 1 PC |
| 3 | MIRROR SUPPORT | | 2 PCS |

| HARDWARE LIST | | | |
|---------------|-----------------------|--------|-------|
| NO | DESCRIPTION | SKETCH | QTY |
| A | JCBC BOLT - M6 x 35mm | | 8 PCS |
| B | SPRING WASHER - M6 | | 8 PCS |
| C | FLAT WASHER - M6 | | 8 PCS |
| D | ALLEN KEY - M4 | | 1 PC |

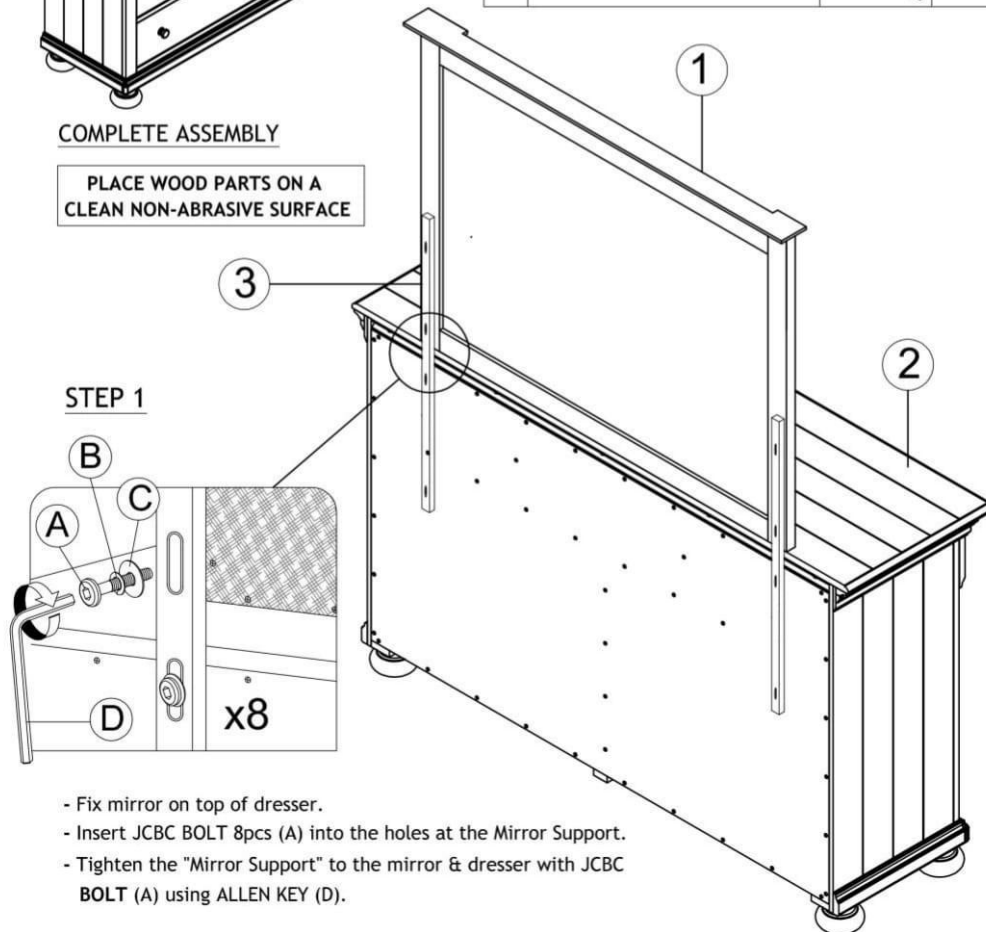

- Fix mirror on top of dresser.
- Insert JCBC BOLT 8pcs (A) into the holes at the Mirror Support.
- Tighten the "Mirror Support" to the mirror & dresser with JCBC BOLT (A) using ALLEN KEY (D).