

ASSEMBLY INSTRUCTIONS


2637Q

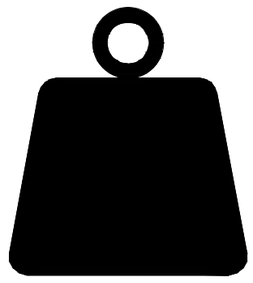


Weight Capacity Max to 500LBS

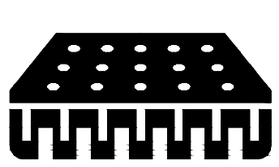








Mattress Size :
80"L x 60"W x (12"-14")H

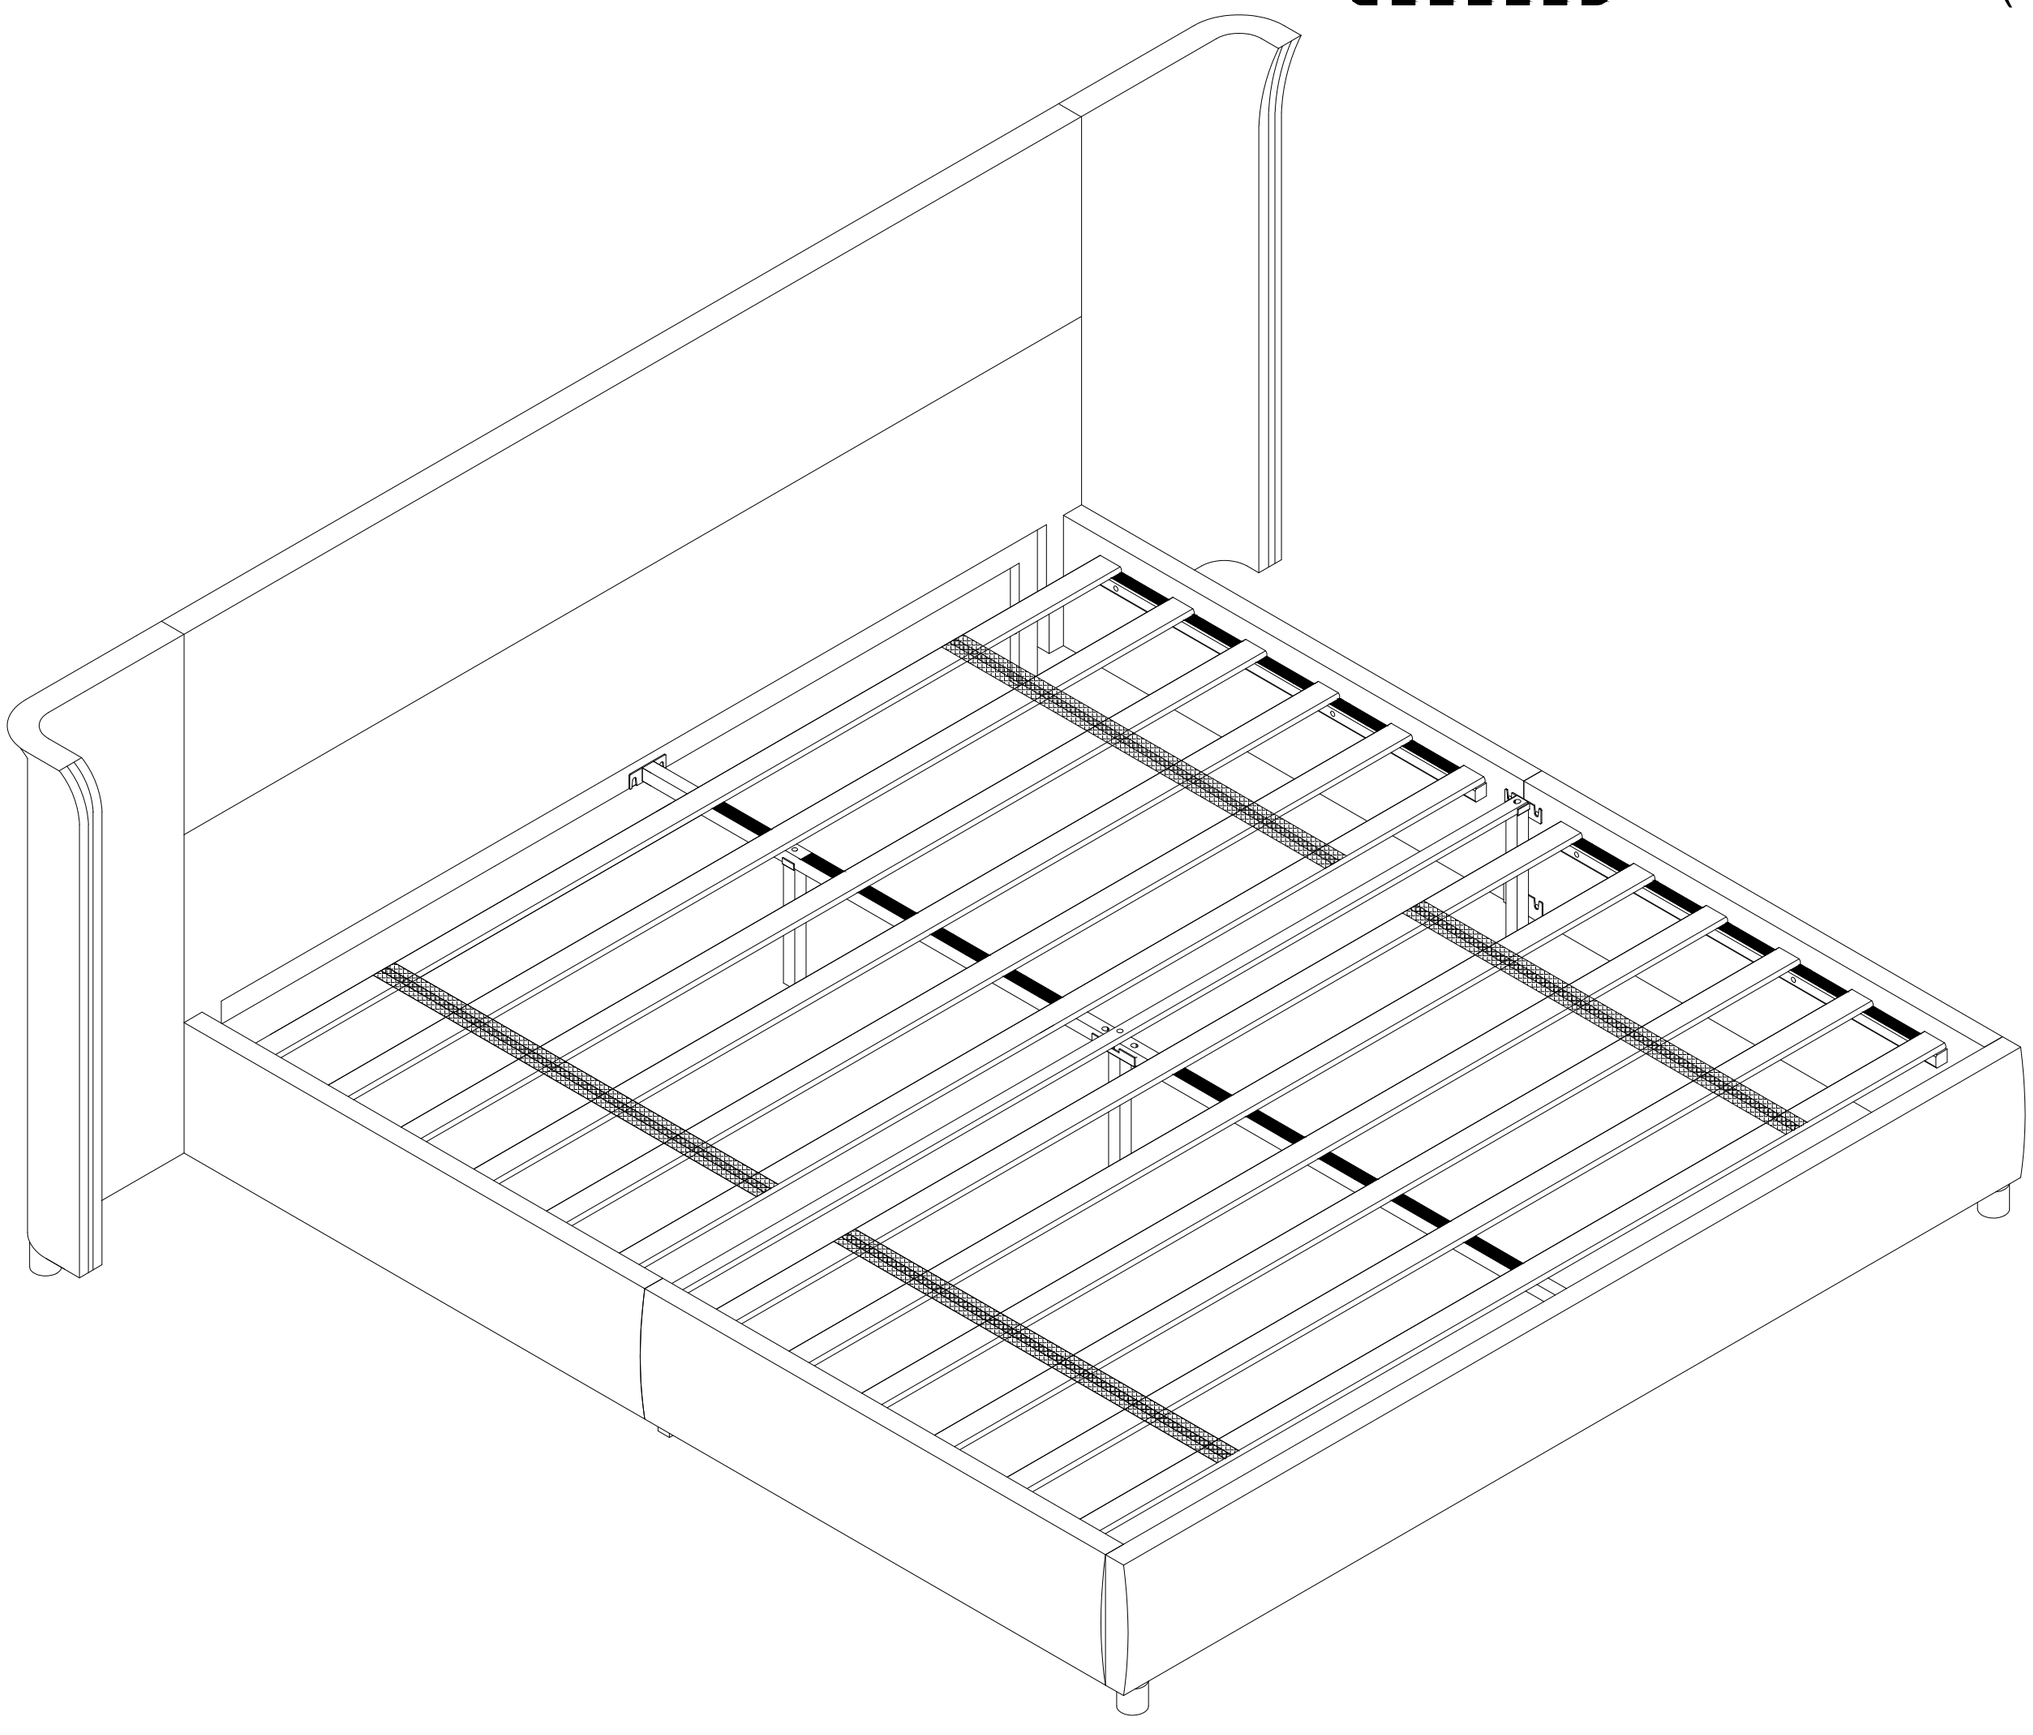


Install all screws according to the instructions, and then tighten them completely.

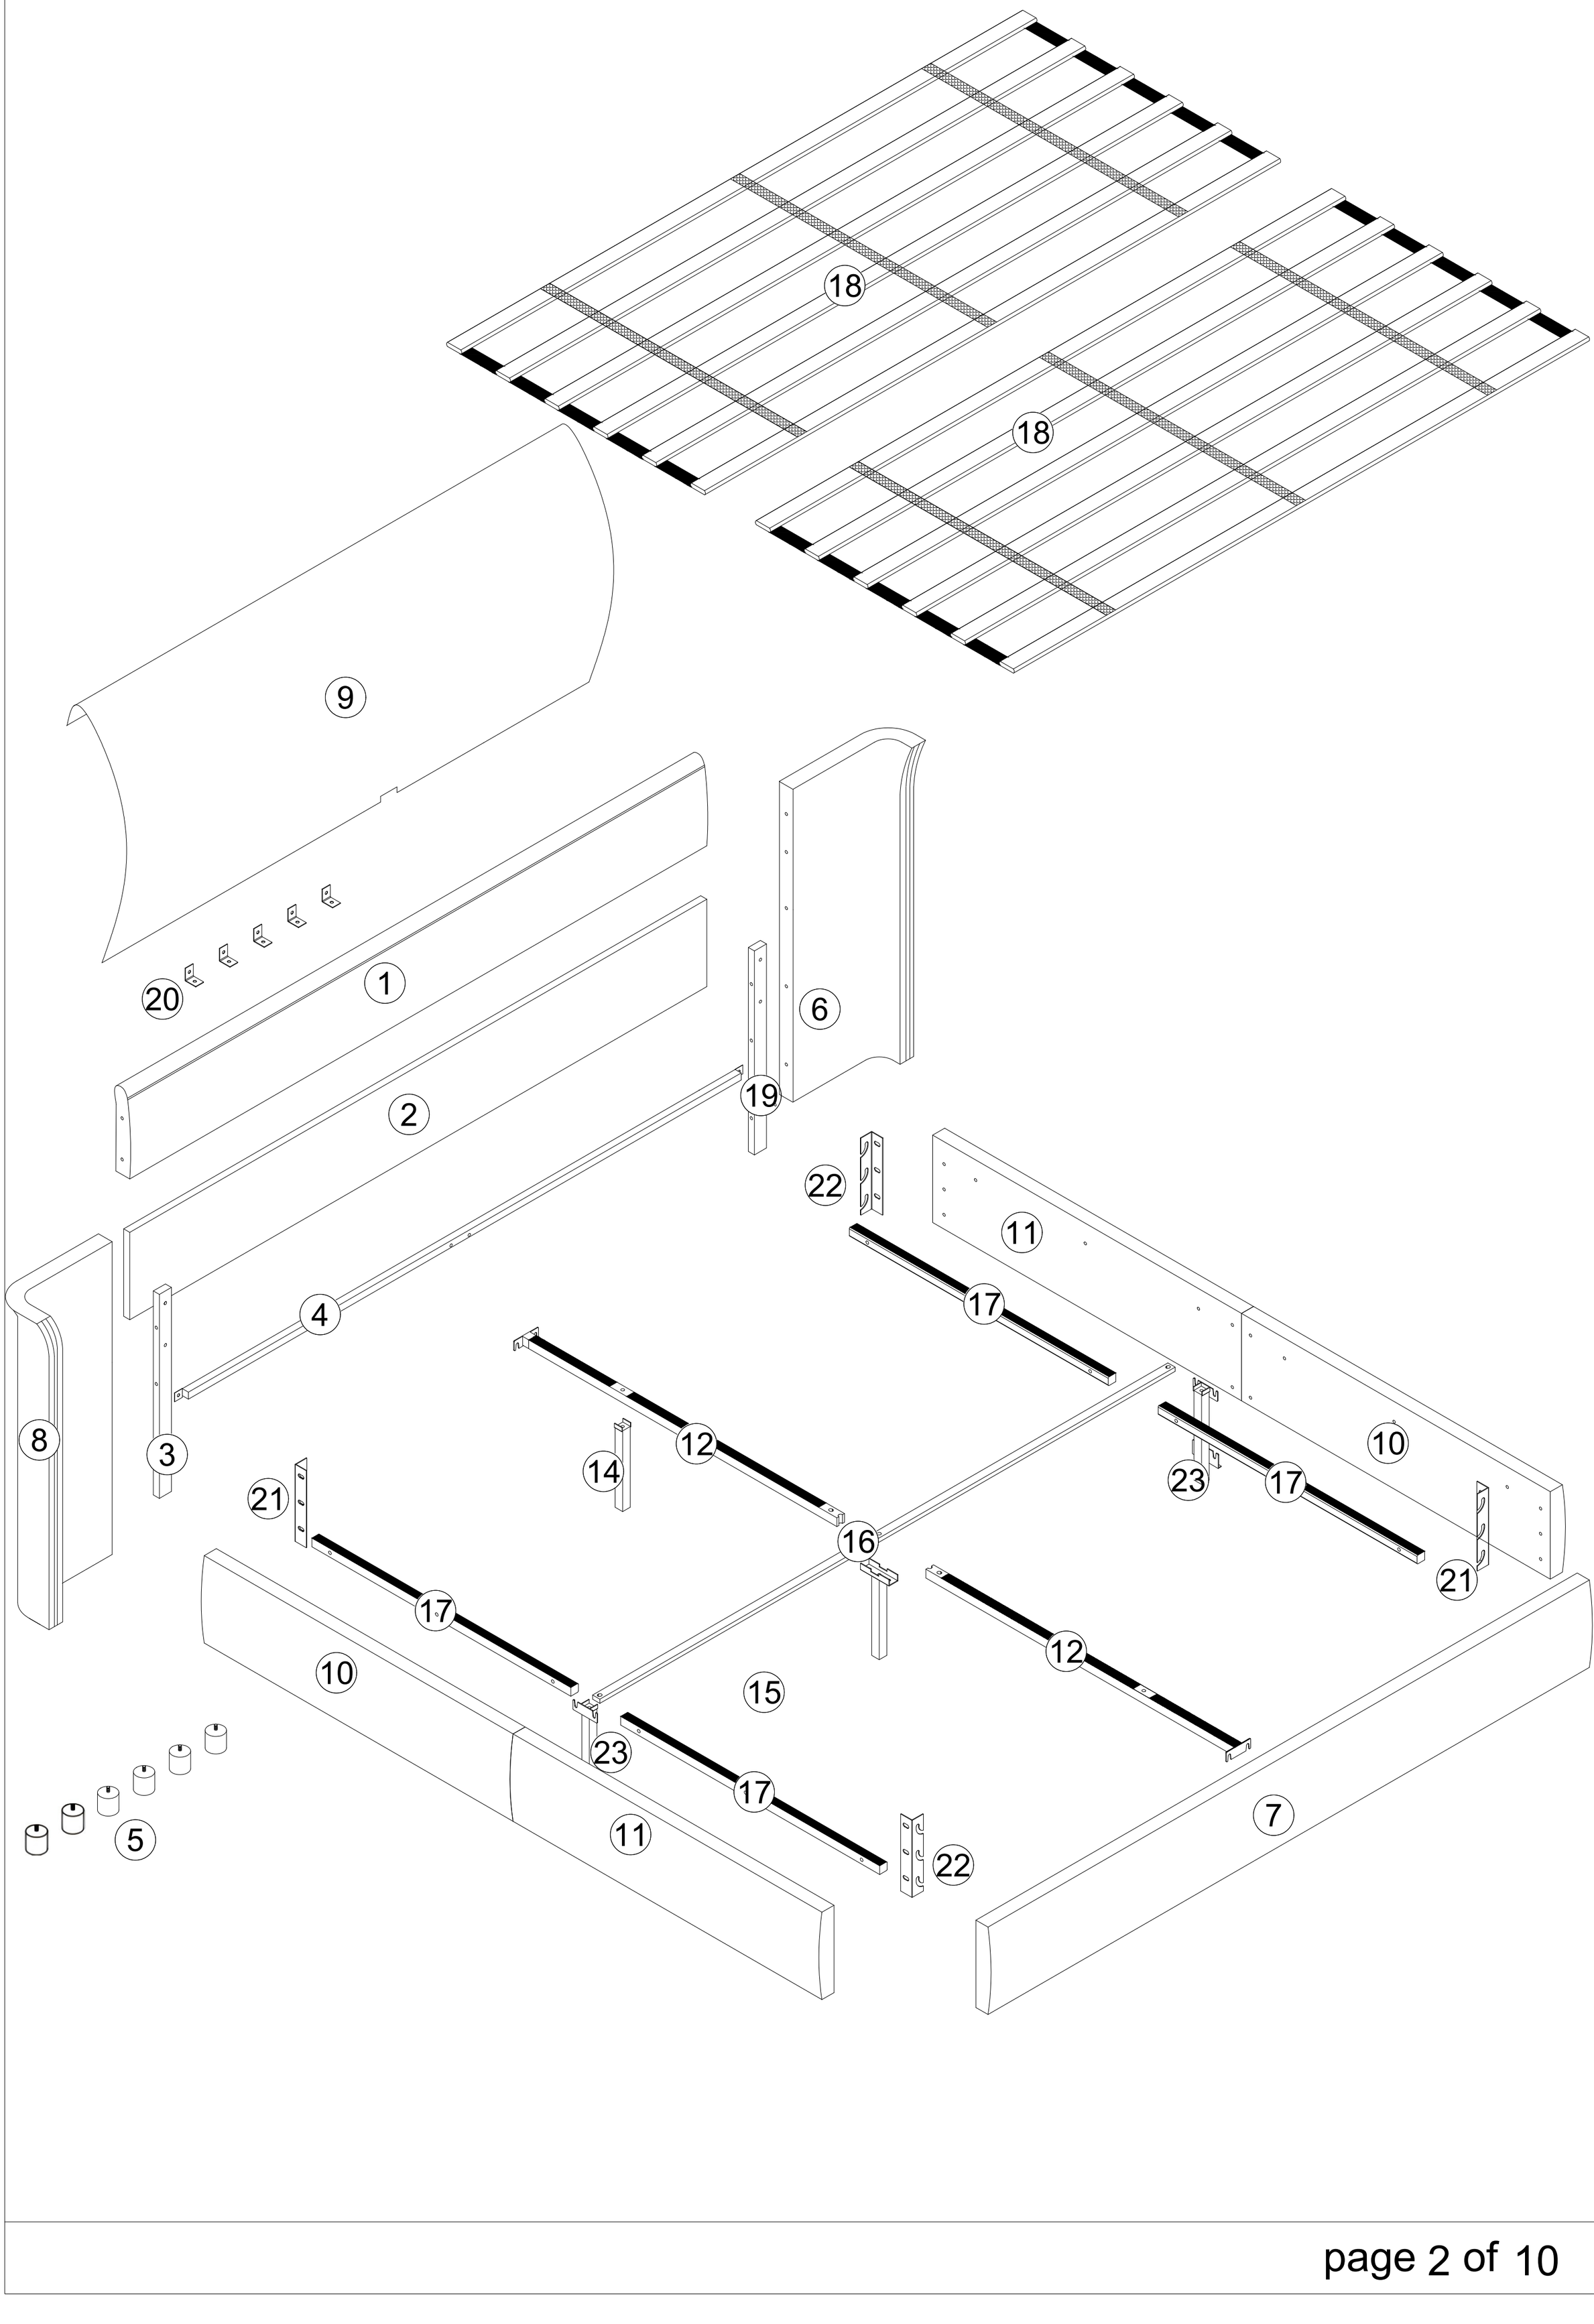
18
18
9
20
1
6
19
2
22
11
4
17
8
3
14
12
10
23
17
21
16
21
17
10
15
12
23
17
11
22
7
5











2637Q-B MEAS: 63*14*8 INCH

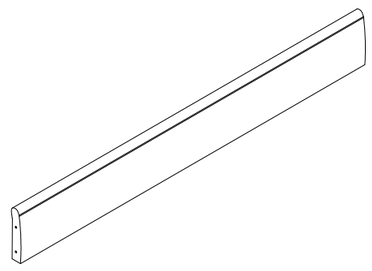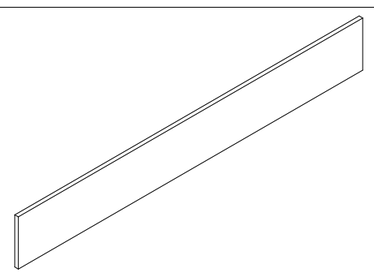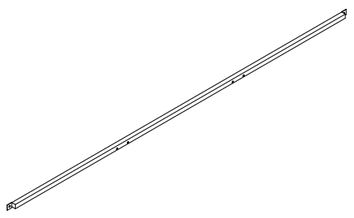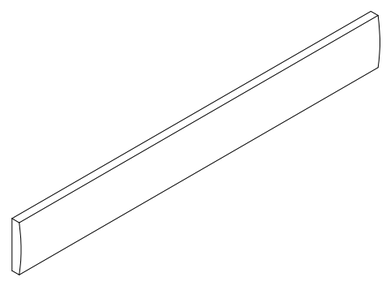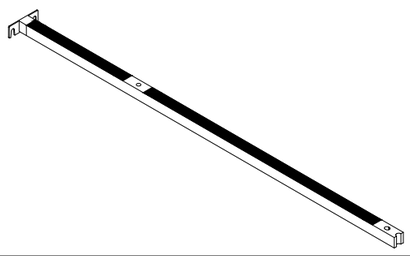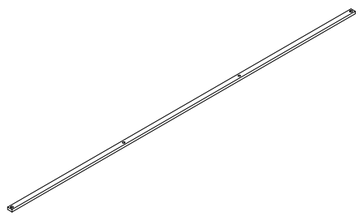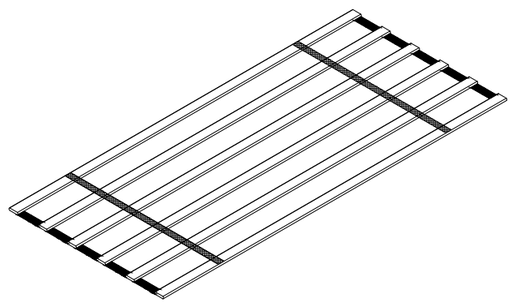	1-(1PC)
	2-(1PC)
	4-(1PC)
	7-(1PC)
	12-(2PCS)
	16-(1PC)
	18-(2PCS)

2637Q-A MEAS: 47*20*15 INCH


 M8*15mm	A-30PCS
M8*20mm	B-18PCS
 M8*40mm	C-26PCS
 M8*65mm	D-6PCS
 M5	E-1PC


2637Q-A MEAS: 47*20*15 INCH

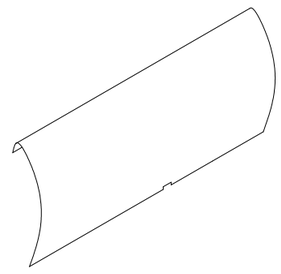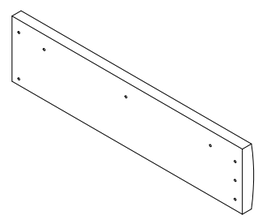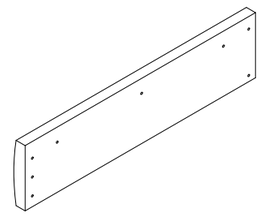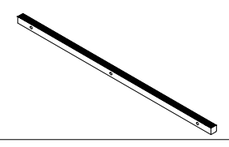	3-(1PC)
	8-(1PC)
	6-(1PC)
 M6*Ø40*13mm	5-(6PCS)
	9-(1PC)
	10-(2PCS)
	11-(2PCS)
	14-(1PC)
	15-(1PC)
	17-(4PCS)
	19-(1PC)
	20-(5PCS)
	21-(2PCS)
	22-(2PCS)
	23-(2PCS)


ASSEMBLY INSTRUCTIONS


STEP 1

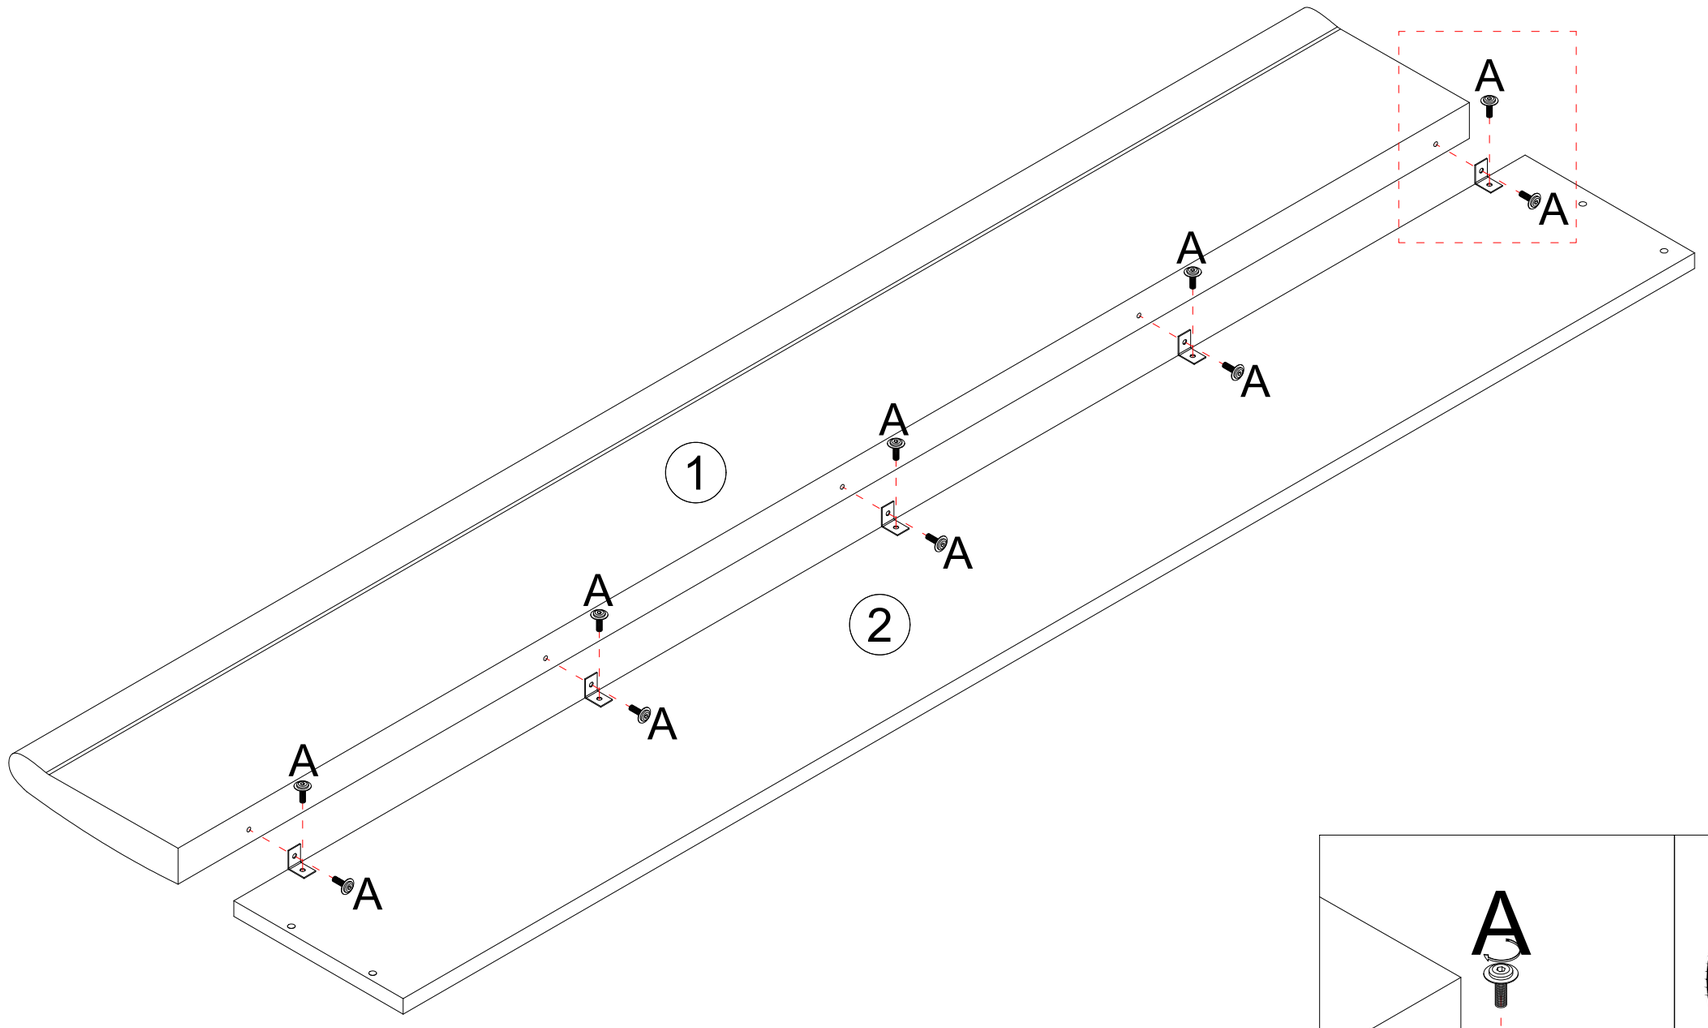

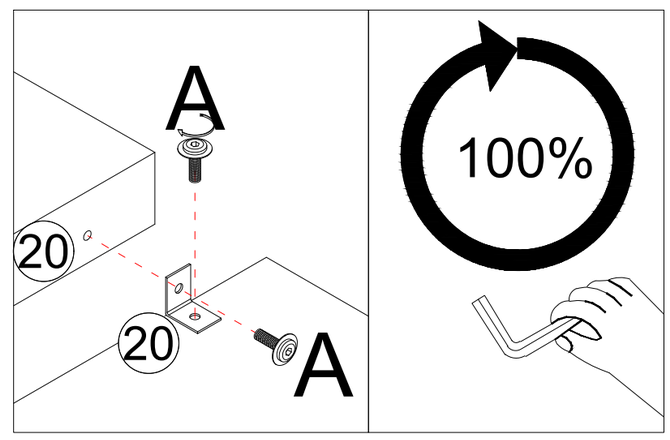


STEP 2

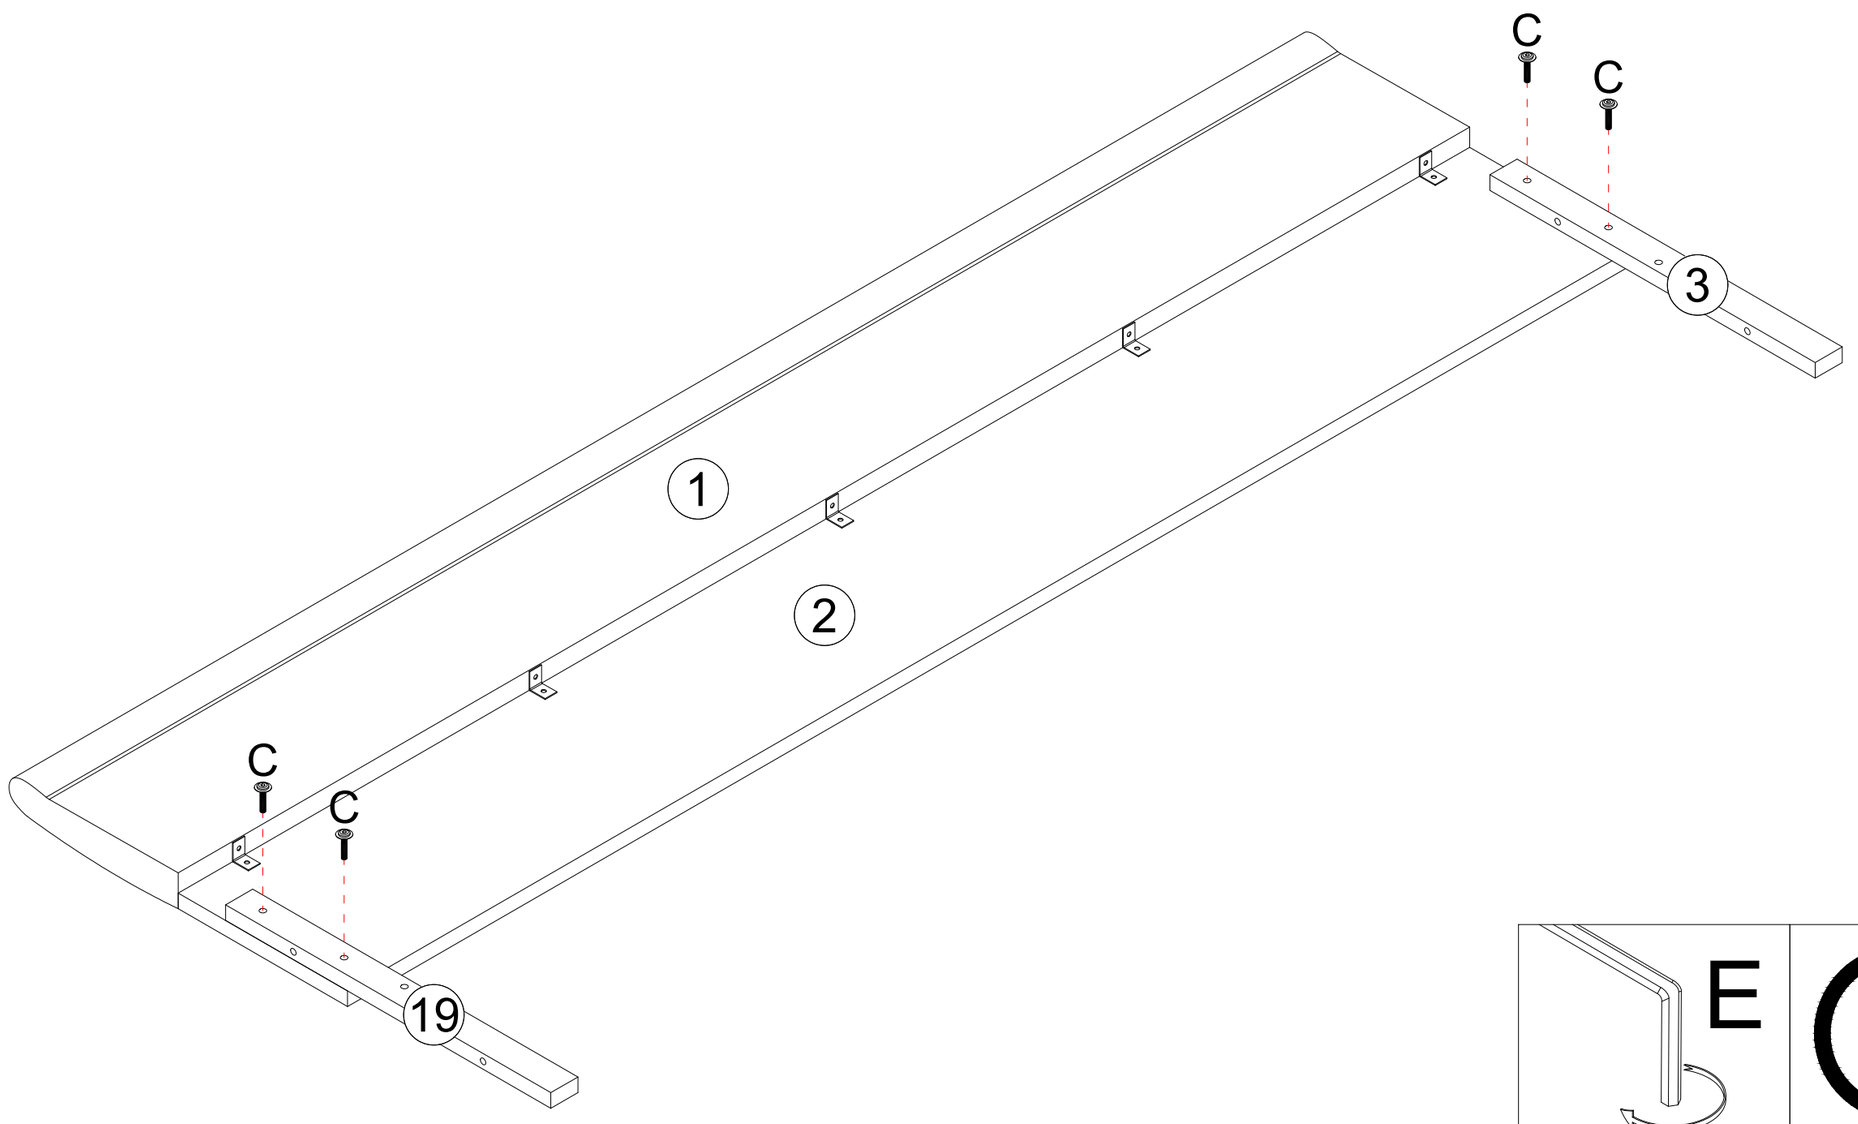


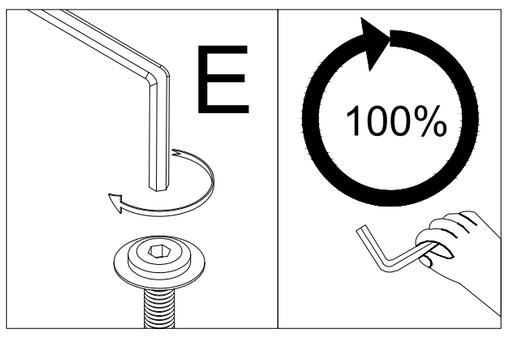


ASSEMBLY INSTRUCTIONS


STEP 3

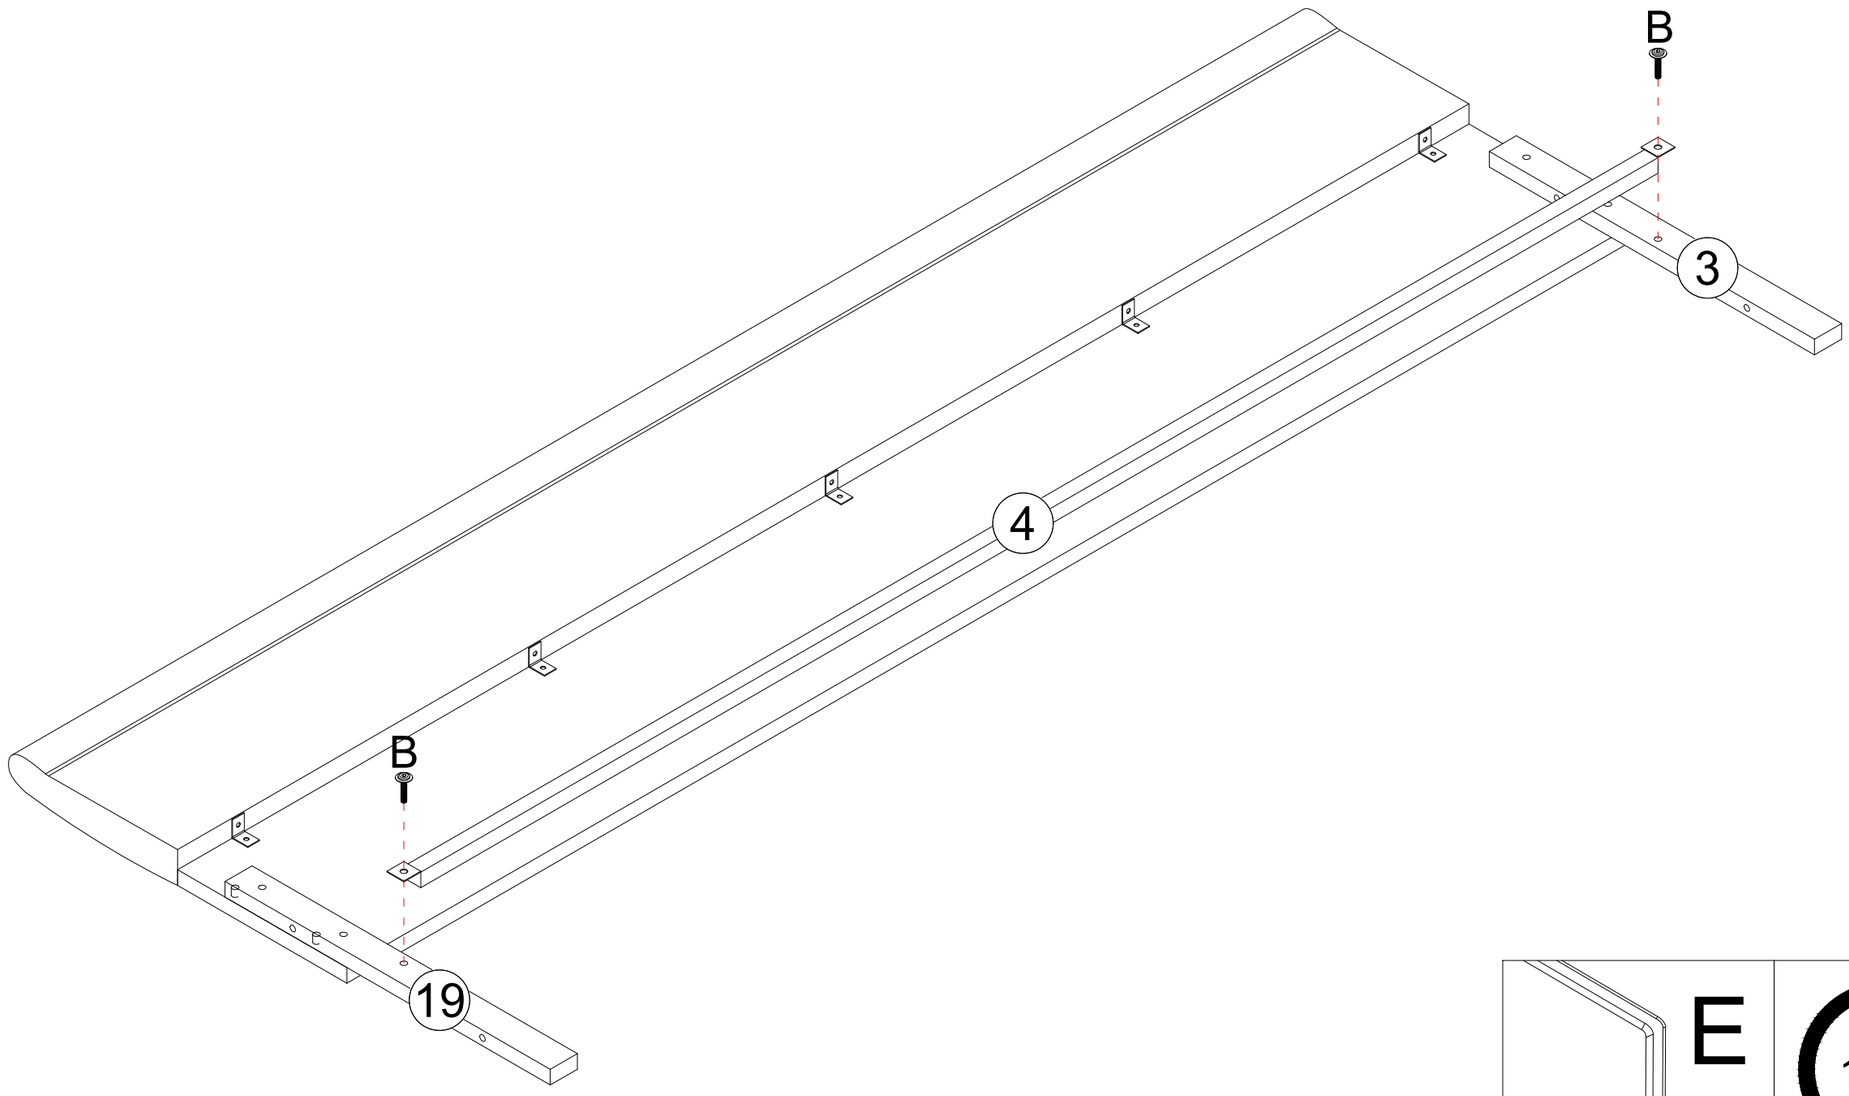


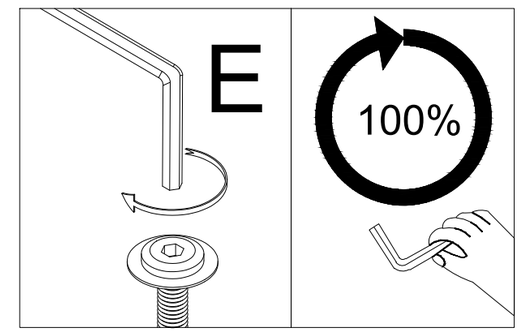

STEP 4

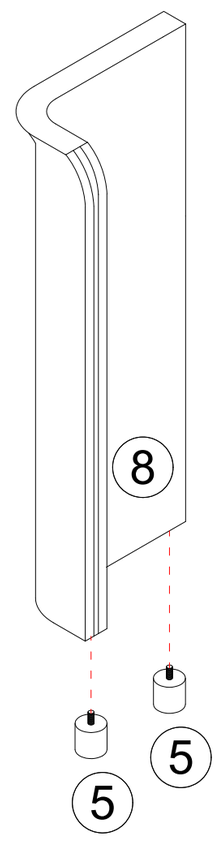


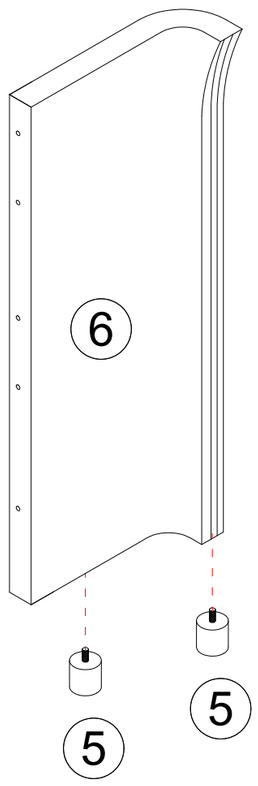

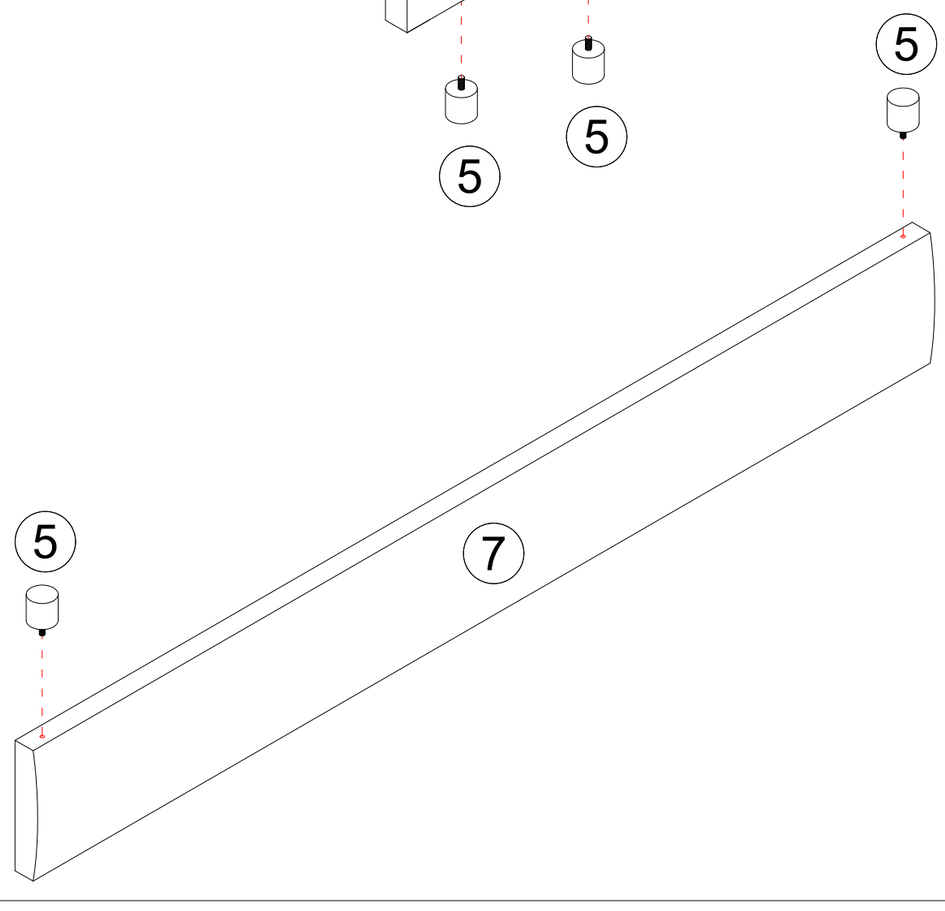


ASSEMBLY INSTRUCTIONS


STEP 5

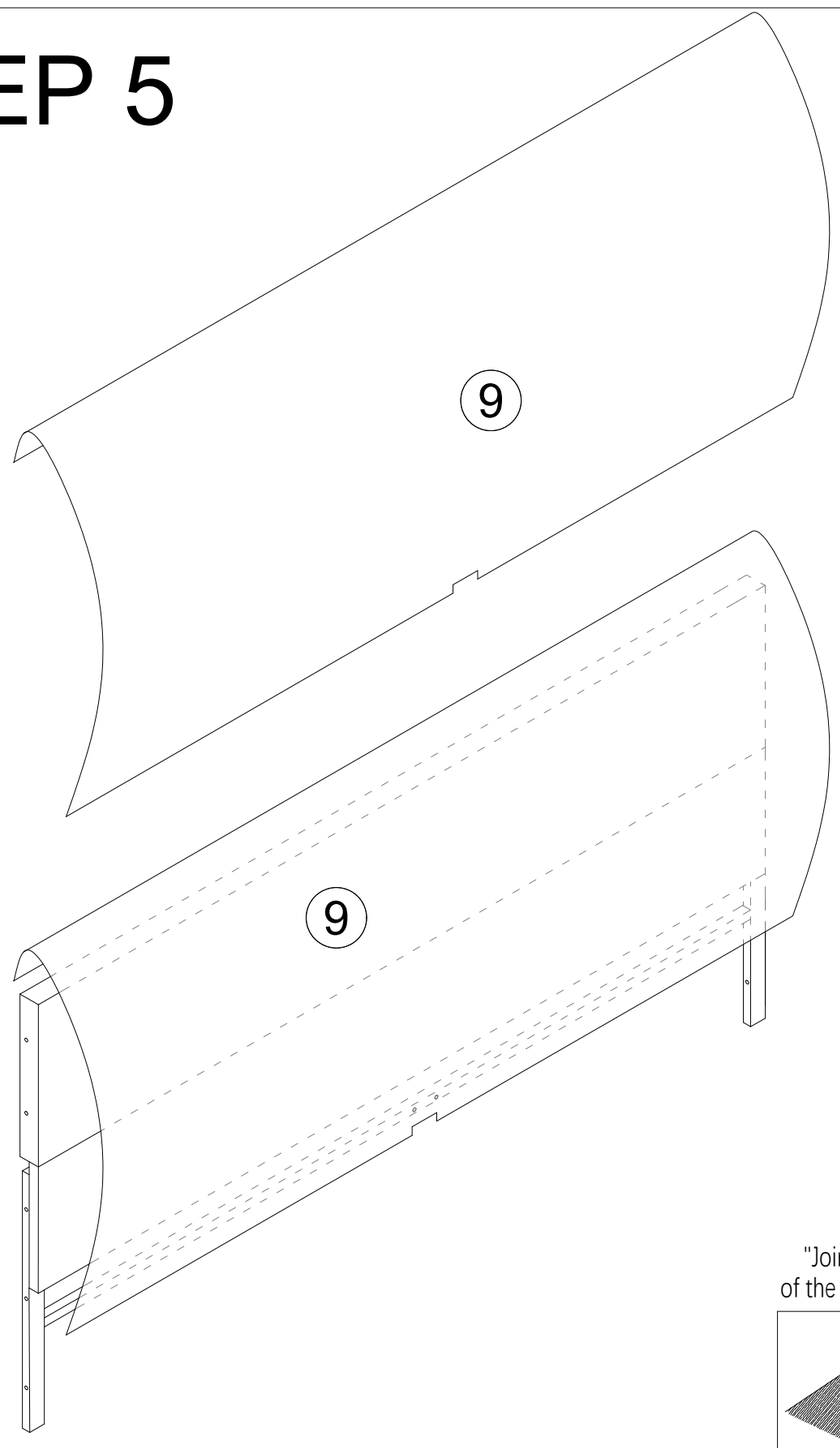


"Join the two sides
of the Velcro to fasten."

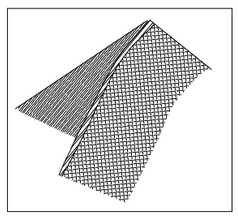


STEP 7

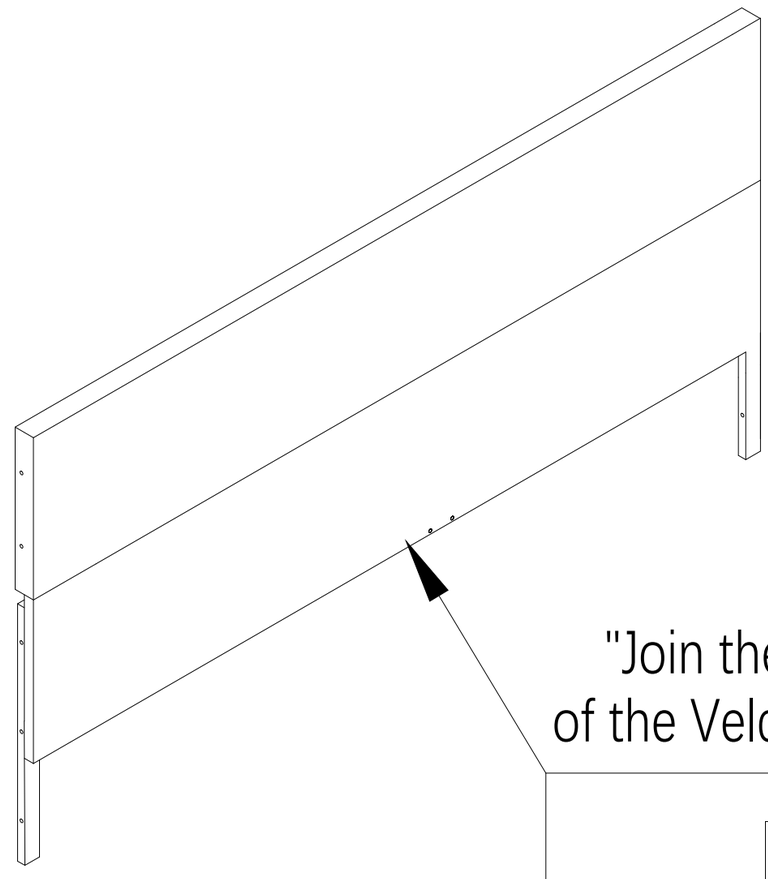


"Join the two sides
of the Velcro to fasten."

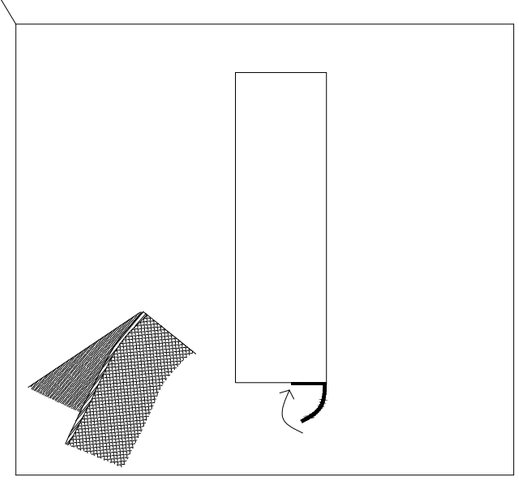


STEP 6

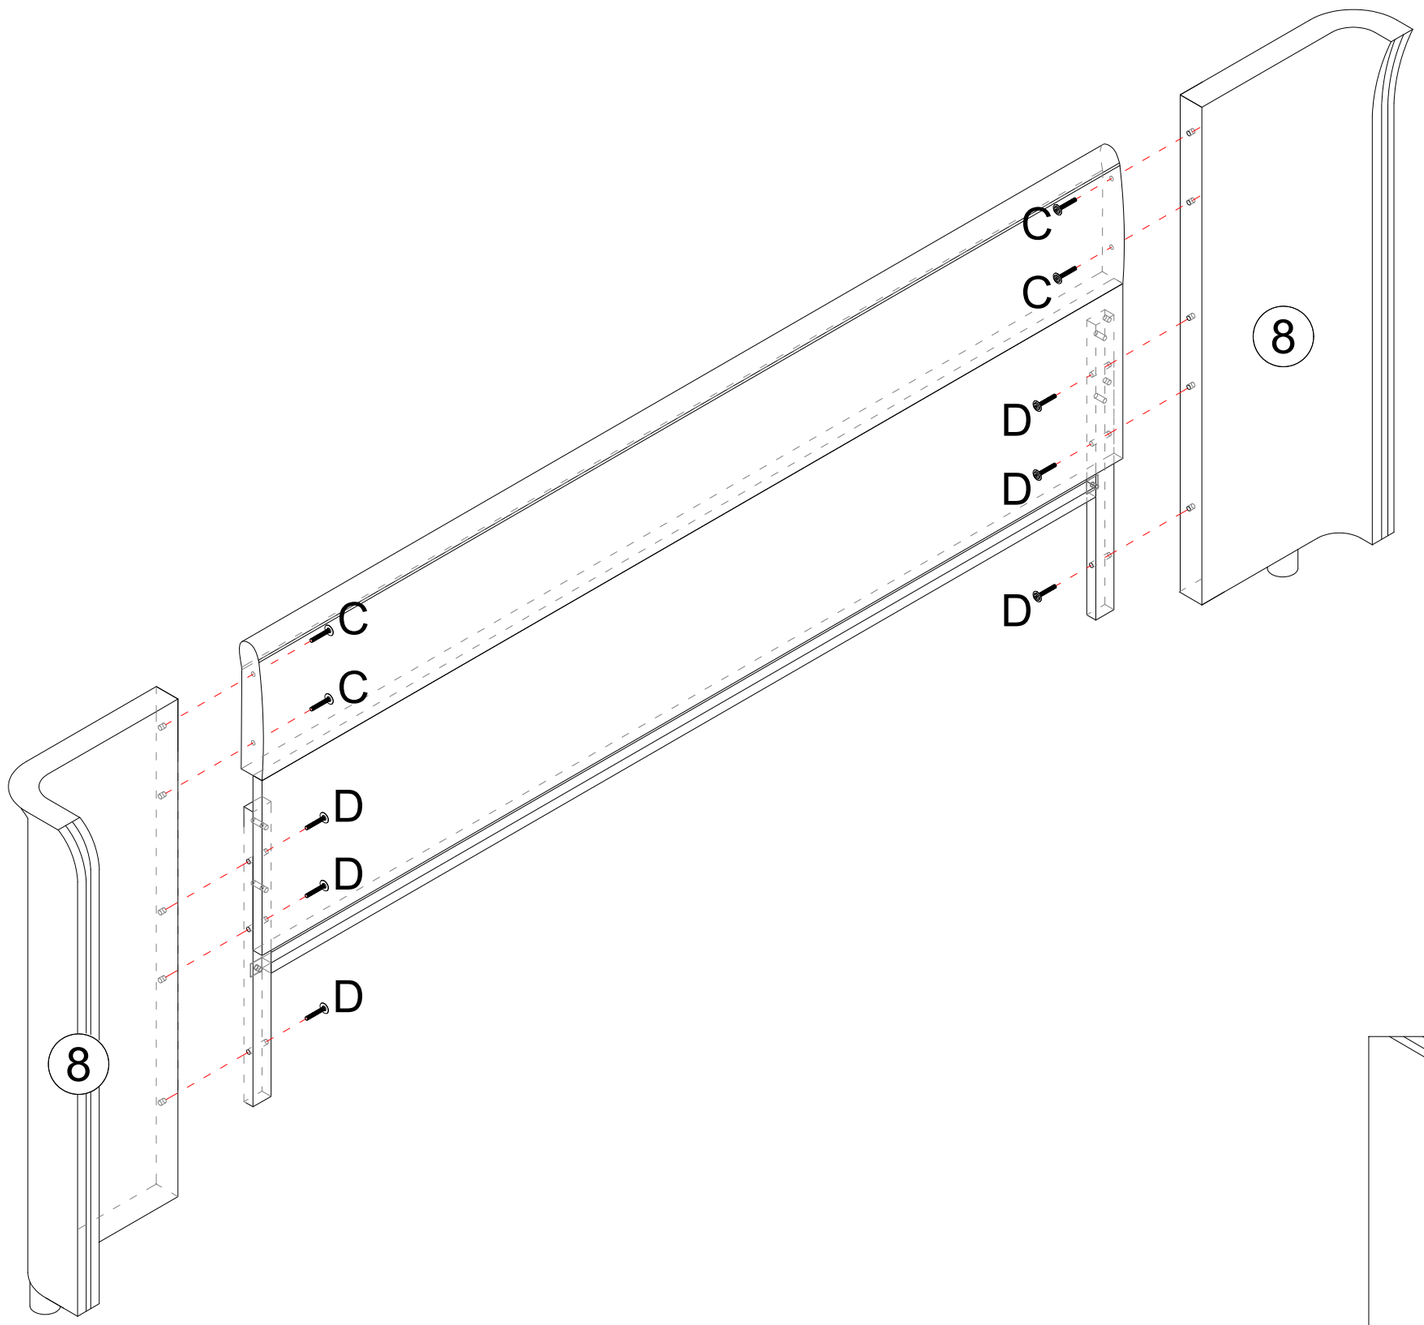

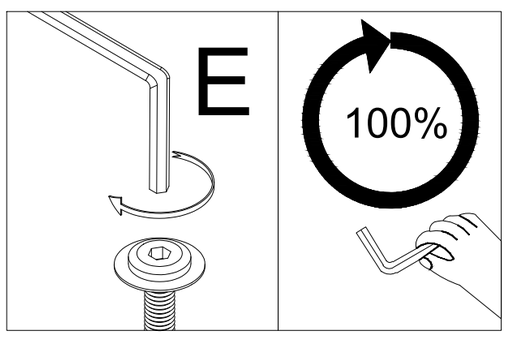


ASSEMBLY INSTRUCTIONS


STEP 8

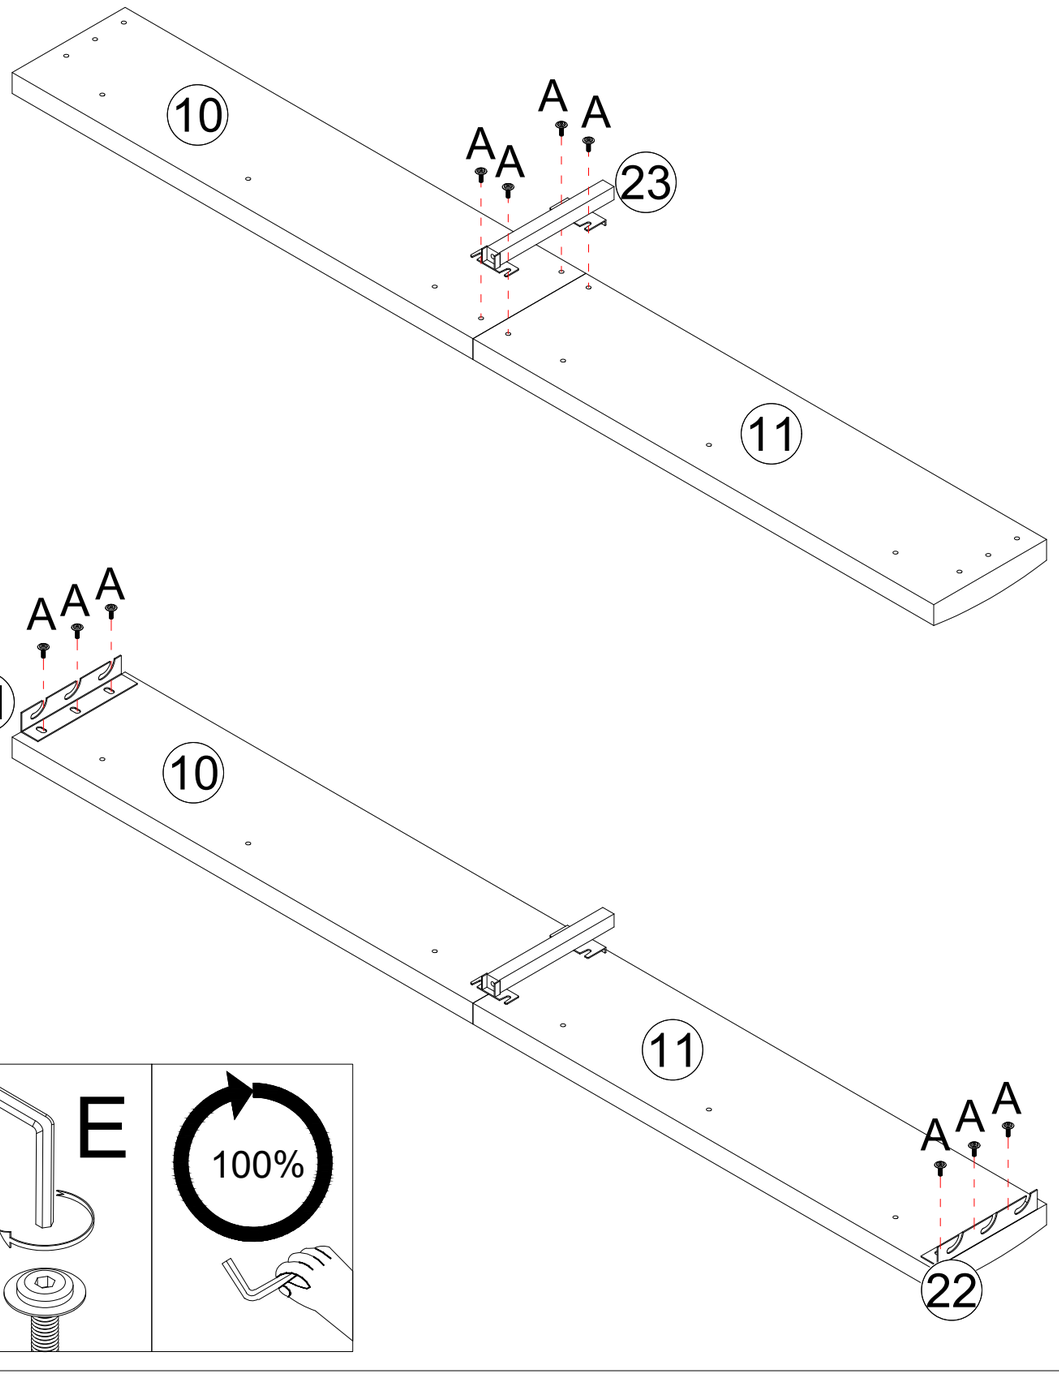

STEP 9

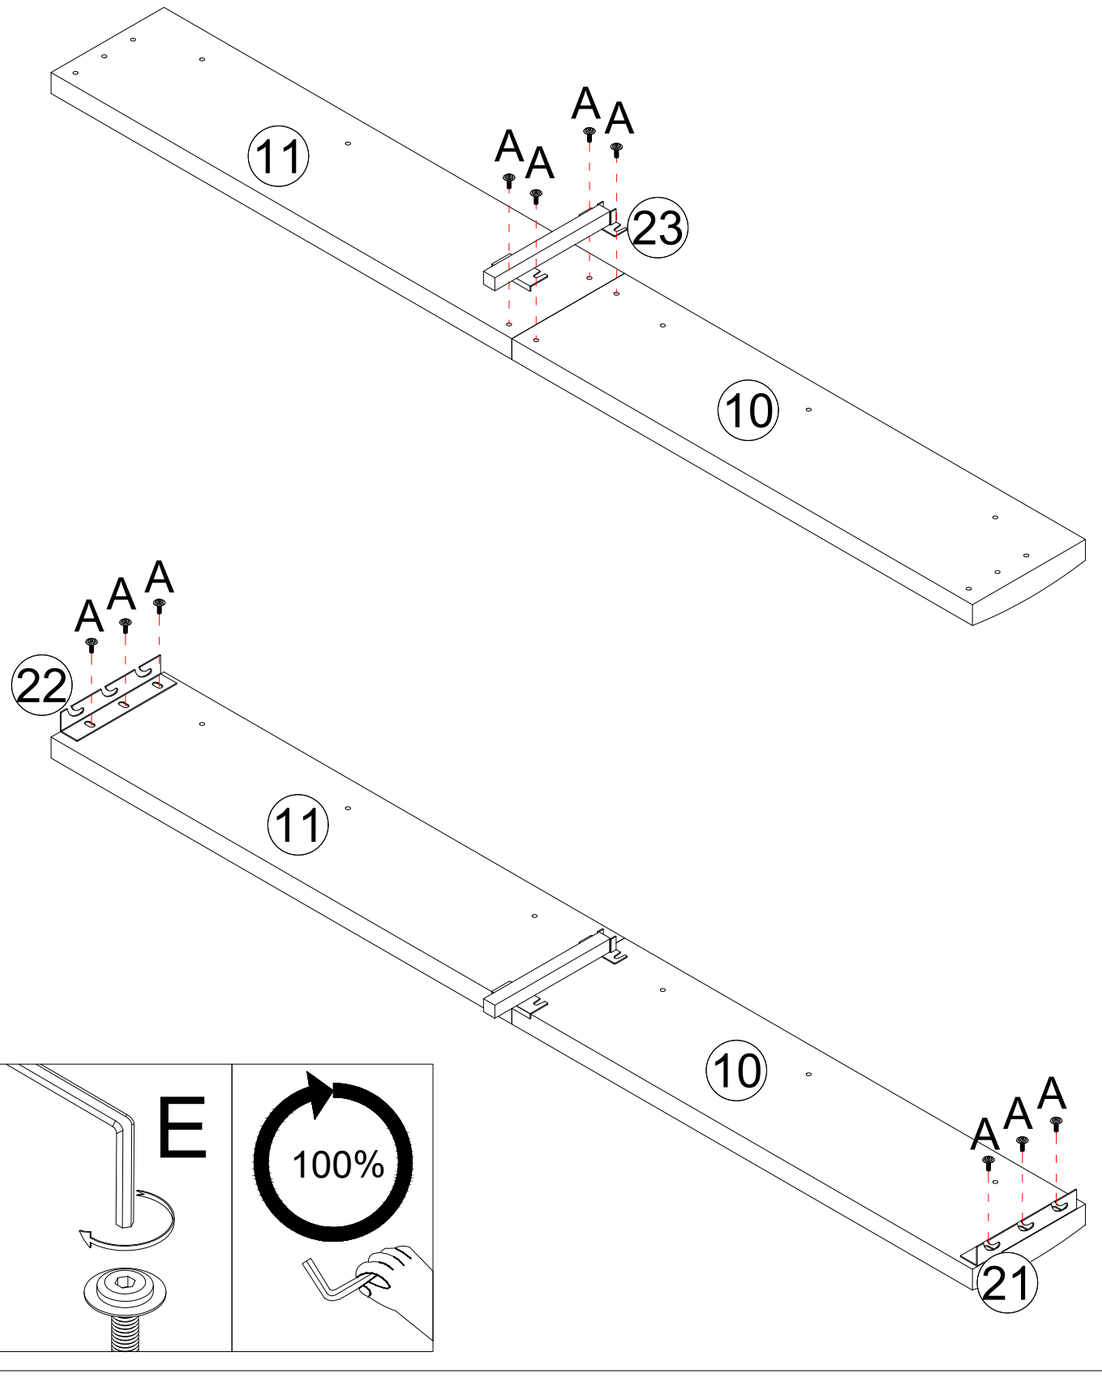



STEP 10

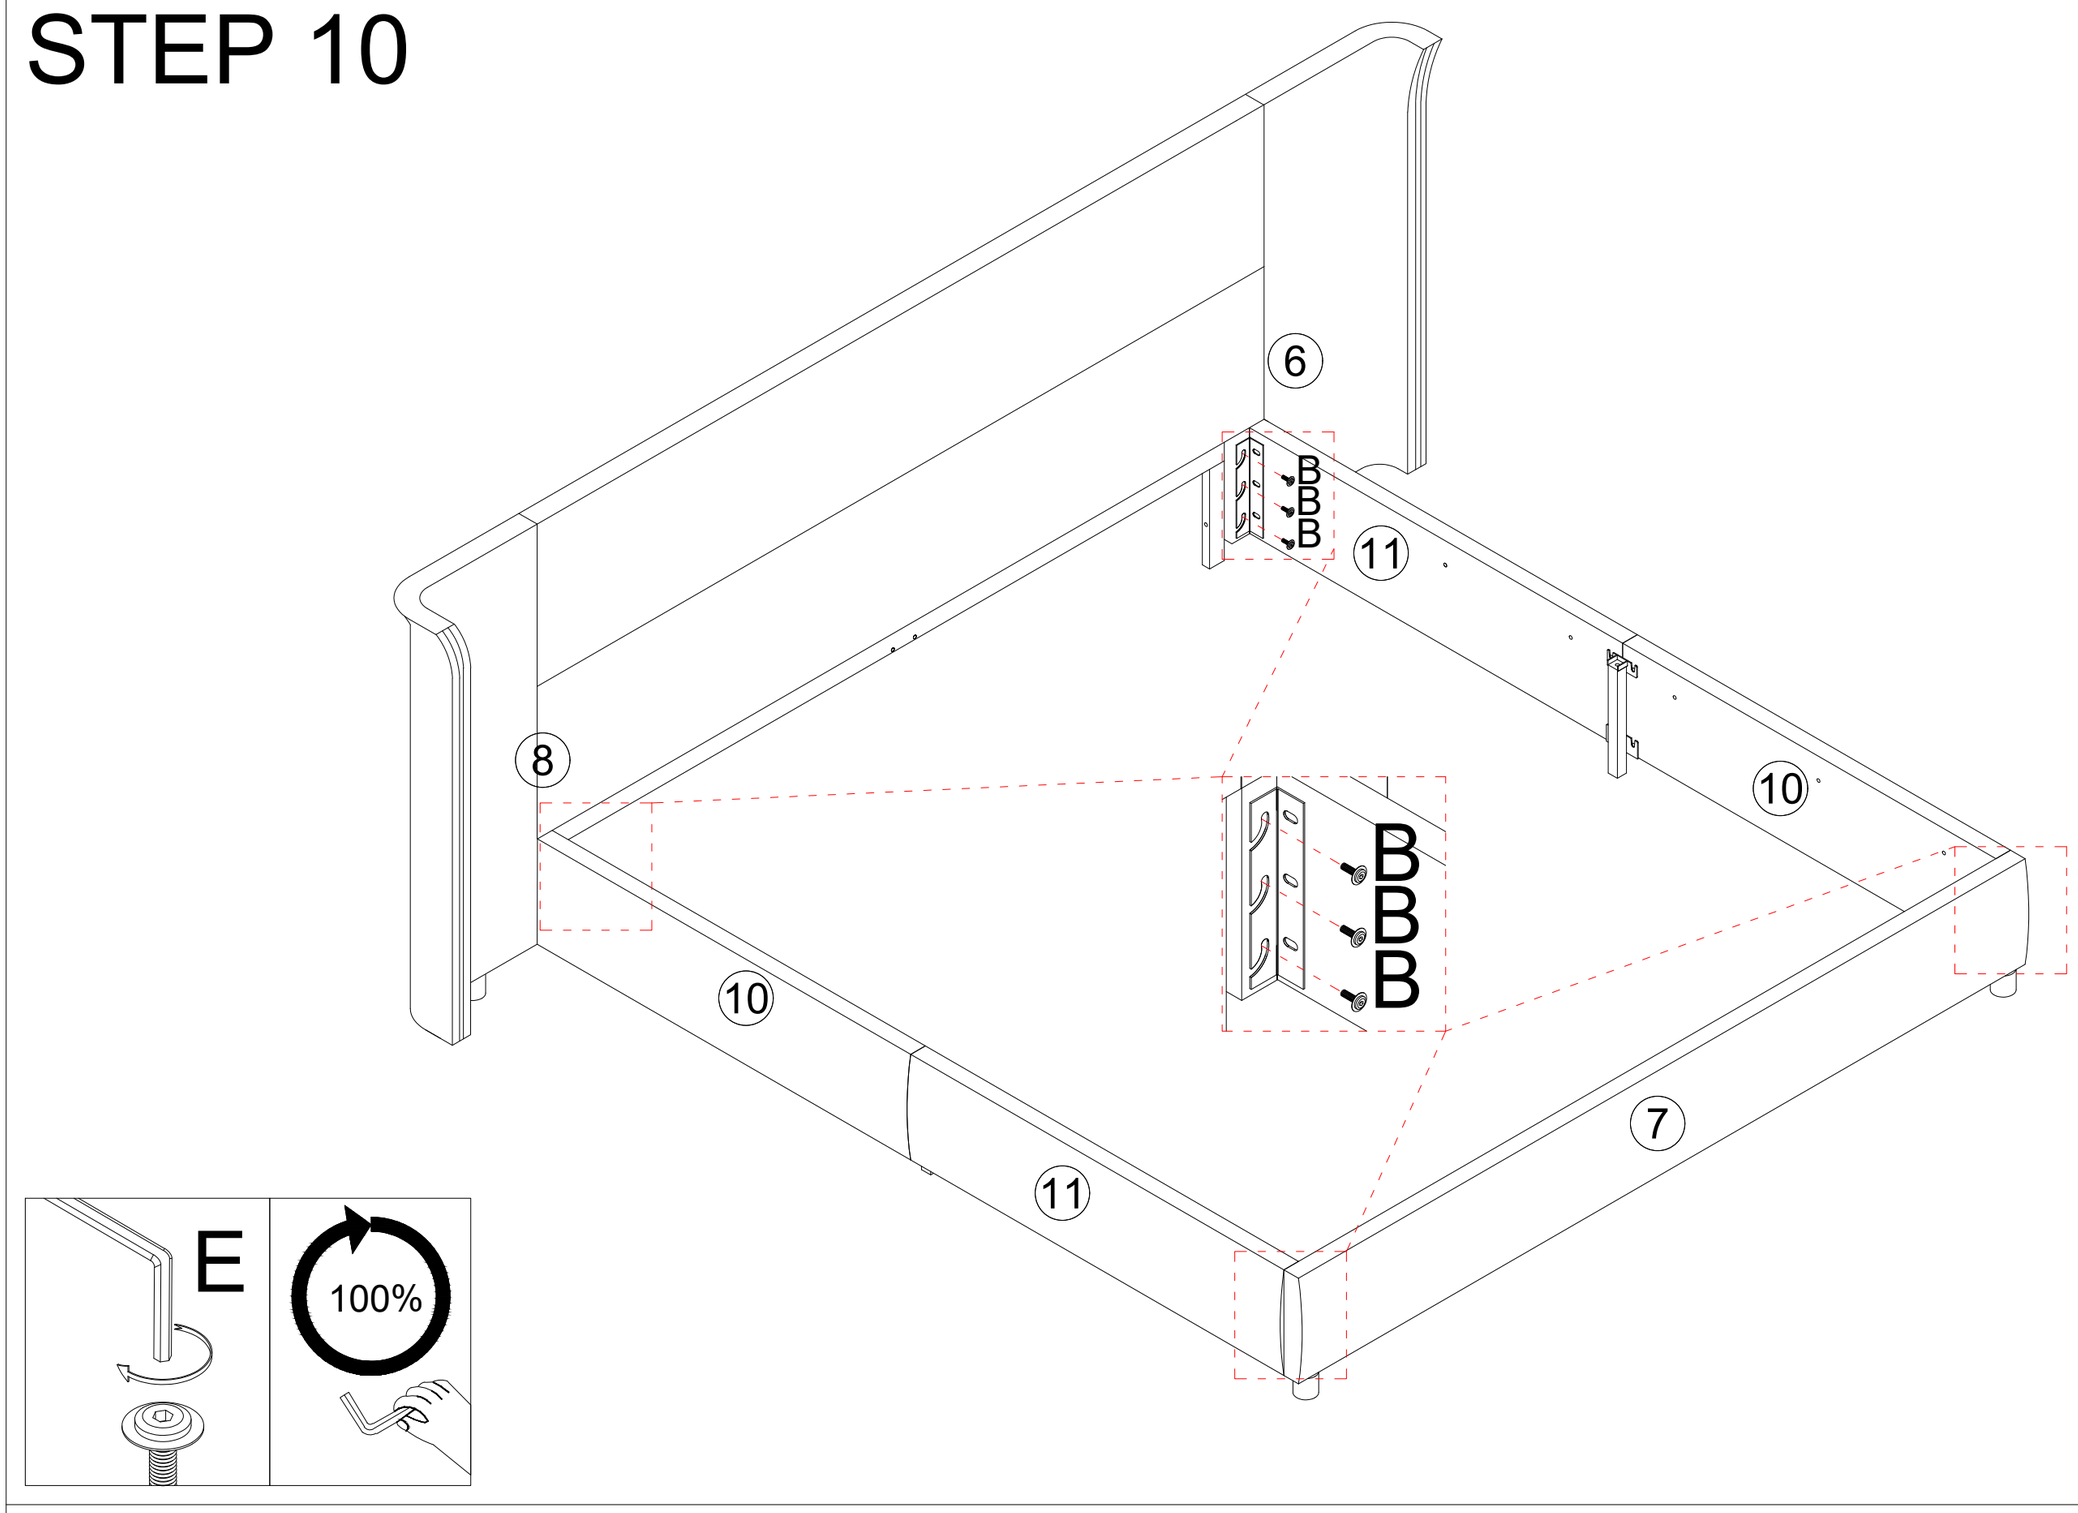



ASSEMBLY INSTRUCTIONS

STEP 11

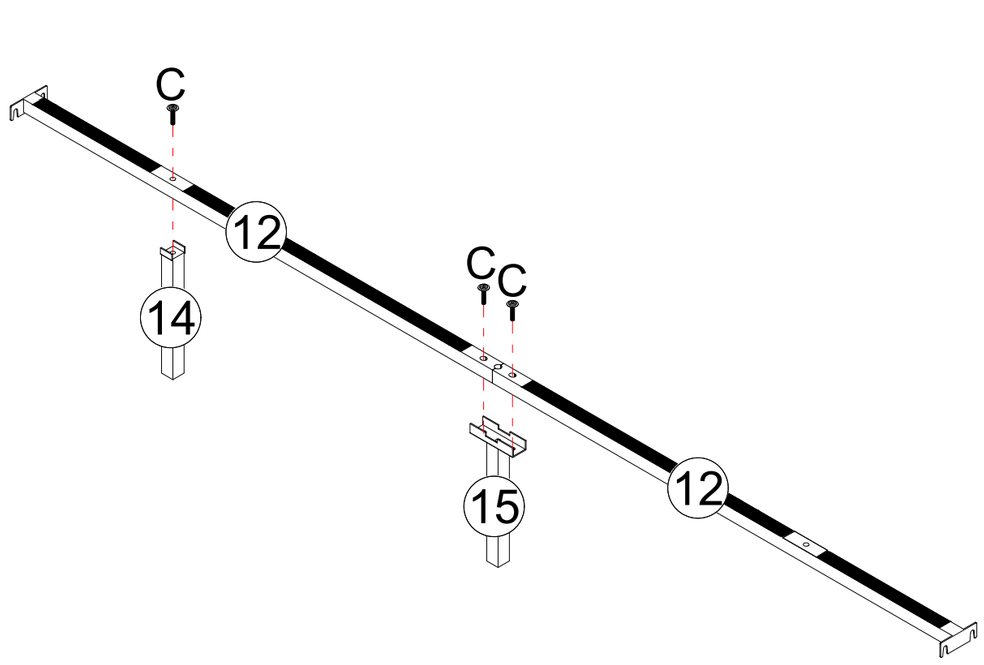


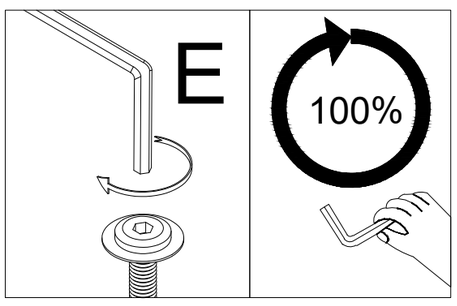

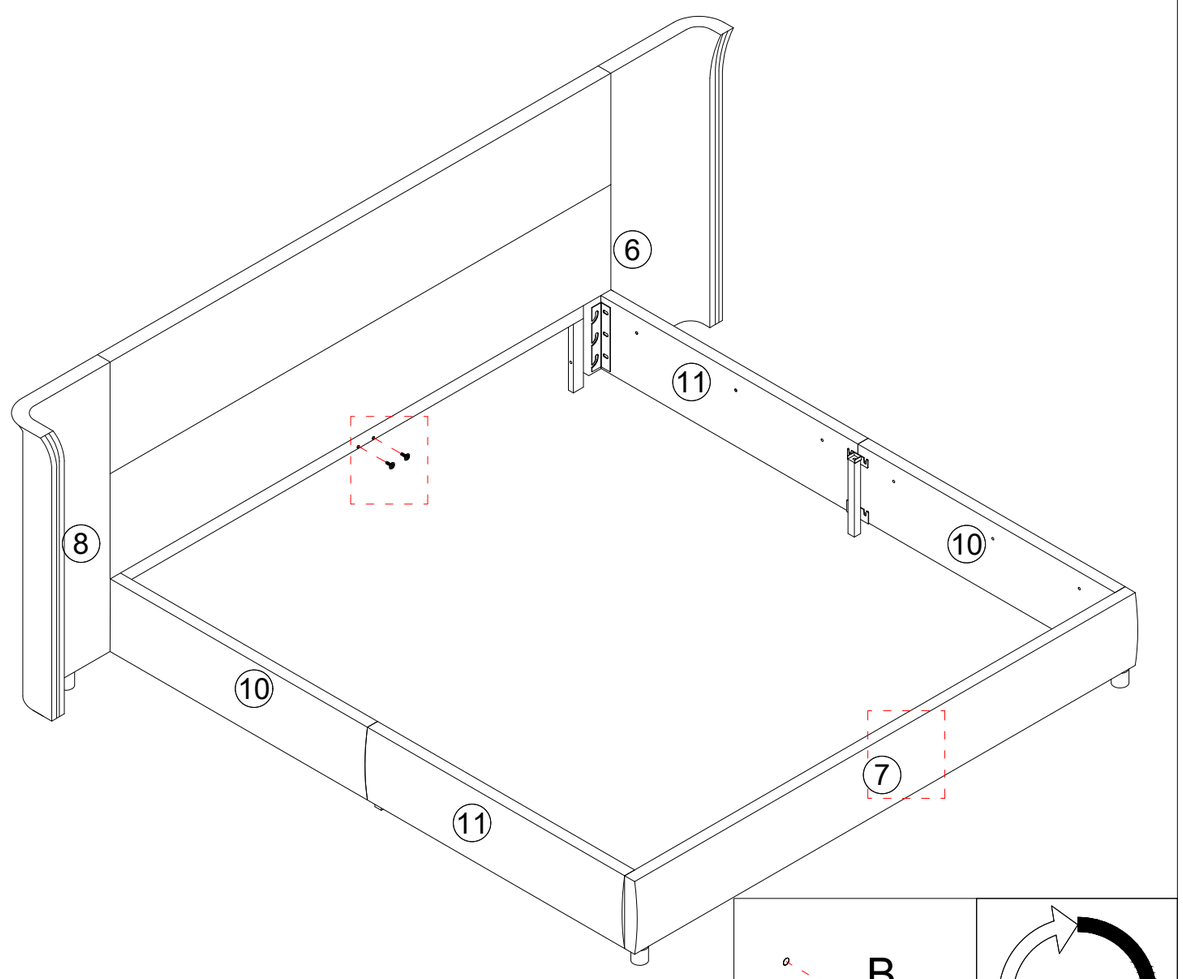

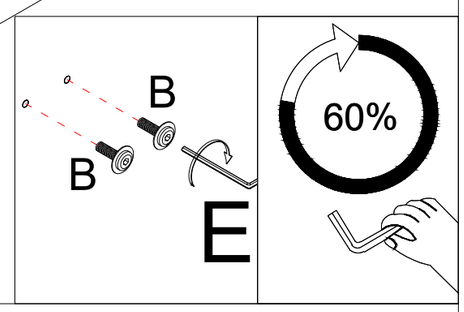



STEP 12

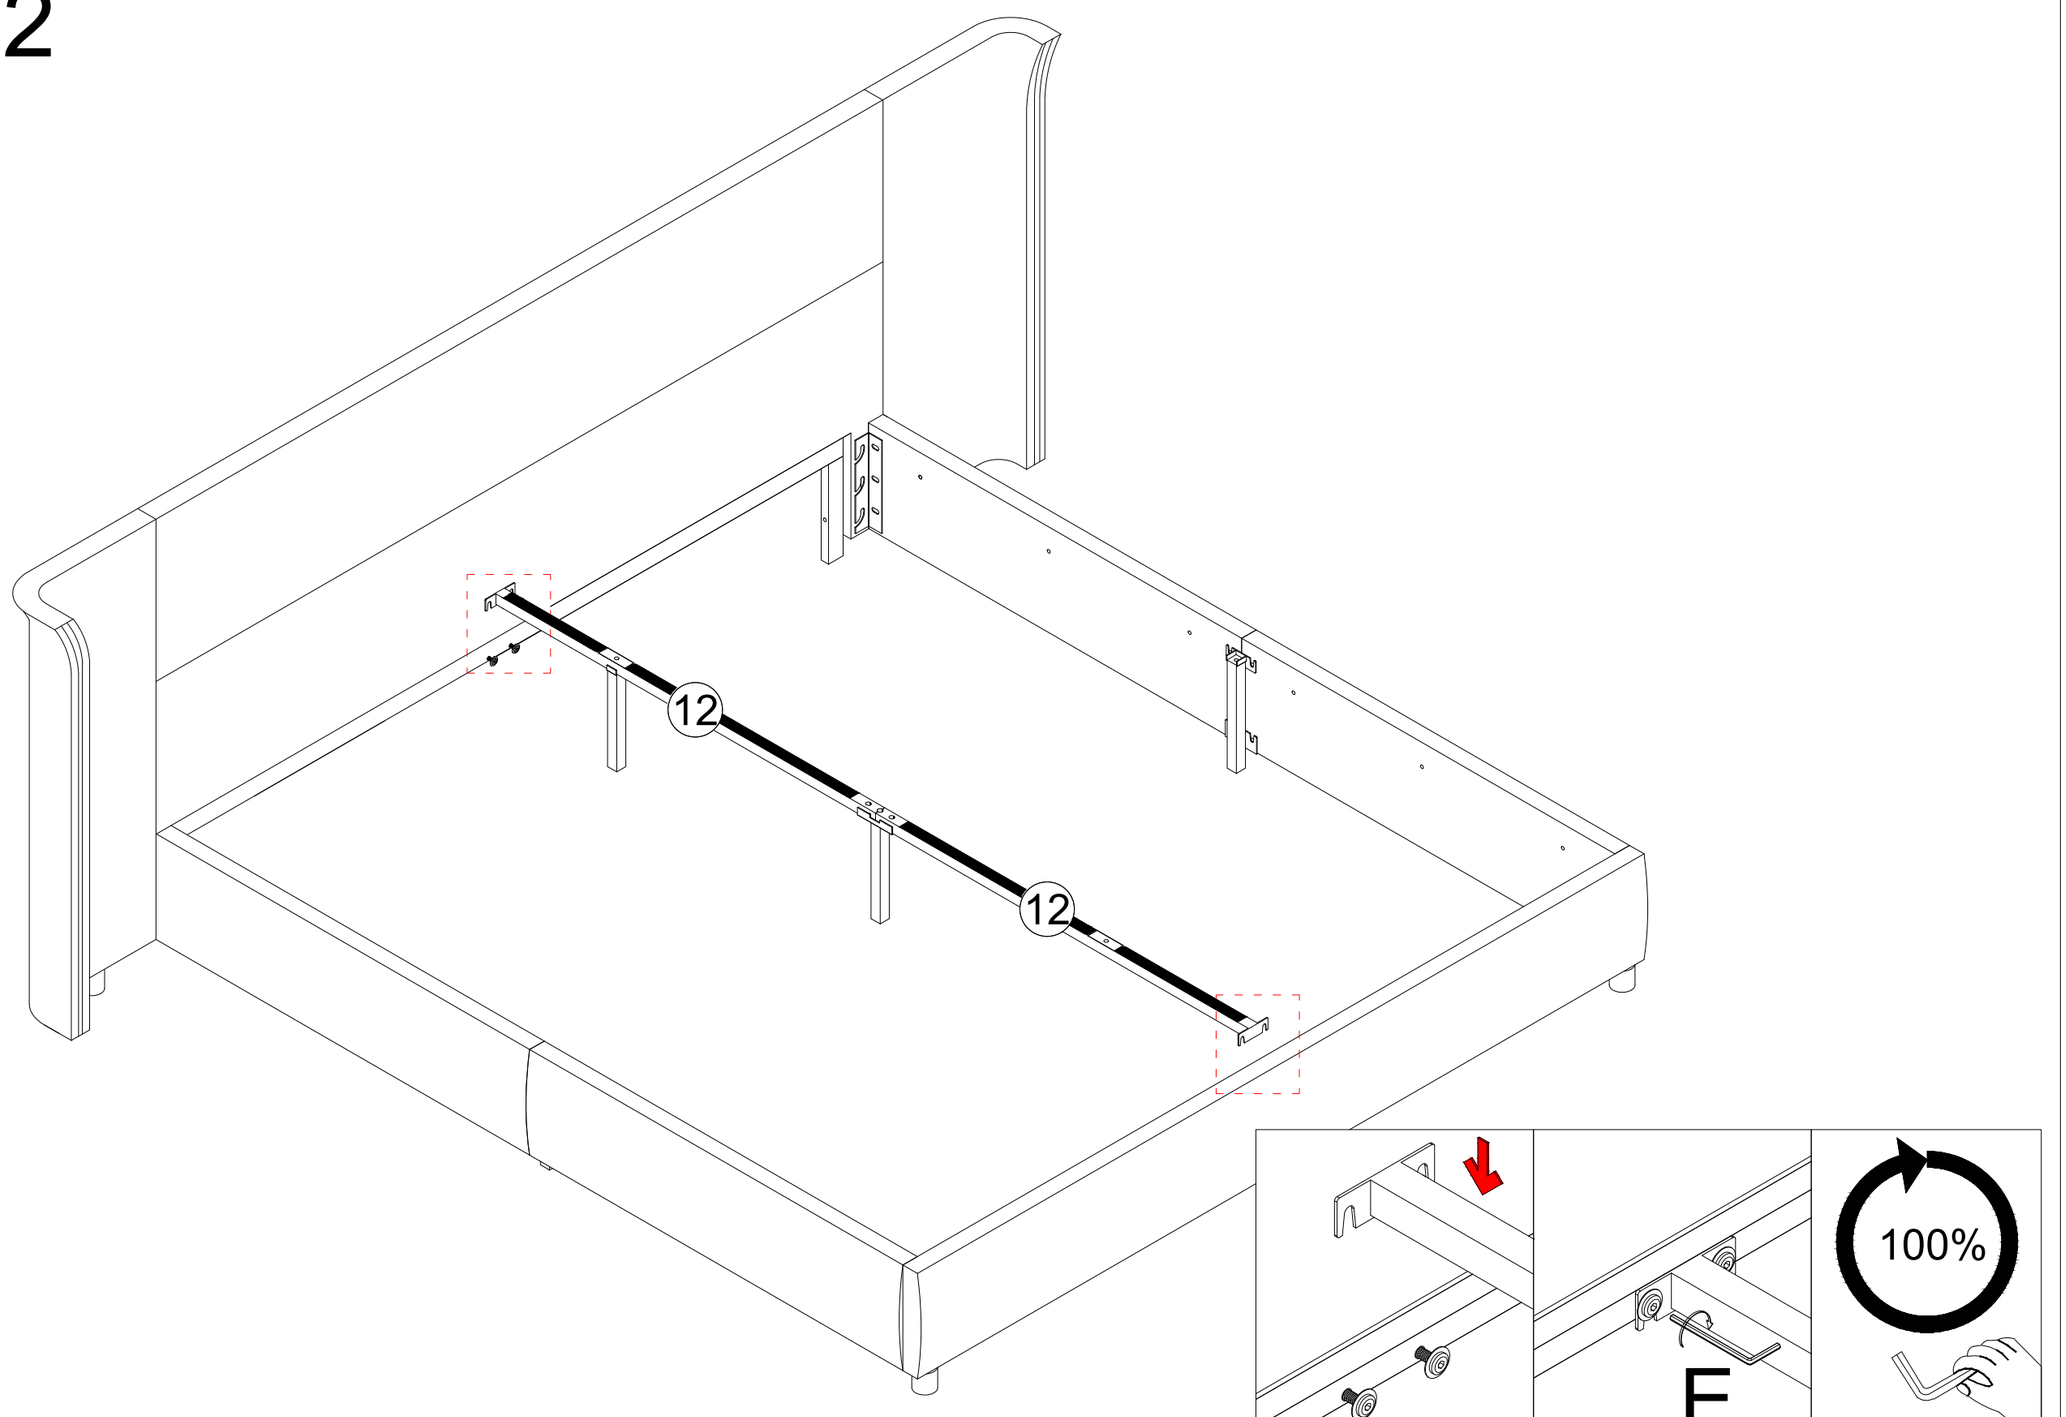


ASSEMBLY INSTRUCTIONS


STEP 13

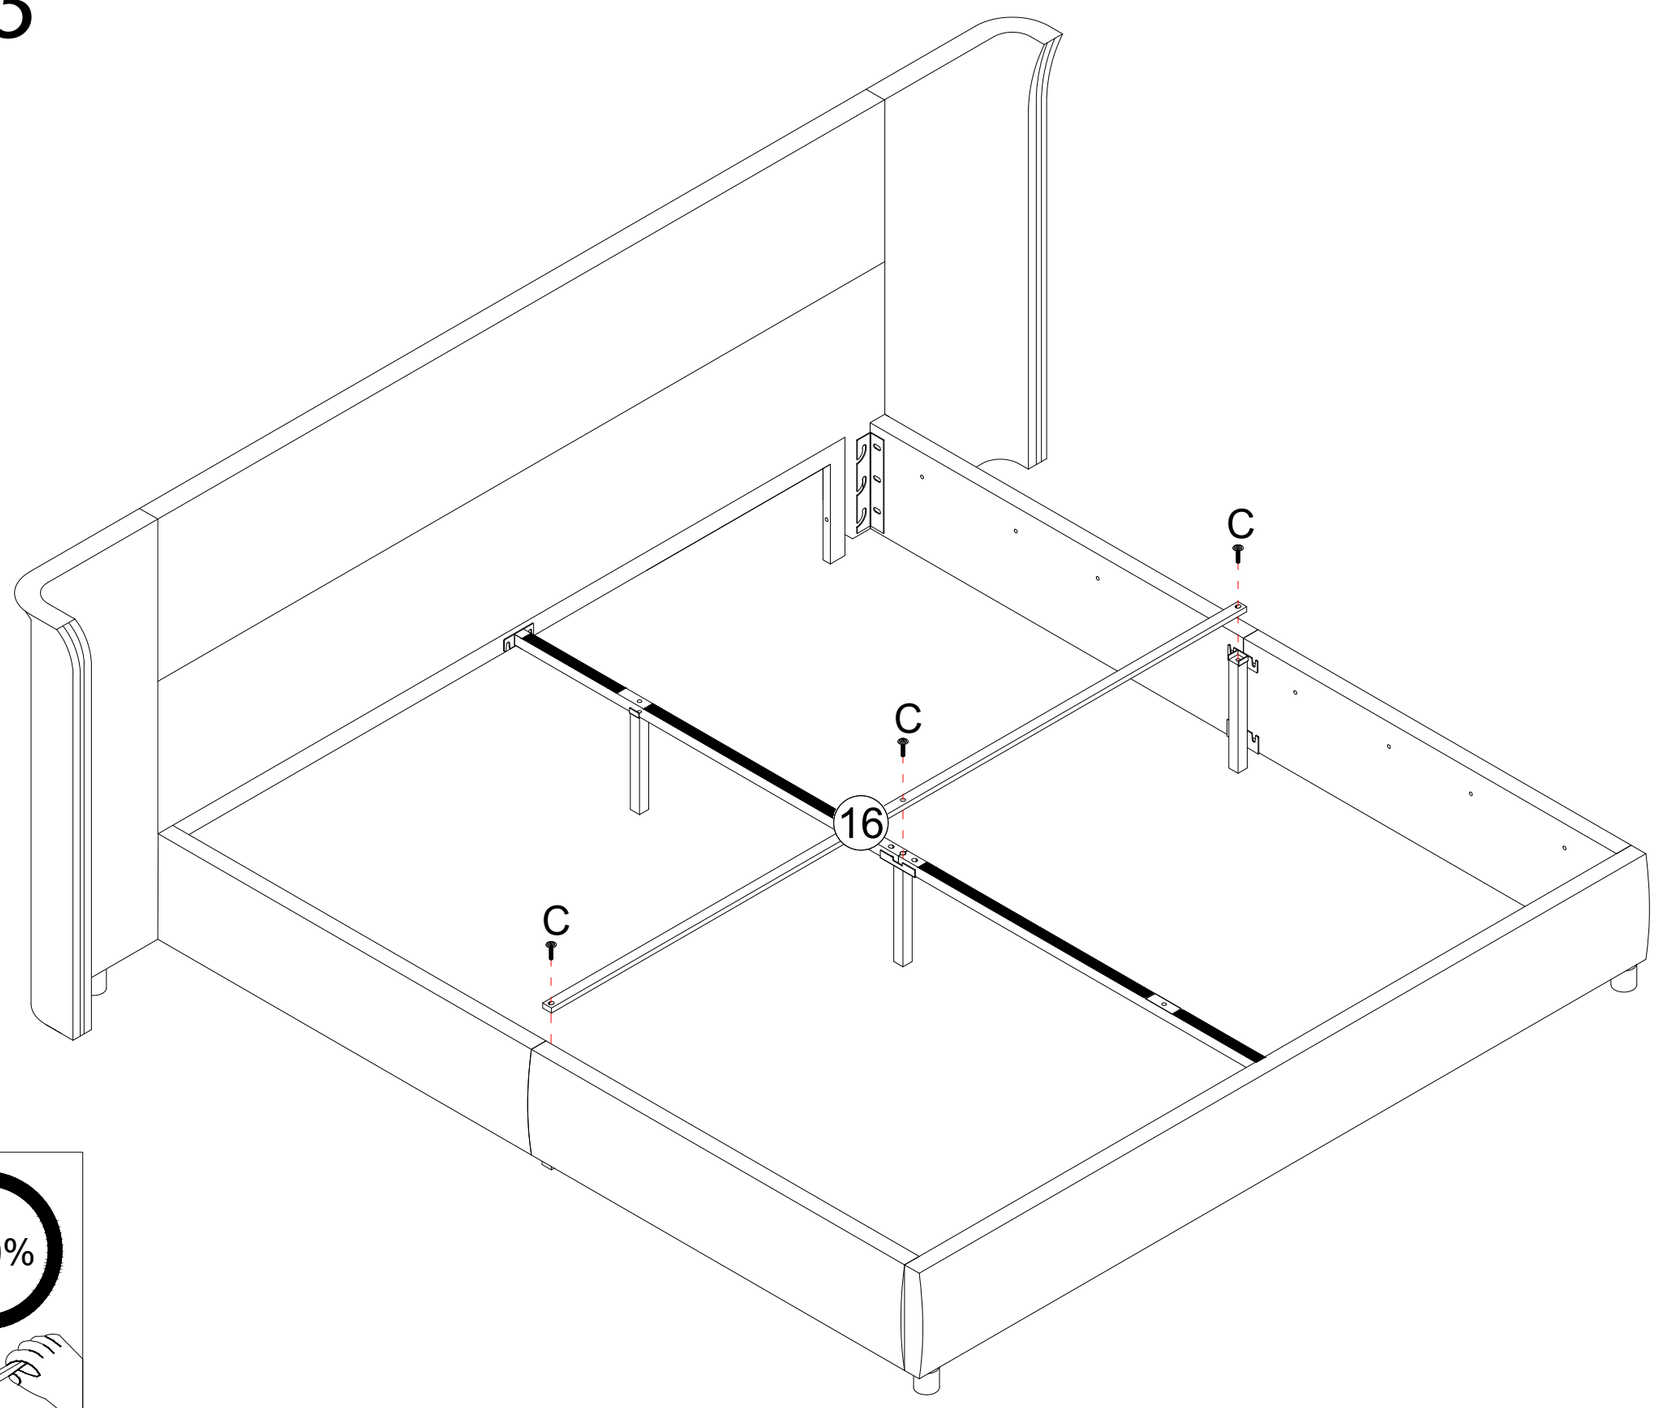

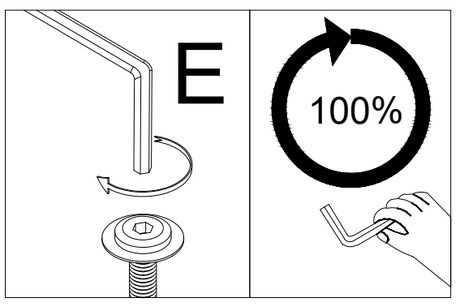


STEP 14

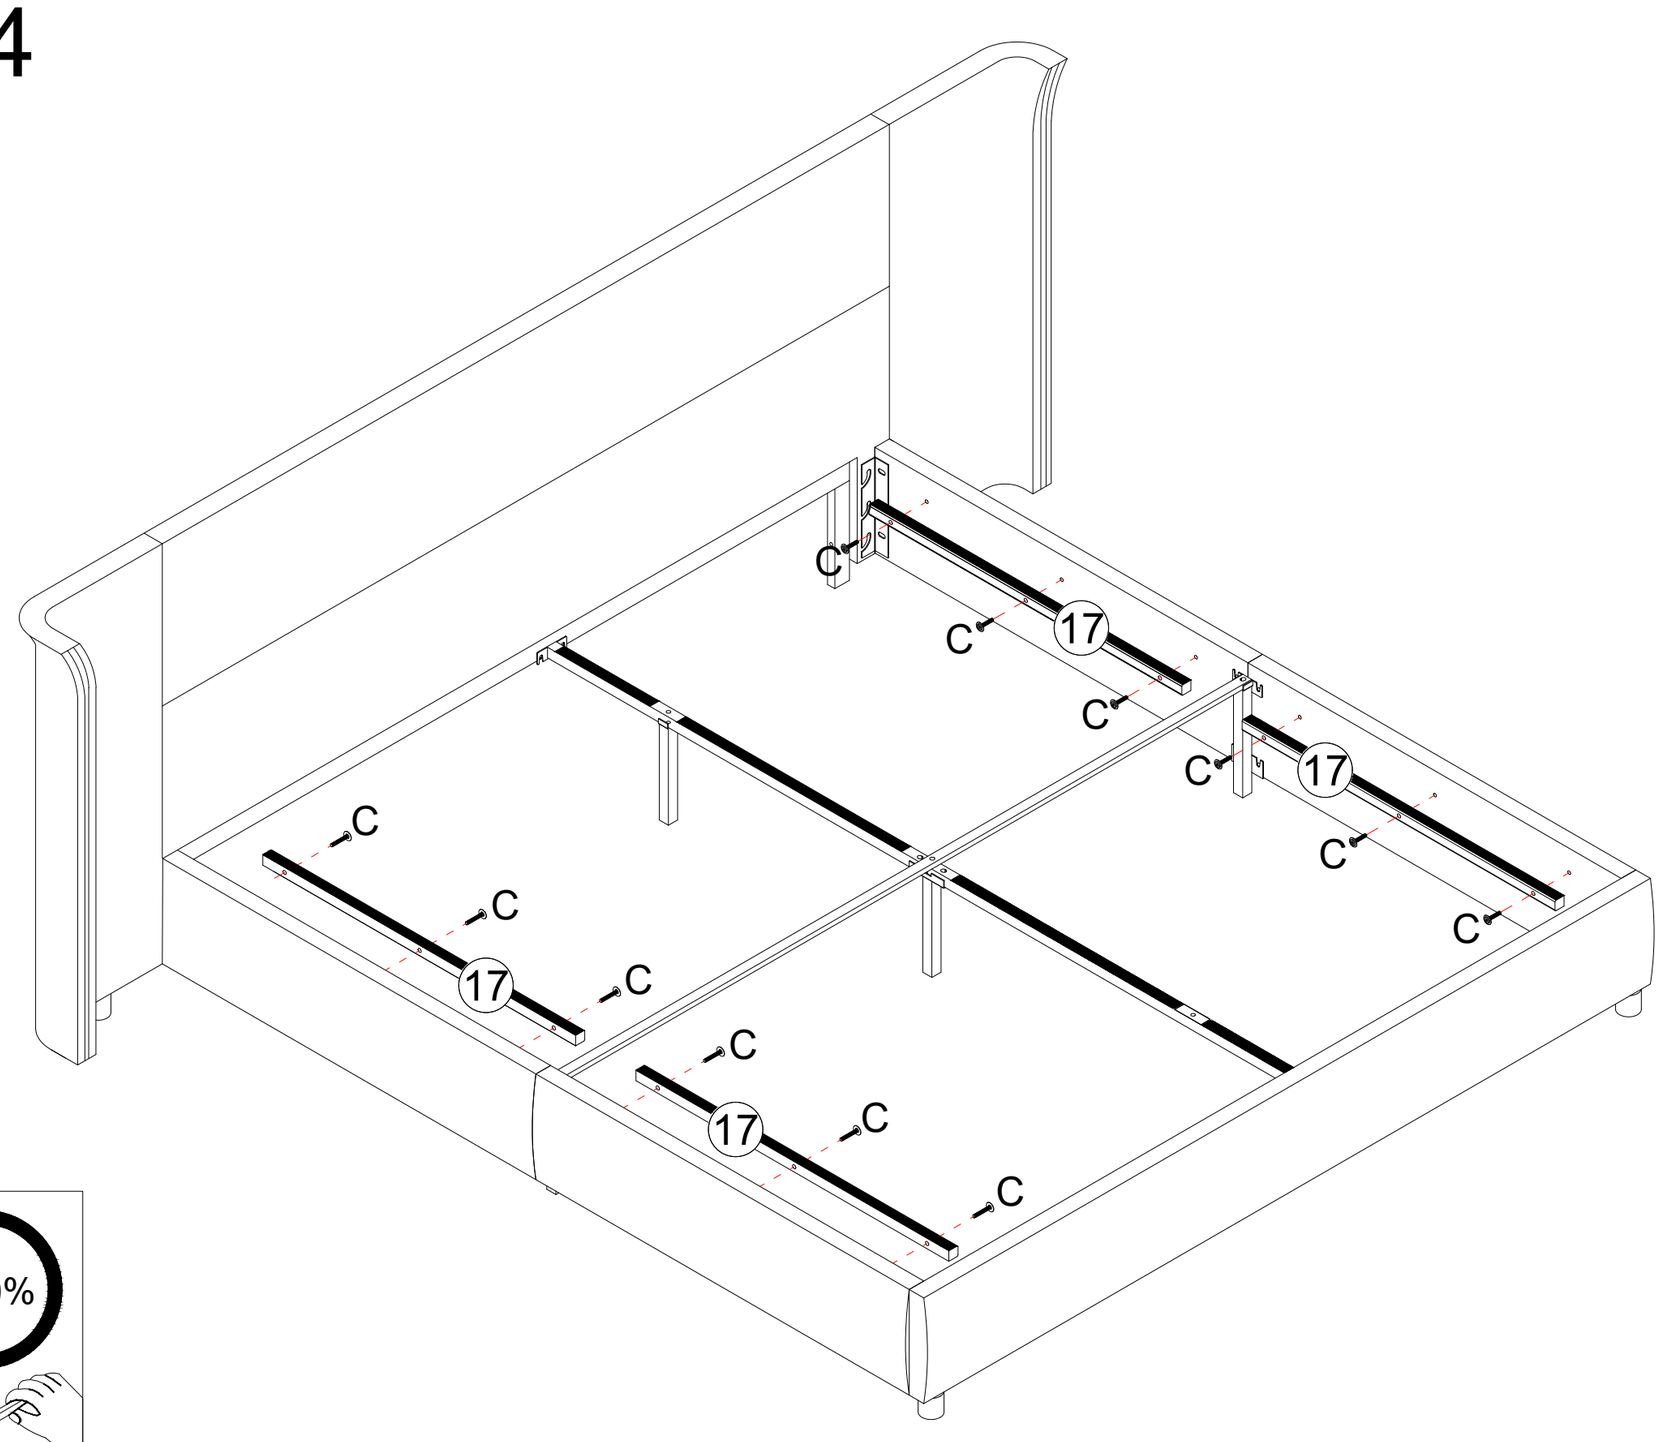

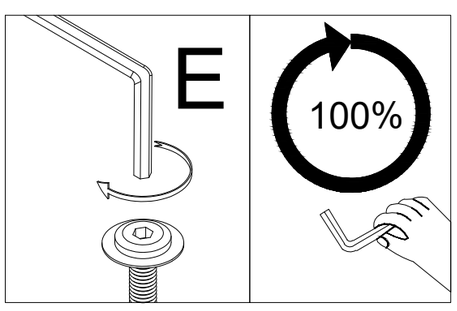


ASSEMBLY INSTRUCTIONS

STEP 15

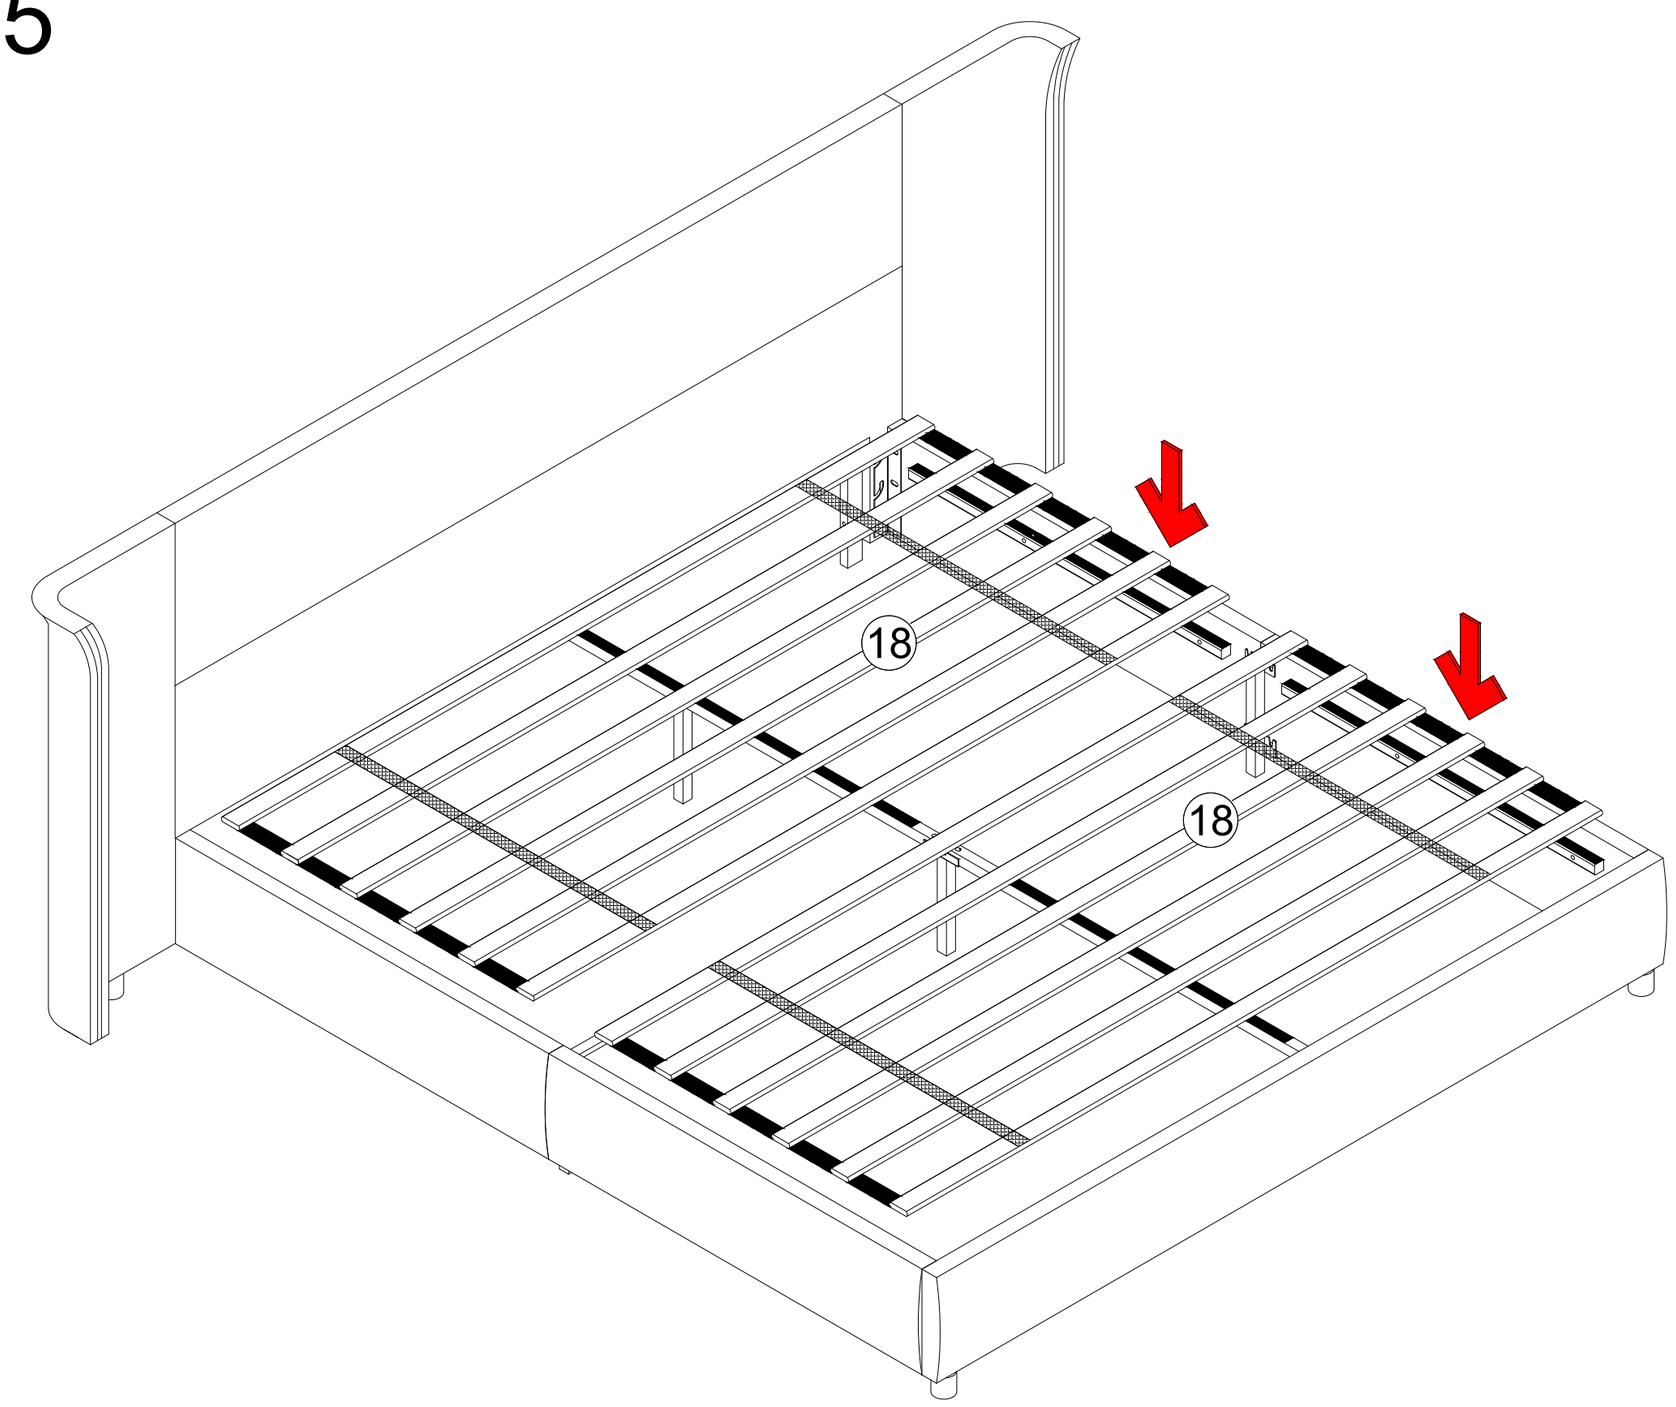

"Join the two sides
of the Velcro to fasten."

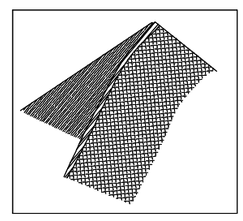

STEP 16

