

Installation Instructions


Pencil Drawer

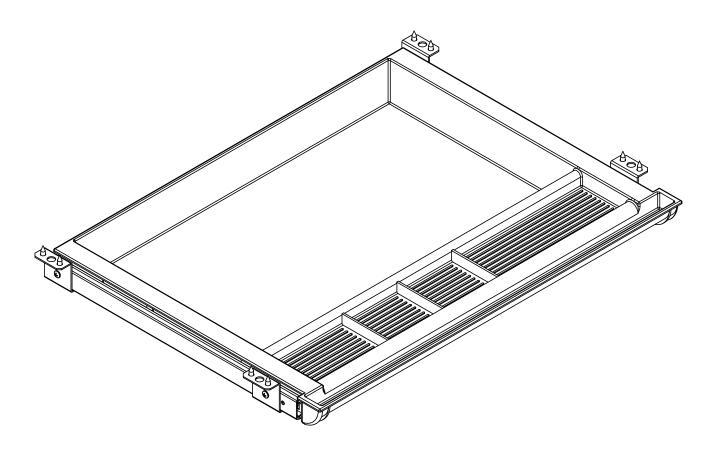

Pencil Drawer

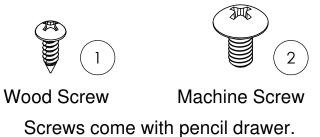



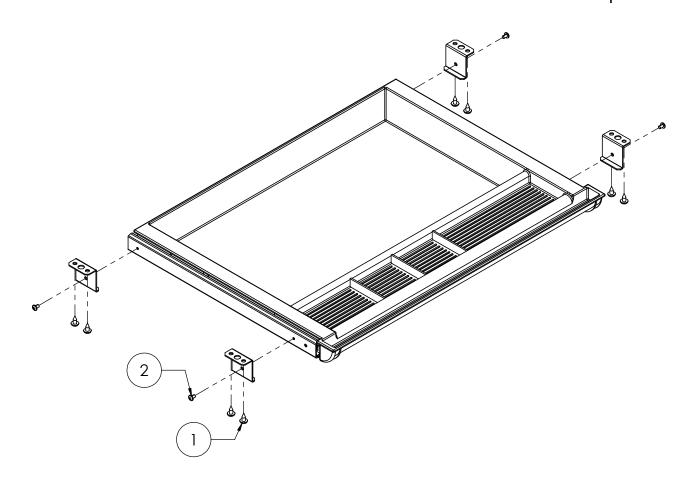

Attach the brackets and mark and drill eight 5/64" pilot holes 1/2" deep. Put one screw <u>1</u> in each bracket and fully tighten. Operate the drawer. If it is binding, loosen the screws and adjust the drawer until it is not binding. Tighten the screws and drive in four more screws.