




Assembly instructions

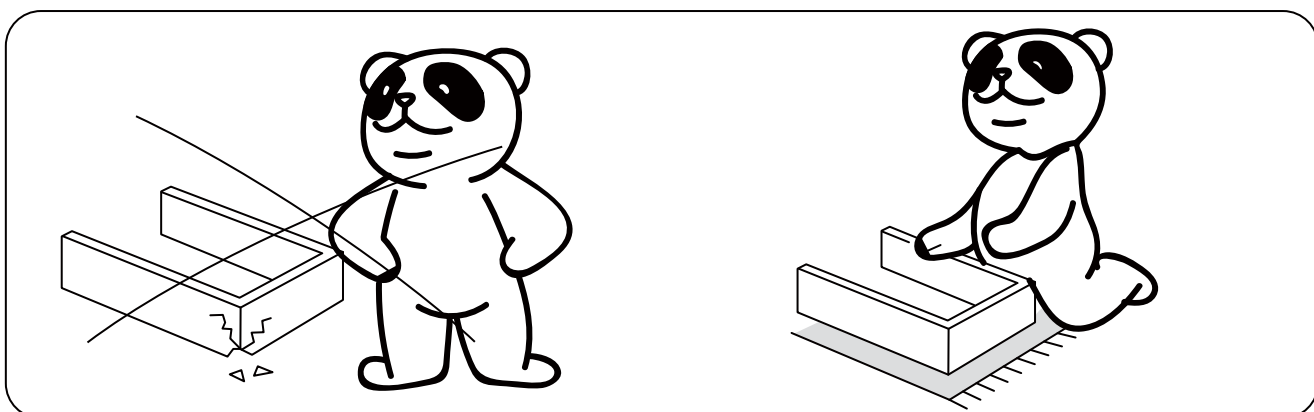


Version : 1.0

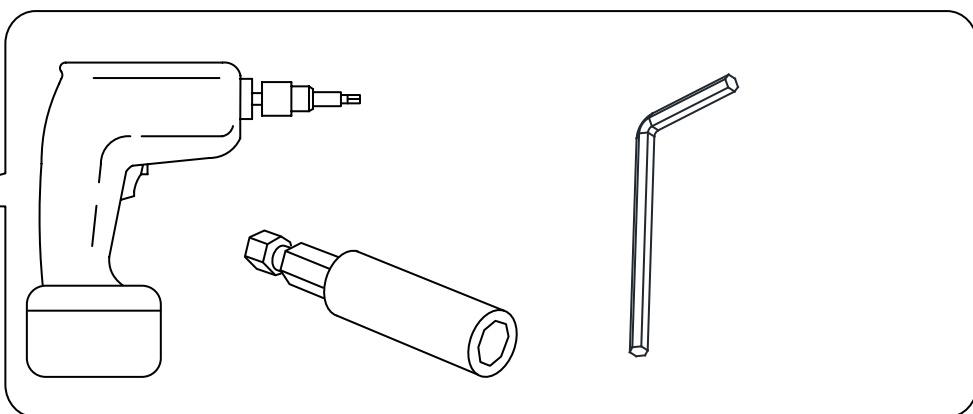

Violent installation is prohibited

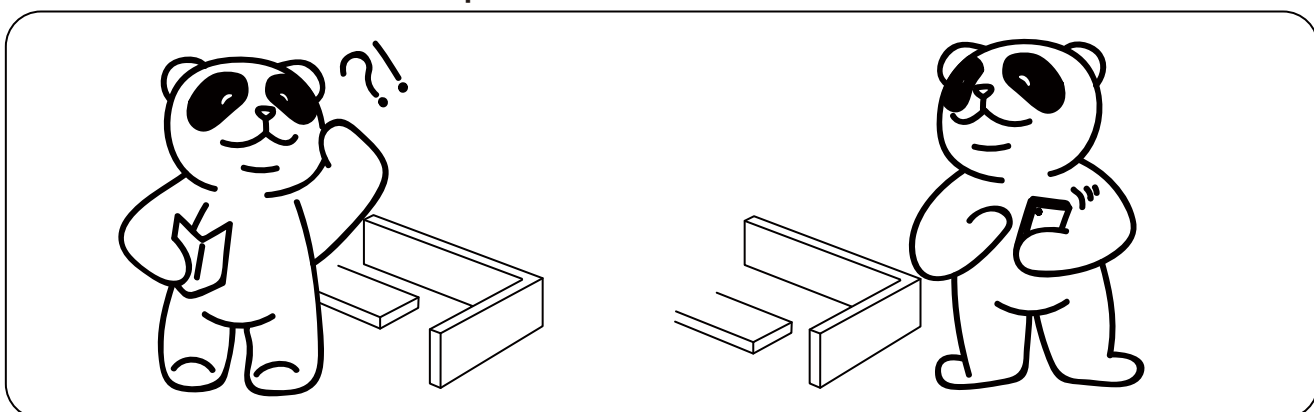


Please call if you need help

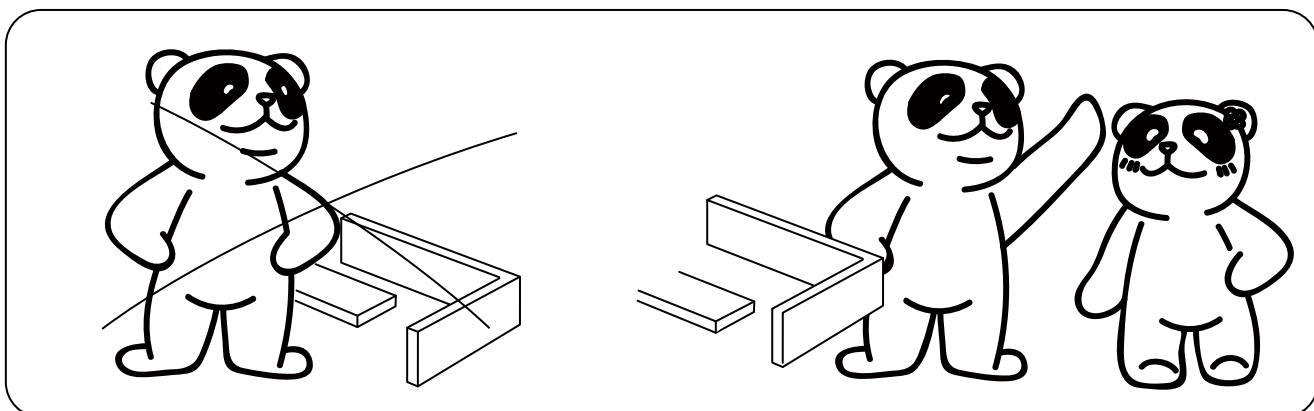


Multi-person cooperation is recommended

Install parts


PARTS LIST

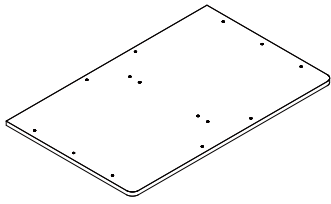


1 x1

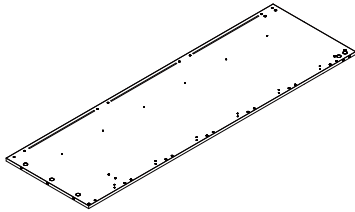


2 x1

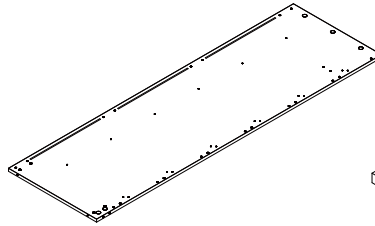


3 x1

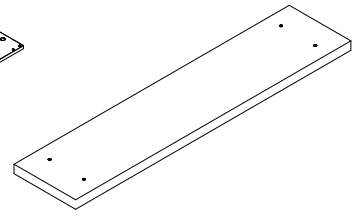


4 x2

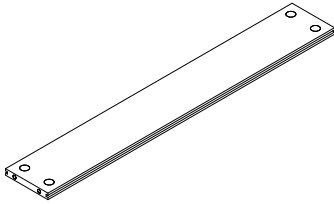


5 x2

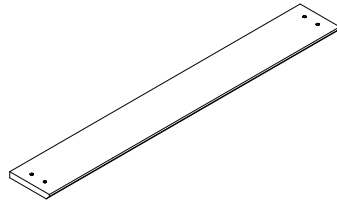


6 x1

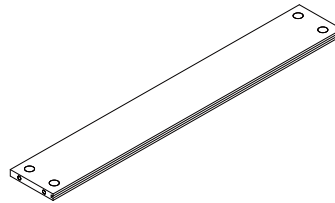


7 x1

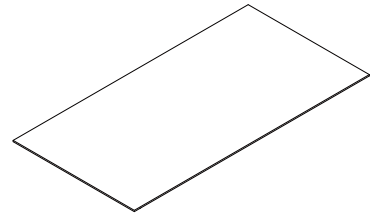


8 x3

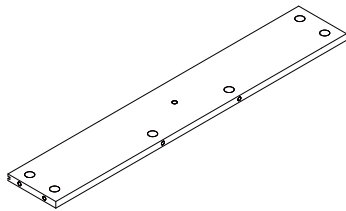


9 x1

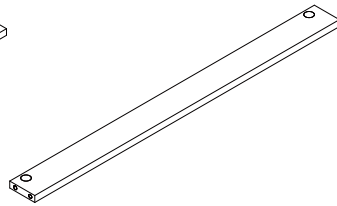


10 x6

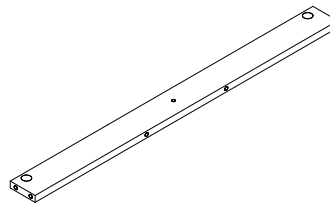


11 x1

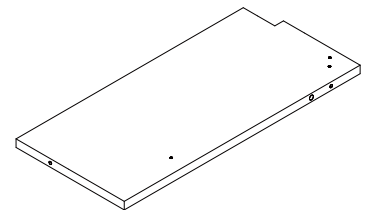


12 x1

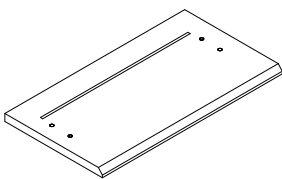


13 x1

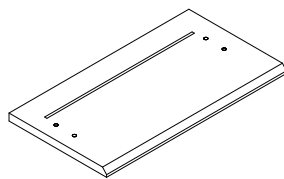


14 x1

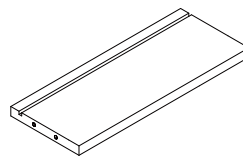


15 x2

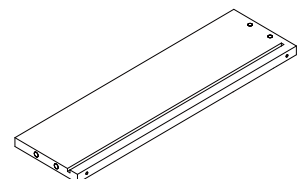


16 x2

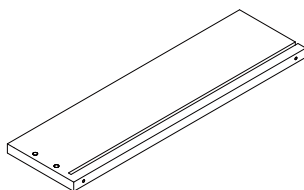


17 x2

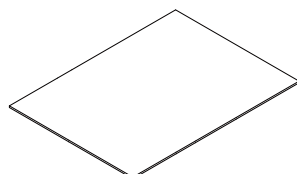

18 x2

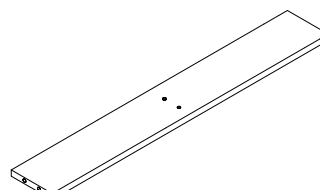


19 x1

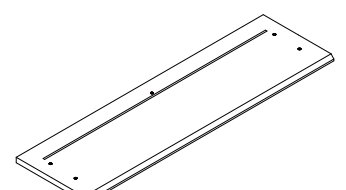


20 x5

Install parts


PARTS LIST

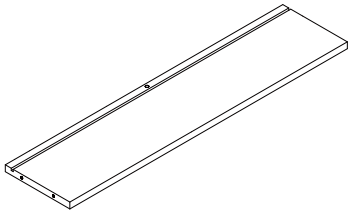


21 x5

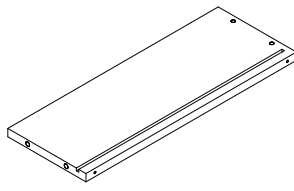


22 x5

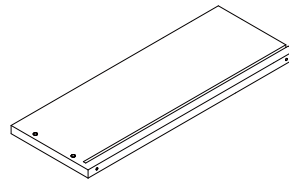

23 x5

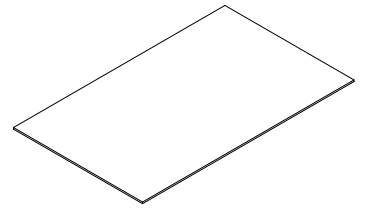

24 x5

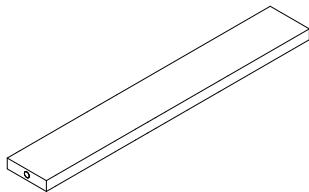


25 x5

HARDWARE LIST



Ø6x28mm

A x 87

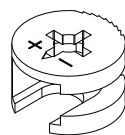

Ø15x9 mm

B x 87



Ø6x30mm

C x 19




Ø3.5x12mm

D x 70




Ø5x40mm


E x 30



F x 12




G x 8



Ø4x18mm

H x 8

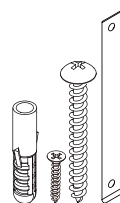


J x 2



Ø3.5x 14 mm


L x 12




CL
x7
350MM



CR
x7
350MM




DL
x7
350MM



DR
x7
350MM

Note:


1. Should be assembled on flat ground to keep balance.

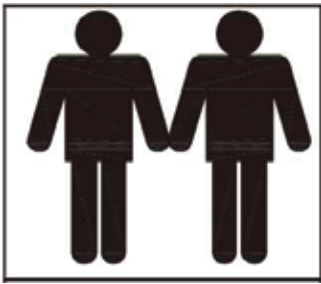


It needs at least two people to install.




Before starting the assembly, you must read the whole manual and follow the instructions

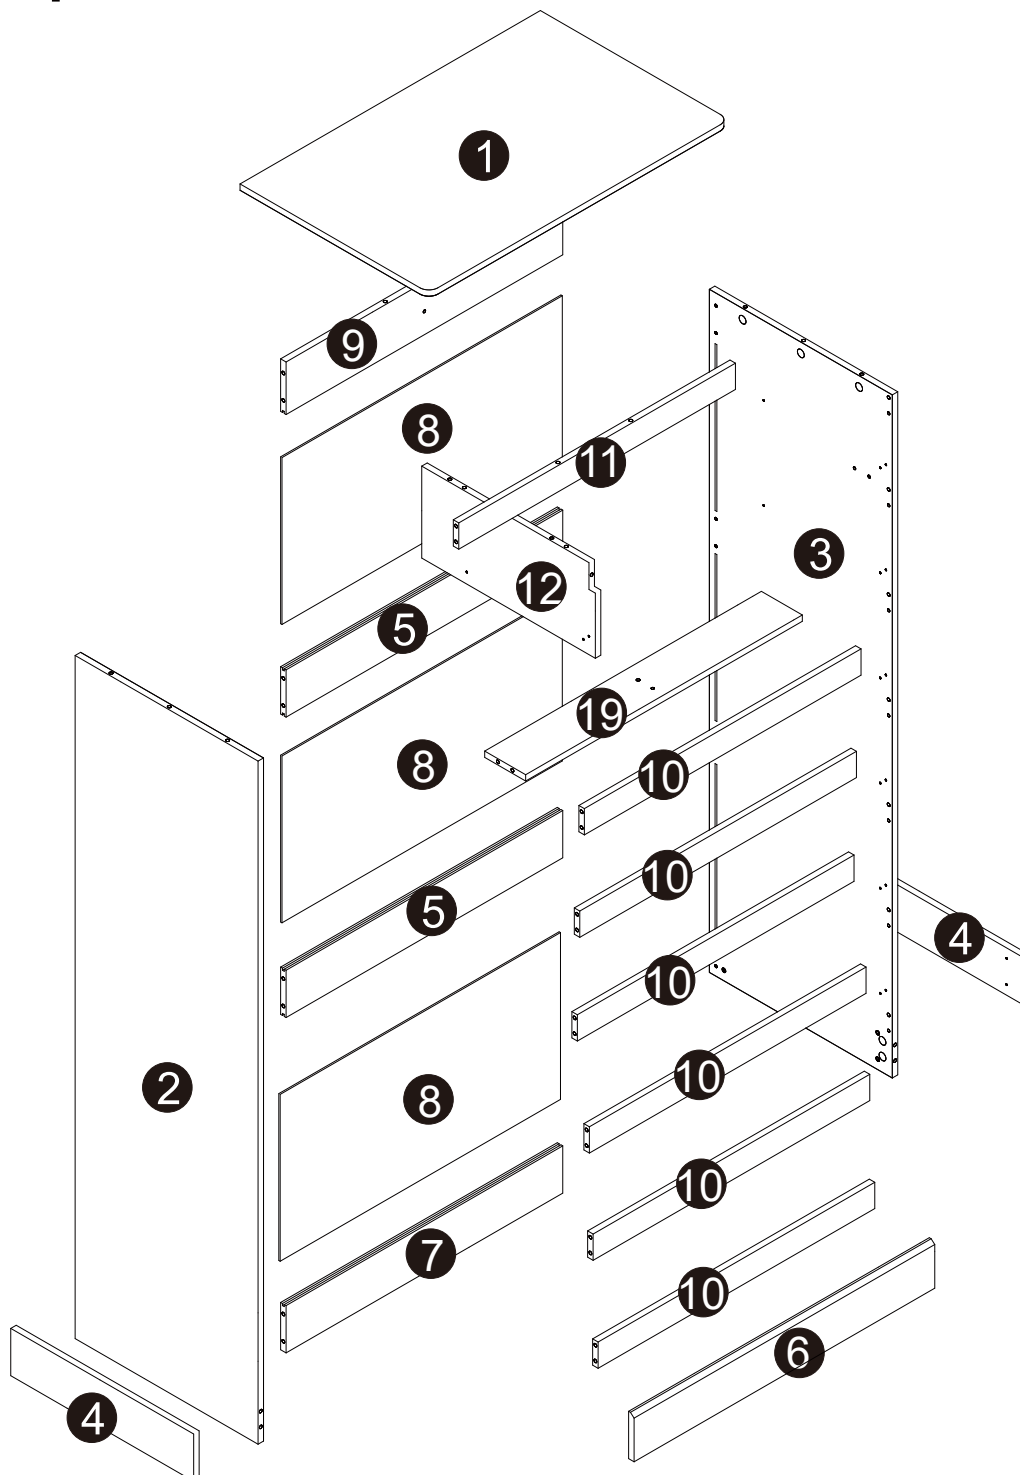


Drawer installation

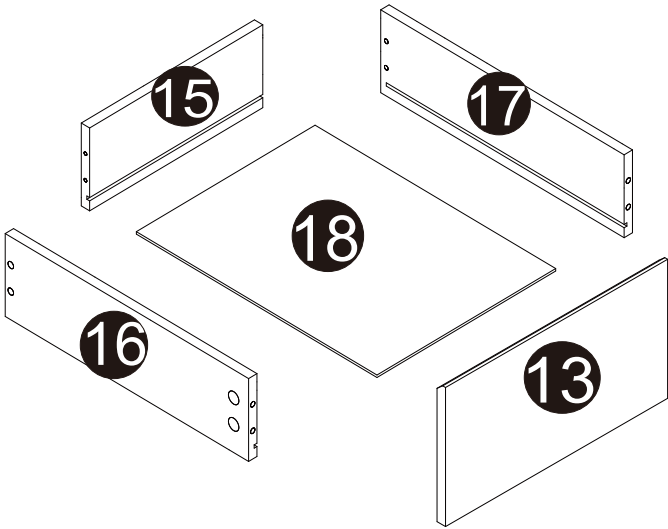

X1



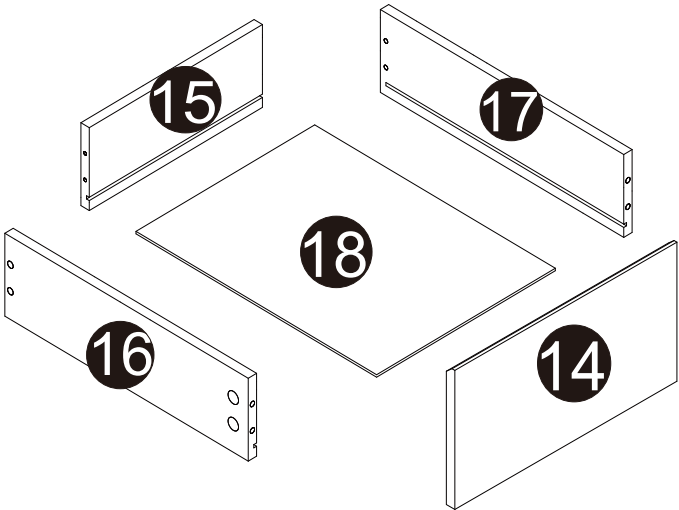


X1



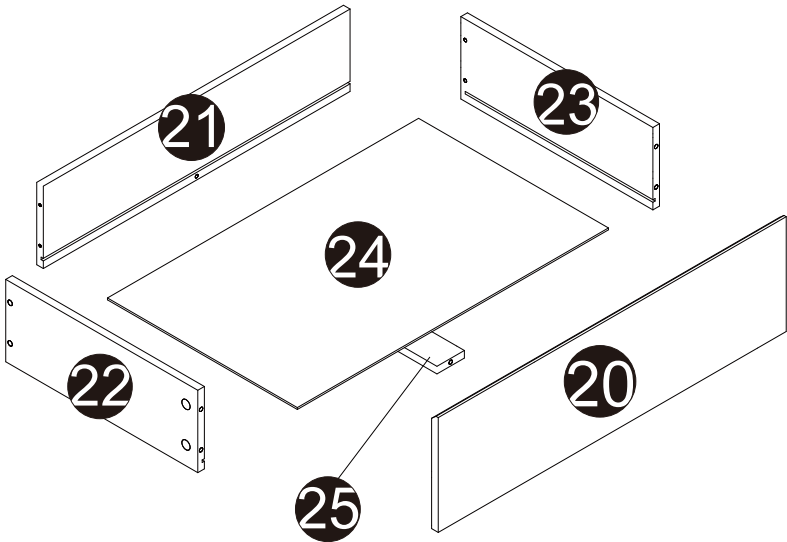


X5

1

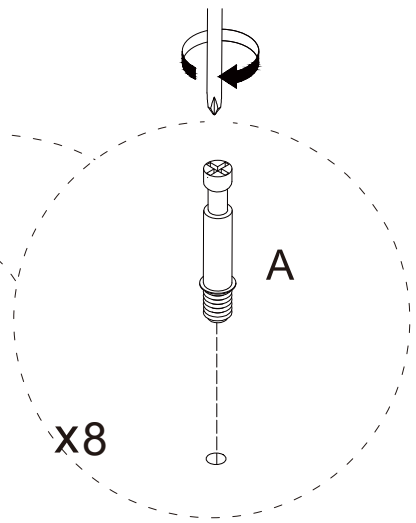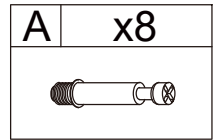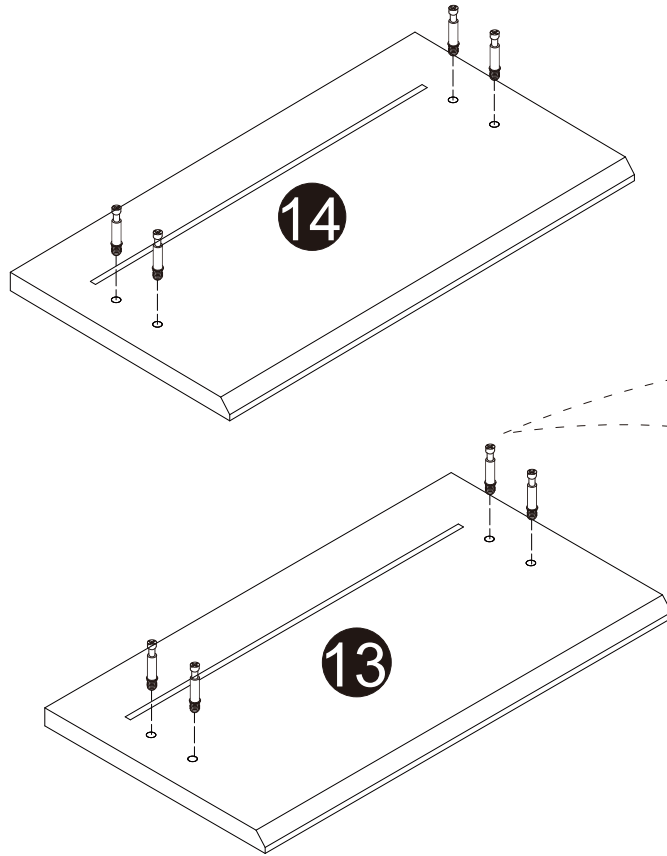


2

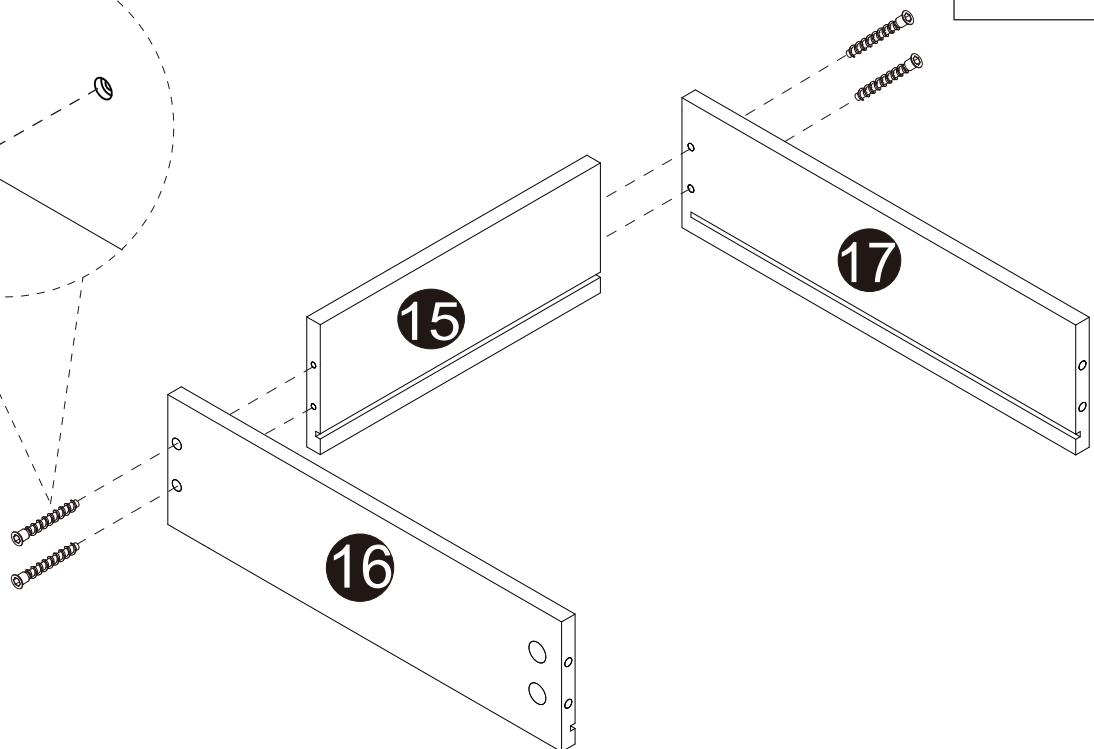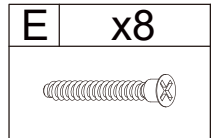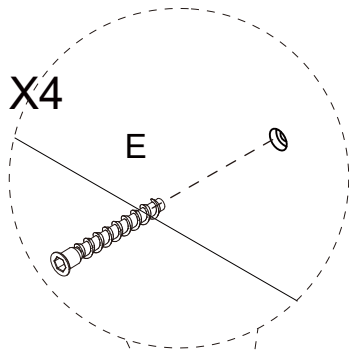


x2

3

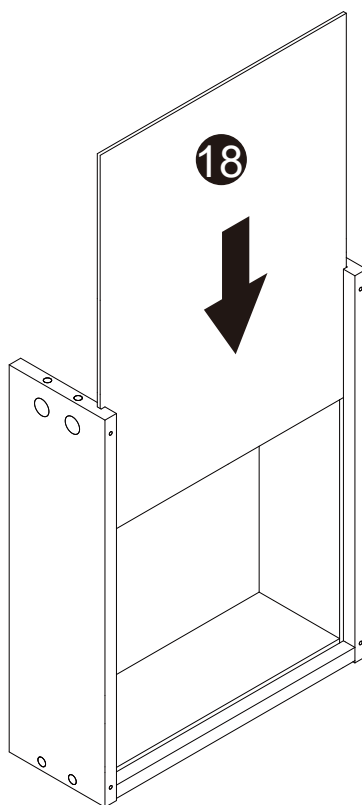


x2

4

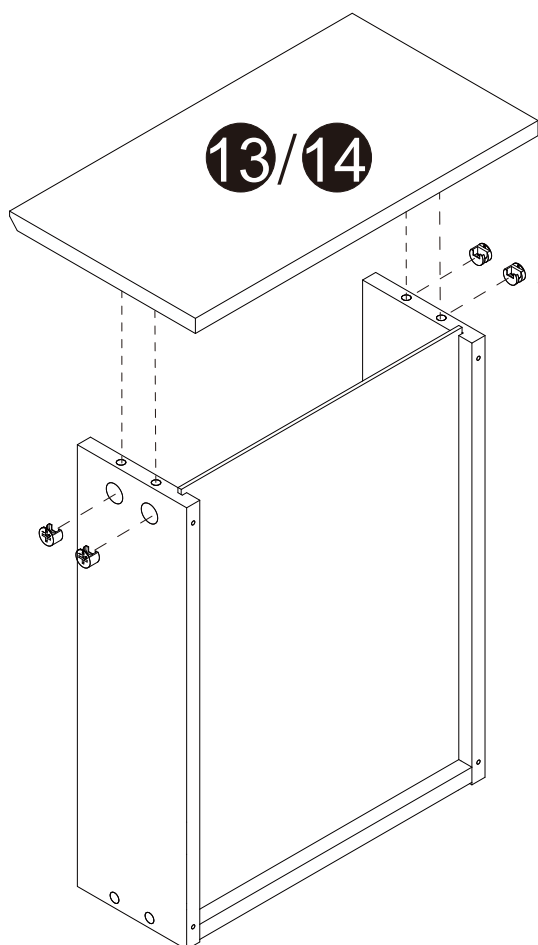


B	x8

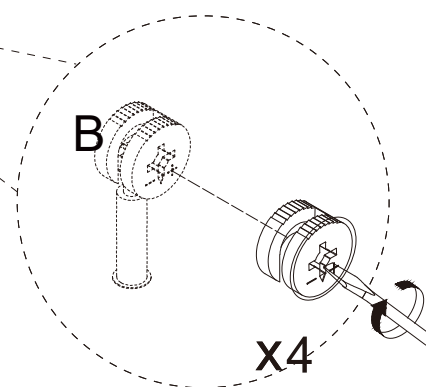


x2


DL	x2
	
DR	x2
	
D	x8
	

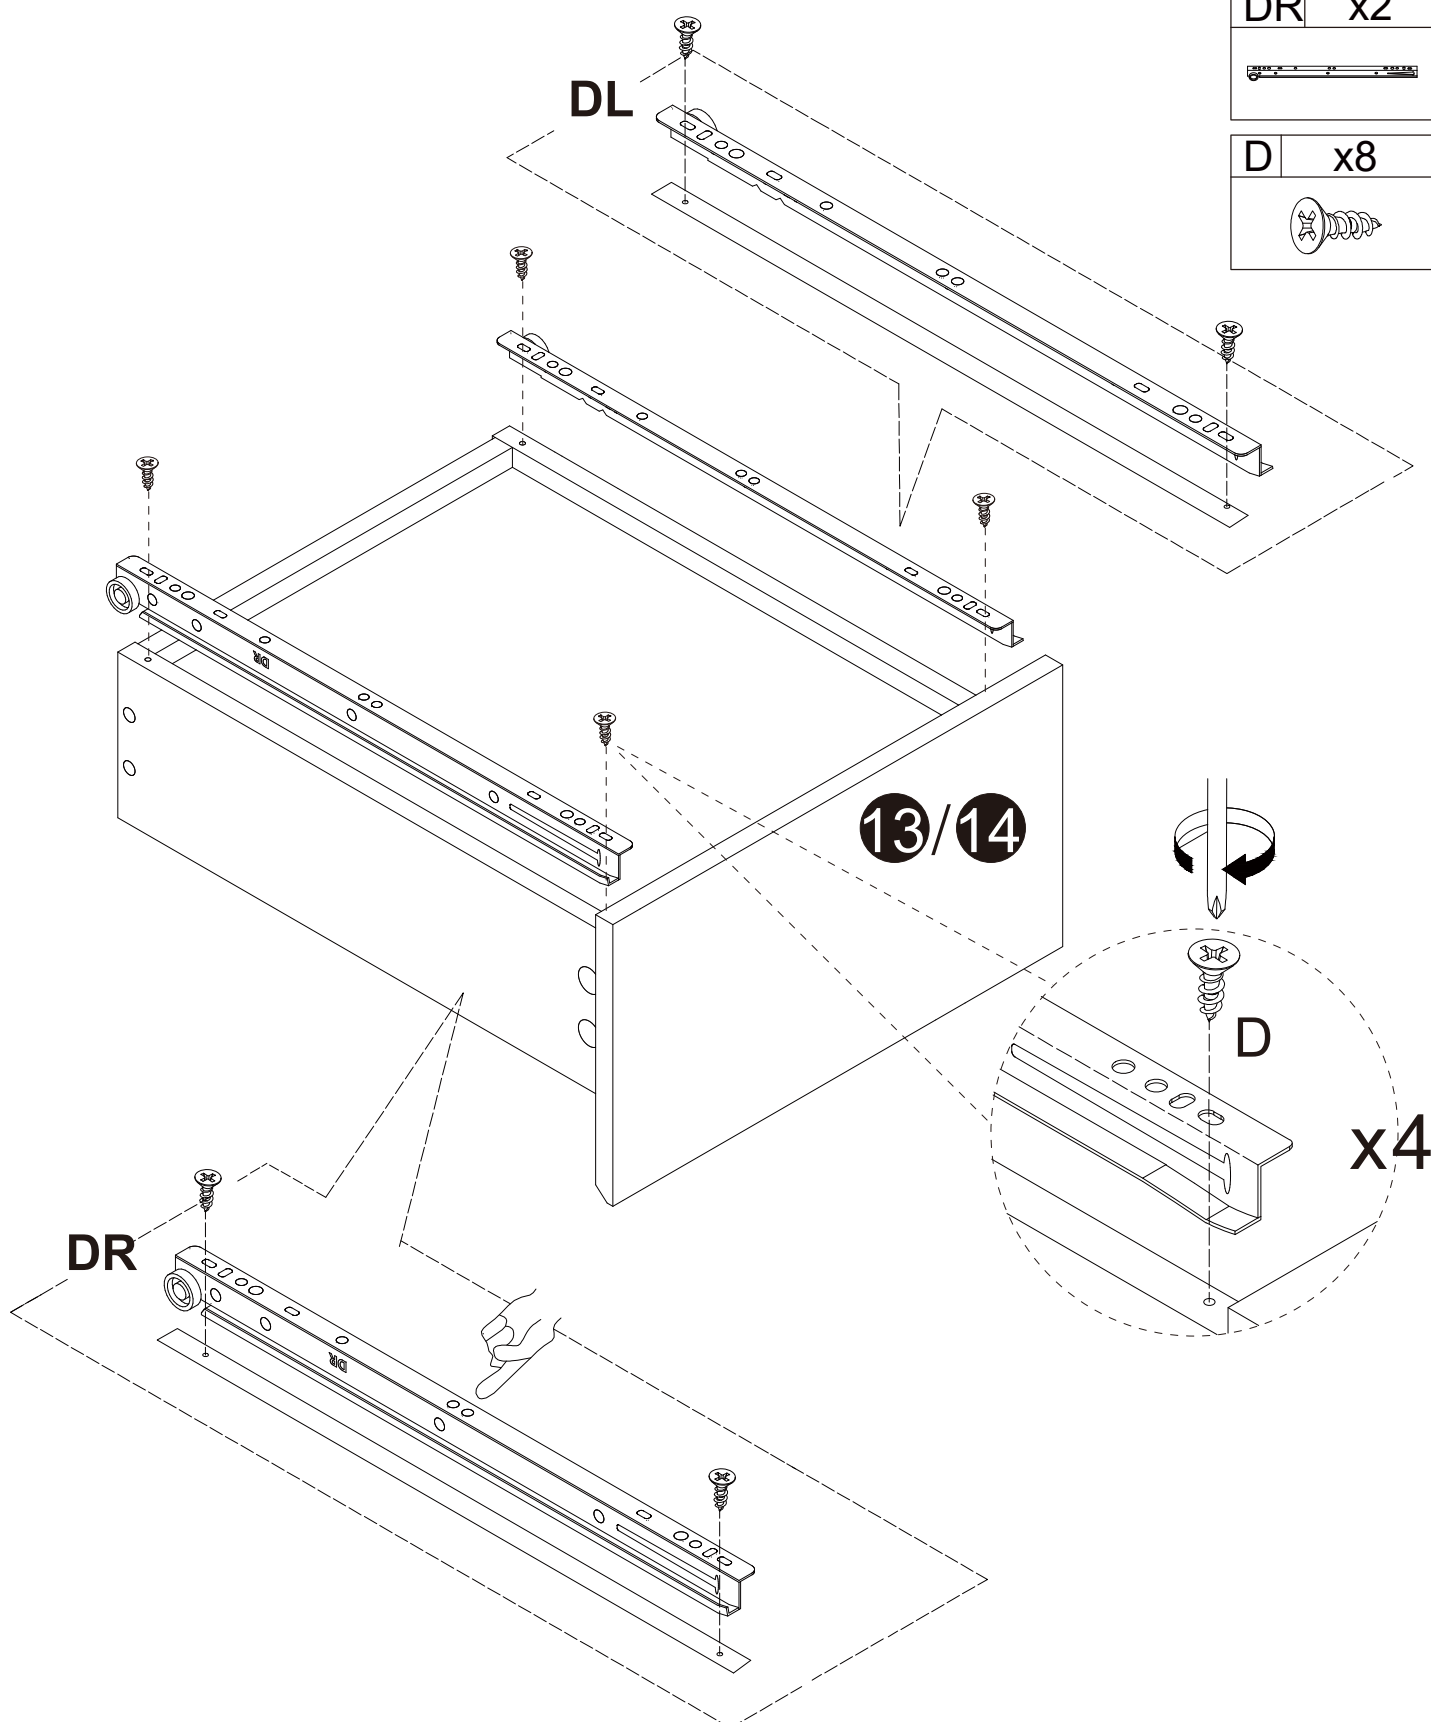


6

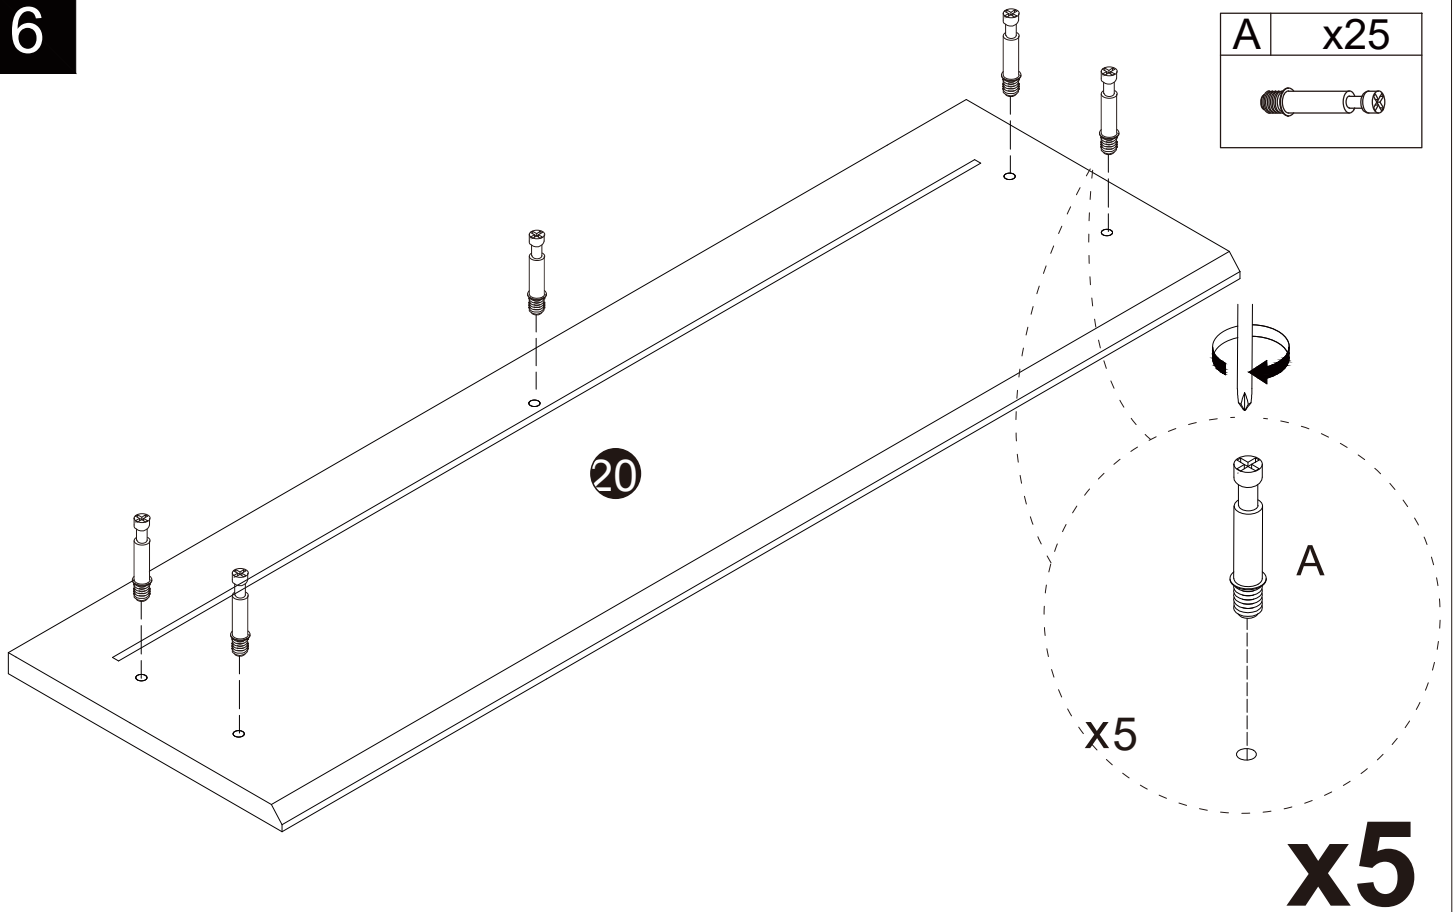

7

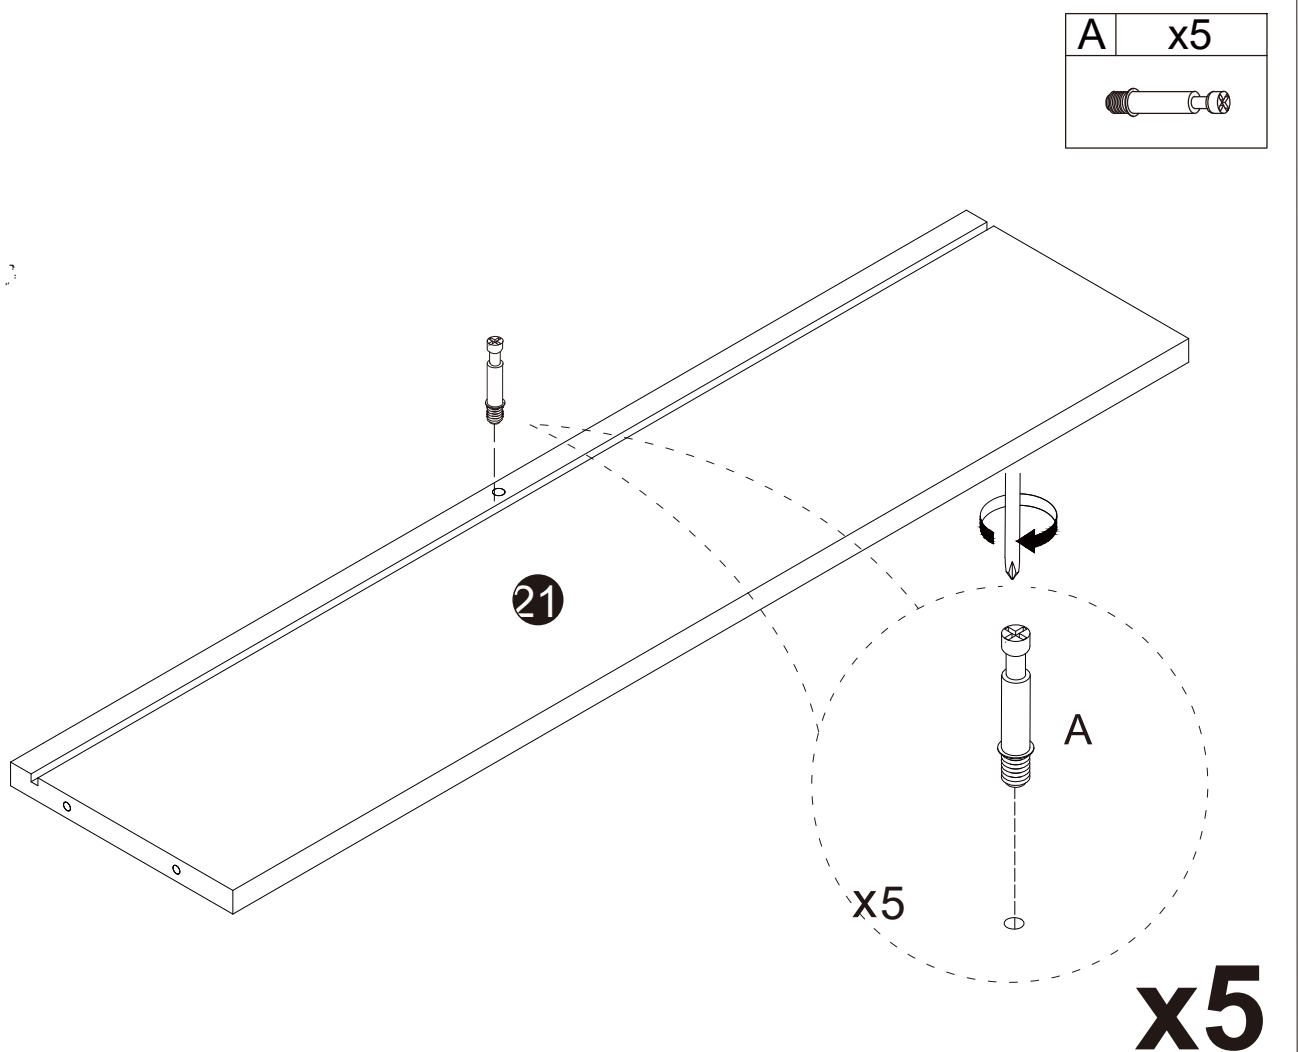


8

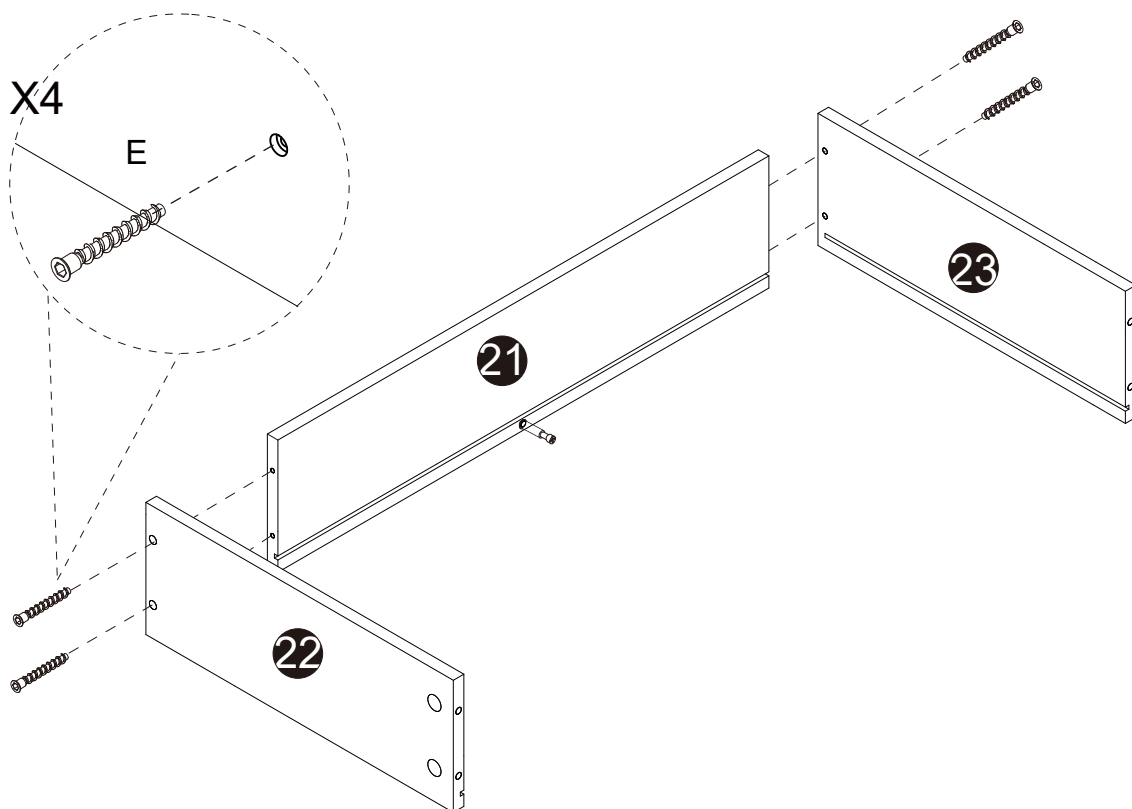


x5

9

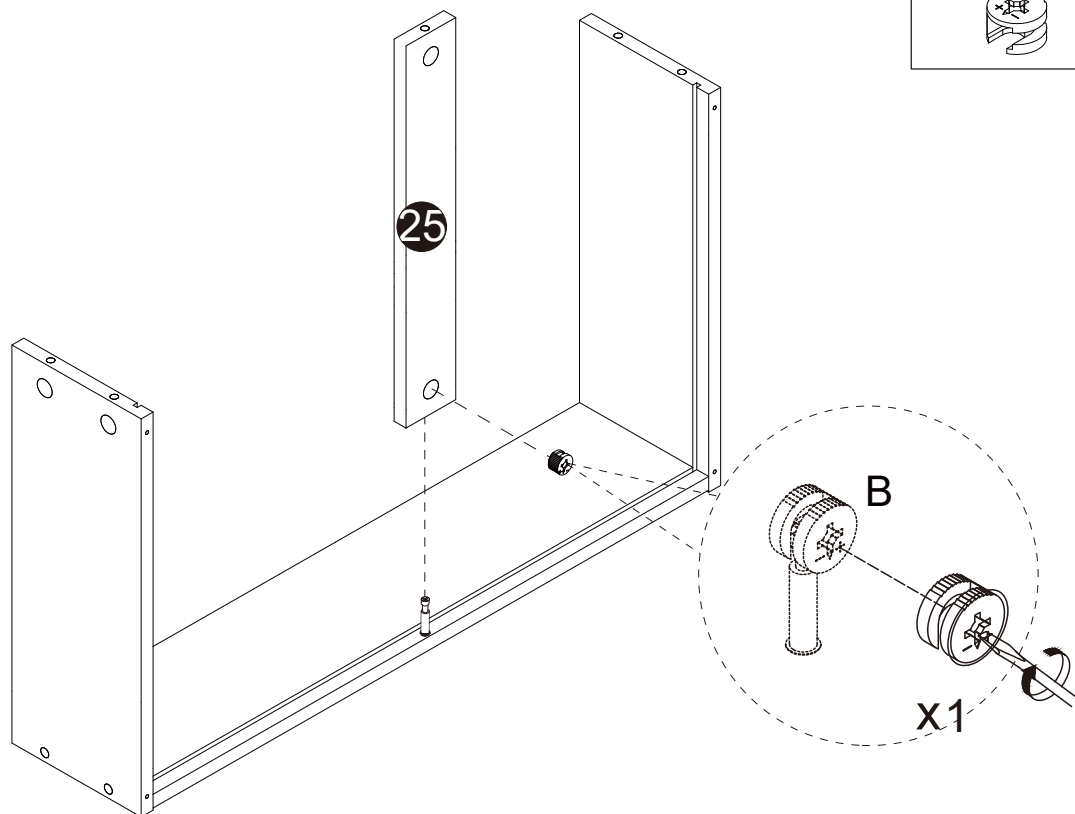


x5

10

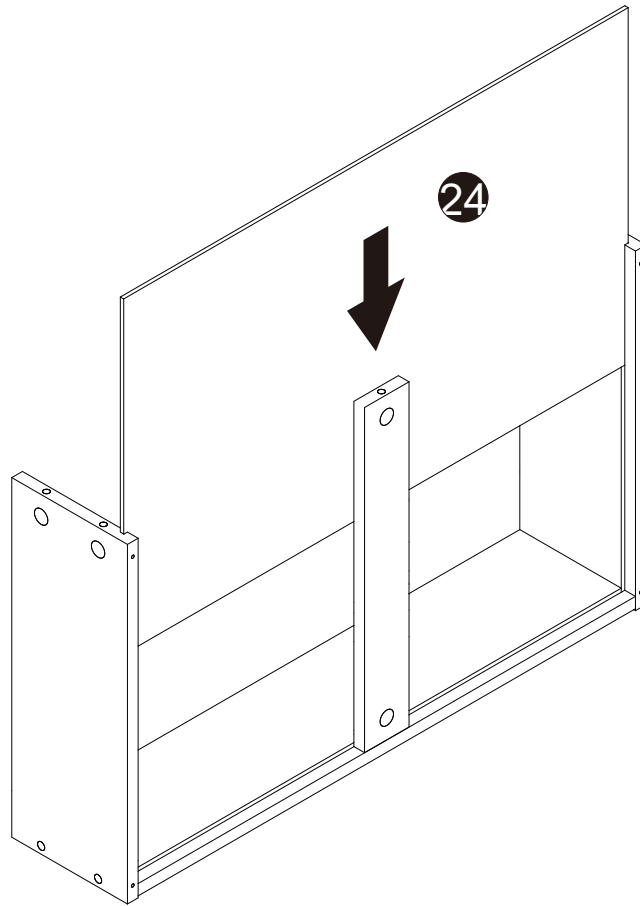


x5


11

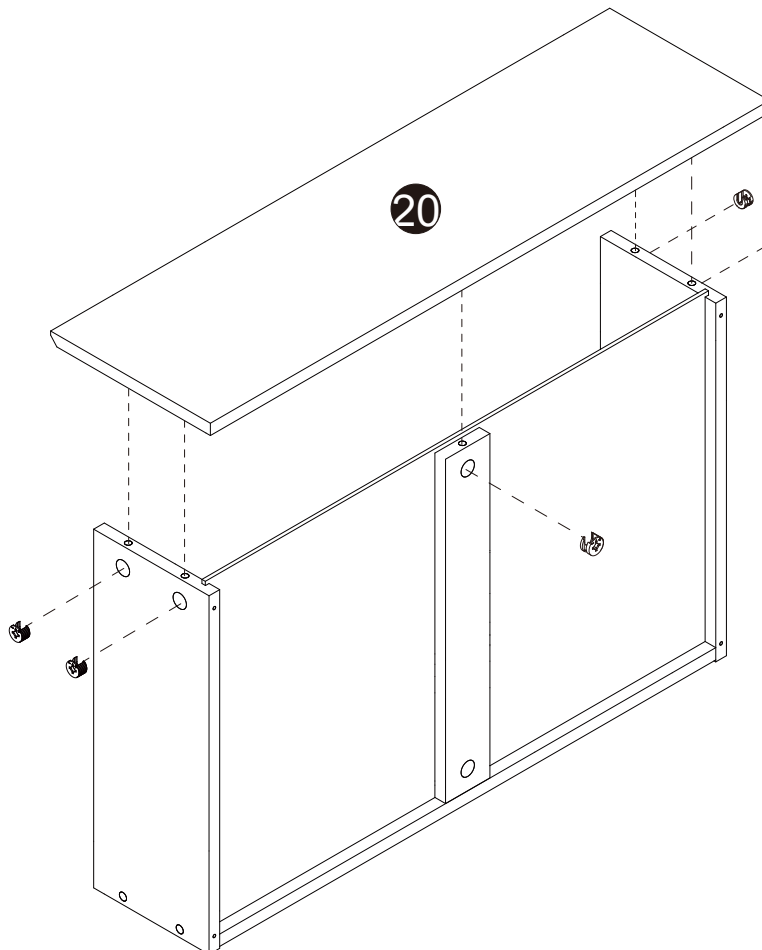

B	x25
	

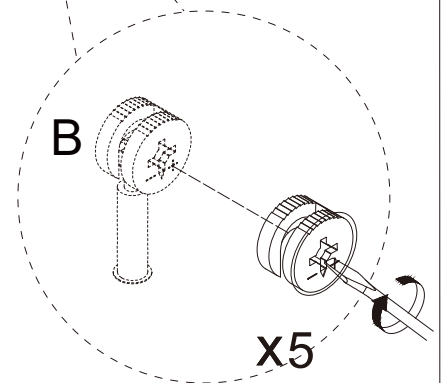


x5

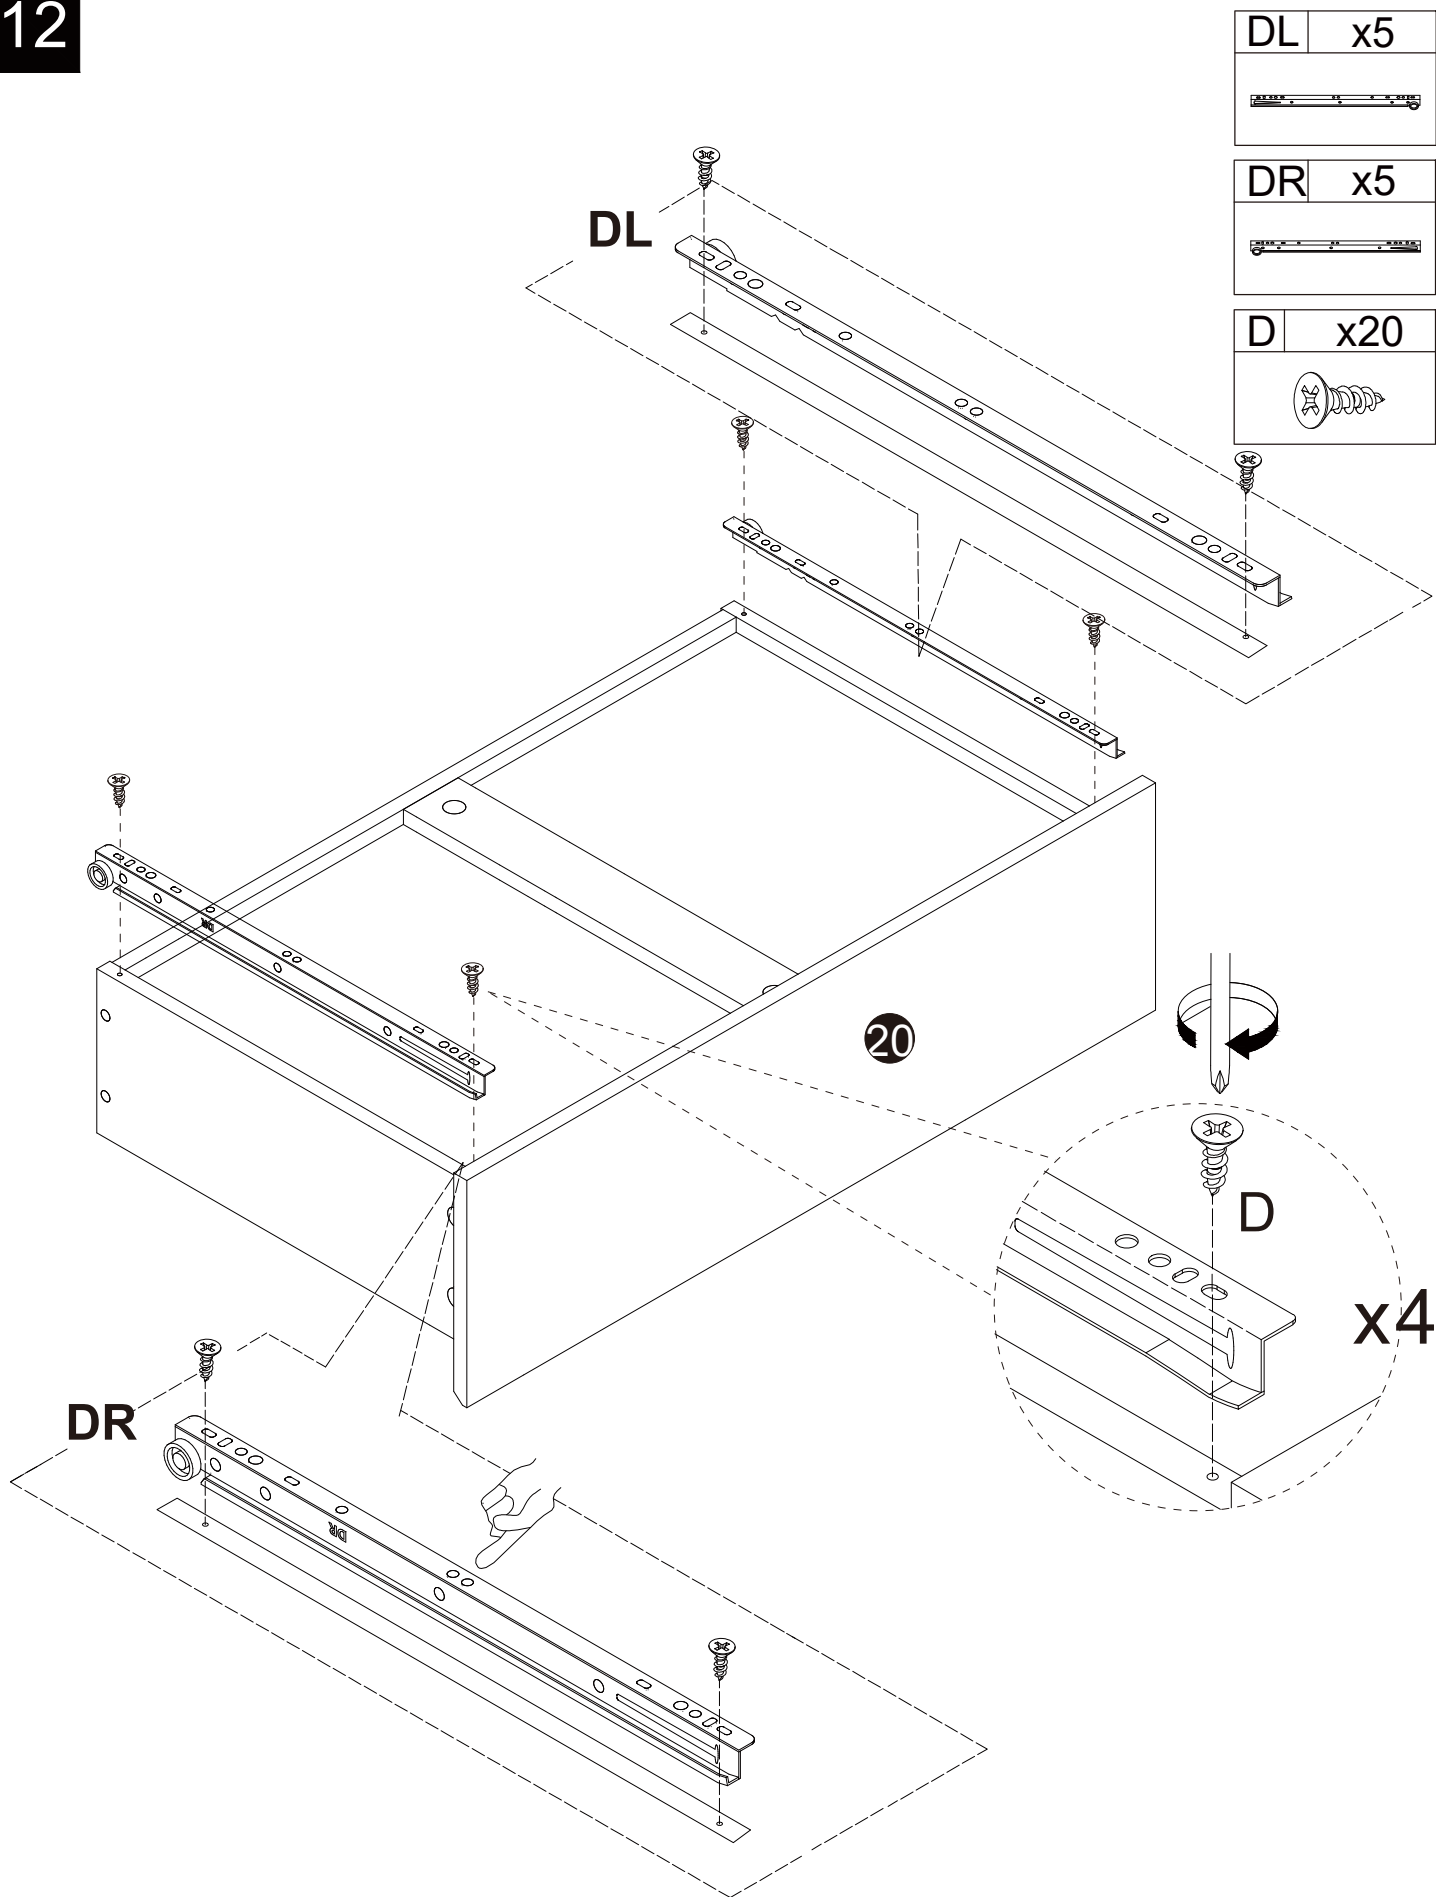



x5

13

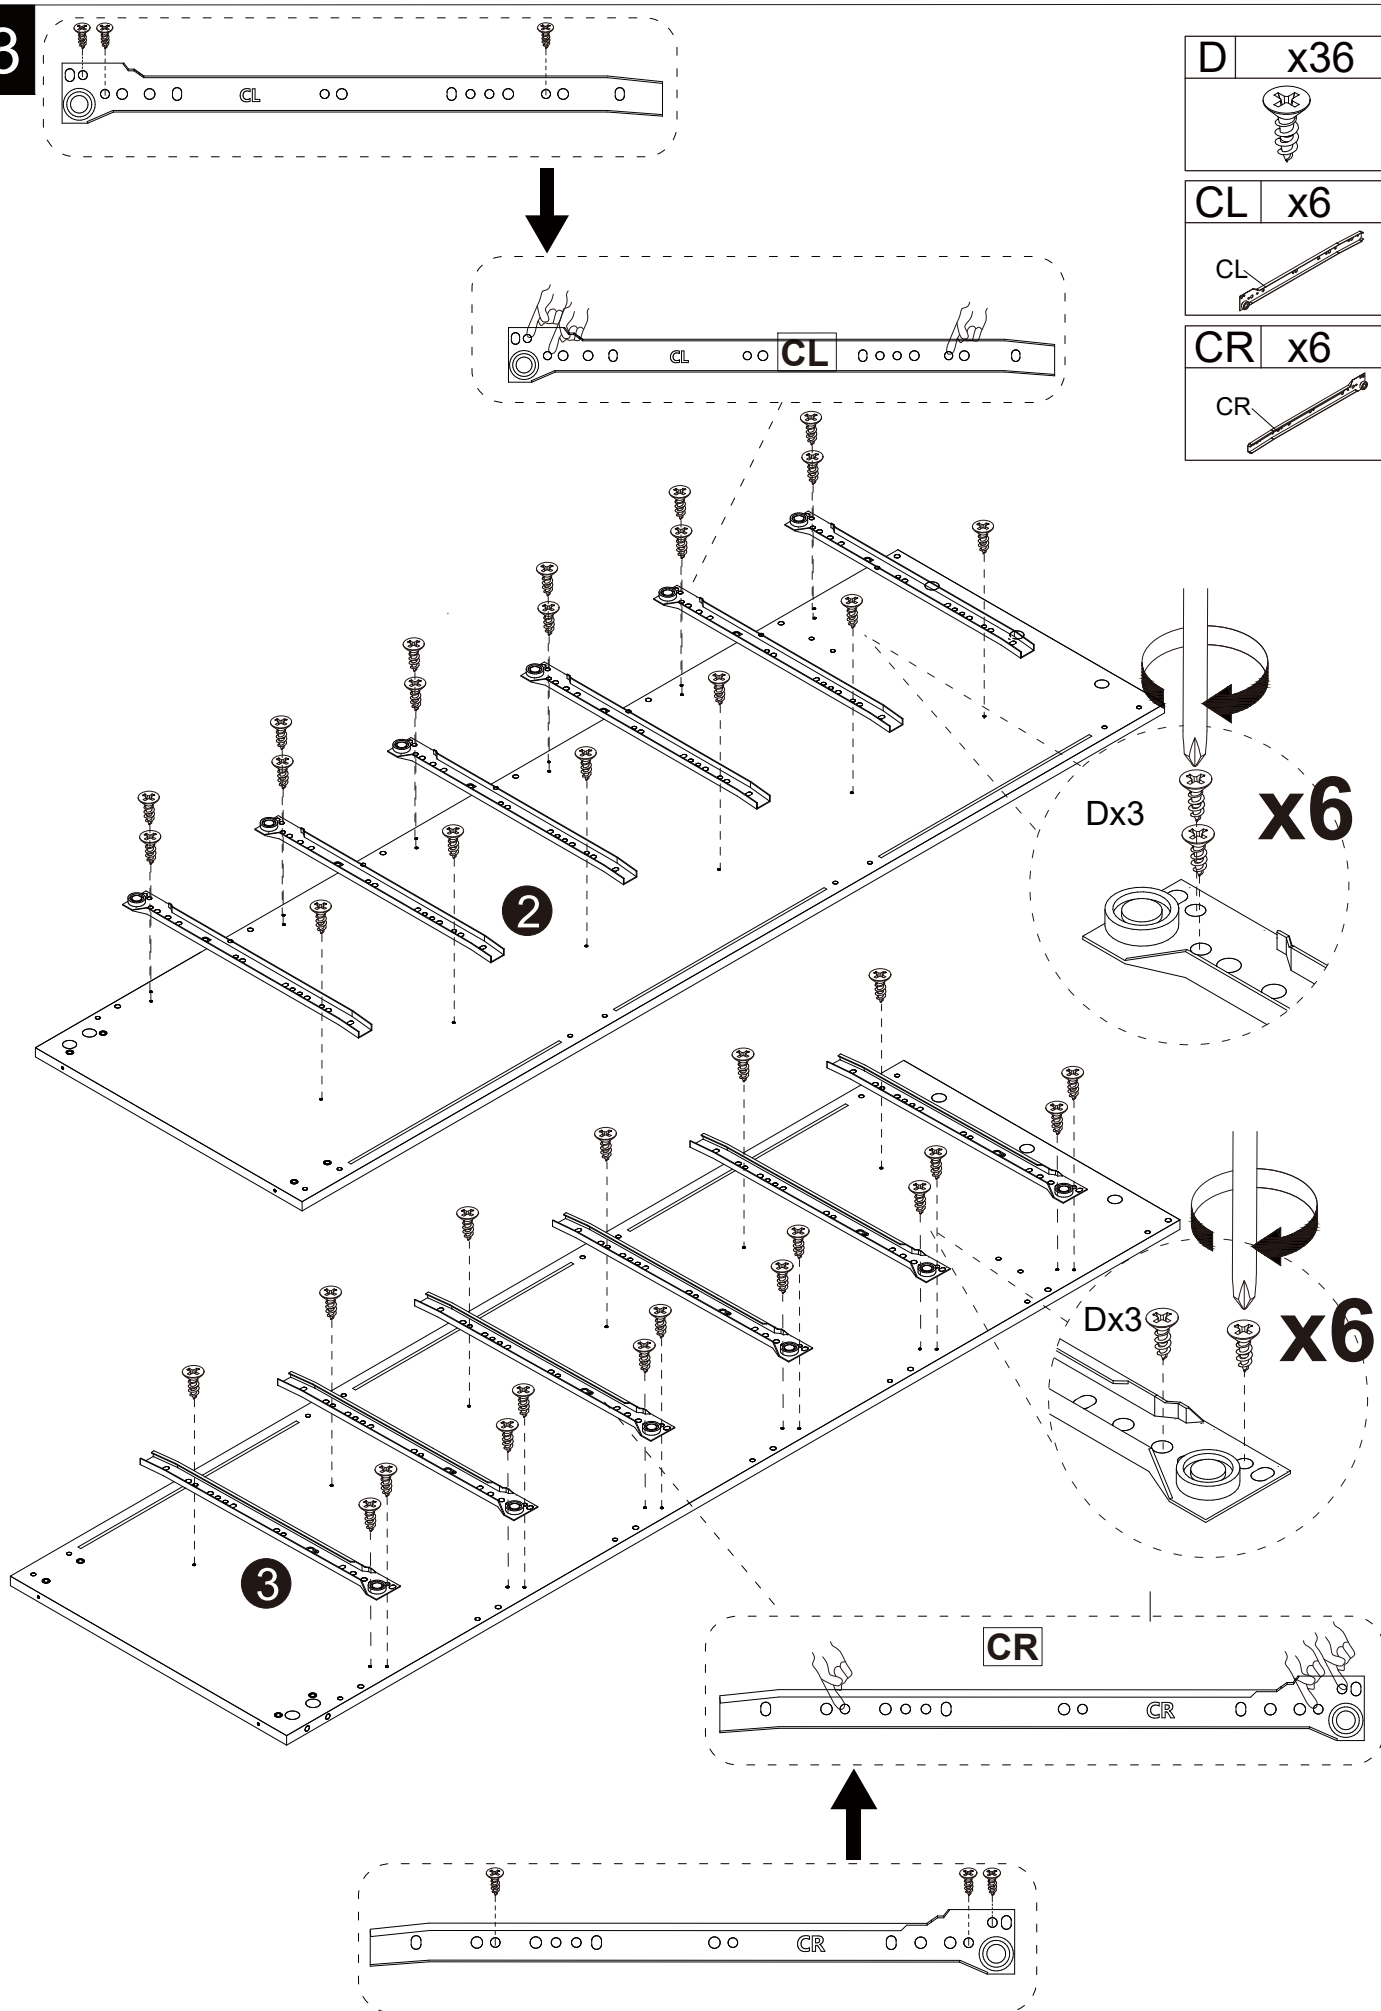


14

A	x17
	

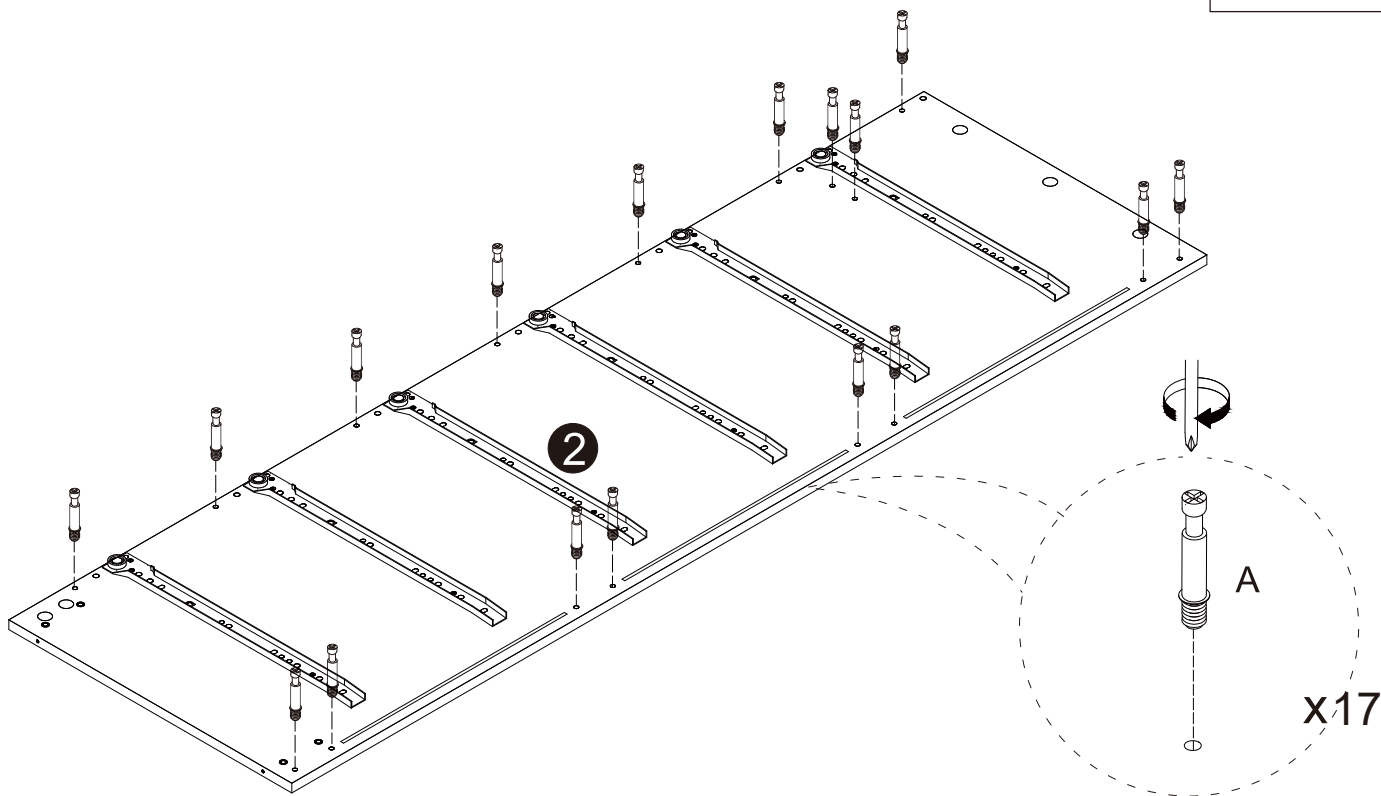


15

H	x4
	

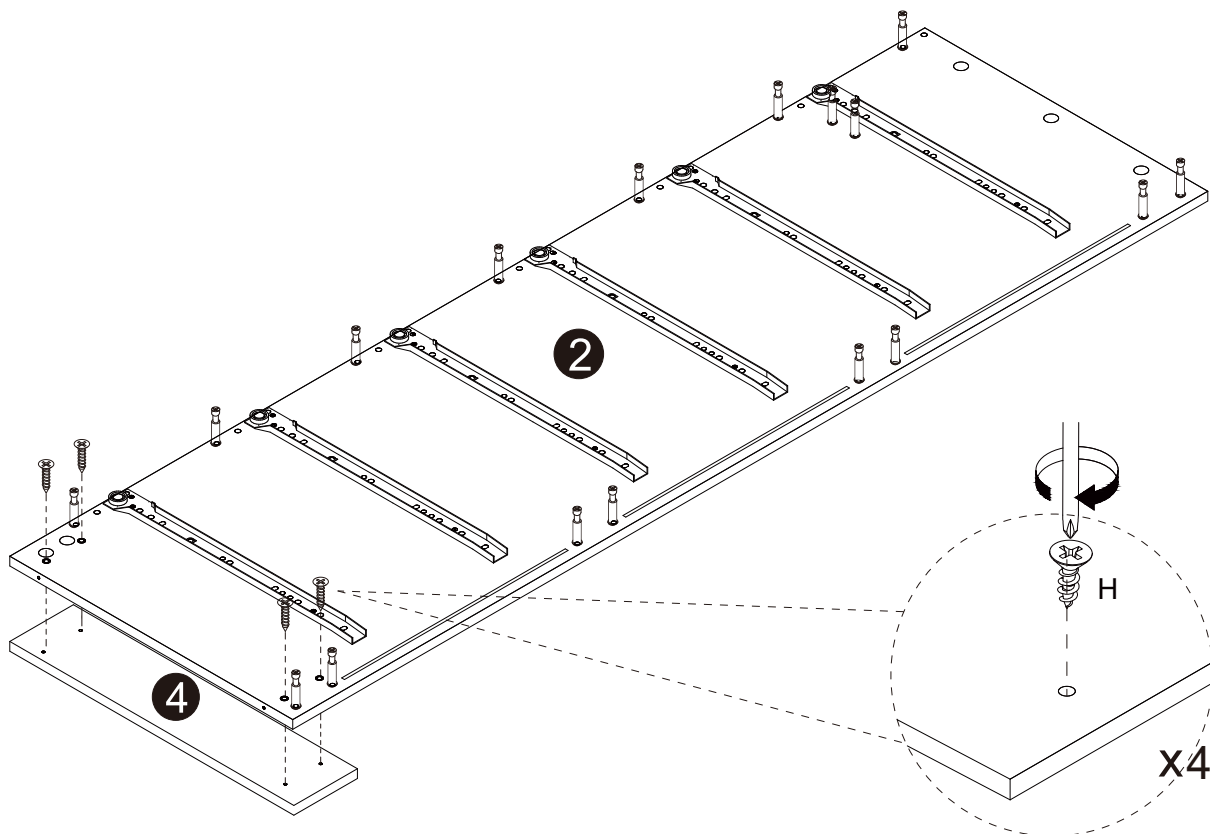


16

A	x17
	

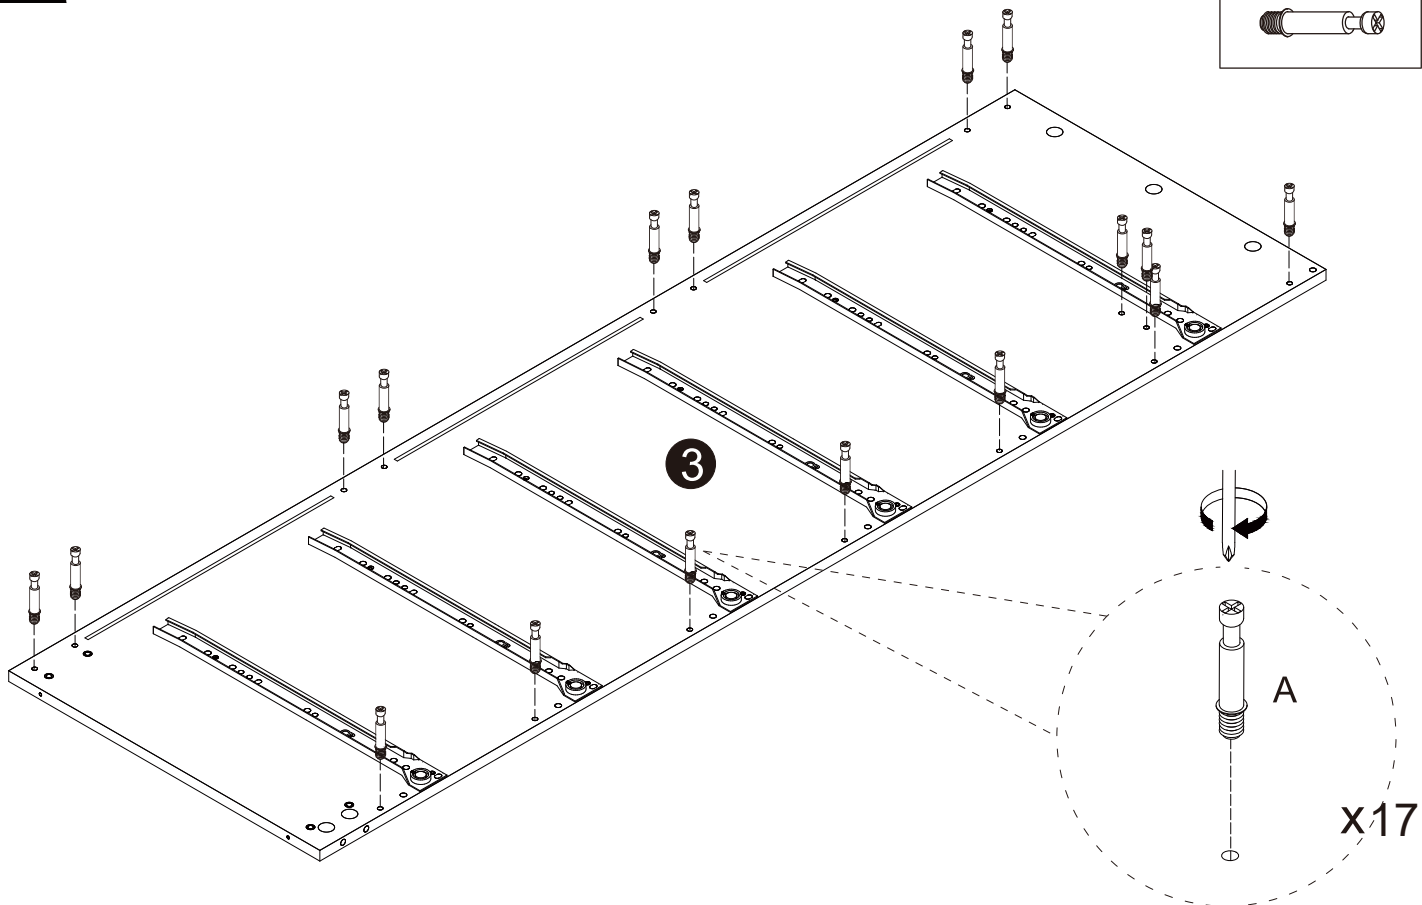


17


H	x4
	












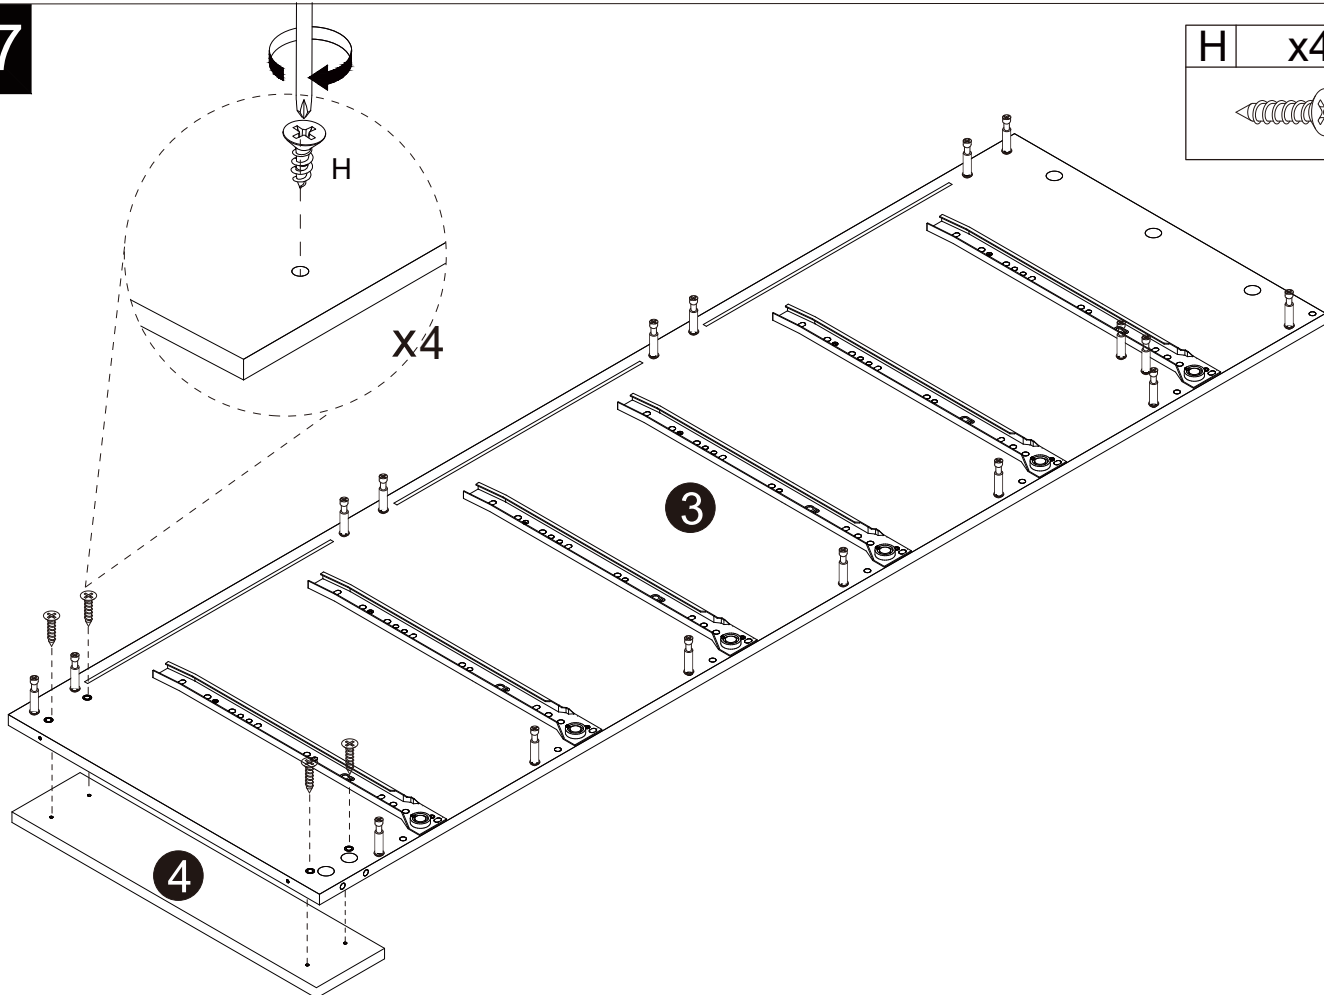


B	x6
	
C	x6
	

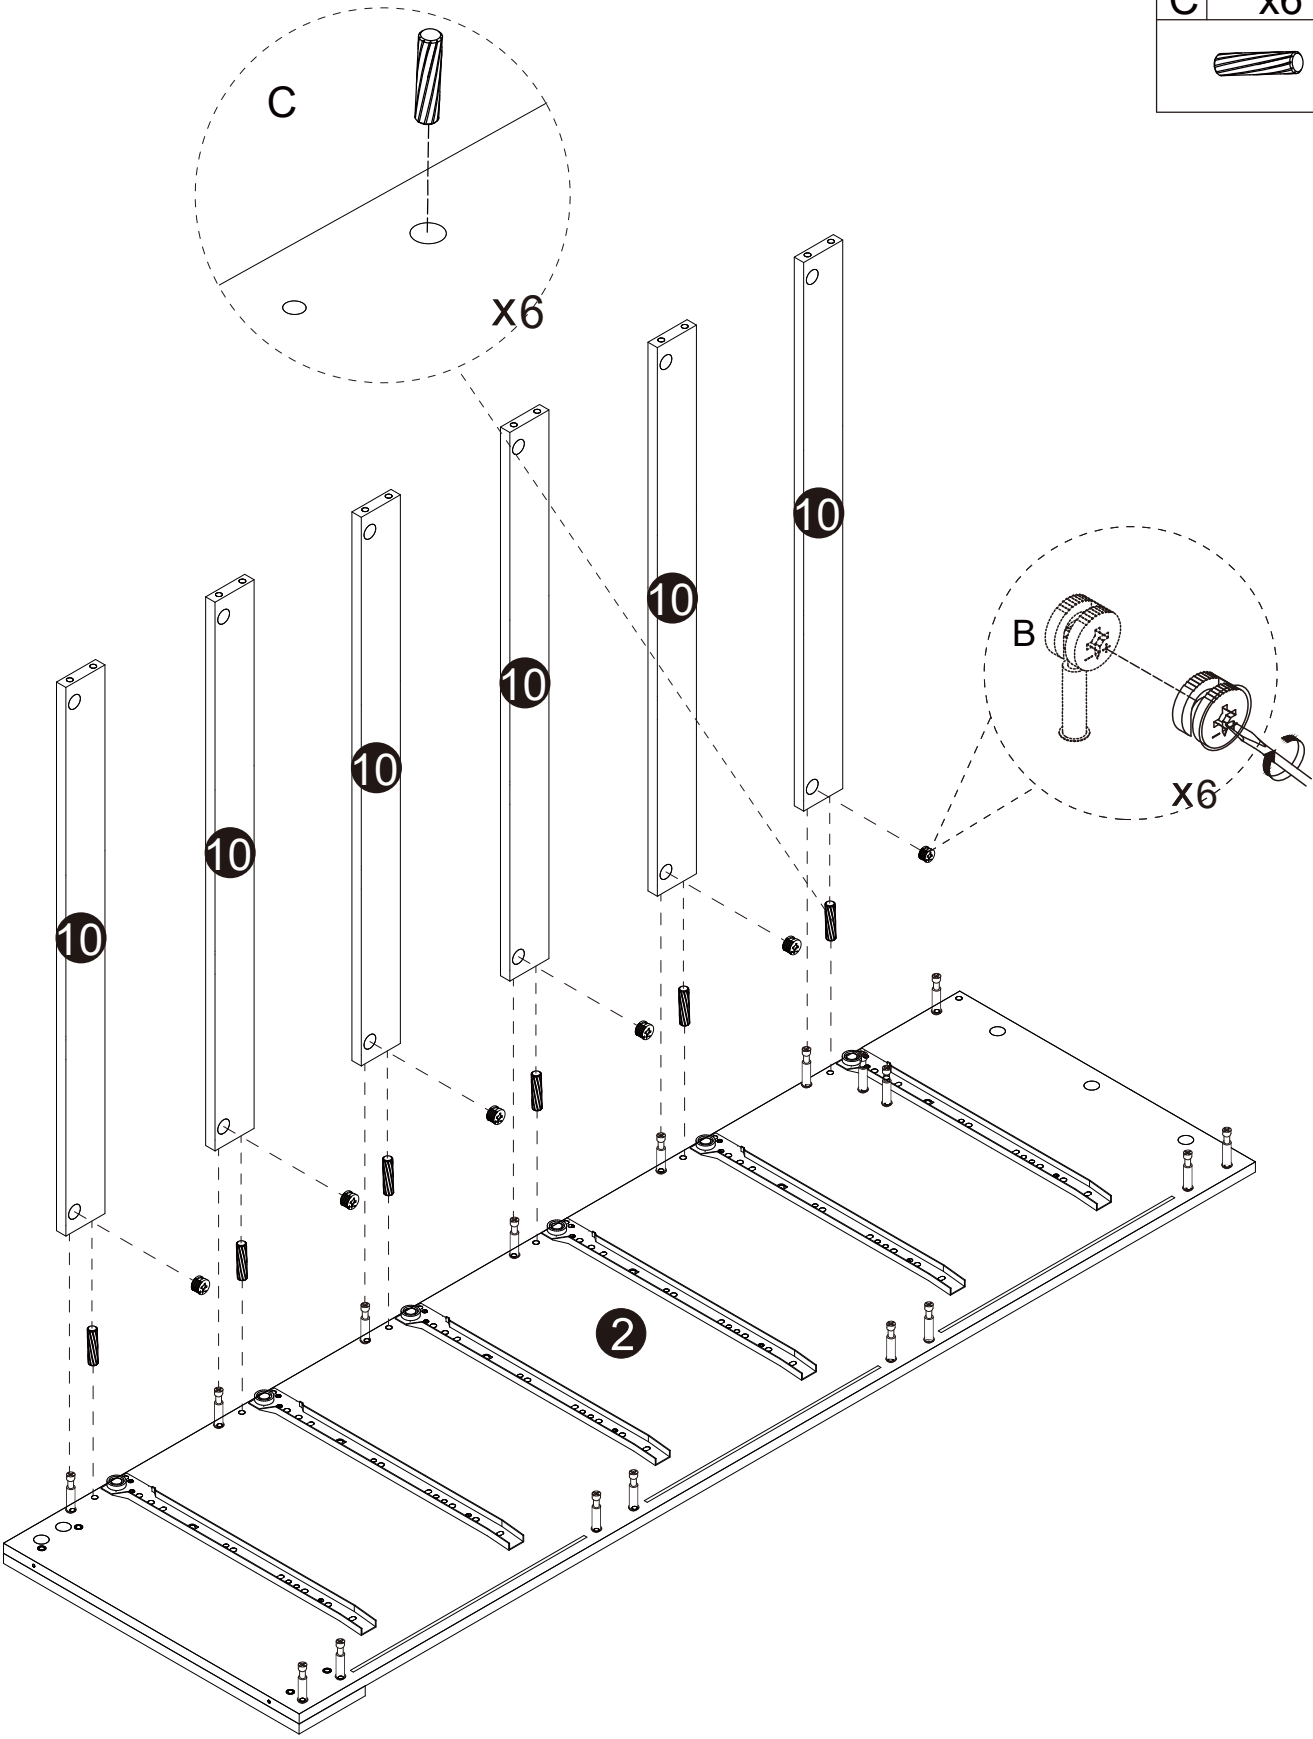



B	x6
	

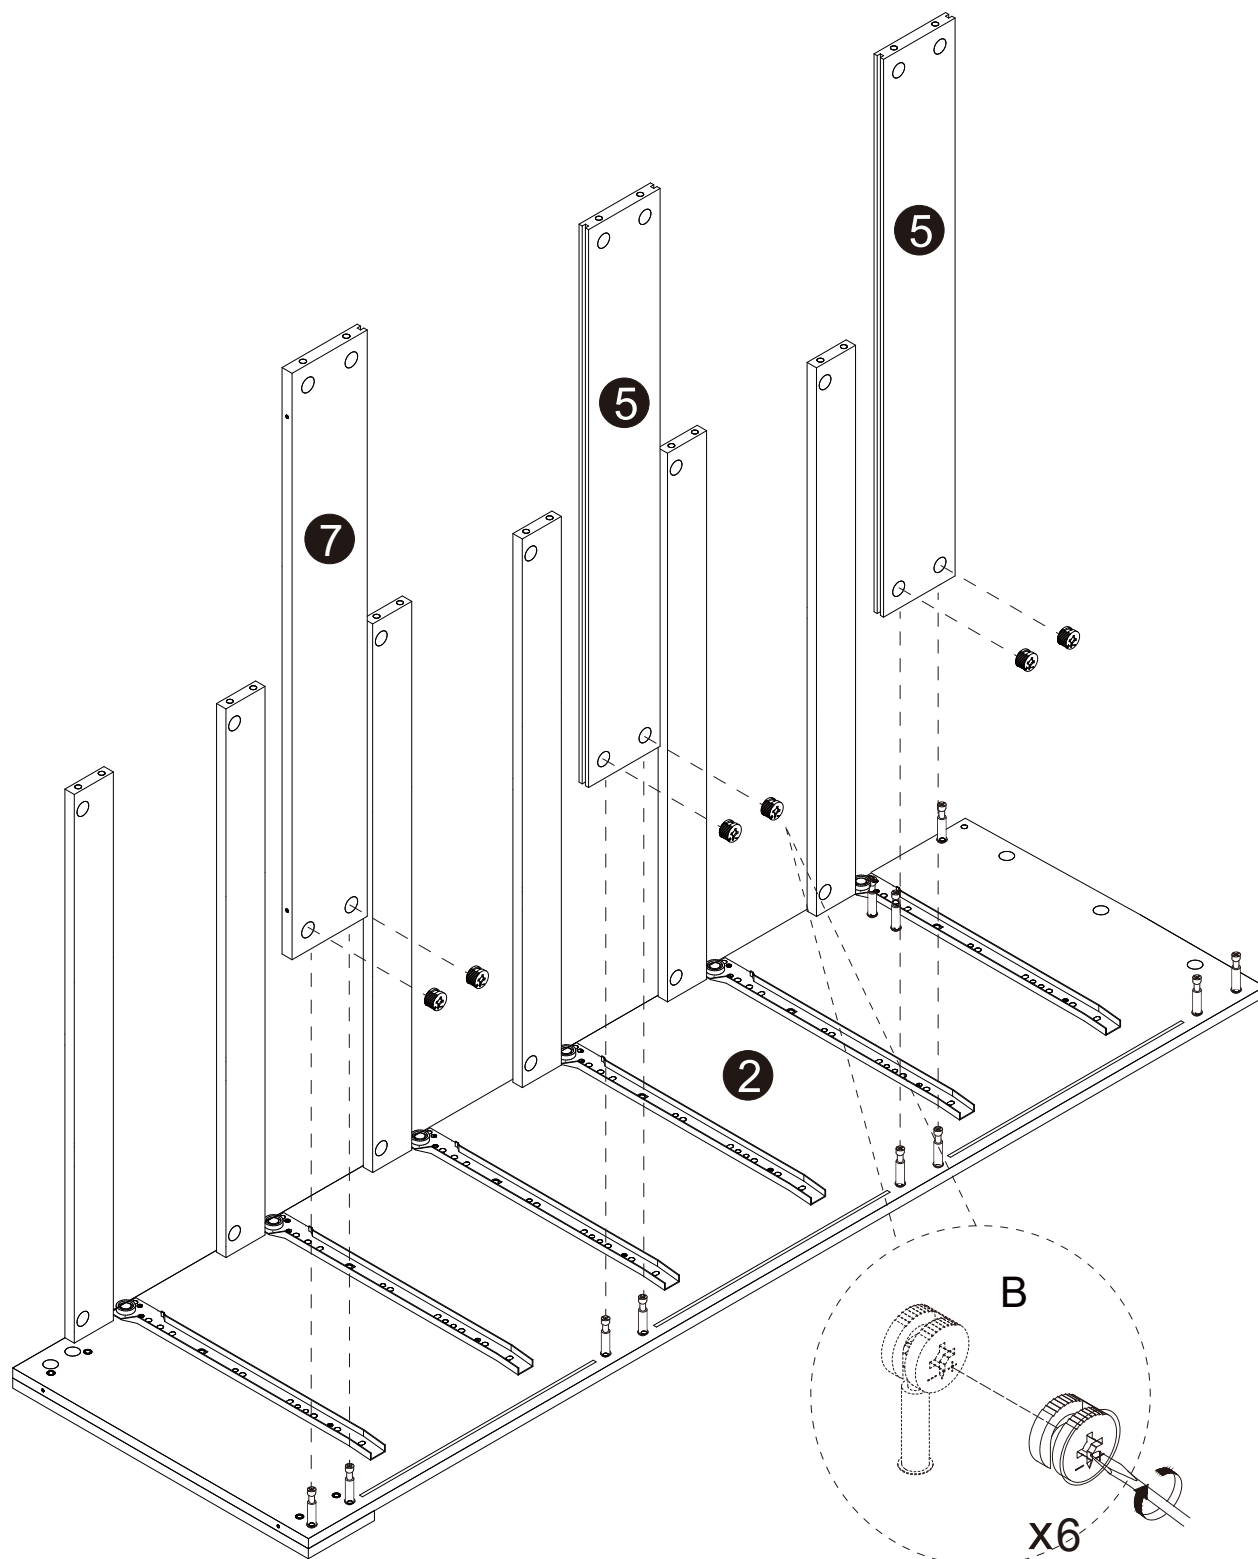

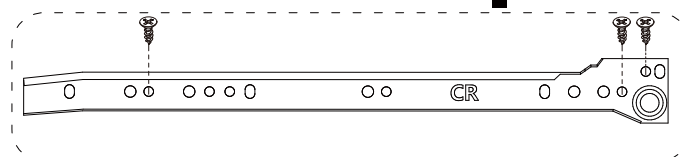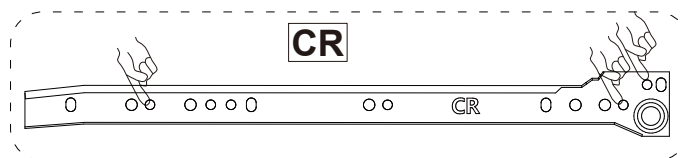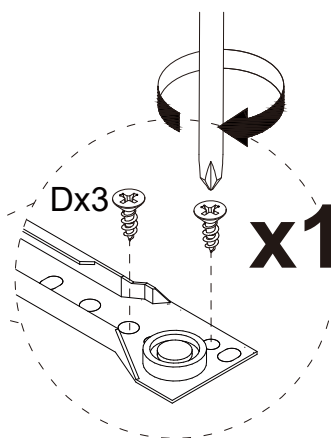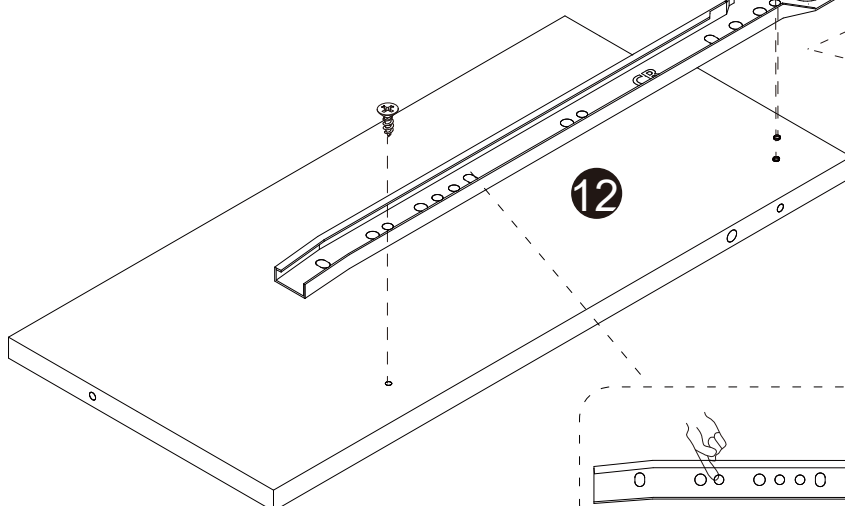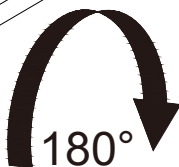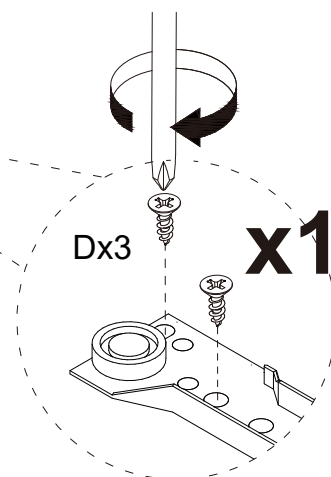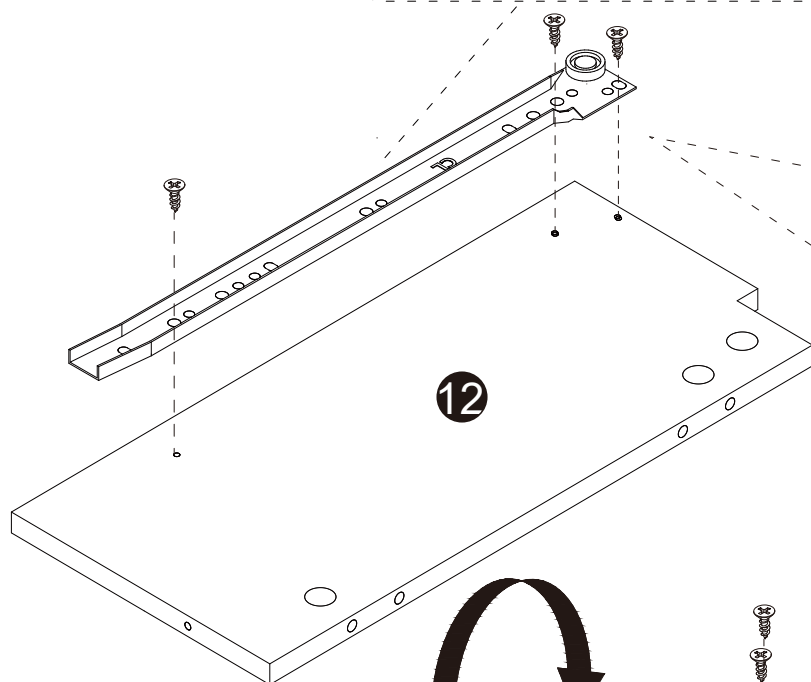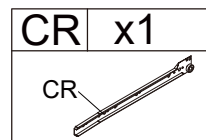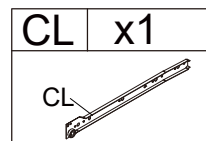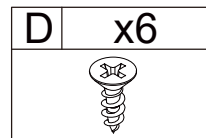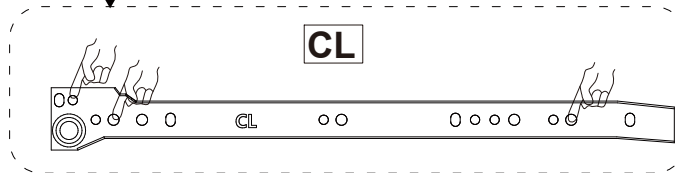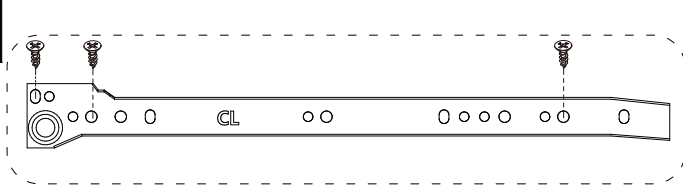


21

A	x1
	

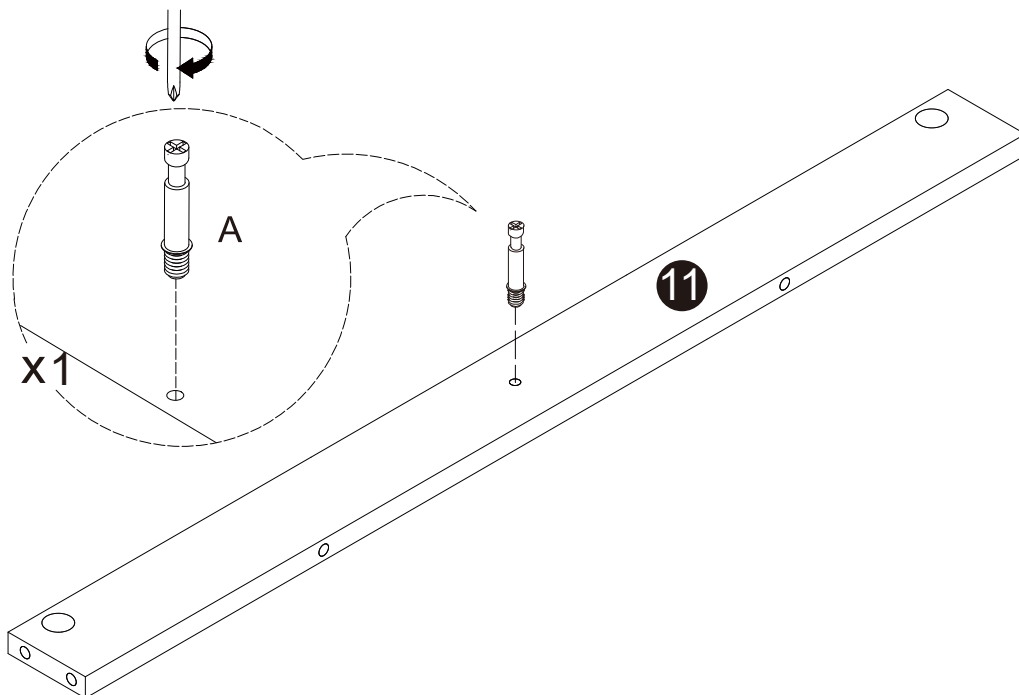


22

B	x1
	

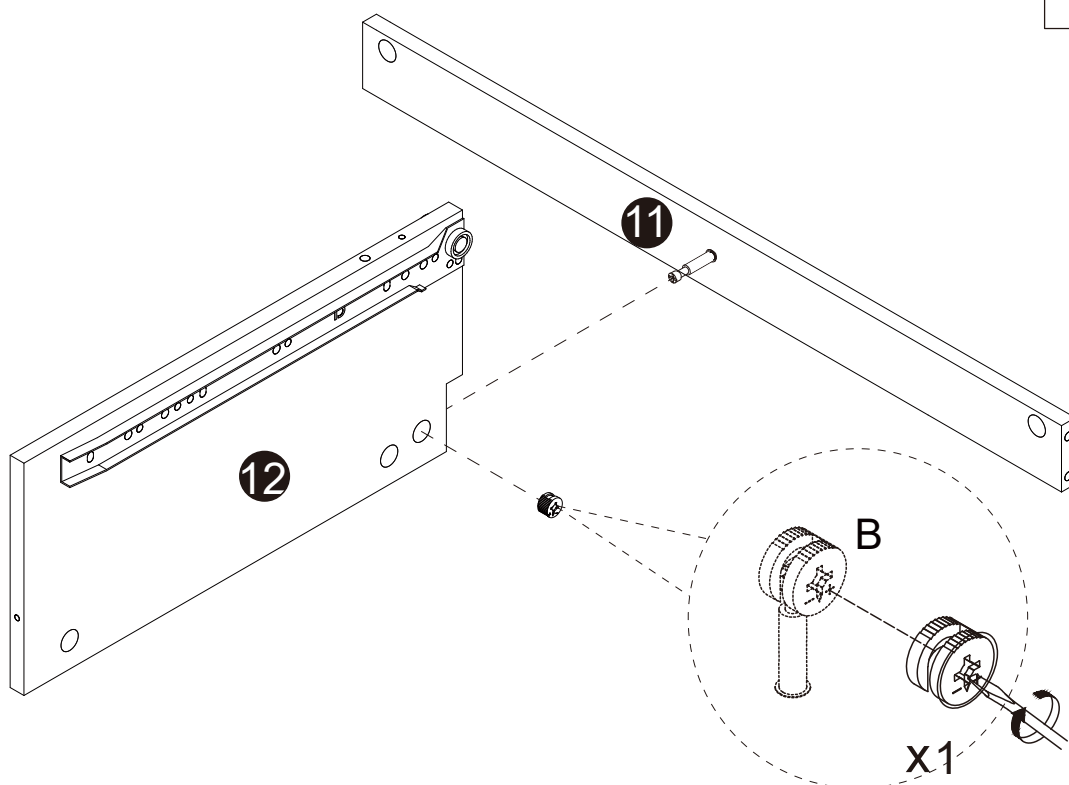


23

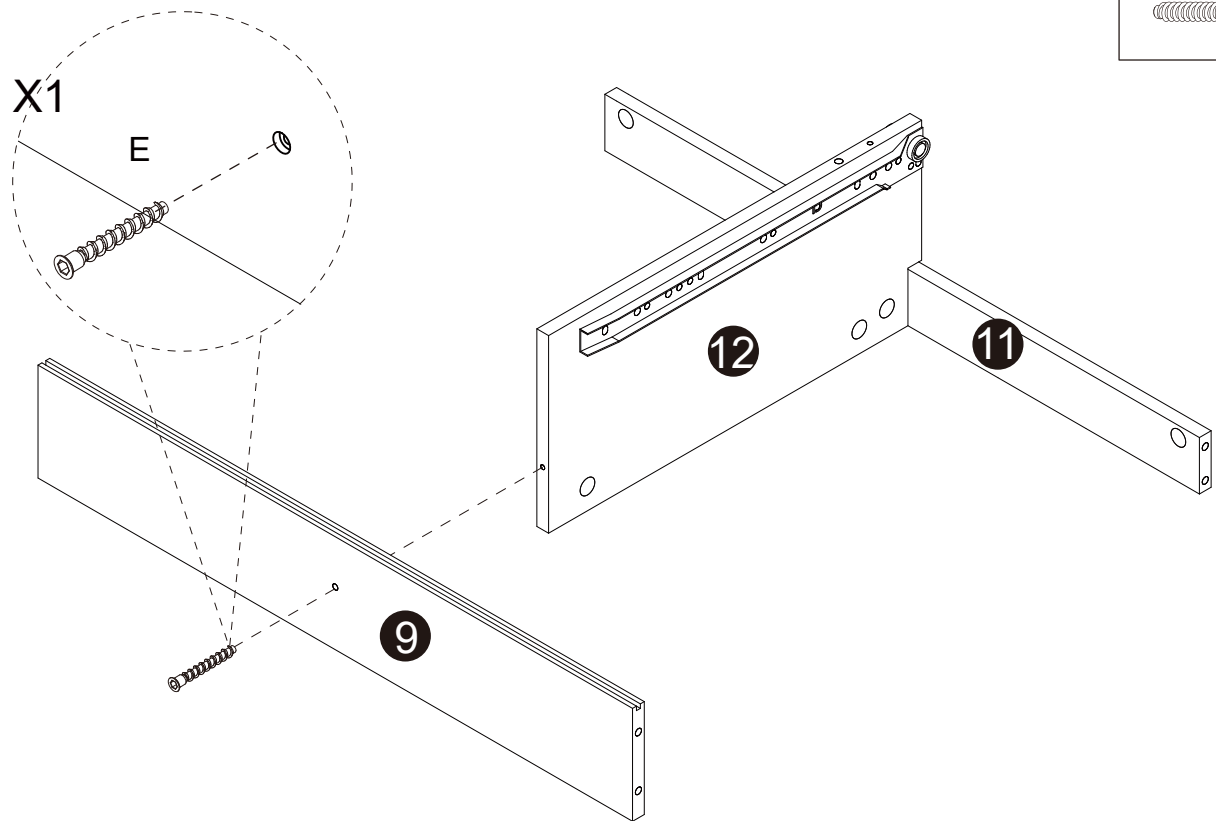


E	x1
	


24

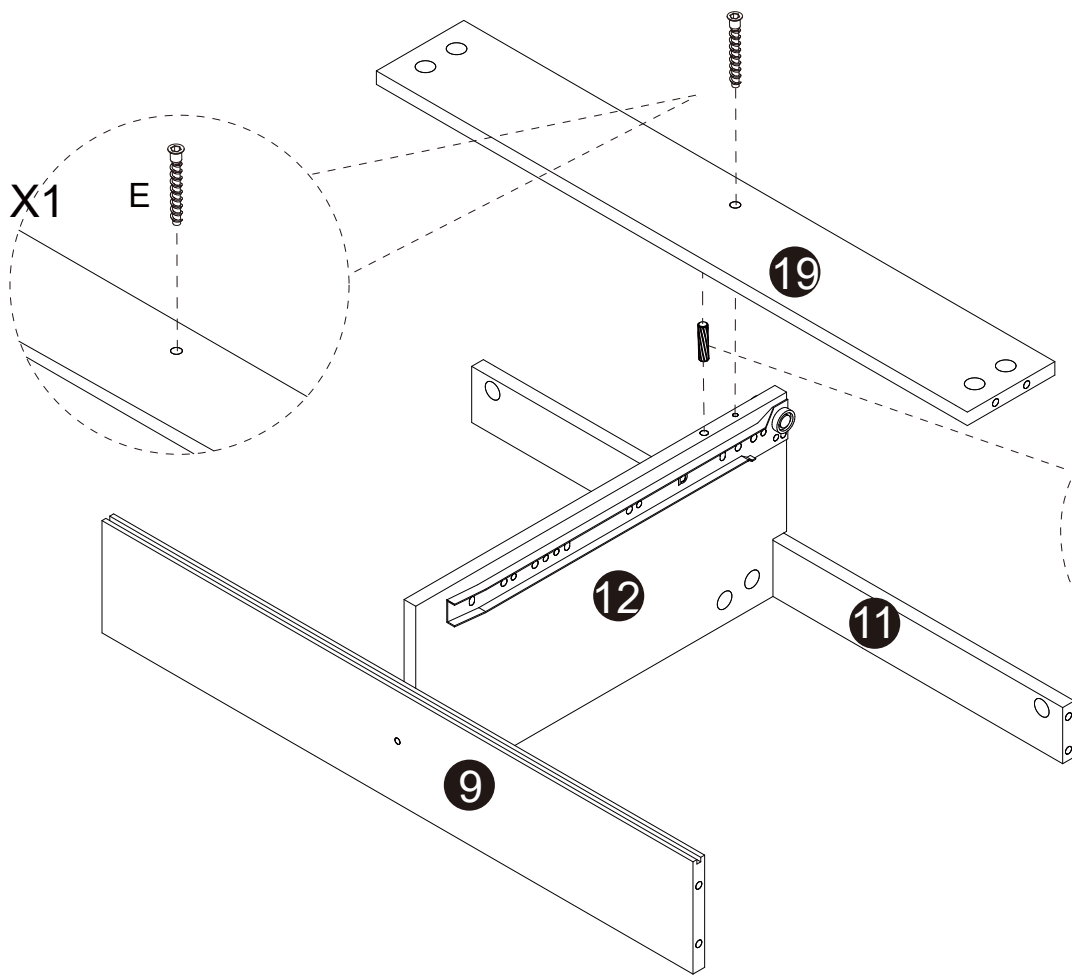


E	x1
	
C	x1
	

B	x5
	
C	x1
	

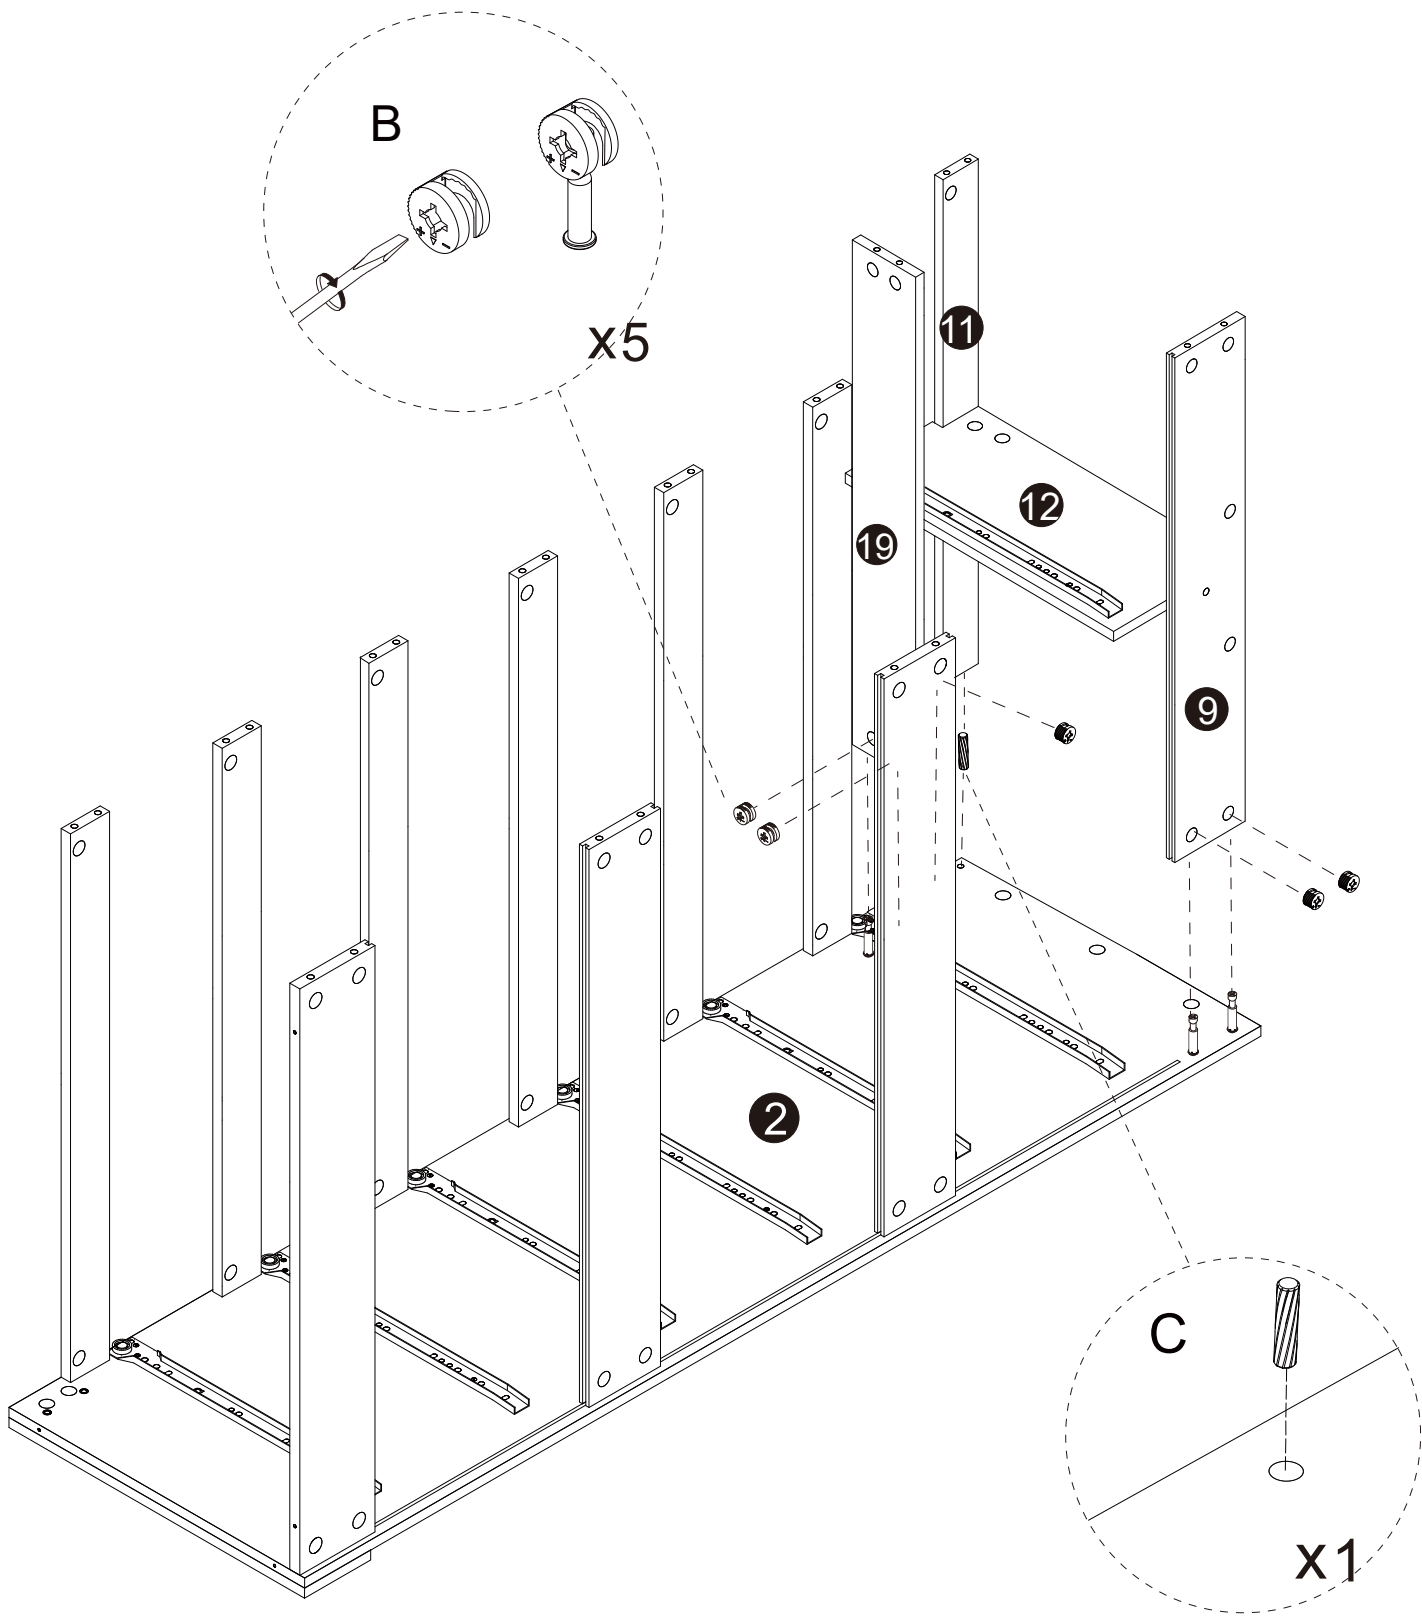


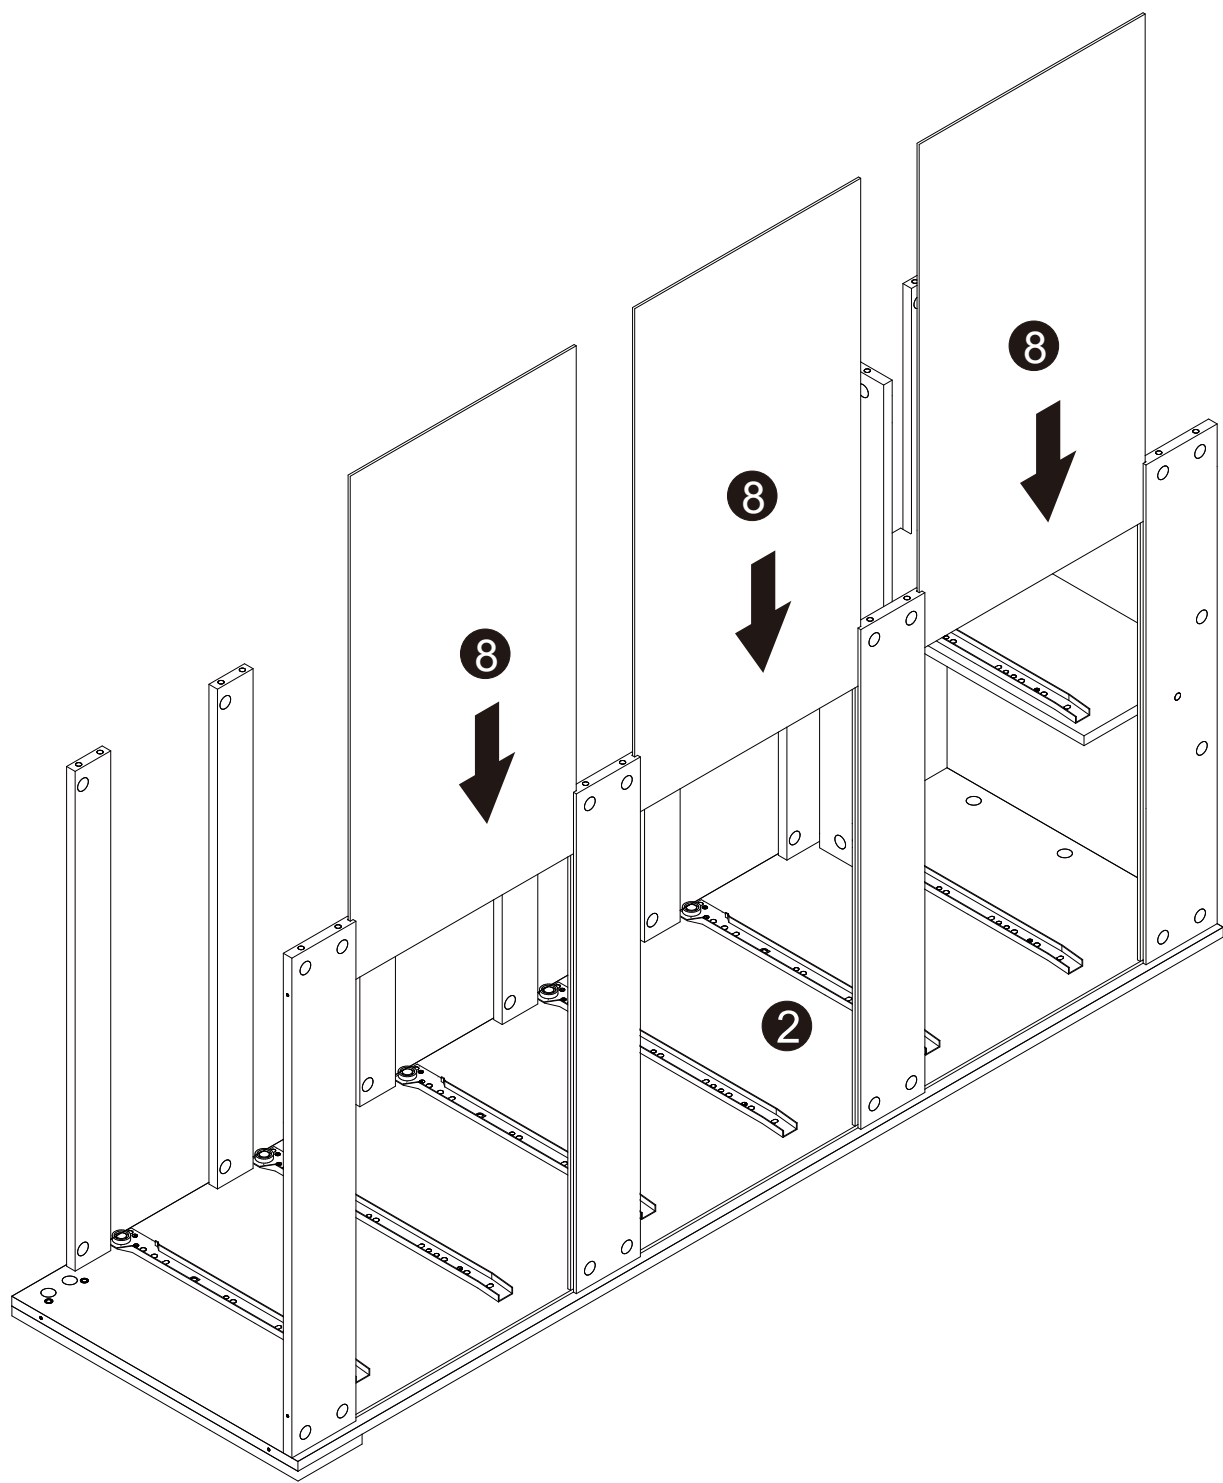


B	x17
	
C	x7
	

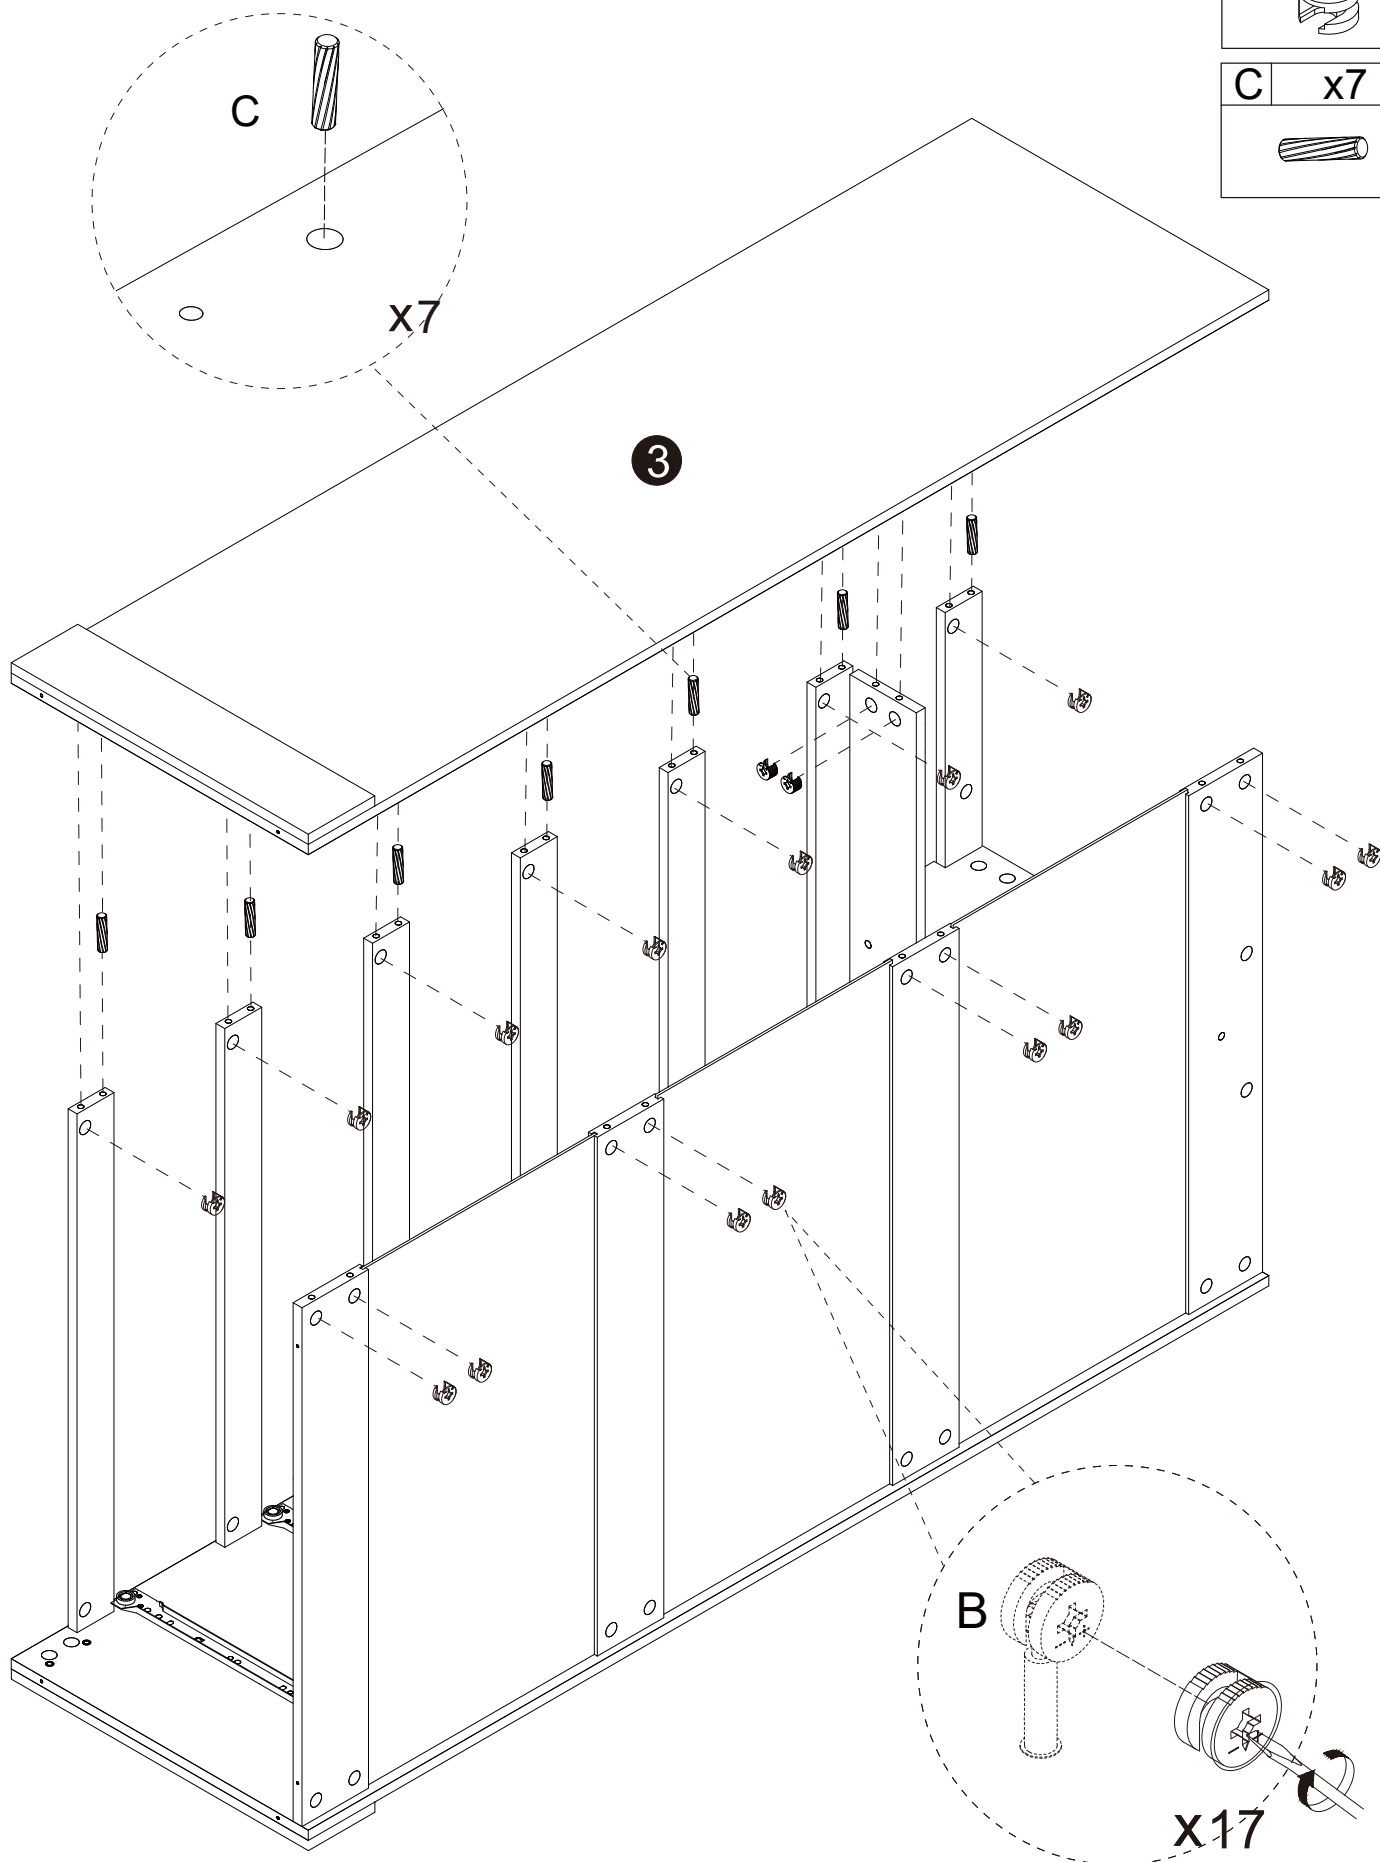


28

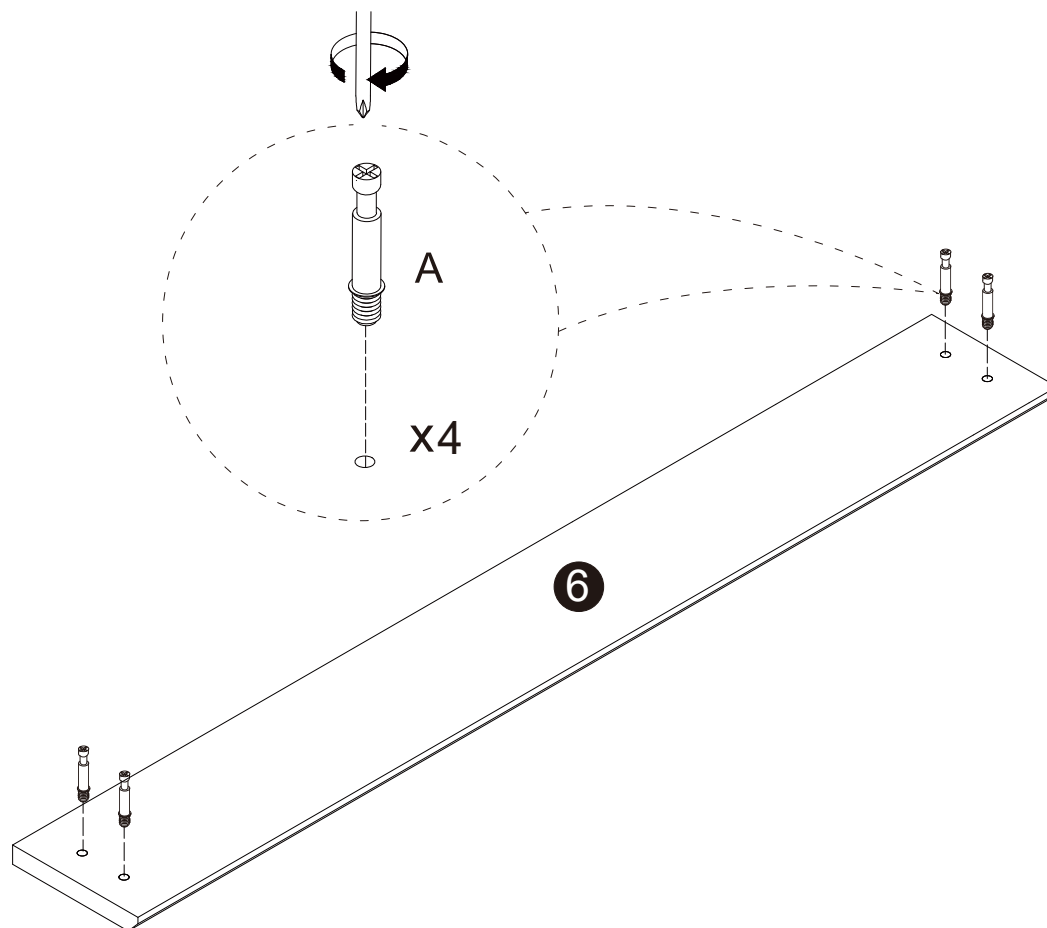



29

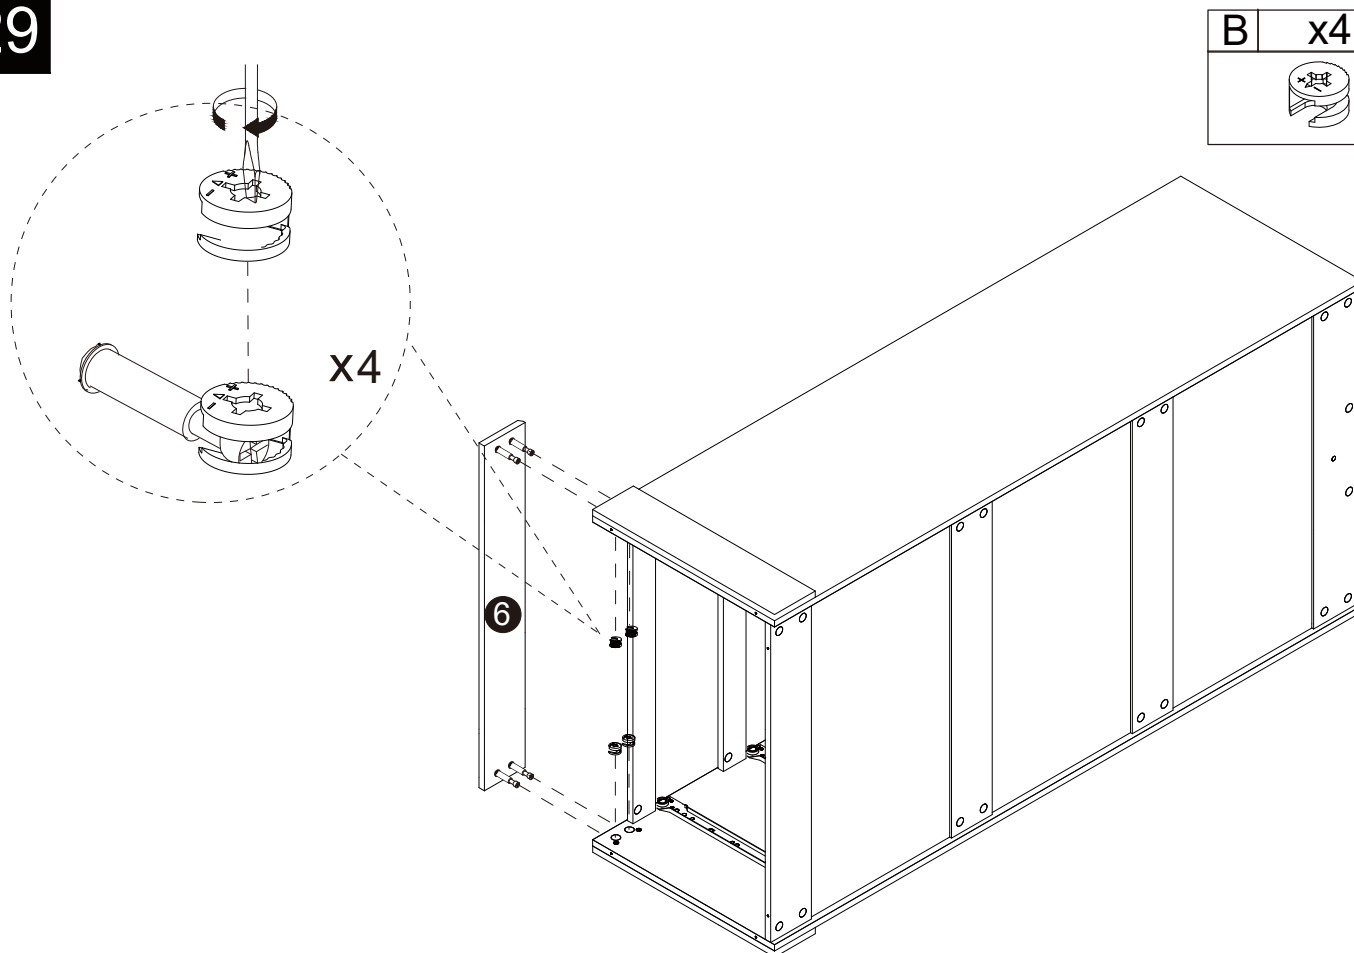


G	x8
	


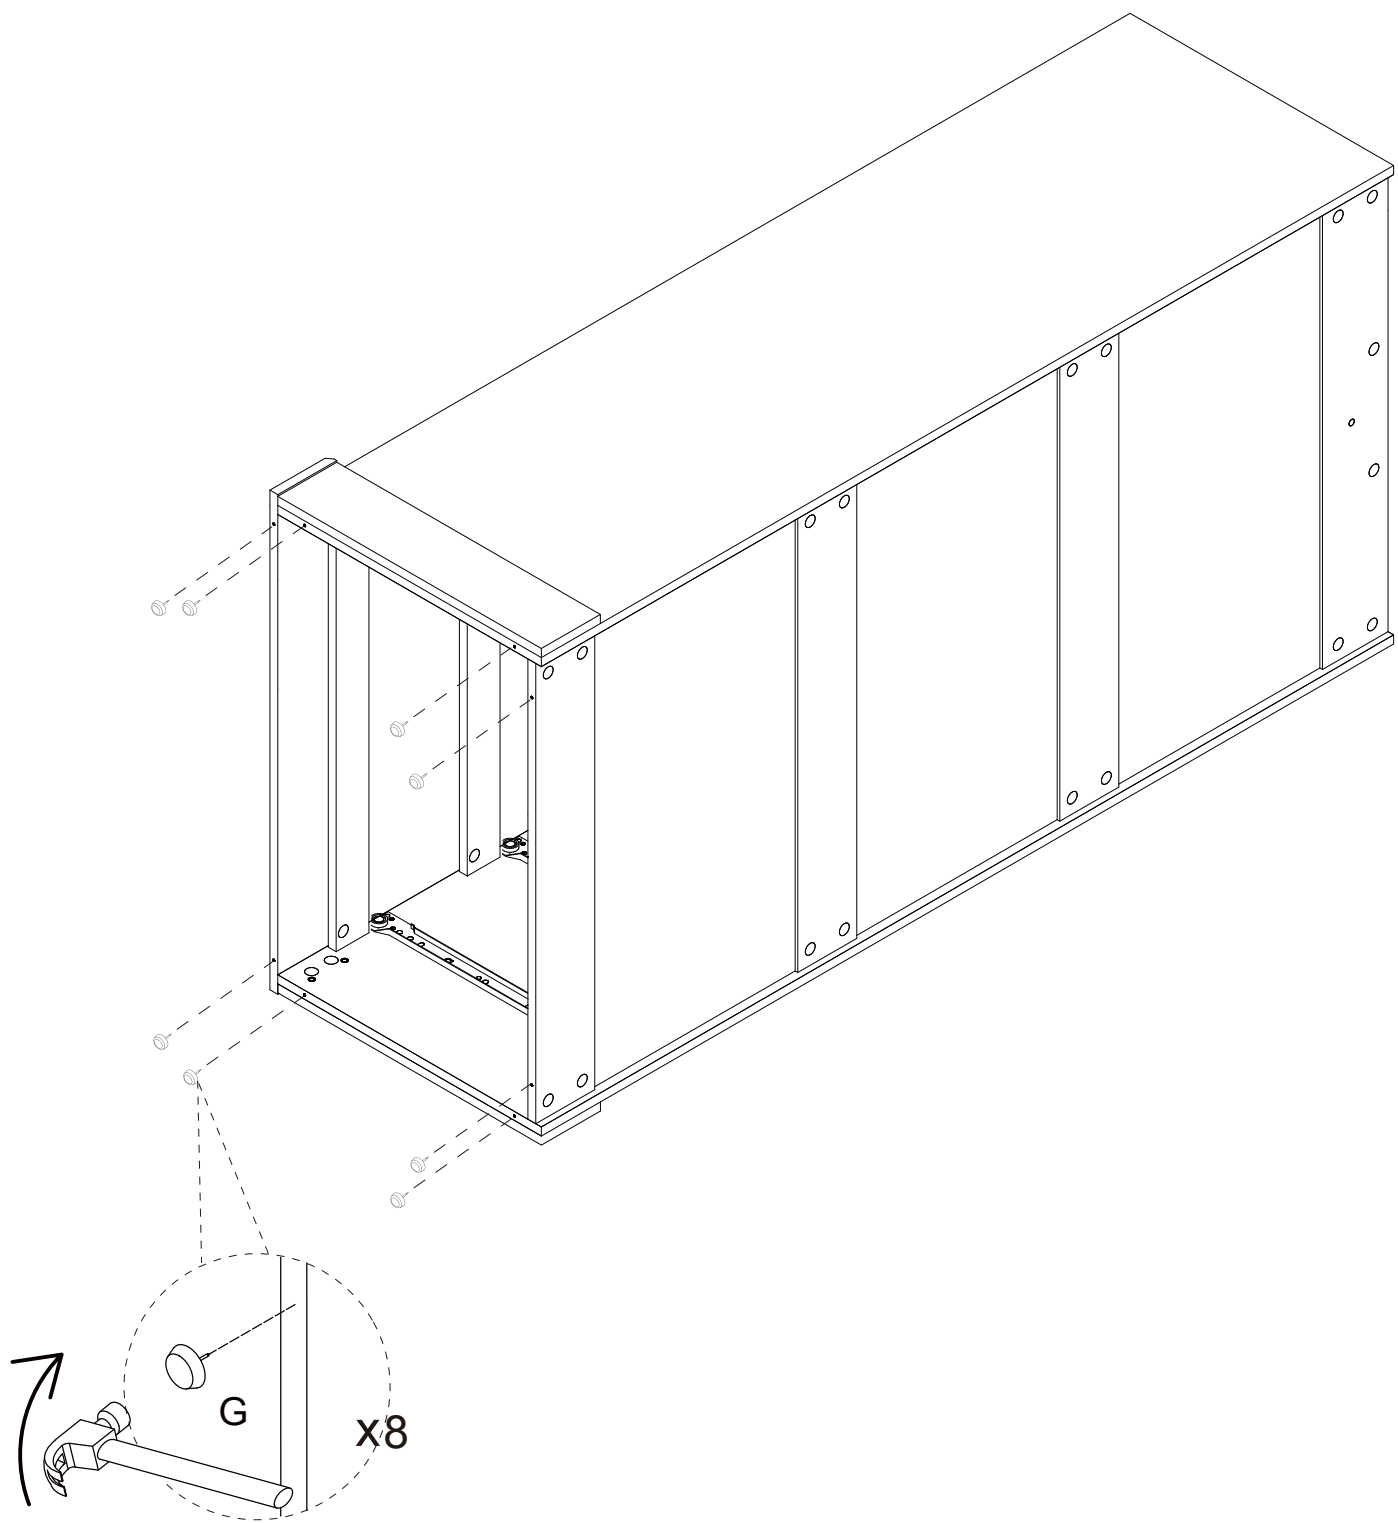



A	x8
	




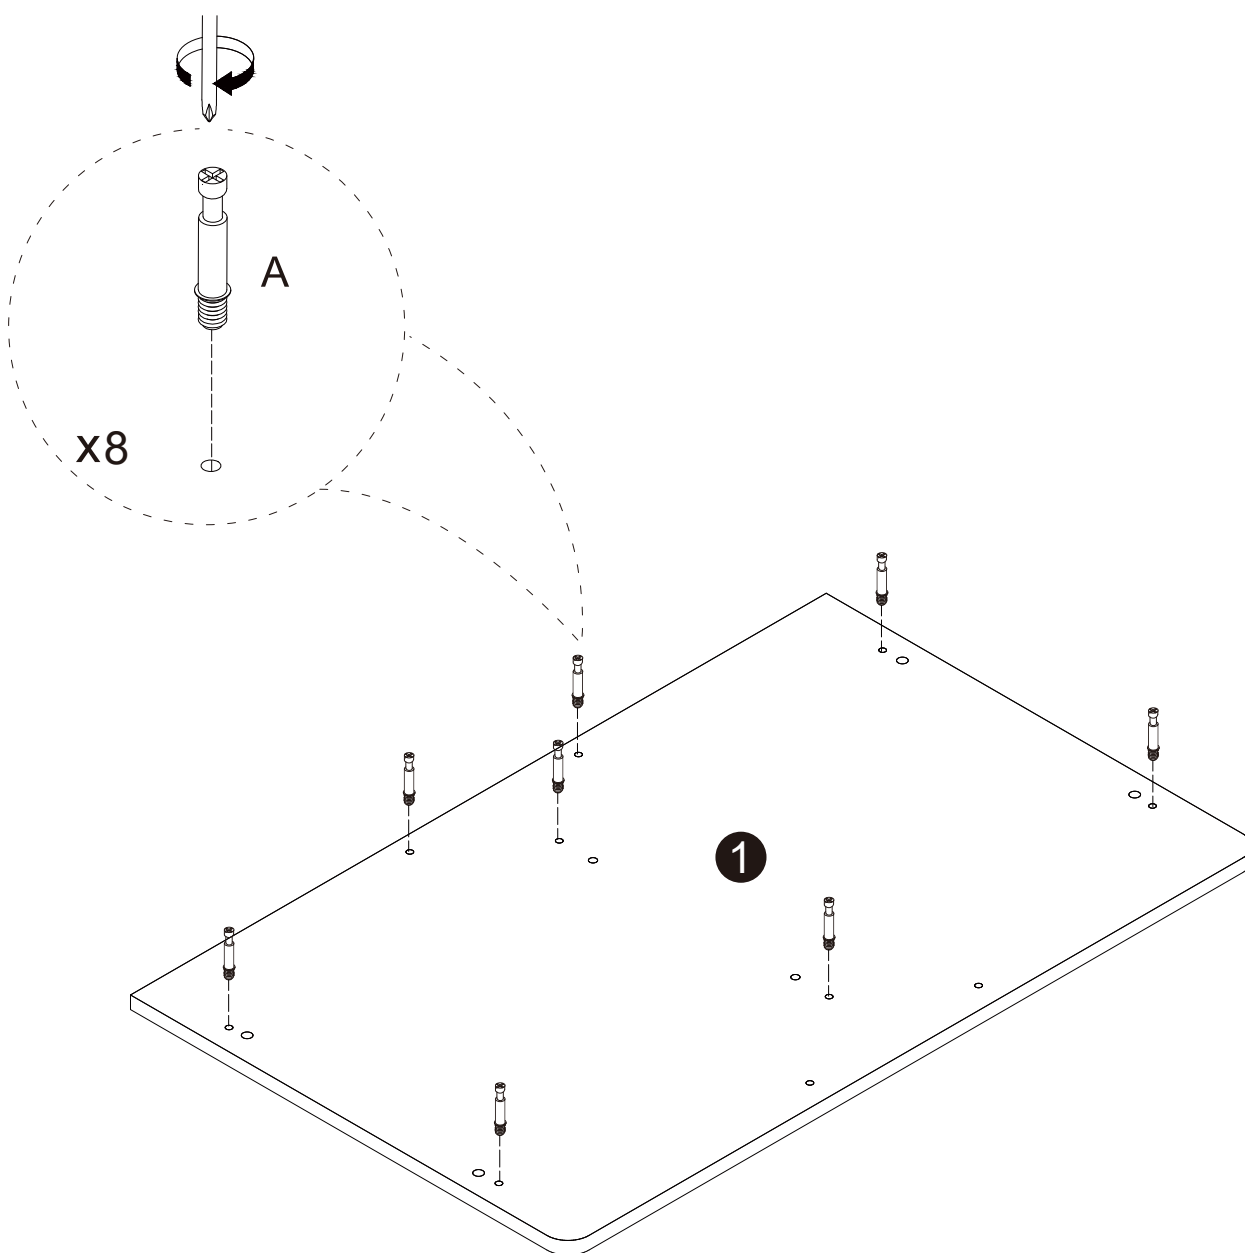



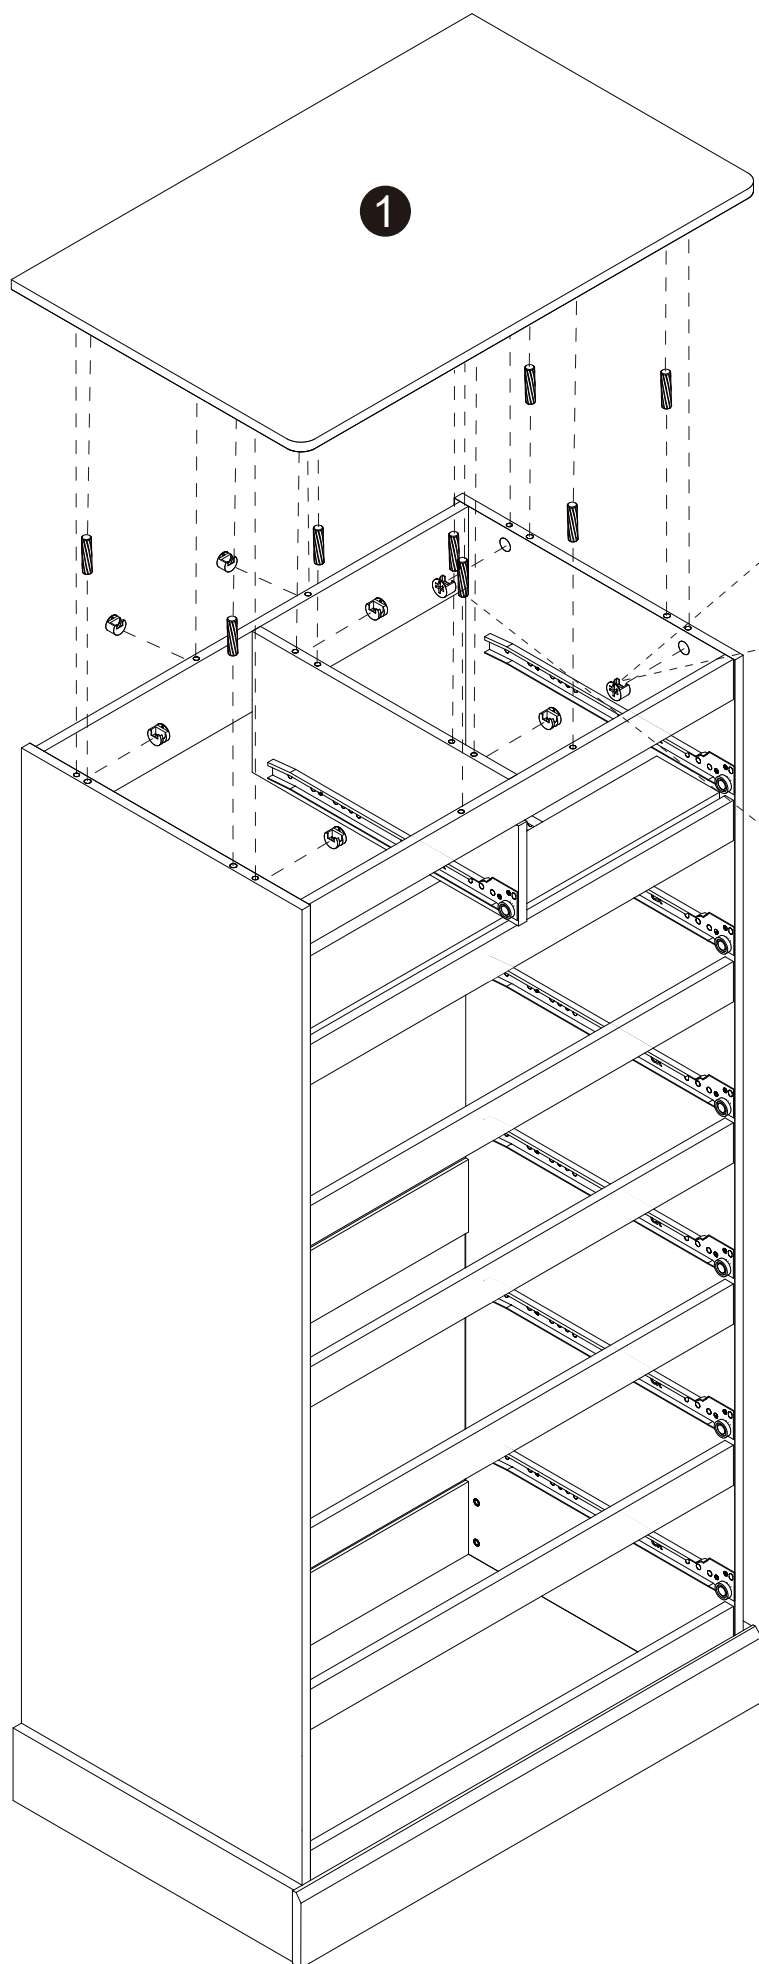


B	x8
	
C	x8
	

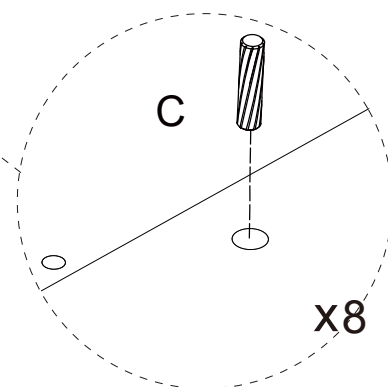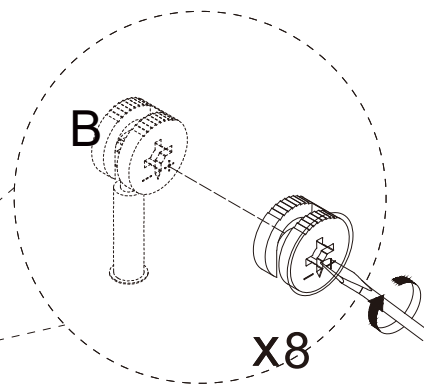


F	x12
	
J	x2
	
L	x12
	

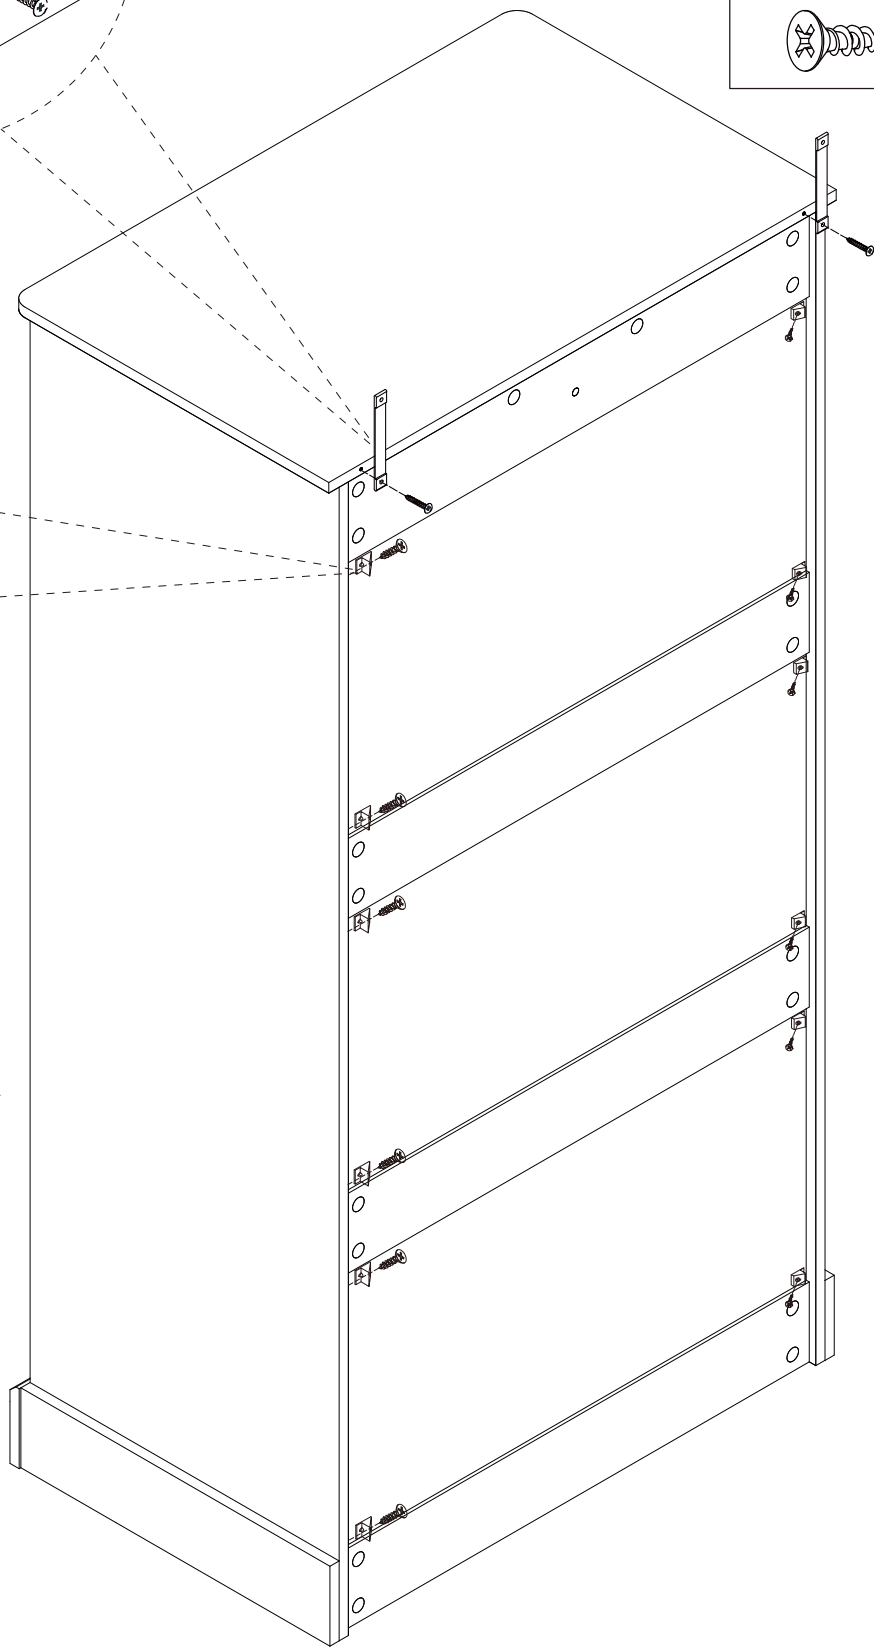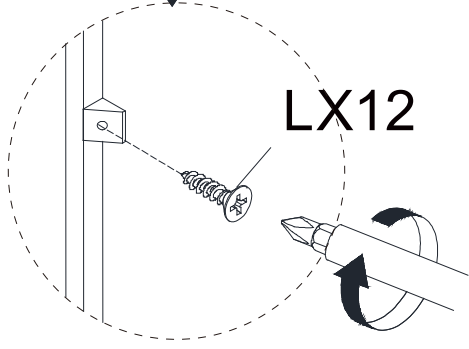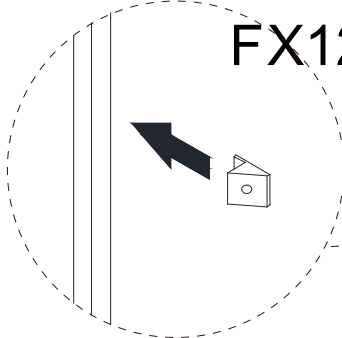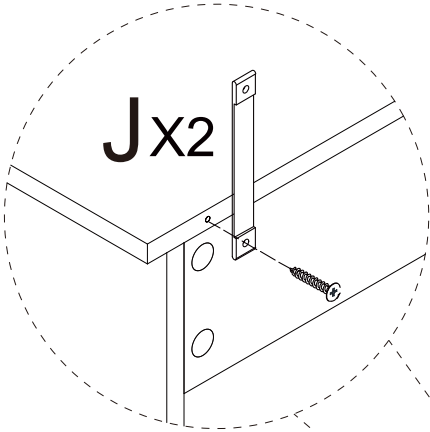


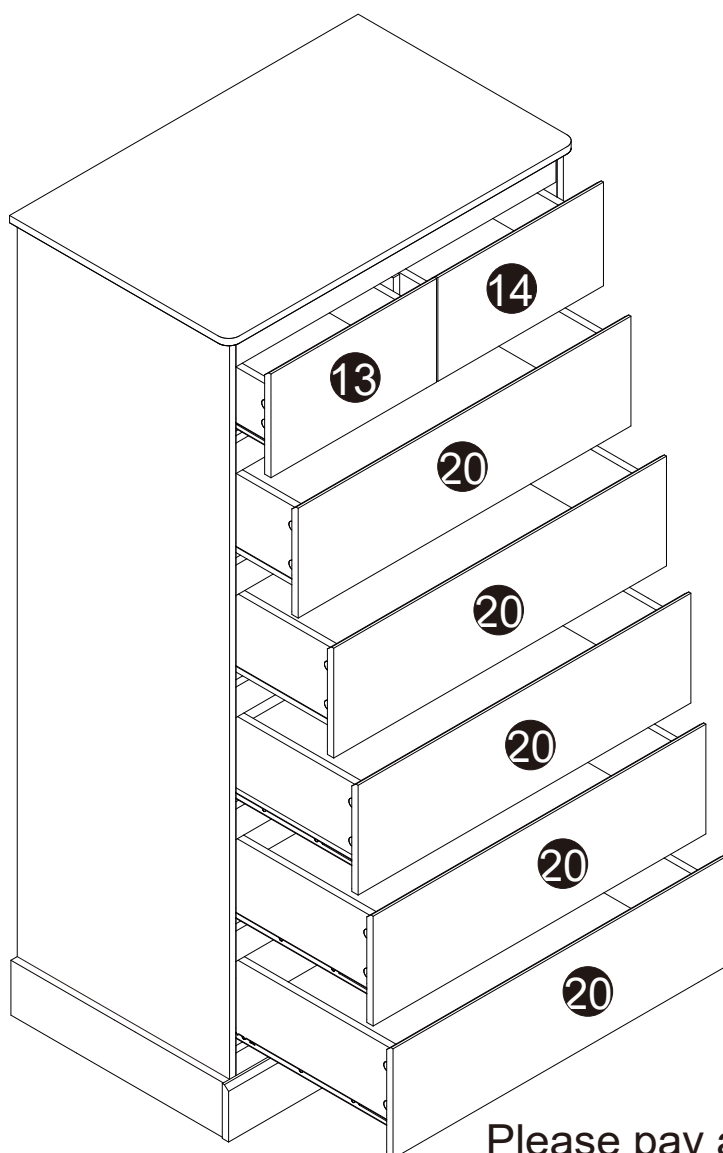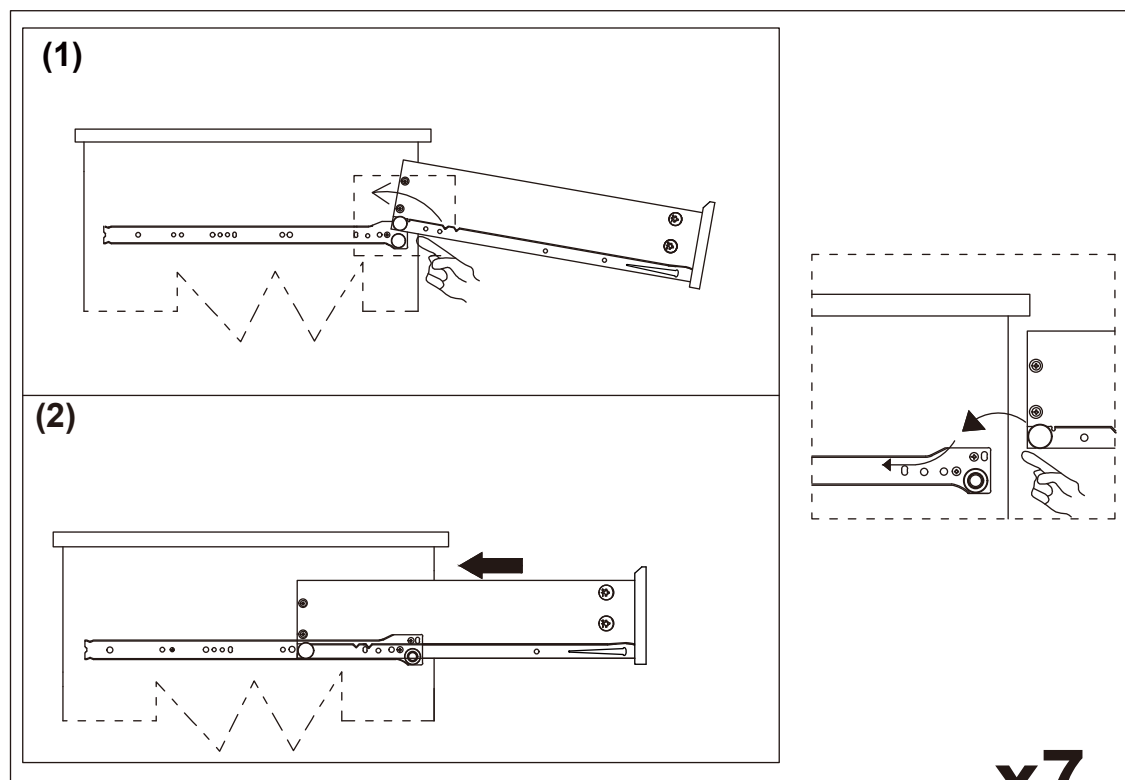

Please pay attention to the drawer number.
The drawer panel has an installation direction.


J	x2
	

WALL

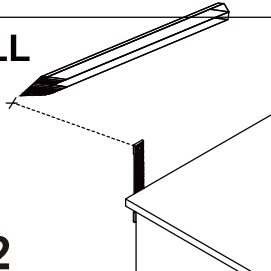


I x2

WALL +
drilling hole

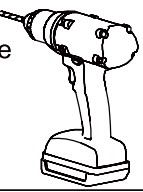

II x2

WALL
J

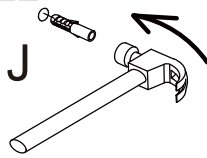

III x2

