


⚠ Please note: Items cannot be returned once assembled.

# Installation & Assembly

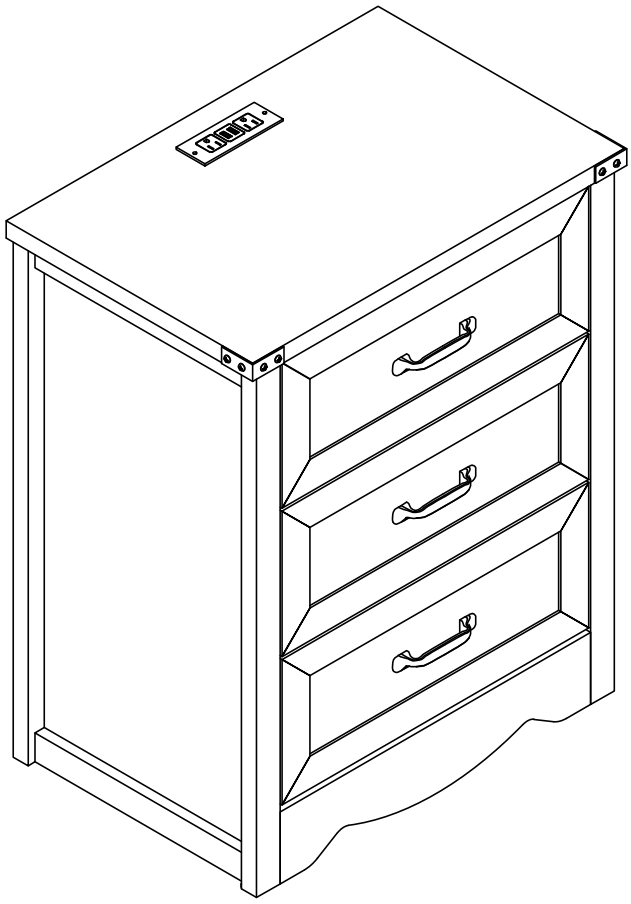


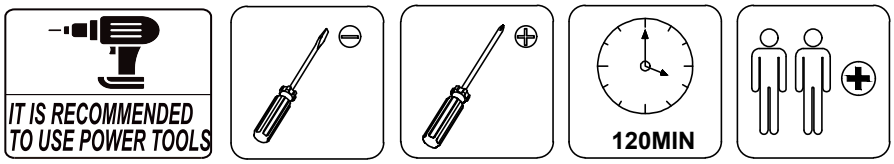



***EN*_IMPORTANT, RETAIN FOR FUTURE REFERENCE: READ CAREFULLY.**

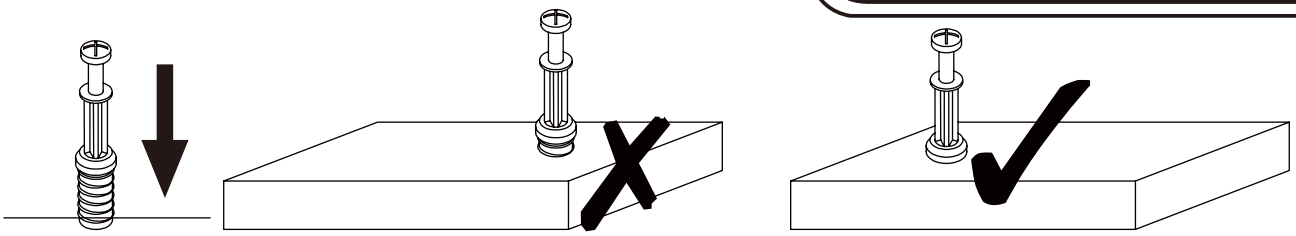


**EN_QUICKFIT:** Tighten quickfit until shoulder is flush with panel. Do not overtighten or undertighten.

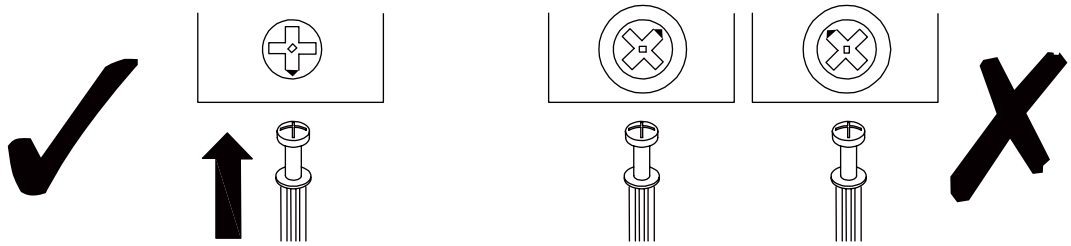











**EN_CAM LOCK:** When fitting cam lock, ensure starting position is correct before you insert connecting quickfit.




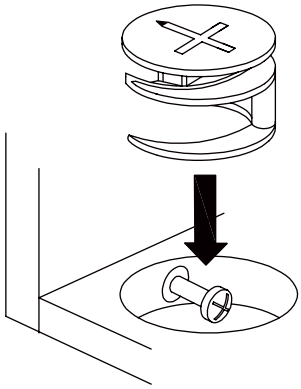



**EN_** Quickfit head should be in the centre of the cam lock when the two panels are joined.
Cam lock should be inserted before quickfit.

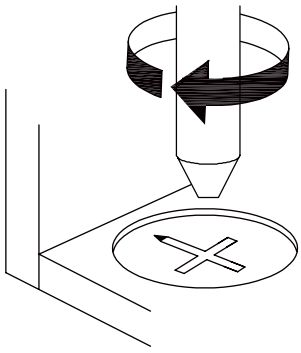


**EN_** Turn cam lock clockwise to tighten.
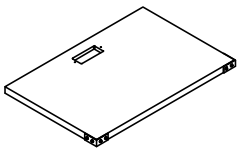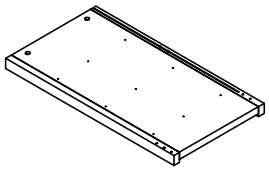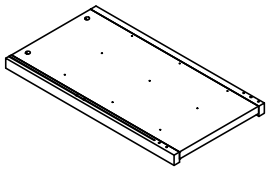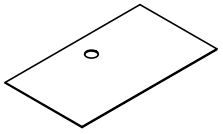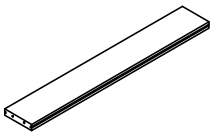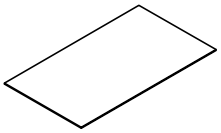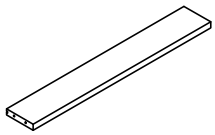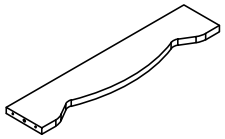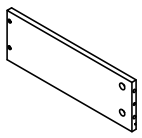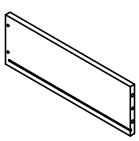
| NO. | PARTS | QTY | SPARE |
|---|---|---|---|
| 1 |  | x1 | |
| 2 |  | x1 | |
| 3 |  | x1 | |
| 4 |  | x1 | |
| 5 |  | x1 | |
| 6 |  | x1 | |
| 7 |  | x1 | |
| 8 |  | x1 | |
| 9 |  | x3 | |
| 10 |  | x3 | |
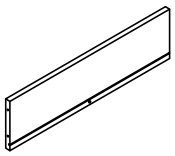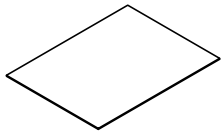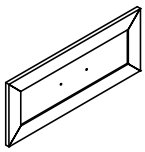
| NO. | PARTS | QTY | SPARE |
|---|---|---|---|
| 11 |  | x3 | |
| 12 |  | x3 | |
| 13 |  | x3 | |
| 14 |  | x3 | |
| |  Hardware Kit | x1 | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |

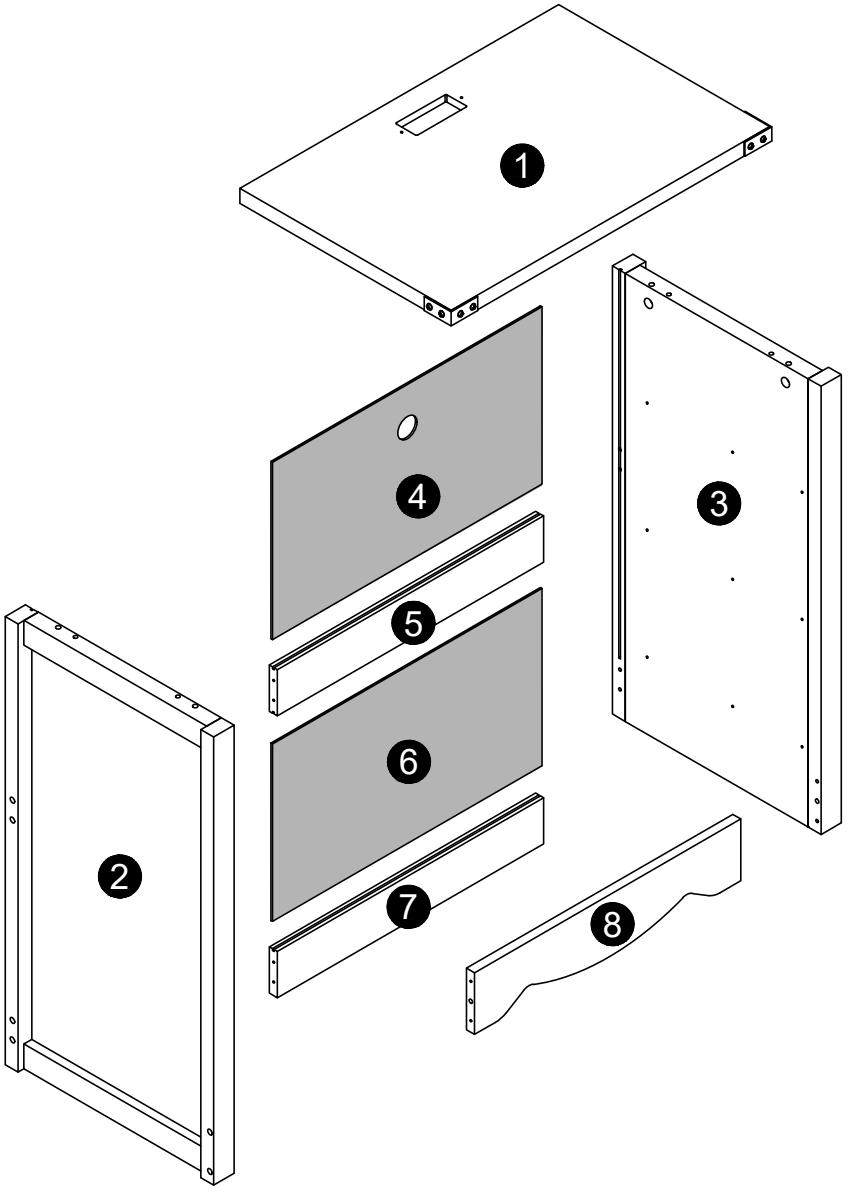
1
2
3
4
5
6
7
8

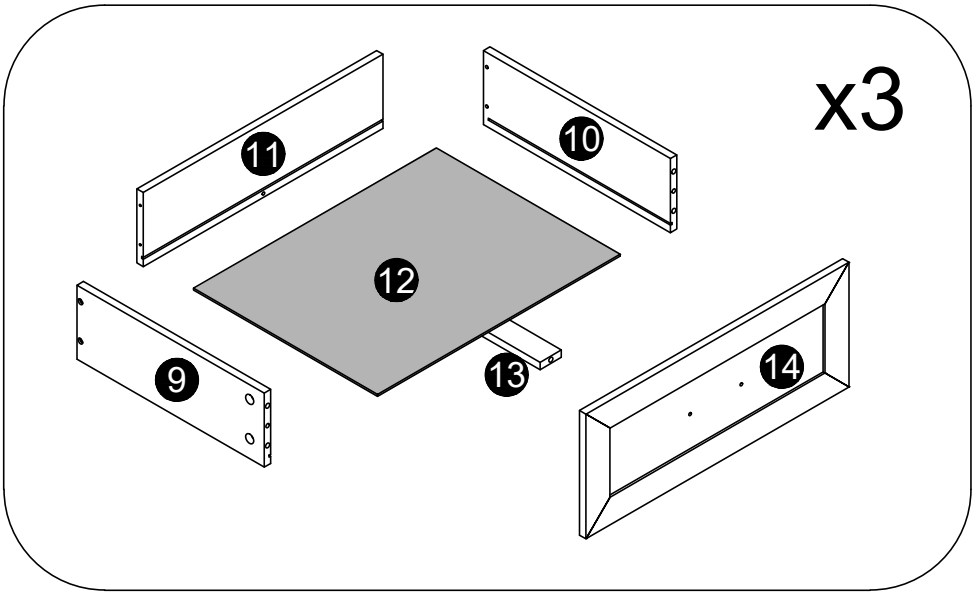

x3
9
10
11
12
13
14


## HARDWARE

| | | | | | |
|---|---|---|---|---|---|
| A x19<br>Ø6x35mm<br>+1(spare) | B x19<br>Ø15x10mm<br>+1(spare) | C x12<br>Ø6x30mm<br>+1(spare) | D x17<br>Ø4x35mm<br>+1(spare) | E x36<br>Ø3.5x12mm<br>+3(spare) | F x3<br>F-1 F-2 |
| G x12<br>Ø5x50mm<br>+1(spare) | J x1 | K x2<br>Ø3.5x12mm | L x12 | M x8<br>Ø3x16mm<br>+1(spare)<br>M-1 M-2 | N x2<br>Ø4x14mm<br>N-1 N-2 |
| O x2<br>Ø6x30mm | | | | | |
| CL x3<br>L350mm | CR x3<br>L350mm | DL x3<br>L350mm | DR x3<br>L350mm | | |


## 01

| | | | |
|---|---|---|---|
| A x15 | B x15 | C x6 | D x15 |

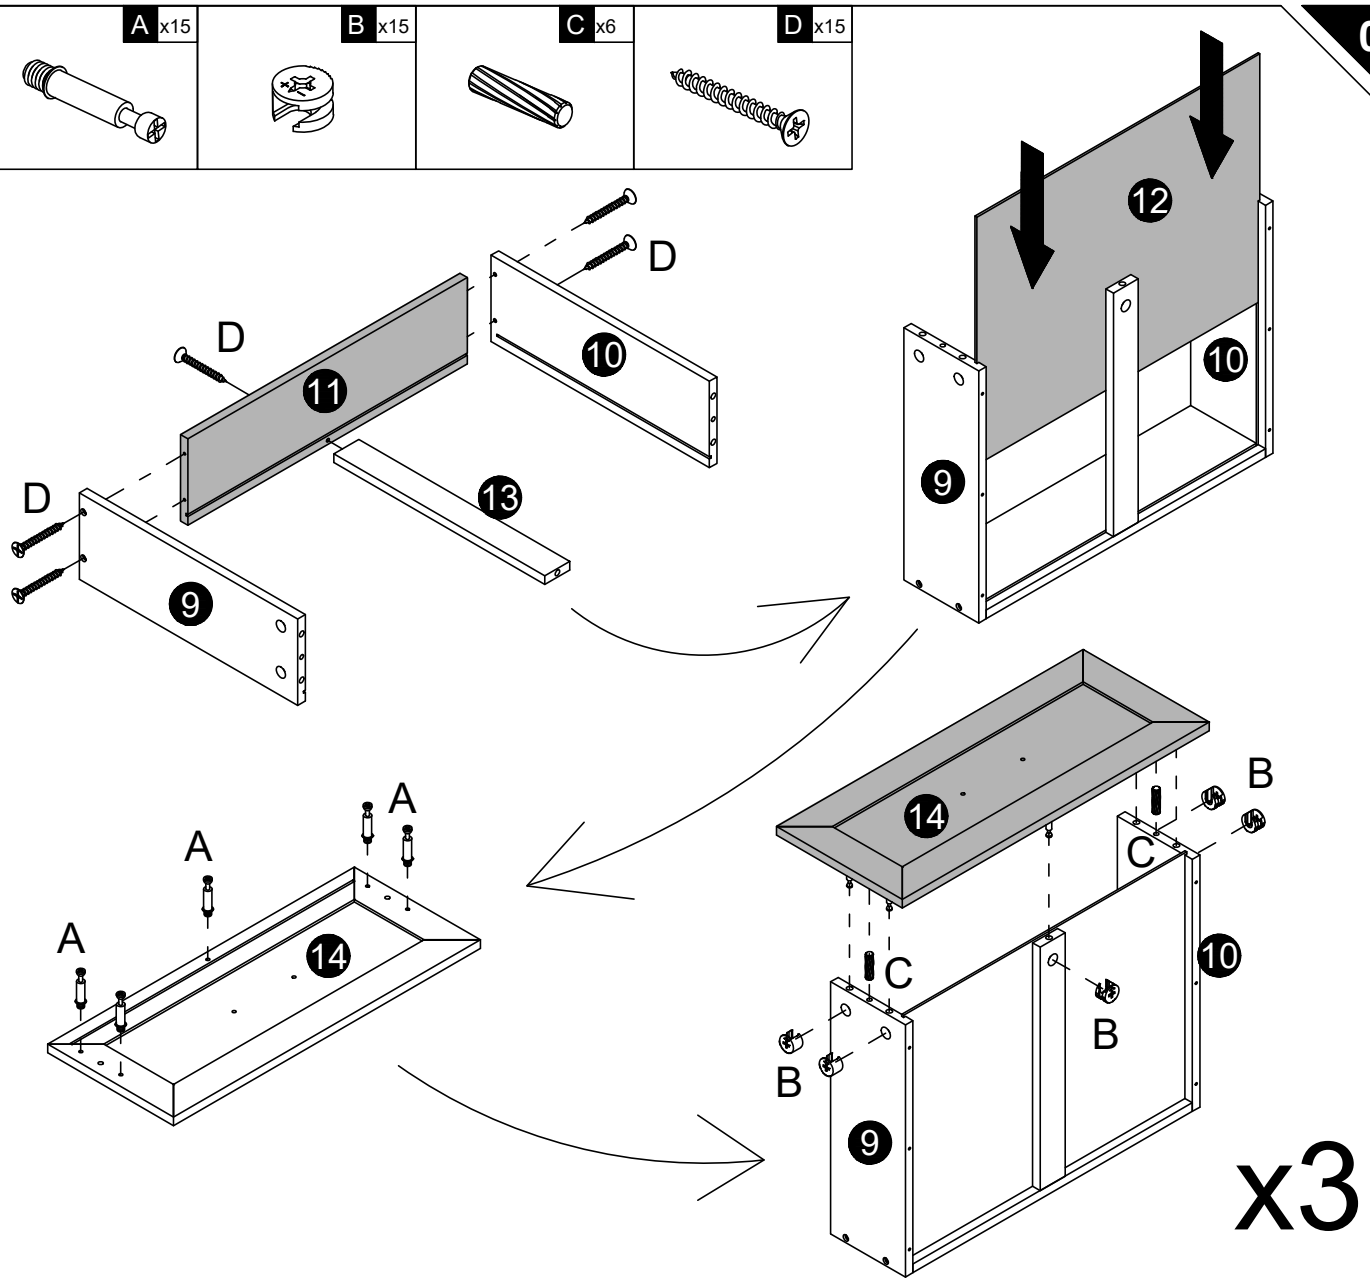


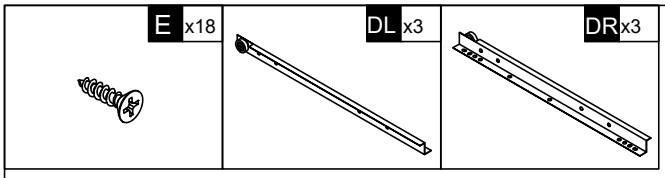



02

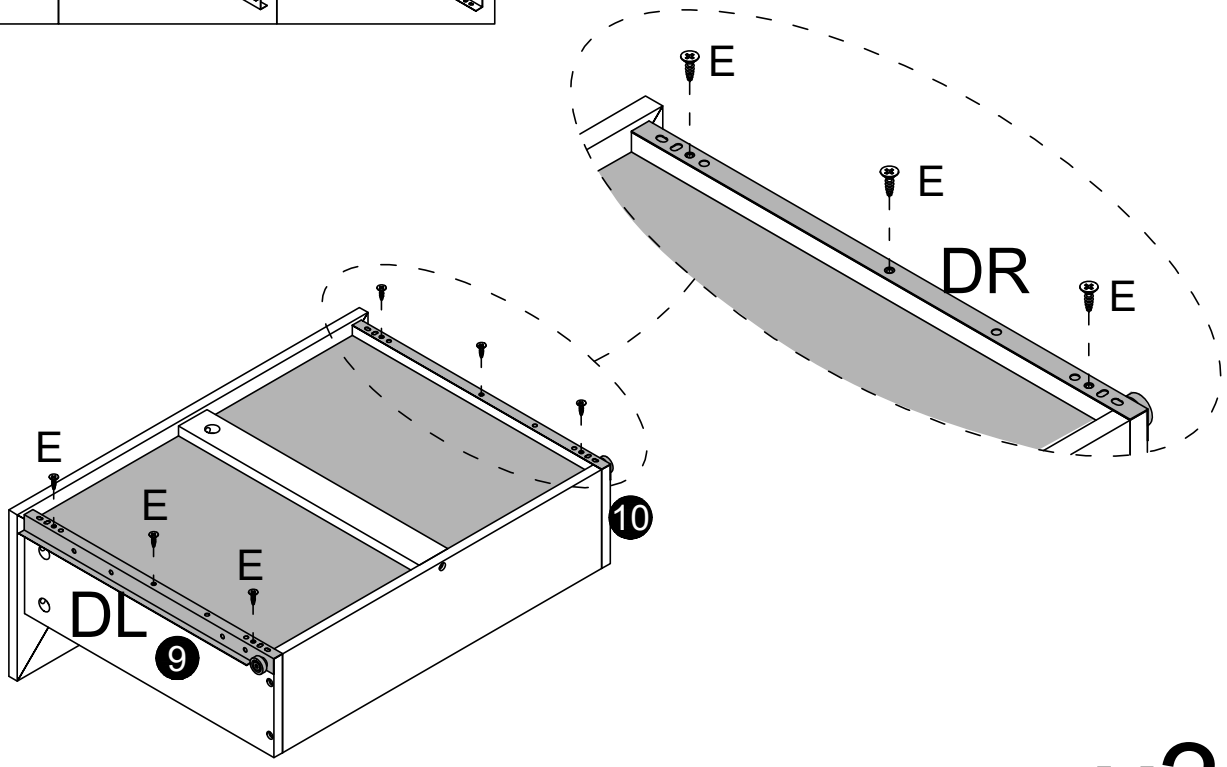



x3

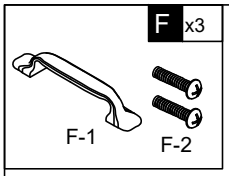



03

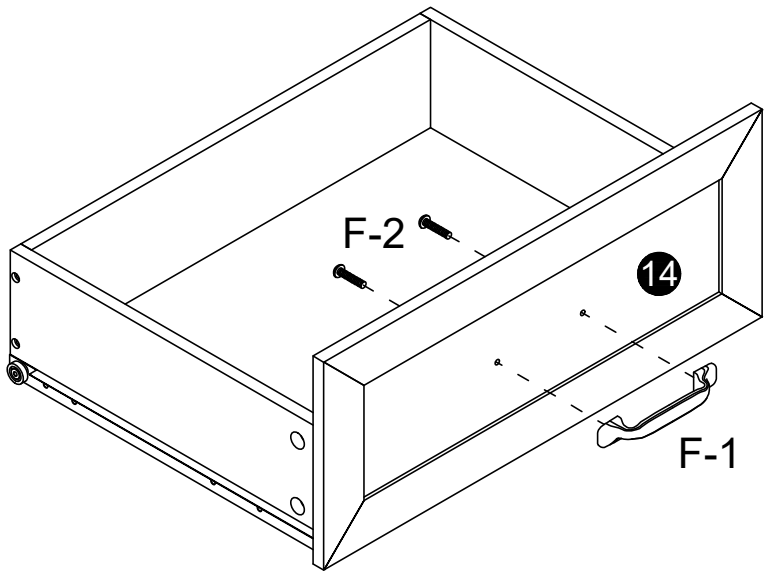



x3

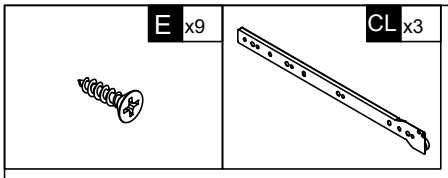

E x9
CL x3

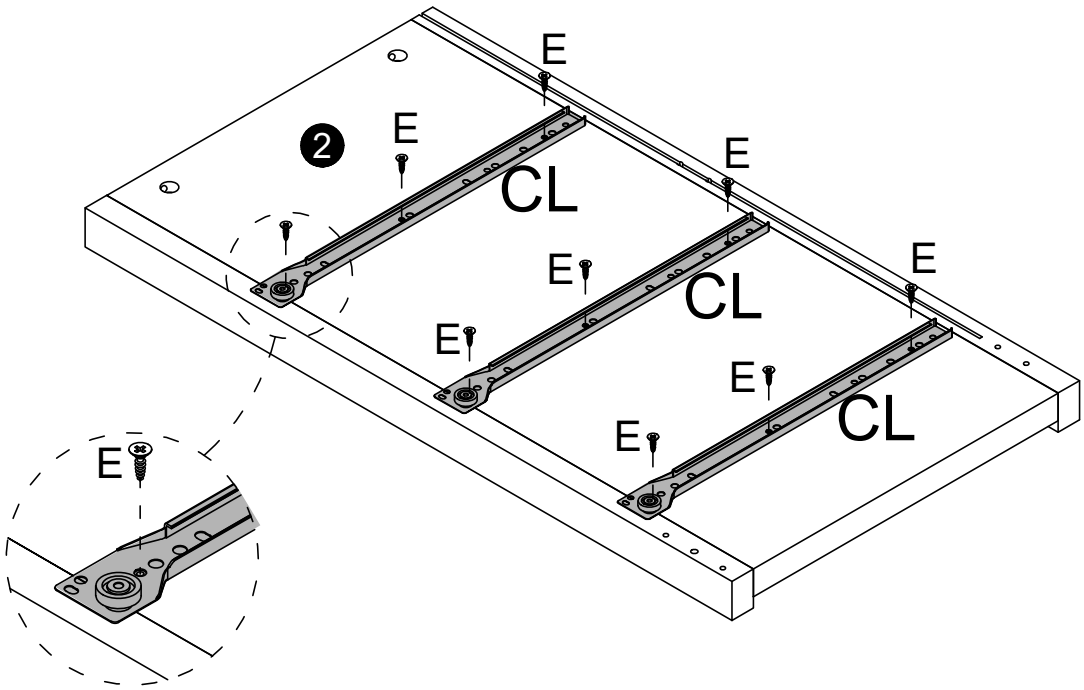
2
E
CL


E

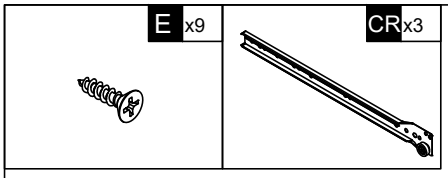



E x9
CR x3

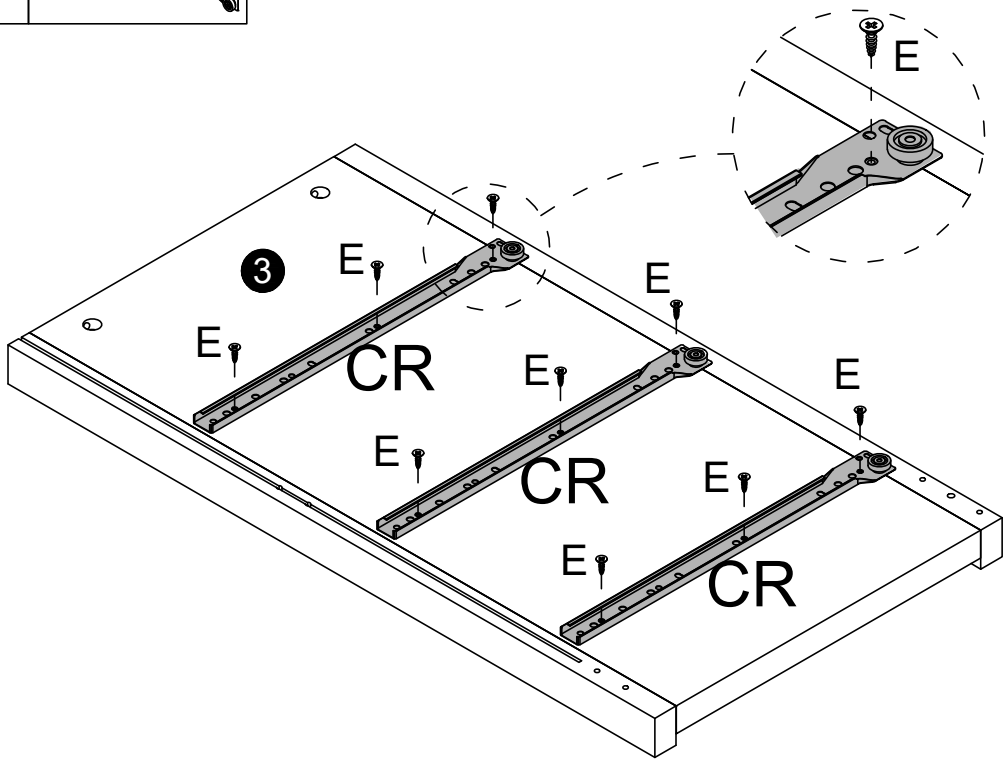

3
E
CR

C x1




G x6




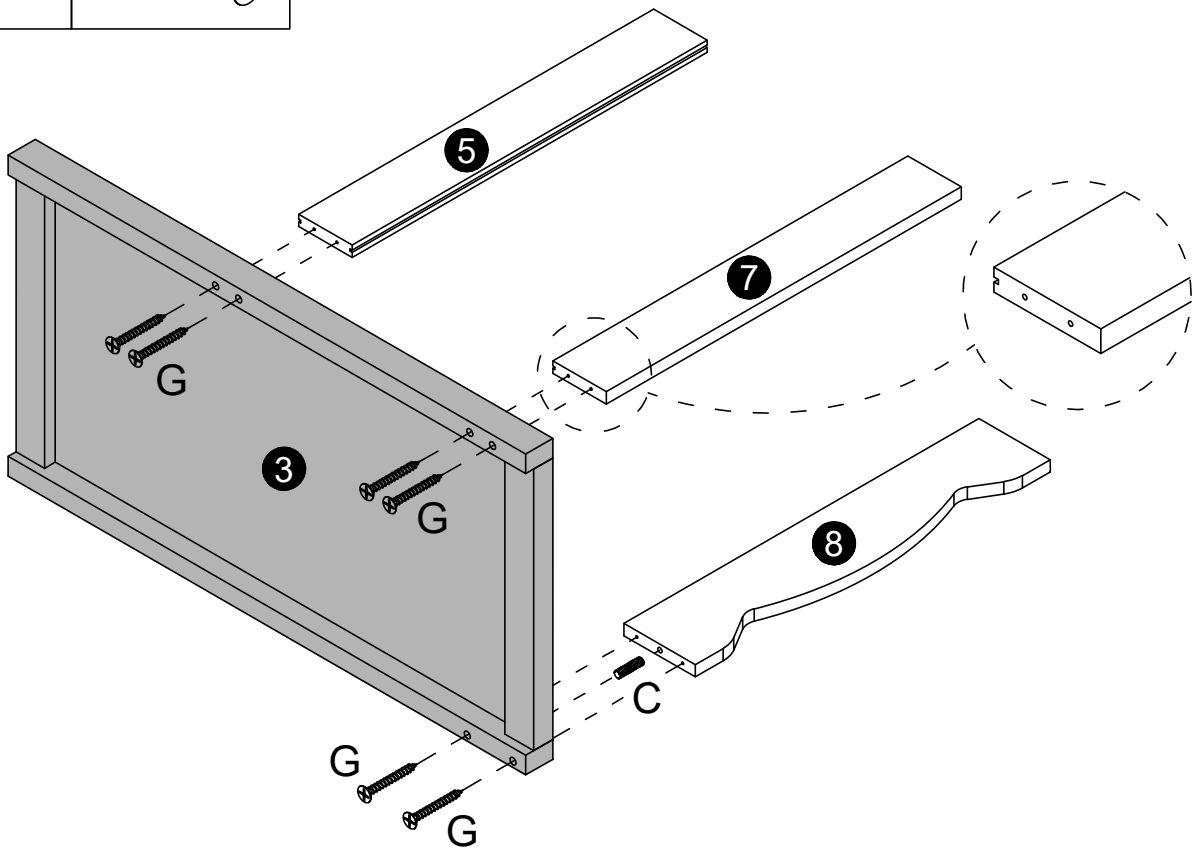





C x1




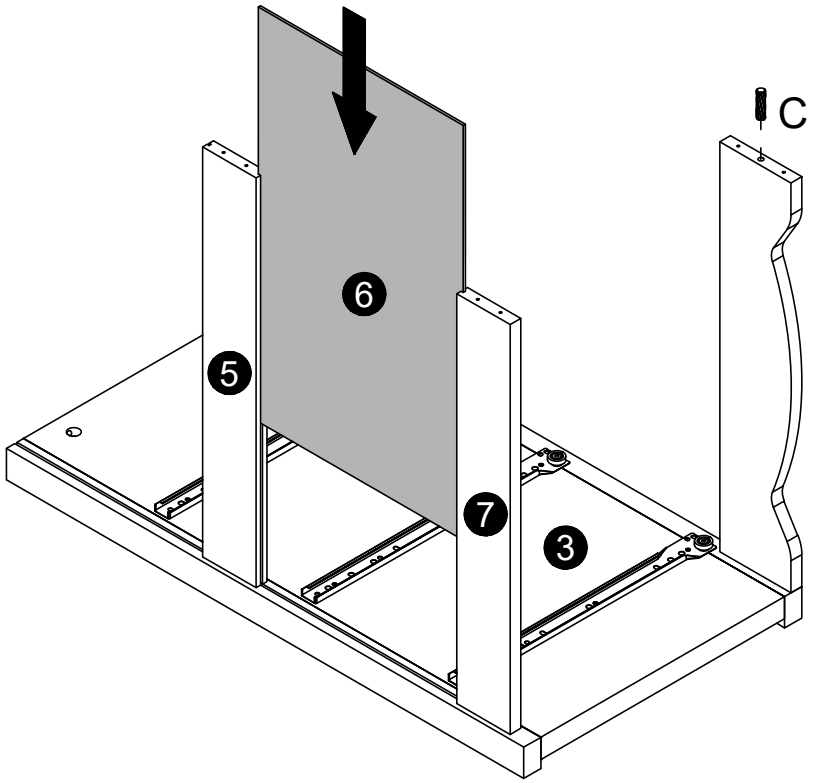


G x6




08

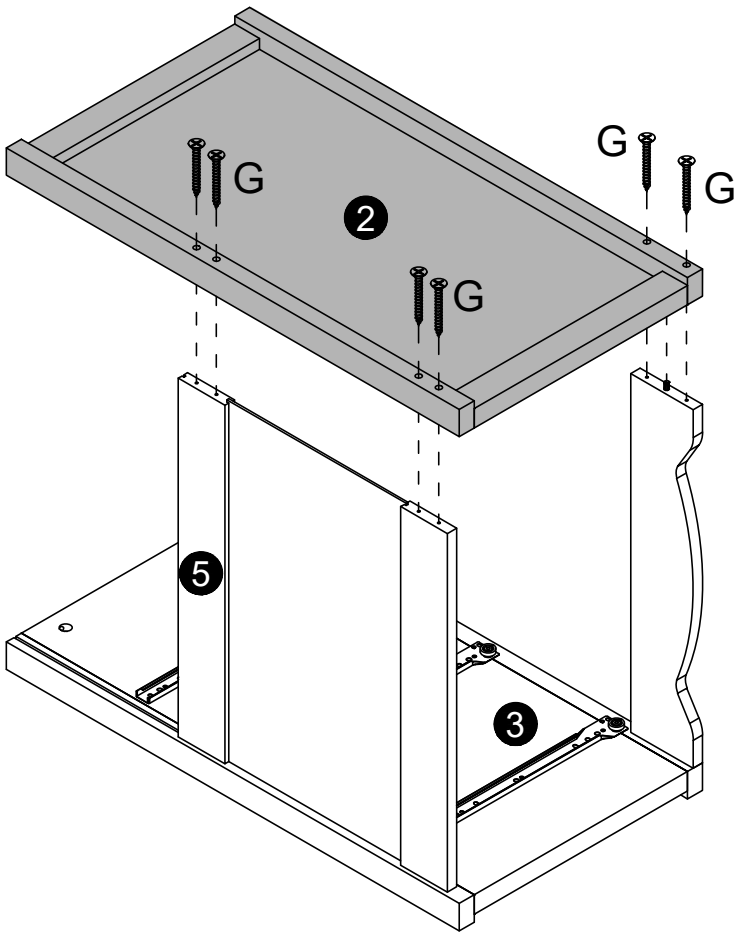


C x4





09

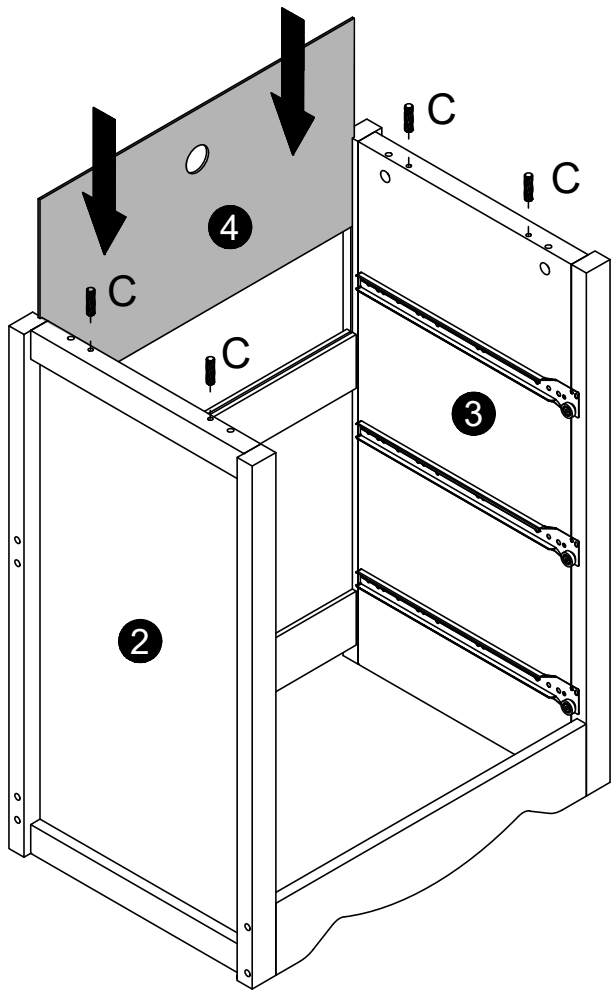

10

A x4




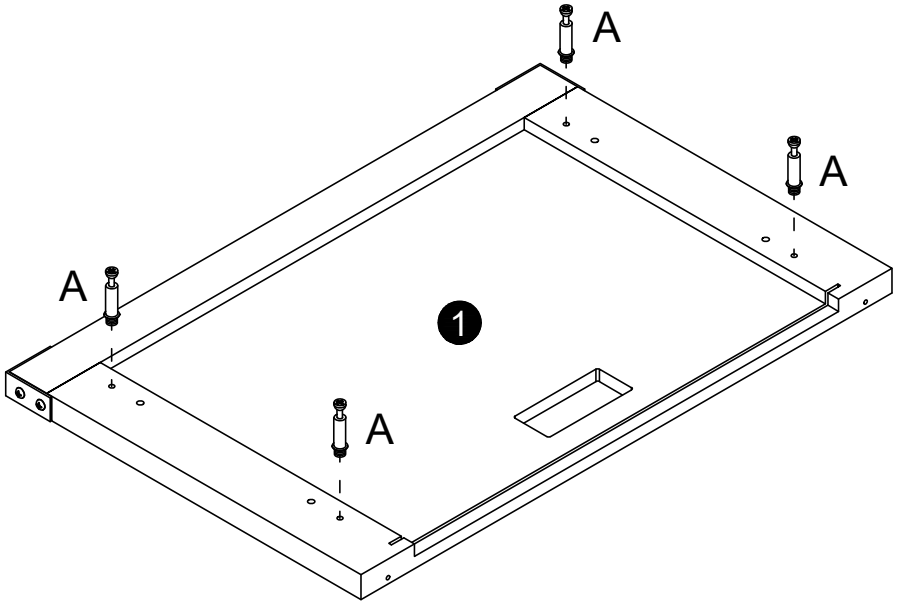


11

B x4



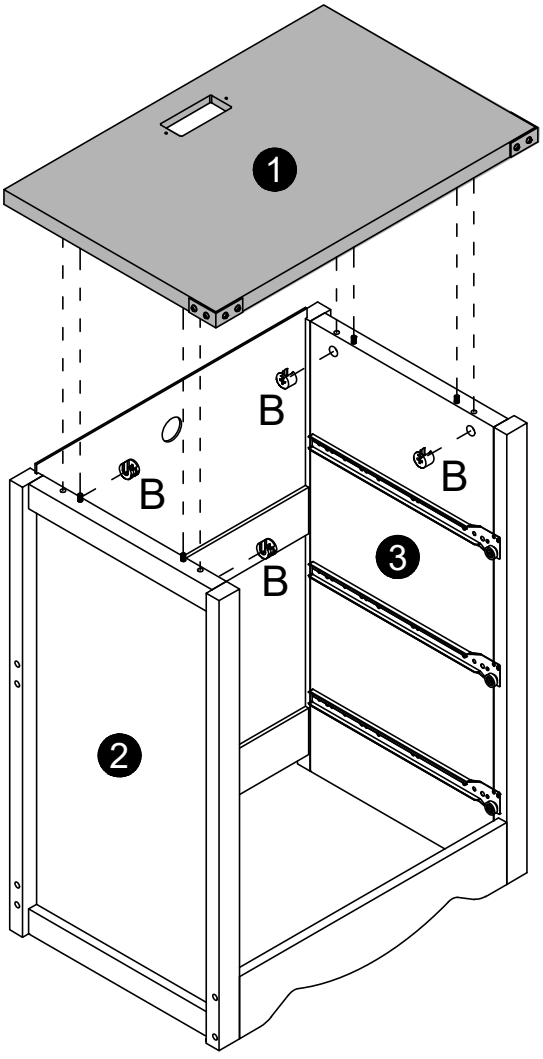

J x1



K x2




M x8




M-1





M-2

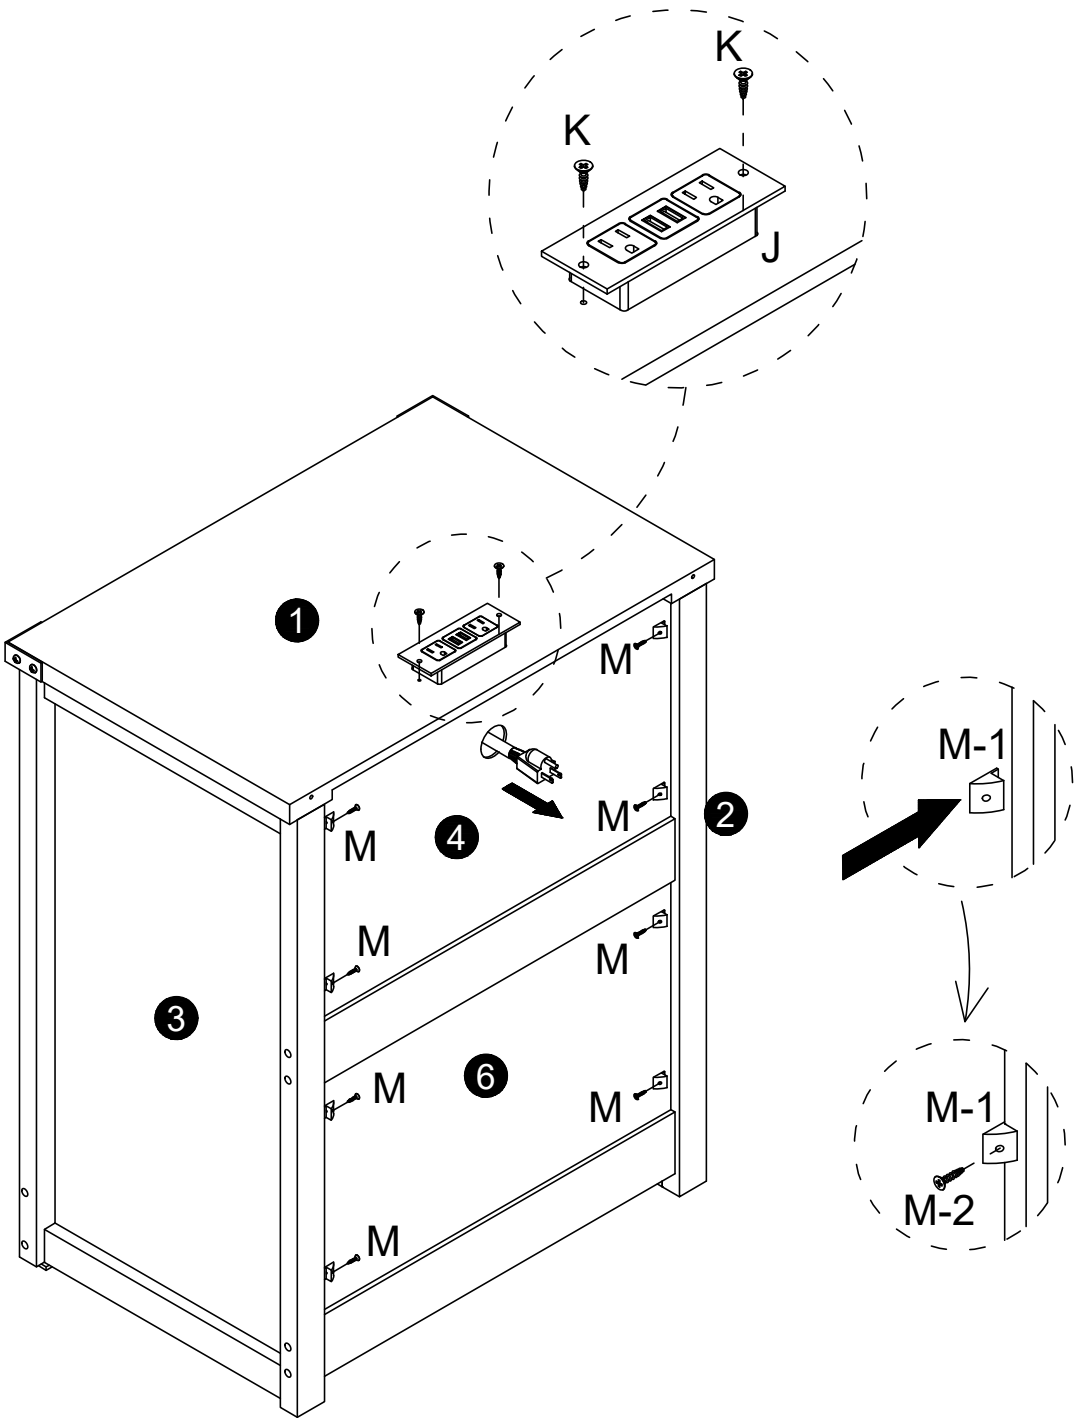


L x12

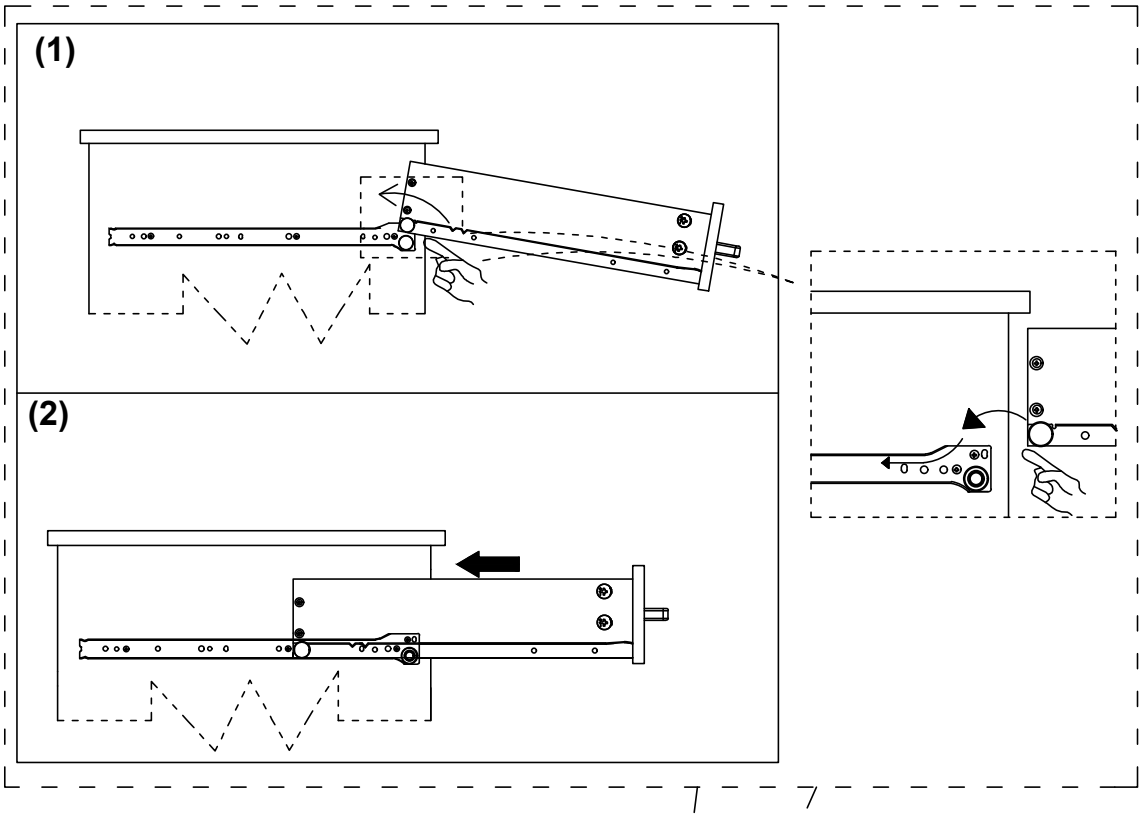

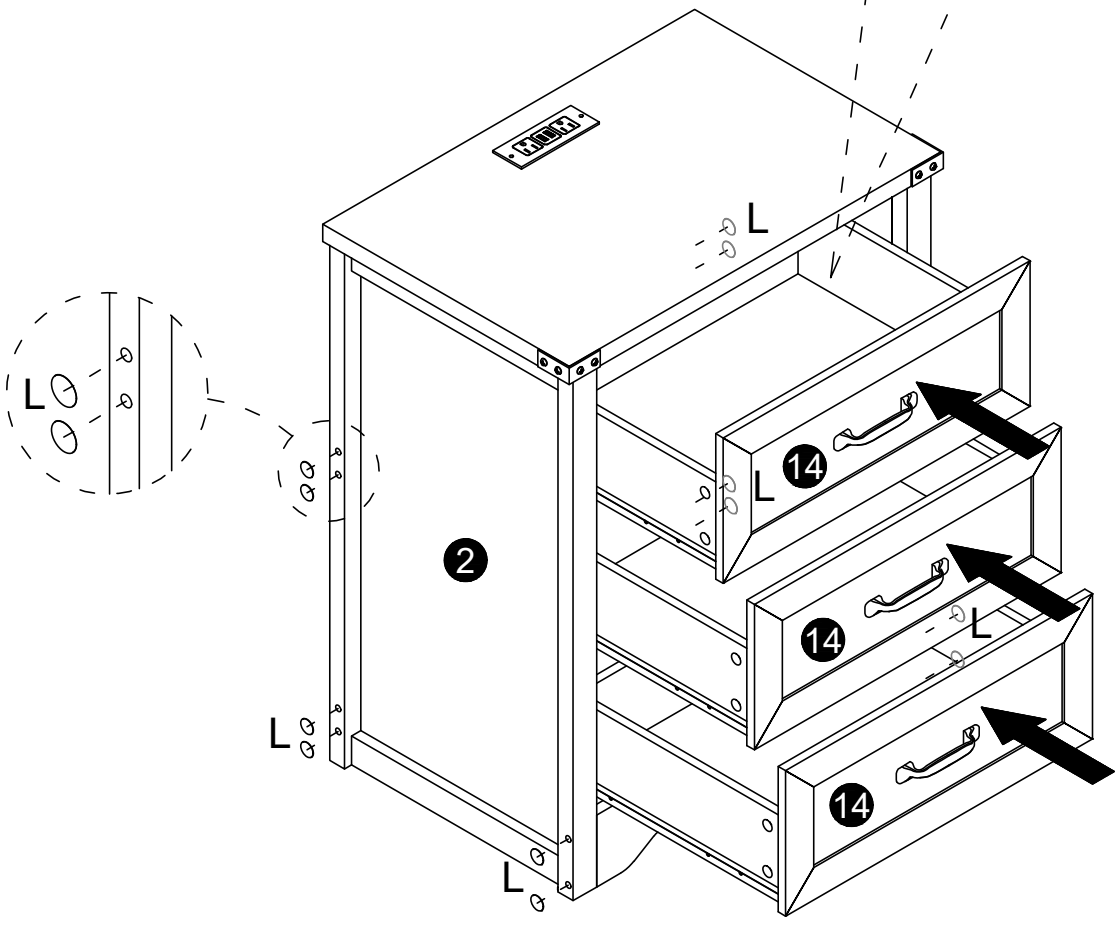


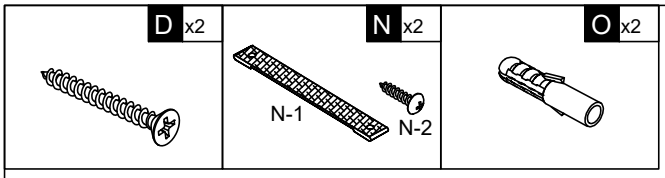


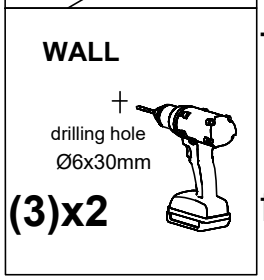

Done

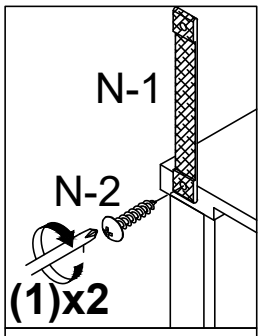



First fix the anti-rewind screw in the reserved hole of the product.

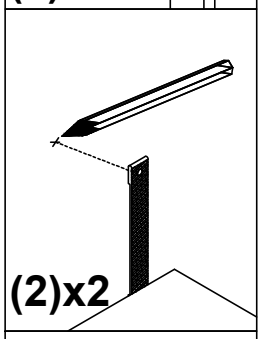



then, use a ruler to measure the approximate height of the product on the wall, and then mark it witha pen.




Then use a tape drill to make holes in the wall that are suitable for the product screws.

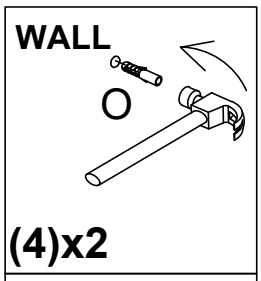


Then,put the expansion bolt into the hole

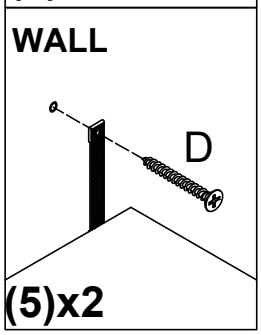


Finally,pass the matching screws throughthe "anti-rewind" and tighten themto fix them on the wall.

