CONSOLE TABLE





DO NOT RETURN

FOR REPLACEMENT PARTS OR OTHER INQUIRIES PLEASE CONTACT US

PLEASE ENSURE TO HAVE THE MODEL #
FROM THE PACKAGING OR
INSTRUCTION BOOKLET

IMPORTANT: Please read this manual carefully before beginning assembly of this product. Keep this manual for future reference.

SAFETY INFORMATION

Identify all the parts and hardware. Do not discard of the packaging until you have checked that you have all of the parts and hardware required. Hardware package may have spare parts.

WARNING: This item contains small parts which can be swallowed by children and pets. Keep children and pets away during assembly. To avoid danger of suffocation, always keep plastic bags away from children and pets. We recommend that you assemble this unit on a carpeted floor to avoid scratches. We do not recommend the use of power tools for assembly as this could damage the unit. Only use manual tools.

May require 2 people for ease of assembly.

CARE and MAINTENANCE


To clean, use a soft or slightly damp cloth, then wipe with a clean, dry cloth. Dust with soft dry cloth.


Do not use ammonia-based cleaning products, as they will damage the finish.

Do not leave liquids or damp cloths on this furniture.

To avoid dulling of the finish, do not place furniture in direct sunlight.

Please inspect and tighten all screws or bolts on a regular basis to ensure proper performance and safety of your item.

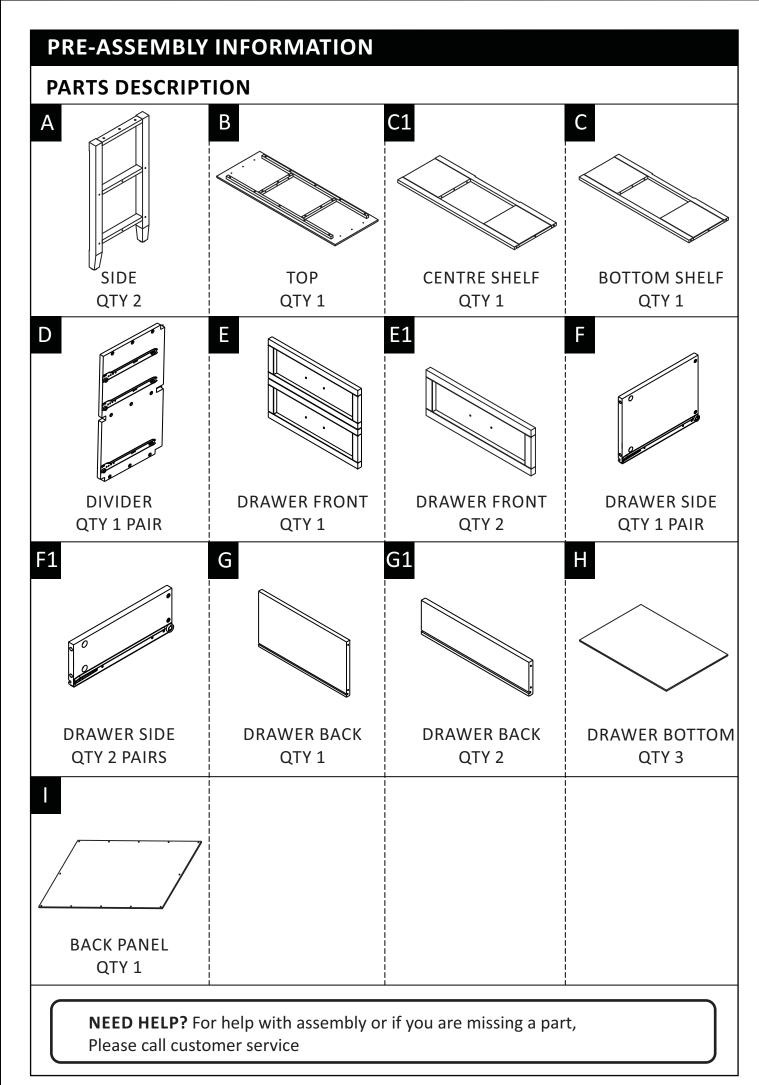


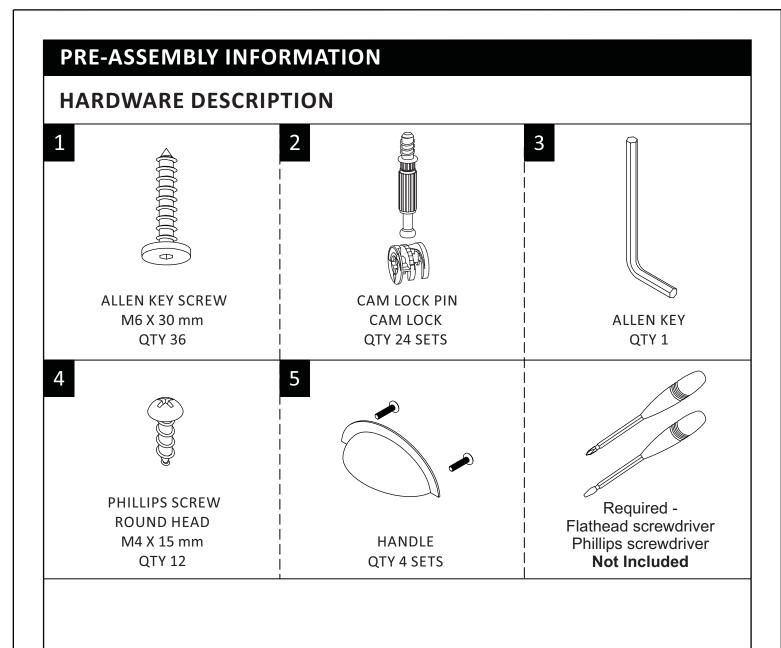


NEED HELP? For help with assembly or if you are missing a part, Please call customer service

COMPONENTS – KEY DIAGRAM (B) $\widehat{\mathbb{T}}$ $\widehat{\mathbf{A}}$ $(\hat{\mathbf{D}})$ $(\widehat{\mathbf{A}})$ (G1) (F1) E1 $\widehat{\mathbf{H}}$ $(\widehat{\mathbf{G}})$ **(F)** (**f**) (H) $(\hat{\mathbf{E}})$

STEP 1




NOTE: The screwdriver is not included in the hardware pack.

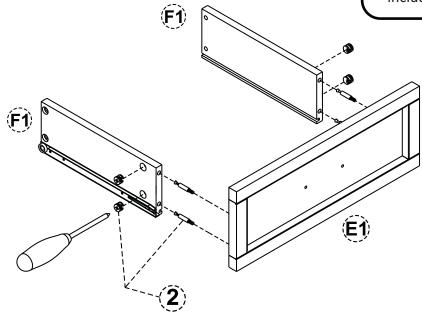


- 1. Attach 4 Cam Lock Pins ② to back of Drawer Front 📵.
- 2. Align Cam Lock Pins with pre-drilled holes and attach Drawer Sides (F1).
- 3. Insert 2 Cam Lock 2 into pre-drilled holes on each Drawer Side F1.
- 4. Use flathead screwdriver to secure Cam Locks.

STEP 2

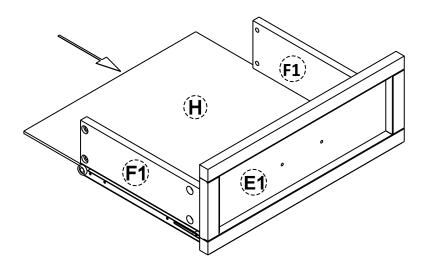


1. Slide Drawer Bottom H firmly into slots on Drawer Side F1 and Drawer Front E1.

STEP 3

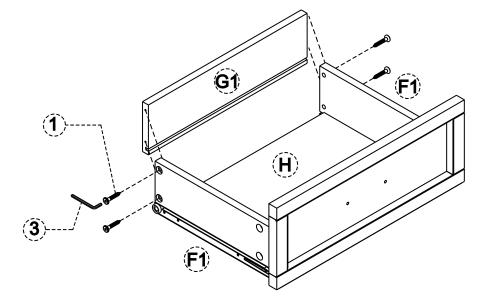

- 1. Align Drawer Back (G1) with Drawer Bottom (H) and press firmly into slot .
- 2. Attach back using 2 Allen Key Screws 1through pre-drilled holes on each side.
- 3. Use Allen Key ③ to tighten. Do not over tighten.


STEP 4

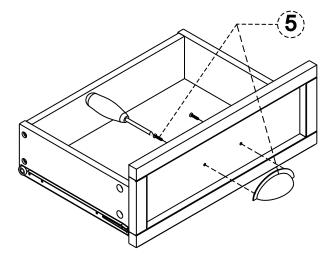




NOTE: The screwdriver is not included in the hardware pack.

1. Use Phillips screwdriver to attach Handle 5 to Drawer Front £1.

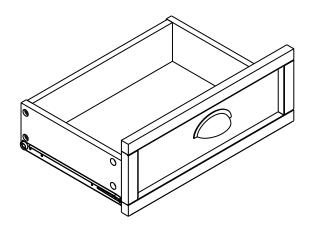


Repeat Step 1-4 for the second drawer .

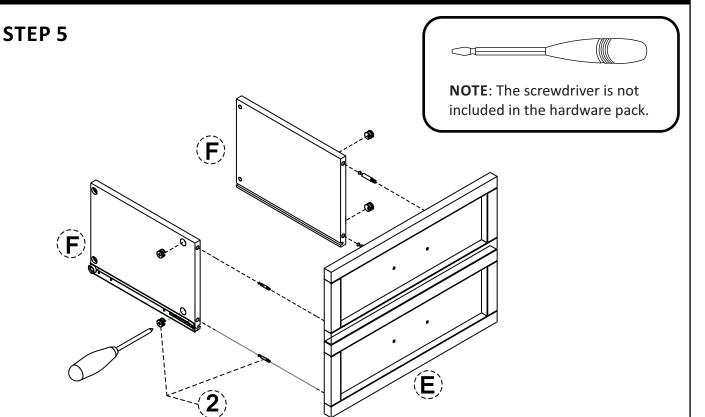


- 1. Attach 4 Cam Lock Pins 2 to back of Drawer Front E.
- 2. Align Cam Lock Pins with pre-drilled holes and attach Drawer Sides (F).
- 3. Insert 2 Cam Lock ② into pre-drilled holes on each Drawer Side ⑤.
- 4. Use flathead screwdriver to secure Cam Locks.

STEP 6

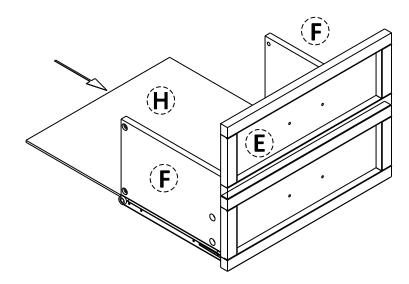


1. Slide Drawer Bottom H firmly into slots on Drawer Side F and Drawer Front E.


STEP 7

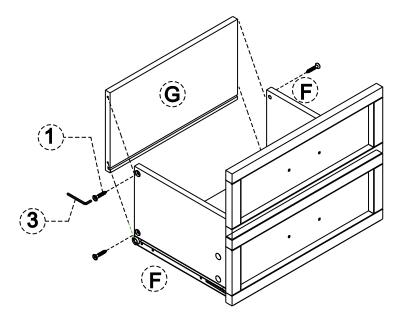


- 1. Align Drawer Back G with Drawer Bottom H and press firmly into slot .
- 2. Attach back using 2 Allen Key Screws ① through pre-drilled holes on each side.
- 3. Use Allen Key ③ to tighten. Do not over tighten.

STEP 8

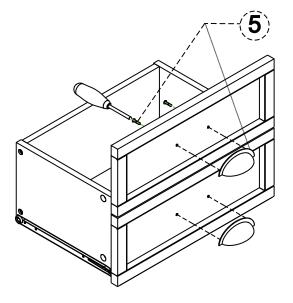




NOTE: The screwdriver is not included in the hardware pack.

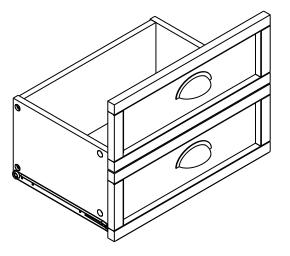


1. Use Phillips screwdriver to attach Handles (5) to Drawer Front (E).

STEP 9

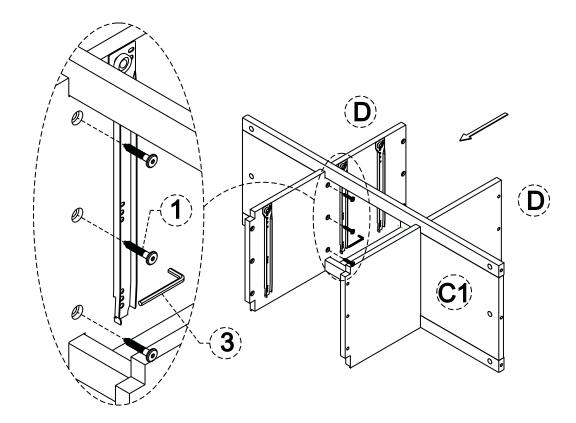

- 1. Insert 6 Allen Key Screws ① through pre-drilled holes on centre of 2 Dividers ① into Centre Shelf ② (3 Screws / each Divider).
- 2. Use Allen Key ③ to tighten. Do not over-tighten.

STEP 10

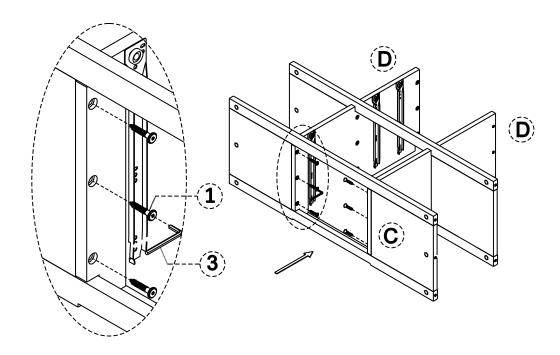


- 1. Insert 6 Allen Key Screws ① through pre-drilled holes on bottom of 2 Dividers ① into Bottom Shelf ② (3 Screws / each Divider).
- 2. Use Allen key $\ensuremath{\mathfrak{D}}$ to tighten. Do not over-tighten.

STEP 11




NOTE: The screwdriver is not included in the hardware pack.

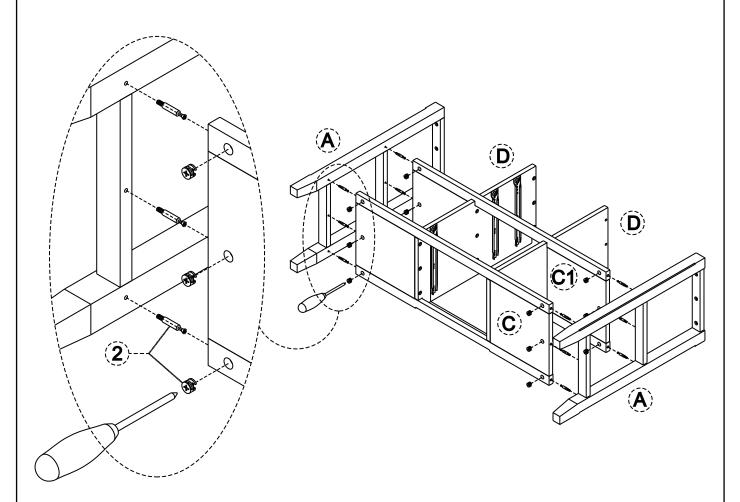


- 1. Attach 6 Cam Lock Pins 2 to each Side A using guide holes .
- 2. Align Cam Lock Pins with pre-drilled holes on Centre Shelf 1 and Bottom Shelf 1 .
- 3. Insert 12 Cam Locks ② into pre-drilled holes on Centre Shelf ⑥ and Bottom Shelf ⑥ (6 Cam Locks / each part).
- 4. Use flathead screwdriver secure Cam Locks.

STEP 12

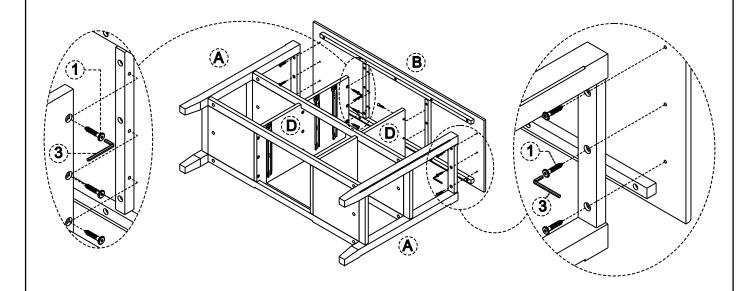


- 1. Insert 12 Allen Key Screws ① into pre-drilled holes on 2 Sides ④ and 2 Dividers ① into Top ⑧ (3 Screws / each Side and Divider).
- 2. Use Allen Key 3 to tighten. Do not over tighten.

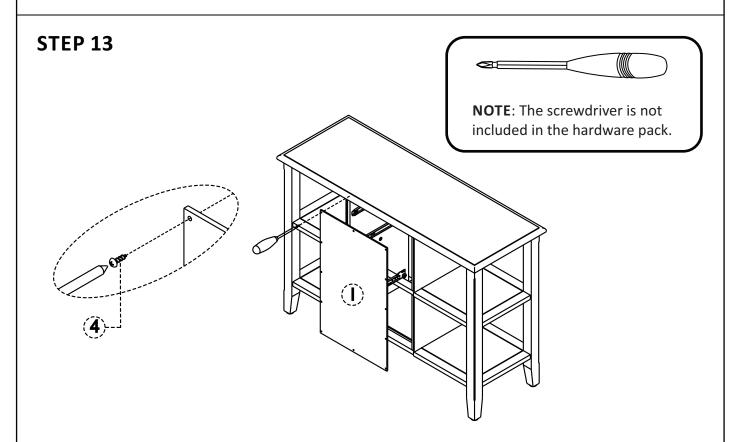

- 1. Use Phillips Round Head Screws 4 to attach Back Panel 1 to back of console table.
- $2. \ Use \ Phillips \ screwdriver \ to \ snugly \ tighten \ screws \ .$

STEP 14

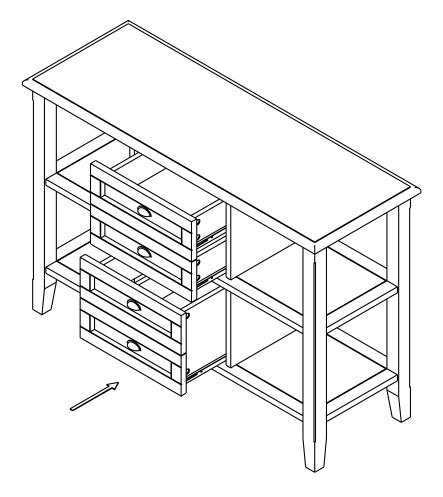

1. Insert assembled drawers into glides on assembled table.

WARRANTY

Thank you for purchasing a product. These products have been made to demanding, high-quality standards and are guaranteed for domestic use against manufacturing faults for a period of 12 months from the date of purchase. This warranty does not affect your statutory rights.

In case of any malfunction of your product (failure, missing parts, etc.) please contact us at our toll free service line.

We reserve the right to repair or replace the defective product, at its discretion.

This product is guaranteed for 12 months if used for normal purposes. Any warranty is invalid if the product has been overloaded or subject to neglect, improper use or an attempted repair by other than an authorized agent. Heavyduty or daily professional/commercial usage are not guaranteed.

Due to continuous product improvement, we reserve the right to change the product specifications without prior notice.

PLEASE NOTE: This item is hand-crafted and hand-finished with utmost care. As such, variations and imperfections should be expected and should be welcomed as the natural beauty of the wood.