



























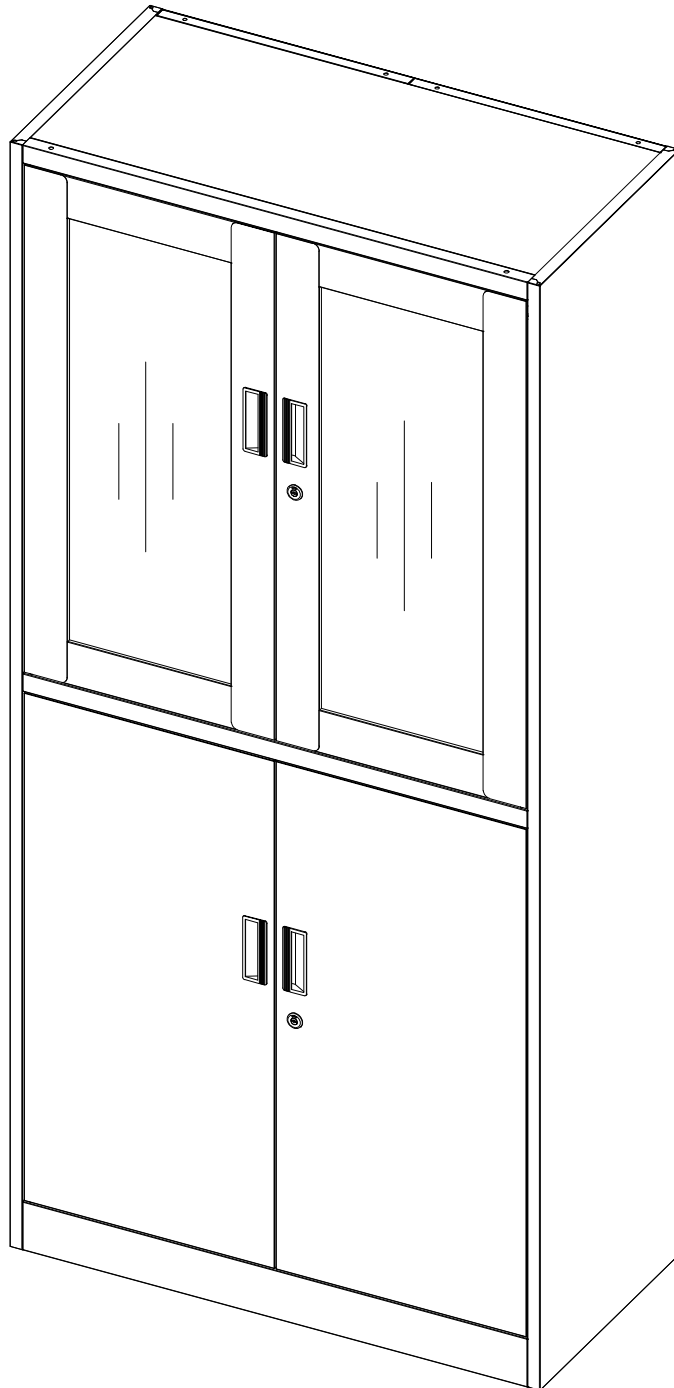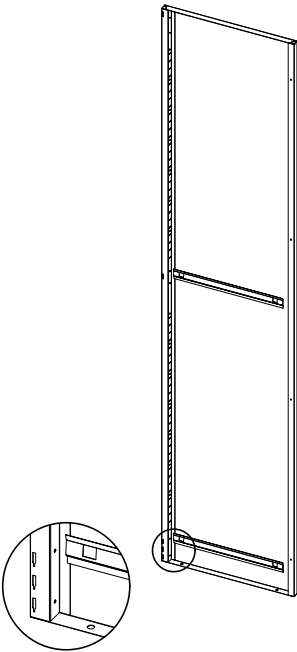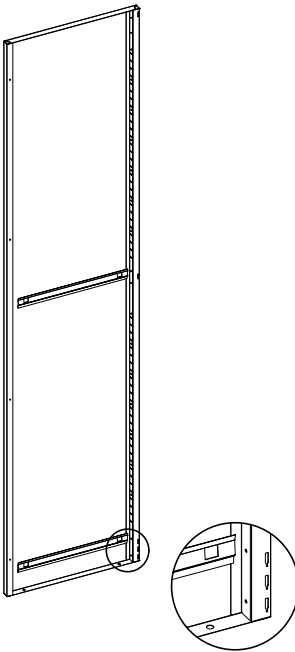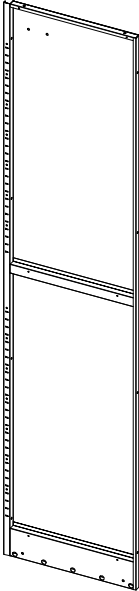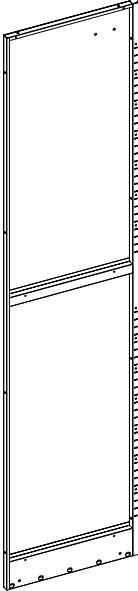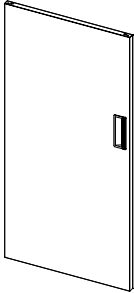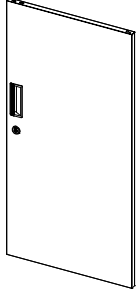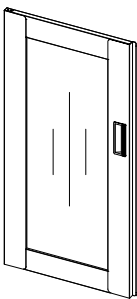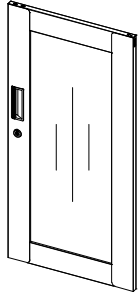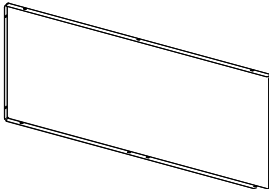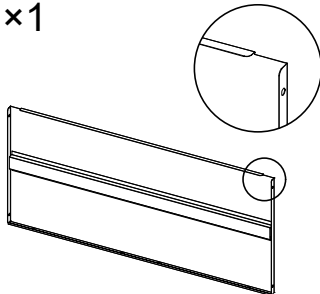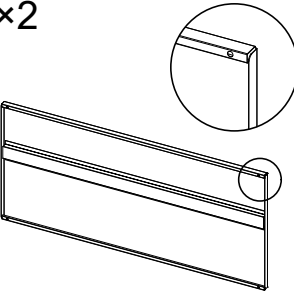
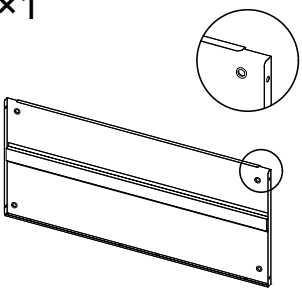


# Installation Instructions




A×1		B×1		C×1		D×1			
									
E×1		F×1		V×1		W×1			
									
G×1		H×1		L×2		N×1			
									
J×1		M×1		I×1		K×2	X×4		
									
O×49	P×4	Q×4	R×8	S×4	T×8	U×2	Y×2	Z×4	 Spare Parts
									



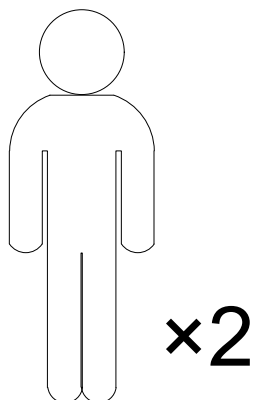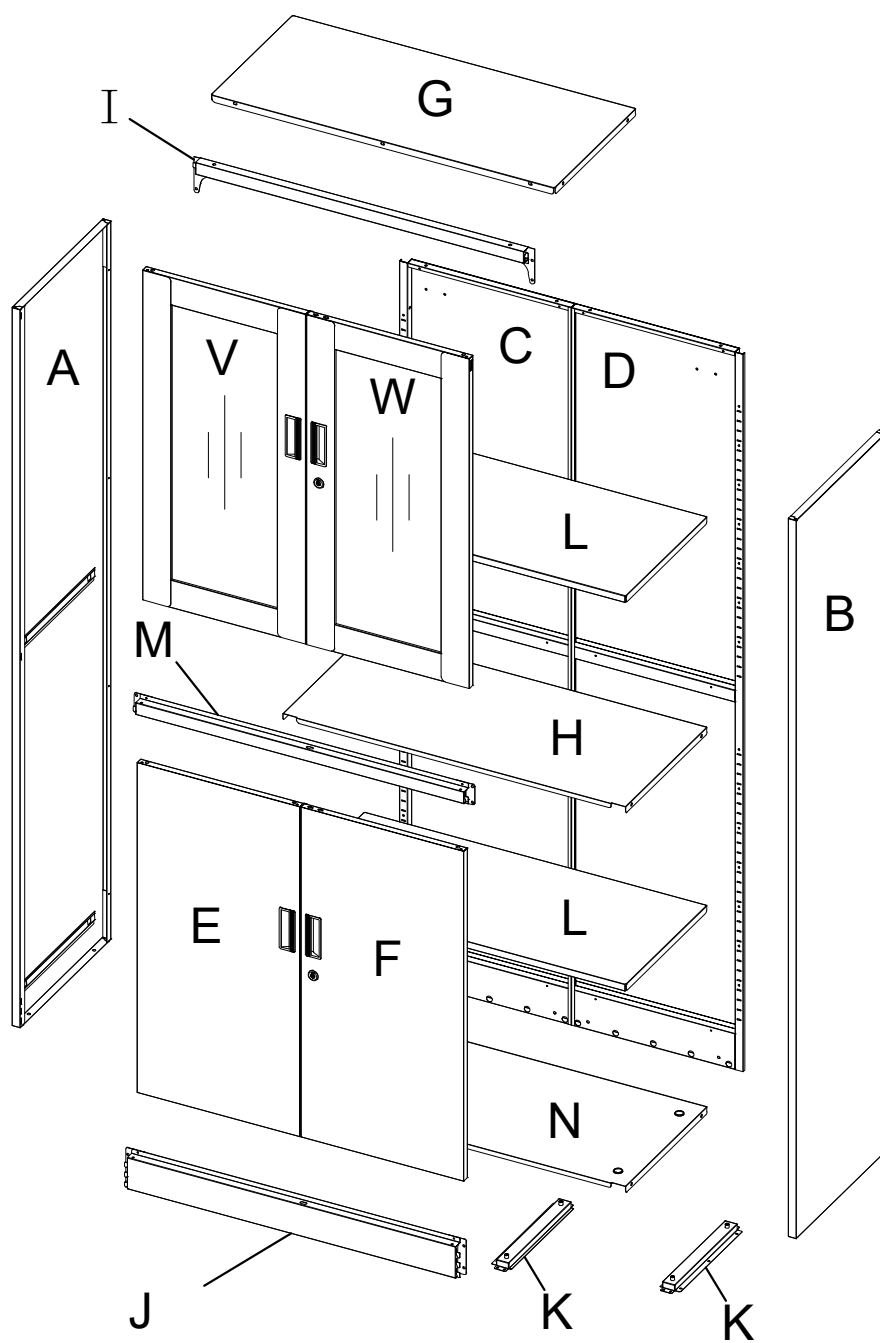1

Put the two rear walls together and put four bolts and nuts to hold them in place.

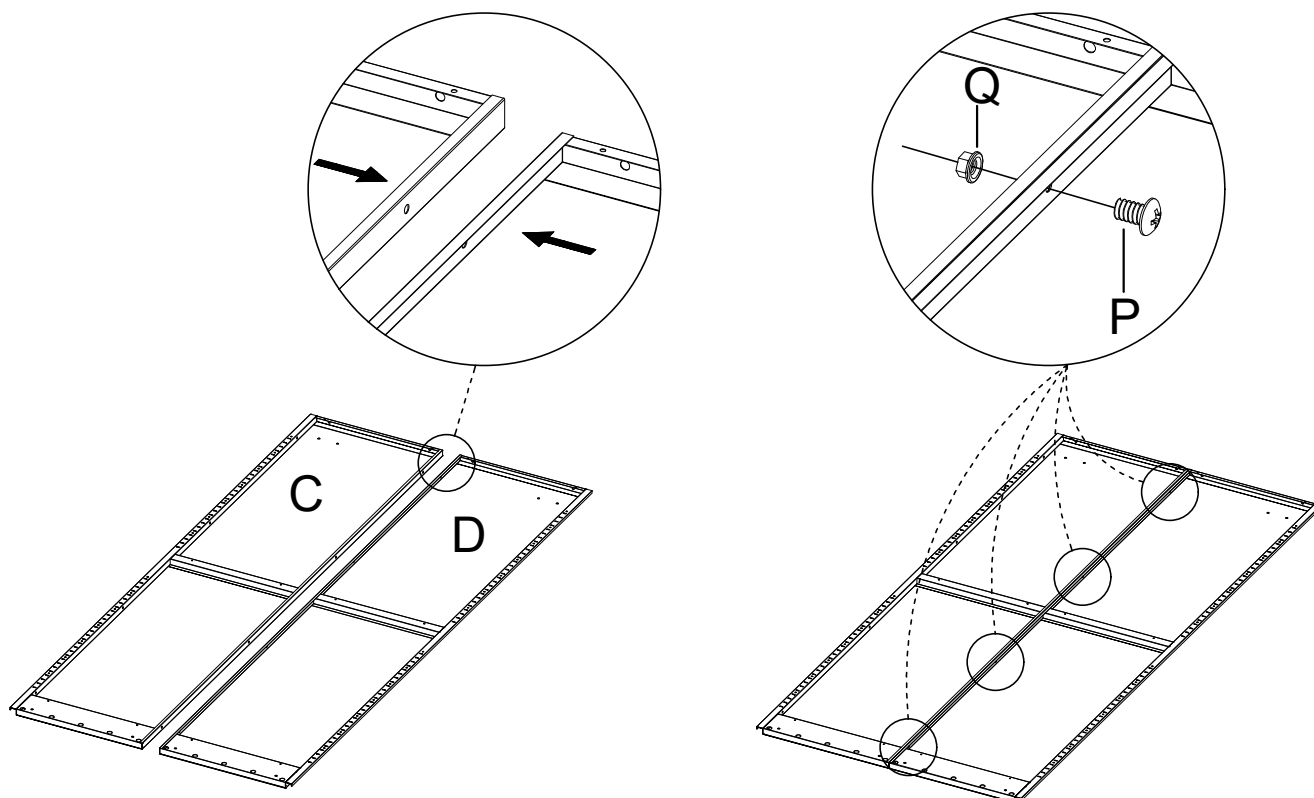


P×4

Q×4

2


Simply overlap each sidewall in the channel of the rear wall and put three screws on each side to hold them in place. Note that Part A is on the left side and Part B is on the right side. If they are misplaced, it will affect the assembly.

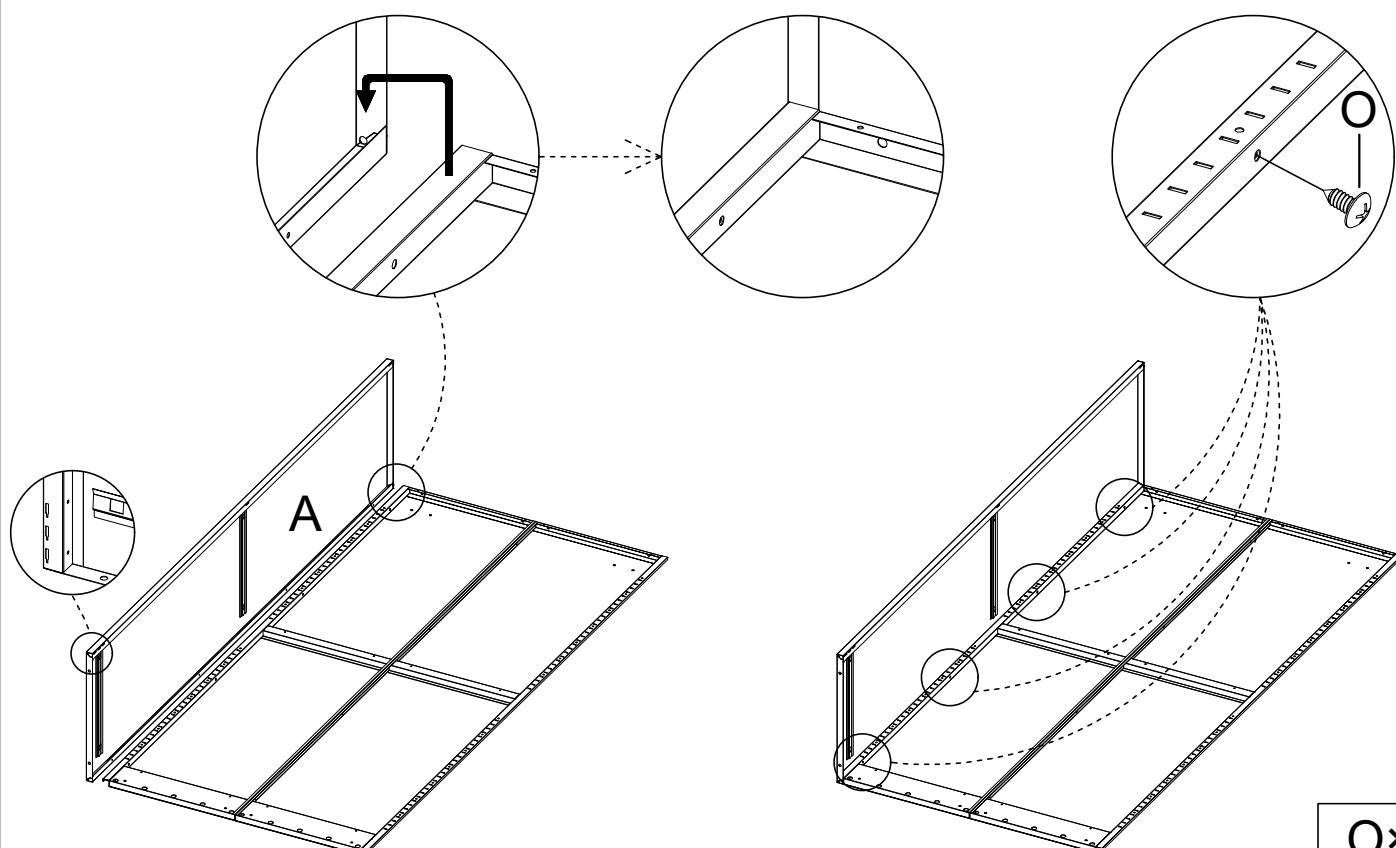

O×4

3


Simply overlap each sidewall in the channel of the rear wall and put four screws on each side to hold them in place.

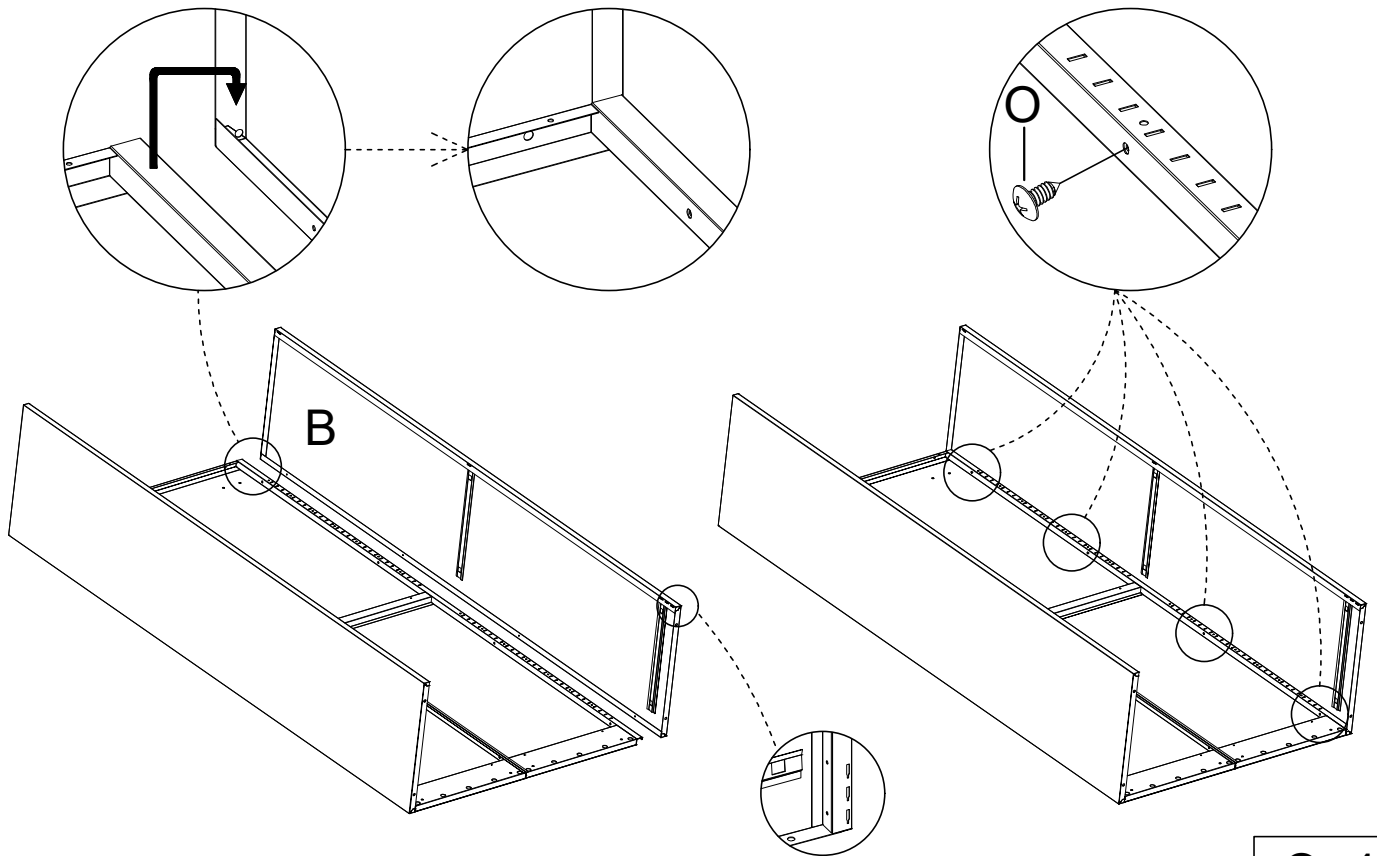

Ox4

4


Snap the three buckles on either side of Part J into the three holes in both side panels and then push it down so that it snaps into the bottom of the cabinet.

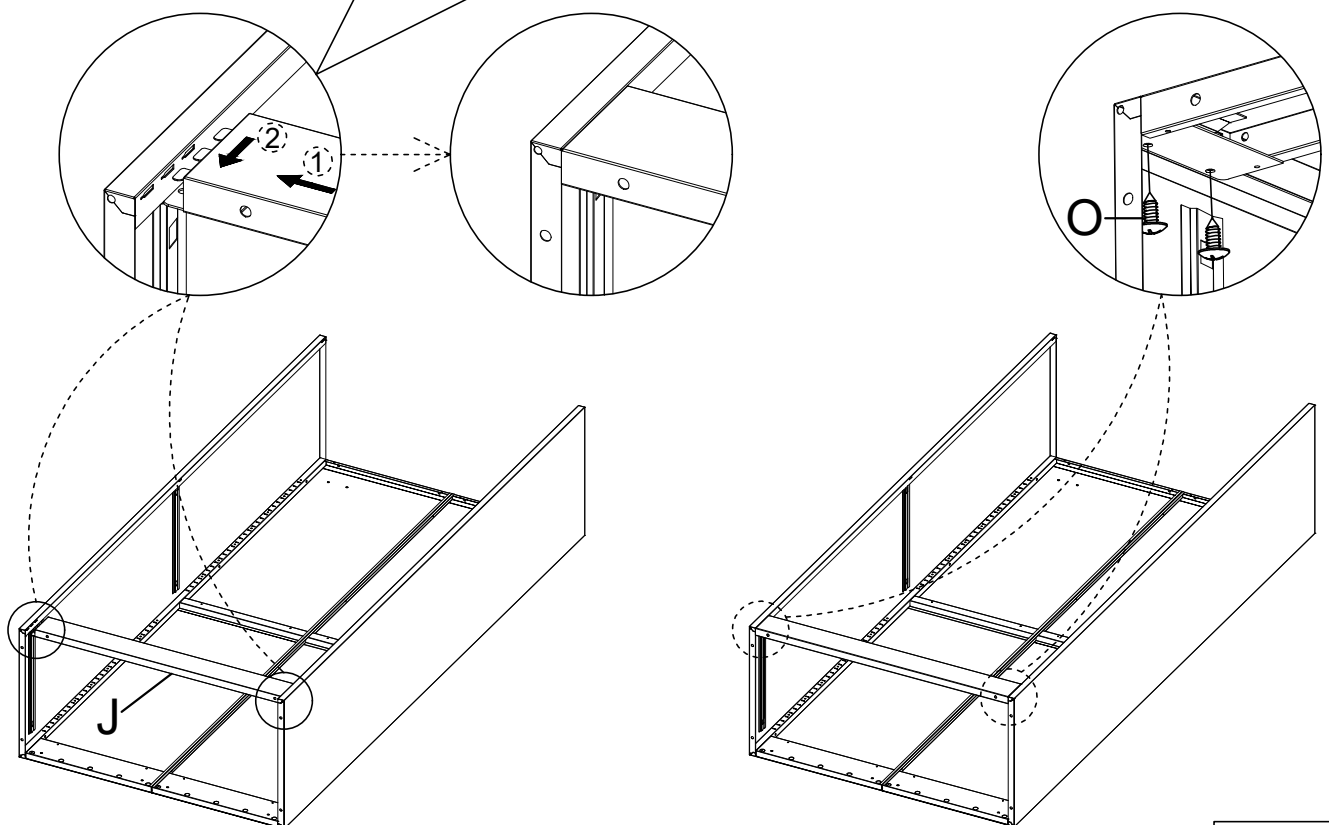

Ox4

5


Snap the buckle on either side of Part M into the hole in both side panels and then push it down so that it snaps into the bottom of the cabinet.

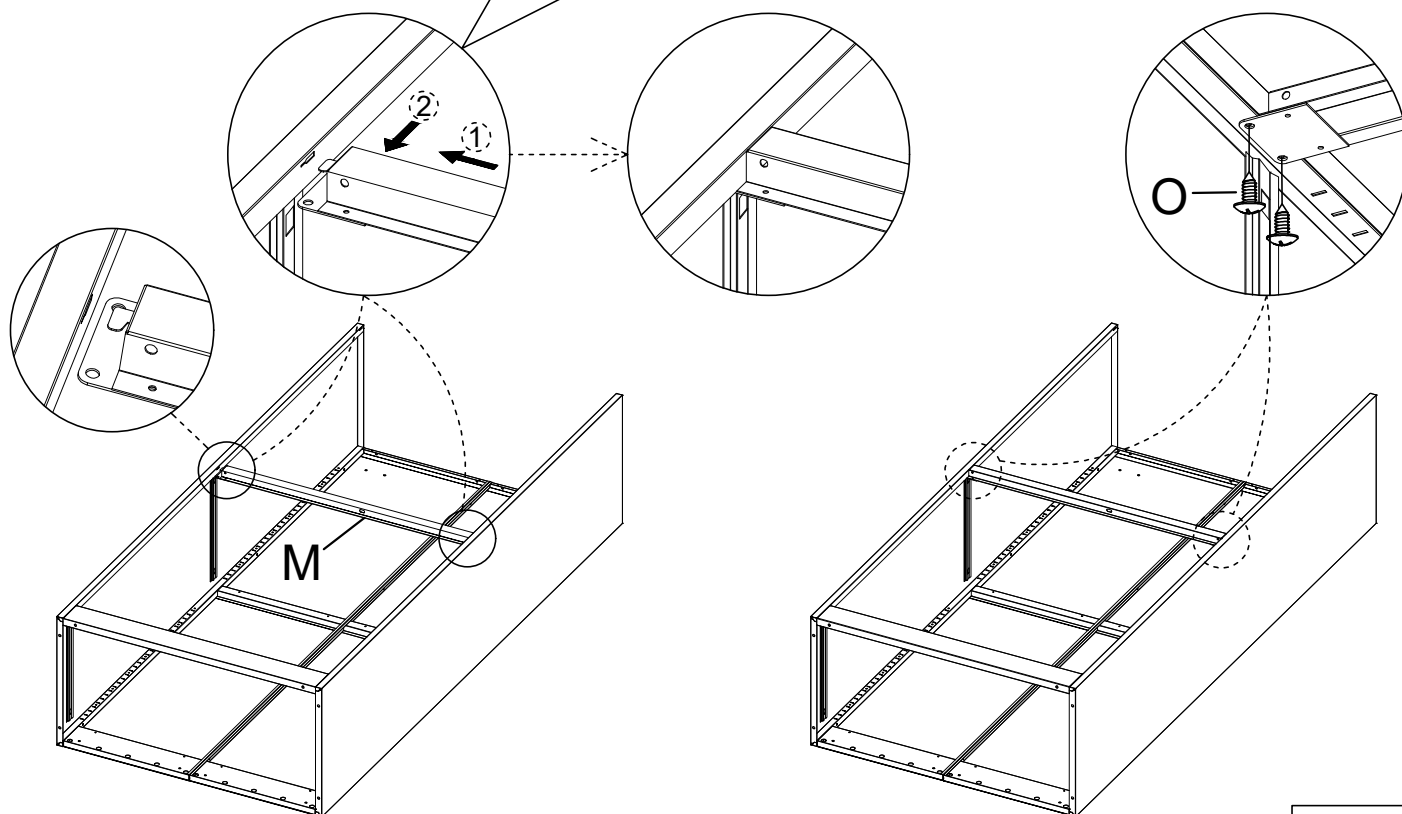

Ox4

6



Snap the buckle on both sides of Part I into the hole in both side panels and push it up so that it snaps into the top of the cabinet.

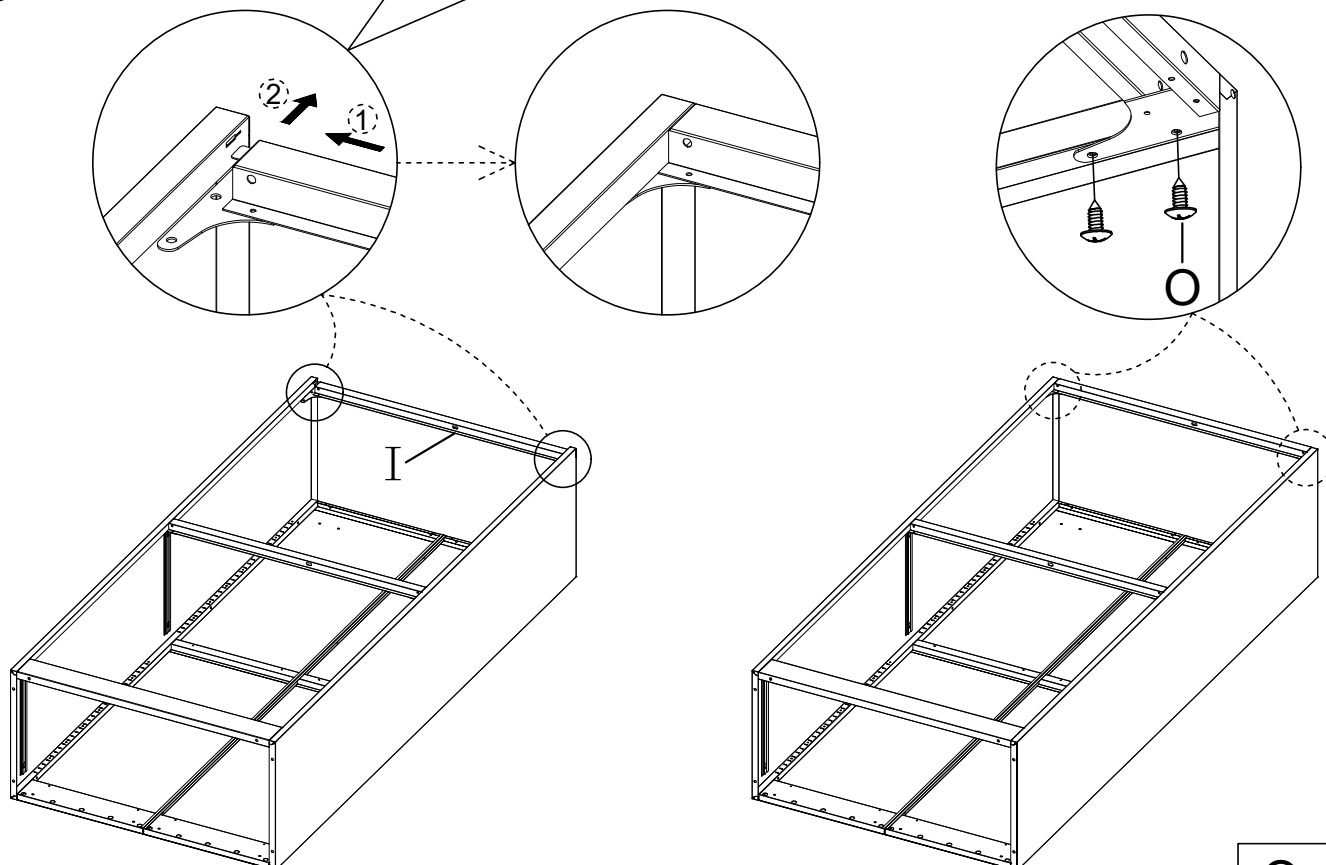

Ox4

7



Part G has two holes on one side, facing the rear.

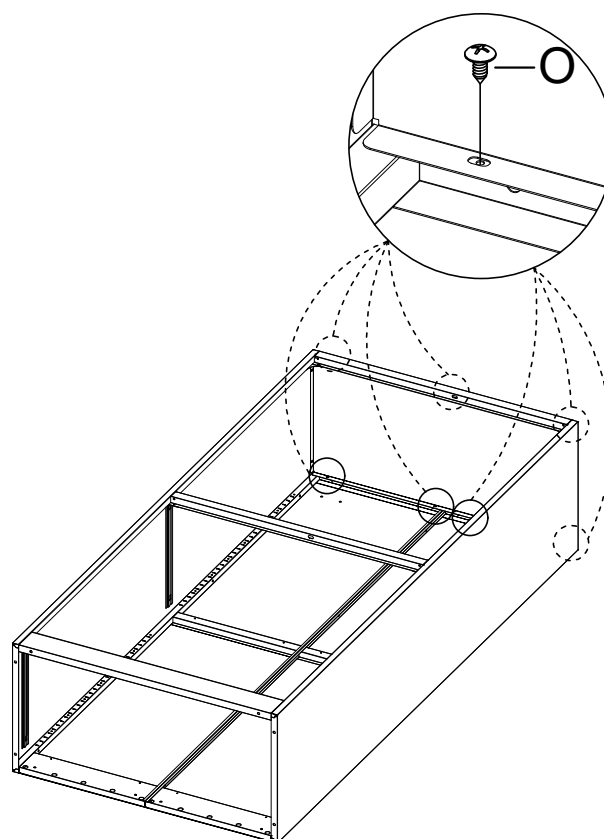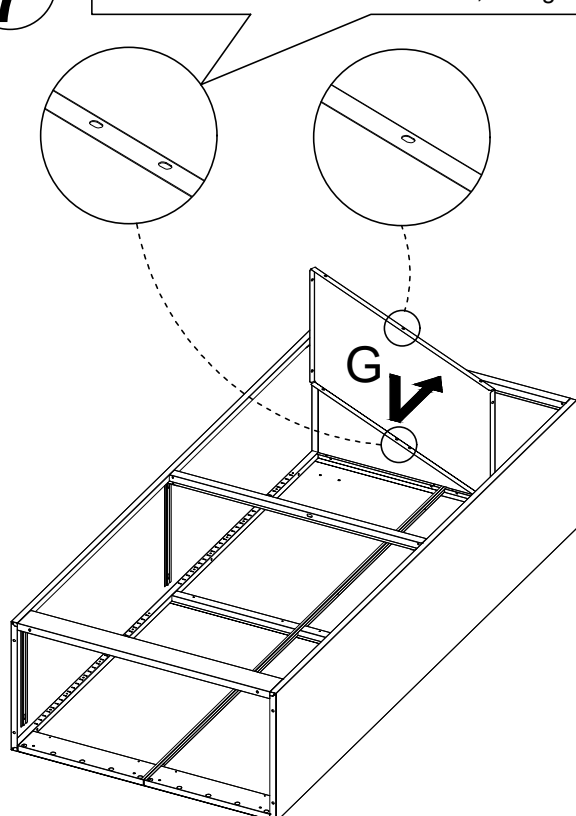


Ox7

8

When placing Part H and N, place the notched side facing forward.

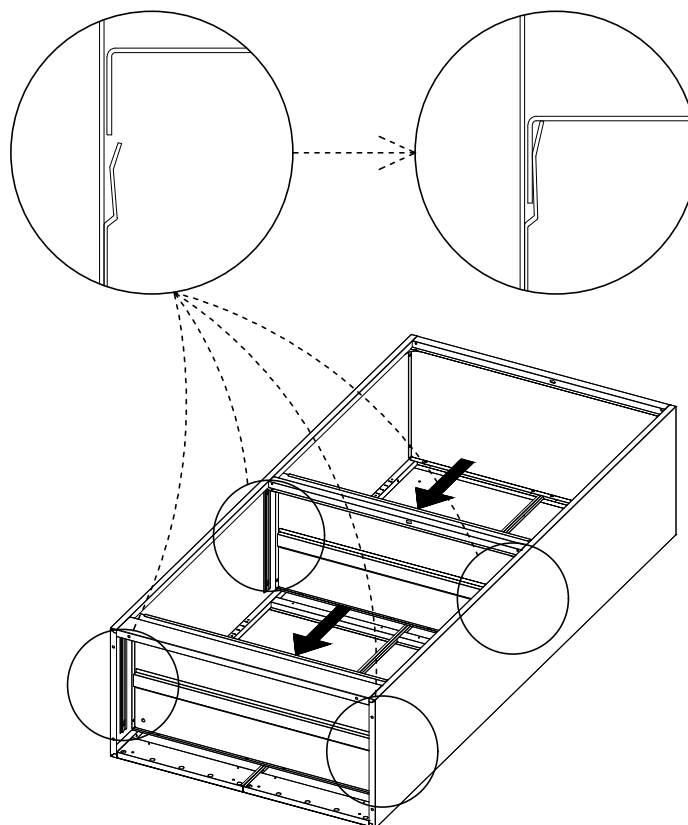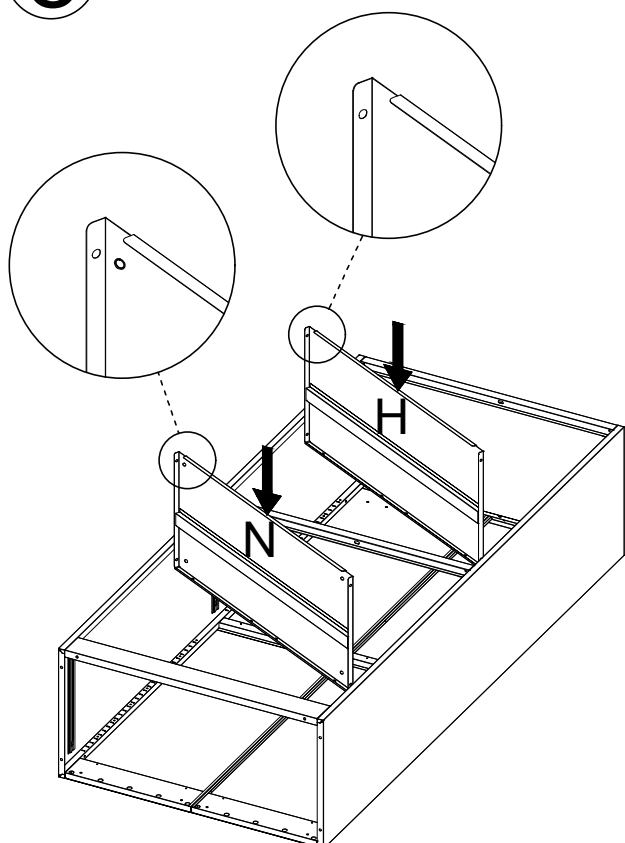

9

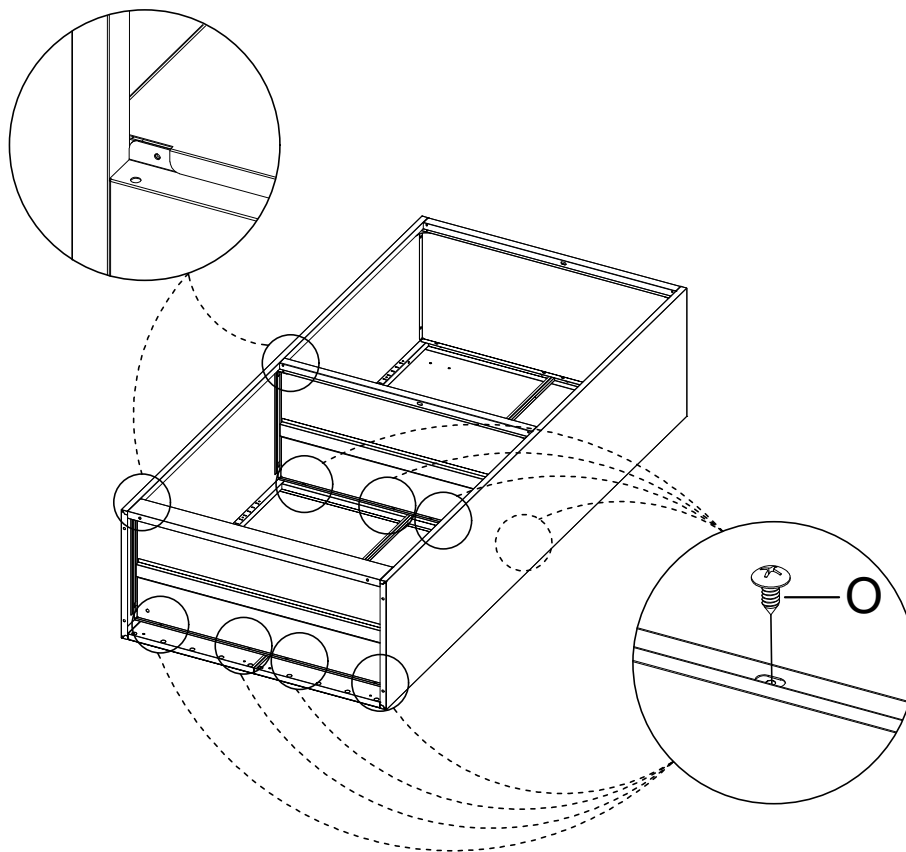


O×8

10

Put the two metal strips K into the bottom frame, taking care that the raised side of Parts K faces the inside of the cabinet and is flush with the bottom of the cabinet when assembled.

The raised gold hardware side on Part K faces the bottom of the cabinet.

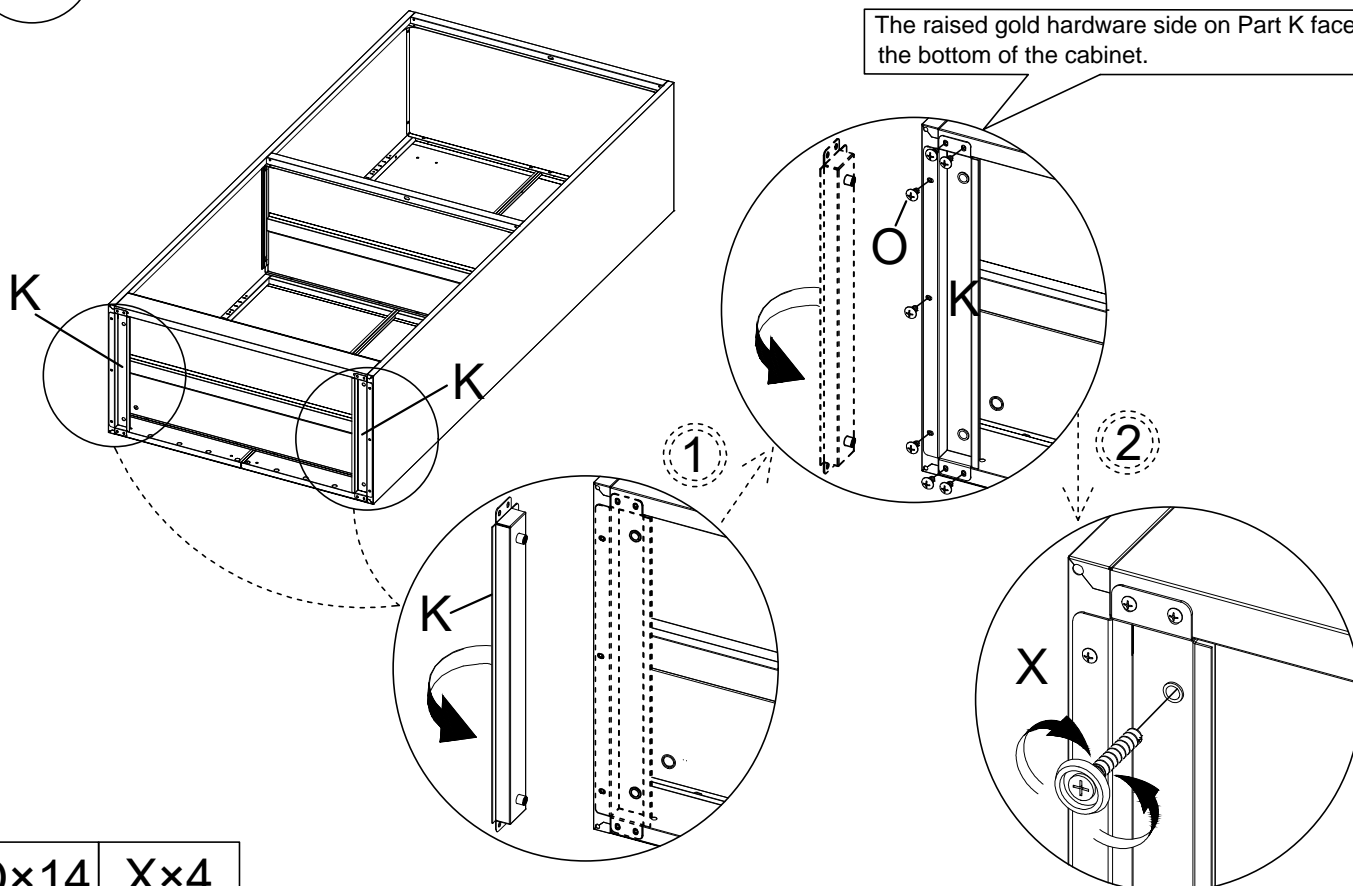


O×14 X×4





# 11

If the ground is uneven, it can be adjusted by rotating the screw X.  
This will fix the situation that the door is not easily opened or closed.

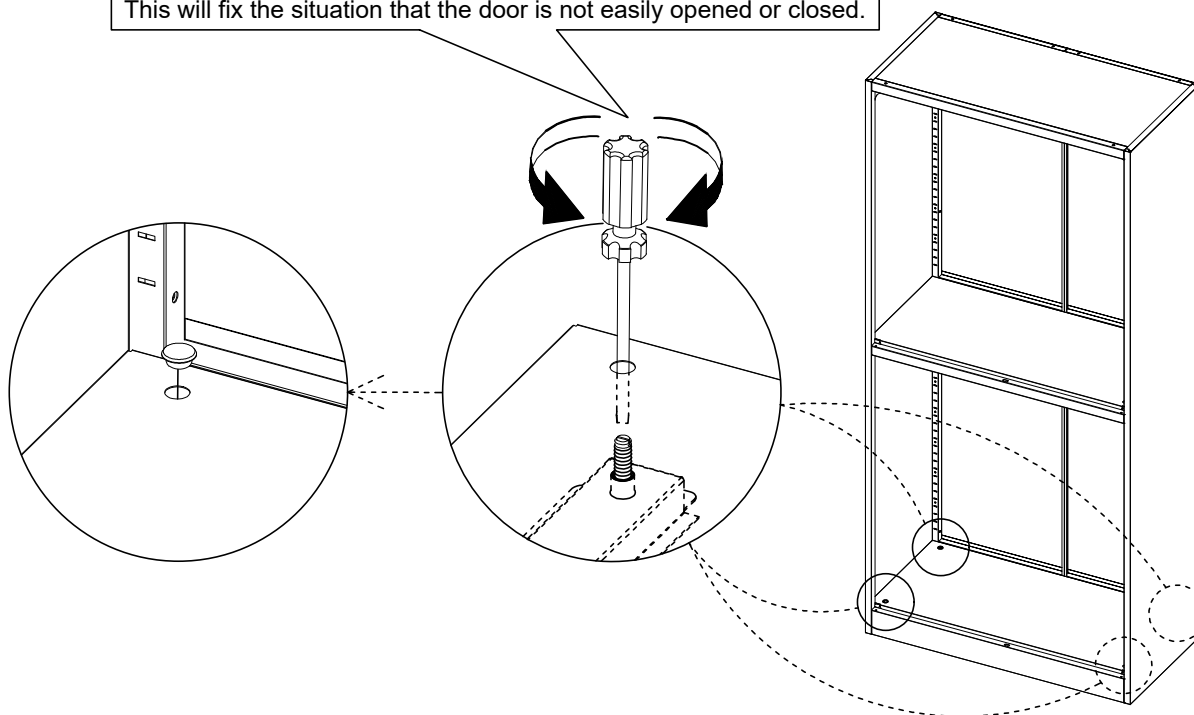




# 12

The cabinet can be fixed to the wall as needed.

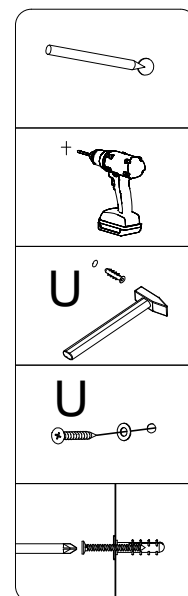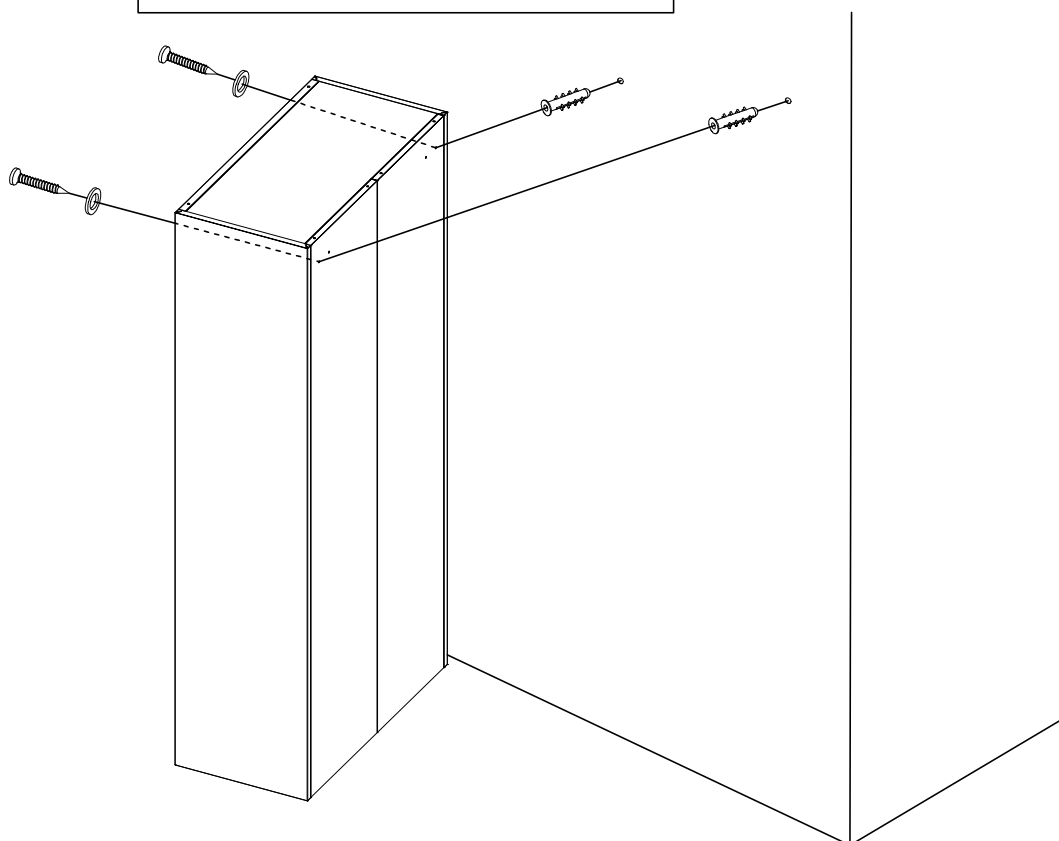




U×2

13

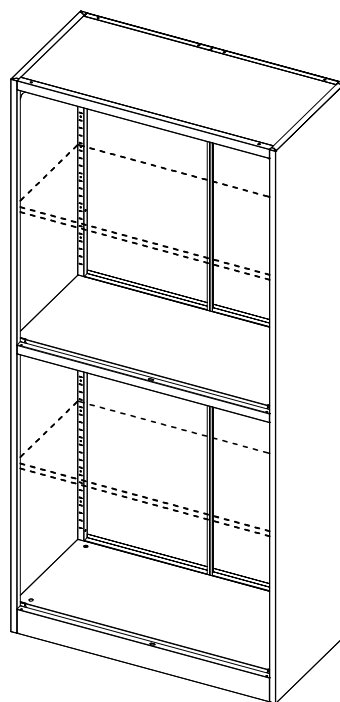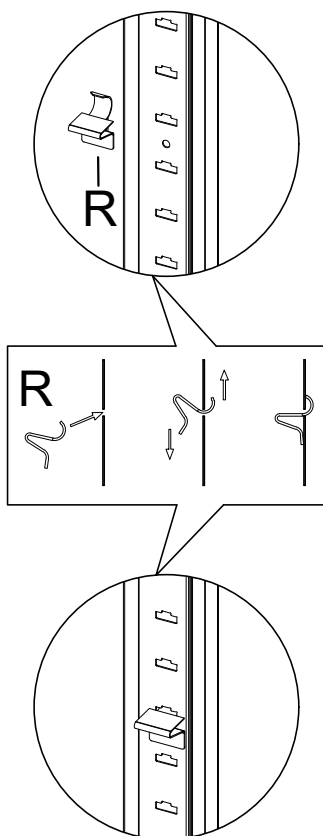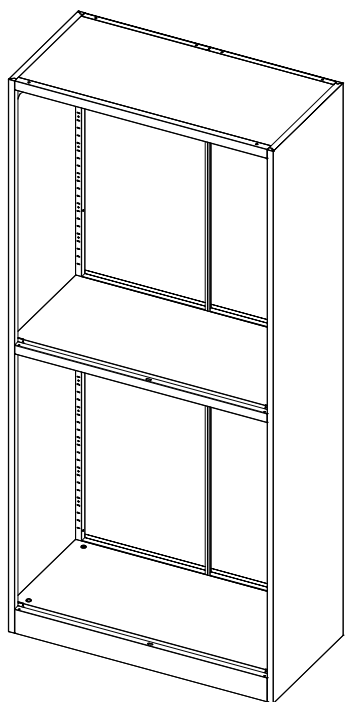

R×8


14

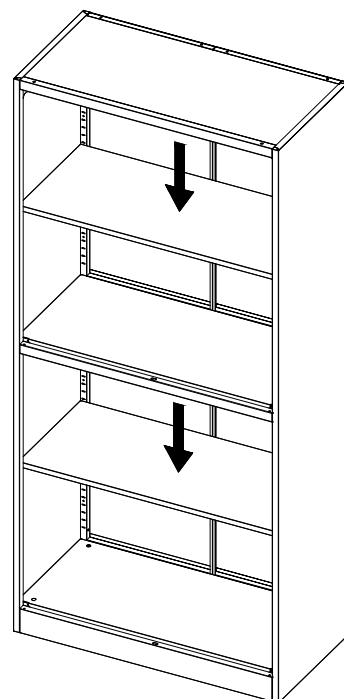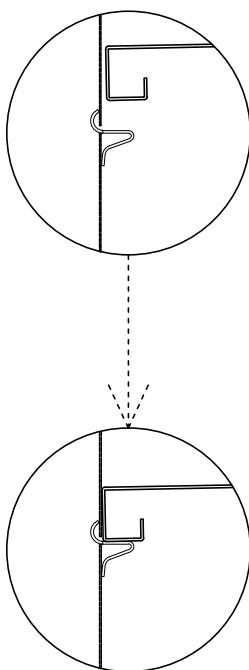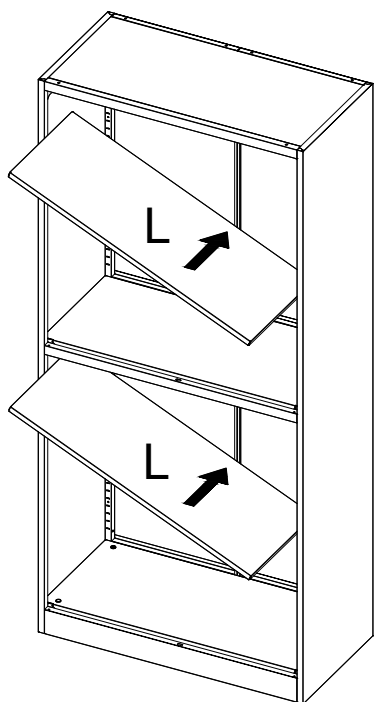

15


Install the door on one side by first installing the door shaft screw S, then by pressing the spring screw on the top of the door.

If the spring screw is missing from the door, you can find the screw Y in the hardware package to install it.

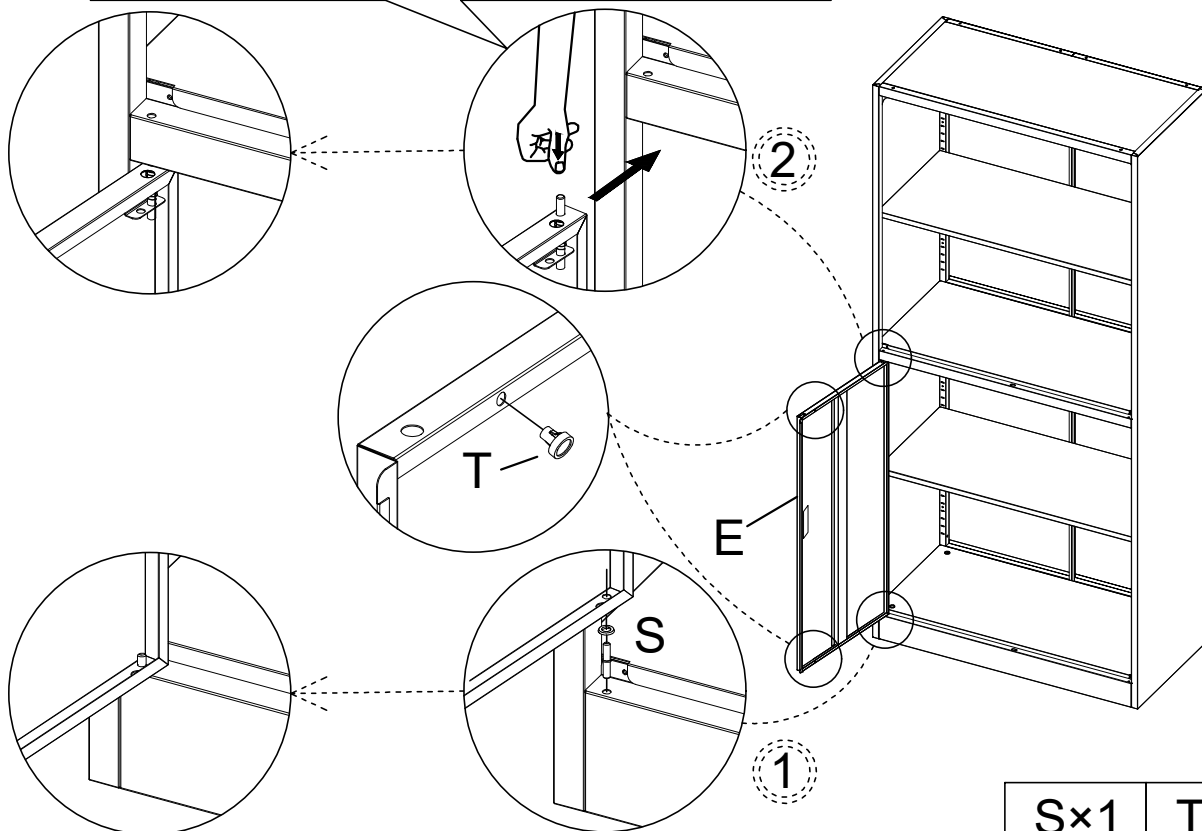


16

If the spring screw is missing from the door, you can find the screw Y in the hardware package to install it.

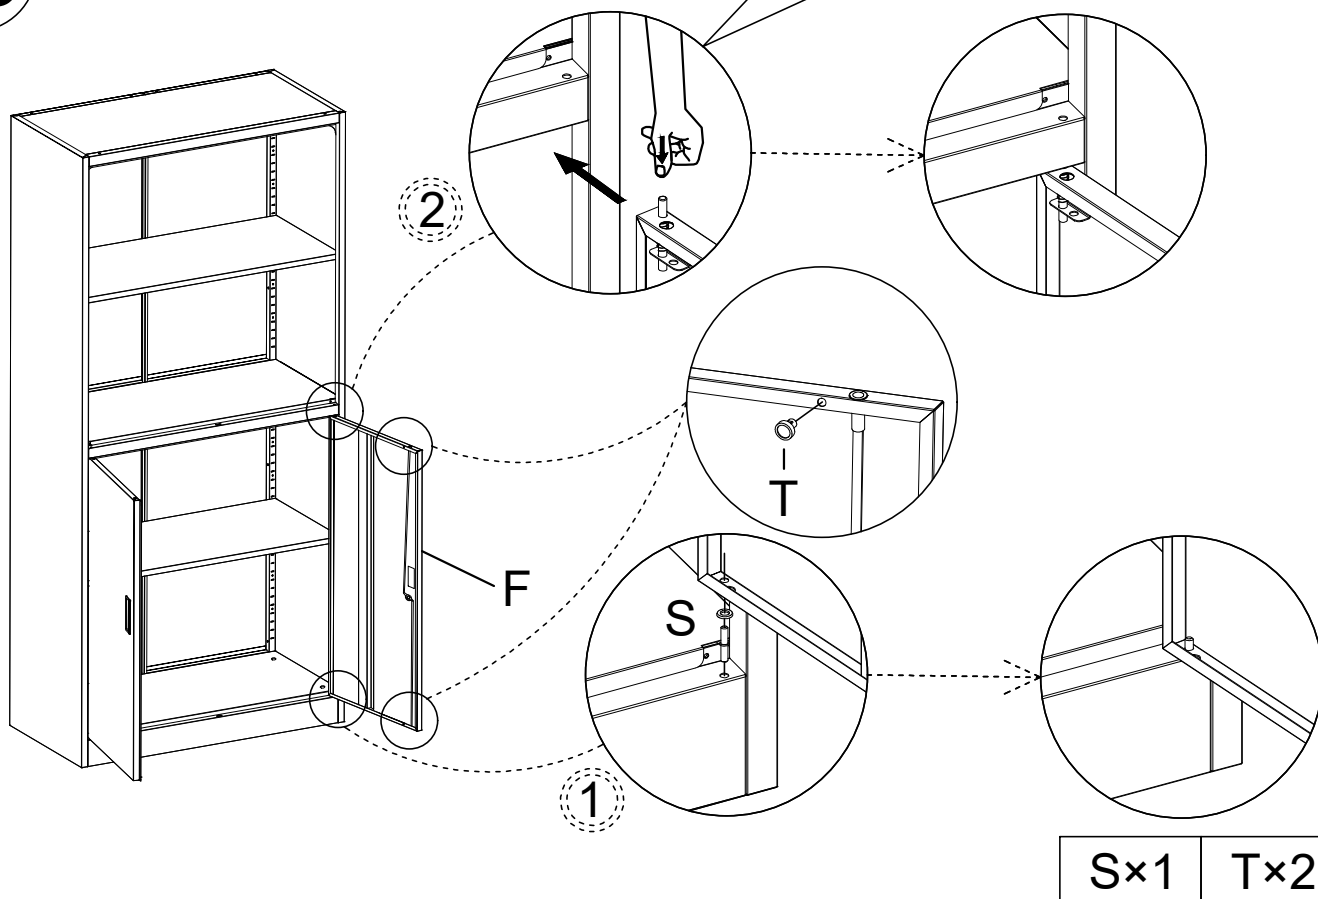

# 17

If the spring screw is missing from the door, you can find the screw Y in the hardware package to install it.

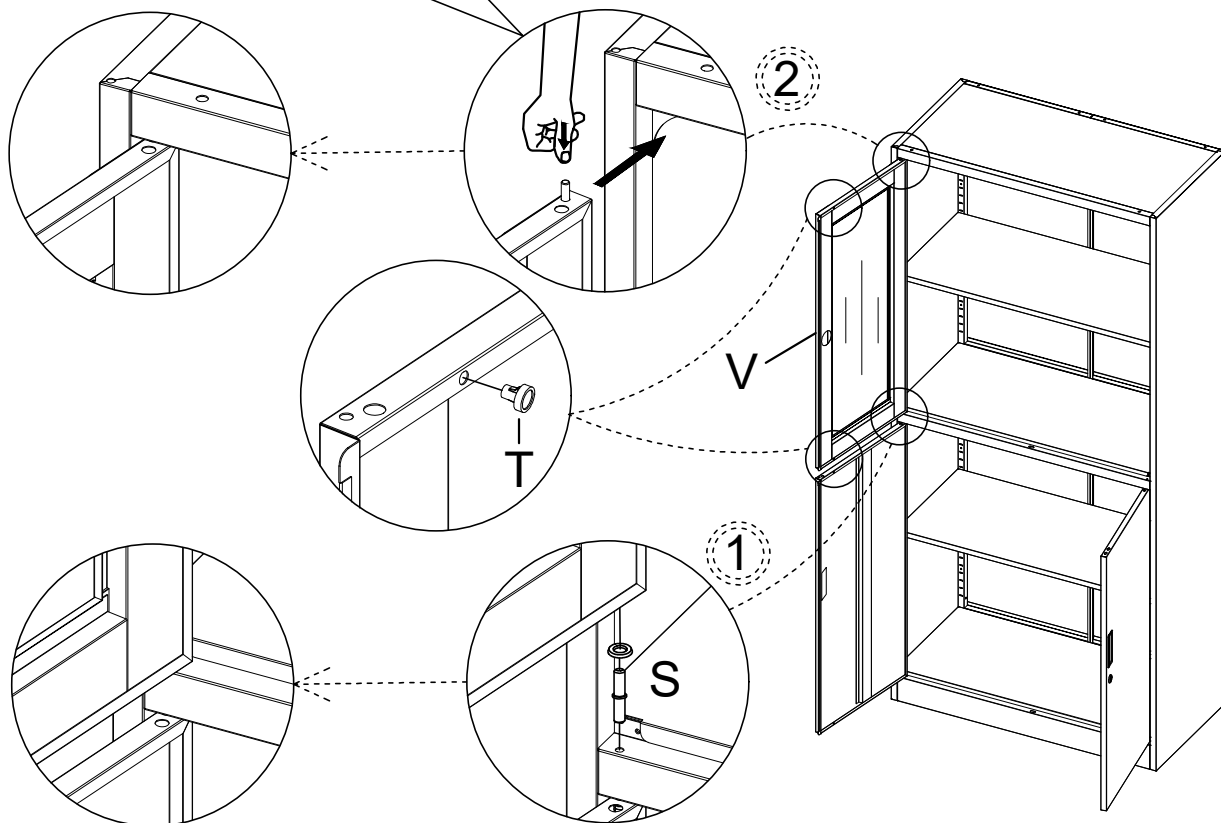


S×1

T×2

# 18

If the spring screw is missing from the door, you can find the screw Y in the hardware package to install it.

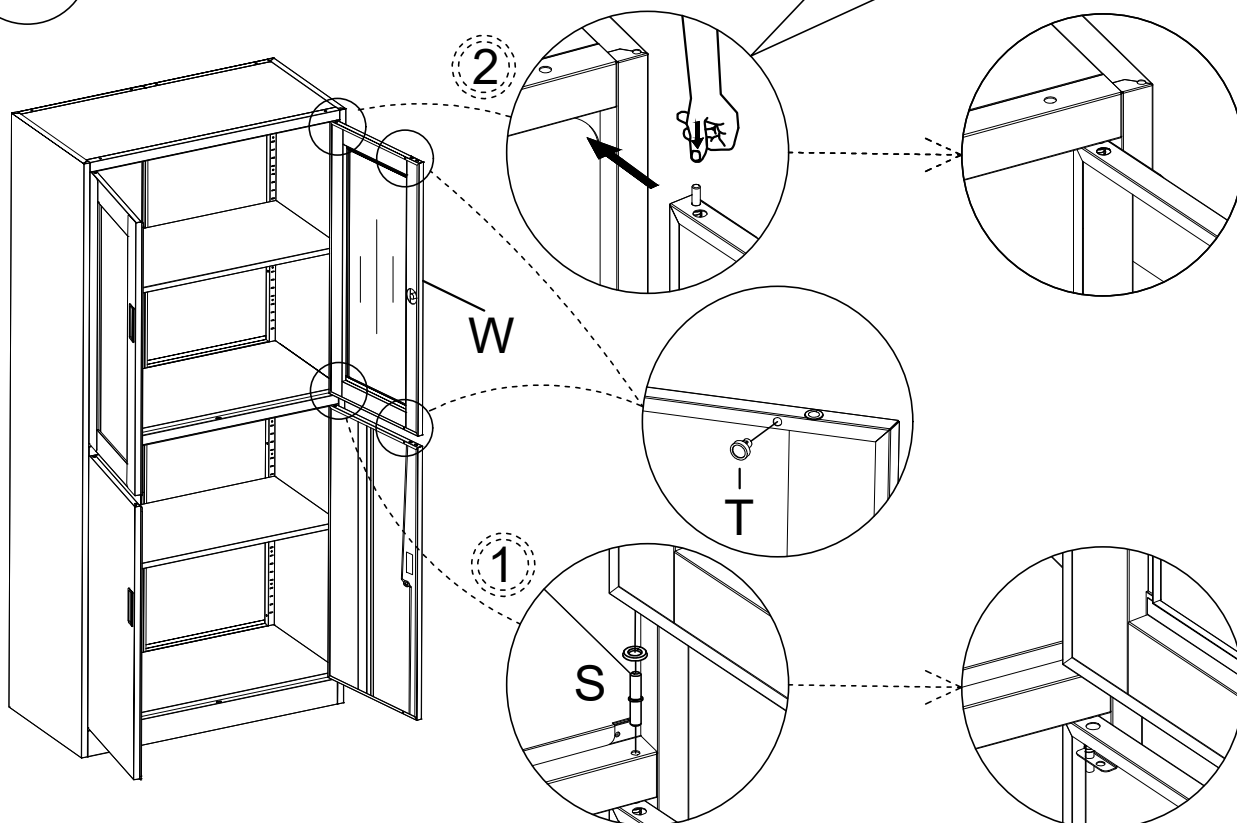

S×1

T×2