
BED
ASSEMBLY INSTRUCTIONS
WF314842/WF314843 QUEEN

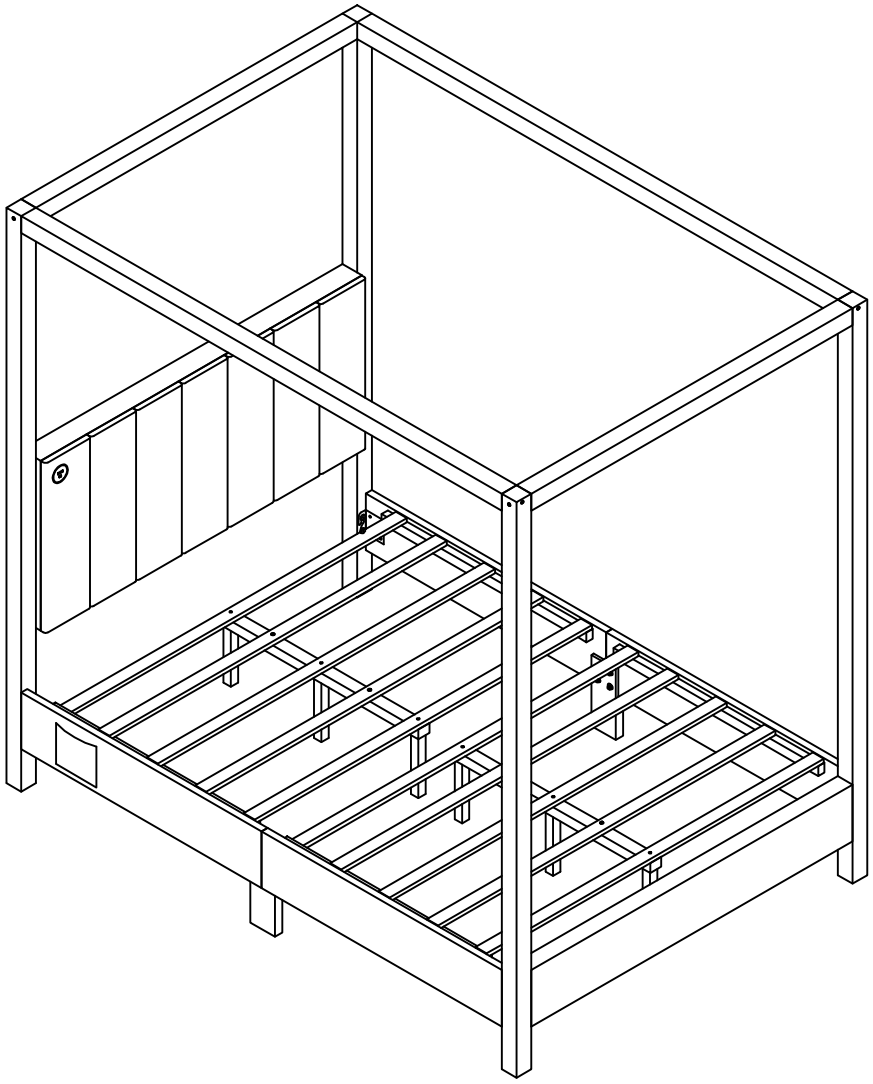


THANK YOU FOR PURCHASING BED

WARNING


- No rough tools or corrosive detergent for cleaning.
- The package contains some heavy part and sharp - edged part, please be careful when assembling to avoid any physical injury around you.
- Please strictly observe the steps of the instructions.
- Do not use a broken item and contact our customer service for guidance.

BOX 2 OF WF314843


PART LIST

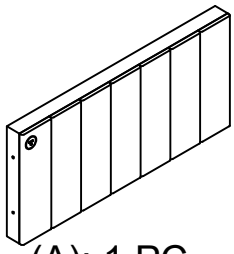


(A): 1 PC

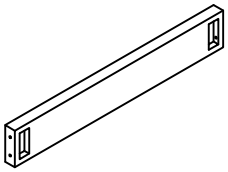


(B): 1 PC




(L): 2 PCS




(H): 2 PCS



(J): 2 PCS




(K): 2 PCS



(O): 2 PCS



(M): 4 PCS



(P): 6 PCS

HARDWARE LIST

5/16 " x25 mm



(Q): 8 PCS

5/16 " x50 mm



(R): 8 PCS

5/16 " x75 mm



(S): 8 PCS

1/4 " x35 mm



(T): 12 PCS

1/4 " x35 mm



(U): 8 PCS

Ø8 x30 mm



(V): 8 PCS

L5



(W): 1 PC

BOX 1 OF WF314842

PART LIST



(C): 1 PC




(D): 1 PC




(E): 1 PC



(F): 1 PC




(G): 2 PCS

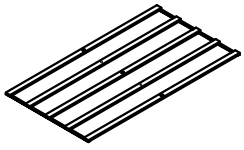


(N): 2 PCS

Step 1:

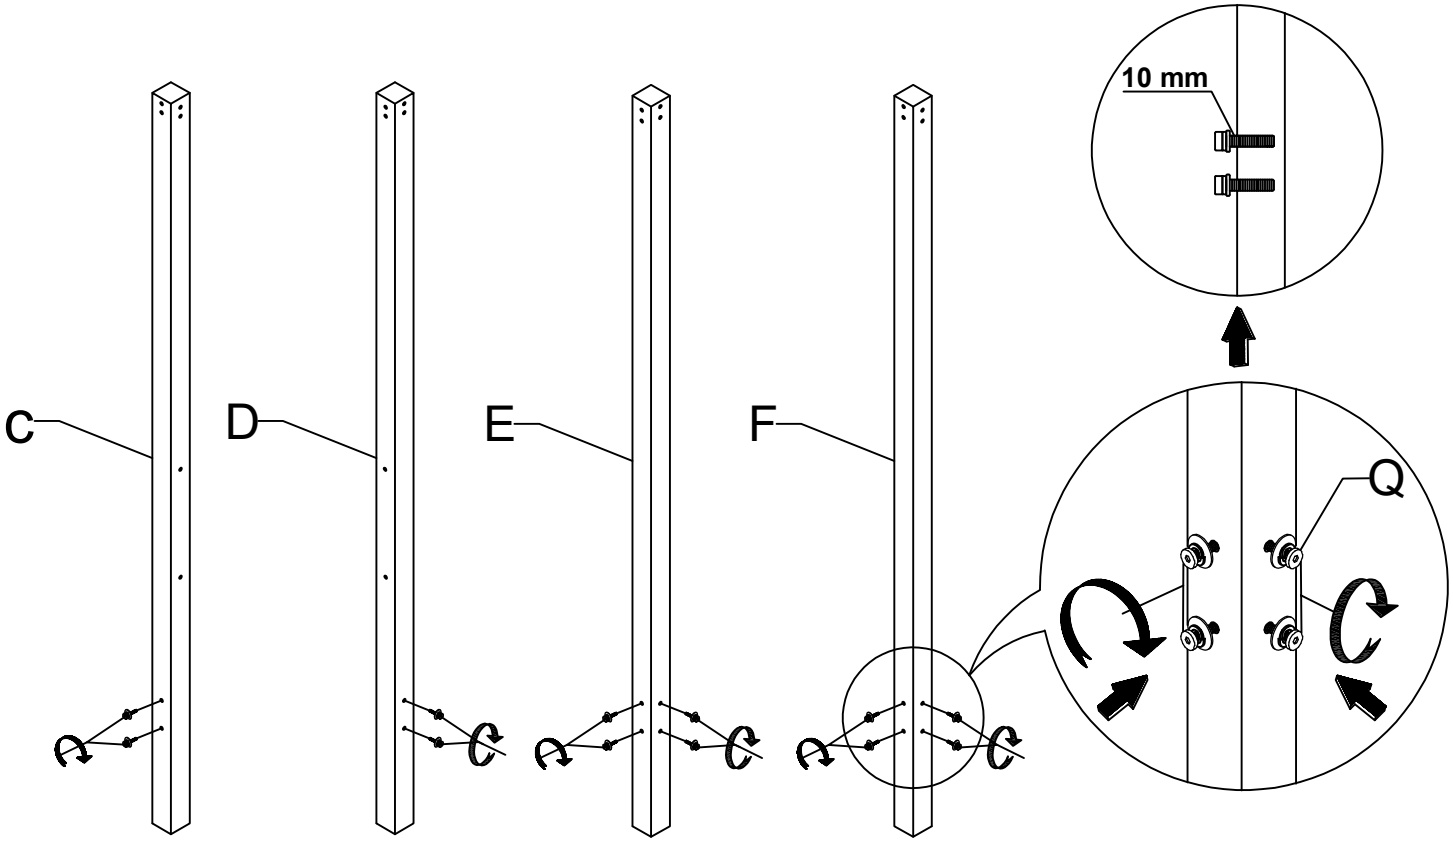


Q	Bolt 5/16 " x25 mm		8 PCS

Step 2:

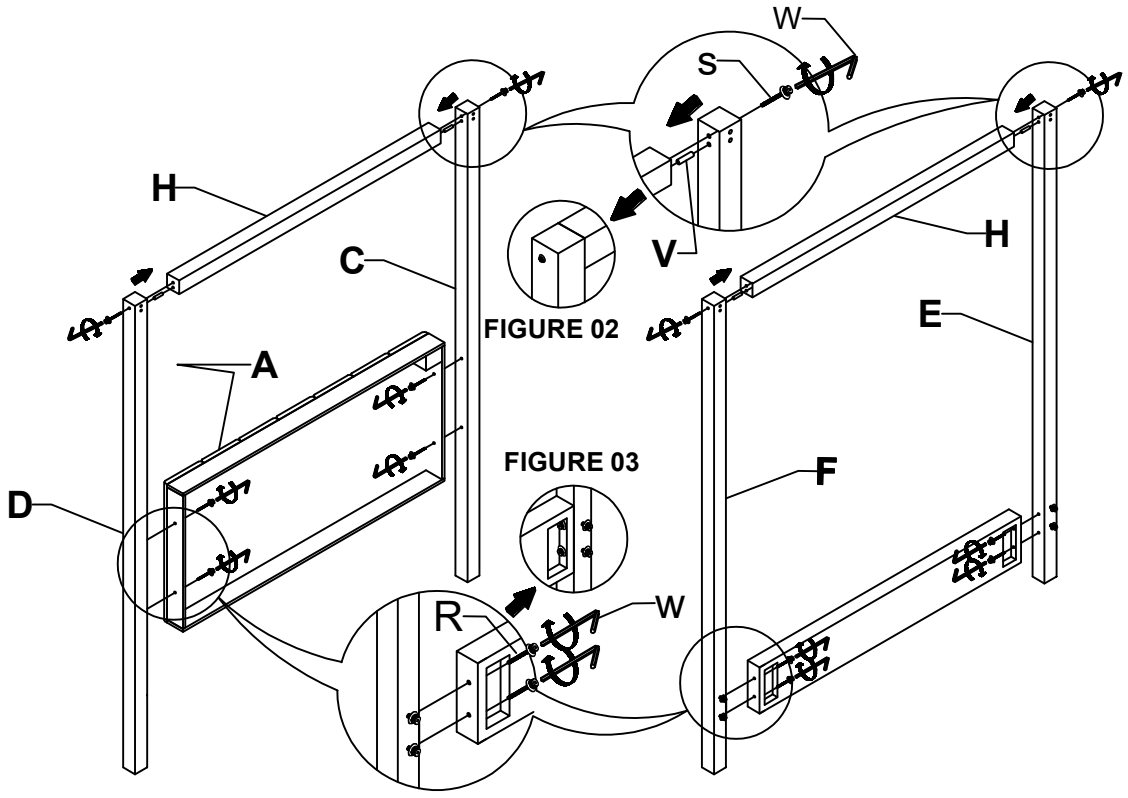


R	Bolt 5/16 " x50 mm		8 PCS	**V**	Wooden Pegs (Ø8x40mm)		4 PCS
S	Bolt 5/16 " x75 mm		4 PCS	**W**	Allen Wrench (M5x100mmx30mm)		1PC

Step 3:

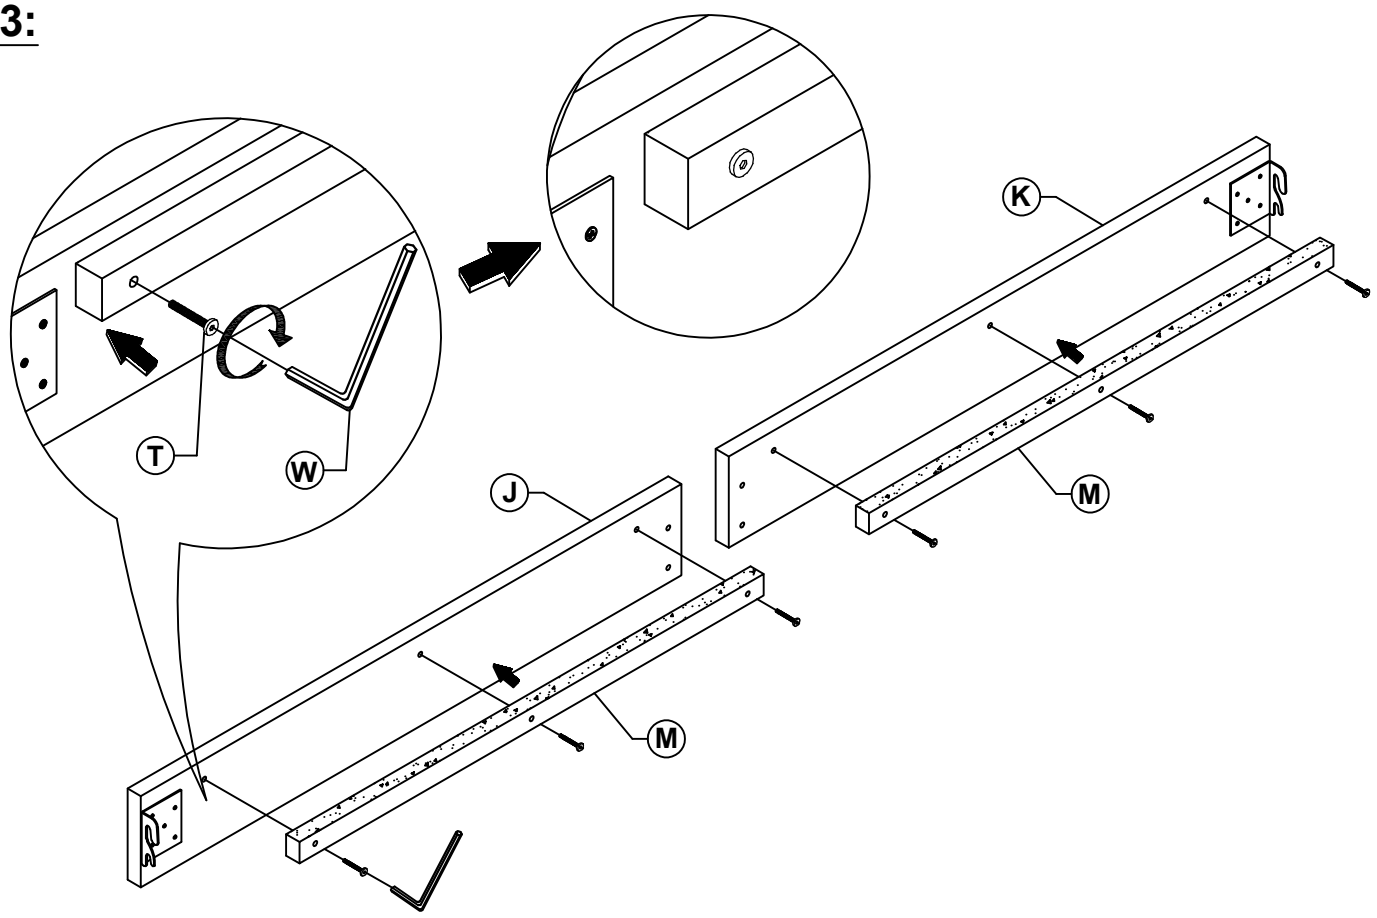

T	Bolt 1/4 " x35 mm		12 PCS	**W**	Allen Wrench (M5x100mmx30mm)		1PC

Step 4:

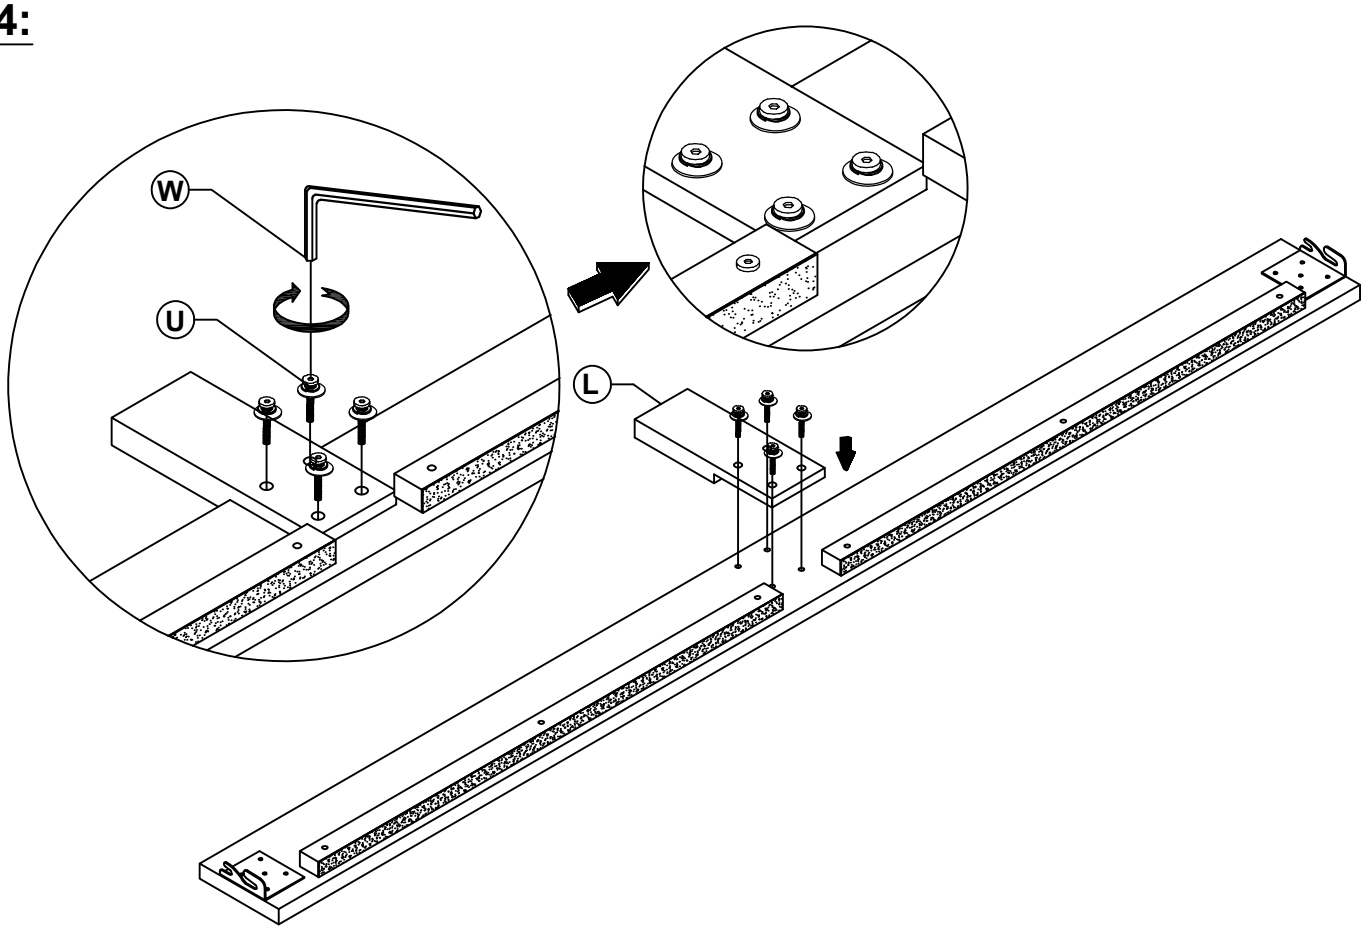

U	Bolt 1/4 " x35 mm		8 PCS	**W**	Allen Wrench (M5x100mmx30mm)		1PC

Step 5:


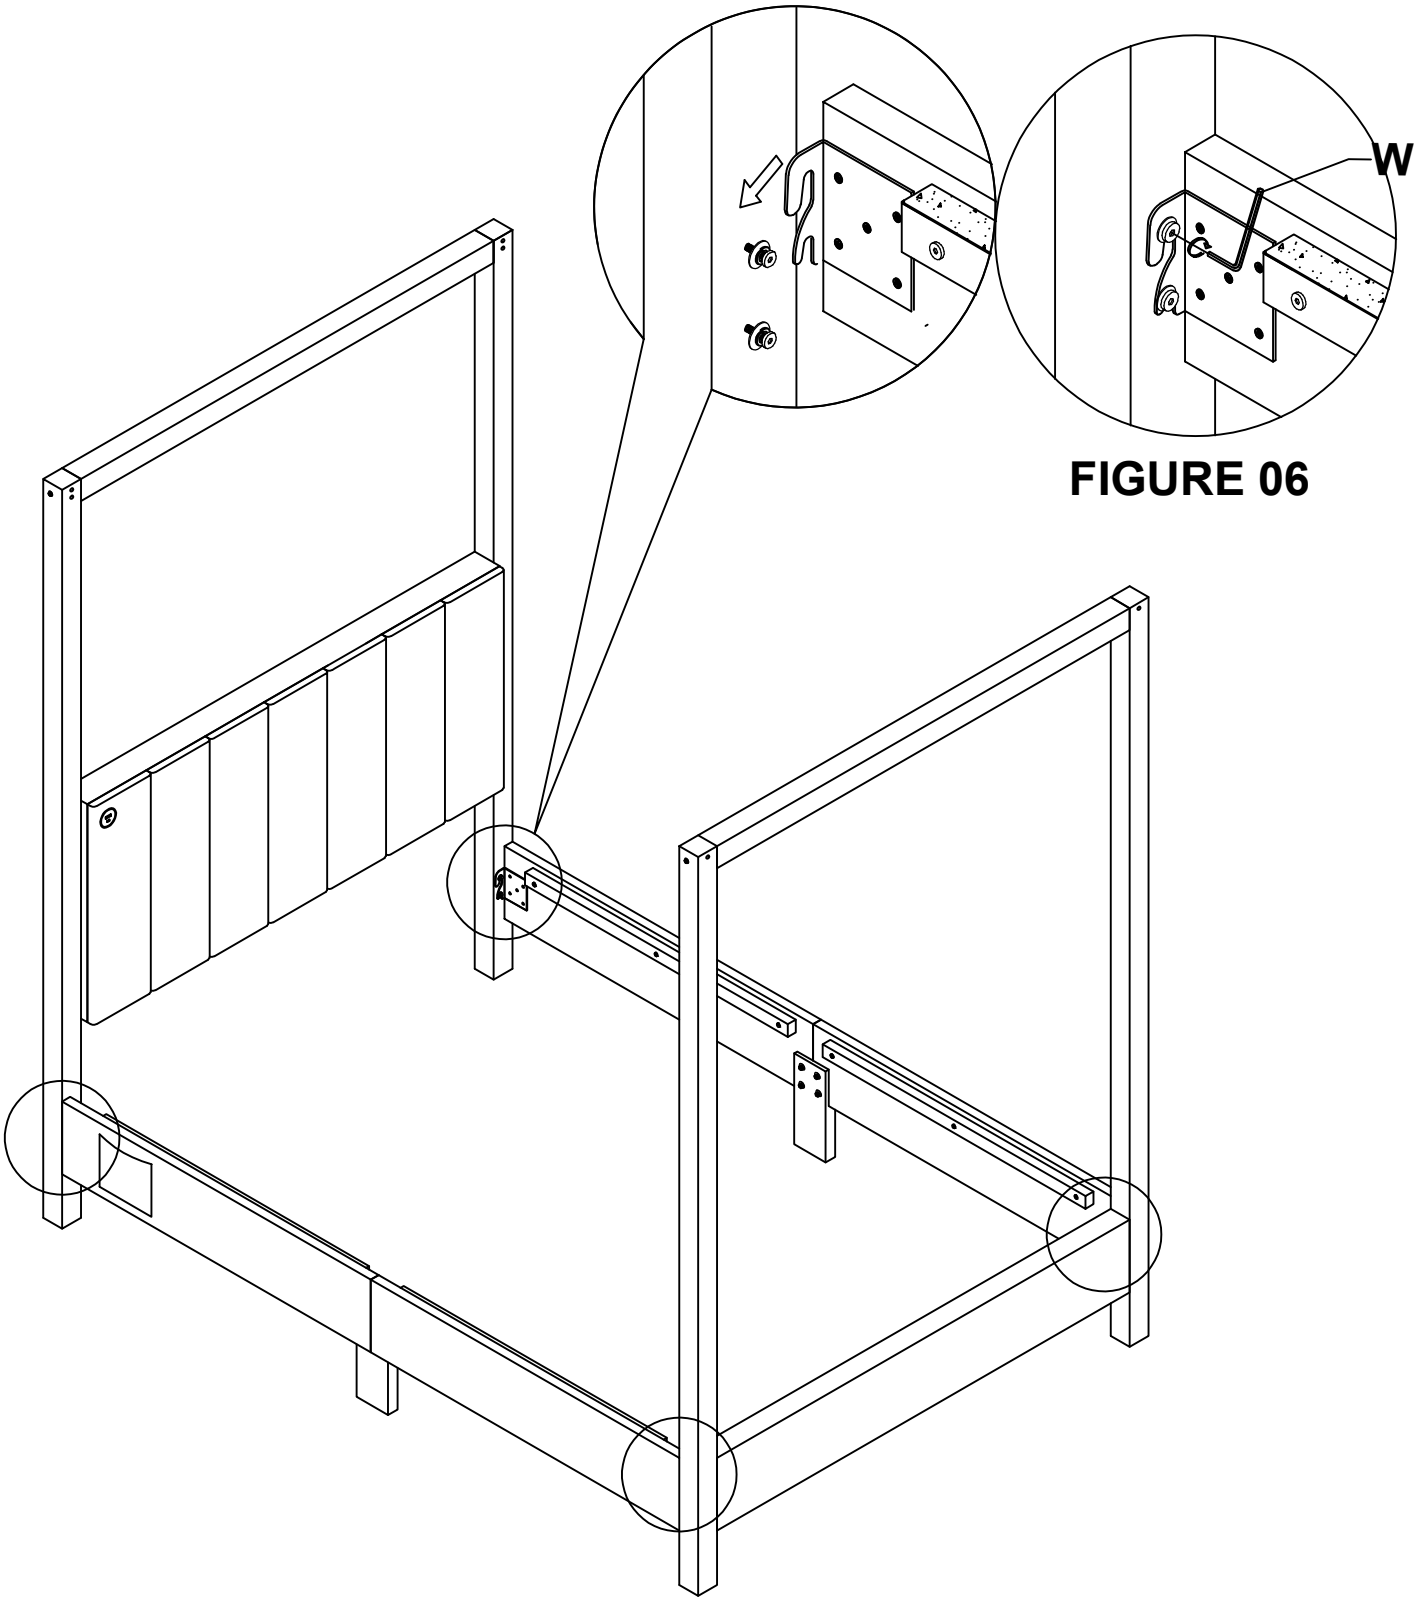


FIGURE 06


Q	Bolt 5/16 " x25 mm		8 PCS
W	Allen Wrench (M5x100mmx30mm)		1PC

Step 6:

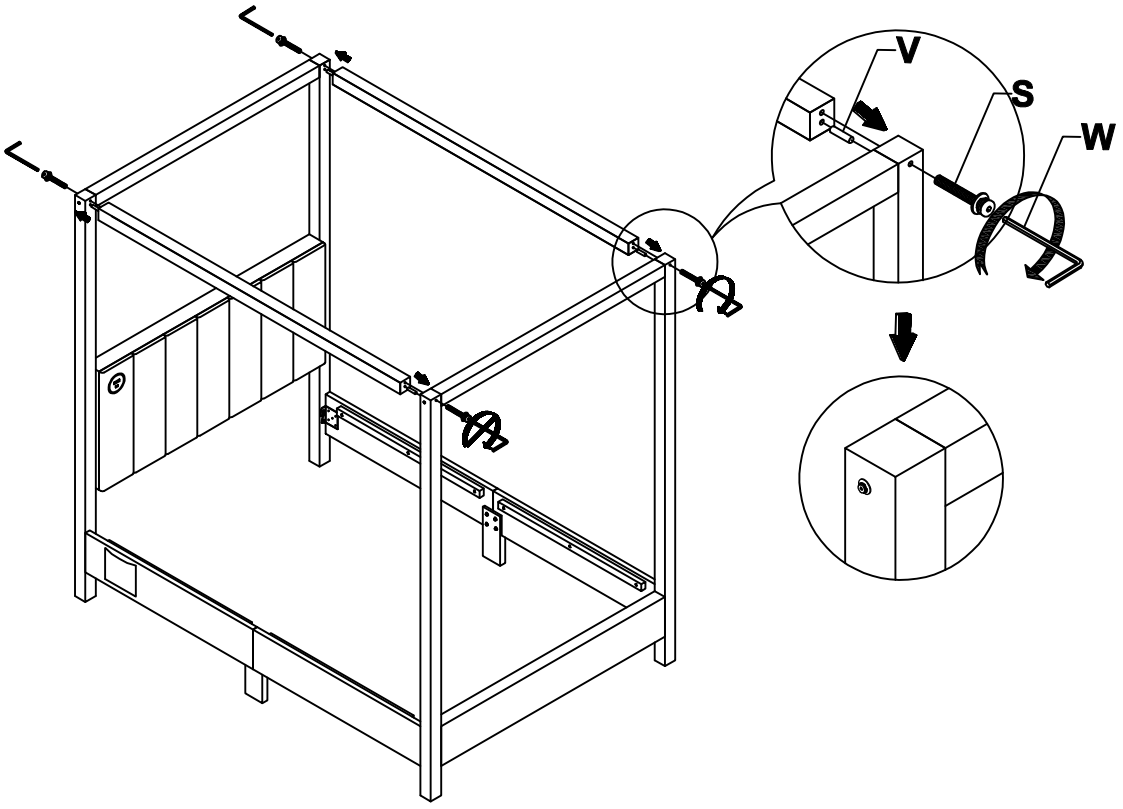


S	Bolt 5/16 " x75 mm		4 PCS	**V**	Wooden Pegs (Ø8x40mm)		4 PCS
W	Allen Wrench (M5x100mmx30mm)		1PC				

Step 7: Install the center rail (O) to the slat set (N) tighten by the center legs (P).

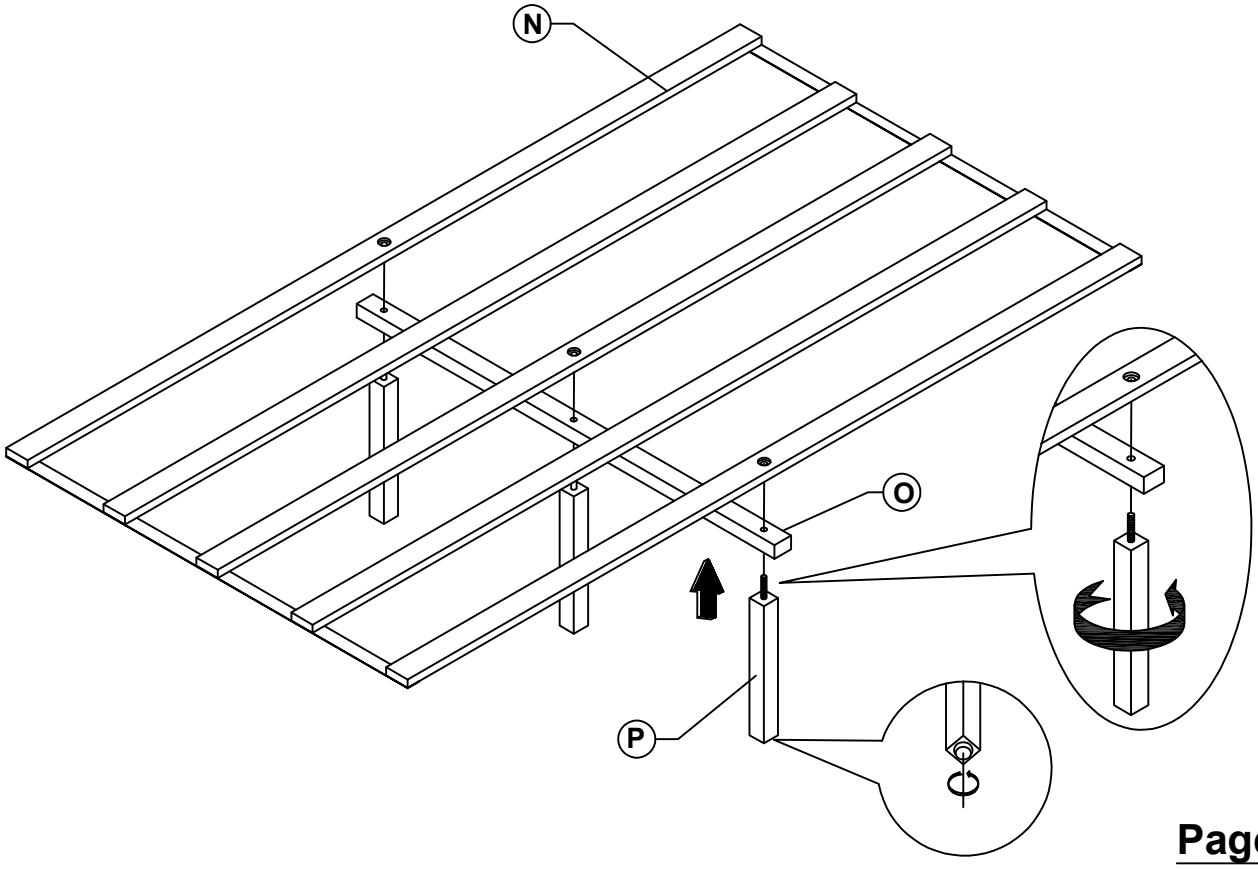

Step 8: Install the slat set to the bed.

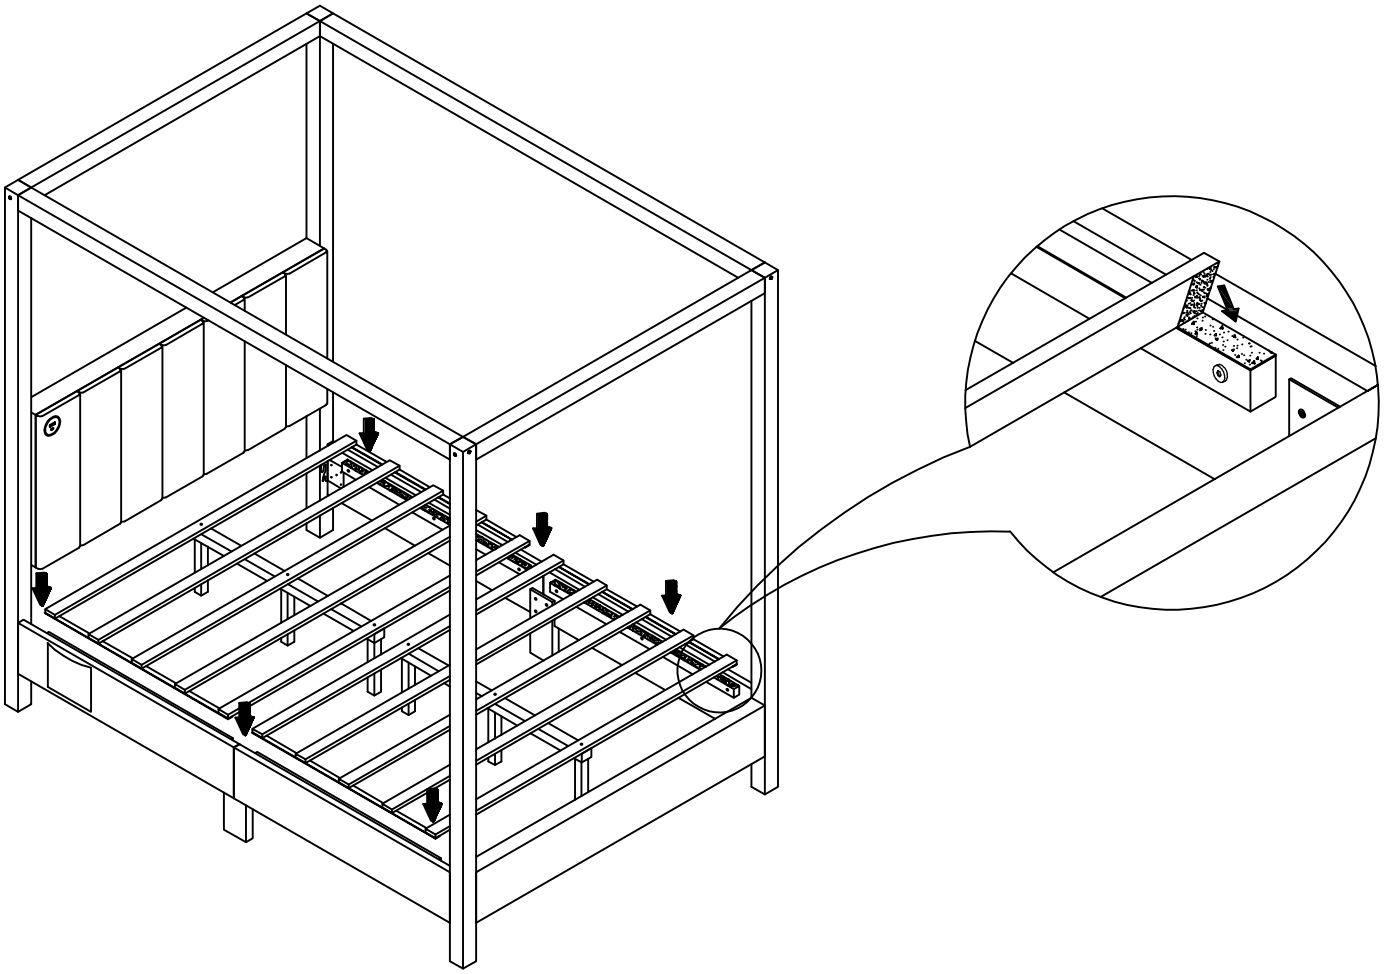

Step 9: ASSEMBLE COMPLETE.

