


ASSEMBLY INSTRUCTION



WOODEN BRIDGE

ATTENTION: Please make sure an electrical drill is ready before assembling. (Electrical drill is not included in the package)

- A. Side post with upper right hole(2pcs)
- B. Side post with upper left hole(2pcs)
- C. Middle post(2pcs)
- D. Handrail(8pcs)
- E. Right and left crossbeam(4pcs)
- F. Middle crossbeam(2pcs)
- H. Small connect rail(3pcs)
- I. Long connect rail(18pcs)

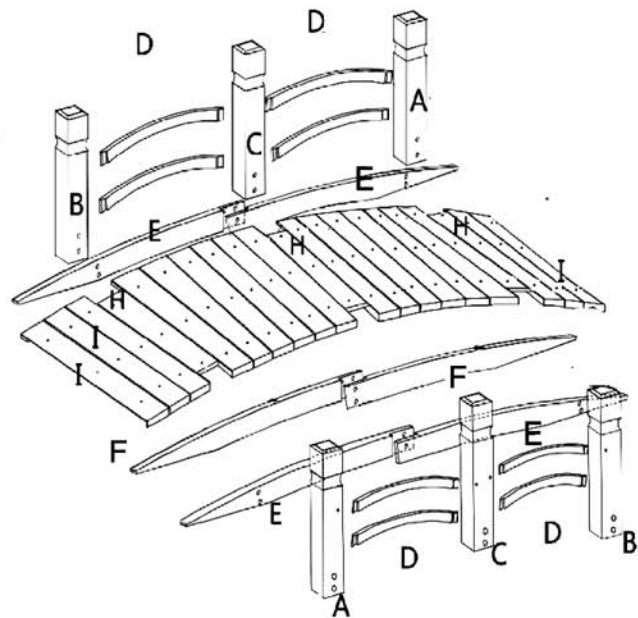

HARDWARE LIST

1、Bolts 8X100mm 12pcs



2、Bolts 8X45mm 2pcs



3、Washers 14pcs




4、NUTS 14PCS



5、Screws 3.5X 30 142pcs




Step1

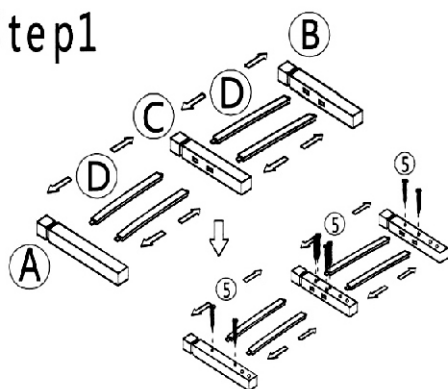


- ⚠ Insert part ④ (4pcs), into part ①, ② and ③
Use a phillips screw driver to screw in 6pcs ⑤
screw securely

Step2

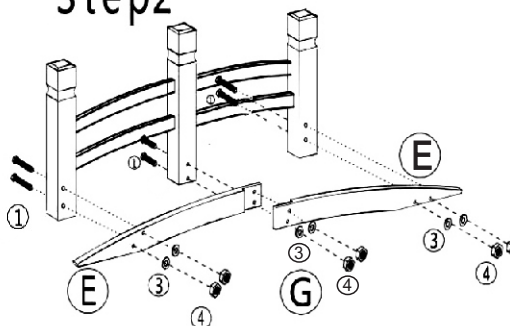


- ⚠ Screw parts ⑤, using 6pcs ① bolts, 6pcs ③ washer 6pcs ④ nuts on posts. use same process for other side

Step3

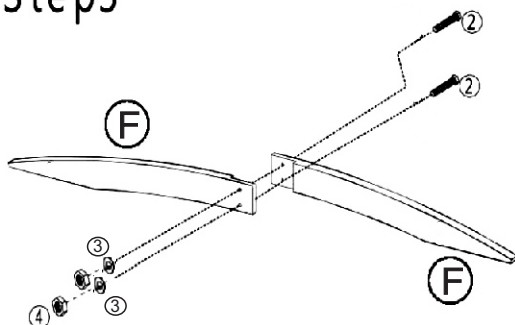

- ⚠ Use 2pcs ② bolts, 2pcs ③ washers, 2pcs ④ nuts to tighten ⑥ securely to creat middle base

Step4

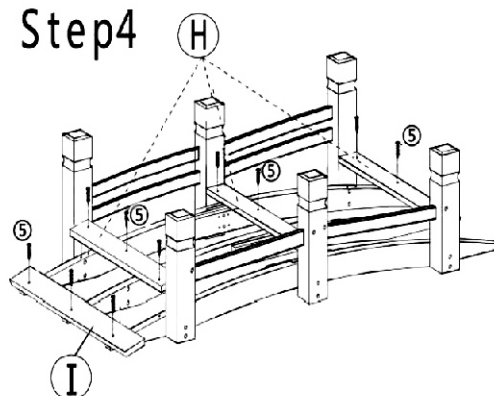

- ⚠ Use 18pcs ⑤ screws to securely fasten part ⑧ to the base . check panels are in line with the base. use remaining ⑤ screws to fasten part ① on the base and have part ① are aligned straight

Step5

Make sure all screws and bolts are tightened securely before use.

