


Assembly Instructions

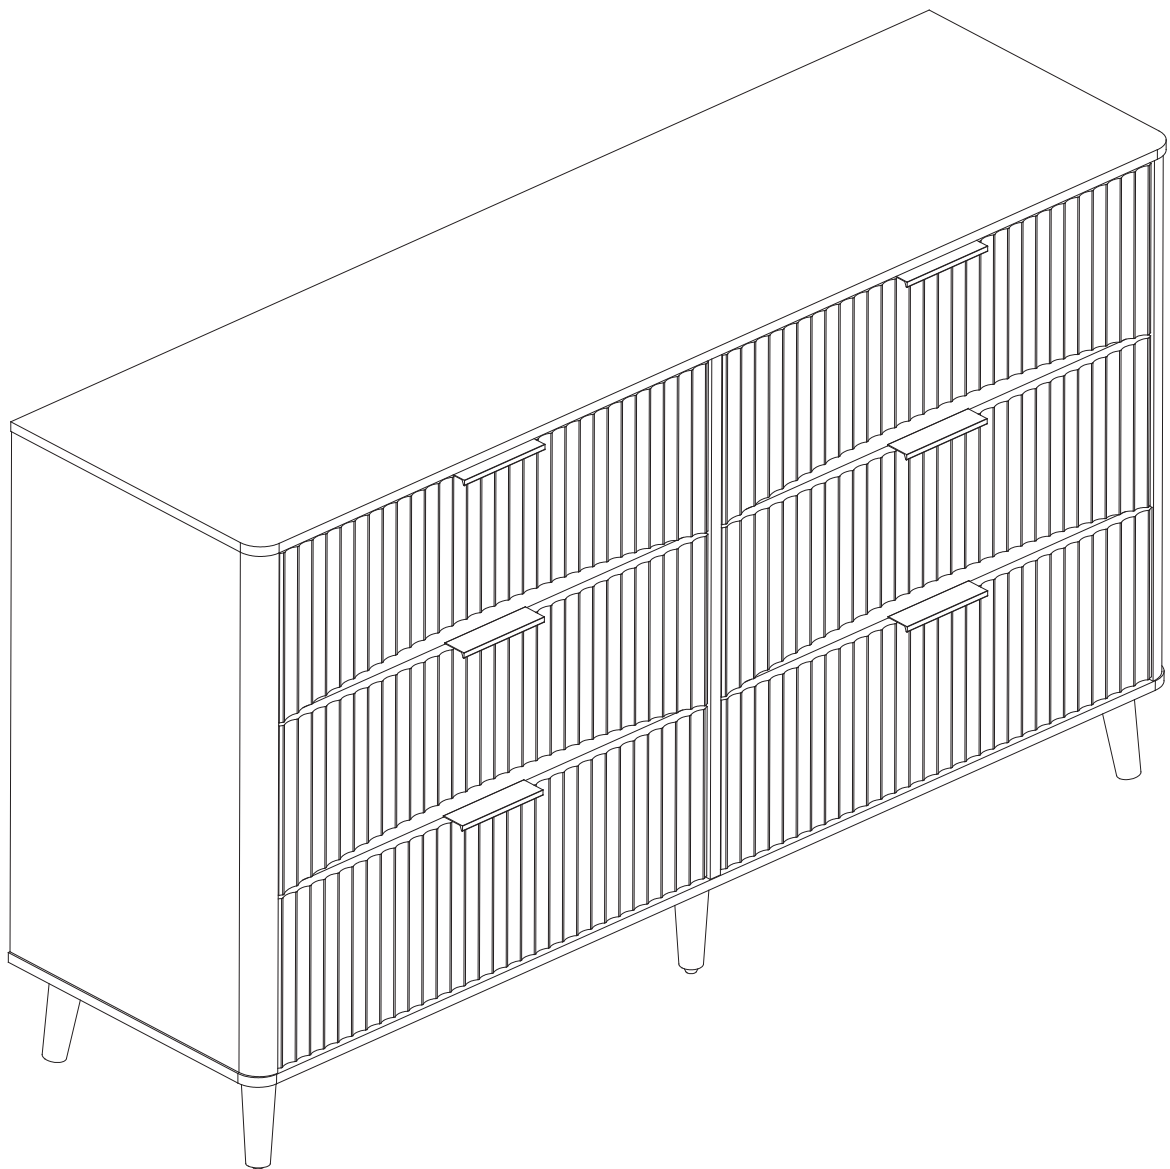

General Guidelines





- Please read the following instructions carefully and use the product accordingly.
- Please keep this manual and hand it over when you transfer the product.
- This summary may not include every detail of all variations and considered steps. Please contact us if further information or assistance is needed.

Notes

- The product is intended for indoor use only. It must be assembled and used in accordance with the provisions of the manual. Personal injury and/or damage to the product may occur if the product is used outside of its intended purpose and/or if it has been changed/modified from its original design. The seller does not assume any responsibility or liability for injury or damage caused by incorrect assembly or improper use.
- Avoid long-term exposure to humid environments to prevent mildew.
- Keep the product away from fire sources and high temperatures. Do not expose the product to direct sunlight.
- Do not place any hot objects on the surface of the product.
- If there are any defective or missing parts after unpacking, please cease assembly immediately and contact us.
- Assemble the item on a spacious surface and avoid placing the unwrapped product directly on the ground to prevent damage.
- Do not stand or sit on the wooden boards.
- Wear gloves during the assembly and/or disassembly process to avoid scratches from any sharp edges.
- Match each part and fitting based on the part number in the manual.
- If a part does not match the fitting, please check the manual for clarification.
- During assembly, first loosely align all screws with the corresponding pre-drilled holes, then tighten them one by one.
- Periodically inspect the screw tightness while the product is in use. Retighten if necessary to ensure structural integrity.
- If you accidentally spill water or any other liquid on the surface, immediately wipe it clean with a dry towel.
- Keep the product away from sharp, pointed objects and corrosive substances to prevent damage.
- Place the item on level, solid ground during use.





Warnings

- During assembly, keep all small parts out of the reach of children, as they may be fatal if swallowed or inhaled.
- Children should not climb or play on the product to avoid tipping over and causing serious injury.
- To avoid the potential danger of suffocation, keep all packaging materials (film, plastic bags, foam, etc.) away from babies and children.
- Do not shake or move the product violently during use to avoid tipping over.













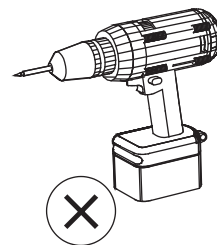
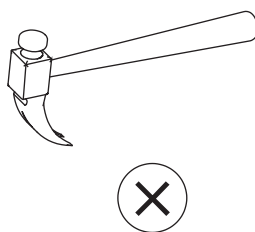
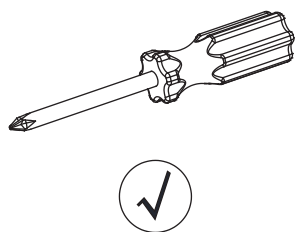
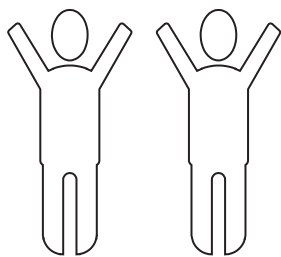


PARTS LIST


① x1	② x1	③ x1	④ x1
⑤ x1	⑥ x6	⑦ x2	⑧ x4
⑨ x4	⑩ x2	⑪ x4	⑫ x4
⑬ x6	⑭ x6	⑮ x2	⑯ x6
⑰ x6	⑱ x2		

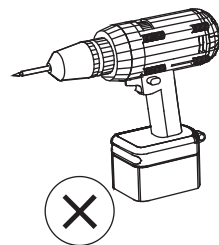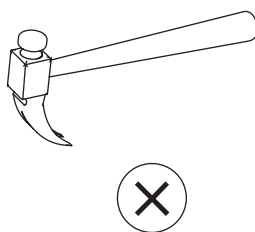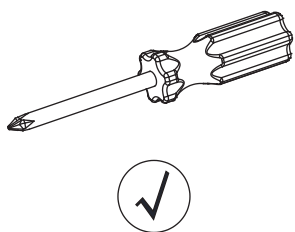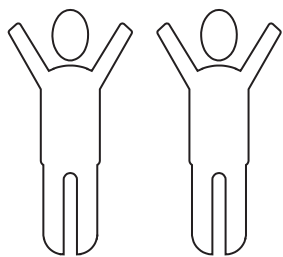

HARDWARE LIST

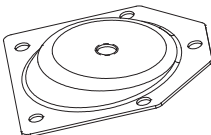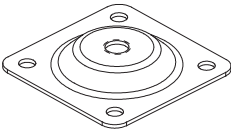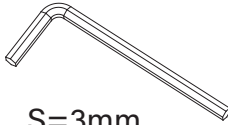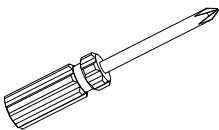A  $\phi 6 \times 35\text{mm}$ 60+4PCS	B  $\phi 15 \times 9.5\text{mm}$ 60+4PCS	C  $\phi 6 \times 30\text{mm}$ 16+1PC	D  6PCS
E  M3.5*12mm 88+4PCS	F  M3.5*25mm 36+4PCS	G  M3.5*14mm 16+1PC	H  16+1PC
I  1STE	J  ST5*40mm 6+1PC	K  4PCS	M  $\phi 21\text{mm}$ 60+4PCS
N  2PCS	Q  $\phi 8 \times 20\text{mm}$ 12+1PC	R  S=3mm 1PC	S  1PC
CL  L=350mm 6PCS	CR  L=350mm 6PCS	DL  L=350mm 6PCS	DR  L=350mm 6PCS

EXPLODED

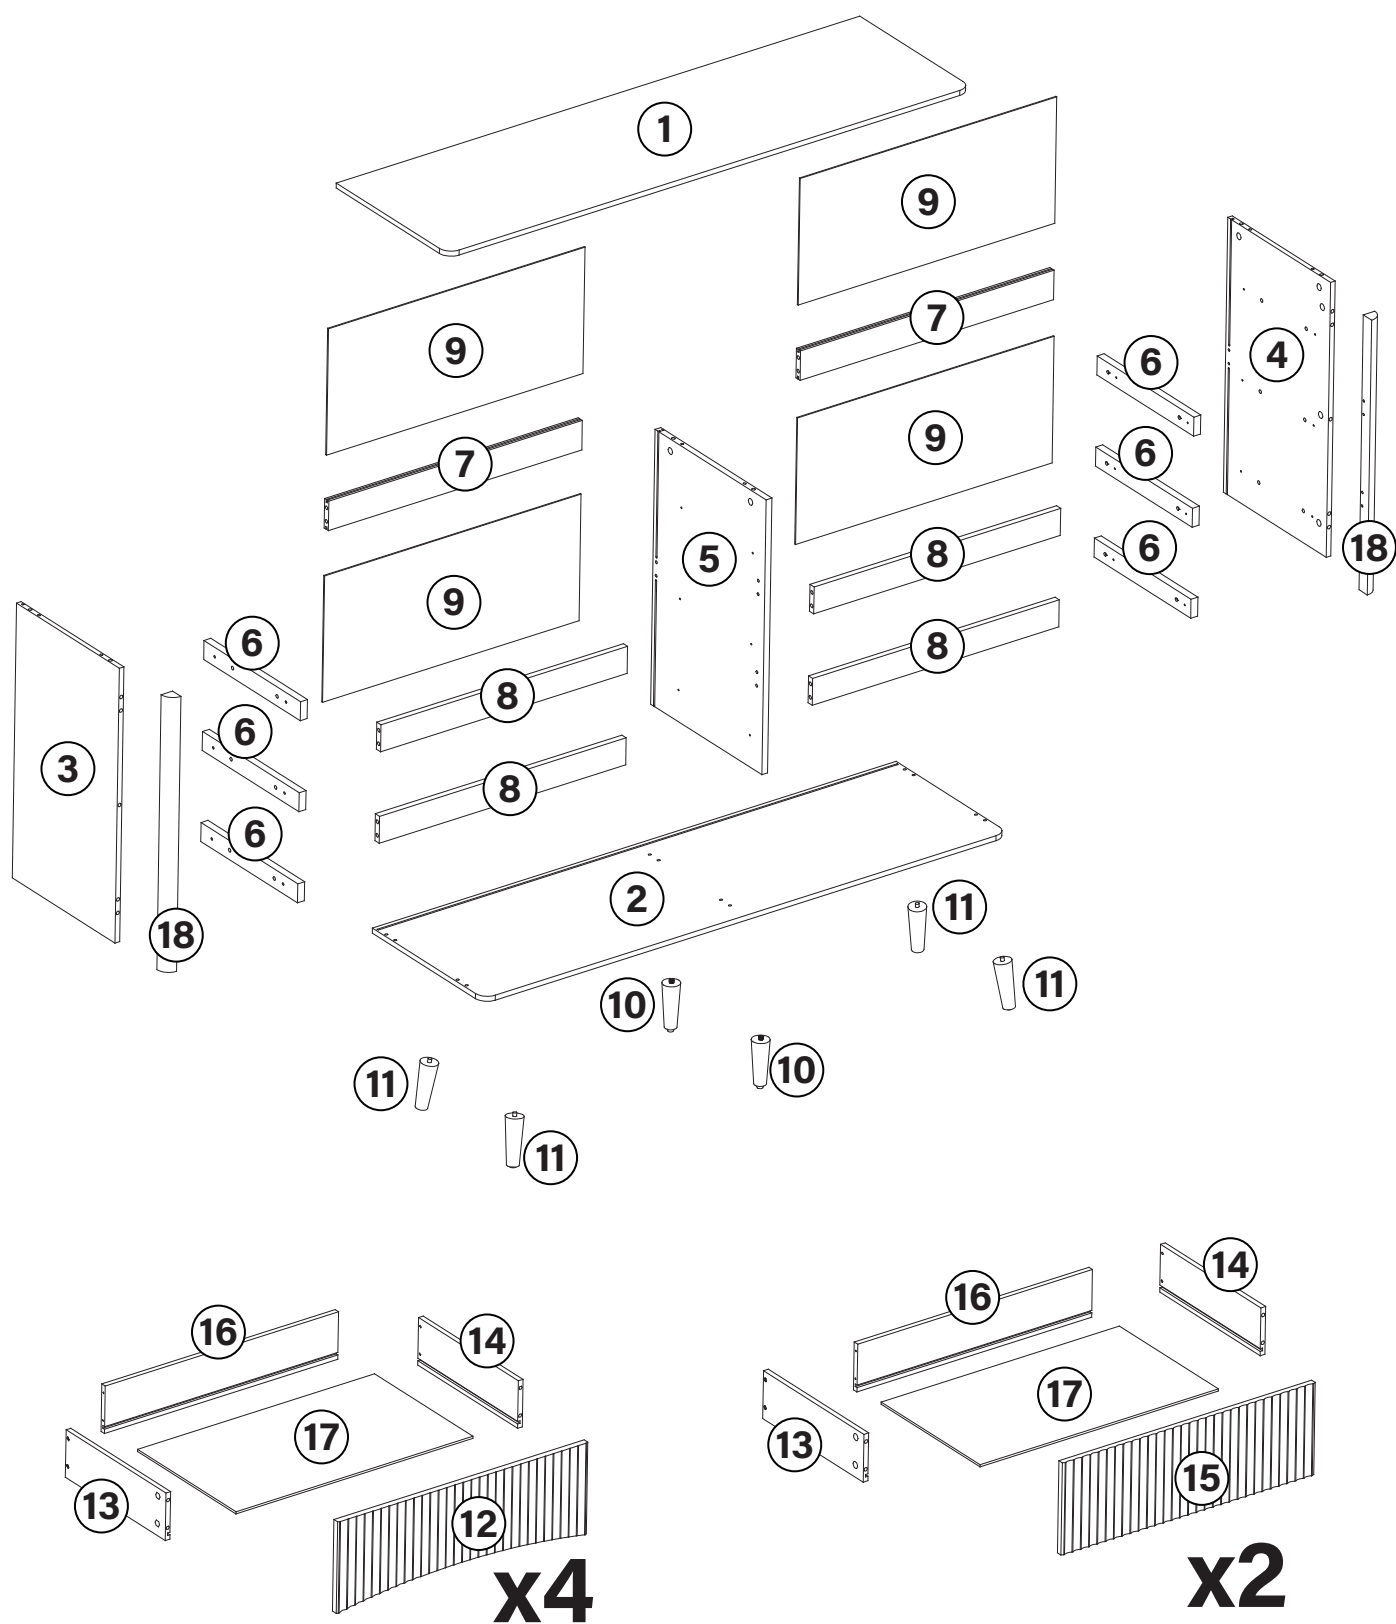


Instructions For Fastening CAM-BOLT and CAM-LOCK



CAM-BOLT




CAM-LOCK




Tools Required




INSERTING AND TIGHTENING CAM-BOLT

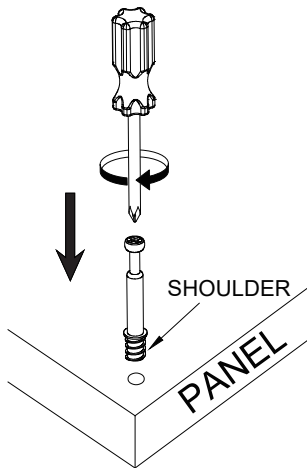

Place Cam-bolt on pre-drilled hole and screw in vertically

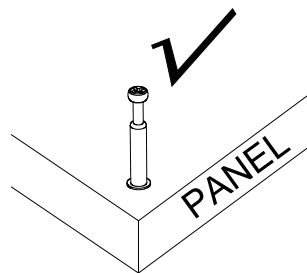


The shoulder is flush with the panel

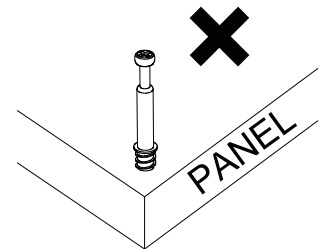


Shoulder is above the panel

Place Cam-bolt on the designated pre-drilled holes on the panel. Use a Phillips Screwdriver to screw-in Cam-bolt vertically until shoulder is flushed (on the same level) with panel.


INSERTING CAM-LOCK

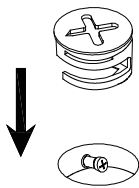

Insert the Cam-lock with the arrow aligned with the Cam-bolt head




CORRECT

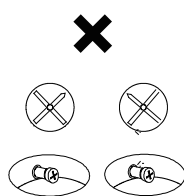

WRONG


TIGHTENING CAM-LOCK




Align the arrow on the Cam-lock to the Cam-bolt head and insert the Cam-lock. Ensure Cam-lock is fully inserted.

Use a Flat-head Screwdriver to turn Camlock clockwise so it locks onto the head of the Cam-bolt. Turn until it is snug (about 3/4ths of a turn) -- over-tightening could damage Cam-lock and/or Cam-bolt.


STEP 1


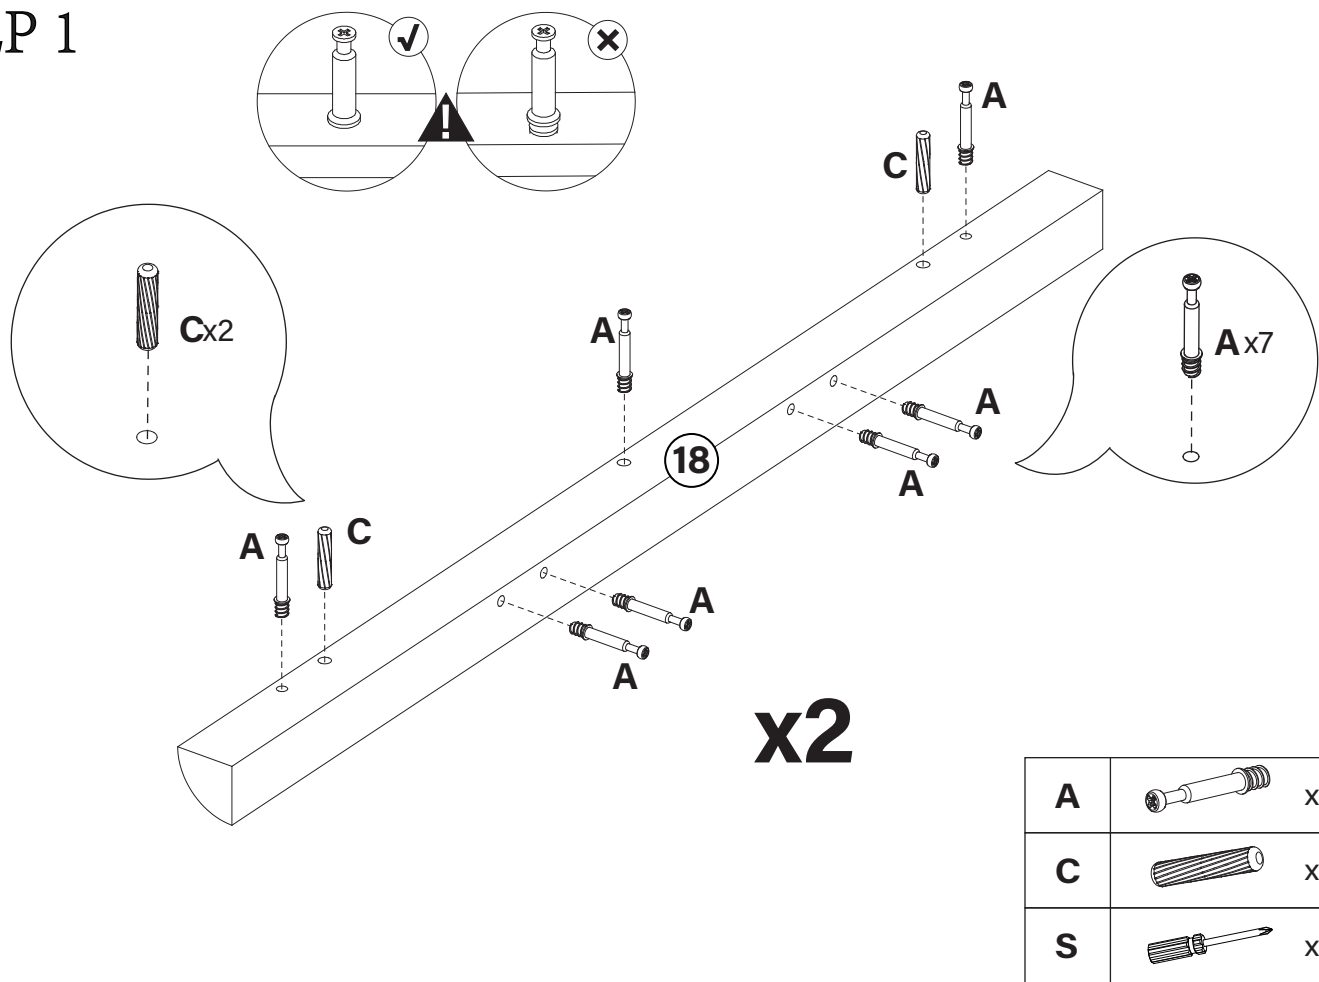


STEP 2

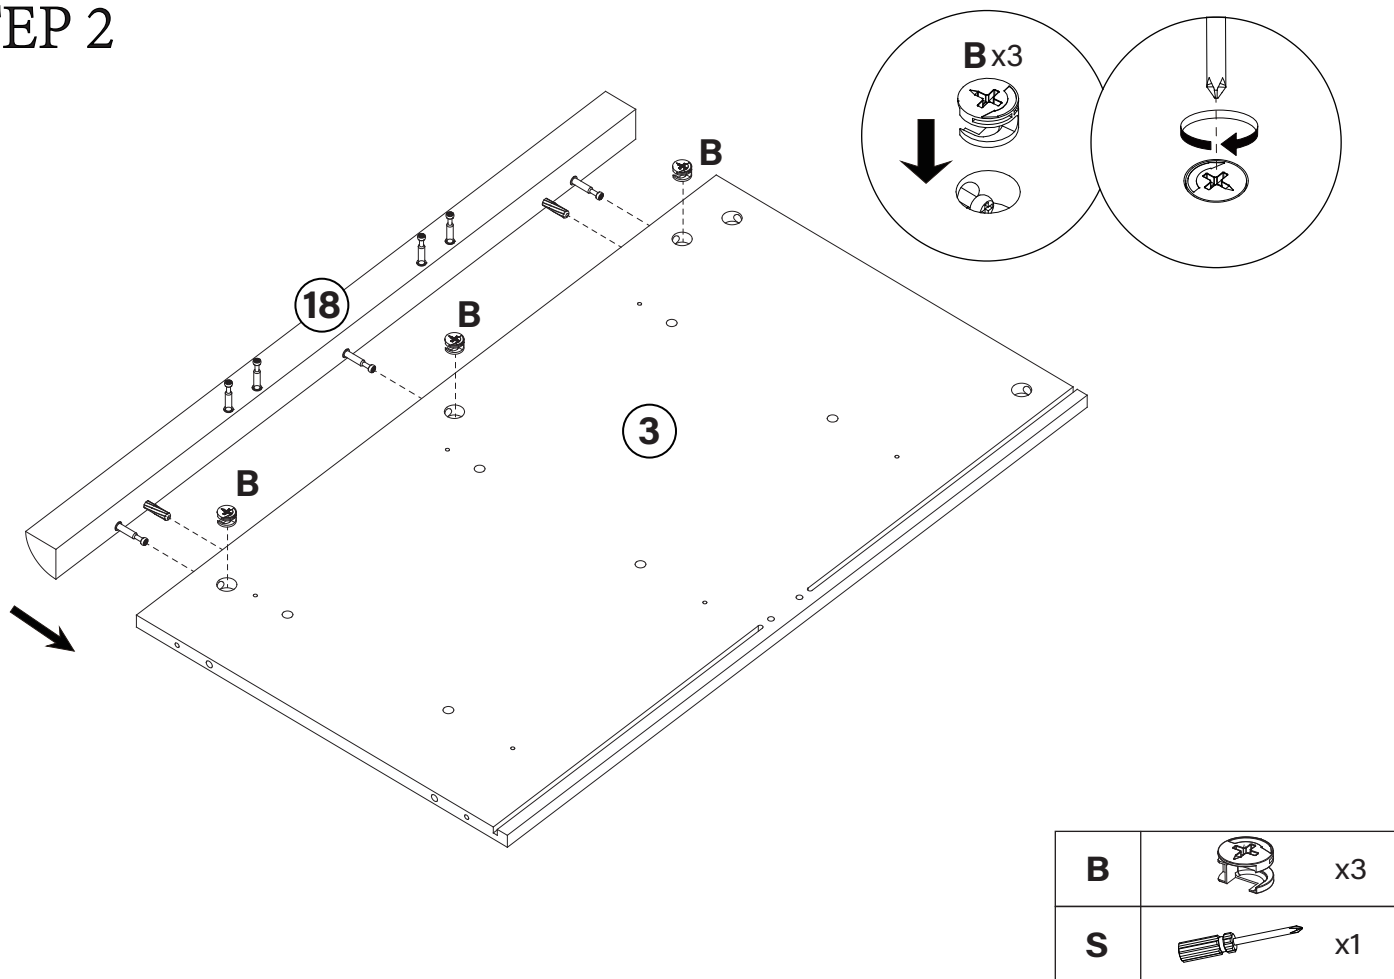




STEP 3

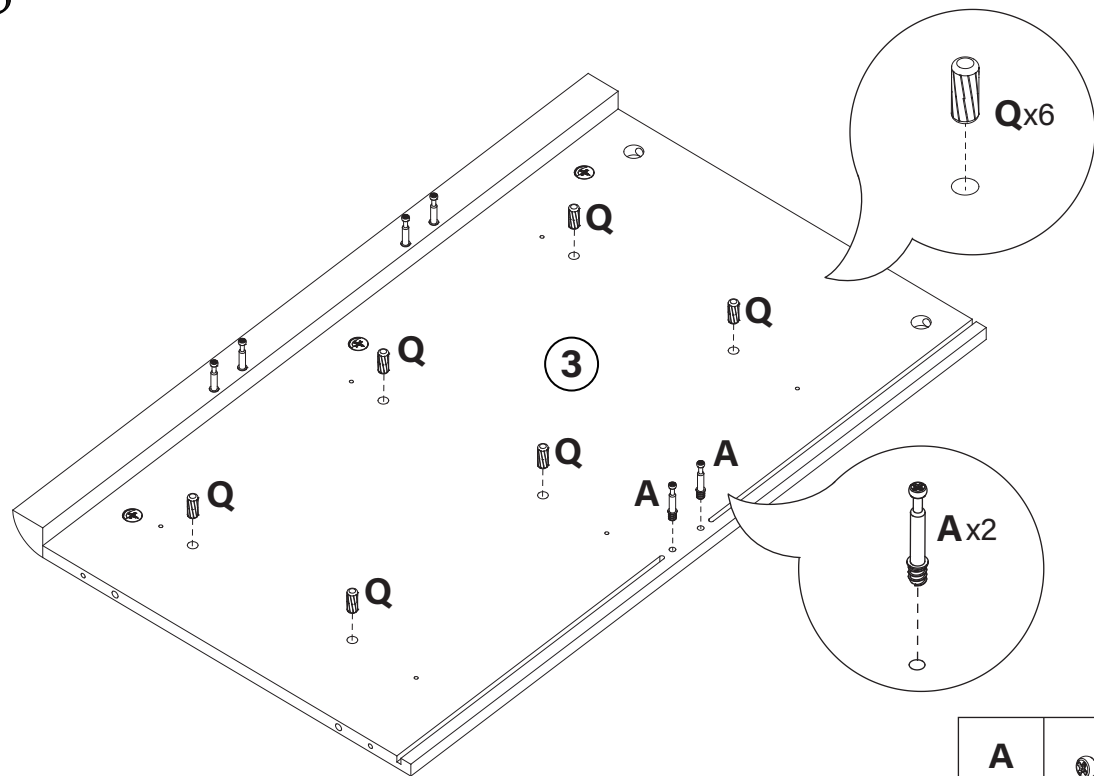

A		x2
Q		x6
S		x1

STEP 4

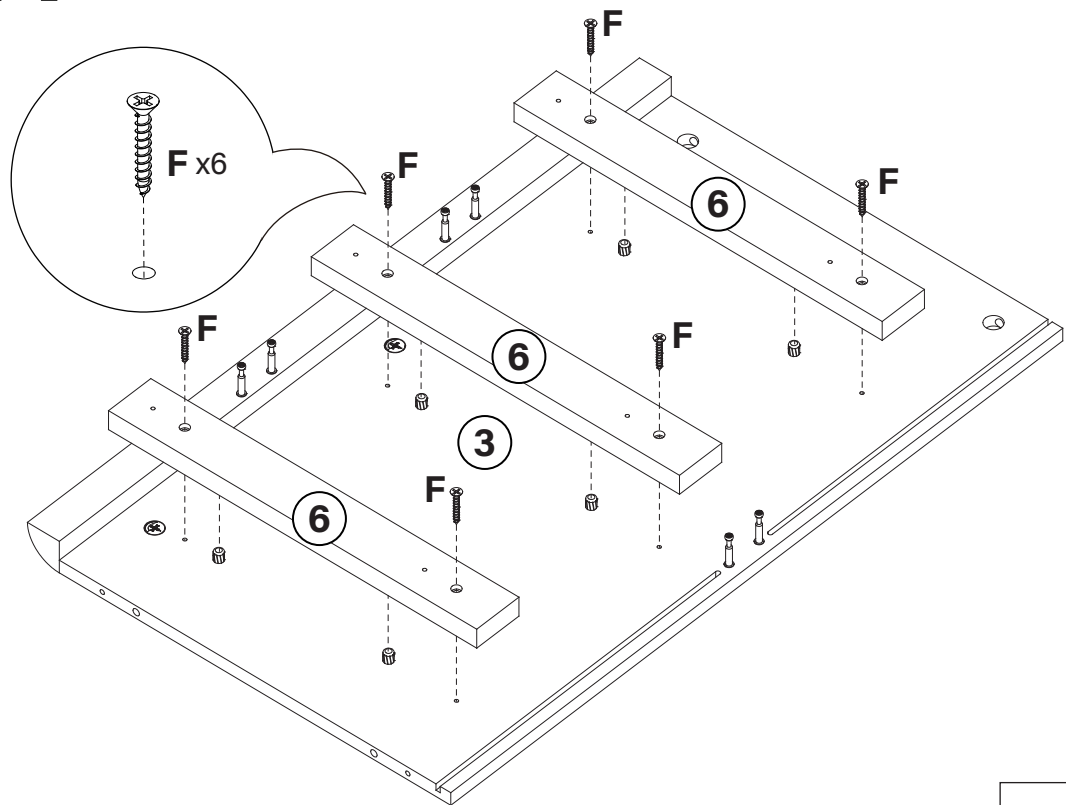



F		x6
S		x1

STEP 5




When installing, please make sure that the screws are flat and not skewed.








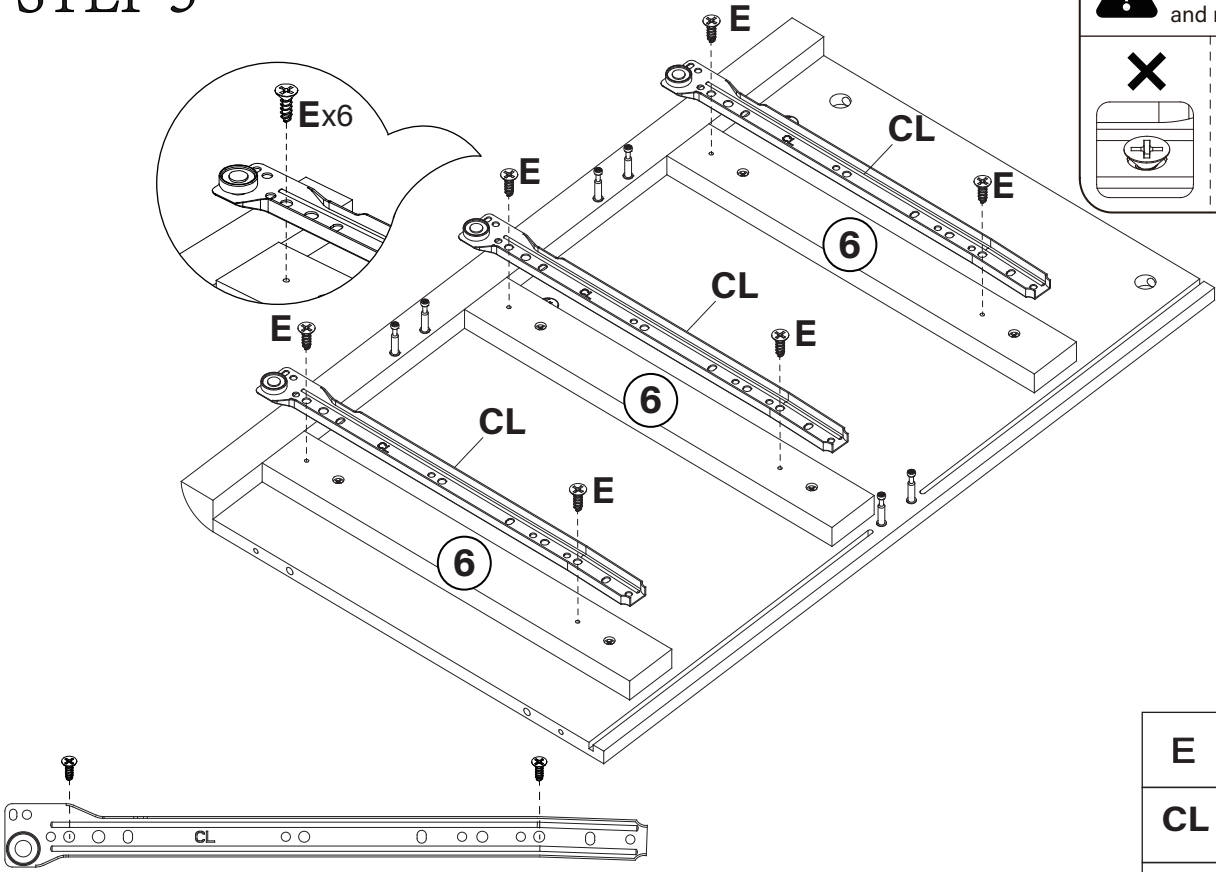


 Pay attention to the position of the screws.


E		x6
CL		x3
S		x1



STEP 6

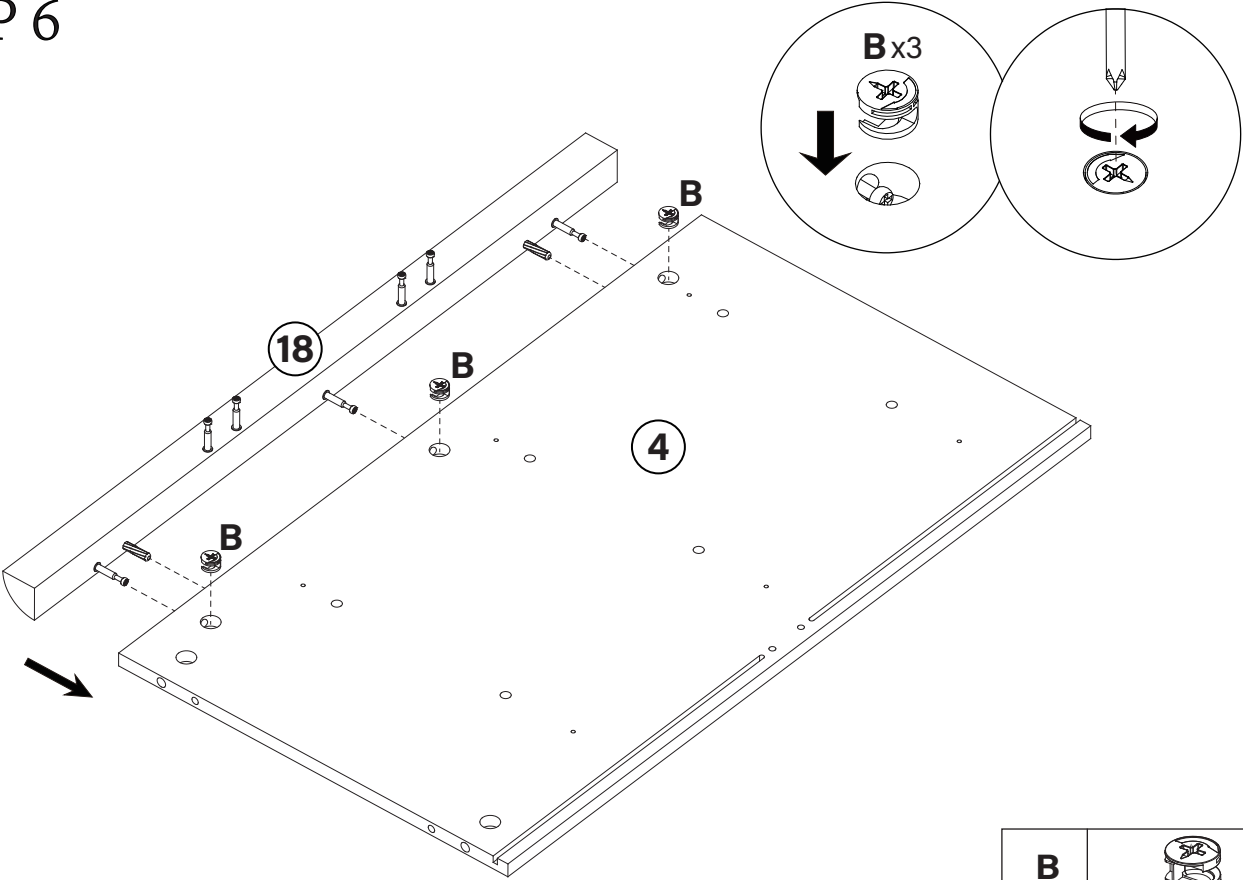


B		x3
S		x1



STEP 7

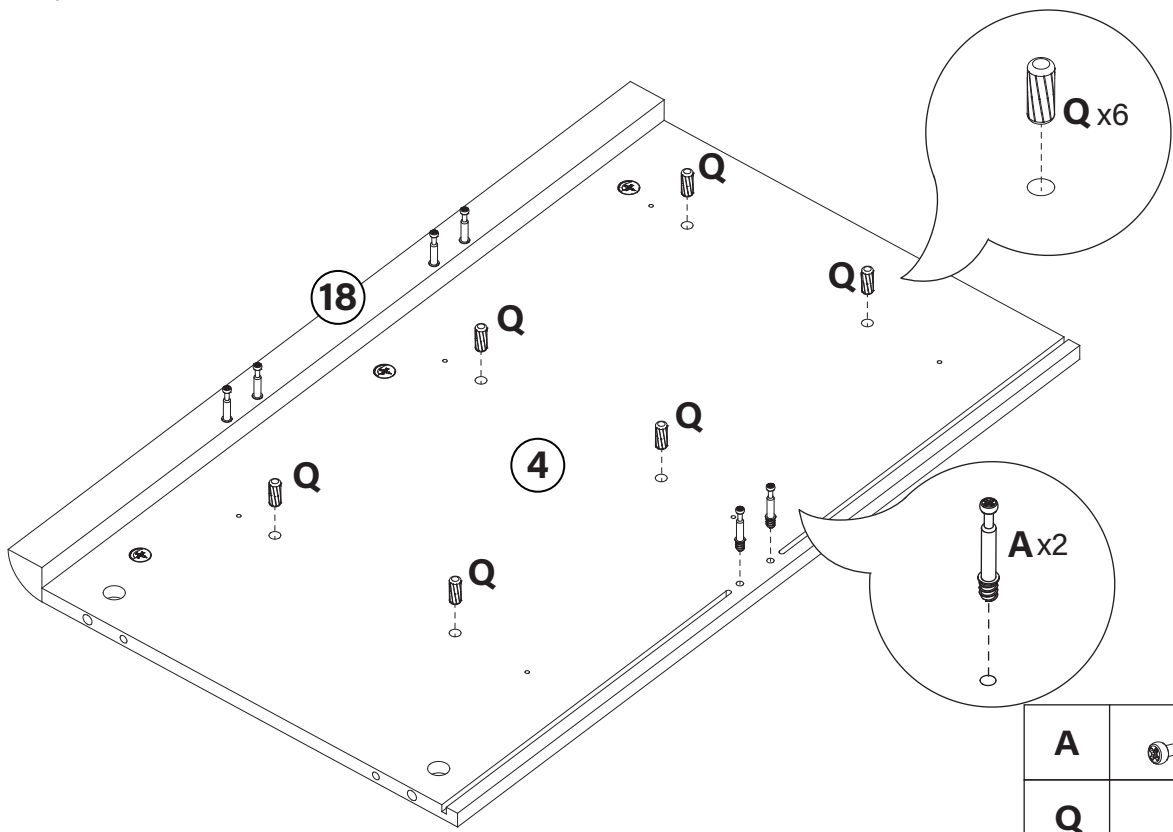


A		x2
Q		x6
S		x1

STEP 8

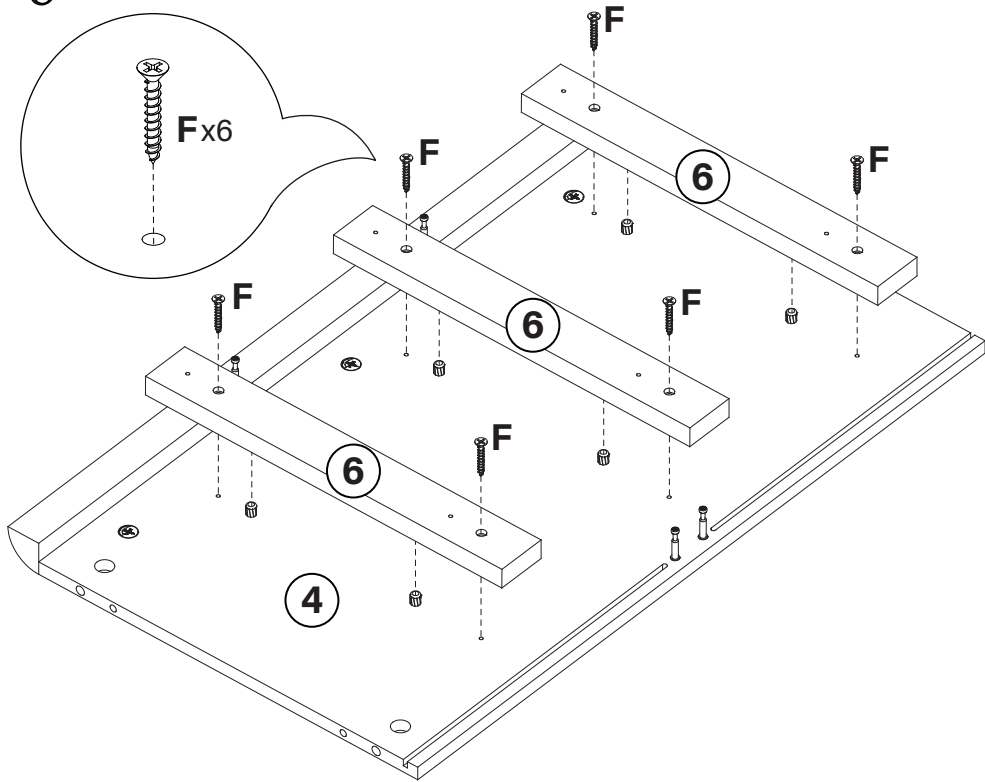


F		x6
S		x1

STEP 9

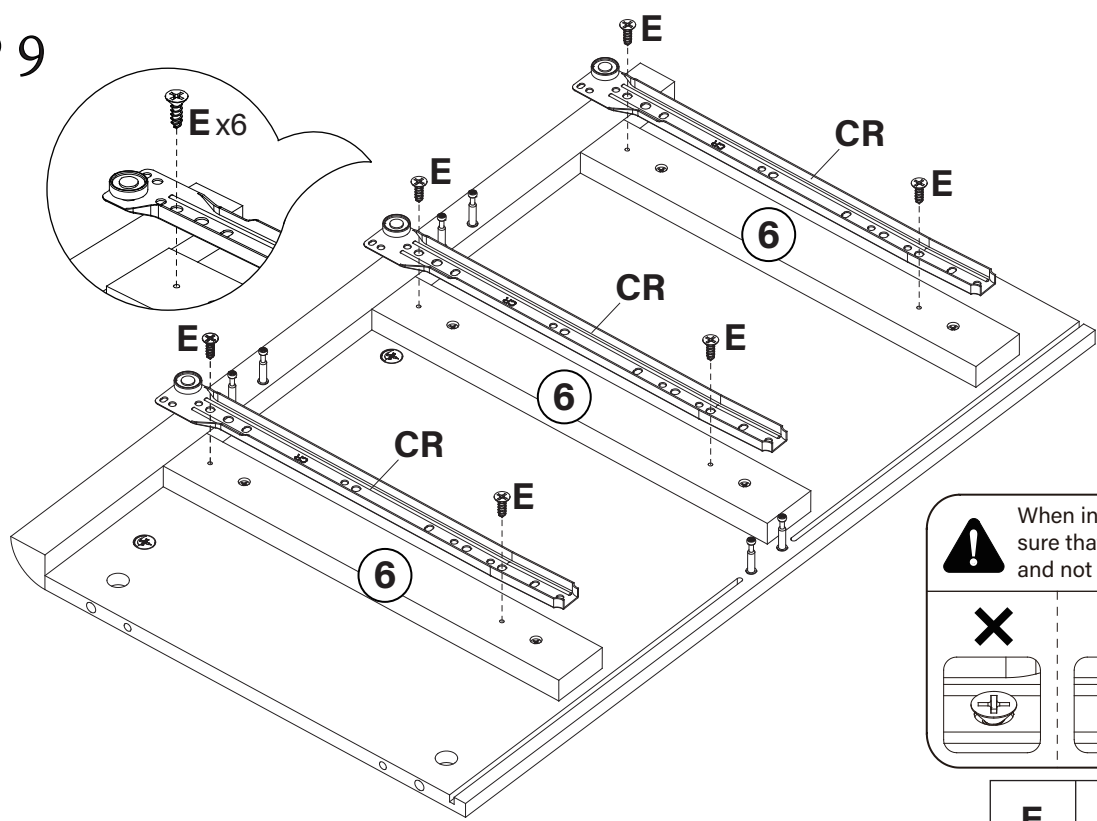


When installing, please make sure that the screws are flat and not skewed.



--	--	--

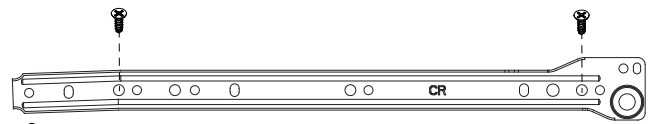


Pay attention to the position of the screws.


E		x6
CR		x3
S		x1

STEP 10

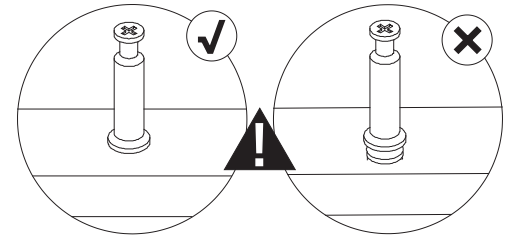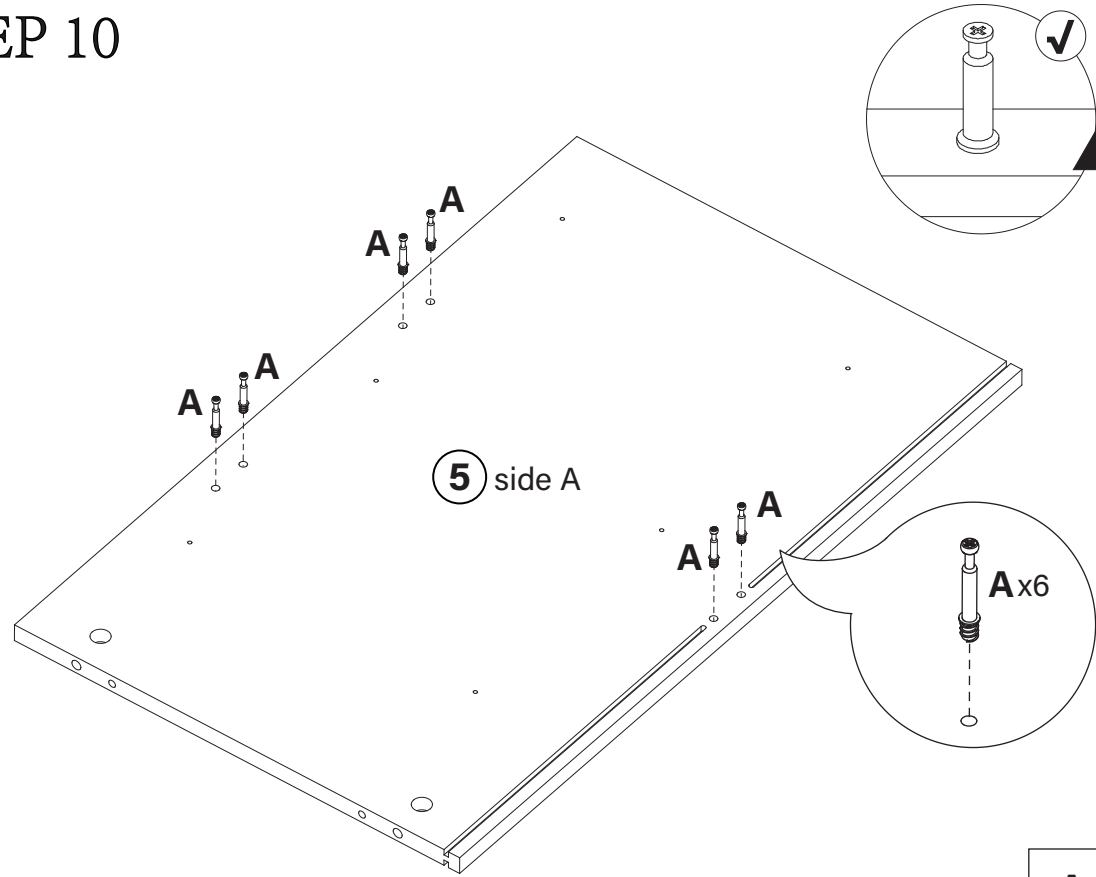

A		x6
S		x1


STEP 11

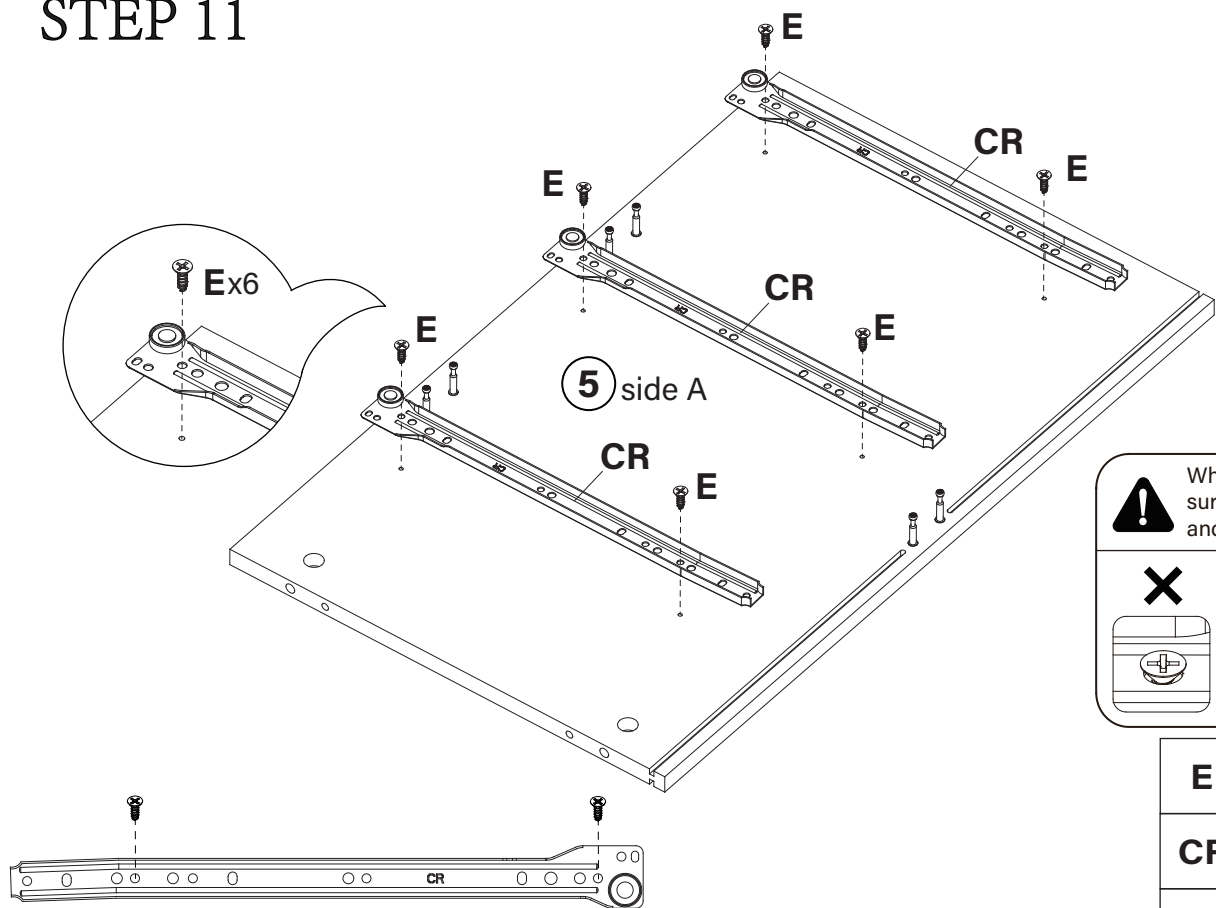



When installing, please make sure that the screws are flat and not skewed.


--	--	--

Pay attention to the position of the screws.


E		x6
CR		x3
S		x1

STEP 12

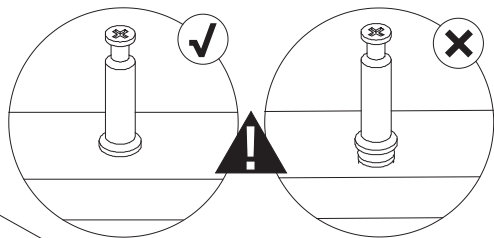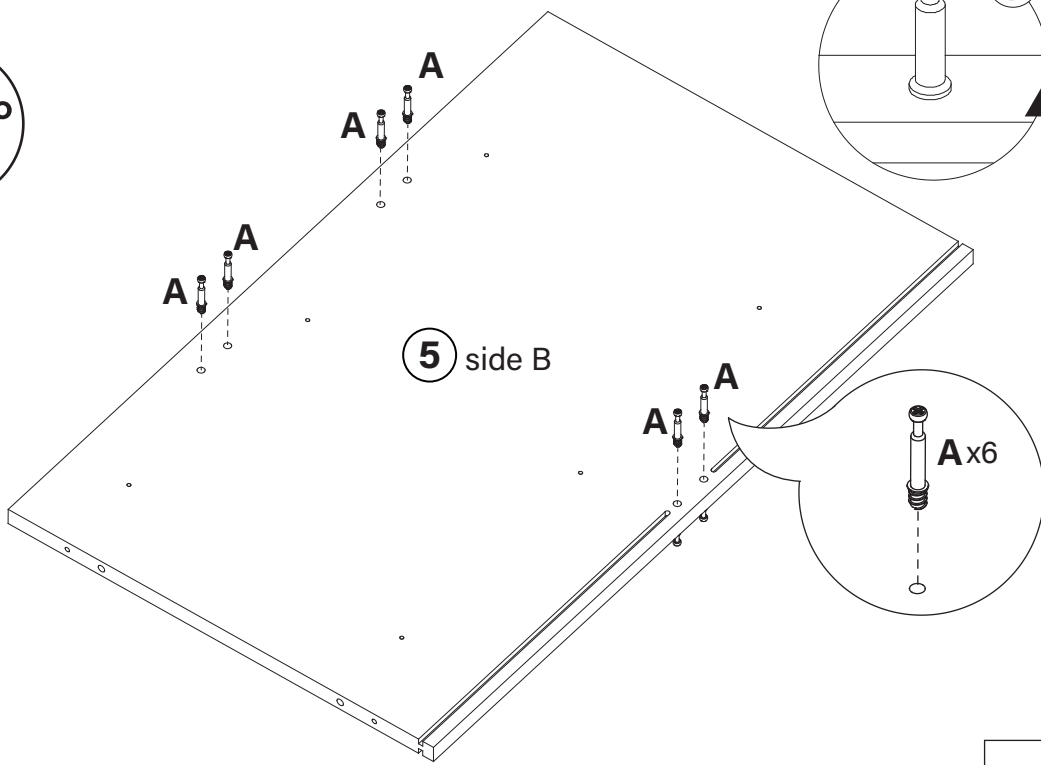


A		x6
S		x1


STEP 13

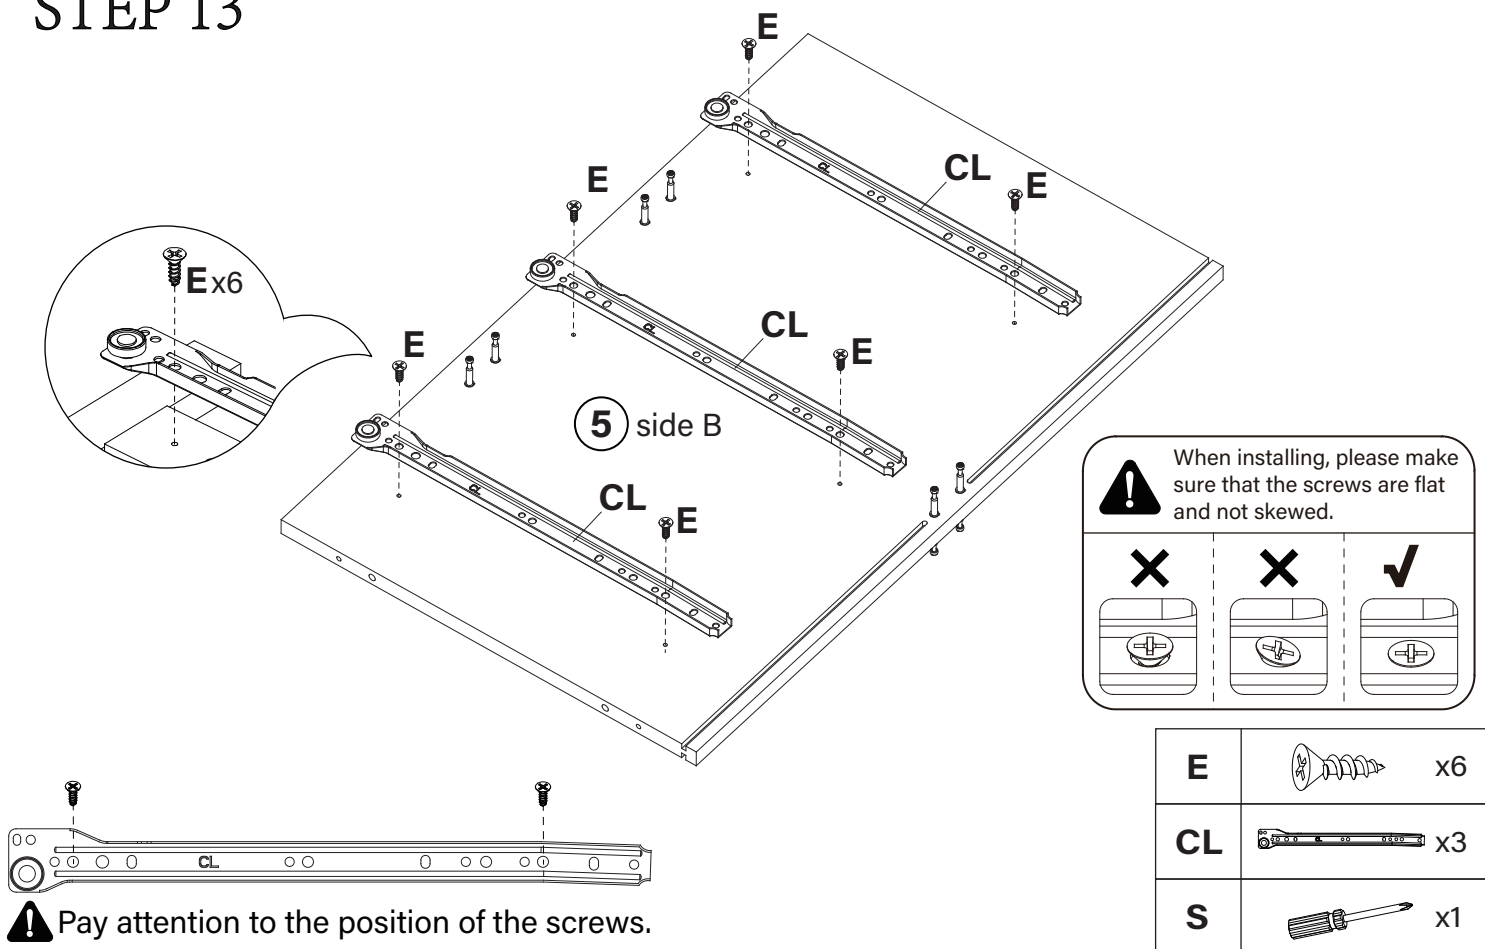

STEP 14

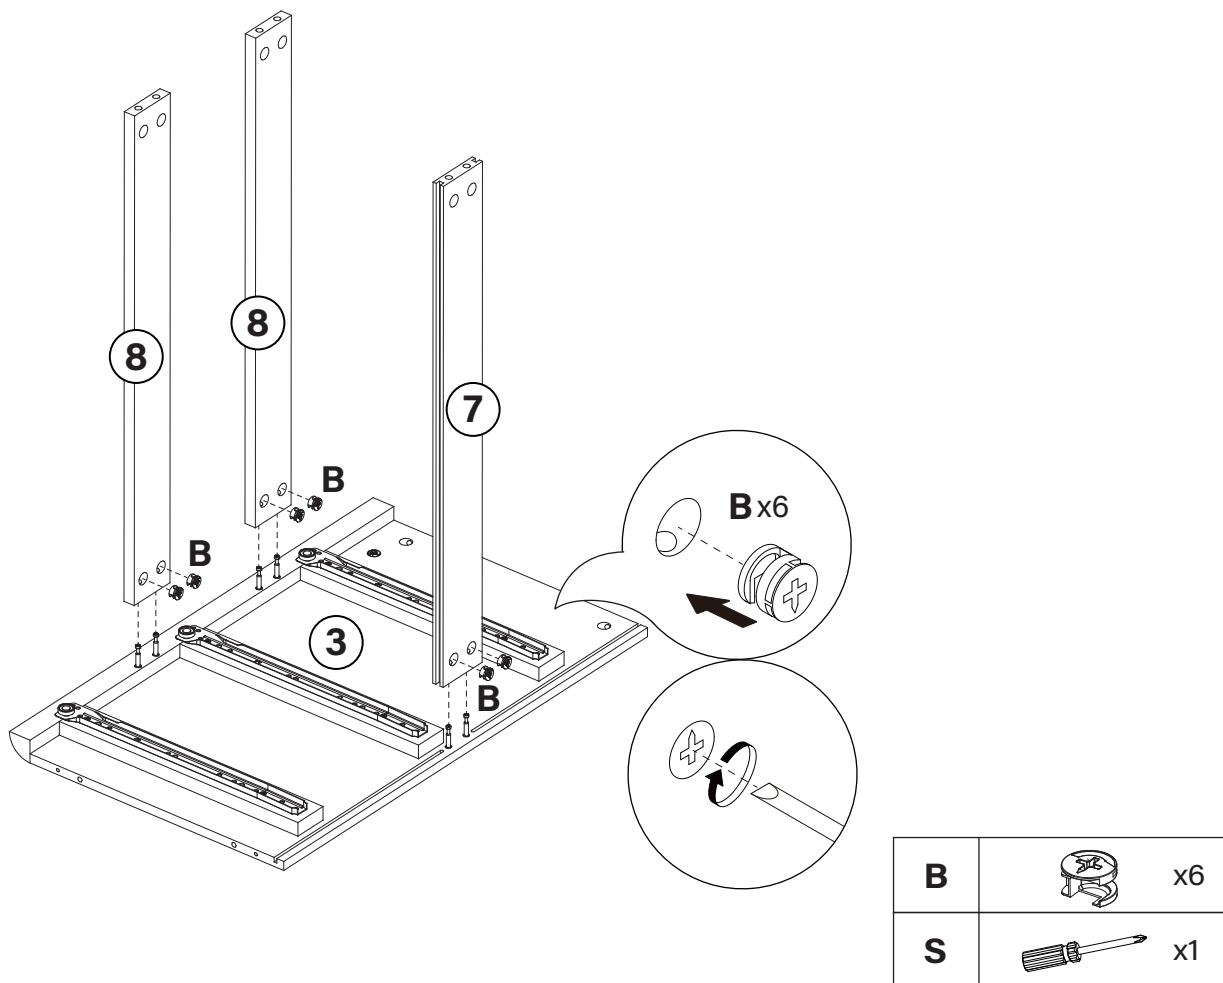


STEP 15

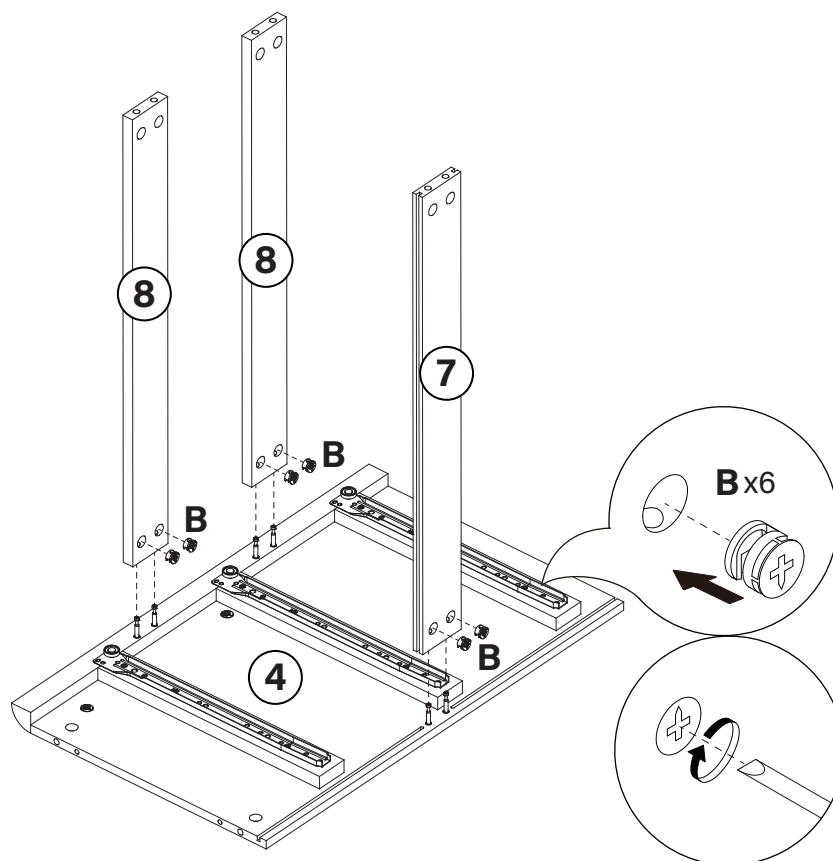


B		x6
S		x1

STEP 16

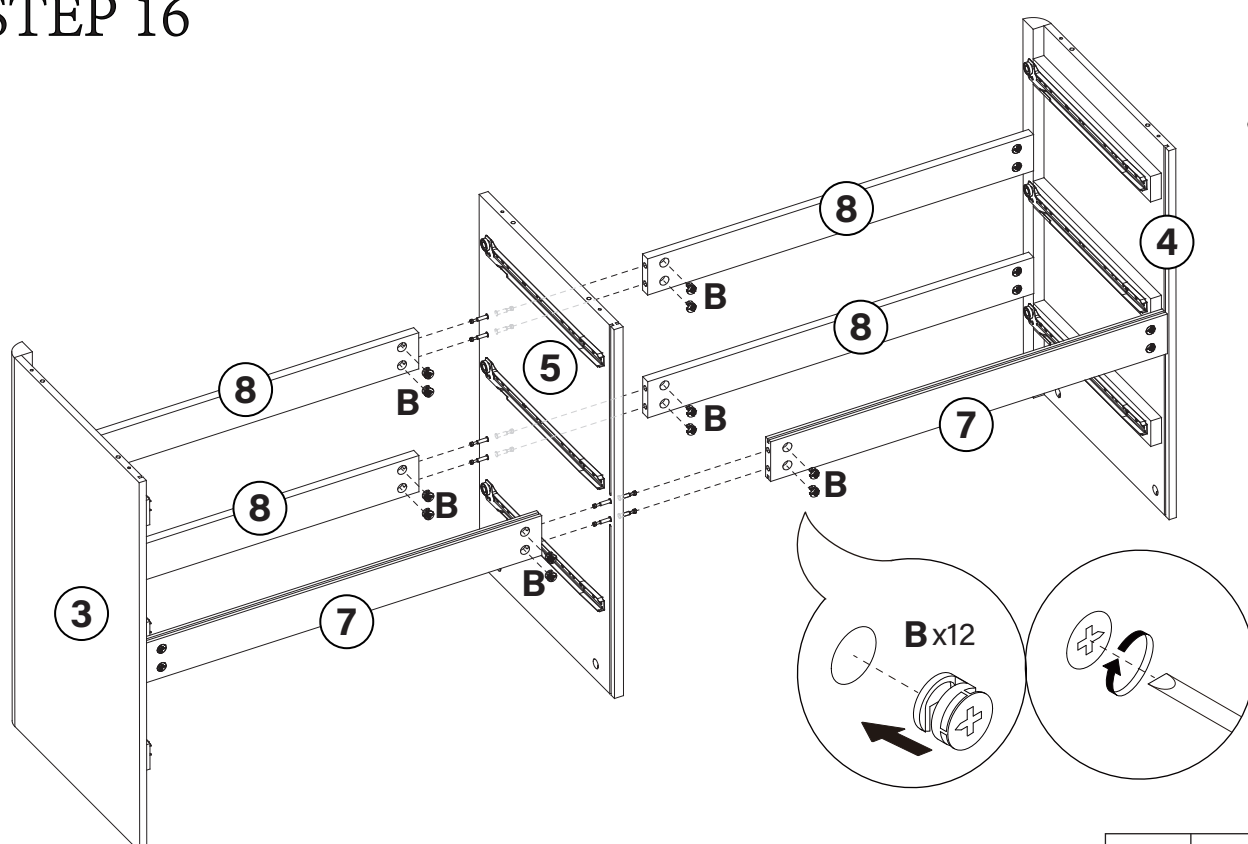


B		x12
S		x1


STEP 17

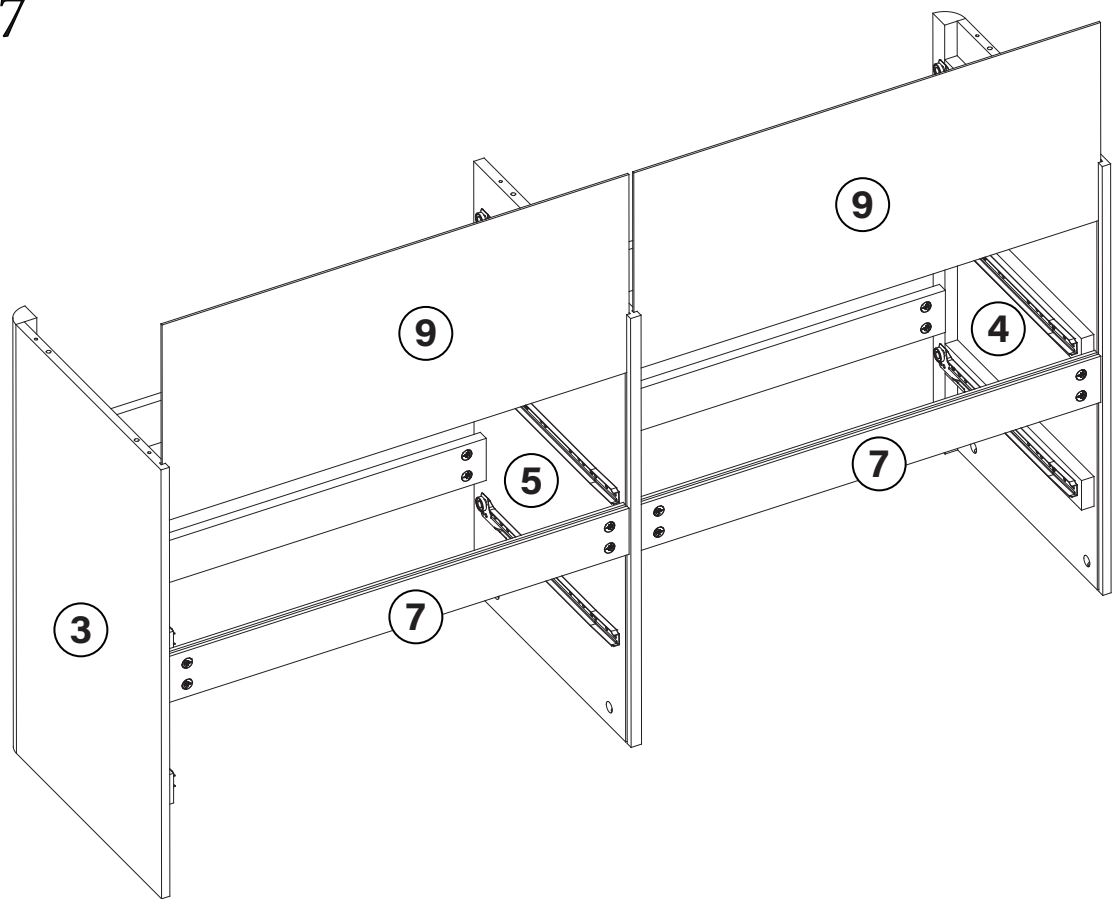


STEP 18

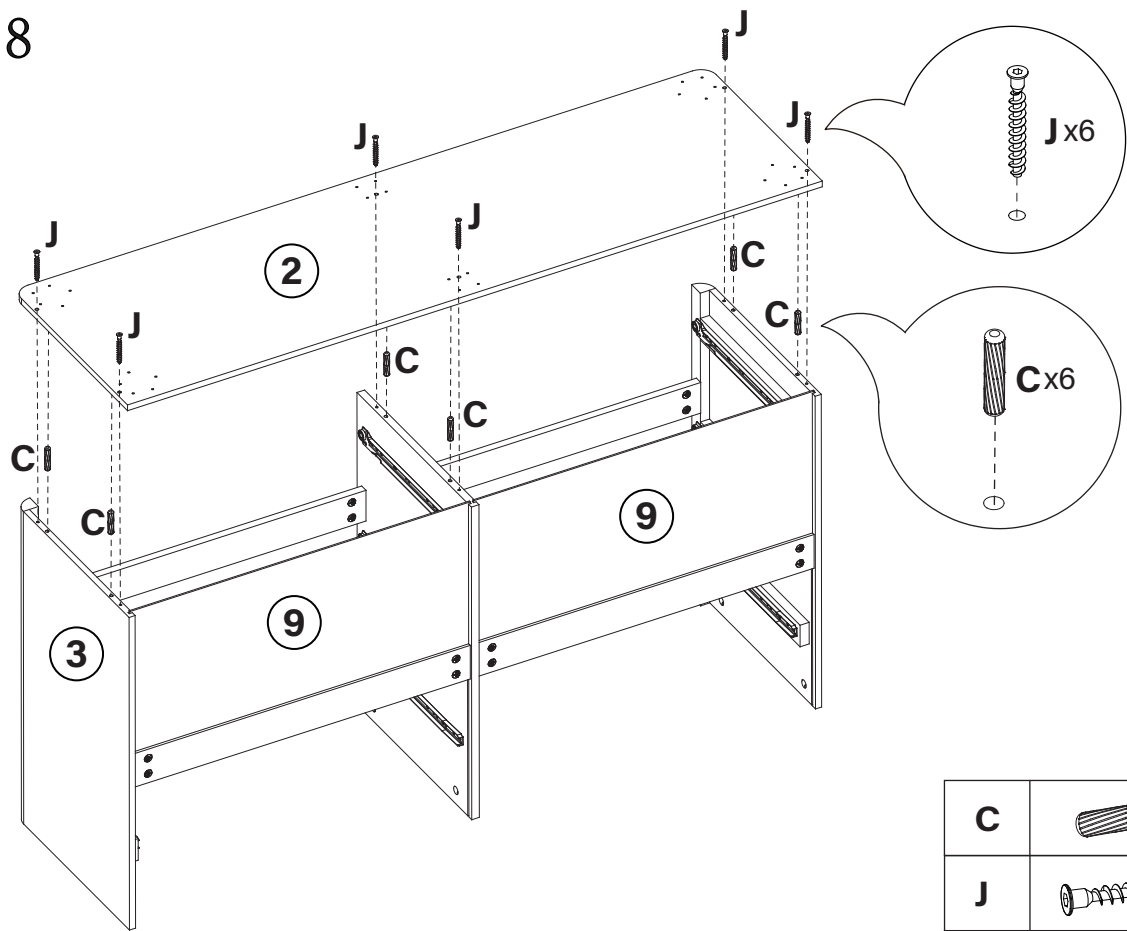



STEP 19

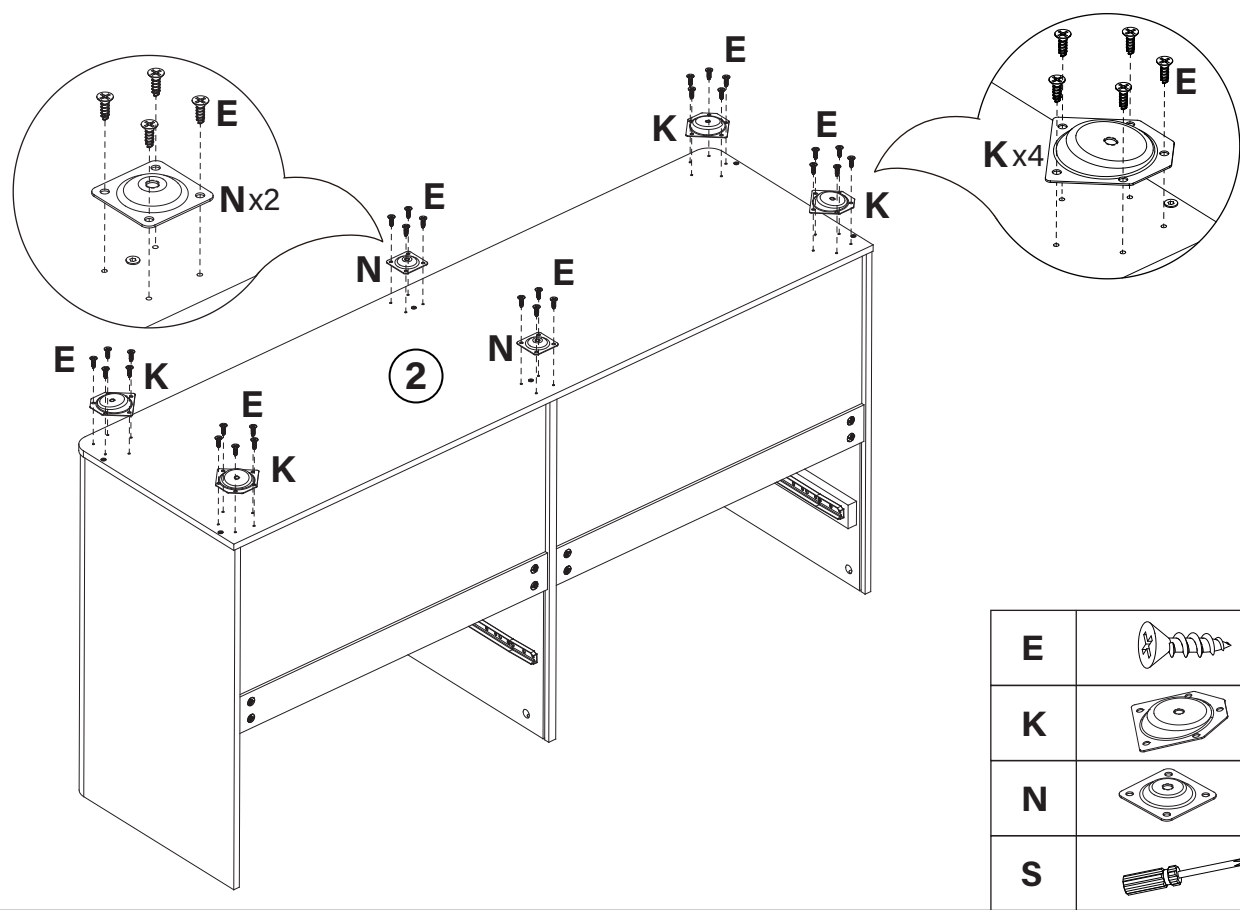


STEP 20

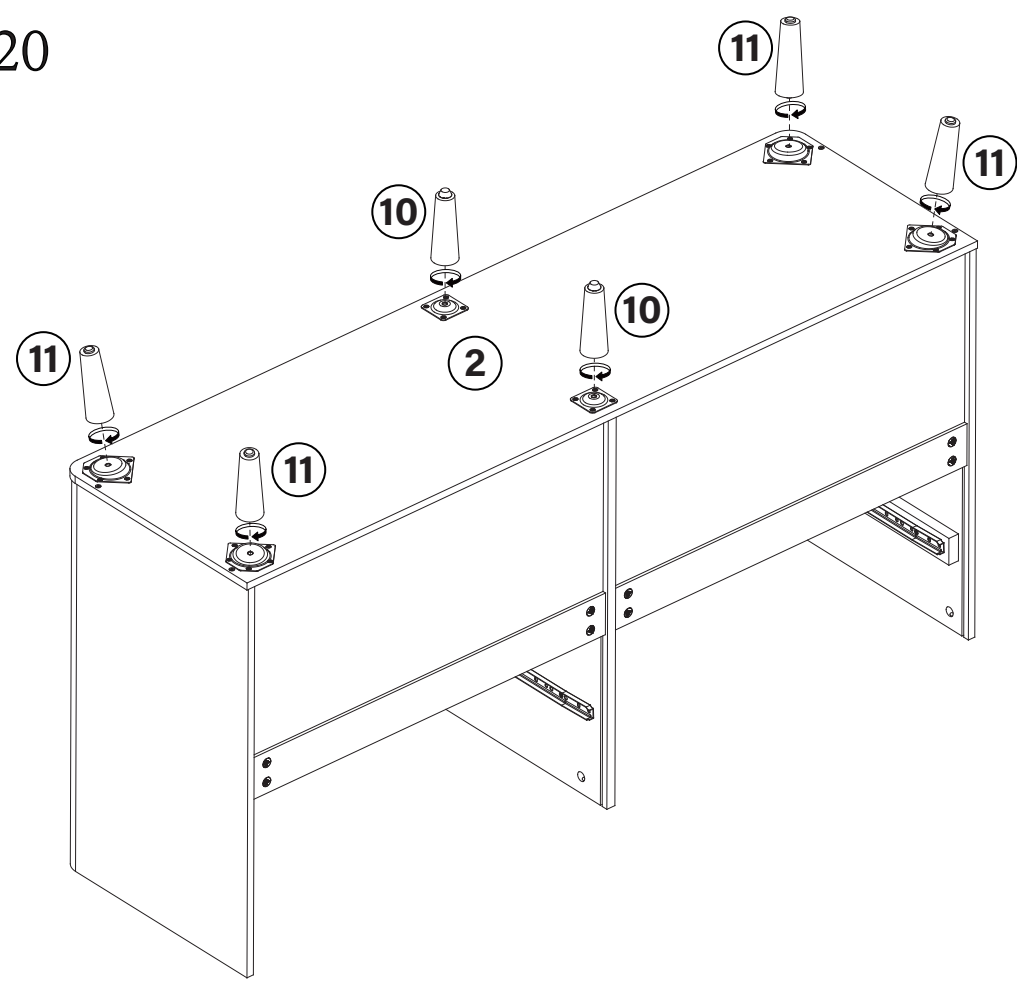

STEP 21

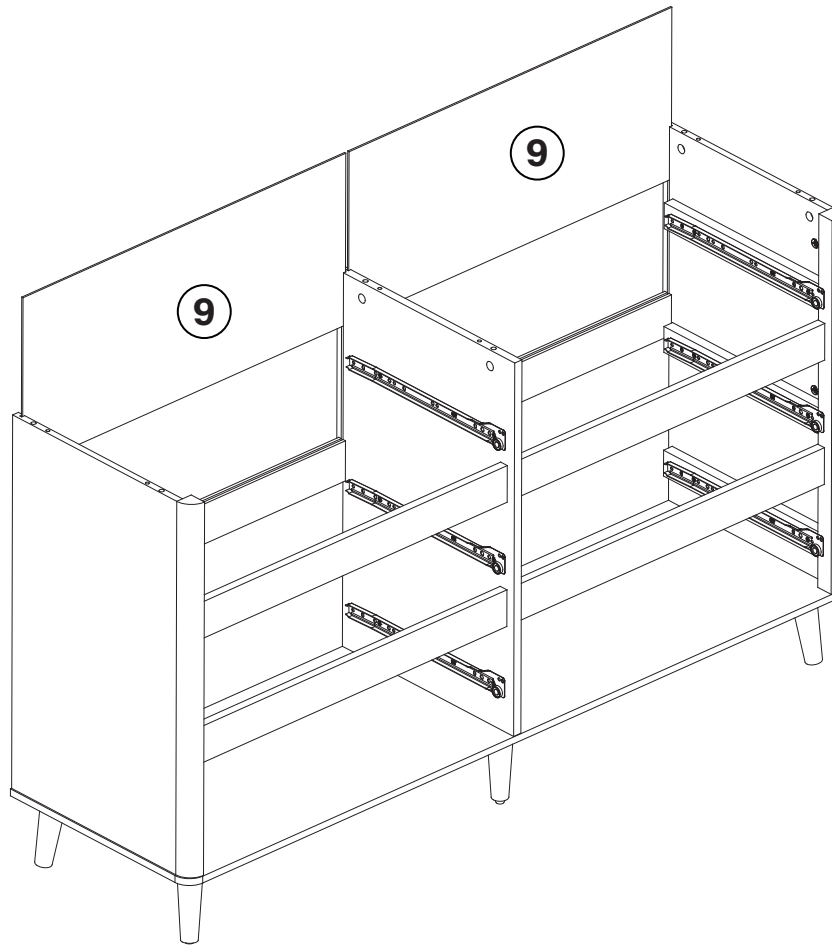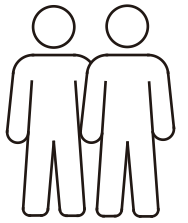


STEP 22

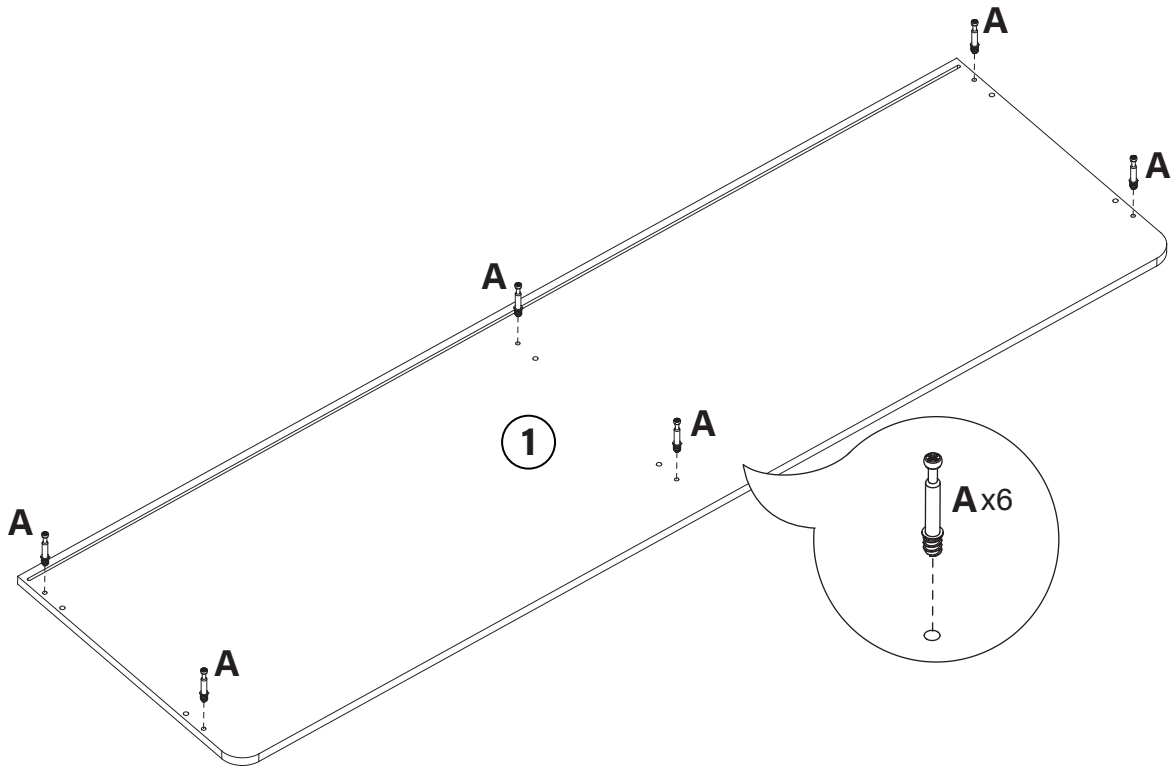


A	 x6
S	 x1

STEP 23

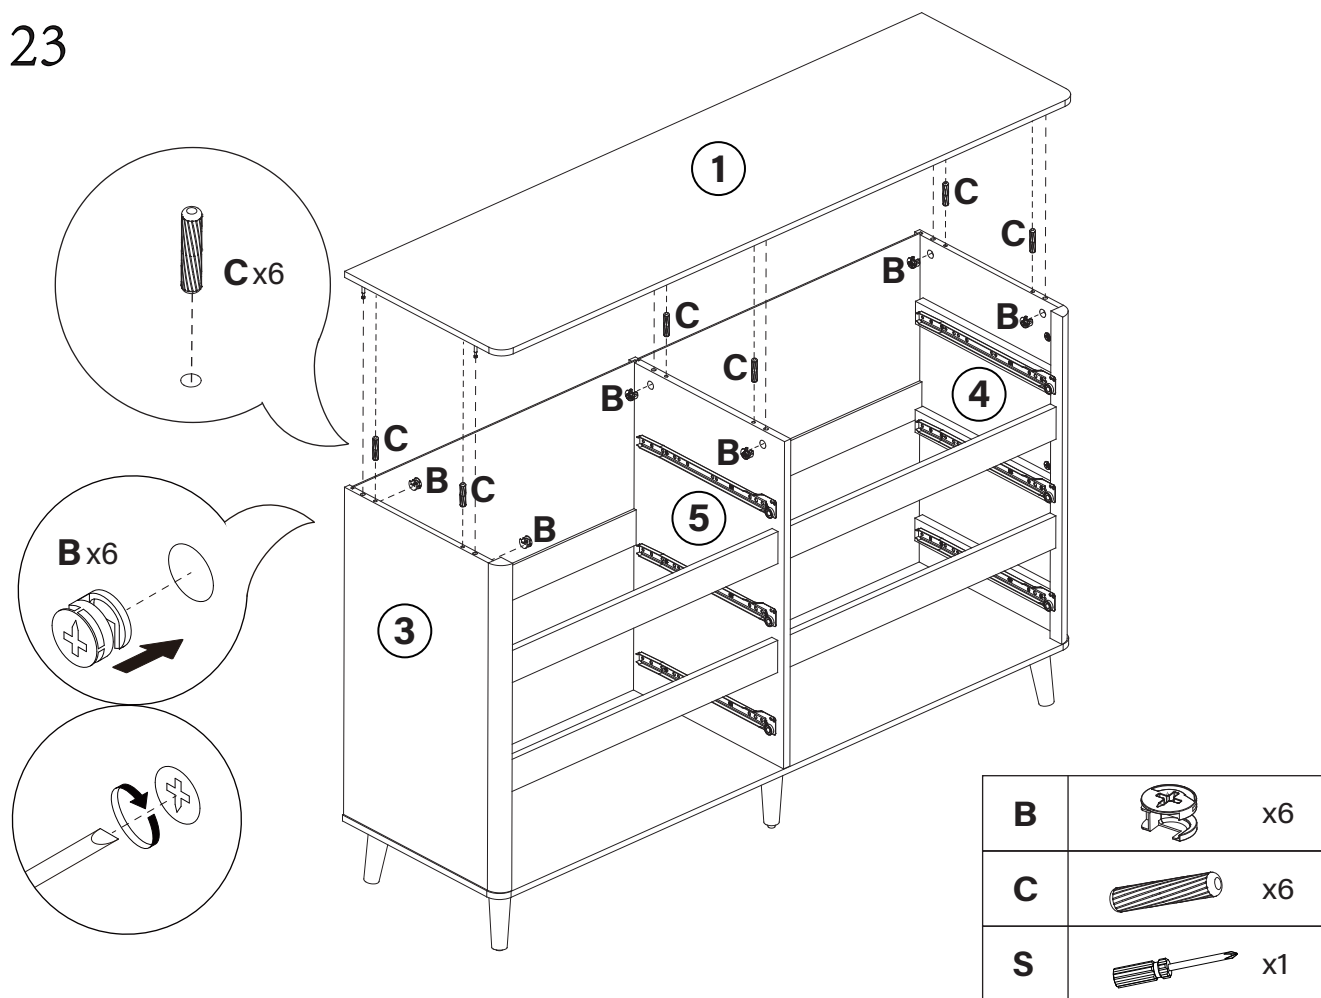


STEP 24


! To ensure the structural stability during use, be sure to install the back insert buckles as shown.

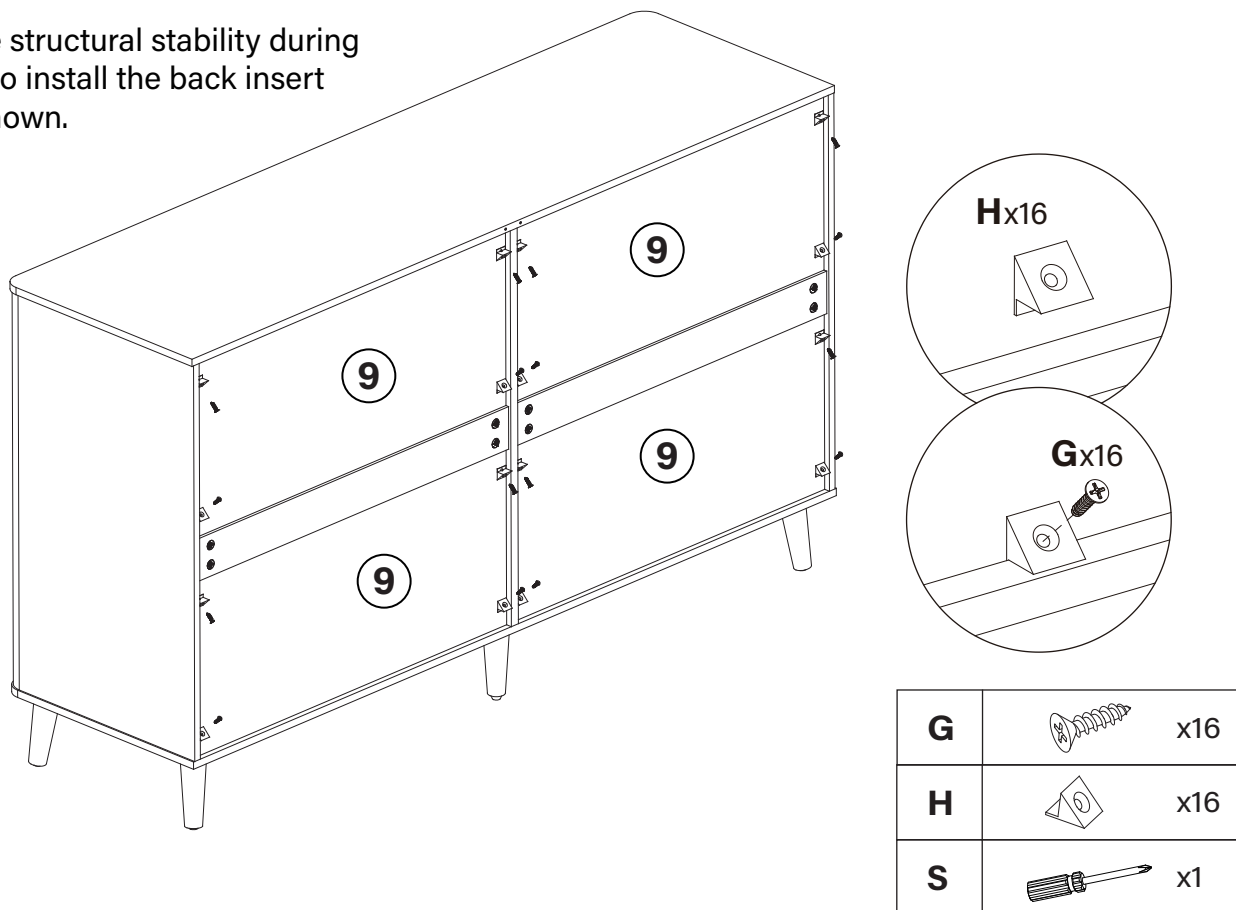


STEP 25

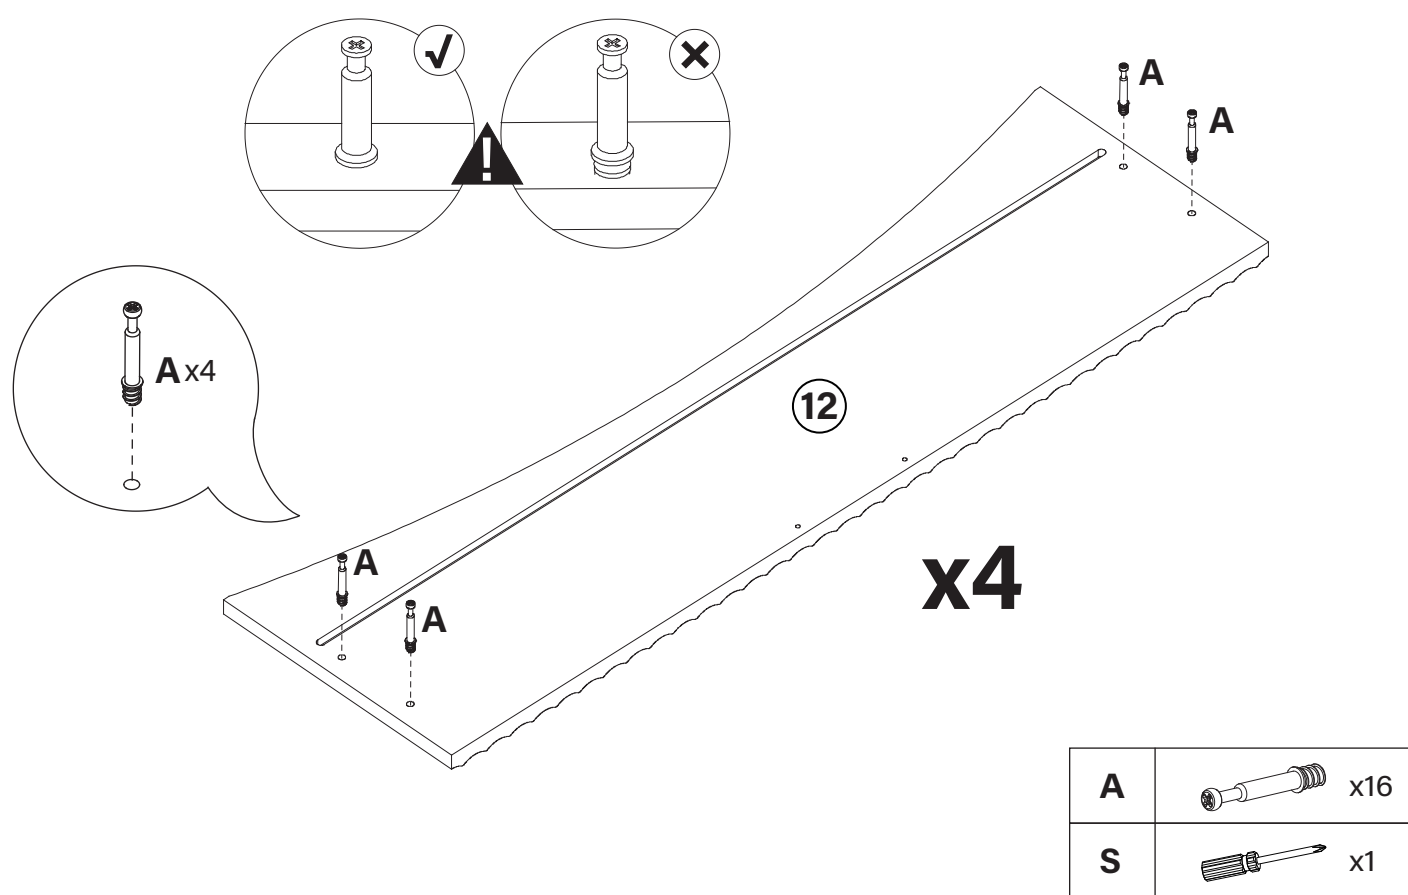


STEP 26


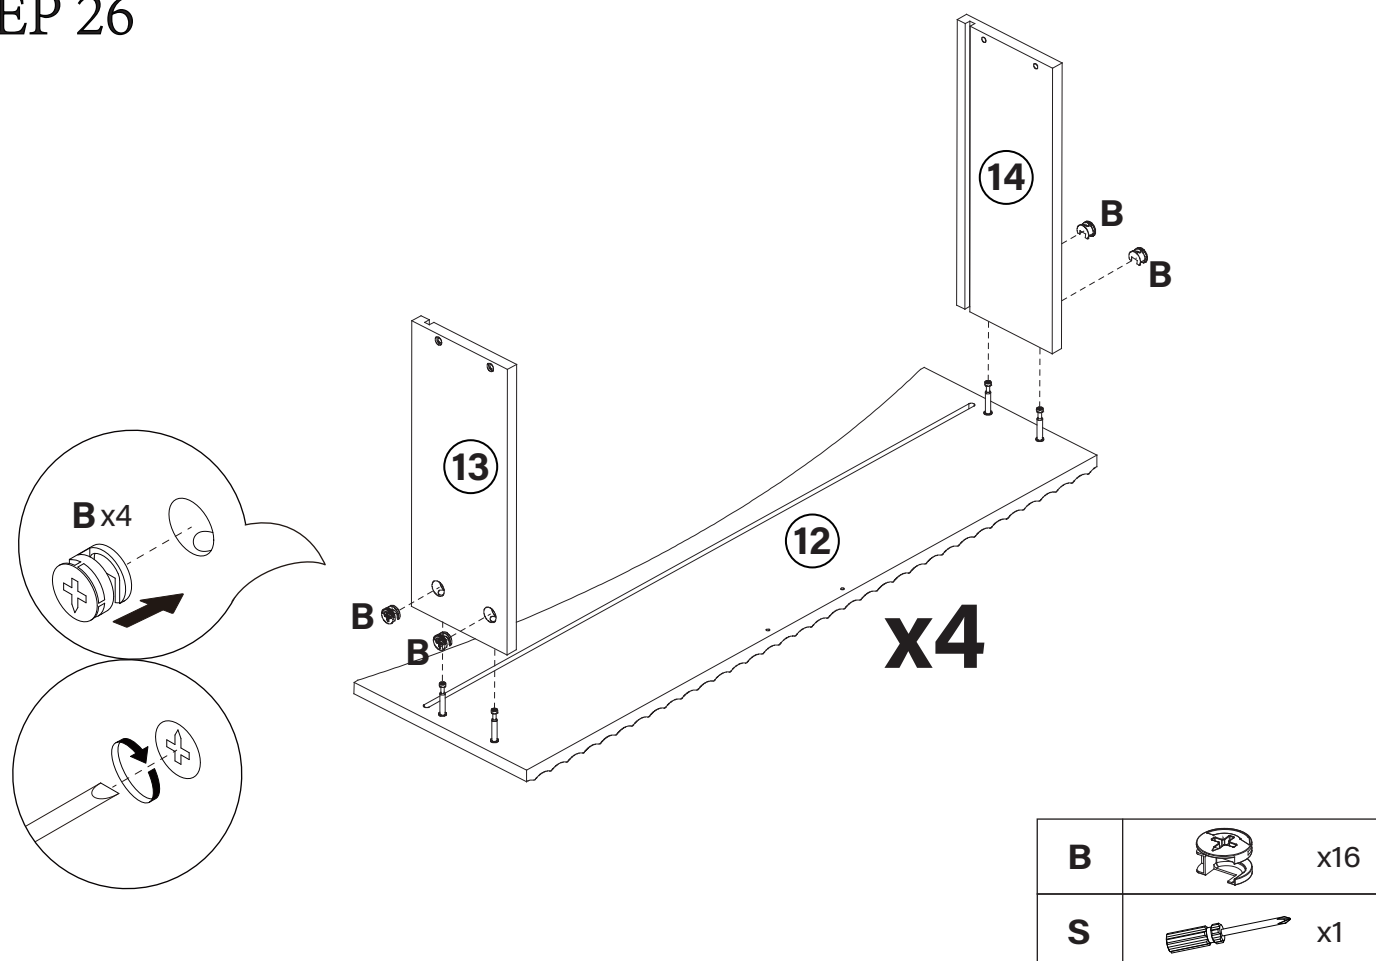


STEP 27

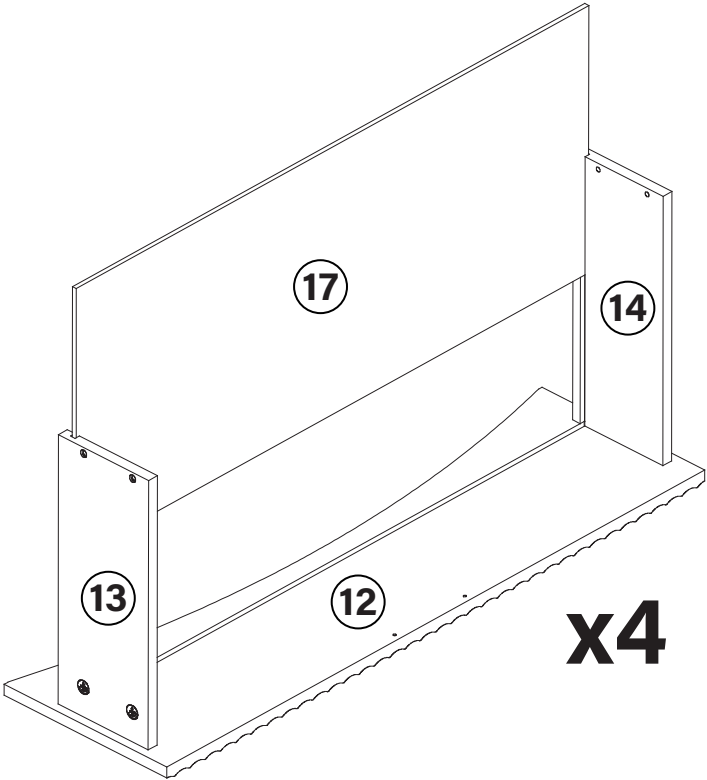

STEP 28

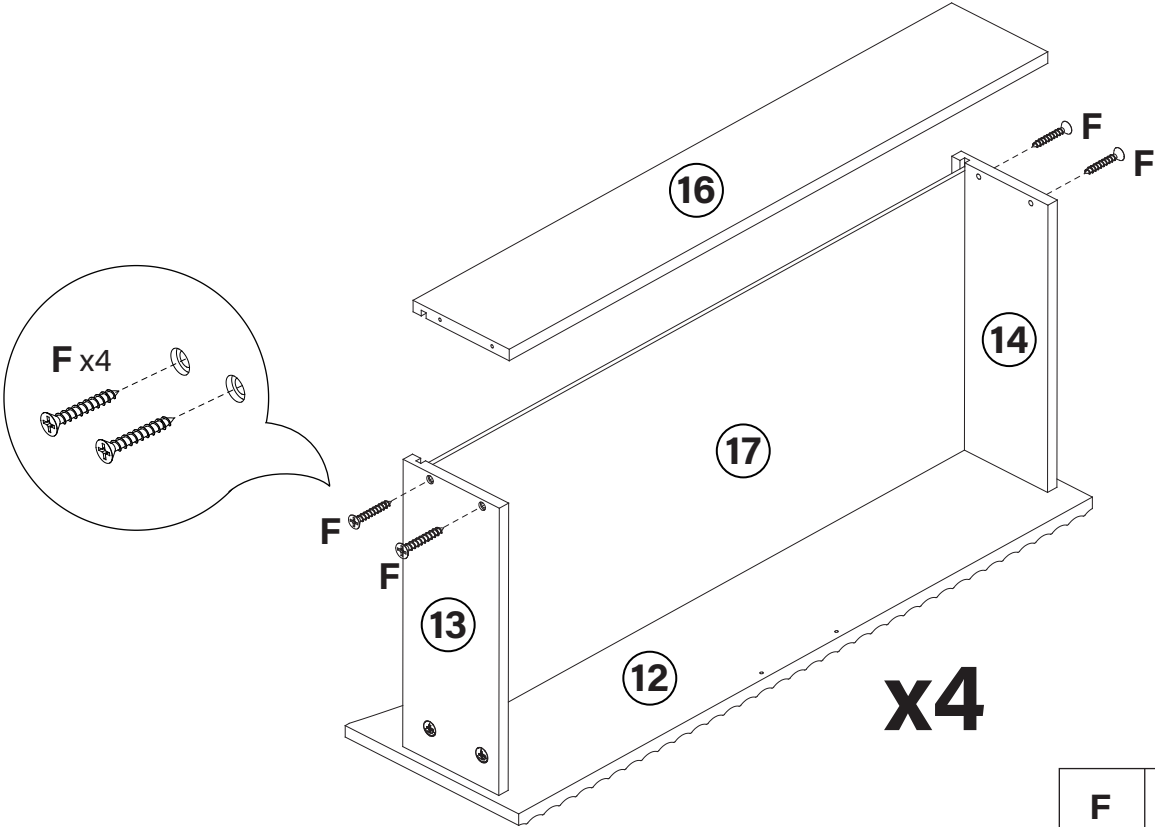

F	 x16
S	 x1

STEP 29





When installing, please make sure that the screws are flat and not skewed.









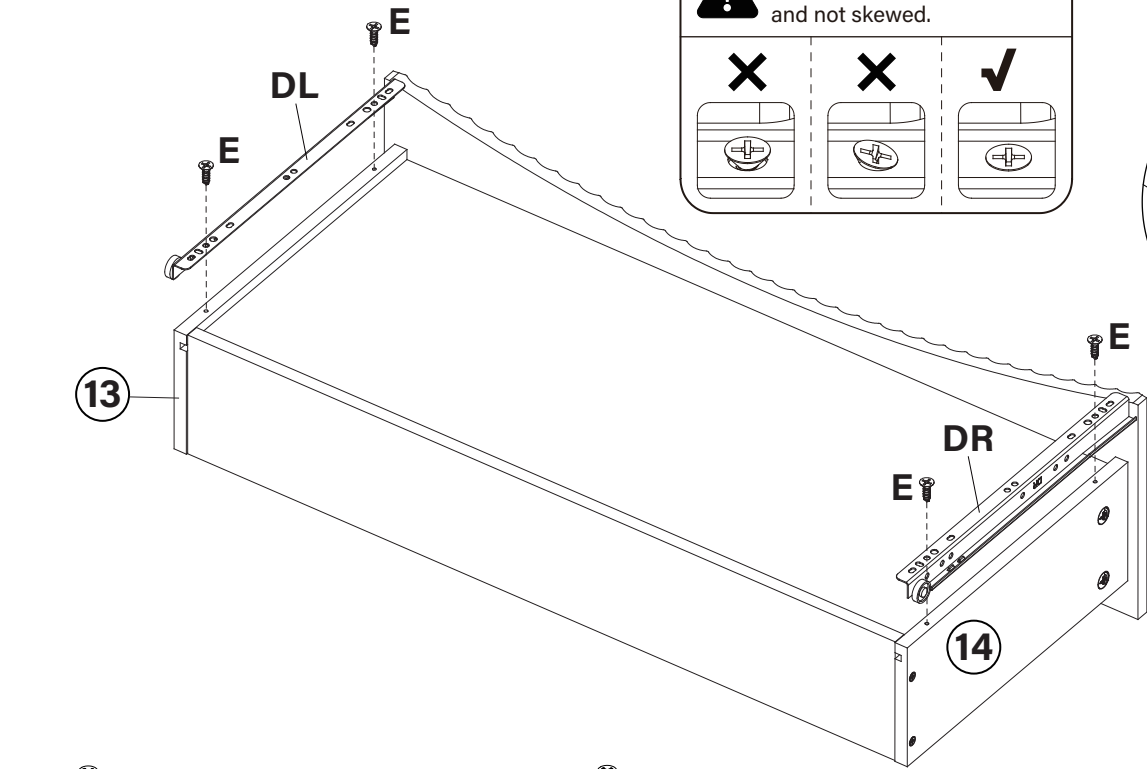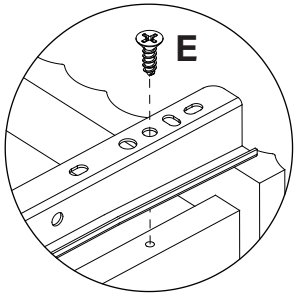



x4




 Pay attention to the position of the screws.

E		x16
DL		x4
DR		x4
S		x1


STEP 30

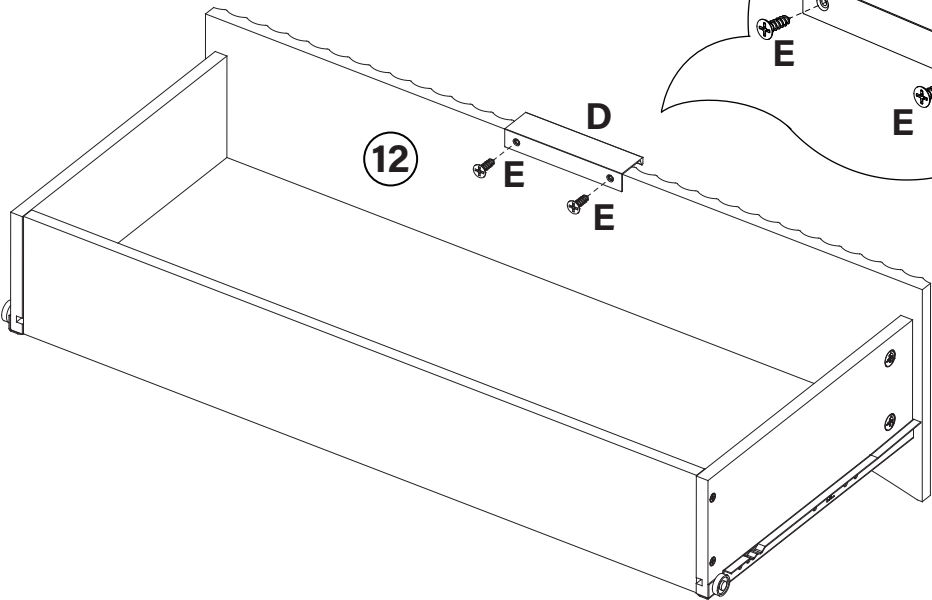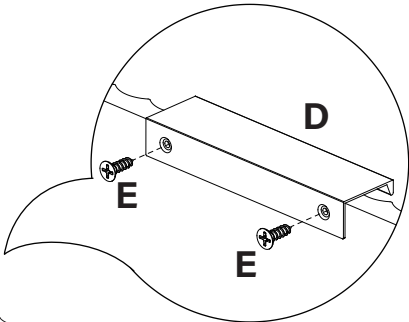


x4

E		x8
D		x4
S		x1


STEP 31

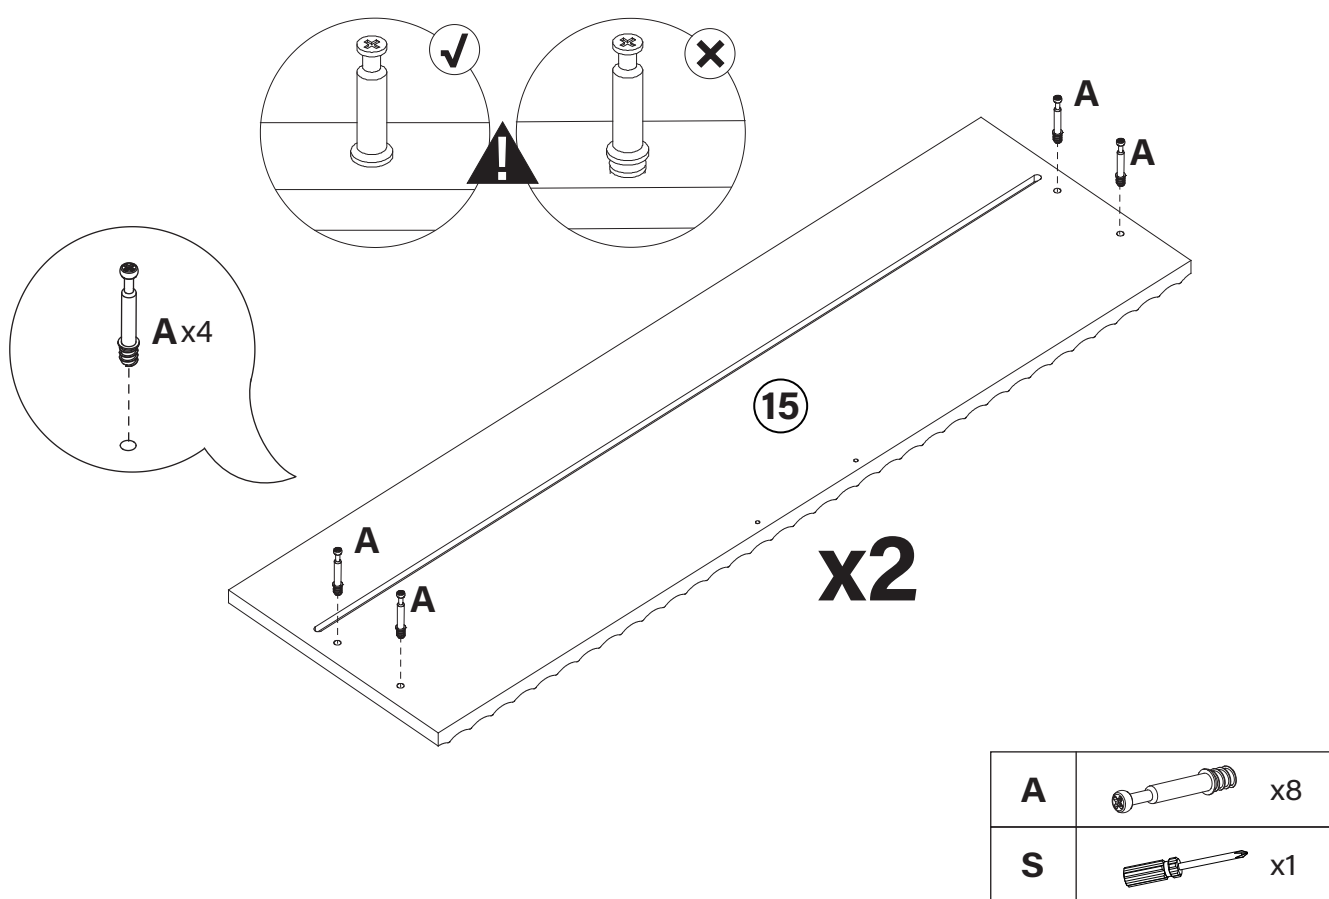


STEP 32


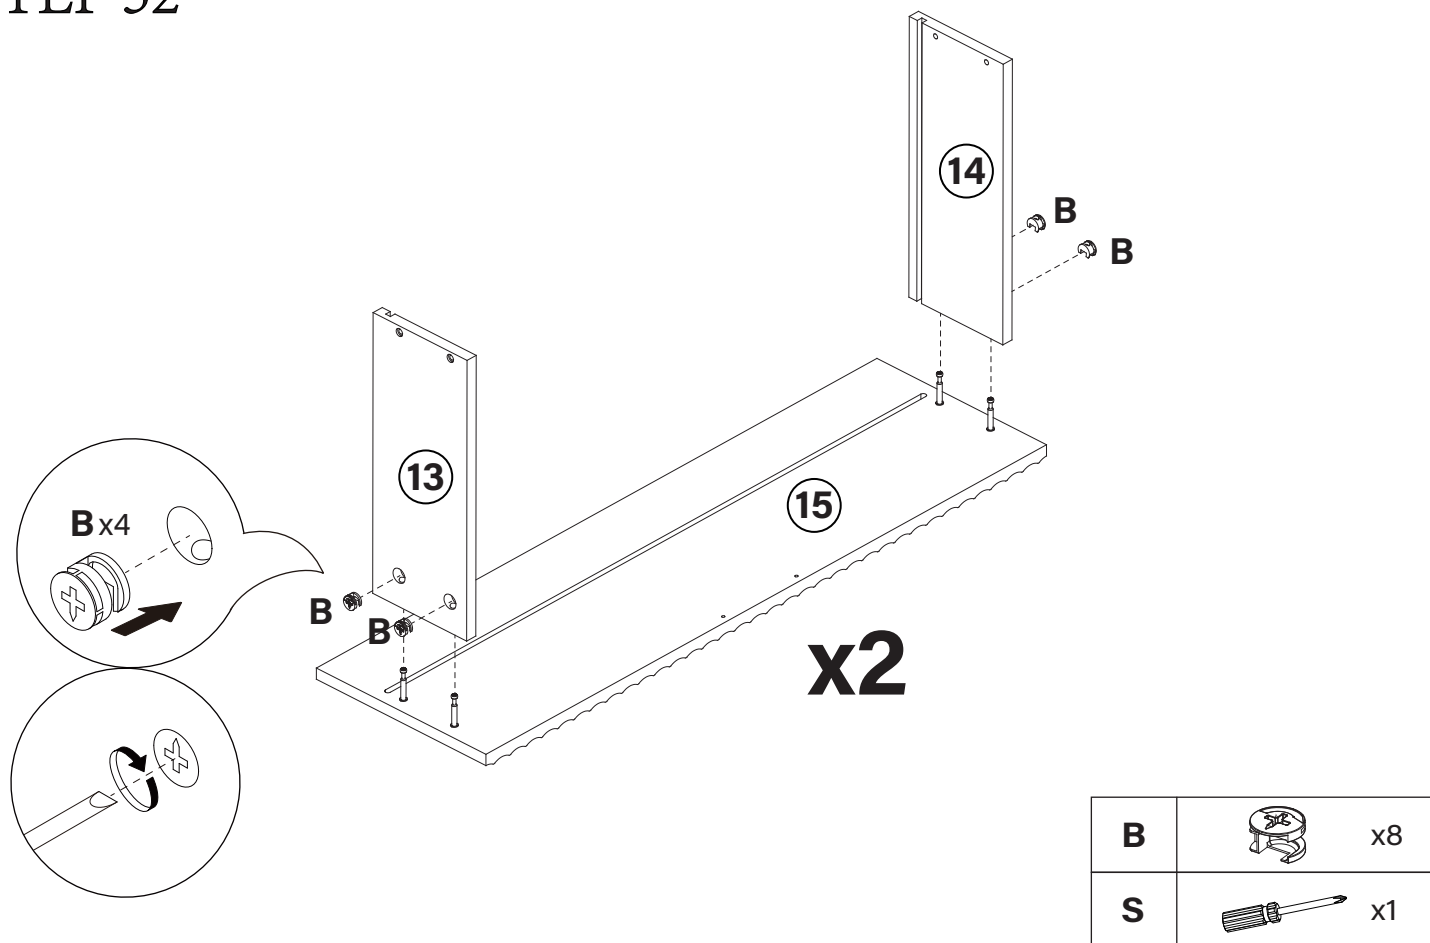


STEP 33

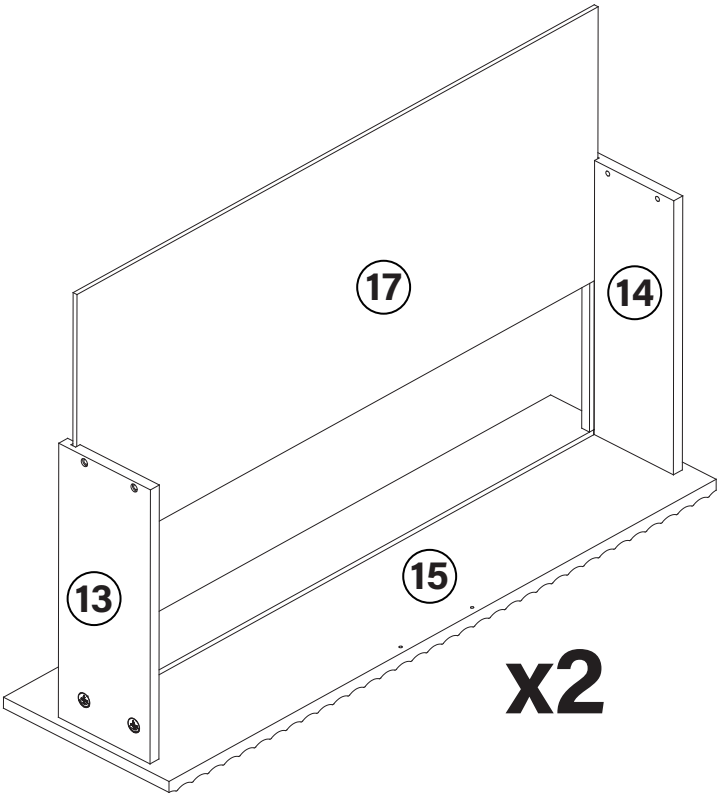

STEP 34

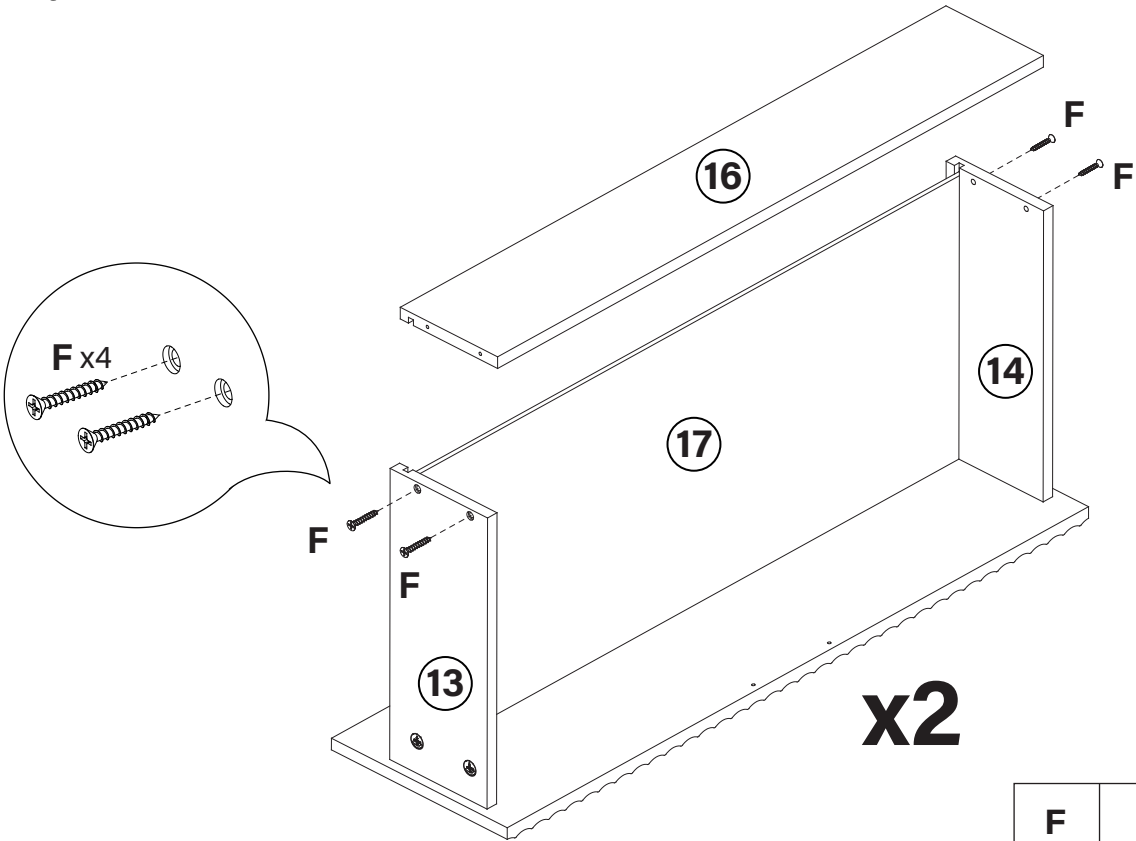



F	 x8
S	 x1

STEP 35





When installing, please make sure that the screws are flat and not skewed.








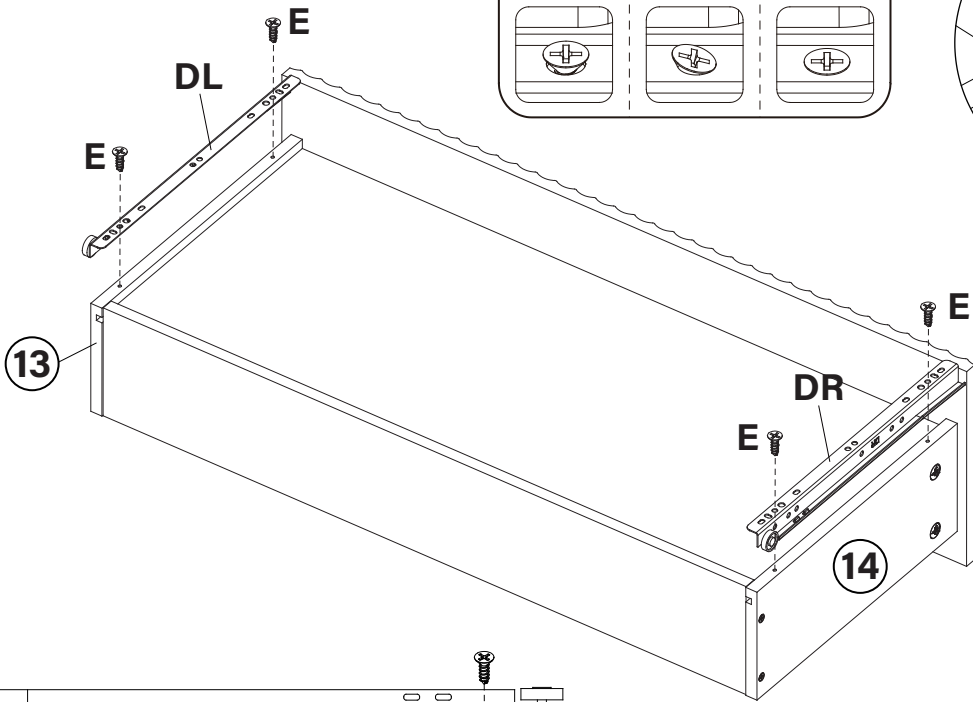
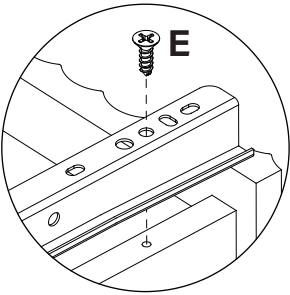


x2


E		x8
DL		x2
DR		x2
S		x1

 Pay attention to the position of the screws.



STEP 36

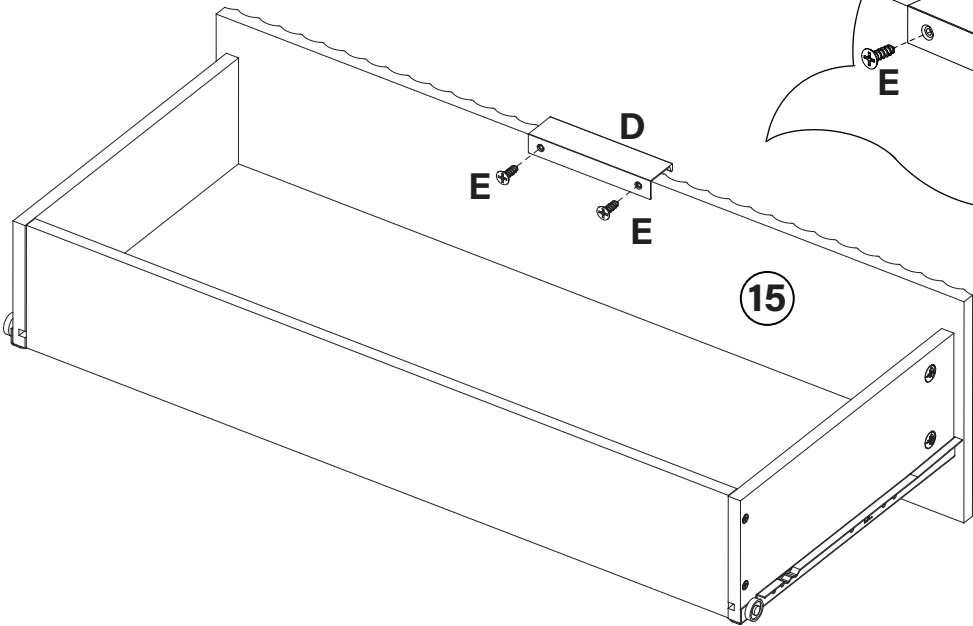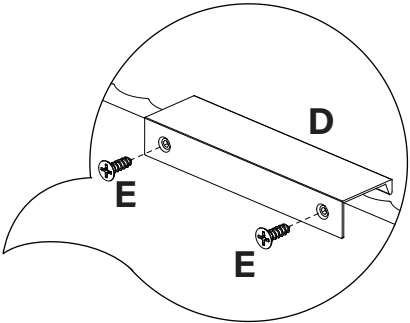


x2

D		x2
E		x4
S		x1

STEP 37

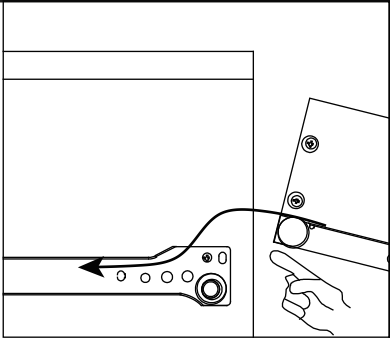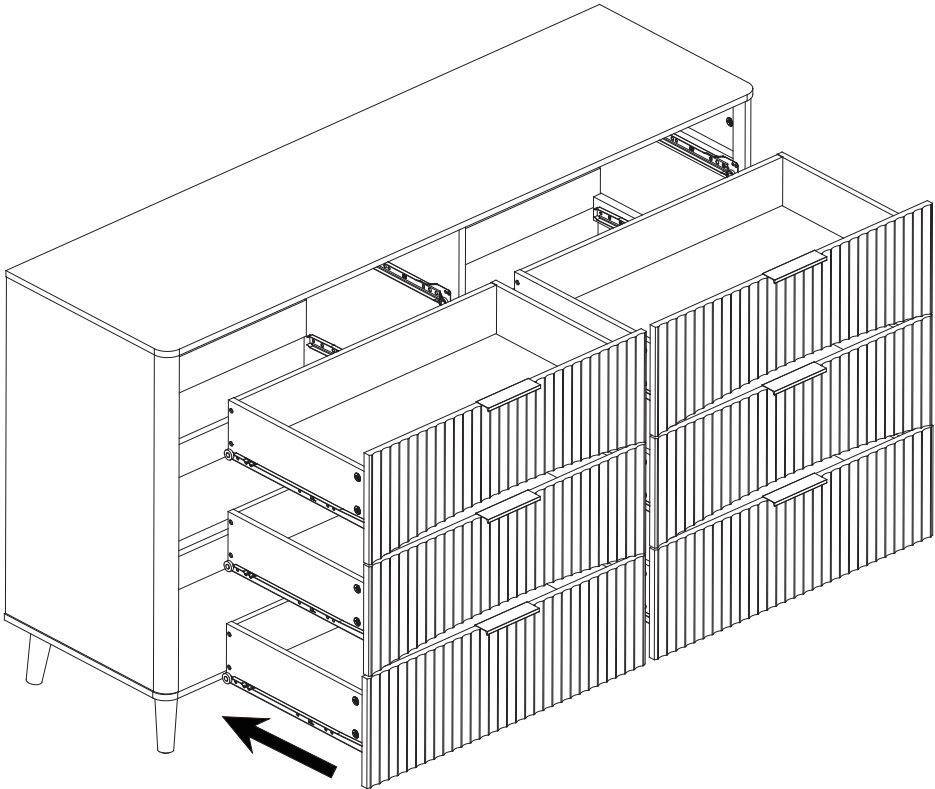



STEP 38

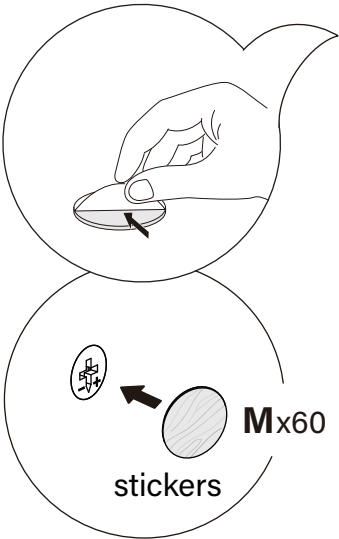


Apply screw stickers over exposed screw holes for aesthetics.


M		x60
----------	---	-----


STEP 39

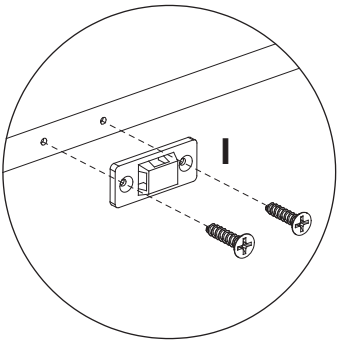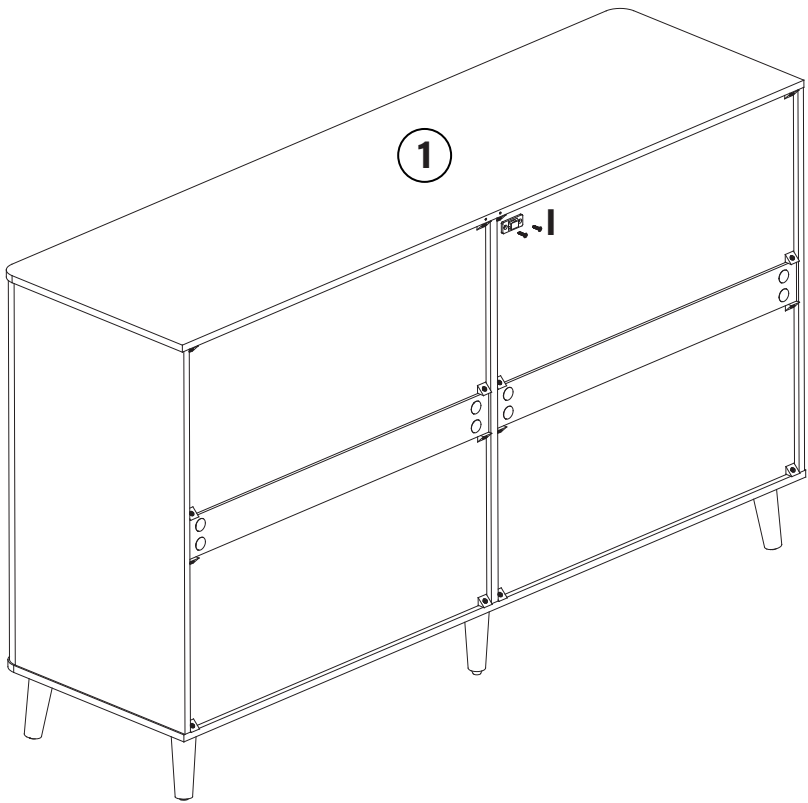



I	 x1
S	 x1

STEP 40

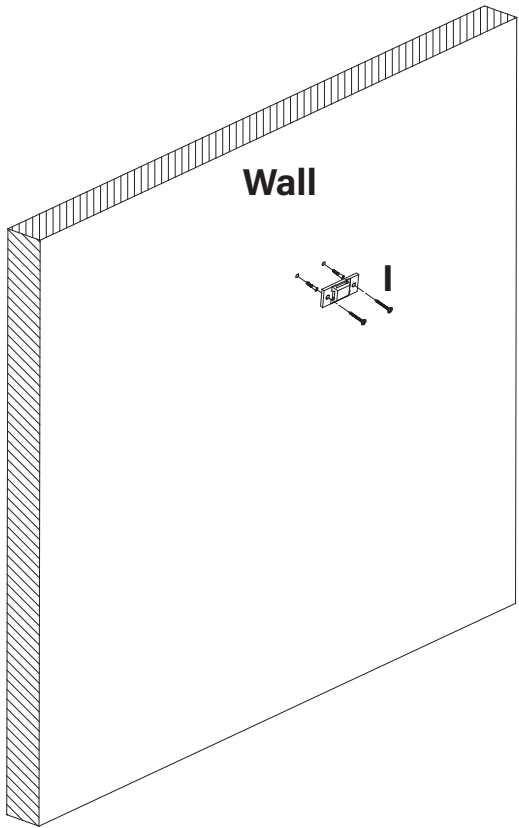

I	 x1
S	 x1

STEP 41

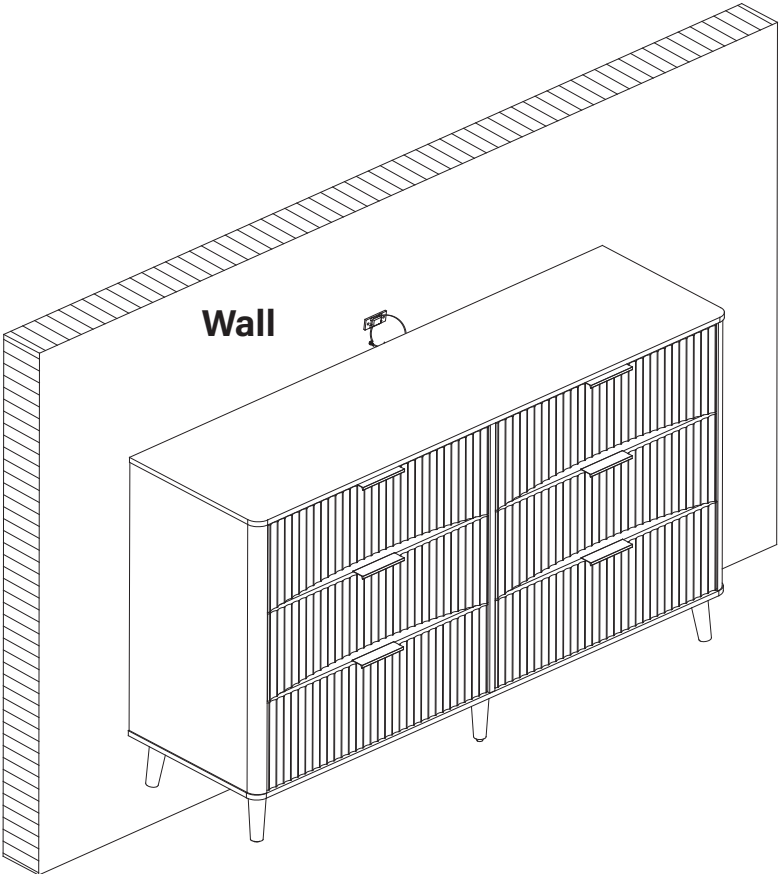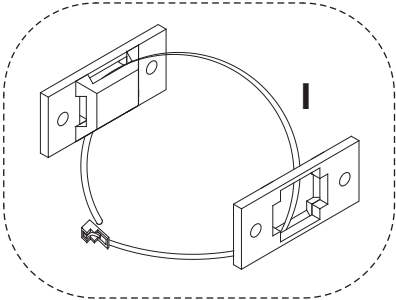

Finish!

I	 x1
S	 x1