

Retractable Awning Fabric Replacement Steps

Disassemble Old Fabric



STEP 1

Roll the Awning Fabric and secure the Arms.



STEP 2

Loosen the screw and take off the roller supports.



STEP 3

Take out the round shaft and remove the fabric from the roller.



STEP 4

Take out the Plastic Cover(un-screw the bolt), then remove the Valance from the Front Bar.

Assemble New Fabric



STEP 5

Thread one thick and one thin Fabric Guiding Wires through both ends of the large Fabric.

Thread the other thick Wire through Valance.

This can be a slow process and it is recommended that a minimum of two people be threaded together.



STEP 6


Pass the side of the Fabric wearing the thin Wire thread through the slot of the long round Roller.

Fix the Left & Right Round Shafts.




STEP 7

Roll up Fabric like it is shown in the picture.

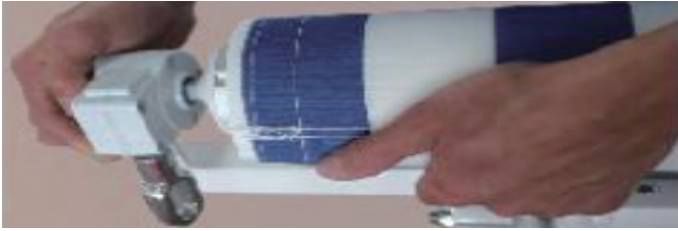

STEP 8

Put the left&Right Roller Support into the corresponding Shaft. Fix the Roller Support onto the Torsion bar and tighten the screws.

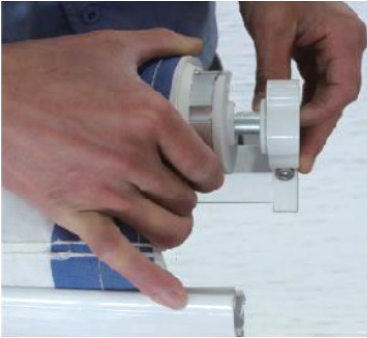

STEP 9

Insert the Valance into the other slot of the Front Bar as shown in the picture.

Snap the Plastic Covers of the Torsion Bar and Front Bar onto the end of the tube section and fix them with screws.

Colors Available from Mcombo



Burgundy



Coffee Brown



Dark Blue



Gray



Green



Beige



Black & White



Dark Green & White



Brick Red & Beige



Grey & White



Ocean Blue & White

TIPS:

Please feel free to contact us if you have any questions.

Phone (323)597-1109

Email:sales@mcombo.com

www.mcombo.com