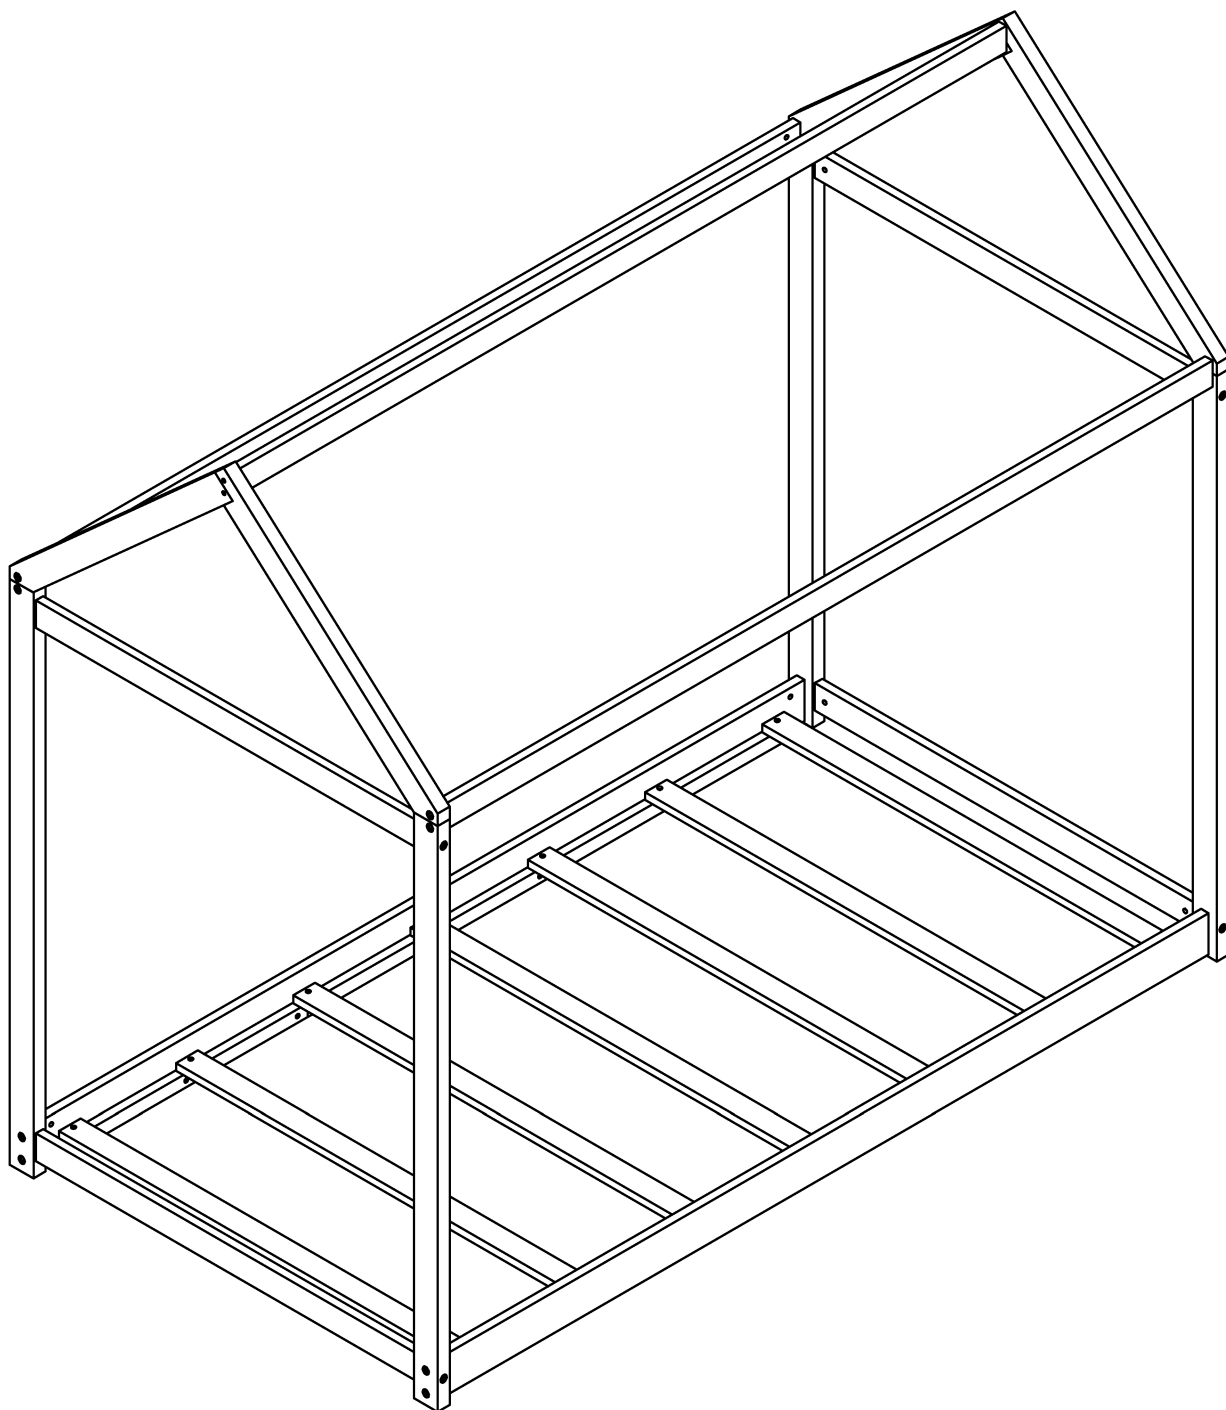
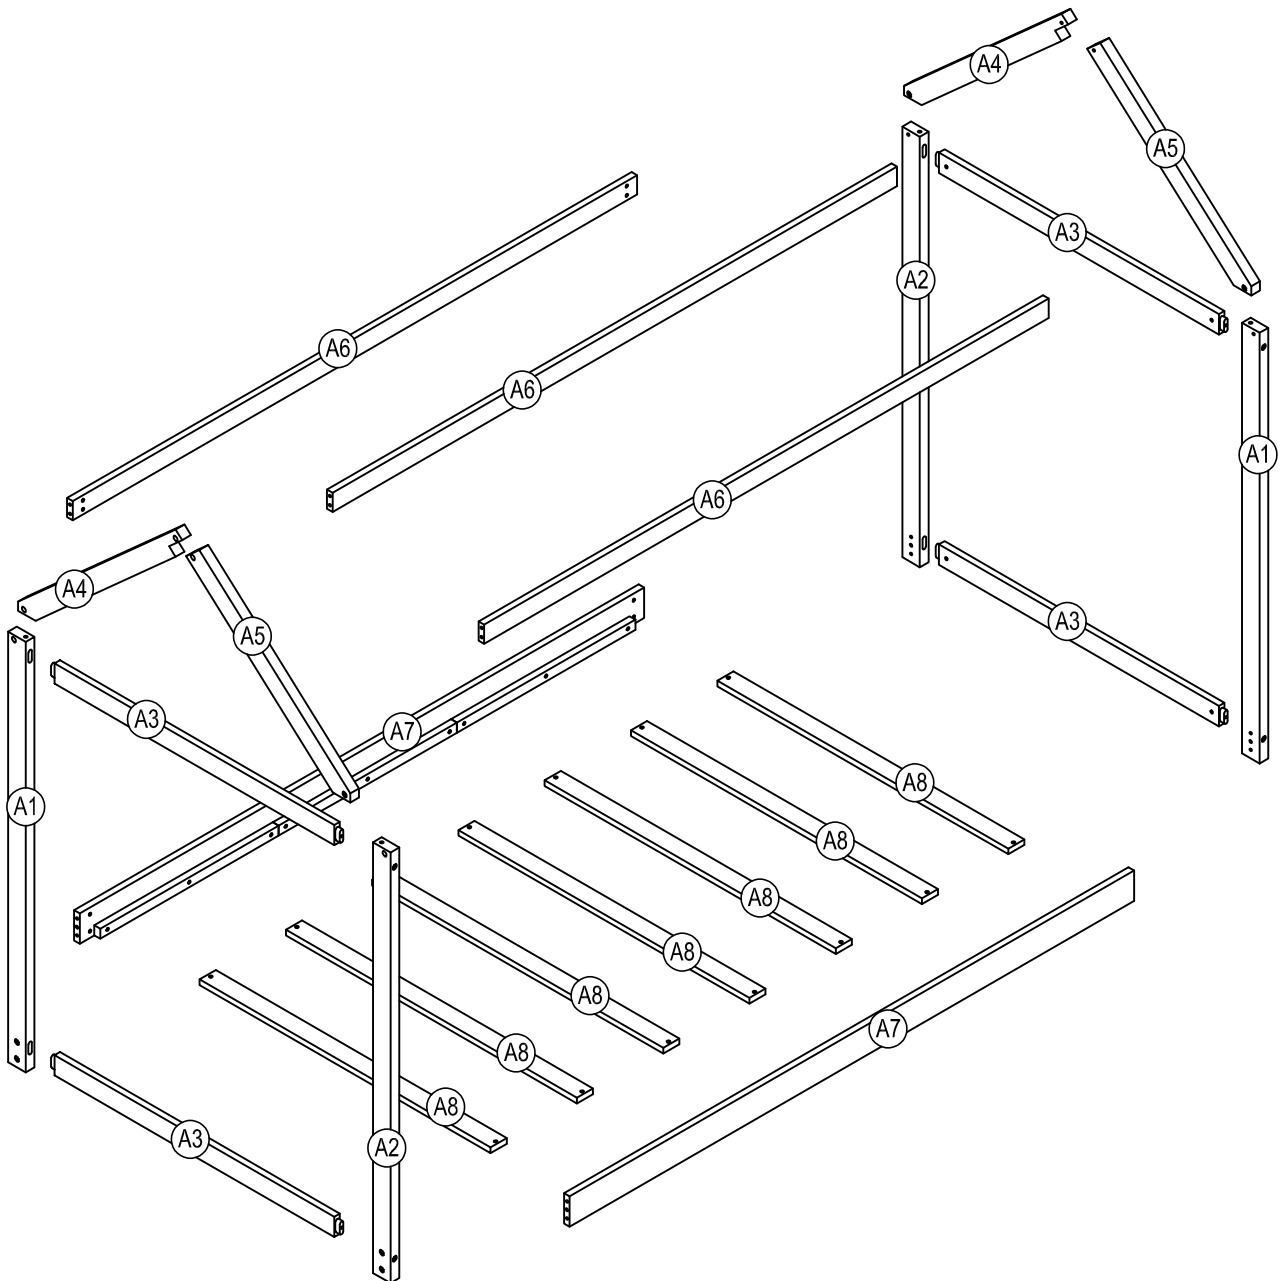








ASSEMBLY INSTRUCTION






ASSEMBLY INSTRUCTION




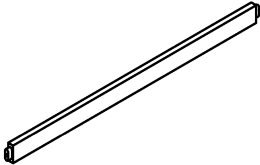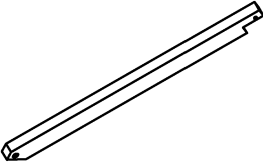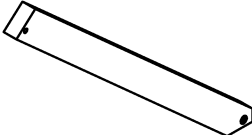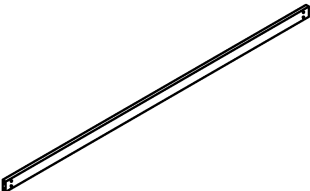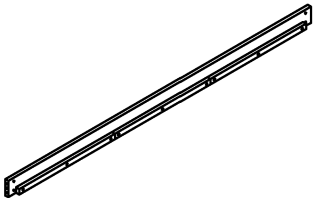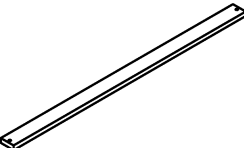Part List & Hardware List

A1  Leg - 2pcs	A2  Leg - 2pcs	A3  WoodBar - 4pcs
A4  WoodBar - 2pcs	A5  WoodBar - 2pcs	A6  WoodBar - 3pcs
A7  Side Rails - 2pcs	A8  Slats - 7pcs	

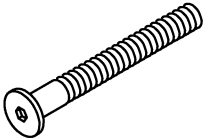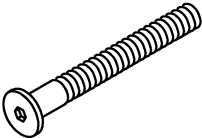
Hardware List


1	 Ø1/4" x 80 mm Hex- Headbolts: 20 pcs	2	 Ø1/4" x 100 mm Hex- Headbolts: 8 pcs	3	 Ø1/4" x 13 mm Horizontal- Holebolts 28 pcs
4	 Ø10 x 40 mm Wood dowel 8pcs	5	 M4 x 30 mm Wood Screws 14pcs	6	 Allen Key 1pc




Assembly Tools Required (Not Included)

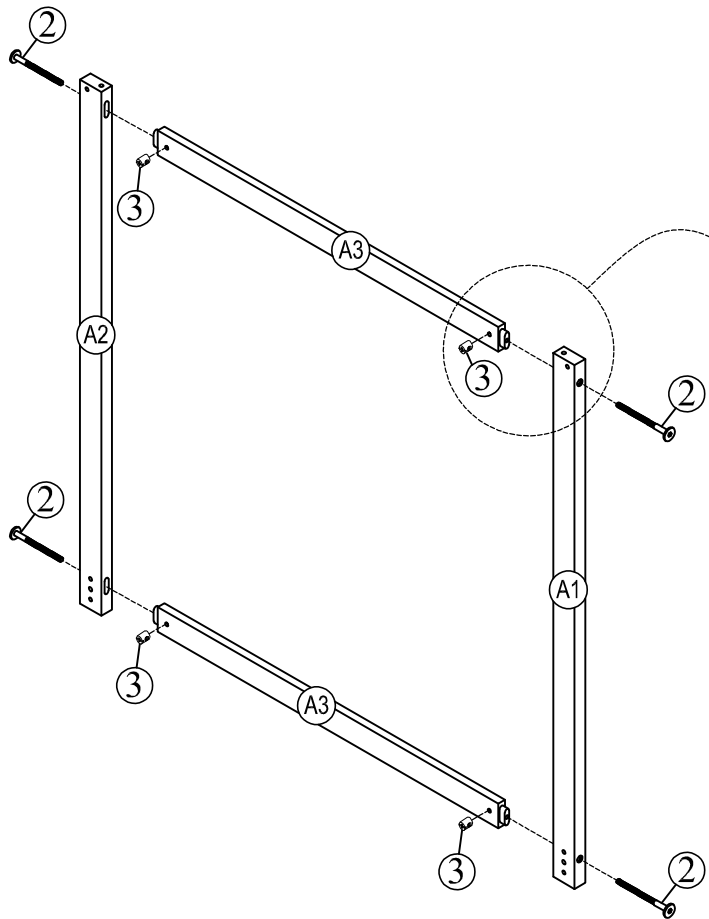
STEP 1 x 2: Following below illustration.




2	3
	
8 pcs	8 pcs

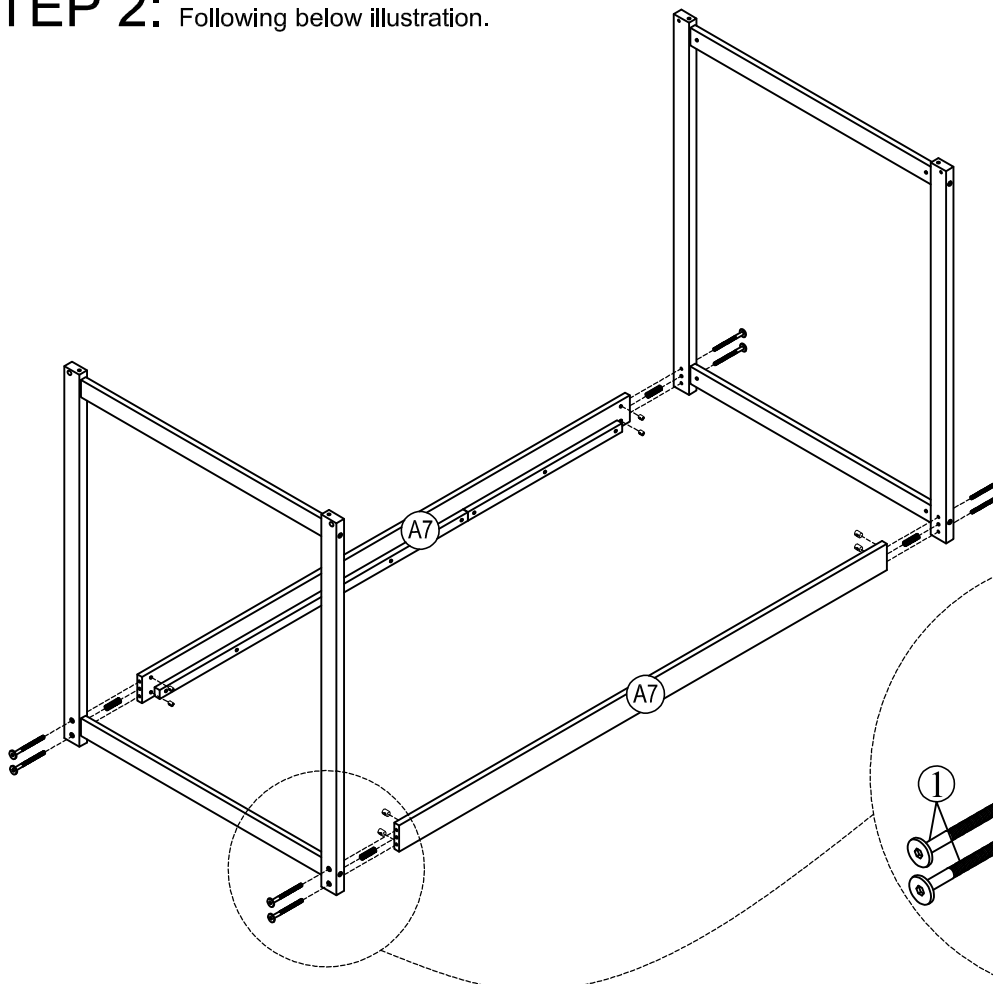STEP 2: Following below illustration.




1	3
	
8 pcs	8 pcs
	4
	
	4 pcs

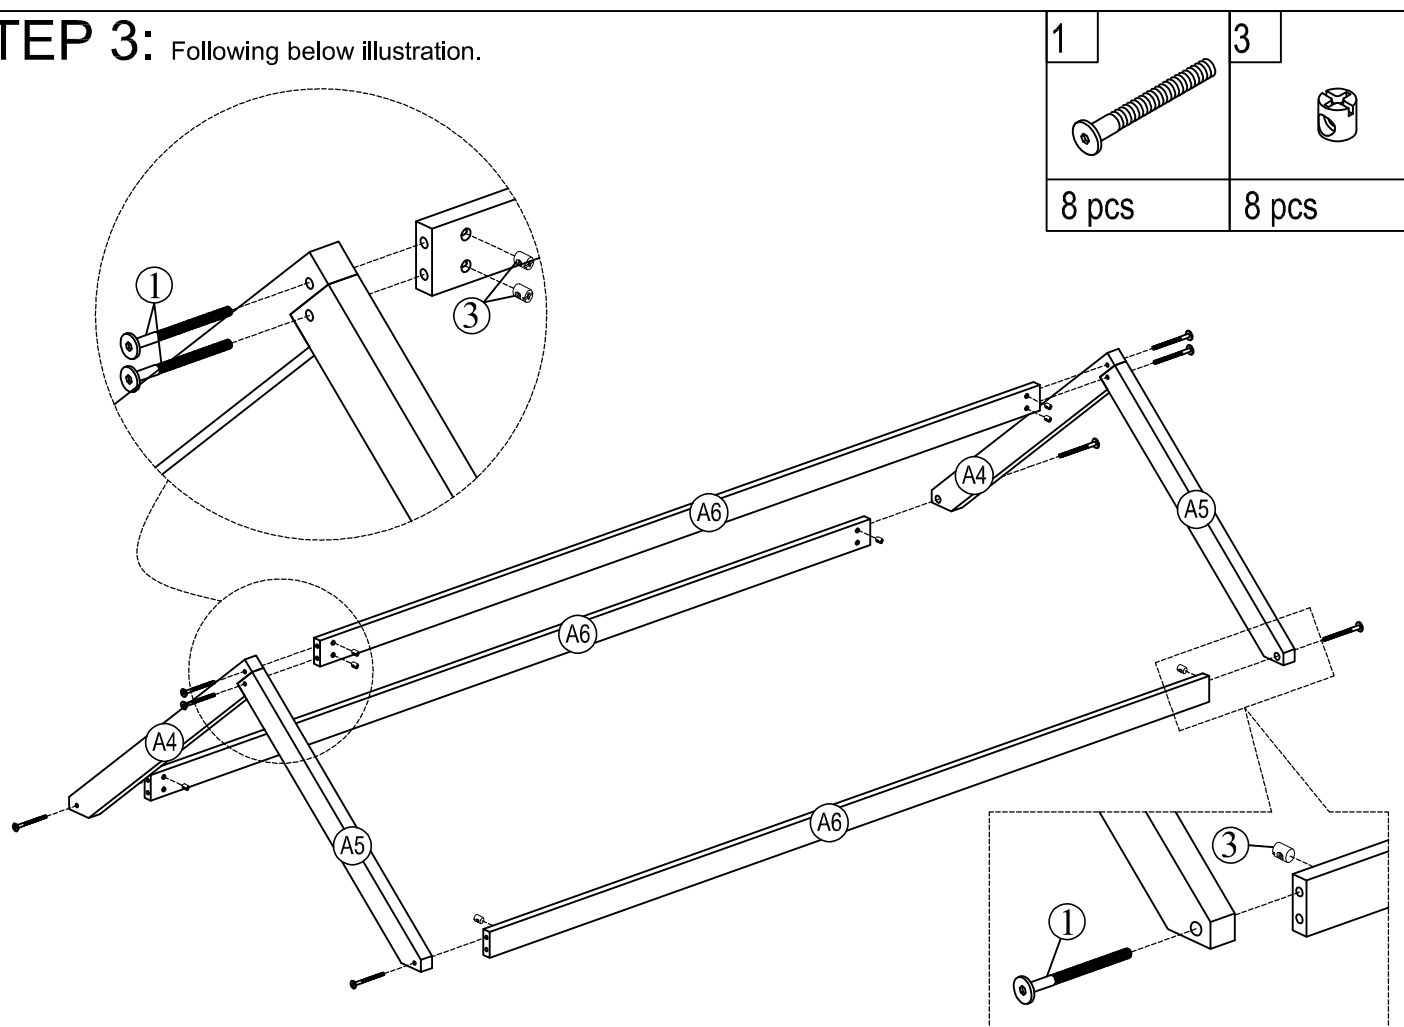
STEP 3: Following below illustration.




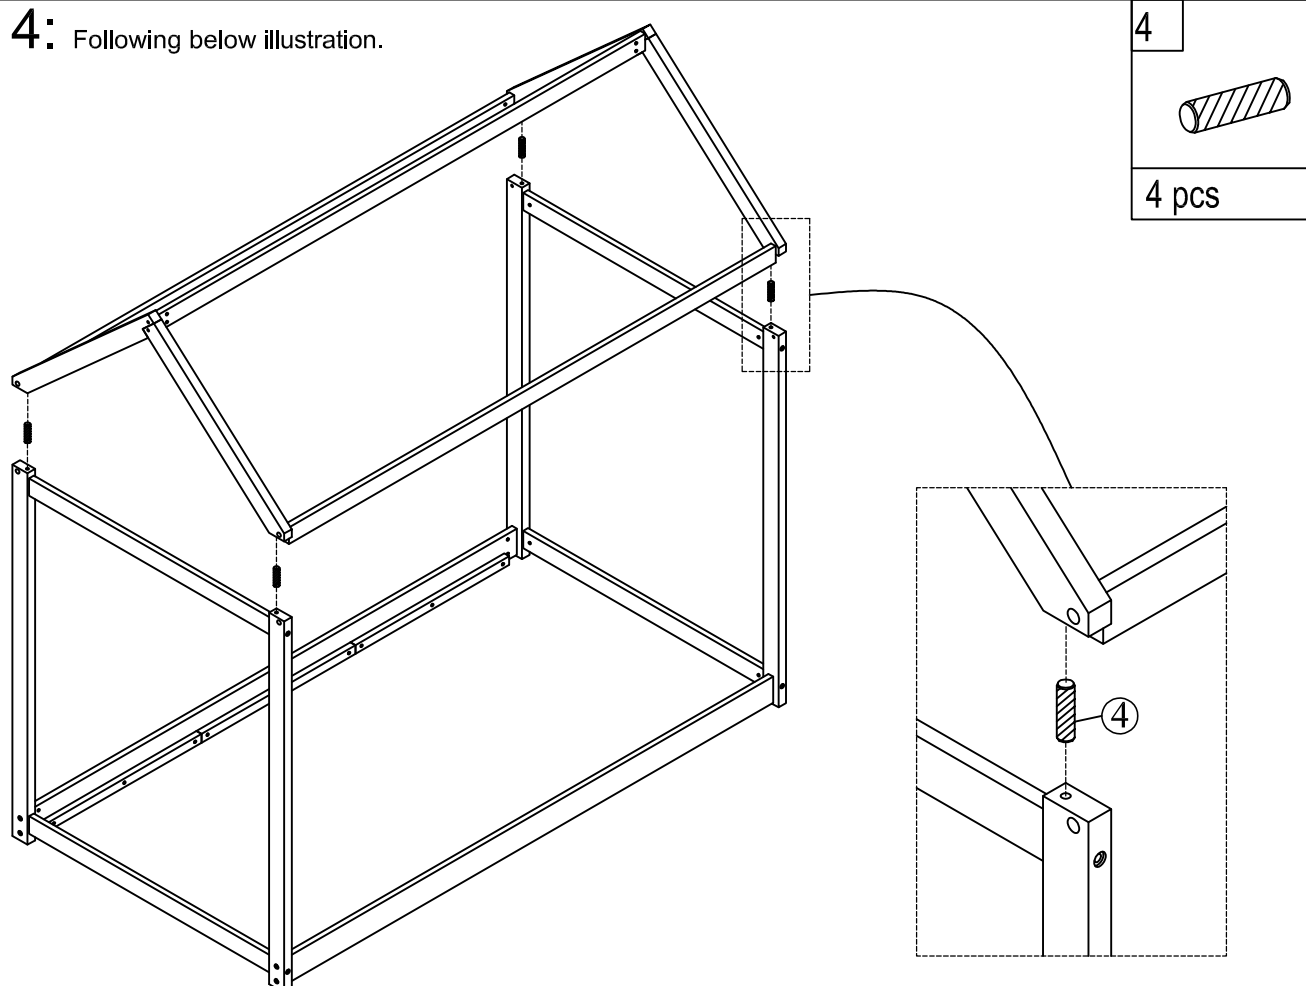
STEP 4: Following below illustration.



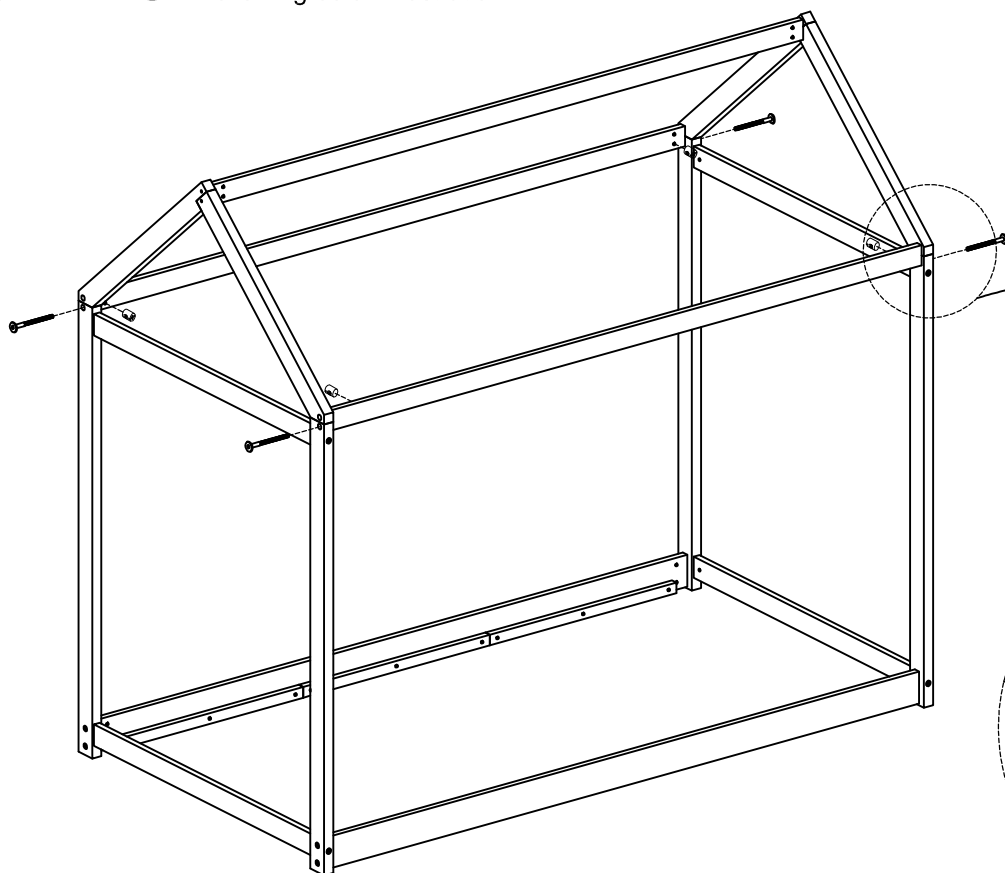

STEP 5: Following below illustration.



1	3
	
4 pcs	4 pcs

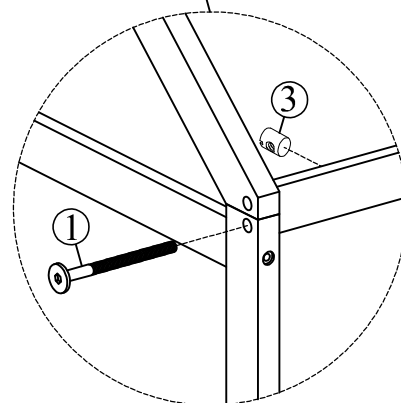

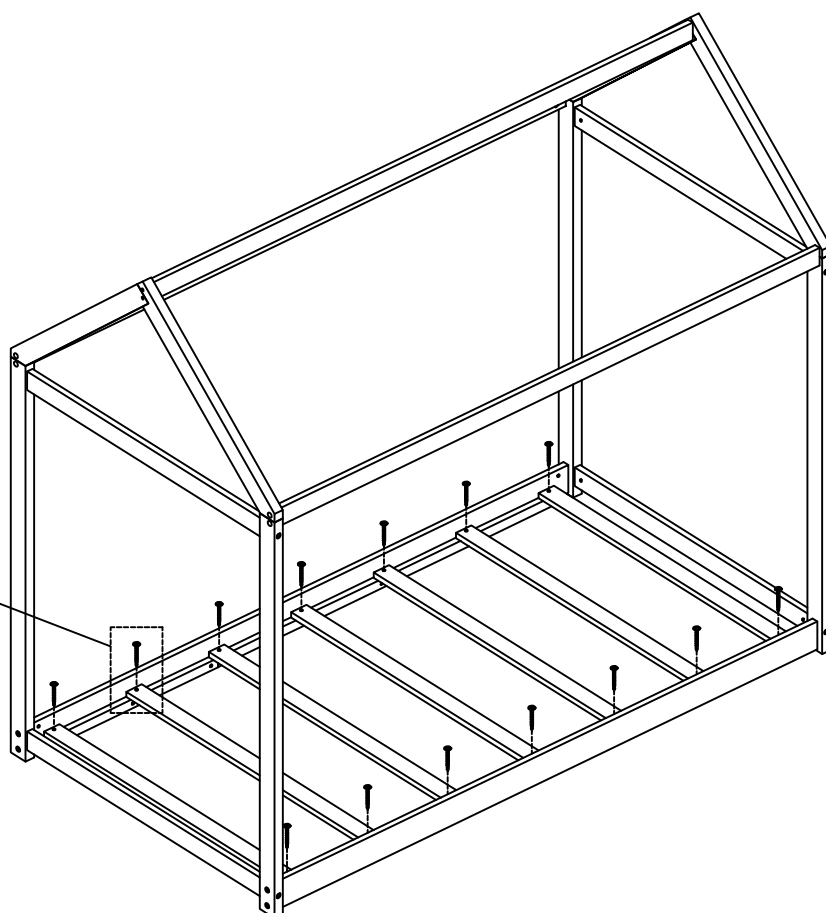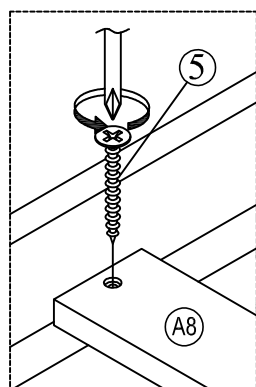STEP 6: Following below illustration.



5

14 pcs